



**SUZUKI**

**DL650A**

**DL650XA**

**DL650XAA**

**SERVICE MANUAL**

99500-36250-03E

# IMPORTANT NOTICE

## WARNING / CAUTION / NOTICE / NOTE

Please read this manual and follow its instructions carefully. To emphasize special information, the symbol and the words **▲ WARNING**, **△ CAUTION**, **NOTICE** and **NOTE** have special meanings. Pay special attention to the messages highlighted by these signal words.

### **▲ WARNING**

**Indicates a potential hazard that could result in death or serious injury.**

### **△ CAUTION**

**Indicates a potential hazard that could result in minor or moderate injury.**

### **NOTICE**

**Indicates a potential hazard that could result in motorcycle or equipment damage.**

### **NOTE**

**Indicates special information to make maintenance easier or instructions clearer.**

Please note, however, that the warnings and cautions contained in this manual cannot possibly cover all potential hazards relating to the servicing, or lack of servicing, of the motorcycle. In addition to the WARNINGS, CAUTIONS and NOTICES stated, you must use good judgement and basic mechanical safety principles. If you are unsure about how to perform a particular service operation, ask a more experienced mechanic for advice.

## FOREWORD

*This manual contains an introductory description on the SUZUKI DL650A and procedures for its inspection/service and overhaul of its main components.*

*Other information considered as generally known is not included.*

*Read the GENERAL INFORMATION section to familiarize yourself with the motorcycle and its maintenance. Use this section as well as other sections to use as a guide for proper inspection and service.*

*This manual will help you know the motorcycle better so that you can assure your customers of fast and reliable service.*

- \* This manual has been prepared on the basis of the latest specifications at the time of publication. If modifications have been made since then, differences may exist between the content of this manual and the actual motorcycle.*
- \* Illustrations in this manual are used to show the basic principles of operation and work procedures. They may not represent the actual motorcycle exactly in detail.*
- \* This manual is written for persons who have enough knowledge, skills and tools, including special tools, for servicing SUZUKI motorcycles. If you do not have the proper knowledge and tools, ask your authorized SUZUKI motorcycle dealer to help you.*

### **▲ WARNING**

**Inexperienced mechanics or mechanics without the proper tools and equipment may not be able to properly perform the services described in this manual.**

**Improper repair may result in injury to the mechanic and may render the motorcycle unsafe for the rider and passenger.**

**SUZUKI MOTOR CORPORATION**

# TABLE OF CONTENTS

Revised January 15, 2021

<b>Precautions</b> .....	<b>00-i</b>	<b>Driveline / Axle</b> .....	<b>3-i</b>
Precautions .....	00-1	Precautions .....	3-1
<b>General Information</b> .....	<b>0-i</b>	Drive Chain / Drive Train / Drive Shaft .....	3A-1
General Information .....	0A-1	<b>Brakes</b> .....	<b>4-i</b>
Maintenance and Lubrication .....	0B-1	Precautions .....	4-1
Service Data.....	0C-1	Brake Control System and Diagnosis .....	4A-1
<b>Engine</b> .....	<b>1-i</b>	Front Brakes.....	4B-1
Precautions .....	1-1	Rear Brakes .....	4C-1
Engine General Information and Diagnosis .....	1A-1	ABS .....	4E-1
Emission Control Devices .....	1B-1	<b>Transmission / Transaxle</b> .....	<b>5-i</b>
Engine Electrical Devices.....	1C-1	Precautions .....	5-1
Engine Mechanical.....	1D-1	Manual Transmission .....	5B-1
Engine Lubrication System .....	1E-1	Clutch .....	5C-1
Engine Cooling System.....	1F-1	<b>Steering</b> .....	<b>6-i</b>
Fuel System .....	1G-1	Precautions .....	6-1
Ignition System.....	1H-1	Steering General Diagnosis .....	6A-1
Starting System.....	1I-1	Steering / Handlebar .....	6B-1
Charging System.....	1J-1	<b>Body and Accessories</b> .....	<b>9-i</b>
Exhaust System .....	1K-1	Precautions .....	9-1
<b>Suspension</b> .....	<b>2-i</b>	Wiring Systems .....	9A-1
Precautions .....	2-1	Lighting Systems.....	9B-1
Suspension General Diagnosis .....	2A-1	Combination Meter / Fuel Meter / Horn .....	9C-1
Front Suspension .....	2B-1	Exterior Parts .....	9D-1
Rear Suspension.....	2C-1	Body Structure .....	9E-1
Wheels and Tires .....	2D-1		

00

0

1

2

3

4

5

6

9



## SUPPLEMENTS

**DL650A/XAL7-L8  
( '17 - '18 MODELS)**

**10**

**DL650A/XAL8 ('18 MODELS)**

**11**

**DL650A/XAL7-L9  
( '17 - '19 MODELS)**

**12**

**DL650A/XAM0 ('20 MODELS)**

**13**

**DL650A/XAL7-M1  
( '17 - '21 MODELS)**

**14**

**DL650A/XAM1 ('21 MODELS)**

**15**

**DL650XA/XAAL-7 -M1  
( '17 - '21 MODELS)**

**16**



## Section 00

**Precautions****CONTENTS**

<b>Precautions</b> .....	<b>00-1</b>	Precautions for Circuit Tester.....	00-7
<b>Precautions</b> .....	<b>00-1</b>	Precautions for SDS-II .....	00-7
General Precautions .....	00-1	Precautions for Identification.....	00-7
Precautions for Electrical Circuit Service .....	00-2		

# Precautions

## Precautions

### General Precautions

BENH28K2000001

#### **▲ WARNING**

- Proper service and repair procedures are important for the safety of the service mechanic and the safety and reliability of the motorcycle.
- When 2 or more persons work together, pay attention to the safety of each other.
- When it is necessary to run the engine indoors, make sure that exhaust gas is forced outdoors.
- When working with toxic or flammable materials, make sure that the area you work in is well ventilated and that you follow all of the material manufacturer's instructions.
- To avoid getting burned, do not touch the engine, engine oil, radiator and exhaust system until they have cooled.

#### **NOTICE**

- Never use gasoline as a cleaning solvent.
- After servicing the fuel, oil, water, exhaust or brake systems, check all lines and fittings related to the system for leaks.
- If parts replacement is necessary, replace the parts with Suzuki Genuine Parts or their equivalent.
- When removing parts that are to be reused, keep them arranged in an orderly manner so that they may be reinstalled in the proper order and orientation.
- Be sure to use special tools when instructed.
- Make sure that all parts used in reassembly are clean. Lubricate them when specified.
- Use the specified lubricant, bond, or sealant.

- When removing the battery, disconnect the negative (-) cable first and then the positive (+) cable.
- When reconnecting the battery, connect the positive (+) cable first and then the negative (-) cable, and replace the terminal cover on the positive (+) terminal.
- When performing service to electrical parts, if the service procedures do not require use of battery power, disconnect the negative (-) cable from the battery.
- When tightening the cylinder head or case bolts and nuts, tighten the larger sizes first. Always tighten the bolts and nuts diagonally from the inside toward outside and to the specified tightening torque.
- Whenever you remove oil seals, gaskets, packing, O-rings, locking washers, self-locking nuts, cotter pins, circlips and certain other parts as specified, be sure to replace them with new ones. Also, before installing these new parts, be sure to remove any left over material from the mating surfaces.
- Never reuse a circlip. When installing a new circlip, take care not to expand the end gap larger than required to slip the circlip over the shaft. After installing a circlip, always ensure that it is completely seated in its groove and securely fitted.
- Use a torque wrench to tighten fasteners to the specified torque. Wipe off grease and oil if a thread is smeared with them.
- After reassembling, check parts for tightness and proper operation.
- To protect the environment, do not unlawfully dispose of used motor oil, engine coolant and other fluids: batteries, and tires.
- To protect Earth's natural resources, properly dispose of used motorcycle and parts.



## Precautions for Electrical Circuit Service


BENH28K20000002

When handling the electrical parts or servicing the electric system, observe the following points for the safety of the system.

### Electrical Parts


#### Connector / Coupler

- Faulty electrical system is often related to poor electrical contact of connector/coupler. Before servicing individual electrical part, check electrical contact of the connector/coupler.
- When connecting a connector, be sure to push it in until a click is felt.

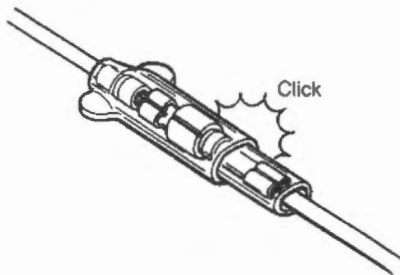


I310G1000001-01

- With a lock type coupler, be sure to release the lock when disconnecting, and push it in fully to engage the lock when connecting.
- When disconnecting the coupler, be sure to hold the coupler body and do not pull the lead wires.
- Inspect each terminal on the connector/coupler for looseness or bending.
- Push in the coupler straightly. An angled or skewed insertion may cause the terminal to be deformed, possibly resulting in poor electrical contact.
- Inspect each terminal for corrosion and contamination. The terminals must be clean and free of any foreign material which could impede proper terminal contact.
- Before refitting the sealed coupler, make sure its seal rubber is positioned properly. The seal rubber may possibly come off the position during disconnecting work and if the coupler is refitted with the seal rubber improperly positioned, it may result in poor water sealing.

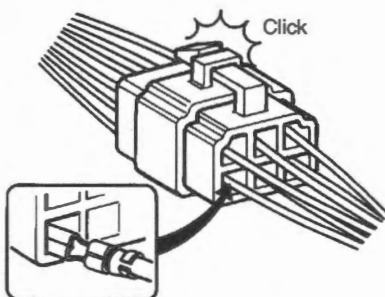


I310G1000002-01

- Inspect each lead wire circuit for poor connection by shaking it by hand lightly. If any abnormal condition is found, repair or replace.

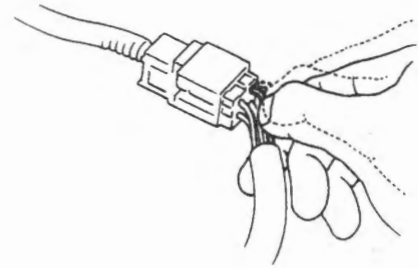


I310G1000003-02

- When taking measurements at electrical coupler (1) using a tester probe (2), be sure to insert the probe from the wire harness side (rear) of the coupler.

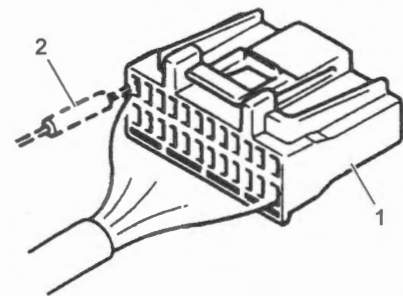

IF04K1000002-02

- When connecting meter probe (2) from the terminal side of the coupler (1) because it cannot be connected from harness side, use extra care not to bend the male terminal of coupler or force its female terminal open for connection. In case of such coupler as shown connect probe as shown to avoid opening female terminal. Never connect probe where male terminal is supposed to fit.

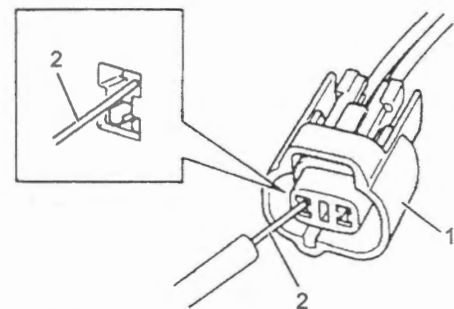


IF42J1000007-01

- Avoid applying grease or other similar material to connector/coupler terminals to prevent electric trouble.

**Clamp**


- Clamp the wire harness at such positions as indicated in "Wiring Harness Routing Diagram" in Section 9A (Page 9A-7).
- Bend the clamp properly so that the wire harness is clamped securely.
- In clamping the wire harness, use care not to allow it to hang down.
- Do not use wire or any other substitute for the band type clamp.

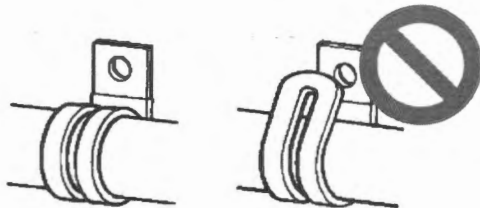

IH28K1000001-03

**Fuse**

- When a fuse is blown, always investigate the cause to correct it and then replace the fuse.
- Do not use a fuse of different capacity.
- Do not use wire or any other substitute for the fuse.

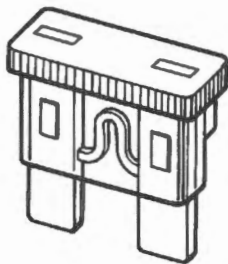


I649G1000001-02

**Switch**


Never apply grease material to switch contact points to prevent damage.

**ECM / CDI UNIT / ABS control unit/HU / Various sensors**

- Since each component is a high-precision part, great care should be taken not to apply any severe impacts during removal and installation.

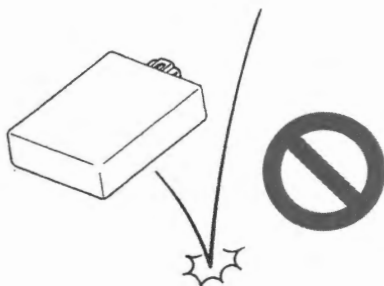


IH28K1000008-01

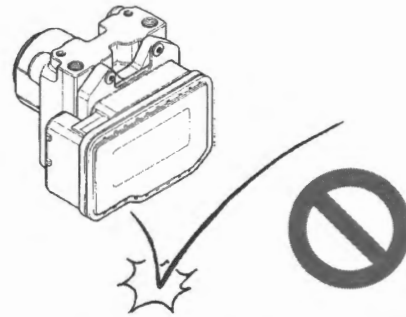


IH28K1000009-01

- Be careful not to touch the electrical terminals of the electrical parts (ECM / CDI UNIT, etc.). The static electricity from your body may damage them.

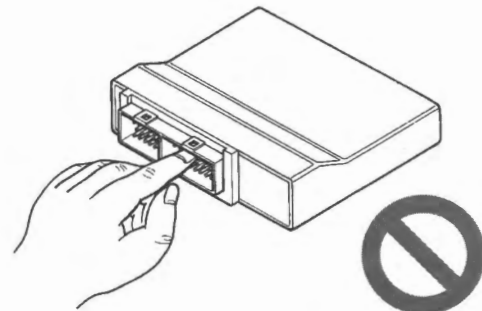

IH28K1000010-01

- When disconnecting and connecting the coupler, make sure to turn OFF the ignition switch (1), or electrical parts may get damaged.

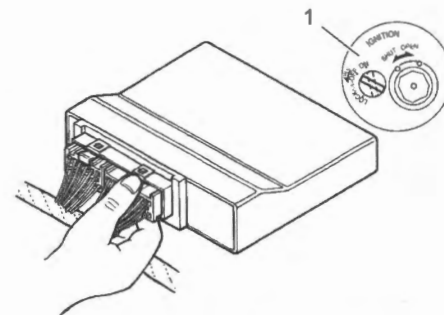


IE39J1000001-01

- Never allow dust or water to contact the ABS control unit/HU.



IH28K1000011-01

- The ABS control unit/HU cannot be disassembled. Replace the whole unit with a new one.

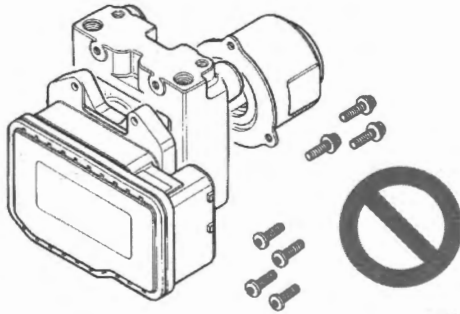


IH28K1000012-01

- Never connect any tester (voltmeter, ohmmeter, or whatever) to the electronic unit when its coupler is disconnected. Otherwise, damage to electronic unit may result.
- Never connect an ohmmeter to the electronic unit with its coupler connected. If attempted, damage to ECM / CDI UNIT / ABS control unit/HU or sensor may result.
- Be sure to use a specified voltmeter/ohmmeter. Otherwise, accurate measurements may not be obtained and personal injury may result.


#### Battery

- Select the same type MF battery when replacing the battery.
- Battery connection in reverse polarity is strictly prohibited. Such a wrong connection will damage the components of the FI system and ABS instantly when reverse power is applied.

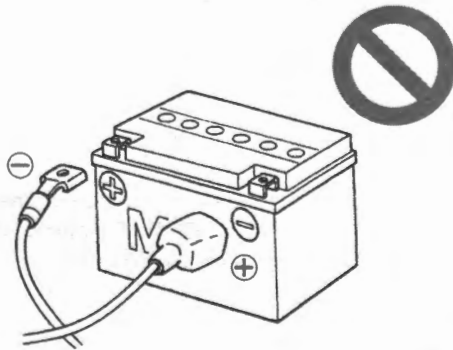


I718H1000004-01

- Removing any battery terminal of a running engine is strictly prohibited. The moment such removal is made, damaging counter electromotive force will be applied to the electronic unit which may result in serious damage.

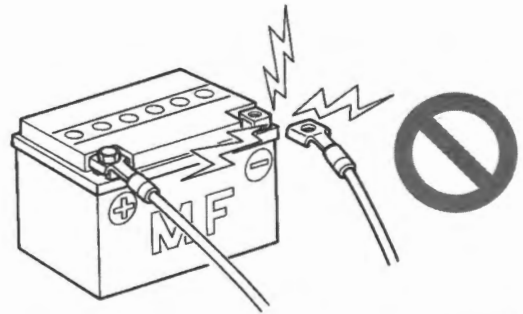

IH28K1000013-01

- Before measuring voltage at each terminal, check to make sure that battery voltage is 11 V or higher. Terminal voltage check with a low battery voltage will lead to erroneous diagnosis.

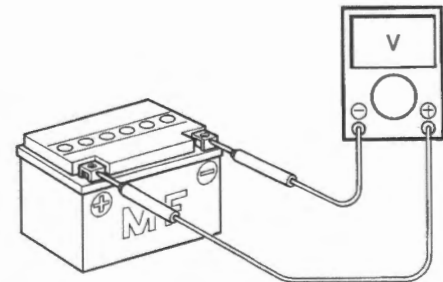

I310G1000012-02

#### Electrical Circuit Inspection Procedure

While there are various methods for electrical circuit inspection, described here is a general method to check for open and short circuit using an ohmmeter and a voltmeter.

#### Open circuit check


Possible causes for the open circuit are as follows. As the cause can exist in the connector/coupler or terminal, they need to be checked carefully.

- Loose connection of connector/coupler.
- Poor contact of terminal. (due to dirt, corrosion or rust, poor contact tension, entry of foreign object etc.)
- Wire harness being open.
- Poor terminal-to-wire connection.

## 00-5 Precautions:

When checking system circuits including an electronic control unit such as ECM, etc., it is important to perform careful check, starting with items which are easier to check.

- 1) Disconnect the negative (-) cable from the battery.
- 2) Check each connector/coupler at both ends of the circuit being checked for loose connection. Also check for condition of the coupler lock if equipped.

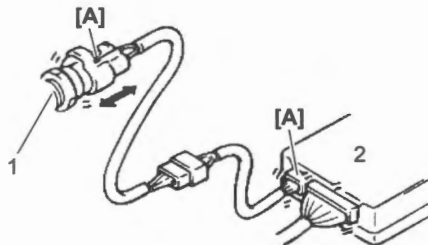


IH28K1000002-01

[A]: Check for loose connection
1. Sensor
2. Electrical part

- 3) Using a test male terminal, check the female terminals of the circuit being checked for contact tension.

Check each terminal visually for poor contact (possibly caused by dirt, corrosion, rust, entry of foreign object, etc.). At the same time, check to make sure that each terminal is fully inserted in the coupler and locked.


If contact tension is not enough, rectify the contact to increase tension or replace. The terminals must be clean and free of any foreign material which could impede proper terminal contact.

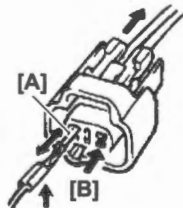

IH28K1000003-01

[A]: Check contact tension by inserting and removing.
[B]: Check each terminal for bend and proper alignment.

- 4) Using continuity inspect or voltage check procedure as described below, inspect the wire harness terminals for open circuit and poor connection. Locate abnormality, if any.

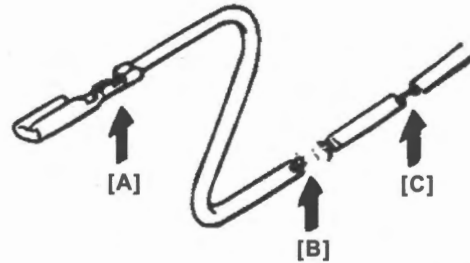


IH28K1000004-01

[A]: Looseness of crimping
[B]: Open
[C]: Thin wire (a few strands left)

### Continuity check

- 1) Measure resistance across coupler [B] (between [A] and [C] in the figure).

If no continuity is indicated (infinity or over limit), the circuit is open between terminals [A] and [C].

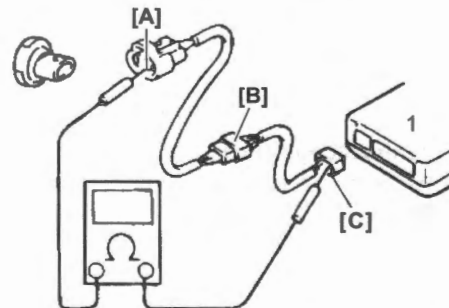


IH28K1000005-01

1. Electrical part

- 2) Disconnect the coupler [B] and measure resistance between couplers [A] and [B-1].

If no continuity is indicated, the circuit is open between couplers [A] and [B-1]. If continuity is indicated, there is an open circuit between couplers [B-2] and [C] or an abnormality in coupler [B-2] or coupler [C].

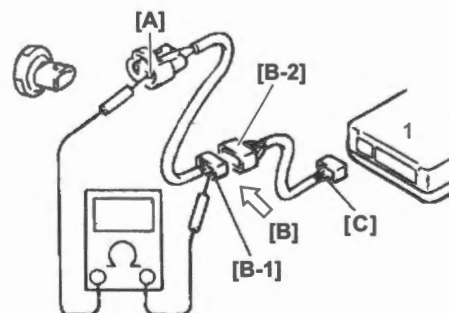

IH28K1000006-01

1. Electrical part

**Voltage check**

If voltage is supplied to the circuit being checked, voltage check can be used as circuit check.

- 1) With all connectors/couplers connected and voltage applied to the circuit being checked, measure voltage between each terminal and body ground.
- 2) If measurements were taken as shown in the figure and results were listed in the following, it means that the circuit is open between terminals [A] and [B].

**Voltage between**

[A] and body ground: 0 V

[B] and body ground: Approx. 5 V

[C] and body ground: Approx. 5 V



- 3) Also, if measured values are as listed following, a resistance (abnormality) exists which causes the voltage drop in the circuit between terminals [A] and [B].

**Voltage between**

[A] and body ground: 3 V – 2 V voltage drop

[B] and body ground: Approx. 5 V

[C] and body ground: Approx. 5 V

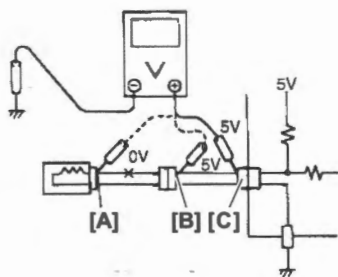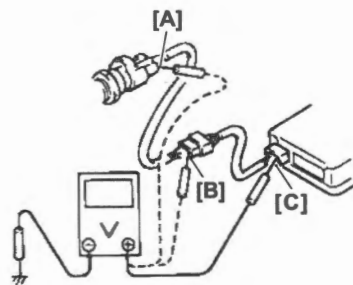

IH28K1000007-01



**Short circuit check (wire harness to ground)**

- 1) Disconnect the negative (-) cable from the battery.
- 2) Disconnect the connectors/couplers at both ends of the circuit to be checked.

**NOTE**

If the circuit to be checked branches to other parts as shown, disconnect all connectors/couplers of those parts. Otherwise, diagnosis will be wrong.


- 3) Measure resistance between terminal at one end of circuit ([A] terminal in the figure) and body ground. If continuity is indicated, there is a short circuit to ground between terminals [A] and [C].

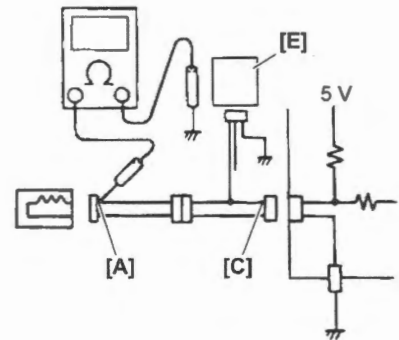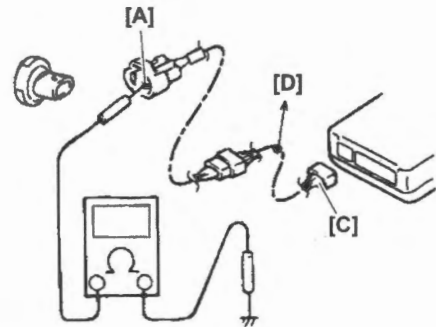

IF40J2000002-01

[D]: To other parts [E]: Other parts

- 4) Disconnect the connector/coupler included in circuit (coupler [B]) and measure resistance between terminal [A] and body ground. If continuity is indicated, the circuit is shorted to the ground between terminals [A] and [B].

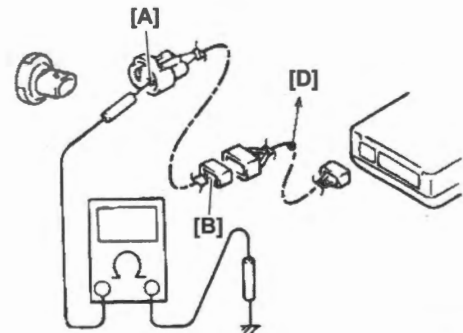

IF40J2000003-01

[D]: To other parts


## Precautions for Circuit Tester

BENH28K2000003

- Use the Suzuki multi circuit tester set.

### Special tool

(A): 09900-25008

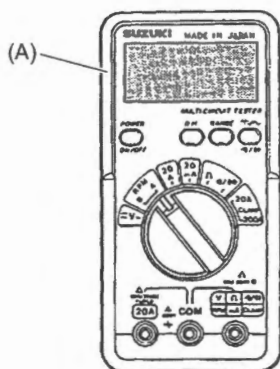

IH18K100001-01

- Read the instruction manual to use the tester correctly.
- Be sure to set the tester to the correct testing range.
- If the voltage and current are not known, make measurements using the highest range.

### Symbols

Symbol	Definition
— —	DC
~	AC
$\Omega$	Resistance
• )	Continuity
— <	Diode

### Using Needle Pointed Probe

#### NOTICE

- When using the multi circuit tester, do not strongly touch the terminal of the electrical part couplers with a needle pointed tester probe to prevent the terminal damage or terminal bend.
- When connecting the multi circuit tester, use the needle pointed probe to the back side of the lead wire coupler and connect the probes of tester to them.
- Use the needle pointed probe to prevent the rubber of the water proof coupler from damage.

Special tool  
09900-25009

## Precautions for SDS-II


BENH28K2000004

- In some models of the SUZUKI motorcycles, the DTC can be confirmed by using SDS-II.
- Read the instruction manual when using SDS-II and operate it properly.

### Special tool

(A): 09904-41030

09904-41040

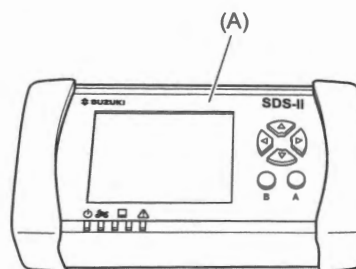


IH18K100002-01

## Precautions for Identification

BENH28K2000005

When viewed from the state in sitting on the seat, the front cylinder (1) is identified as #1 and the rear cylinder (2) is as #2.

The parts related to each cylinder are identified adding #1 or #2 after the part names.

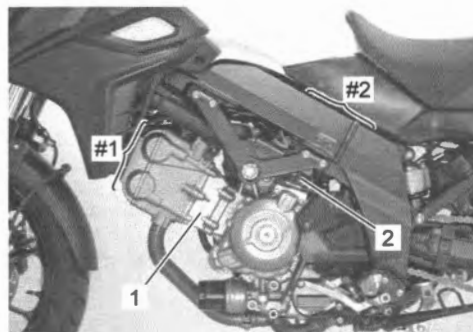

IH28K1000014-01

## Section 0

## General Information

## CONTENTS

<b>General Information .....</b>	<b>0A-1</b>	Throttle Cable Play Inspection and Adjustment .....	0B-3
<b>General Description .....</b>	<b>0A-1</b>	Throttle Valve Synchronization .....	0B-3
Abbreviations .....	0A-1	PAIR System Inspection (If Equipped) .....	0B-3
SAE-to-Former SUZUKI Term .....	0A-2	Engine Coolant Replacement .....	0B-3
Symbols .....	0A-3	Radiator Hose Inspection .....	0B-3
Wire Color Symbols .....	0A-4	Clutch Cable Play Inspection and Adjustment .....	0B-3
Applicable Model / VIN .....	0A-4	Drive Chain Inspection and Adjustment .....	0B-3
Vehicle Side View .....	0A-5	Drive Chain Cleaning and Lubricating .....	0B-4
Vehicle Identification Number .....	0A-5	Brake System Inspection .....	0B-4
Warning, Caution and Information Labels		Brake Fluid Inspection .....	0B-4
Location .....	0A-6	Brake Fluid Replacement .....	0B-4
<b>Component Location .....</b>	<b>0A-8</b>	Brake Hose Inspection .....	0B-4
Electrical Components Location .....	0A-8	Brake Hose Replacement .....	0B-4
<b>Maintenance and Lubrication .....</b>	<b>0B-1</b>	Tire Inspection .....	0B-4
<b>Precautions .....</b>	<b>0B-1</b>	Steering System Inspection .....	0B-4
Precautions for Maintenance .....	0B-1	Front Fork Inspection .....	0B-4
<b>Scheduled Maintenance .....</b>	<b>0B-2</b>	Rear Suspension Inspection .....	0B-4
Periodic Maintenance Schedule Chart .....	0B-2	Chassis Bolt and Nut Inspection .....	0B-5
<b>Repair Instructions .....</b>	<b>0B-3</b>	Lubrication Points .....	0B-7
Air Cleaner Element Inspection .....	0B-3	<b>Special Tools and Equipment .....</b>	<b>0B-7</b>
Air Cleaner Element Replacement .....	0B-3	Recommended Service Material .....	0B-7
Exhaust Pipe Bolt and Muffler Bolt Inspection .....	0B-3	<b>Service Data .....</b>	<b>0C-1</b>
Valve Clearance Inspection and Adjustment .....	0B-3	<b>Precautions .....</b>	<b>0C-1</b>
Spark Plug Inspection .....	0B-3	Precautions for Service Data .....	0C-1
Spark Plug Replacement .....	0B-3	<b>Specifications .....</b>	<b>0C-1</b>
Fuel Hose Inspection .....	0B-3	Specifications .....	0C-1
Fuel Hose Replacement .....	0B-3	Service Data .....	0C-3
Evaporative Emission Control System		Fasteners Information .....	0C-11
Inspection (If Equipped) .....	0B-3	<b>Special Tools and Equipment .....</b>	<b>0C-13</b>
Engine Oil Replacement .....	0B-3	Fuel / Oil / Fluid / Coolant Recommendation .....	0C-13
Engine Oil Filter Replacement .....	0B-3	Special Tool .....	0C-15

# General Information

## General Description

### Abbreviations

BENH28K20101001

**A:**  
**AAT:** Ambient Air Temperature  
**ABDC:** After Bottom Dead Center  
**ABS:** Anti-lock Brake System  
**AC:** Alternating Current  
**ACL:** Air Cleaner  
**AKI:** Anti-knock Index  
**AP:** Atmospheric Pressure  
**API:** American Petroleum Institute  
**ATDC:** After Top Dead Center  
**A/F:** Air Fuel Ratio  
**B:**  
**BBDC:** Before Bottom Dead Center  
**BTDC:** Before Top Dead Center  
**B+:** Battery Positive Voltage  
**C:**  
**CDI:** Capacitive Discharge Ignition  
**CKP:** Crankshaft Position  
**CKT:** Circuit  
**CLP:** Clutch Lever Position  
**CMP:** Camshaft Position  
**CO:** Carbon Monoxide  
**CPU:** Central Processing Unit  
**CVT:** Continuously Variable Transmission  
**D:**  
**DC:** Direct Current  
**DOHC:** Double Over Head Camshaft  
**DRL:** Daytime Running Light  
**DTC:** Diagnostic Trouble Code  
**E:**  
**ECM:** Engine Control Module  
**ECT:** Engine Coolant Temperature  
**ET:** Engine Temperature  
**ETV:** Electric Throttle Valve  
**EVAP:** Evaporative Emission  
**EX.:** Exhaust  
**EXCV:** Exhaust Control Valve  
**EXCVA:** Exhaust Control Valve Actuator  
**F:**  
**FI:** Fuel Injection, Fuel Injector  
**FP:** Fuel Pump  
**FPR:** Fuel Pressure Regulator  
**FTPC:** Fuel Tank Pressure Control  
**FWD:** Forward  
**G:**  
**GEN:** Generator  
**GND:** Ground  
**GP:** Gear Position  
**H:**  
**HC:** Hydrocarbons  
**HI:** High  
**HO2:** Heated Oxygen  
**HU:** Hydraulic Unit

**I:**  
**IAP:** Intake Air Pressure  
**IAT:** Intake Air Temperature  
**I.D.:** Inside Diameter  
**IG:** Ignition  
**IN.:** Intake  
**ISC:** Idle Speed Control  
**J:**  
**JASO:** Japanese Automobile Standards Organization  
**L:**  
**LCD:** Liquid Crystal Display  
**LED:** Light Emitting Diode  
**LH:** Left Hand  
**LO:** Low  
**M:**  
**Max:** Maximum  
**MIL:** Malfunction Indicator Light  
**Min.:** Minimum  
**MTBE:** Methyl Tertiary Butyl Ether  
**N:**  
**NOx:** Nitrogen Oxides  
**O:**  
**O2:** Oxygen  
**OBD:** On-Board Diagnostic System  
**OHC:** Over Head Camshaft  
**O.D.:** Outside Diameter  
**P:**  
**PAIR:** Pulsed Secondary Air Injection  
**PCV:** Positive Crankcase Ventilation  
**PP:** Pulley Position  
**R:**  
**RH:** Right Hand  
**ROM:** Read Only Memory  
**RON:** Research Octane Number  
**RPM:** Engine Speed  
**S:**  
**SAE:** Society of Automotive Engineers  
**SDS:** Suzuki Diagnosis System  
**SRAD:** Suzuki Ram Air Direct  
**STCS:** Secondary Throttle Control System  
**STD:** Standard  
**STP:** Secondary Throttle Position  
**STV:** Secondary Throttle Valve  
**STVA:** Secondary Throttle Valve Actuator  
**T:**  
**TC:** Traction Control  
**TDC:** Top Dead Center  
**TO:** Tip-over  
**TP:** Throttle Position  
**TPS:** Throttle Position Sensor



**SAE-to-Former SUZUKI Term**

BENH28K20101008

This list shows SAE (Society of Automotive Engineers) J1930 terms and abbreviations which may be used in this manual in compliance with SAE recommendations, as well as their former SUZUKI names. Ex. SAE term (Abbreviation): Former SUZUKI term

**A:**

**Air Cleaner (ACL):** Air Cleaner, Air Cleaner Box

**B:**

**Barometric Pressure (BARO):** Barometric Pressure, Atmospheric Pressure (APS, AP Sensor)

**Battery Positive Voltage (B+):** Battery Voltage, +B

**C:**

**Camshaft Position Sensor (CMP Sensor):** Camshaft Position Sensor (CMPS)

**Crankshaft Position Sensor (CKP Sensor):**

Crankshaft Position Sensor (CKPS), Crank Angle

**D:**

**Data Link Connector (DLC):** Dealer Mode Coupler

**Diagnostic Test Mode (DTM):** —

**Diagnostic Trouble Code (DTC):** Diagnostic Code, Malfunction Code

**E:**

**Electronic Ignition (EI):** —

**Engine Control Module (ECM):** Engine Control Module (ECM), FI Control Unit, Engine Control Unit (ECU)

**Engine Coolant Level (ECL):** Coolant Level

**Engine Coolant Temperature (ECT):** Coolant Temperature, Engine Coolant Temperature, Water Temperature

**Engine Speed (RPM):** Engine Speed (RPM)

**Evaporative Emission (EVAP):** Evaporative Emission  
**Evaporative Emission Canister (EVAP Canister):** — (Canister)

**Exhaust Control System:** EXC System (EXCS)

**Exhaust Control Valve:** EXC Valve (EXCV)

**Exhaust Control Valve Actuator:** EXCV Actuator (EXCVA)

**F:**

**Fan Control (FC):** —

**Fuel Level Sensor:** Fuel Level Sensor, Fuel Level Gauge

**Fuel Pump (FP):** Fuel Pump (FP)

**G:**

**Generator (GEN):** Generator

**Ground (GND):** Ground (GND, GRD)

**H:**

**Hydrocarbons (HC):** Hydrocarbons

**Heated Oxygen Sensor (HO2S):** Heated Oxygen Sensor (HO2S), O2 sensor

**I:**

**Intake Air Temperature (IAT):** Intake Air Temperature (IAT), Air Temperature

**Idle Speed Control (ISC):** —

**Ignition Control (IC):** Electronic Spark Advance (ESA)

**Ignition Control Module (ICM):** —

**M:**

**Malfunction Indicator Lamp (MIL):** LED Light, Malfunction Indicator Light (MIL)

**Manifold Absolute Pressure (MAP):** Intake Air Pressure (IAP), Intake Vacuum

**Mass Air Flow (MAF):** Air Flow

**O:**

**On-Board Diagnostic (OBD):** Self-Diagnosis Function, Diagnostic

**Open Loop (OL):** —

**P:**

**Power Control Module (PCM):** —

**Programmable Read Only Memory (PROM):** —

**Pulsed Secondary Air Injection (PAIR):** Pulse Air Control (PAIR)

**Purge Valve (Purge Valve):** Purge Valve (SP Valve)

**R:**

**Random Access Memory (RAM):** —

**Read Only Memory (ROM):** ROM

**S:**

**Secondary Air Injection (AIR):** —

**Secondary Throttle Control System (STCS):** STC System (STCS)

**Secondary Throttle Valve (STV):** ST Valve (STV)

**Secondary Throttle Valve Actuator (STVA):** STV Actuator (STVA)

**T:**

**Throttle Body (TB):** Throttle Body (TB)

**Throttle Body Fuel Injection (TBI):** Throttle Body Fuel Injection (TBI)

**Throttle Position Sensor (TP Sensor):** TP Sensor (TPS)

**Tank Pressure Control Valve:** TPC Valve (TPCV)

**V:**

**Voltage Regulator (VR):** Voltage Regulator

**Volume Air Flow (VAF):** Air Flow

## Symbols

Listed in the table below are the symbols indicating instructions and other information necessary for servicing. The meaning of each symbol is also included in the table.

### NOTE

The table below shows generally used symbols, and includes some symbols not used in this manual.

Symbol	Definition
	Torque control required. Data beside it indicate specified torque.
	Apply oil. Use engine oil unless otherwise specified.
	Apply molybdenum oil solution. (Mixture of engine oil and SUZUKI MOLY PASTE in a ratio of 1 : 1).
	Apply SUZUKI SUPER GREASE A. 99000-25011
	Apply SUZUKI SUPER GREASE C. 99000-25030
	Apply SUZUKI MOLYBDENUM GREASE L. 99000-25280
	Apply SUZUKI MOLY PASTE. 99000-25140
	Apply SUZUKI SILICONE GREASE. 99000-25100
	Apply SUZUKI WATER RESISTANT GREASE EP2. 99000-25350
	Apply SUZUKI BOND 1207B. 99000-31140
	Apply SUZUKI BOND 1215. 99000-31110
	Apply SUZUKI BOND 1216B. 99000-31230
	Apply THREAD LOCK CEMENT 1303B. 99000-32030
	Apply THREAD LOCK CEMENT 1322D. 99000-32150
	Apply THREAD LOCK CEMENT 1342H. 99000-32160
	Apply THREAD LOCK CEMENT 1360. 99000-32130
	Use SUZUKI SUPER LONG LIFE COOLANT (BLUE). 99000-99032-20X
	Use SUZUKI LONG LIFE COOLANT (GREEN). 99000-99032-12X
	Apply or use fork oil.
	Apply or use brake fluid.
	Use special tool.
	Do not reuse.
	Note on reassembly.


### Wire Color Symbols

BENH28K20101003

Symbol	Wire Color	Symbol	Wire Color
B	Black	Lg	Light green
Bl	Blue	O	Orange
Br	Brown	P	Pink
Dbr	Dark brown	R	Red
Dg	Dark green	V	Violet
G	Green	W	White
Gr	Gray	Y	Yellow
Lbl	Light blue		

There are two kinds of colored wire used in this vehicle. One is single-colored wire and the other is dual-colored (striped) wire.

The single-colored wire uses only one color symbol (i.e. G). The dual-colored wire uses two color symbols (i.e. G/Y). The first symbol represents the base color of the wire and the second symbol represents the color of the stripe.

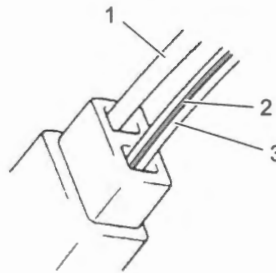

ID26J1010224-02

1. G (Base color)	3. G (Base color)
2. Y (Stripe color)	

### Applicable Model / VIN

BENH28K20101004

#### Applicable Model

DL650A / XA / AUE / XAUE L7

#### Applicable VIN

#### NOTE


- “#” indicates any check digit from 0 to 9 and X.
- “@” indicates the year of manufacture or the month and year of manufacture.

Applicable Model	VIN Number	Country or Area
DL650XAL7	JS1C733B#H2100001 -	U.S.A. except for California State
	JS1C733G#H2100001 -	California State
DL650AL7	JS1C733B#H2100001 -	U.S.A. except for California State
	JS1C733G#H2100001 -	California State

Vehicle Side View


BENH28K20101005

SUZUKI DL650XA

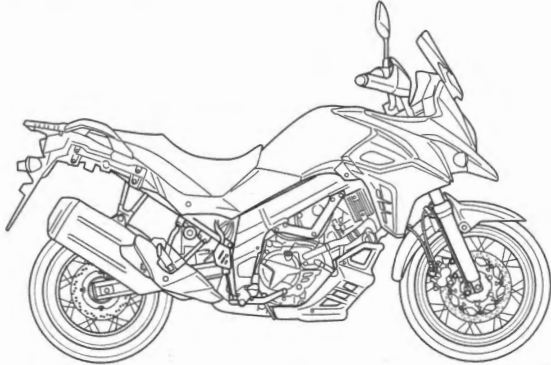

IH28K1010001-02

SUZUKI DL650A

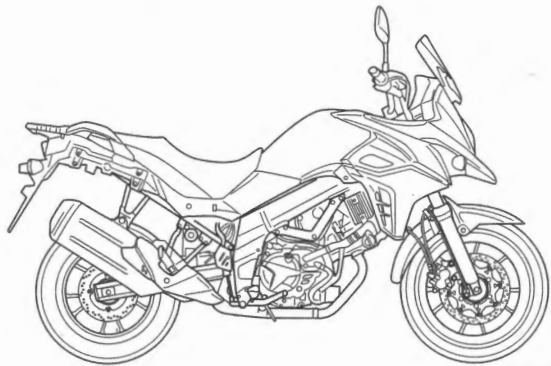


IH28K1010002-02


Vehicle Identification Number

BENH28K20101006

The frame serial number or V.I.N. (Vehicle Identification Number) (1) is stamped on the right side of steering head tube. The engine serial number (2) is located on the left side of crankcase assembly.

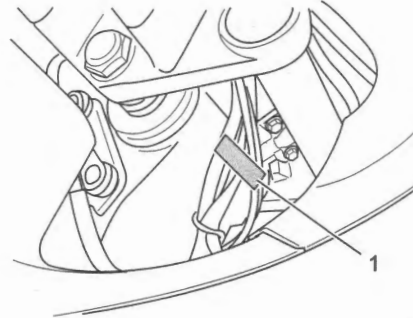

IH28K1010003-01

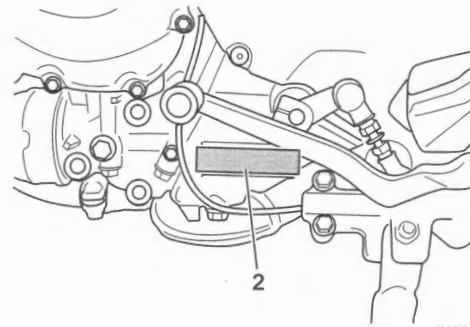


IH28K1010004-01


Warning, Caution and Information Labels Location

BENH28K20101007


[A]

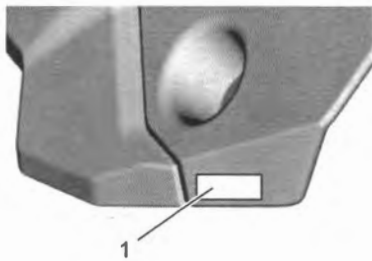


[B]

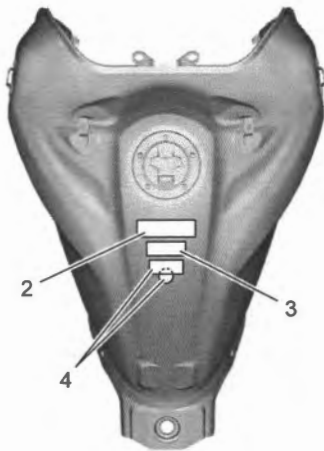


[C]

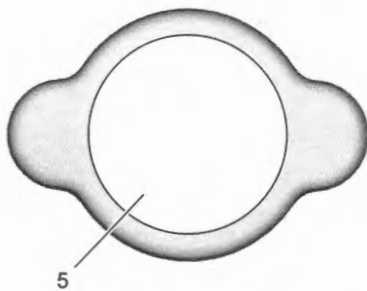

[D]

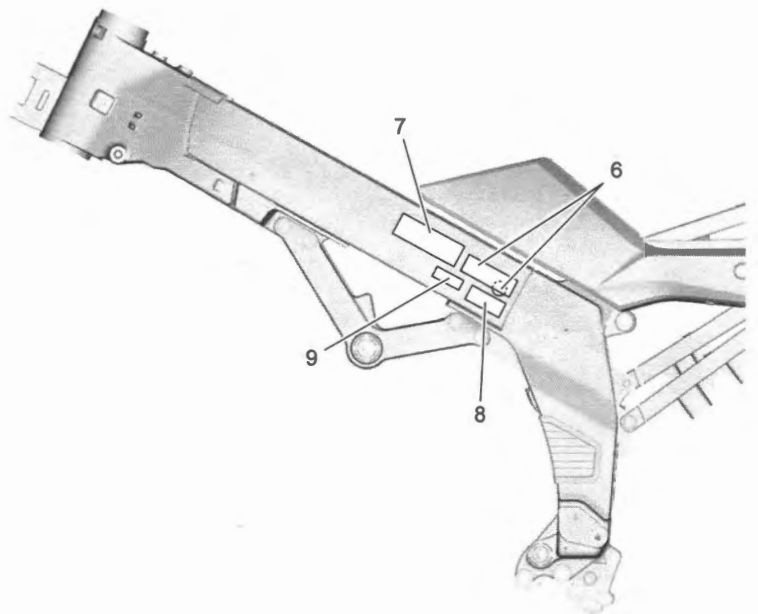


[E]

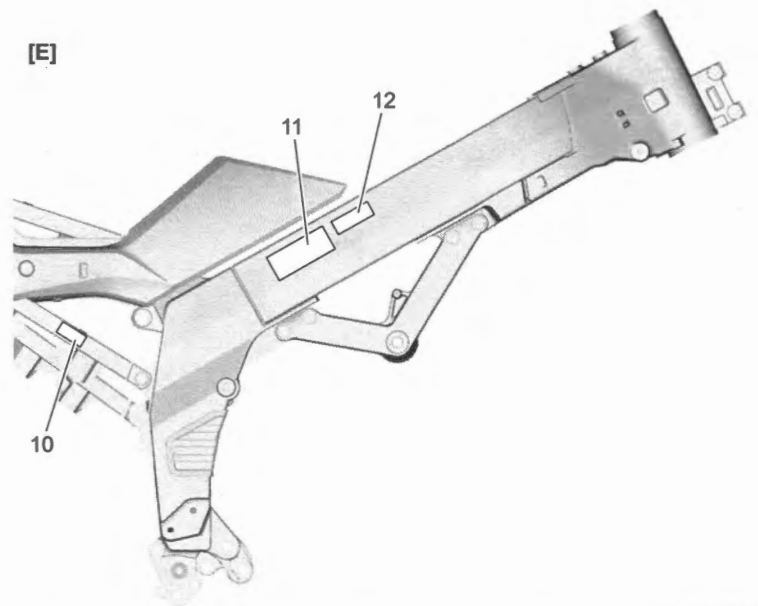


IH28K1010005-01

[A]: Windscreen	2. General warning label	8. EPA noise label, Noise label or Un noise label (if equipped)
[B]: Fuel tank	3. Helmet label (if equipped)	9. Un noise label or Noise approval mark label (if equipped)
[C]: Radiator cap	4. Fuel limitation label or Gasoline label (if equipped)	10. Brake fluid information label (if equipped)
[D]: Frame (LH)	5. Radiator cap label	11. ID plate, Manufacturer label or Safety plate (if equipped)
[E]: Frame (RH)	6. Information label (if equipped)	12. Brake approval mark label (if equipped)
1. Cowling label (if equipped)	7. Vacuum hose routing label (if equipped)	


[A]

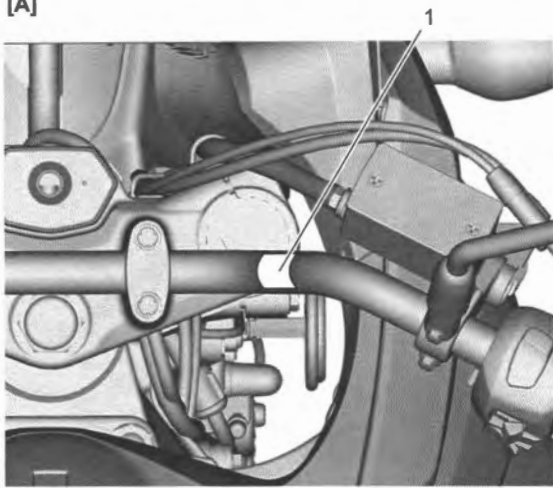


[C]

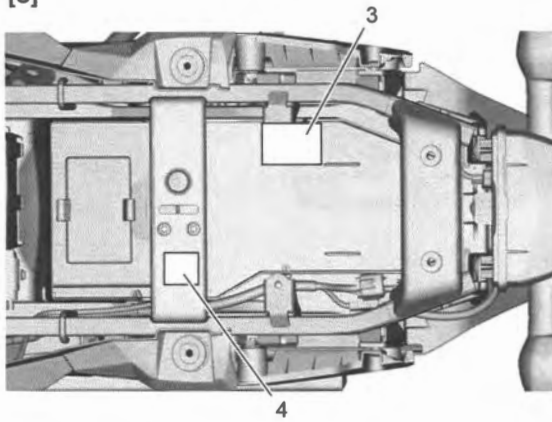


[B]

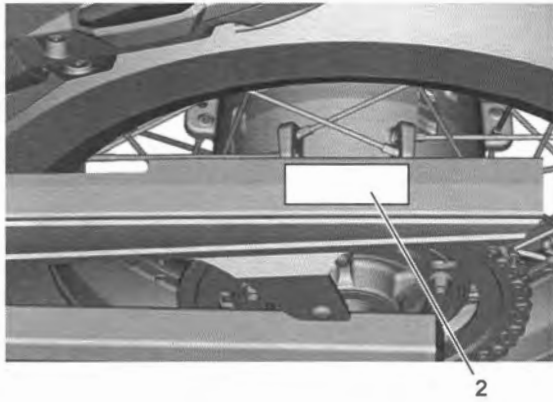

[D]

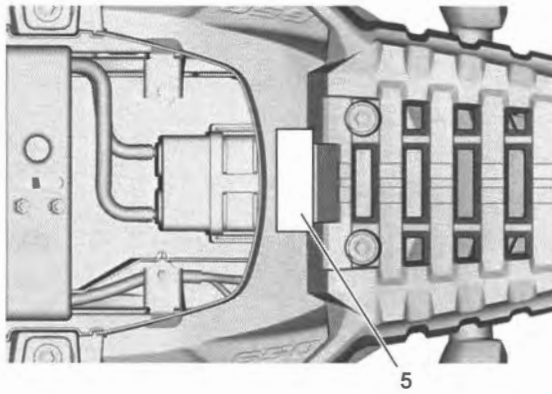

[E]

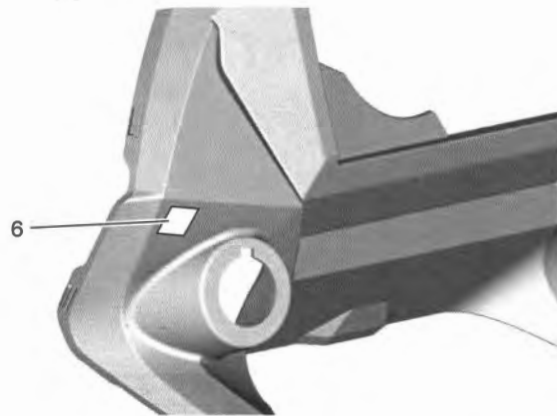




IH28K1010006-02

[A]: Handlebars	[E]: Meter panel	4. Recycle label (if equipped)
[B]: Chain cover	1. Brake fluid information label (if equipped)	5. Loading capacity label
[C]: Rear fender (front)	2. Tire information label	6. Max amperage label
[D]: Sport carrier	3. Manual notice label (if equipped)	

# Component Location






## Electrical Components Location

BENH28K20103001

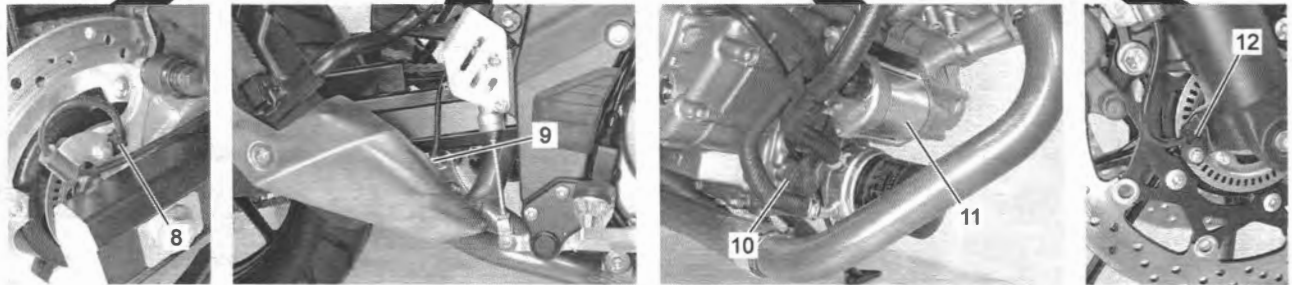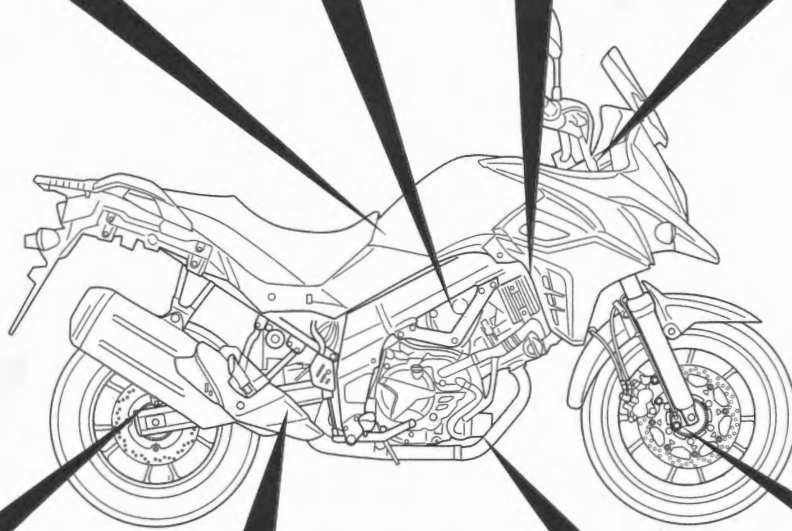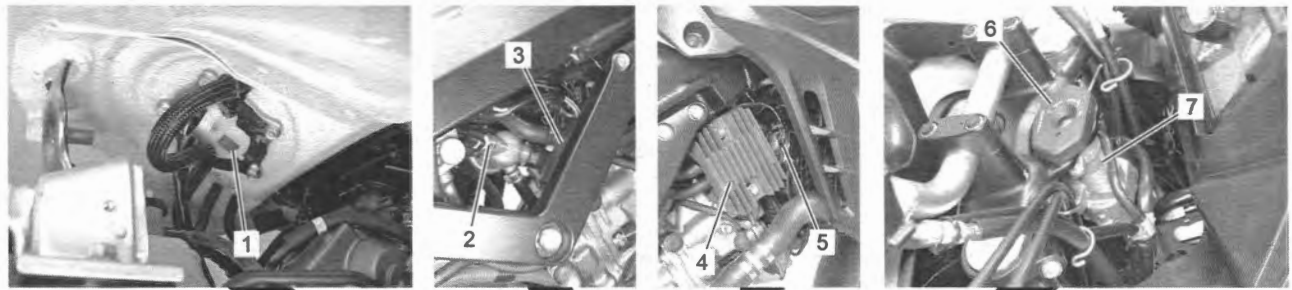

IH28K1010007-02

1. Fuel pump/Fuel level gauge	5. Cooling fan motor	9. HO2 sensor
2. ECT sensor	6. Immobilizer antenna (if equipped)	10. Oil pressure switch
3. Ignition coil #2	7. Ignition switch	11. Starter motor
4. Regulator/rectifier	8. Rear wheel speed sensor	12. Front wheel speed sensor

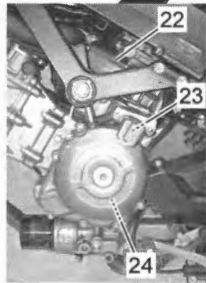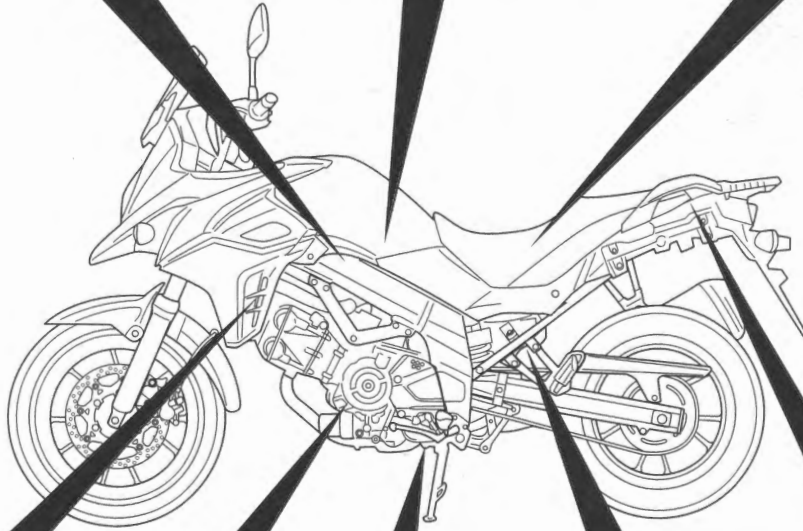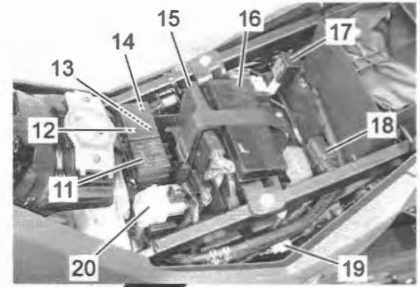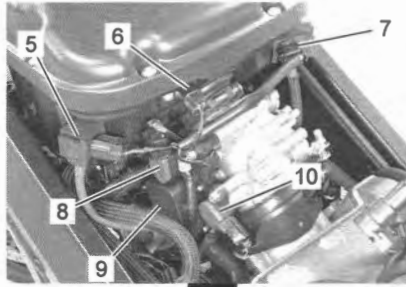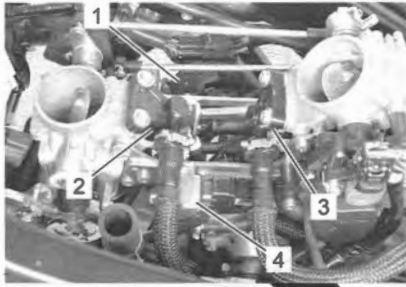

IH28K1010008-04

1. PAIR control solenoid valve (if equipped)	11. Fuse box	21. Horn
2. Fuel injector #1	12. Side-stand relay	22. Ignition coil #1
3. Fuel injector #2	13. Cooling fan relay	23. CKP sensor
4. EVAP system purge control solenoid valve (if equipped)	14. Fuel pump relay	24. Generator
5. IAP sensor #2	15. ECM	25. GP switch
6. IAT sensor	16. Battery	26. Side-stand switch
7. IAP sensor #1	17. Turn signal relay	27. ABS control unit/HU
8. STP sensor	18. TO sensor	28. Mode select coupler (6P)
9. STV actuator	19. Mode select coupler (2P)	
10. TP sensor	20. Starter relay/Main fuse	



---

# Maintenance and Lubrication

## Precautions

### Precautions for Maintenance

BENH28K20200001

The "Periodic Maintenance Schedule Chart" lists the recommended intervals for all the required periodic service work necessary to keep the motorcycle operating at peak performance and economy. Maintenance intervals are expressed in terms of kilometers, miles and months for your convenience.

**IMPORTANT: The periodic maintenance intervals and service requirements have been established in accordance with EPA regulations. Following these instructions will ensure that the motorcycle will not exceed emission standards and it will also ensure the reliability and performance of the motorcycle.**

#### NOTE

---

**More frequent servicing may be required on motorcycles that are used under severe conditions.**

---

## Scheduled Maintenance

### Periodic Maintenance Schedule Chart

BENH28K20205001

#### NOTE

- I = Inspect and clean, adjust, replace or lubricate as necessary.  
R = Replace.  
T = Tighten.
- (CA. only) means that the item or the maintenance interval is to be applied only for the California model.

Item	Interval					
	months	2	12	24	36	48
	km	1000	6000	12000	18000	24000
	miles	600	4000	7500	11000	14500
Air cleaner element (I: (Page 0B-3), R: (Page 0B-3))	—	I	I	I	R	I
Exhaust pipe bolts and muffler bolts (T: (Page 0B-3))	T	—	—	T	—	T
Valve clearance (I: (Page 0B-3))	—	—	—	—	—	I
Spark plugs (I: (Page 0B-3), R: (Page 0B-3))	—	I	—	R	I	R
Fuel hose (I: (Page 0B-3), R: (Page 0B-3))	—	I	I	I	I	I
	Replace every 4 years (Except for U.S.A. and Canada)					
Evaporative emission control system (if equipped) (I: (Page 0B-3))	—	—	—	I	—	I
Engine oil (R: (Page 0B-3))	R	R	R	R	R	R
Engine oil filter (R: (Page 0B-3))	R	—	—	—	R	—
Throttle cable play (I: (Page 0B-3))	I	I	I	I	I	I
PAIR (air supply) system (if equipped) (I: (Page 0B-3))	—	—	—	I	—	I
Throttle valve synchronization (I: (Page 0B-3))	I (CA. only)	—	—	I	—	I
Engine coolant (R: (Page 0B-3))	"SUZUKI SUPER LONG LIFE COOLANT" (Blue)	Replace every 4 years or 48000 km (29000 miles)				
	"SUZUKI LONG LIFE COOLANT" (Green) or an engine coolant other than "SUZUKI SUPER LONG LIFE COOLANT" (Blue)	—	—	R	—	R
Radiator hose (I: (Page 0B-3))	—	I	I	I	I	I
Clutch cable play (I: (Page 0B-3))	—	I	I	I	I	I
Drive chain (I: (Page 0B-3), I: (Page 0B-4))	I	I	I	I	I	I
	Clean and lubricate every 1000 km (600 miles)					
Brakes (I: (Page 0B-4))	I	I	I	I	I	I
Brake hose (I: (Page 0B-4), R: (Page 0B-4))	—	I	I	I	I	I
	Replace every 4 years					
Brake fluid (I: (Page 0B-4), R: (Page 0B-4))	—	I	I	I	I	I
	Replace every 2 years					
Tires (I: (Page 0B-4))	—	I	I	I	I	I
Steering (I: (Page 0B-4))	I	—	—	I	—	I
Front forks (I: (Page 0B-4))	—	—	—	I	—	I
Rear suspension (I: (Page 0B-4))	—	—	—	I	—	I
Chassis bolts and nuts (T: (Page 0B-5))	T	T	T	T	T	T
Lubrication (I: (Page 0B-7))	Lubricate every 1000 km (600 miles)					

## Repair Instructions

### Air Cleaner Element Inspection

BENH28K20206001

Refer to "Air Cleaner Element Inspection and Cleaning" in Section 1D (Page 1D-5).

### Air Cleaner Element Replacement

BENH28K20206002

Refer to "Air Cleaner Element Removal and Installation" in Section 1D (Page 1D-5).

### Exhaust Pipe Bolt and Muffler Bolt Inspection

BENH28K20206003

Refer to "Exhaust System Inspection" in Section 1K (Page 1K-3).

### Valve Clearance Inspection and Adjustment

BENH28K20206004

Refer to "Valve Clearance Inspection and Adjustment" in Section 1D (Page 1D-39).

### Spark Plug Inspection

BENH28K20206005

Refer to "Spark Plug Inspection" in Section 1H (Page 1H-7).

### Spark Plug Replacement

BENH28K20206006

Refer to "Spark Plug Removal and Installation" in Section 1H (Page 1H-6).

### Fuel Hose Inspection

BENH28K20206007

Refer to "Fuel Hose Inspection" in Section 1G (Page 1G-8).

### Fuel Hose Replacement

BENH28K20206008

Refer to "Fuel Feed Hose Removal and Installation" in Section 1G (Page 1G-8).

### Evaporative Emission Control System Inspection (If Equipped)

BENH28K20206009

Refer to "EVAP Control System Inspection (If Equipped)" in Section 1B (Page 1B-13).

### Engine Oil Replacement

BENH28K20206010

Refer to "Engine Oil Replacement" in Section 1E (Page 1E-4).

### Engine Oil Filter Replacement

BENH28K20206011

Refer to "Oil Filter Replacement" in Section 1E (Page 1E-5).

### Throttle Cable Play Inspection and Adjustment

BENH28K20206012

Refer to "Throttle Cable Play On-Vehicle Inspection and Adjustment" in Section 1D (Page 1D-9).

### Throttle Valve Synchronization

BENH28K20206013

Refer to "Throttle Valve Synchronization" in Section 1D (Page 1D-15).

### PAIR System Inspection (If Equipped)

BENH28K20206014

Refer to "PAIR System Inspection (If Equipped)" in Section 1B (Page 1B-11).

### Engine Coolant Replacement

BENH28K20206015

Refer to "Engine Coolant Replacement" in Section 1F (Page 1F-5).

### Radiator Hose Inspection

BENH28K20206016

Refer to "Radiator Hose Inspection" in Section 1F (Page 1F-7).

### Clutch Cable Play Inspection and Adjustment

BENH28K20206017

Refer to "Clutch Cable Play On-Vehicle Inspection and Adjustment" in Section 5C (Page 5C-2).

### Drive Chain Inspection and Adjustment

BENH28K20206018

Refer to "Drive Chain Inspection and Adjustment" in Section 3A (Page 3A-3).

**Drive Chain Cleaning and Lubricating**

BENH28K20206019

Refer to "Drive Chain Cleaning and Lubricating" in Section 3A (Page 3A-4).

**Brake System Inspection**

BENH28K20206020

**Brake Pad**

- Front: ⌚ (Page 4B-2)
- Rear: ⌚ (Page 4C-2)

**Brake Disc**

- Front: ⌚ (Page 4B-8)
- Rear: ⌚ (Page 4C-7)

**Brake Light Switch**

Refer to "Rear Brake Light Switch Inspection" in Section 4A (Page 4A-6).

**Brake Pedal Height**

Refer to "Brake Pedal Height Inspection and Adjustment" in Section 4A (Page 4A-8).

**Brake Fluid Inspection**

BENH28K20206021

Refer to "Brake Fluid Level Check" in Section 4A (Page 4A-7).

**Brake Fluid Replacement**

BENH28K20206022

Refer to "Brake Fluid Replacement" in Section 4A (Page 4A-11).

**Brake Hose Inspection**

BENH28K20206023

Refer to "Brake Hose Inspection" in Section 4A (Page 4A-7).

**Brake Hose Replacement**

BENH28K20206024

- Front: ⌚ (Page 4A-12)
- Rear: ⌚ (Page 4A-12)

**Tire Inspection**

BENH28K20206025

Refer to "Tire Inspection and Cleaning" in Section 2D (Page 2D-20).

**Steering System Inspection**

BENH28K20206026

Refer to "Steering On-Vehicle Inspection" in Section 6B (Page 6B-7).

**Front Fork Inspection**

BENH28K20206027

Refer to "Front Fork On-Vehicle Inspection" in Section 2B (Page 2B-2).

**Rear Suspension Inspection**









BENH28K20206028

Refer to "Rear Suspension On-Vehicle Inspection" in Section 2C (Page 2C-2).

### Chassis Bolt and Nut Inspection









BENH28K20206029

Check that all chassis bolts and nuts are tightened to their specified torque.

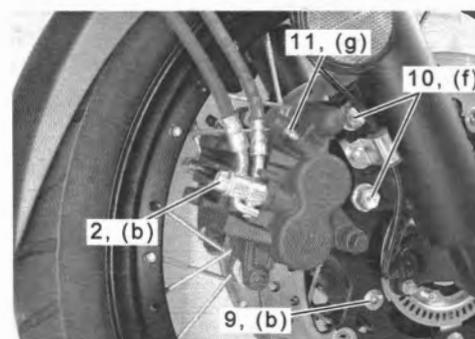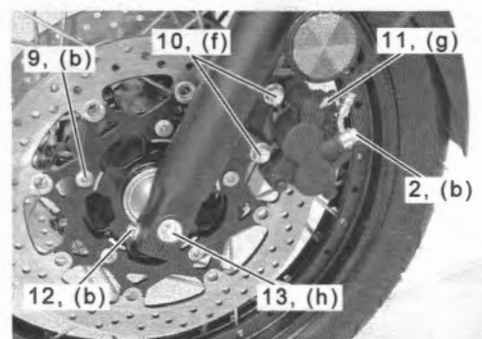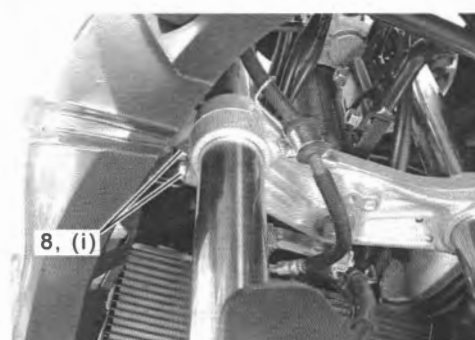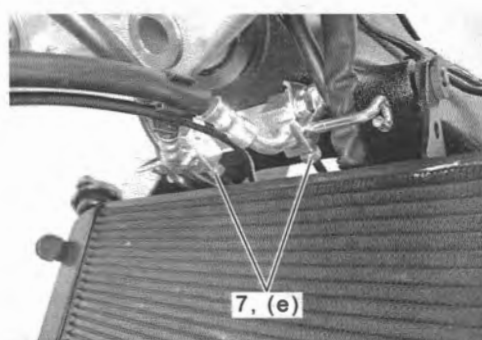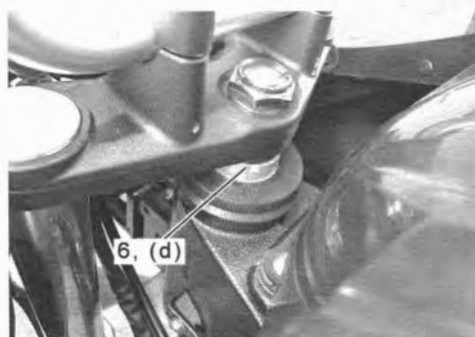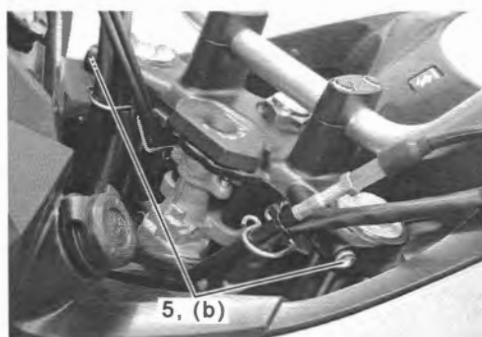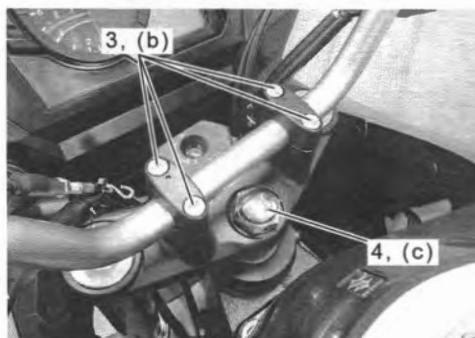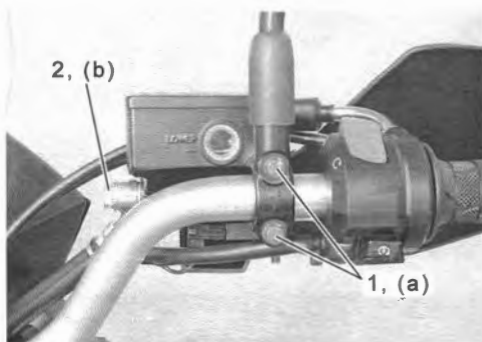

IH28K1020001-02

1. Front brake master cylinder holder bolt	9. Front brake disc bolt	(d): 80 N-m (8.2 kgf-m, 59.0 lbf-ft)
2. Brake hose union bolt	10. Front brake caliper mounting bolt	(e): 16 N-m (1.6 kgf-m, 12.0 lbf-ft)
3. Handlebar clamp bolt	11. Front brake air bleeder valve	(f): 39 N-m (4.0 kgf-m, 29.0 lbf-ft)
4. Steering stem head nut	12. Front axle pinch bolt	(g): 7.5 N-m (0.76 kgf-m, 5.55 lbf-ft)
5. Front fork upper clamp bolt	13. Front axle	(h): 65 N-m (6.6 kgf-m, 48.0 lbf-ft)
6. Steering stem lock-nut	(a): 10 N-m (1.0 kgf-m, 7.5 lbf-ft)	(i): 21 N-m (2.1 kgf-m, 15.5 lbf-ft)
7. Brake pipe flare nut	(b): 23 N-m (2.3 kgf-m, 17.0 lbf-ft)	
8. Front fork lower clamp bolt	(c): 90 N-m (9.2 kgf-m, 66.5 lbf-ft)	

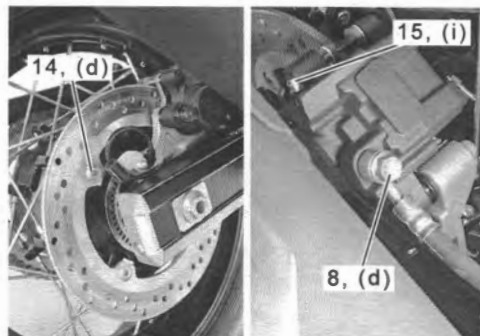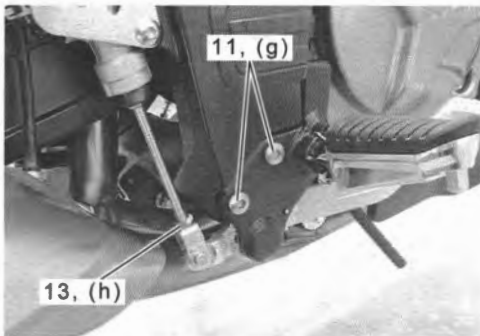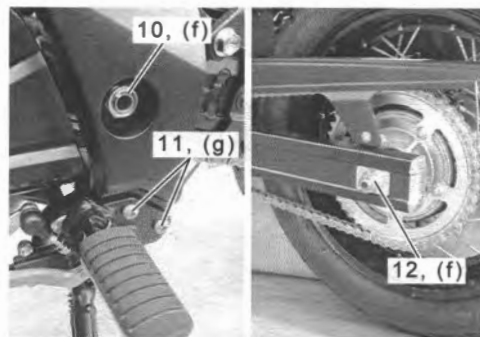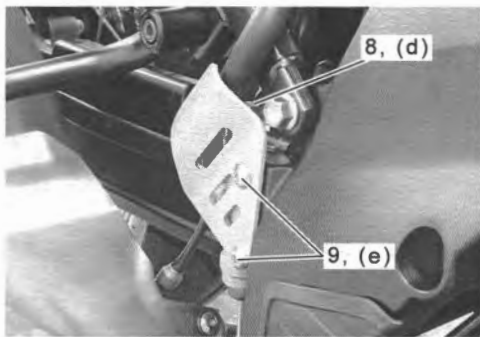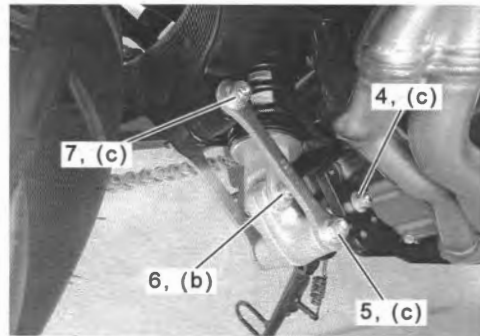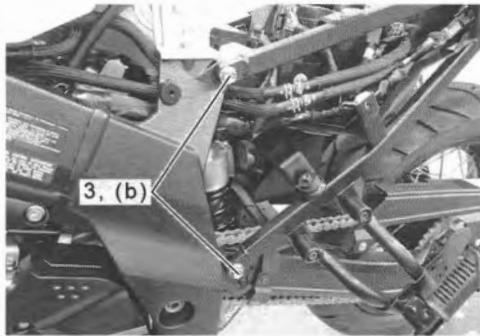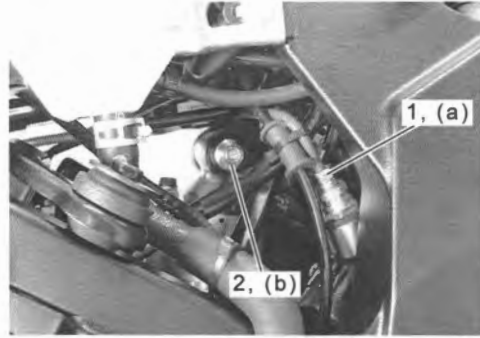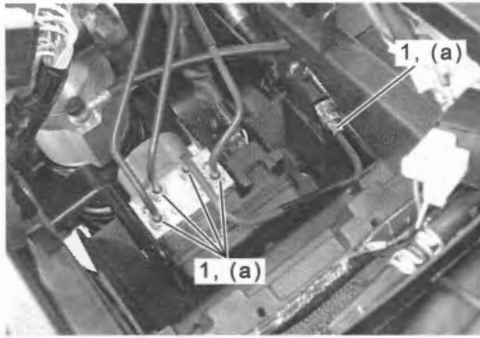

IH28K1020002-01

1. Brake pipe flare nut	9. Rear brake master cylinder mounting bolt	(b): 50 N-m (5.1 kgf-m, 37.0 lbf-ft)
2. Rear shock absorber upper mounting nut	10. Swingarm pivot nut	(c): 78 N-m (8.0 kgf-m, 57.5 lbf-ft)
3. Seat rail bolt	11. Front footrest bolt	(d): 23 N-m (2.3 kgf-m, 17.0 lbf-ft)
4. Cushion lever (front) mounting nut	12. Rear axle nut	(e): 10 N-m (1.0 kgf-m, 7.5 lbf-ft)
5. Cushion lever (center) mounting nut	13. Rear brake master cylinder rod lock-nut	(f): 100 N-m (10.2 kgf-m, 74.0 lbf-ft)
6. Rear shock absorber lower mounting nut	14. Rear brake disc bolt	(g): 26 N-m (2.7 kgf-m, 19.5 lbf-ft)
7. Cushion rod mounting nut	15. Rear brake air bleeder valve	(h): 18 N-m (1.8 kgf-m, 13.5 lbf-ft)
8. Brake hose union bolt	(a): 16 N-m (1.6 kgf-m, 12.0 lbf-ft)	(i): 6.0 N-m (0.61 kgf-m, 4.45 lbf-ft)


## Lubrication Points

BENH28K20206030

Proper lubrication is important for smooth operation and long life of each working part of the motorcycle.  
Major lubrication points are indicated as follows.

### NOTE

- Before lubricating each part, clean off any rusty spots and wipe off any grease, oil, dirt or grime.
- Lubricate exposed parts which are subject to rust, with a rust preventative spray whenever the motorcycle has been operated under wet or rainy conditions.

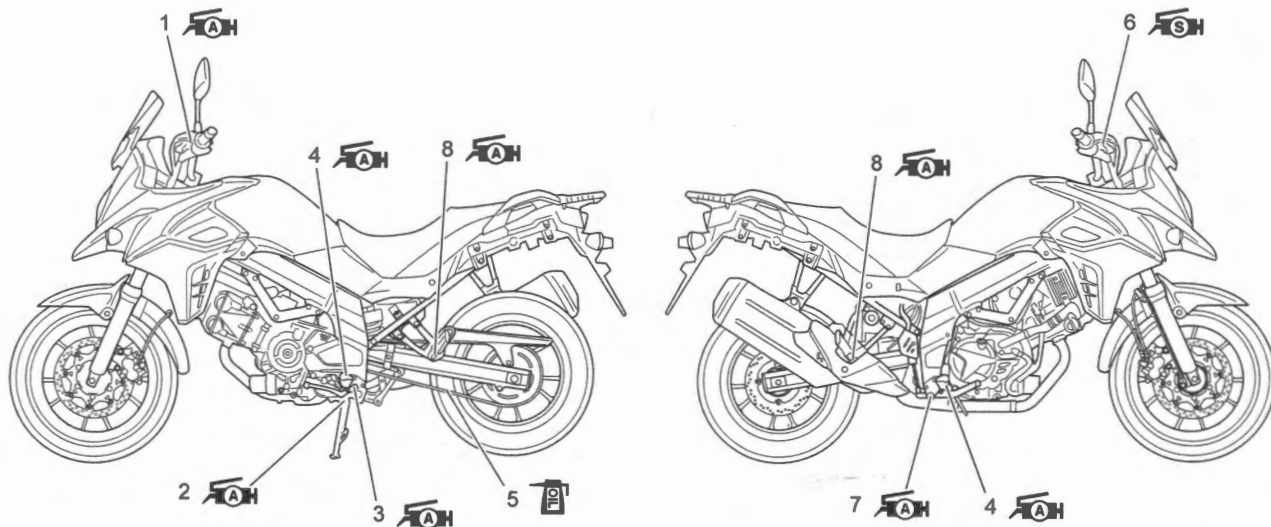

IH28K1020003-02

1. Clutch lever pivot	5. Drive chain	: Apply oil.
2. Side-stand pivot and spring hook	6. Brake lever pivot	: Apply grease.
3. Gearshift lever pivot	7. Brake pedal pivot	: Apply silicone grease.
4. Footrest pivot	8. Pillion footrest pivot	

## Special Tools and Equipment

### Recommended Service Material

BENH28K20208001

### NOTE

Required service material(s) is also described in:  
"Lubrication Points" (Page 0B-7)

# Service Data

## Precautions

### Precautions for Service Data

BENH28K2030001

#### NOTE

Specifications and service data are subject to change without notice.

## Specifications

### Specifications

BENH28K20307001

#### Dimensions and curb mass

Item	Specification	Remark
Overall length	2275 mm (89.57 in)	—
Overall width	835 mm (32.9 in)	DL650A
	910 mm (35.8 in)	DL650XA
Overall height	1405 mm (55.31 in)	—
Wheelbase	1560 mm (61.42 in)	—
Ground clearance	170 mm (6.69 in)	—
Seat height	835 mm (32.9 in)	—
Curb mass	213 kg (470 lbs)	DL650A
	216 kg (476 lbs)	DL650XA

#### Engine

Item	Specification	Remark
Type	Four-stroke, liquid-cooled, DOHC, 90° V-twin	—
Number of cylinders	2	—
Bore	81.0 mm (3.189 in)	—
Stroke	62.6 mm (2.465 in)	—
Displacement	645 cm <sup>3</sup> (39.4 cu. in)	—
Compression ratio	11.2 : 1	—
Fuel system	Fuel injection	—
Air cleaner	Non-woven fabric element	—
Starter system	Electric	—
Lubrication system	Wet sump	—
Idle speed	1300 ± 100 r/min	—

#### Drive train

Item	Specification	Remark
Clutch	Wet multi-plate type	—
Transmission	6-speed constant mesh	—
Gearshift pattern	1-down, 5-up	—
Primary reduction ratio	2.088 (71/34)	—
Gear ratios	Low	2.462 (32/13)
	2nd	1.778 (32/18)
	3rd	1.381 (29/21)
	4th	1.125 (27/24)
	5th	0.962 (25/26)
	Top	0.852 (23/27)
Final reduction ratio	3.133 (47/15)	—
Drive chain	RK/525SMOZ8, 118 links	—



**Chassis**

Item	Specification	Remark
Front suspension	Telescopic, coil spring, oil damped	—
Rear suspension	Link type, coil spring, oil damped	—
Front fork stroke	150 mm (5.91 in)	—
Rear wheel travel	159 mm (6.26 in)	—
Steering angle	40° (right and left)	—
Caster	25° 40'	—
Trail	107 mm (4.21 in)	—
Turning radius	2.7 m (8.9 ft)	—
Front brake	Disc brake, twin	—
Rear brake	Disc brake	—
Front tire size	110/80R19M/C 59H, tubeless	DL650A
	110/80R19M/C 59V, tubeless	DL650XA
Rear tire size	150/70R17M/C 69H, tubeless	DL650A
	150/70R17M/C 69V, tubeless	DL650XA

**Electrical**

Item	Specification	Remark
Ignition type	Electronic ignition (transistorized)	—
Spark plug	NGK MR8E-9	—
Battery	12 V 36.0 kC (10 Ah)/10 HR	—
Generator	Three-phase A.C. generator	—
Main fuse	30 A	—
Fuse	15/15/10/15/15/10/3 A	—
ABS fuse	25/15 A	—
Headlight	High beam	12 V 65 W H9
	Low beam	12 V 55 W H7
Position light	12 V 5 W	—
Brake light/Taillight	LED	—
Turn signal light	12 V 21 W	—
License plate light	12 V 5 W	—
Instrument panel light	LED	—
Neutral indicator light	LED	—
Hi beam indicator light	LED	—
Turn signal indicator light	LED	—
Engine coolant temperature indicator light/Oil pressure indicator light	LED	—
MIL	LED	—
ABS indicator light	LED	—
Freeze indicator light	LED	—
TC indicator light	LED	—
Immobilizer indicator light	LED	If equipped

**Capacities**

Item	Specification	Remark
Fuel tank	20.0 L (5.3 US gal, 4.4 Imp gal)	—
Engine oil	Oil change	2400 ml (2.5 US qt, 2.1 Imp qt)
	With filter change	2600 ml (2.7 US qt, 2.3 Imp qt)
Engine coolant	Approx. 1700 ml (1.80 US qt, 1.50 Imp qt)	—

**Service Data**

BENH28K20307002

**Emission Control Devices**

Item	Specification	Standard	Limit
EVAP system purge control solenoid valve power supply voltage (if equipped)		Battery voltage	—
EVAP system purge control solenoid valve resistance (if equipped)	20 °C (68 °F)	30 – 34 Ω	—
PAIR control solenoid valve power supply voltage (if equipped)		Battery voltage	—
PAIR control solenoid valve resistance (if equipped)	20 – 30 °C (68 – 86 °F)	20 – 24 Ω	—

**Engine Electrical Devices**

Item	Specification	Standard	Limit
IAP sensor #1 power supply voltage		4.75 – 5.25 V	—
IAP sensor #1 output voltage	Idle speed at 1 atm.	Approx. 2.5 V	—
IAP sensor #2 power supply voltage		4.75 – 5.25 V	—
IAP sensor #2 output voltage	Idle speed at 1 atm.	Approx. 2.5 V	—
IAT sensor power supply voltage		4.5 – 5.5 V	—
IAT sensor resistance	0 °C (32 °F)	5400 – 6600 Ω	—
	80 °C (176 °F)	290 – 390 Ω	—
ECT sensor power supply voltage		4.5 – 5.5 V	—
ECT sensor resistance	20 °C (68 °F)	2320 – 2590 Ω	—
	80 °C (176 °F)	310 – 326 Ω	
TP sensor power supply voltage		4.5 – 5.5 V	—
TP sensor output voltage	Closed	1.10 – 1.14 V	—
	Opened	4.34 – 4.54 V	
STP sensor power supply voltage		4.5 – 5.5 V	—
STP sensor output voltage	Closed	0.57 – 0.67 V	—
	Opened	4.4 – 4.6 V	
STVA resistance		Approx. 7 Ω	—
HO2 sensor output voltage	Idle speed	0.90 V or less	—
	5000 r/min	0.90 V or less	
HO2 sensor heater power supply voltage		Battery voltage	—
HO2 sensor heater resistance	23 °C (73.4 °F)	11.5 – 17.5 Ω	—
CKP sensor peak voltage	When cranking	1 V or more	—
CKP sensor resistance	25 °C (77 °F)	156 – 234 Ω	—
TO sensor power supply voltage		4.5 – 5.5 V	—
TO sensor output voltage	Normal	0.4 – 1.4 V	—
	Leaning 65°	3.7 – 4.4 V	
TO sensor resistance		16500 – 22300 Ω	—
ECM power supply voltage		Battery voltage	—

**Engine Mechanical**

Item	Specification	Standard	Limit
Throttle body I.D. No.	Without EVAP control system and PAIR system	28K0	—
	With EVAP control system	28K1	—
	With EVAP control system and PAIR system	28K2	—
Throttle body bore size		39 mm (1.5 in)	—
Throttle cable play		2.0 – 4.0 mm (0.079 – 0.157 in)	—
Idle speed	When engine warmed	1300 ± 100 r/min	—
Fast idle speed		1500 – 2000 r/min	—
Compression pressure		1300 – 1700 kPa (13.3 – 17.3 kgf/cm <sup>2</sup> , 188 – 246 psi)	1100 kPa (11.2 kgf/cm <sup>2</sup> , 159 psi)

Item	Specification		Standard	Limit
Compression pressure difference			—	200 kPa (2.0 kgf/cm <sup>2</sup> , 29.0 psi)
Cam height	Intake		35.48 – 35.53 mm (1.397 – 1.398 in)	35.18 mm (1.385 in)
	Exhaust		35.68 – 35.73 mm (1.405 – 1.406 in)	35.38 mm (1.393 in)
Camshaft journal oil clearance	Intake		0.027 – 0.069 mm (0.0011 – 0.0027 in)	0.150 mm (0.0059 in)
	Exhaust		0.027 – 0.069 mm (0.0011 – 0.0027 in)	0.150 mm (0.0059 in)
Camshaft journal holder I.D.	Intake		22.007 – 22.028 mm (0.8665 – 0.8672 in)	—
	Exhaust		22.007 – 22.028 mm (0.8665 – 0.8672 in)	
Camshaft journal O.D.	Intake		21.959 – 21.980 mm (0.8646 – 0.8653 in)	—
	Exhaust		21.959 – 21.980 mm (0.8646 – 0.8653 in)	
Camshaft runout	Intake & Exhaust		—	0.10 mm (0.004 in)
Cam chain pin	At arrow "3"		16th pin	—
Valve clearance	When engine cold	Intake	0.10 – 0.20 mm (0.0040 – 0.0078 in)	—
		Exhaust	0.20 – 0.30 mm (0.0079 – 0.0118 in)	
Valve diameter	Intake		31 mm (1.2 in)	—
	Exhaust		25.5 mm (1.00 in)	
Valve stem runout	Intake & Exhaust		—	0.05 mm (0.0019 in)
Valve head radial runout	Intake & Exhaust		—	0.03 mm (0.0011 in)
Valve head thickness	Intake		—	0.5 mm (0.02 in)
	Exhaust		—	0.5 mm (0.02 in)
Valve stem deflection	Intake & Exhaust		—	0.35 mm (0.013 in)
Valve stem O.D.	Intake		4.475 – 4.490 mm (0.1762 – 0.1767 in)	—
	Exhaust		4.455 – 4.470 mm (0.1754 – 0.1759 in)	—
Valve seat width	Intake		0.9 – 1.1 mm (0.036 – 0.043 in)	—
	Exhaust		0.9 – 1.1 mm (0.036 – 0.043 in)	—
Valve guide I.D.	Intake		4.500 – 4.512 mm (0.1772 – 0.1776 in)	—
	Exhaust		4.500 – 4.512 mm (0.1772 – 0.1776 in)	—
Valve guide to valve stem clearance	Intake		0.010 – 0.037 mm (0.0004 – 0.0014 in)	—
	Exhaust		0.030 – 0.057 mm (0.0012 – 0.0022 in)	—
Valve spring free length	Intake		—	37.1 mm (1.46 in)
	Exhaust		—	37.1 mm (1.46 in)

**0C-5 Service Data:**

Item	Specification		Standard	Limit
Valve spring pre-load	When compressed to 33.40 mm (1.315 in)	Intake	127 – 147 N (13.0 – 15.0 kgf, 28.6 – 33.0 lbf)	—
		Exhaust	127 – 147 N (13.0 – 15.0 kgf, 28.6 – 33.0 lbf)	—
Cylinder head distortion			—	0.05 mm (0.0019 in)
Cylinder distortion			—	0.05 mm (0.0019 in)
Cylinder bore			81.000 – 81.015 mm (3.1890 – 3.1895 in)	No nicks or scratches
Piston diameter	Measure at 20 mm (0.79 in) from the skirt end.		80.976 – 81.011 mm (3.1880 – 3.1894 in)	80.880 mm (3.1843 in)
Piston to cylinder clearance			0.025 – 0.035 mm (0.0010 – 0.0013 in)	0.120 mm (0.0047 in)
Piston ring to groove clearance	1st		—	0.180 mm (0.0070 in)
	2nd		—	0.150 mm (0.0059 in)
Piston ring groove width	1st		0.83 – 0.85 mm (0.0327 – 0.0334 in)	—
			1.30 – 1.32 mm (0.0512 – 0.0519 in)	—
	2nd		1.01 – 1.03 mm (0.0398 – 0.0405 in)	—
	Oil		2.01 – 2.03 mm (0.0792 – 0.0799 in)	—
Piston ring thickness	1st		0.76 – 0.81 mm (0.030 – 0.031 in)	—
			1.08 – 1.10 mm (0.0426 – 0.0433 in)	—
	2nd		0.97 – 0.99 mm (0.0382 – 0.0389 in)	—
Piston ring free end gap	1st		Approx. 6.5 mm (0.26 in)	5.2 mm (0.21 in)
	2nd		Approx. 9 mm (0.4 in)	7.2 mm (0.29 in)
Piston ring end gap	1st		0.06 – 0.18 mm (0.0024 – 0.0070 in)	0.50 mm (0.019 in)
	2nd		0.06 – 0.18 mm (0.0024 – 0.0070 in)	0.50 mm (0.019 in)
Piston pin bore I.D.			20.002 – 20.008 mm (0.7875 – 0.7877 in)	20.030 mm (0.7885 in)
Piston pin O.D.			19.995 – 20.000 mm (0.7872 – 0.7874 in)	19.980 mm (0.7867 in)
Conrod small end I.D.			20.015 – 20.023 mm (0.7880 – 0.7883 in)	20.040 mm (0.7889 in)
Conrod big end side clearance			0.170 – 0.320 mm (0.0067 – 0.0125 in)	0.5 mm (0.019 in)
Conrod big end width			20.95 – 21.00 mm (0.8248 – 0.8267 in)	—
Conrod big end I.D.			41.000 – 41.016 mm (1.6142 – 1.6148 in)	—
Conrod big end oil clearance			0.032 – 0.056 mm (0.0013 – 0.0022 in)	0.080 mm (0.0031 in)
Crank pin width			42.17 – 42.22 mm (1.661 – 1.662 in)	—
Crank pin O.D.			37.976 – 38.000 mm (1.4952 – 1.4960 in)	—

Item	Specification	Standard	Limit
Crank pin bearing thickness		1.480 – 1.496 mm (0.0583 – 0.0588 in)	—
Crankshaft journal O.D.		41.985 – 42.000 mm (1.6530 – 1.6535 in)	—
Crankshaft journal oil clearance		0.004 – 0.023 mm (0.0002 – 0.0009 in)	0.080 mm (0.0031 in)
Crankcase journal I.D.		46.000 – 46.018 mm (1.8111 – 1.8117 in)	—
Crankcase journal bearing thickness		1.999 – 2.008 mm (0.0787 – 0.0790 in)	—
Crankshaft journal holder width	Right side	19.8 – 19.9 mm (0.780 – 0.783 in)	—
Crankshaft journal width	Right side	20.00 – 20.05 mm (0.7874 – 0.7893 in)	—
Crankshaft runout		—	0.05 mm (0.0019 in)

### Engine Lubrication System

Item	Specification	Standard	Limit
Oil pressure	At 60 °C (140 °F), 3000 r/min	200 – 600 kPa (2.0 – 6.1 kgf/cm <sup>2</sup> , 29.0 – 87.0 psi)	—
Necessary amount of engine oil	Oil change	2400 ml (2.5 US qt, 2.1 Imp qt)	—
	Oil and filter change	2600 ml (2.7 US qt, 2.3 Imp qt)	
	Engine overhaul	3000 ml (3.2 US qt, 2.6 Imp qt)	

### Cooling System

Item	Specification	Standard	Limit
Engine coolant	Engine side	Approx. 1700 ml (1.80 US qt, 1.50 Imp qt)	—
	Reserve tank side	Approx. 250 ml (0.26 US qt, 0.22 Imp qt)	
Radiator cap valve opening pressure		93.3 – 122.7 kPa (1.0 – 1.3 kgf/cm <sup>2</sup> , 13.5 – 17.8 psi)	—
Cooling fan relay power supply voltage		Battery voltage	—
Cooling fan operating temperature	OFF → ON	Approx. 105 °C (221 °F)	—
	ON → OFF	Approx. 99 °C (210 °F)	
Thermostat valve opening temperature		80.5 – 83.5 °C (176.9 – 182.3 °F)	—
Thermostat valve lift	At 95 °C (203 °F)	8.0 mm (0.3 in) or more	—

### Fuel System

Item	Specification	Standard	Limit
Fuel injector power supply voltage		Battery voltage	—
Fuel injector resistance	20 °C (68 °F)	11.5 – 12.5 Ω	—
FP relay power supply voltage		Battery voltage	—
FP discharge amount	Per 10 seconds	166 ml (5.61 US oz, 5.84 Imp oz) or more	—
Fuel pressure		289 – 299 kPa (2.9 – 3.0 kgf/cm <sup>2</sup> , 41.9 – 43.3 psi)	—

**Ignition System**

Item	Specification	Standard	Limit
Firing order		1-2	—
Spark plug	Type	NGK MR8E-9	—
	Gap	0.8 – 0.9 mm (0.032 – 0.035 in)	
Spark performance	At 1 atm	8 mm (0.3 in) or more	—
Ignition coil primary peak voltage		150 V or more	—
Ignition coil resistance	Primary	1.45 – 1.96 Ω	—
	Secondary	31730 – 35870 Ω	
Immobilizer antenna power supply voltage (if equipped)		Battery voltage	—

**Starting System**

Item	Specification	Standard	Limit
Starter motor brush length		12 mm (0.47 in)	6.5 mm (0.26 in)
Starter relay resistance		3 – 6 Ω	—
Side-stand switch voltage	ON (side-stand retracted)	0.4 – 0.6 V	—
	OFF (side-stand on the ground)	1.4 V or more	

**Charging System**

Item	Specification	Standard	Limit
Battery leakage current		2 mA or less	—
Regulated voltage	Charging output At 5000 r/min	14 – 15 V	—
Generator coil resistance		0.19 – 0.23 Ω	—
Generator no-load voltage	When engine cold At 5000 r/min	60 V (AC) or more	—
Reaching time	Standard charging	1.2 A for 5 to 10 hours	—
	Fast charging	5 A for 1 hour	
Generator Max. output	At 5000 r/min	Approx. 390 W	—
Battery	Type designation	FTX12-BS	—
	Capacity	12 V 36.0 kC (10 Ah)/10 HR	

**Front Suspension**

Item	Specification	Standard	Limit
Front fork inner tube O.D.		43 mm (1.7 in)	—
Front fork oil level	Without spring, inner tube fully compressed	105 mm (4.13 in)	—
Front fork spring free length		466.2 mm (18.35 in)	456 mm (18.0 in)
Front fork oil capacity	Each leg	568 ml (19.21 US oz, 19.99 Imp oz)	—

**Rear Suspension**

Item	Specification	Standard	Limit
Rear shock absorber spring adjuster		2nd position from softest end	—
Rear shock absorber damping force adjuster	Rebound side	2 turns counterclockwise from stiffest position	—
Swingarm pivot shaft runout		—	0.3 mm (0.011 in)

## Wheels and Tires

Item	Specification		Standard	Limit
Wheel rim runout (DL650A)	Front	Axial & Radial	—	2.0 mm (0.078 in)
	Rear	Axial & Radial	—	2.0 mm (0.078 in)
Wheel rim runout (DL650XA)	Front	Axial & Radial	—	0.5 mm (0.019 in)
	Rear	Axial	—	0.5 mm (0.019 in)
		Radial	—	1.0 mm (0.039 in)
Front wheel hub left end surface to rim distance (DL650XA)			21.95 – 22.95 mm (0.8642 – 0.9035 in)	—
Rear wheel hub right end surface to rim distance (DL650XA)			23.9 – 24.9 mm (0.941 – 0.980 in)	—
Wheel axle runout	Front & Rear		—	0.25 mm (0.010 in)
Tire size	DL650A	Front	110/80R19M/C 59H	—
		Rear	150/70R17M/C 69H	
	DL650XA	Front	110/80R19M/C 59V	—
		Rear	150/70R17M/C 69V	
Tire type	DL650A	Front	BRIDGESTONE/TW101 RADIAL J	—
		Rear	BRIDGESTONE/TW152 RADIAL F	
	DL650XA	Front	BRIDGESTONE/BATTLAX ADVENTURE A40F F	—
		Rear	BRIDGESTONE/BATTLAX ADVENTURE A40R F	
Tire tread depth	Recommend depth	Front	—	1.6 mm (0.063 in)
		Rear	—	2.0 mm (0.079 in)
Cold inflation tire pressure (DL650A)	Solo riding	Front	225 kPa (2.25 kgf/cm <sup>2</sup> , 33 psi)	—
		Rear	250 kPa (2.50 kgf/cm <sup>2</sup> , 36 psi)	
	Dual riding	Front	225 kPa (2.25 kgf/cm <sup>2</sup> , 33 psi)	—
		Rear	280 kPa (2.80 kgf/cm <sup>2</sup> , 41 psi)	
Cold inflation tire pressure (DL650XA)	Solo riding	Front	225 kPa (2.25 kgf/cm <sup>2</sup> , 33 psi)	—
		Rear	250 kPa (2.50 kgf/cm <sup>2</sup> , 36 psi)	
	Dual riding	Front	225 kPa (2.25 kgf/cm <sup>2</sup> , 33 psi)	—
		Rear	290 kPa (2.90 kgf/cm <sup>2</sup> , 42 psi)	
Wheel rim size	Front	19 M/C × MT 2.50		—
	Rear	17 M/C × MT 4.00		

## Drive Chain / Drive Train / Drive Shaft

Item	Specification	Standard	Limit
Drive chain	Type	RK/525SMOZ8	—
	Links	118 Links	—
Drive chain 20-pitch length		—	319.4 mm (12.57 in)
Drive chain slack	On side-stand	20 – 30 mm (0.79 – 1.18 in)	—
Joint plate distance specification		18.6 – 18.9 mm (0.733 – 0.744 in)	—
Pin end diameter specification		5.45 – 5.85 mm (0.215 – 0.230 in)	—

**Brake Control System and Diagnosis**

Item	Specification	Standard	Limit
Rear brake pedal height		19.5 – 20.5 mm (0.768 – 0.807 in)	—
Master cylinder bore / piston diameter	Front	Approx. 14 mm (0.55 in)	—
	Rear	Approx. 14 mm (0.55 in)	

**Front Brakes**

Item	Specification	Standard	Limit
Front brake disc thickness		5.0 mm (0.20 in)	4.5 mm (0.18 in)
Front brake disc runout		—	0.30 mm (0.012 in)
Front brake caliper cylinder bore / piston diameter		Approx. 27 mm (1.1 in)	—

**Rear Brakes**

Item	Specification	Standard	Limit
Rear brake disc thickness		5.0 mm (0.20 in)	4.5 mm (0.18 in)
Rear brake disc runout		—	0.30 mm (0.012 in)
Rear brake caliper cylinder bore / piston diameter		Approx. 38.2 mm (1.50 in)	—

**ABS**

Item	Specification	Standard	Limit
Wheel speed sensor – sensor rotor clearance	Front	0.28 – 1.65 mm (0.0111 – 0.0649 in)	—
	Rear	0.28 – 1.45 mm (0.0111 – 0.0570 in)	—

**Manual Transmission**

Item	Specification	Standard	Limit
Gearshift fork to groove clearance	No. 1	0.1 – 0.3 mm (0.004 – 0.011 in)	0.5 mm (0.019 in)
	No. 2	0.1 – 0.3 mm (0.004 – 0.011 in)	0.5 mm (0.019 in)
	No. 3	0.1 – 0.3 mm (0.004 – 0.011 in)	0.5 mm (0.019 in)
Gearshift fork groove width	No. 1	5.5 – 5.6 mm (0.217 – 0.220 in)	—
	No. 2	5.5 – 5.6 mm (0.217 – 0.220 in)	
	No. 3	5.5 – 5.6 mm (0.217 – 0.220 in)	
Gearshift fork thickness	No. 1	5.3 – 5.4 mm (0.209 – 0.212 in)	—
	No. 2	5.3 – 5.4 mm (0.209 – 0.212 in)	
	No. 3	5.3 – 5.4 mm (0.209 – 0.212 in)	
Gearshift lever height		20 – 30 mm (0.79 – 1.18 in)	—
GP switch power supply voltage		4.5 – 5.5 V	—
GP switch voltage	1st	Approx. 1.3 V	—
	Neutral	Approx. 5.0 V	
	2nd	Approx. 1.8 V	
	3rd	Approx. 2.5 V	
	4th	Approx. 3.2 V	
	6th	Approx. 4.6 V	



**Clutch**

Item	Specification	Standard	Limit
Clutch cable play		10 – 15 mm (0.39 – 0.59 in)	—
Clutch release screw		1 turn counterclockwise	—
Drive plate thickness	No. 1	2.92 – 3.08 mm (0.115 – 0.121 in)	2.62 mm (0.104 in)
	No. 2	2.92 – 3.08 mm (0.115 – 0.121 in)	2.62 mm (0.104 in)
Drive plate claw width	No. 1	13.7 – 13.8 mm (0.540 – 0.543 in)	13.2 mm (0.520 in)
	No. 2	13.7 – 13.8 mm (0.540 – 0.543 in)	13.2 mm (0.520 in)
Driven plate distortion		—	0.10 mm (0.0039 in)
Clutch spring free length		60.6 mm (2.39 in)	57.6 mm (2.27 in)

**Steering / Handlebar**

Item	Specification	Standard	Limit
Steering tension initial force		2 – 5 N (0.20 – 0.51 kgf, 0.45 – 1.12 lbf)	—

**Wiring Systems**

Item	Specification	Standard	Limit	
Fuse size	Headlight	HI	15 A	—
		LO	15 A	—
	Ignition	10 A	—	
	Signal	15 A	—	
	Fan	15 A	—	
	Fuel	10 A	—	
	Main	30 A	—	
	P-source	3 A	—	
	ABS motor	25 A	—	
ABS valve	15 A	—		

**Lighting Systems**

Item	Specification	Standard	Limit
Headlight	HI	65 W	—
	LO	55 W	—
Position light		12 V 5 W	—
Brake light/Taillight		LED	—
Turn signal light		12 V 21 W × 4	—
License plate light		12 V 5 W	—

Combination Meter / Fuel Meter / Horn

Item	Specification	Standard	Limit
Ambient air temperature sensor resistance	-20 °C (-4 °F)	13779 – 19083 Ω	—
	-10 °C (14 °F)	8100 – 10609 Ω	—
	0 °C (32 °F)	4928 – 6125 Ω	—
	10 °C (50 °F)	3089 – 3656 Ω	—
	20 °C (68 °F)	1992 – 2251 Ω	—
	25 °C (77 °F)	1615 – 1785 Ω	—
	30 °C (86 °F)	1290 – 1456 Ω	—
	40 °C (104 °F)	838 – 986 Ω	—
Instrument panel light		LED	—
Turn signal indicator light		LED	—
Hi beam indicator light		LED	—
Neutral indicator light		LED	—
Engine coolant temperature indicator light/Oil pressure indicator light		LED	—
MIL		LED	—
ABS indicator light		LED	—
Freeze indicator light		LED	—
TC indicator light		LED	—
Immobilizer indicator light (if equipped)		LED	—

Fasteners Information

BENH28K20307003

Metric Fasteners

Most of the fasteners used for this vehicle are JIS-defined and ISO-defined metric fasteners. When replacing any fasteners, it is most important that replacement fasteners are of the correct diameter, thread pitch and strength.

**NOTICE**


Combining male and female fasteners with different thread pitches will damage both fasteners.

It is important to note that, even when the nominal diameter (1) of the threads is the same, JIS-defined and ISO-defined fasteners may be different in thread pitch (2) or width across flats (3). Refer to the following table for these differences.

Before installing a fastener, check it for correct thread pitch and then, screw it in or on the mating fastener by hand. If the fastener is too tight to turn by hand, its thread pitch may be different from that of the mating fastener.

JIS-TO-ISO main fasteners comparison table

		Nominal diameter				
		M6	M8	M10	M12	M14
JIS	Thread pitch	1.0	1.25	1.25	1.25	1.5
	Width across flats	10	12	14	17	19
ISO	Thread pitch	1.0	1.25	1.5	1.5	1.5
	Width across flats	10	13	16	18	21

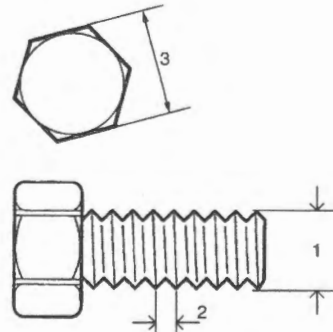


IE31J1030001-01

### Fastener Strength Identification

Most commonly used strength classes of metric fasteners are 4T, 6.8, 7T and 8.8. Strength class is indicated by a number or radial line(s) embossed on the head of each bolt. Some metric nuts have a punched number, 6 or 8 on their end surfaces. Figure shows different strength markings.

When replacing metric fasteners, use bolts and nuts of the same strength class as or higher class than the original bolts and nuts. It is also important to select replacement fasteners of the correct diameter and thread pitch. Correct replacement bolts and nuts are available as SUZUKI spare parts.

Metric bolts and nuts: Strength class numbers or marks (the larger the number, the greater the strength).

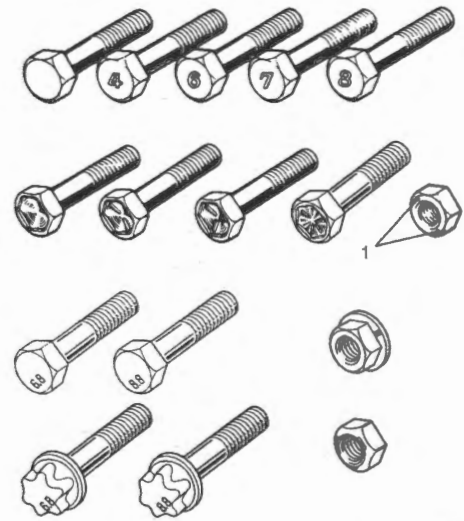

IE31J1030002-01

1. Nut strength identification



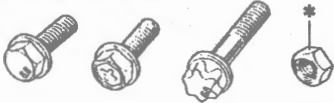
### Standard Tightening Torques




Each fastener should be tightened to the torque specified in each section. If no torque description or specification is provided in the relevant section, refer to the following tightening torque chart for the applicable torque for each fastener. When a fastener of greater strength than the original one is used, use the torque specified for the original fastener.


#### NOTE

- For flanged bolts, flanged nuts and self-locking nuts of the 4T and 7T strength classes, add 10% to the applicable tightening torques given in the following chart.
- The following chart is applicable only where the fastened parts are made of steel or light alloy.
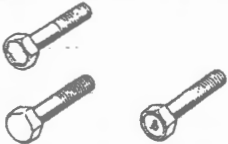
### Tightening torque chart

Strength	Unit	Thread diameter (Nominal diameter) (mm)								
		4	5	6	8	10	12	14	16	18
Fastener of strength class equivalent to 4T  IE31J1030003-01	N-m	1.5	3.0	5.5	13	29	45	65	105	160
	kgf-m	0.15	0.31	0.56	1.3	3.0	4.6	6.6	10.7	16.3
	lbf-ft	1.5	2.5	4.0	9.5	21.5	33.5	48.0	77.5	118.0
Fastener of strength class equivalent to 6.8  IE31J1030004-01	N-m	2.4	4.7	8.4	20	42	80	125	193	280
	kgf-m	0.24	0.48	0.86	2.0	4.3	8.2	12.7	19.7	28.6
	lbf-ft	2.0	3.5	6.5	15.0	31.0	59.0	92.5	142.5	206.5
Flanged fastener of strength class equivalent to 6.8 *: Self-locking nut (6 strength)  IE31J1030005-01	N-m	2.4	4.9	8.8	21	44	84	133	203	298
	kgf-m	0.24	0.50	0.90	2.1	4.5	8.6	13.6	20.7	30.4
	lbf-ft	2.0	4.0	6.5	15.5	32.5	62.0	98.5	150.0	220.0

Strength	Unit	Thread diameter (Nominal diameter) (mm)								
		4	5	6	8	10	12	14	16	18
Fastener of strength class equivalent to 7T	N-m	2.3	4.5	10	23	50	85	135	210	240
	kgf-m	0.23	0.46	1.0	2.3	5.1	8.7	13.8	21.4	24.5
	lbf-ft	2.0	3.5	7.5	17.0	37.0	63.0	99.5	155.0	177.0
 IE31J1030006-01										
Fastener of strength class equivalent to 8.8 (bolt) or 8 (nut)	N-m	3.1	6.3	11	27	56	105	168	258	373
	kgf-m	0.32	0.64	1.1	2.8	5.7	10.7	17.1	26.3	38
	lbf-ft	2.5	5.0	8.5	20.0	41.5	77.5	124.0	190.5	275.5
 IE31J1030007-01										
Flanged fastener of strength class equivalent to 8.8 (bolt) or 8 (nut)	N-m	3.2	6.5	12	29	59	113	175	270	395
	kgf-m	0.33	0.66	1.2	3.0	6.0	11.5	17.8	27.5	40.3
	lbf-ft	2.5	5.0	9.0	21.5	43.5	83.5	129.0	199.5	291.5
 IE31J1030008-01										

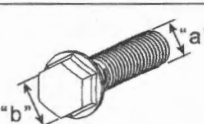Small crown shape bolt	Width across flats "b" [mm]	Thread diameter "a" [mm]	Unit		
			N-m	kgf-m	lbf-ft
 ID26J1030004-01	7	5	4.5	0.46	3.5
	8	6	10	1.0	7.5

\*: Self-locking nut

## Special Tools and Equipment

### Fuel / Oil / Fluid / Coolant Recommendation

BENH28K20308001

#### Fuel

##### NOTICE

**Do not use leaded gasoline. If it is used, the engine and the emission control system will be damaged.**

#### For U.S.A. and Canada

Use unleaded gasoline with an octane rating of 87 AKI or higher.

Unleaded gasoline containing up to 10% ethanol by volume may be used.

#### For other countries

Use unleaded gasoline with an octane rating of 91 RON or higher.


Unleaded gasoline containing up to 10% ethanol by volume may be used. (if E10 label is attached)

### Engine Oil / Final Gear Box Oil

Use engine oils which meet the following requirements.


	Engine oil
API service classification	SG, SH, SJ or SL
JASO T903 standard	MA
Viscosity	SAE 10W-40

If SAE 10W-40 engine oils are not available, select oils of an appropriate viscosity grade according to the following chart.

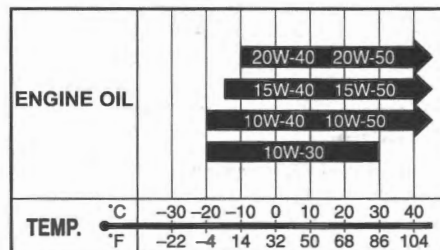

IF04K1030001-01

Suzuki does not recommend the use of engine oil which have an "ENERGY CONSERVING" indication in the API service symbol for any of its motorcycles / ATVs. It can affect the engine life and the clutch performance.

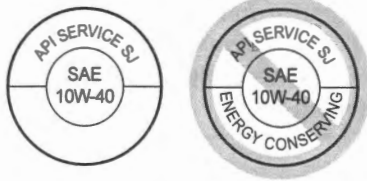

IF04K1030002-02

**For U.S.A. and Canada**

Suzuki recommends the use of SUZUKI PERFORMANCE 4 MOTOR OIL.

**Brake Fluid**

Specification and classification: DOT 4

**▲ WARNING**

Since the brake system of this motorcycle is filled with a glycol-based brake fluid by the manufacturer, do not use or mix different types of fluid such as silicone-based and petroleum-based fluid for refilling the system, otherwise serious damage will result.

Do not use any brake fluid taken from old or used or unsealed containers.

Never reuse brake fluid left over from a previous servicing, which has been stored for a long period.

**Engine Coolant**

Suzuki recommends the use of SUZUKI LONG LIFE COOLANT or SUZUKI SUPER LONG LIFE COOLANT.

Coolant 99000-99032-12X (SUZUKI LONG LIFE COOLANT (GREEN))

Coolant 99000-99032-20X (SUZUKI SUPER LONG LIFE COOLANT (BLUE))

**For SUZUKI LONG LIFE COOLANT**

**NOTICE**

- Use a high quality ethylene glycol base anti-freeze, mixed with distilled water. Do not mix an alcohol base anti-freeze and different brands of anti-freeze.
- Do not put in more than 60% anti-freeze or less than 50%. (Refer to Fig. 1 and 2.)


The 50:50 mixture of distilled water and ethylene glycol anti-freeze will provide the optimum corrosion protection and excellent heat protection, and will protect the cooling system from freezing at temperatures above -31 °C (-24 °F).

If the vehicle is to be exposed to temperatures below -31 °C (-24 °F), this mixing ratio should be increased up to 55% or 60% according to the figure.

**Anti-freeze Proportioning Chart**


Anti-freeze density	Freezing point
50%	-31 °C (-24 °F)
55%	-40 °C (-40 °F)
60%	-55 °C (-67 °F)

Fig.1: Engine coolant density-freezing point curve

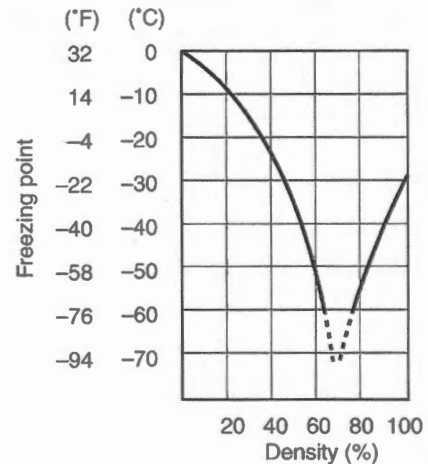

I310G1160001-01

Fig.2: Engine coolant density-boiling point curve

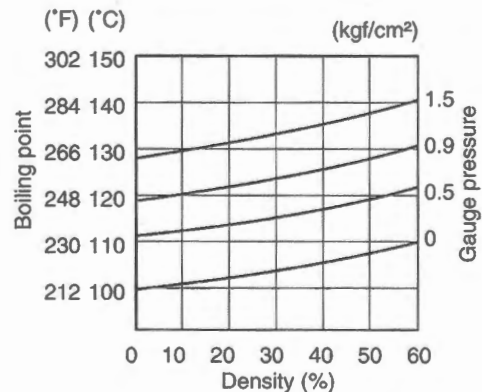

I310G1160002-01

For SUZUKI SUPER LONG LIFE COOLANT

**NOTICE**

- Ethanol or methanol base coolant or water alone should not be used in cooling system at any time as damage to cooling system could occur.
- Do not mix the distilled water, SUZUKI LONG LIFE COOLANT (coolant color: Green) or equivalent.

SUZUKI SUPER LONG LIFE COOLANT will provide the optimum corrosion protection and excellent heat protection, and will protect the cooling system from freezing at temperatures above -36 °C (-33 °F).

**Anti-freeze concentration table**

Anti-freeze density	Freezing point
50%	-36 °C (-33 °F)

**Water for mixing**

Use distilled water only. Water other than distilled water can corrode and clog the aluminum radiator. For engine coolant mixture information, refer to "Engine Coolant" (Page 0C-14).

**NOTICE**

Mixing of anti-freeze/engine coolant should be limited to 60%. Mixing beyond it would reduce its efficiency. If the anti-freeze/engine coolant mixing ratio is below 50%, rust inhabiting performance is greatly reduced. Be sure to mix it above 50% even though the atmospheric temperature does not go down to the freezing point.

**Anti-freeze / Engine coolant**

The engine coolant perform as a corrosion and rust inhibitor as well as anti-freeze. Therefore, the engine coolant should be used at all times even though the atmospheric temperature in your area does not go down to freezing point.

Suzuki recommends the use of SUZUKI COOLANT anti-freeze/engine coolant. If this is not available, use an equivalent which is compatible with an aluminum radiator.

**Front Fork Oil**

Use SUZUKI FORK OIL SS-8.





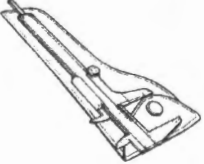
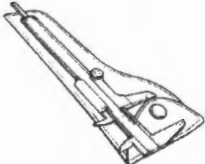
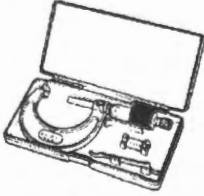
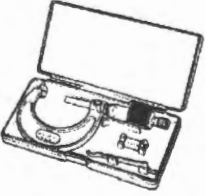
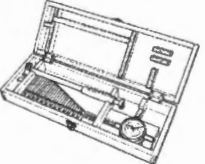

Fork oil 99000-99001-SA8 (SUZUKI FORK OIL SS-8)

**Special Tool**


BENH28K20308002

**NOTE**


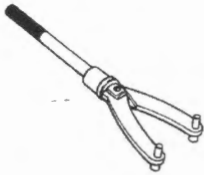
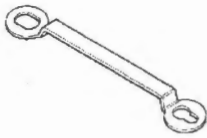

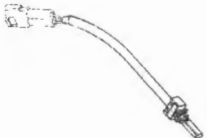
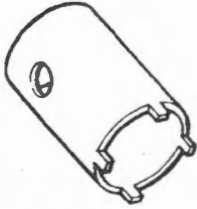
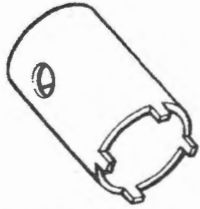

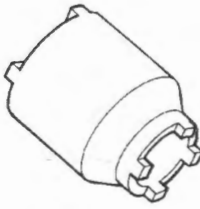



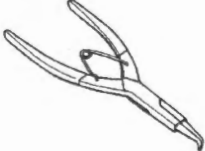
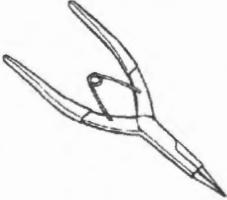
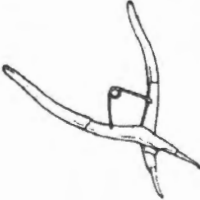

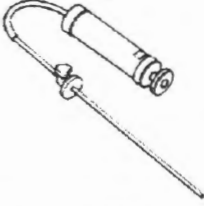
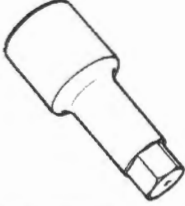
Torx® is the registered trademark of Camcar Division of Textron inc. U.S.A.

 <p><b>09900-06104</b> Snap ring pliers (External: Bent nose)</p>	 <p><b>09900-06107</b> Snap ring pliers (External)</p>	 <p><b>09900-06108</b> Snap ring pliers (Internal)</p>	 <p><b>09900-18710</b> Hexagon bit socket (12 mm: 1/2 sq.)</p>	 <p><b>09900-20101</b> Vernier calipers (150 mm)</p>
 <p><b>09900-20102</b> Vernier calipers (200 mm)</p>	 <p><b>09900-20202</b> Micrometer (25 - 50 mm)</p>	 <p><b>09900-20204</b> Micrometer (75 - 100 mm)</p>	 <p><b>09900-20530</b> Cylinder gauge set</p>	 <p><b>09900-20602</b> Dial gauge (1 x 0.001 mm)</p>

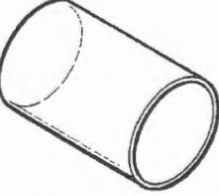 <p><b>09900-20607</b> Dial gauge (10 x 0.01 mm)</p>	 <p><b>09900-20701</b> Dial gauge chuck</p>	 <p><b>09900-20803</b> Thickness gauge</p>	 <p><b>09900-20805</b> Tire depth gauge</p>	 <p><b>09900-20806</b> Thickness gauge</p>
 <p><b>09900-21304</b> V blocks</p>	 <p><b>09900-22301</b> Plastigage (0.025 - 0.076 mm)</p>	 <p><b>09900-22302</b> Plastigage (0.051 - 0.152 mm)</p>	 <p><b>09900-22403</b> Small bore gauge (18 - 35 mm)</p>	 <p><b>09900-25008</b> Multi circuit tester set</p>
 <p><b>09900-25009</b> Needle point probe set</p>	 <p><b>09900-28631</b> TP Sensor test lead</p>	 <p><b>09904-41030</b> SDS-II set</p>	 <p><b>09904-41040</b> SDS-II (oscilloscope) set</p>	 <p><b>09904-41051</b> Conversion cable</p>
 <p><b>09910-60620</b> Adjustable wrench</p>	 <p><b>09912-66310</b> Micrometer (0 - 25 mm)</p>	 <p><b>09913-10750</b> Compression gauge adapter</p>	 <p><b>09913-50121</b> Oil seal remover</p>	 <p><b>09913-60221</b> Journal bearing installer / holder set</p>
 <p><b>09913-70210</b> Bearing installer set</p>	 <p><b>09915-40620</b> Oil filter wrench</p>	 <p><b>09915-64512</b> Compression gauge set (2500 kPa)</p>	 <p><b>09915-70610</b> Oil pressure gauge attachment</p>	 <p><b>09915-74521</b> Oil pressure gauge hose</p>

 <p><b>09915-77331</b> Oil pressure gauge (1000 kPa)</p>	 <p><b>09916-10911</b> Valve lapper set</p>	 <p><b>09916-14510</b> Valve lifter</p>	 <p><b>09916-14522</b> Valve lifter attachment</p>	 <p><b>09916-33210</b> Valve guide reamer (<math>\phi 4.5</math>)</p>
 <p><b>09916-34542</b> Reamer handle</p>	 <p><b>09916-34580</b> Valve guide reamer (<math>\phi 10.8</math>)</p>	 <p><b>09916-43211</b> Valve guide installer / remover</p>	 <p><b>09916-53330</b> Valve guide installer attachment</p>	 <p><b>09916-84511</b> Tweezers</p>
 <p><b>09917-47011</b> Vacuum pump gauge set</p>	 <p><b>09918-78211</b> Radiator cap tester kit</p>	 <p><b>09918-78220</b> Radiator cap tester adapter</p>	 <p><b>09919-28620</b> Sleeve protector</p>	 <p><b>09920-13120</b> Crankcase separator</p>
 <p><b>09920-31020</b> Extension handle</p>	 <p><b>09920-53740</b> Clutch sleeve hub holder</p>	 <p><b>09921-20240</b> Bearing remover set</p>	 <p><b>09922-22712</b> Drive chain cut / rivet tool set</p>	 <p><b>09924-84521</b> Bearing installer set</p>
 <p><b>09925-18011</b> Bearing installer</p>	 <p><b>09930-10121</b> Spark plug socket set</p>	 <p><b>09930-11920</b> Torx® bit (JT40H)</p>	 <p><b>09930-11940</b> Torx® bit holder (3/8 sq.)</p>	 <p><b>09930-11950</b> Torx® wrench (T25H)</p>

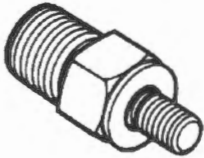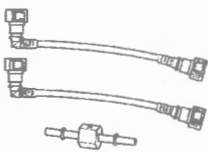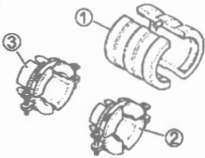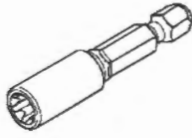

 <p><b>09930-30450</b> Rotor remover bolt</p>	 <p><b>09930-40113</b> Rotor holder</p>	 <p><b>09930-44530</b> Rotor holder</p>	 <p><b>09930-82720</b> Mode selection switch</p>	 <p><b>09930-82760</b> Mode selection switch</p>
 <p><b>09940-14911</b> Steering stem nut socket</p>	 <p><b>09940-14940</b> Swingarm pivot adjuster wrench</p>	 <p><b>09940-14960</b> Steering stem nut socket wrench</p>	 <p><b>09940-14990</b> Engine mounting adjuster wrench</p>	 <p><b>09940-34520</b> T-handle (Long shank: 3/8 sq.)</p>
 <p><b>09940-34531</b> Front fork assembling attachment (A)</p>	 <p><b>09940-40211</b> Fuel pressure gauge adapter</p>	 <p><b>09940-40220</b> Fuel pressure gauge attachment</p>	 <p><b>09940-52861</b> Front fork oil seal installer set</p>	 <p><b>09940-63110</b> Torx® bit (E8)</p>
 <p><b>09941-34513</b> Bearing installer set</p>	 <p><b>09943-74111</b> Front fork oil level gauge</p>	 <p><b>09944-28321</b> Hexagon bit socket (19 mm : 1/2 sq.)</p>		



## Section 1

## Engine

## CONTENTS

<b>Precautions</b> .....	<b>1-1</b>	DTC P1610 (C42) .....	1A-58
<b>Precautions</b> .....	<b>1-1</b>	DTC P1700 / P1701 (C23).....	1A-58
Precautions for Engine.....	1-1	DTC P2100 (C28) .....	1A-60
<b>Engine General Information and Diagnosis</b> .....	<b>1A-1</b>	<b>Repair Instructions</b> .....	<b>1A-62</b>
<b>Precautions</b> .....	<b>1A-1</b>	Select Switch Inspection .....	1A-62
Precautions for DTC Trouble Shooting .....	1A-1	Mode Switch Inspection .....	1A-62
<b>General Description</b> .....	<b>1A-1</b>	<b>Special Tools and Equipment</b> .....	<b>1A-62</b>
Injection Timing Description .....	1A-1	Special Tool .....	1A-62
Self-Diagnosis Function .....	1A-2	<b>Emission Control Devices</b> .....	<b>1B-1</b>
Comparison Table of DTC Name.....	1A-5	<b>Precautions</b> .....	<b>1B-1</b>
<b>Schematic and Routing Diagram</b> .....	<b>1A-6</b>	Precautions for Emission Control Devices .....	1B-1
FI System Wiring Diagram .....	1A-6	<b>General Description</b> .....	<b>1B-1</b>
<b>Component Location</b> .....	<b>1A-8</b>	Fuel Injection System Description.....	1B-1
FI System Component Location.....	1A-8	Crankcase Emission Control System	
<b>Diagnostic Information and Procedures</b> .....	<b>1A-10</b>	Description .....	1B-2
Engine Symptom Diagnosis.....	1A-10	Exhaust Emission Control System	
DTC Check .....	1A-15	Description .....	1B-3
DTC Clearance .....	1A-15	Noise Emission Control System Description .....	1B-4
DTC Table.....	1A-16	Evaporative Emission Control System	
Fail-Safe Function Table .....	1A-18	Diagram (If Equipped).....	1B-5
FI System Troubleshooting .....	1A-18	<b>Schematic and Routing Diagram</b> .....	<b>1B-6</b>
DTC P0030 / P0032 (C44).....	1A-21	PAIR System Hose Routing Diagram (If	
DTC P0105 / P0106 / P0107 (C17) .....	1A-23	Equipped).....	1B-6
DTC P0110 / P0112 (C21).....	1A-25	PCV Hose Routing Diagram .....	1B-7
DTC P0115 / P0117 (C15).....	1A-27	EVAP Canister Hose Routing Diagram (If	
DTC P0120 / P0123 (C14).....	1A-29	Equipped).....	1B-8
DTC P0130 / P0131 / P0132 (C44) .....	1A-31	<b>Repair Instructions</b> .....	<b>1B-9</b>
DTC P0170 (C45) .....	1A-33	PAIR Reed Valve Removal and Installation (If	
DTC P0201 (C32) .....	1A-35	Equipped).....	1B-9
DTC P0202 (C33) .....	1A-37	PAIR Control Solenoid Valve Removal and	
DTC P0220 / P0222 (C29).....	1A-39	Installation (If Equipped) .....	1B-10
DTC P0230 / P0231 (C41).....	1A-41	PAIR System Inspection (If Equipped).....	1B-11
DTC P0335 (C12) .....	1A-43	PAIR Hose Removal and Installation (If	
DTC P0351 (C24) .....	1A-45	Equipped).....	1B-12
DTC P0352 (C25) .....	1A-45	PCV Hose Inspection .....	1B-12
DTC P0418 / P2258 (C49) [If Equipped].....	1A-45	PCV Hose Removal and Installation .....	1B-12
DTC P0443 / P0449 (C62) [If Equipped].....	1A-47	EVAP Control System Removal and	
DTC P0480 (C60) .....	1A-49	Installation (If Equipped) .....	1B-12
DTC P0500 (C16) / P2158 (C91).....	1A-51	EVAP Control System Inspection (If	
DTC P0506 / P0507 (C65).....	1A-53	Equipped).....	1B-13
DTC P0914 (C31) .....	1A-54	<b>Specifications</b> .....	<b>1B-15</b>
DTC P1100 / P1101 / P1102 (C13) .....	1A-56	Tightening Torque Specifications.....	1B-15
		<b>Special Tools and Equipment</b> .....	<b>1B-15</b>

Special Tool .....	1B-15	Throttle Body Disassembly and Reassembly ....	1D-12
<b>Engine Electrical Devices .....</b>	<b>1C-1</b>	Throttle Body Inspection and Cleaning .....	1D-14
<b>Precautions.....</b>	<b>1C-1</b>	Throttle Valve Synchronization .....	1D-15
Precautions for Engine Electrical Device .....	1C-1	Intake Pipe Removal and Installation .....	1D-16
<b>General Description .....</b>	<b>1C-1</b>	Cylinder Head Cover Removal and	
ISC Valve System Description .....	1C-1	Installation .....	1D-17
<b>Schematic and Routing Diagram .....</b>	<b>1C-2</b>	Cylinder Head Cover Inspection .....	1D-19
HO2 Sensor Lead Wire Routing Diagram .....	1C-2	Cam Chain Tension Adjuster / Camshaft /	
<b>Component Location .....</b>	<b>1C-2</b>	Cylinder Head Assembly / Cam Chain Guide	
Engine Electrical Components Location .....	1C-2	/ Cylinder Removal.....	1D-19
<b>Diagnostic Information and Procedures.....</b>	<b>1C-2</b>	Cam Chain Tension Adjuster / Camshaft /	
Engine Symptom Diagnosis .....	1C-2	Cylinder Head Assembly / Cam Chain Guide	
<b>Repair Instructions .....</b>	<b>1C-3</b>	/ Cylinder Installation.....	1D-25
ISC Valve (Secondary Throttle Valve		Camshaft Inspection .....	1D-37
Interlinked) Inspection .....	1C-3	Cam Chain Tension Adjuster Inspection .....	1D-39
ISC Aperture Learned Value Reset.....	1C-3	Valve Clearance Inspection and Adjustment ....	1D-39
ECM Removal and Installation.....	1C-4	Engine Assembly Removal .....	1D-44
IAP Sensor Inspection.....	1C-4	Engine Assembly Installation .....	1D-48
IAP Sensor Removal and Installation.....	1C-5	Cam Chain Guide Inspection .....	1D-52
IAT Sensor Inspection.....	1C-5	Cylinder Inspection.....	1D-52
IAT Sensor Removal and Installation.....	1C-6	Valve / Valve Spring Removal and Installation ..	1D-52
ECT Sensor Inspection .....	1C-6	Valve Inspection.....	1D-55
ECT Sensor Removal and Installation .....	1C-7	Valve Seat Repair .....	1D-57
TP Sensor Inspection.....	1C-7	Valve Spring Inspection .....	1D-57
TP Sensor Adjustment .....	1C-8	Cylinder Head Disassembly and Reassembly ..	1D-58
TP Sensor Removal and Installation.....	1C-8	Cylinder Head Inspection .....	1D-59
HO2 Sensor Inspection .....	1C-8	Valve Guide Replacement .....	1D-59
HO2 Sensor Removal and Installation.....	1C-9	Piston Removal and Installation.....	1D-60
CKP Sensor Inspection .....	1C-10	Piston Ring Removal and Installation .....	1D-61
CKP Sensor Removal and Installation.....	1C-11	Piston and Piston Ring Inspection .....	1D-62
TO Sensor Inspection .....	1C-12	Cam Chain Tensioner / Cam Chain / Cam	
TO Sensor Removal and Installation .....	1C-12	Chain Drive Sprocket Removal and	
STP Sensor Inspection and Adjustment .....	1C-13	Installation .....	1D-65
STP Sensor Removal and Installation .....	1C-14	Cam Chain Tensioner Inspection .....	1D-66
STV Actuator Inspection .....	1C-15	Crankcase Assembly Disassembly .....	1D-66
<b>Specifications.....</b>	<b>1C-15</b>	Crankcase Assembly Reassembly .....	1D-69
Tightening Torque Specifications.....	1C-15	Crankshaft Assembly Removal and	
<b>Special Tools and Equipment.....</b>	<b>1C-16</b>	Installation .....	1D-71
Special Tool .....	1C-16	Crankshaft Journal Bearing Removal and	
<b>Engine Mechanical .....</b>	<b>1D-1</b>	Installation .....	1D-72
<b>Precautions.....</b>	<b>1D-1</b>	Left Crankcase Disassembly and	
Precautions for Engine Mechanical.....	1D-1	Reassembly .....	1D-74
<b>Schematic and Routing Diagram .....</b>	<b>1D-2</b>	Right Crankcase Disassembly and	
Throttle Cable Routing Diagram.....	1D-2	Reassembly .....	1D-75
<b>Diagnostic Information and Procedures.....</b>	<b>1D-3</b>	Crankcase Bearing / Oil Seal Inspection.....	1D-76
Engine Mechanical Symptom Diagnosis.....	1D-3	Conrod Removal and Installation .....	1D-77
Compression Pressure Check .....	1D-3	Conrod / Crankshaft Inspection.....	1D-79
<b>Repair Instructions .....</b>	<b>1D-4</b>	Conrod Crank Pin Bearing Inspection and	
Intake System Construction .....	1D-4	Selection .....	1D-79
Air Cleaner Element Removal and Installation ....	1D-5	Crankshaft Journal Bearing Inspection and	
Air Cleaner Element Inspection and Cleaning ....	1D-5	Selection .....	1D-81
Air Cleaner Box Removal and Installation.....	1D-6	<b>Specifications .....</b>	<b>1D-83</b>
Throttle Body Components .....	1D-8	Tightening Torque Specifications.....	1D-83
Throttle Cable Play On-Vehicle Inspection		<b>Special Tools and Equipment .....</b>	<b>1D-84</b>
and Adjustment .....	1D-9	Recommended Service Material .....	1D-84
Throttle Cable Removal and Installation .....	1D-9	Special Tool .....	1D-84
Throttle Body Removal and Installation .....	1D-9	<b>Engine Lubrication System .....</b>	<b>1E-1</b>
		<b>Precautions.....</b>	<b>1E-1</b>
		Precautions for Engine Oil .....	1E-1

<b>Schematic and Routing Diagram</b> .....	<b>1E-2</b>	Thermostat Removal and Installation.....	1F-12
Engine Lubrication System Chart Diagram .....	1E-2	Thermostat Inspection.....	1F-13
<b>Diagnostic Information and Procedures</b> .....	<b>1E-3</b>	Water Pump Assembly Components .....	1F-14
Engine Lubrication Symptom Diagnosis .....	1E-3	Water Pump Removal and Installation.....	1F-15
Oil Pressure Check .....	1E-3	Water Pump Disassembly and Reassembly ....	1F-16
<b>Repair Instructions</b> .....	<b>1E-4</b>	Water Pump Related Parts Inspection .....	1F-18
Engine Oil Inspection .....	1E-4	<b>Specifications</b> .....	<b>1F-19</b>
Engine Oil Replacement .....	1E-4	Tightening Torque Specifications .....	1F-19
Oil Filter Replacement .....	1E-5	<b>Special Tools and Equipment</b> .....	<b>1F-20</b>
Oil Strainer / Oil Pressure Regulator Removal and Installation .....	1E-5	Recommended Service Material .....	1F-20
Oil Strainer Inspection and Cleaning .....	1E-6	Special Tool .....	1F-20
Oil Pressure Regulator Inspection .....	1E-6	<b>Fuel System</b> .....	<b>1G-1</b>
Oil Cooler / Oil Cooler Hose Inspection .....	1E-7	<b>Precautions</b> .....	<b>1G-1</b>
Oil Cooler Removal and Installation.....	1E-7	Precautions for Fuel System .....	1G-1
Oil Pressure Switch Removal and Installation ....	1E-8	<b>General Description</b> .....	<b>1G-2</b>
Oil Pressure Switch Inspection .....	1E-8	Fuel System Description .....	1G-2
Oil Jet / Piston Cooling Jet Removal and Installation .....	1E-8	<b>Schematic and Routing Diagram</b> .....	<b>1G-3</b>
Oil Jet / Piston Cooling Jet Inspection .....	1E-11	Fuel Tank Water Drain Hose and Fuel Tank Breather Hose Routing Diagram .....	1G-3
Oil Pump Removal and Installation .....	1E-11	<b>Diagnostic Information and Procedures</b> .....	<b>1G-6</b>
Oil Pump Inspection .....	1E-12	Fuel System Diagnosis .....	1G-6
Oil Separator Removal and Installation.....	1E-12	<b>Repair Instructions</b> .....	<b>1G-6</b>
Transmission Oil Guide Removal and Installation .....	1E-13	Fuel Pressure Inspection .....	1G-6
Transmission Oil Guide Inspection .....	1E-14	Fuel Discharge Amount Inspection .....	1G-7
<b>Specifications</b> .....	<b>1E-14</b>	Fuel Feed Hose Disconnection and Reconnection .....	1G-7
Tightening Torque Specifications.....	1E-14	Fuel Feed Hose Removal and Installation .....	1G-8
<b>Special Tools and Equipment</b> .....	<b>1E-15</b>	Fuel Hose Inspection .....	1G-8
Recommended Service Material .....	1E-15	Fuel Tank Construction .....	1G-9
Special Tool .....	1E-15	Fuel Tank Cap Removal and Installation .....	1G-10
<b>Engine Cooling System</b> .....	<b>1F-1</b>	Fuel Tank Removal and Installation .....	1G-10
<b>Precautions</b> .....	<b>1F-1</b>	Fuel Pump Components .....	1G-13
Precautions for Engine Cooling System.....	1F-1	Fuel Pump On-Vehicle Inspection.....	1G-14
Precautions for Engine Coolant .....	1F-1	Fuel Pump Assembly Removal and Installation .....	1G-14
<b>General Description</b> .....	<b>1F-1</b>	Fuel Pump Disassembly and Reassembly.....	1G-15
Engine Coolant Description .....	1F-1	Fuel Filter Inspection.....	1G-18
<b>Schematic and Routing Diagram</b> .....	<b>1F-1</b>	Fuel Level Gauge Inspection .....	1G-19
Cooling Circuit Diagram .....	1F-1	Fuel Pump Relay Inspection .....	1G-19
Water Hose Routing Diagram .....	1F-2	Fuel Injector On-Vehicle Inspection .....	1G-19
<b>Diagnostic Information and Procedures</b> .....	<b>1F-4</b>	Fuel Injector / Fuel Delivery Pipe Removal and Installation .....	1G-20
Engine Cooling Symptom Diagnosis.....	1F-4	Fuel Injector Inspection and Cleaning.....	1G-21
<b>Repair Instructions</b> .....	<b>1F-5</b>	<b>Specifications</b> .....	<b>1G-22</b>
Engine Coolant Level Inspection .....	1F-5	Tightening Torque Specifications .....	1G-22
Engine Coolant Replacement .....	1F-5	<b>Special Tools and Equipment</b> .....	<b>1G-22</b>
Engine Cooling System Inspection .....	1F-6	Recommended Service Material .....	1G-22
Radiator Cap Inspection .....	1F-6	Special Tool .....	1G-22
Cooling Fan On-Vehicle Inspection .....	1F-6	<b>Ignition System</b> .....	<b>1H-1</b>
Radiator Hose Inspection.....	1F-7	<b>General Description</b> .....	<b>1H-1</b>
Radiator / Cooling Fan Motor Removal and Installation .....	1F-7	Immobilizer Description (If Equipped) .....	1H-1
Radiator Inspection and Cleaning .....	1F-10	<b>Schematic and Routing Diagram</b> .....	<b>1H-2</b>
Radiator Reservoir Tank Inspection.....	1F-10	Ignition System Diagram .....	1H-2
Radiator Reservoir Tank Removal and Installation .....	1F-10	<b>Component Location</b> .....	<b>1H-3</b>
Water Hose Inspection.....	1F-11	Ignition System Components Location.....	1H-3
Water Hose Removal and Installation.....	1F-12	<b>Diagnostic Information and Procedures</b> .....	<b>1H-3</b>
Cooling Fan Relay Inspection .....	1F-12		

Ignition System Symptom Diagnosis.....	1H-3	<b>Specifications</b> .....	<b>1I-12</b>
No Spark or Poor Spark .....	1H-4	Tightening Torque Specifications .....	1I-12
<b>Repair Instructions</b> .....	<b>1H-5</b>	<b>Special Tools and Equipment</b> .....	<b>1I-12</b>
Ignition Coil Construction .....	1H-5	Recommended Service Material .....	1I-12
Spark Plug Removal and Installation .....	1H-6	Special Tool .....	1I-12
Spark Plug Inspection .....	1H-7	<b>Charging System</b> .....	<b>1J-1</b>
Ignition Coil Removal and Installation .....	1H-8	<b>Schematic and Routing Diagram</b> .....	<b>1J-1</b>
Ignition Coil Inspection .....	1H-8	Charging System Diagram .....	1J-1
Engine Stop Switch Inspection.....	1H-10	<b>Component Location</b> .....	<b>1J-1</b>
Ignition Switch Inspection.....	1H-10	Charging System Components Location.....	1J-1
Ignition Switch Removal and Installation.....	1H-11	<b>Diagnostic Information and Procedures</b> .....	<b>1J-2</b>
Immobilizer Antenna Removal and Installation (If Equipped) .....	1H-12	Charging System Symptom Diagnosis.....	1J-2
<b>Specifications</b> .....	<b>1H-12</b>	Battery Runs Down Quickly .....	1J-3
Tightening Torque Specifications.....	1H-12	<b>Repair Instructions</b> .....	<b>1J-4</b>
<b>Special Tools and Equipment</b> .....	<b>1H-13</b>	Battery Current Leakage Inspection.....	1J-4
Recommended Service Material .....	1H-13	Regulated Voltage Inspection .....	1J-4
Special Tool .....	1H-13	Generator Inspection.....	1J-4
<b>Starting System</b> .....	<b>1I-1</b>	Generator Removal .....	1J-5
<b>Schematic and Routing Diagram</b> .....	<b>1I-1</b>	Generator Installation .....	1J-7
Starting System Diagram .....	1I-1	Regulator / Rectifier Inspection .....	1J-8
<b>Component Location</b> .....	<b>1I-1</b>	Regulator / Rectifier Construction .....	1J-9
Starting System Components Location.....	1I-1	Regulator / Rectifier Removal and Installation ...	1J-9
<b>Diagnostic Information and Procedures</b> .....	<b>1I-1</b>	Battery Recharging .....	1J-10
Starting System Symptom Diagnosis.....	1I-1	Battery Removal and Installation .....	1J-11
Starter Motor Will Not Run .....	1I-2	Battery Visual Inspection.....	1J-12
Starter Motor Runs But Does Not Crank the Engine.....	1I-2	<b>Specifications</b> .....	<b>1J-12</b>
<b>Repair Instructions</b> .....	<b>1I-3</b>	Tightening Torque Specifications .....	1J-12
Starter Motor Components.....	1I-3	<b>Special Tools and Equipment</b> .....	<b>1J-12</b>
Starter Motor Assembly Removal and Installation .....	1I-4	Special Tool .....	1J-12
Starter Motor Disassembly and Reassembly .....	1I-5	<b>Exhaust System</b> .....	<b>1K-1</b>
Starter Motor Inspection.....	1I-5	<b>Precautions</b> .....	<b>1K-1</b>
Starter Relay Removal and Installation .....	1I-6	Precautions for Exhaust System .....	1K-1
Starter Relay Inspection.....	1I-7	<b>Repair Instructions</b> .....	<b>1K-2</b>
Side-stand Relay Removal and Installation .....	1I-7	Exhaust System Components .....	1K-2
Starter Interlock System Parts Inspection .....	1I-7	Exhaust System Inspection .....	1K-3
Starter Clutch Removal and Installation.....	1I-9	Exhaust Pipe / Muffler Removal and Installation .....	1K-4
Starter Clutch Inspection.....	1I-11	<b>Specifications</b> .....	<b>1K-10</b>
Starter Switch Inspection .....	1I-11	Tightening Torque Specifications.....	1K-10

# Precautions

## Precautions

### Precautions for Engine

BENH28K21000001

Refer to "General Precautions" in Section 00 (Page 00-1), "Precautions for Electrical Circuit Service" in Section 00 (Page 00-2), "Precautions for Circuit Tester" in Section 00 (Page 00-7) and "Precautions for SDS-II" in Section 00 (Page 00-7).

# Engine General Information and Diagnosis

## Precautions

### Precautions for DTC Trouble Shooting

BENH28K21100001

Refer to "General Precautions" in Section 00 (Page 00-1), "Precautions for Electrical Circuit Service" in Section 00 (Page 00-2), "Precautions for Circuit Tester" in Section 00 (Page 00-7) and "Precautions for SDS-II" in Section 00 (Page 00-7).

#### NOTE

After repairing the trouble, clear the DTC using the special tool. (Page 1A-15)


## General Description

### Injection Timing Description

BENH28K21101001

#### Injection Time (Injection Volume)

The factors to determine the injection time include the basic fuel injection time, which is calculated on the basis of the intake air pressure, engine speed and throttle opening angle, and various compensations. These compensations are determined according to the signals from various sensors that detect the engine and driving conditions.

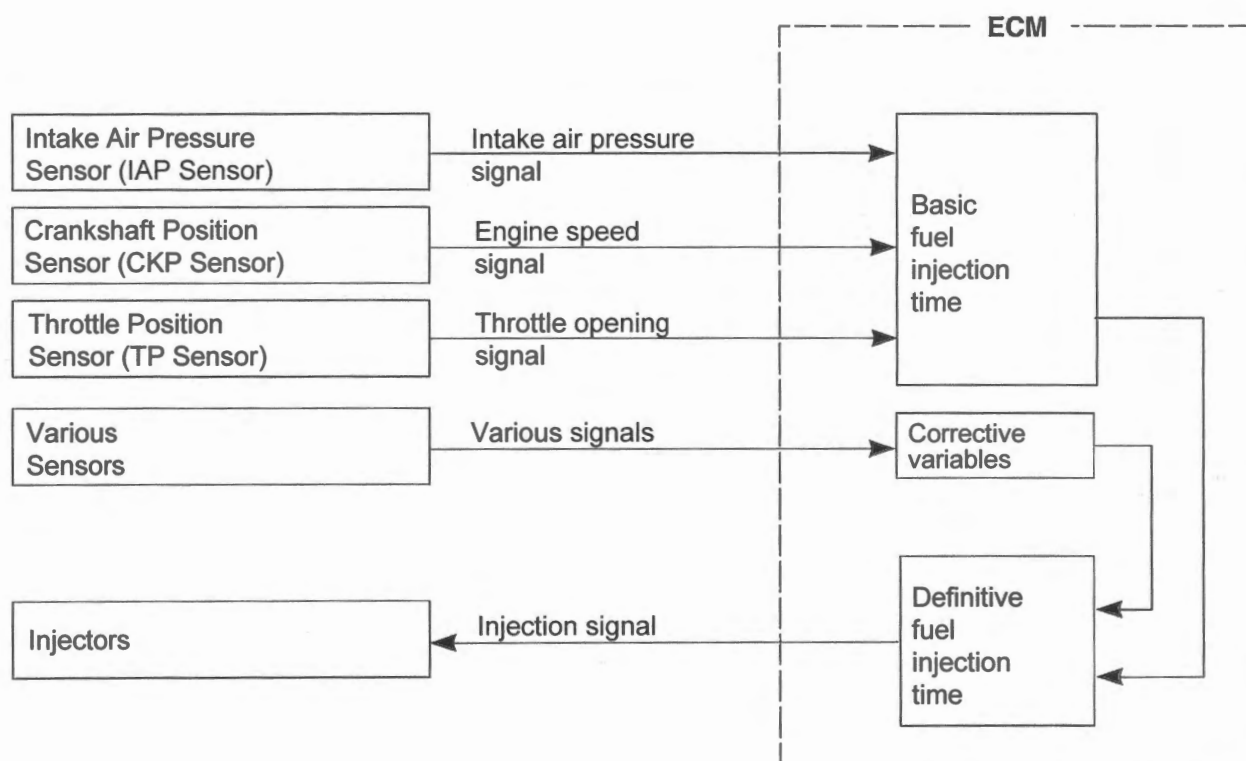

I718H1110268-05



### Compensation of Injection Time (Volume)

The following different signals are output from the respective sensors for compensation of the fuel injection time (volume).

Signal	Descriptions
ECT sensor signal	When engine coolant temperature is low, injection time (volume) is increased.
IAT sensor signal	When intake air temperature is low, injection time (volume) is increased.
HO2 sensor signal	Air/fuel ratio is compensated to the theoretical ratio from density of oxygen in exhaust gasses. The compensation occurs in such a way that more fuel is supplied if detected air/fuel ratio is lean and less fuel is supplied if it is rich.
Battery voltage signal	ECM operates on the battery voltage and at the same time, it monitors the voltage signal for compensation of the fuel injection time (volume). A longer injection time is needed to adjust injection volume in the case of low voltage.
Engine rpm signal	At high speed, the injection time (volume) is increased.
Starting signal	When starting engine, additional fuel is injected during cranking engine.
Acceleration signal / deceleration signal	During acceleration, the fuel injection time (volume) is increased, in accordance with the throttle opening speed and engine rpm. During deceleration, the fuel injection time (volume) is decreased.

### Injection Stop Control

Signal	Descriptions
TO sensor signal	When the motorcycle tips over, the TO sensor sends a signal to the ECM. Then, this signal cuts OFF current supplied to the fuel pump, fuel injectors and ignition coils.
Over-rev. limiter signal	When actual engine speed reaches a programmed maximum, the fuel injection pulses are suppressed.


### Self-Diagnosis Function

BENH28K21101002

The self-diagnosis function is incorporated in the ECM. The function has two modes, "User mode" and "Dealer mode". The user can only be notified by the LCD (DISPLAY) panel and LED (MIL). To check the function of the individual FI system devices, the dealer mode is provided. In this check, the special tool is necessary to read the code of the malfunction items.

### Warning Function

The ECM warns riders to turn the MIL (1) on or blink it depending on the failure place or its content. And the ECM turns the MIL off when detecting 3 D/C-correct continuously after detecting the first abnormality. The ECM erases the registered failure data when not detecting the same one during 40 times of warm up cycle after turning MIL on.

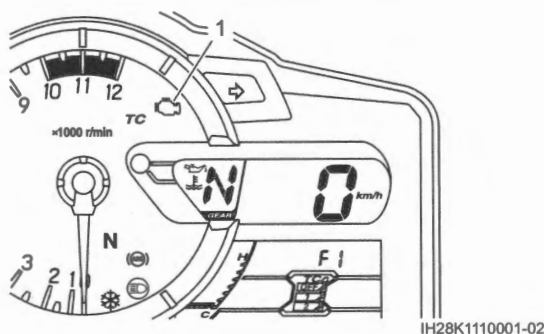

### Supplementation


- The driving cycle (D/C) means the cycle beginning from turning the ignition switch ON through starting the engine until turning the ignition switch OFF. The 3 driving cycles are the term repeating 3 times of the above mentioned cycle.
- The warm up cycle means the cycle of engine warm up operation that the engine coolant temperature reaches more than 71 °C (159.8 °F) and also rises more than 22.5 °C (72.5 °F) from the one at engine starting.

**Diagnostic coupler location**

Mode select coupler (6P) (1) is located under the seat. This coupler can use SDS tool and OBD conversion cable.

**Special tool**

09904-41051

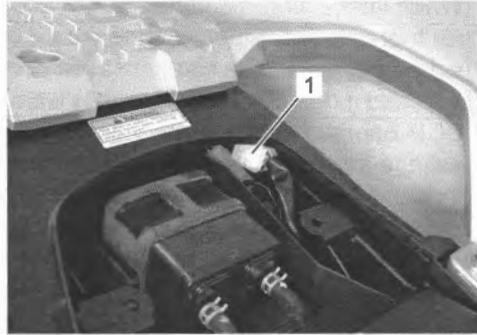

IH28K1110002-02

**User Mode**

Malfunction		LCD (display) indication (1)	MIL indication (2)	Indication mode
"NO"		Odometer *1	—	—
"YES"	Engine can start	Odometer *1 and "FI" letters *2	MIL turns ON.	Each 2 sec. Odometer *1 and "FI" is indicated alternately.
	Engine can not start	"FI" letters *3	MIL turns ON and blinks.	"FI" is indicated continuously.

\*1  
Current letter displayed any one of the odometer, tripmeter A or tripmeter B.

\*2  
When one of the signals is not received by ECM, the fail-safe circuit works and injection is not stopped. In this case, "FI" and odometer \*1 are indicated in the LCD panel and motorcycle can run.

\*3  
The injection signal is stopped, when the crankshaft position sensor signal, TO sensor signal, ignition #1 and #2 signals, fuel injector #1 and #2 signals, fuel pump relay signal or ignition switch signal is not sent to ECM. In this case, "FI" is indicated in the LCD panel. Motorcycle does not run.

**"CHEC":**  
The LCD panel indicates "CHEC" when no communication signal from the ECM is received for 5 seconds or more.

**For Example:**

The ignition switch is turned ON, and the engine stop switch is turned OFF. In this case, the combination meter does not receive any signal from the ECM, and the panel indicates "CHEC".


If CHEC is indicated, the LCD does not indicate the trouble code. It is necessary to check the wiring harness between ECM and combination meter couplers.

The possible cause of this indication is as follows:

Engine stop switch is in OFF position. Starter interlock system is not working. Ignition fuse is burnt.

**NOTE**

The MIL (2) turns ON about 3 seconds after turning the ignition switch ON.

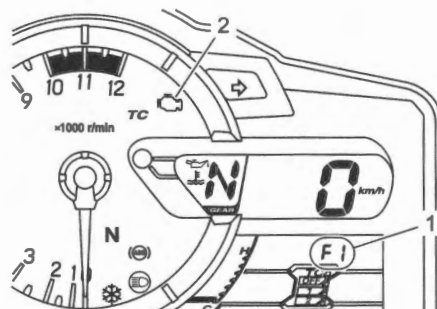

IH28K1110003-02

**Dealer Mode**

The defective function is memorized in the ECM. Use the special tool's coupler to connect to the mode select coupler (6P). The memorized malfunction code is displayed on LCD (DISPLAY) panel. Malfunction means that the ECM does not receive signal from the devices. These affected devices are indicated in the code form.


**NOTE**

**Before checking the malfunction code, do not disconnect the ECM couplers.**

**If the couplers from the ECM is disconnected, the malfunction code memory is erased and the malfunction code can not be checked.**

**Special tool**

**(A): 09930-82720**

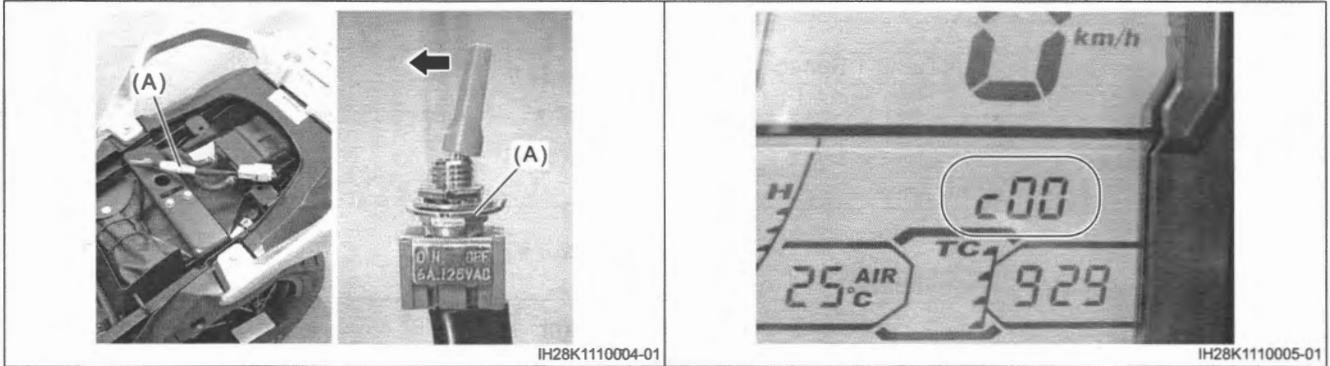

Malfunction	LCD (display) indication	MIL indication	Indication mode
"NO"	C00	MIL turns OFF.	—
"YES"	C** code is indicated from small numeral to large one.		For each 2 sec., code is indicated.

**Comparison Table of DTC Name**

Refer to "Electrical Components Location" in Section 0A (Page 0A-8).


The comparison with the terms used in DTC name and this service manual are shown in the table below.

<b>DTC name</b>	<b>Term in the service manual</b>
CKP Sensor "A" Circuit	CKP Sensor
ECT Sensor Circuit	ECT Sensor
ECT Sensor Circuit Low	ECT Sensor
EVAP System Purge Control Valve Circuit	EVAP System Purge Control Solenoid Valve
EVAP System Vent Valve / Solenoid Circuit	EVAP System Purge Control Solenoid Valve
Fan 1 Control Circuit	Cooling Fan
FP Primary Circuit	Fuel Pump
FP Secondary Circuit Low	Fuel Pump
GP Sensor Circuit	GP Switch
HO2 Sensor Heater Control Circuit Bank 1 Sensor 1	HO2 Sensor
HO2 Sensor Heater Control Circuit High Bank 1 Sensor 1	HO2 Sensor
IAP Sensor Circuit	IAP Sensor #1
IAP Sensor Circuit Low	IAP Sensor #1
IAP Sensor Circuit Range / Performance	IAP Sensor #1
IAP Sensor 2 Circuit	IAP Sensor #2
IAP Sensor 2 Circuit Low	IAP Sensor #2
IAP Sensor 2 Circuit Range / Performance	IAP Sensor #2
IAT Sensor 1 Circuit	IAT Sensor
IAT Sensor 1 Circuit Low	IAT Sensor
Ignition Coil "A" Primary / Secondary Circuit	Ignition Coil #1
Ignition Coil "B" Primary / Secondary Circuit	Ignition Coil #2
Ignition Switch Signal Circuit	Ignition Switch
Injector Circuit / Open – Cylinder 1	Fuel Injector #1
Injector Circuit / Open – Cylinder 2	Fuel Injector #2
ISC System RPM Higher Than Expected	ISC Valve
ISC System RPM Lower Than Expected	ISC Valve
O2 Sensor Circuit Bank 1 Sensor 1	HO2 Sensor
O2 Sensor Circuit High Voltage Bank 1 Sensor 1	HO2 Sensor
O2 Sensor Circuit Low Voltage Bank 1 Sensor 1	HO2 Sensor
PAIR System Control "A" Circuit	PAIR Control Solenoid Valve
PAIR System Control "A" Circuit High	PAIR Control Solenoid Valve
Throttle Actuator "A" Control Motor Circuit	STVA
TO Sensor Circuit	TO Sensor
TO Sensor Circuit Low	TO Sensor
TP Sensor / Switch "A" Circuit	TP Sensor
TP Sensor / Switch "A" Circuit High	TP Sensor
TP Sensor / Switch "B" Circuit	STP Sensor
TP Sensor / Switch "B" Circuit Low	STP Sensor
Vehicle Speed Sensor "A"	Front Wheel Speed Sensor
Vehicle Speed Sensor "B"	Rear Wheel Speed Sensor

# Schematic and Routing Diagram

## FI System Wiring Diagram

BENH28K21102001

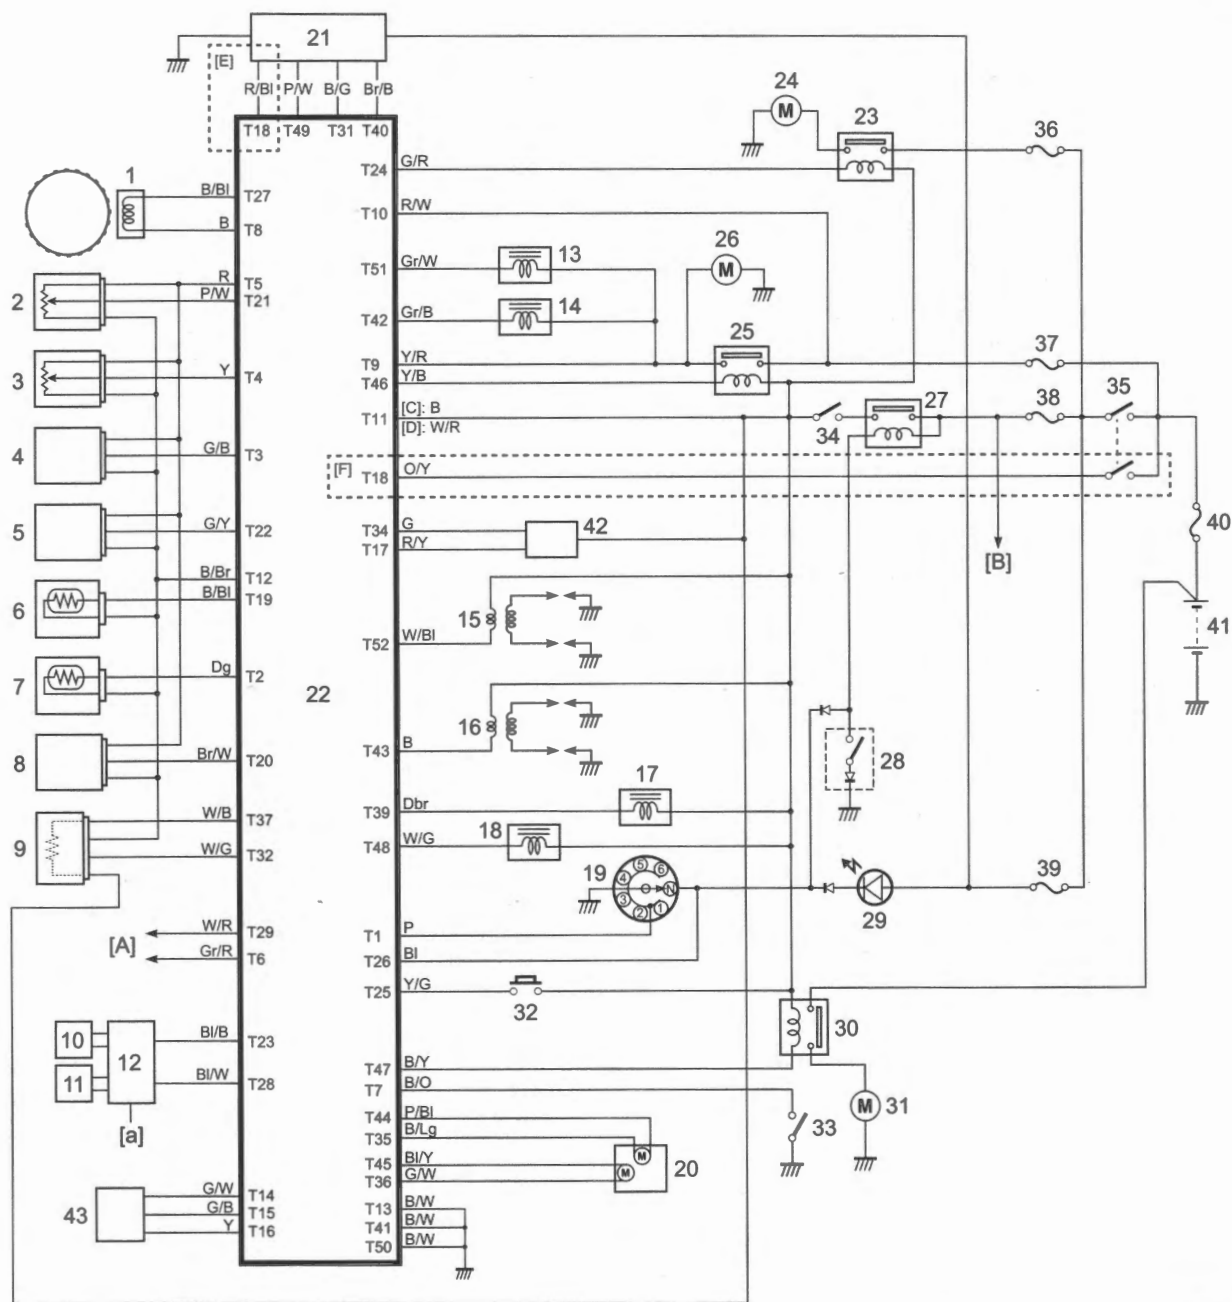


IH28K1110006-01

[A]: To mode select coupler (6P)	12. ABS control unit	29. Neutral indicator light
[B]: To [a]	13. Fuel injector #1	30. Starter relay
[C]: For E.U., Australia and Japan	14. Fuel injector #2	31. Starter motor
[D]: Except for E.U., Australia and Japan	15. Ignition coil #1	32. Starter switch
[E]: Except for U.S.A. and Canada	16. Ignition coil #2	33. Clutch lever position switch
[F]: For U.S.A. and Canada	17. EVAP system purge control solenoid valve (if equipped)	34. Engine stop switch
1. CKP sensor	18. PAIR control solenoid valve (if equipped)	35. Ignition switch
2. TP sensor	19. GP switch	36. Fan fuse (15 A)
3. STP sensor	20. STV actuator	37. Fuel fuse (10 A)
4. IAP sensor #1	21. Combination meter	38. Ignition fuse (15 A)
5. IAP sensor #2	22. ECM	39. Signal fuse (15 A)
6. ECT sensor	23. Cooling fan relay	40. Main fuse (30 A)
7. IAT sensor	24. Cooling fan motor	41. Battery

## 1A-7 Engine General Information and Diagnosis:

8. TO sensor	25. Fuel pump relay	42. Immobilizer antenna (if equipped)
9. HO2 sensor	26. Fuel pump	43. Traction control mode select switch
10. Front wheel speed sensor	27. Side-stand relay	
11. Rear wheel speed sensor	28. Side-stand switch	

### Terminal Arrangement of ECM Connector "T"

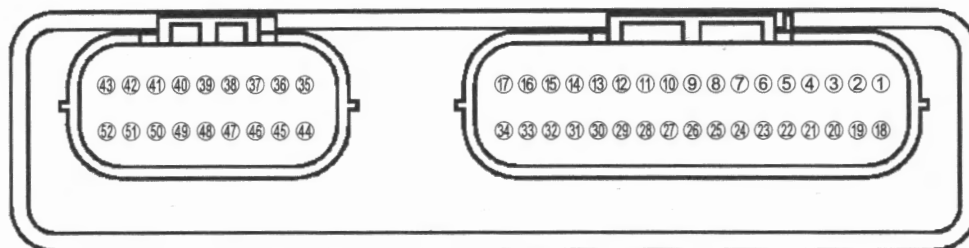

I940H1110005-03

### NOTE

\*1: Except for U.S.A. and Canada


\*2: For U.S.A. and Canada

Terminal No.	Circuit	Terminal No.	Circuit
T1	GP switch signal	T27	CKP sensor signal (CKP+)
T2	IAT sensor signal	T28	Rear wheel speed sensor signal
T3	IAP sensor #1 signal	T29	Mode select switch
T4	STP sensor signal	T30	—
T5	Power source for sensors	T31	Serial data for combination meter
T6	Serial data for self-diagnosis	T32	HO2 sensor signal
T7	Clutch lever position switch	T33	—
T8	CKP sensor signal (CKP-)	T34	Immobilizer signal (if equipped)
T9	Power source for battery monitor	T35	STVA signal (STVA, 1B)
T10	Power source for back-up	T36	STVA signal (STVA, 2B)
T11	Power source	T37	HO2 sensor heater
T12	Sensor ground (E2)	T38	—
T13	ECM ground (E1)	T39	EVAP system purge control solenoid valve (if equipped)
T14	Mode selector 1 (SLT)	T40	Tachometer
T15	Mode selector 3 (DTS2)	T41	General power ground (E01)
T16	Mode selector 2 (DTS1)	T42	Fuel injector #2
T17	Immobilizer signal (if equipped)	T43	Ignition coil #2
T18	Immobilizer indicator *1 Anti-theft switch/ignition signal *2	T44	STVA signal (STVA, 1A)
T19	ECT sensor signal	T45	STVA signal (STVA, 2A)
T20	TO sensor signal	T46	Fuel pump relay
T21	TP sensor signal	T47	Starter motor relay
T22	IAP sensor #2 signal	T48	PAIR control solenoid valve (if equipped)
T23	Front wheel speed sensor signal	T49	Speed sensor output signal
T24	Cooling fan relay	T50	General power ground (E02)
T25	Starter switch	T51	Fuel injector #1
T26	Neutral signal	T52	Ignition coil #1

## Component Location


### FI System Component Location

BENH28K21103001

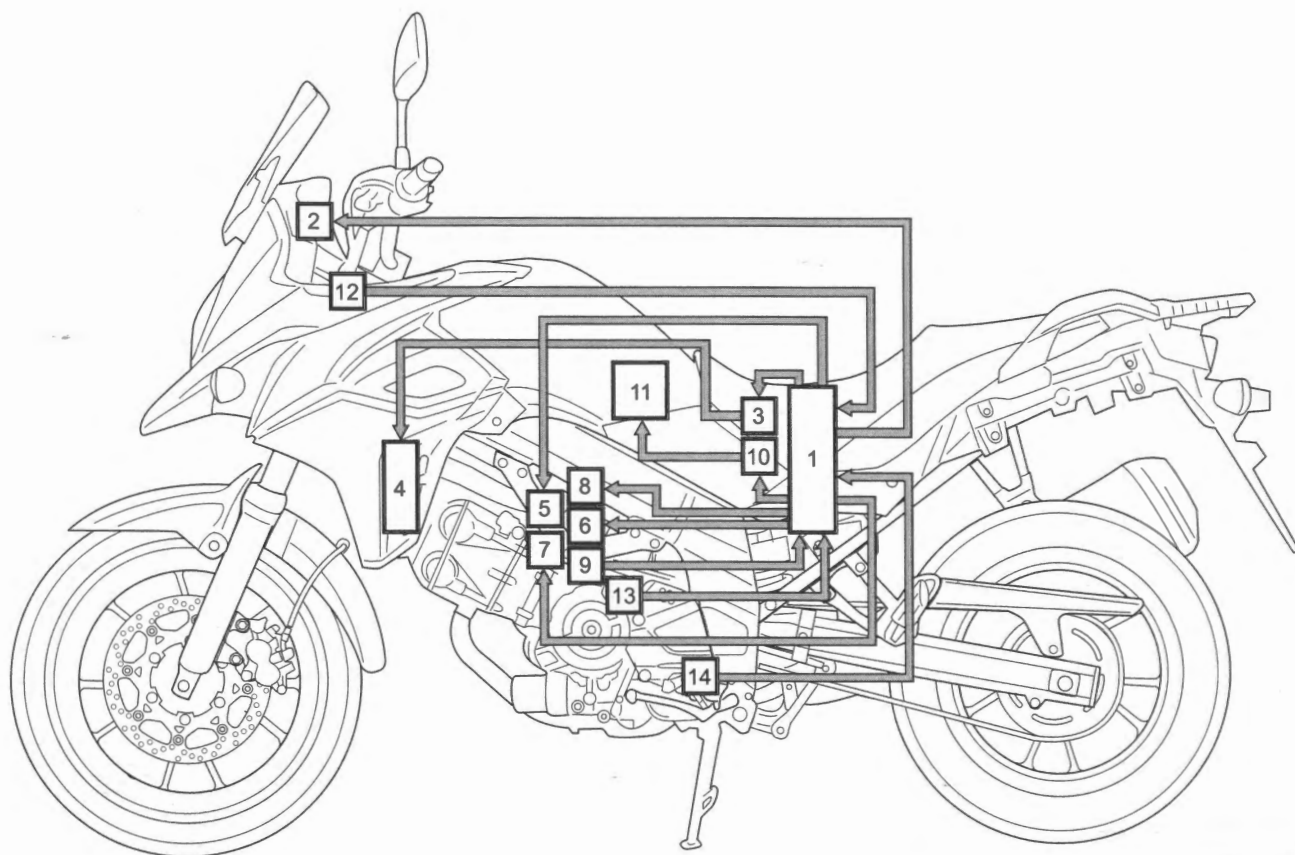

IH28K1110007-02

1. ECM	6. Ignition coil #1	11. Fuel pump
2. Combination meter	7. Fuel injector #1	12. Ignition switch (Immobilizer antenna (if equipped))
3. Cooling fan relay	8. Fuel injector #2	13. CKP sensor
4. Cooling fan motor	9. ECT sensor	14. GP switch
5. PAIR control solenoid valve (if equipped)	10. Fuel pump relay	

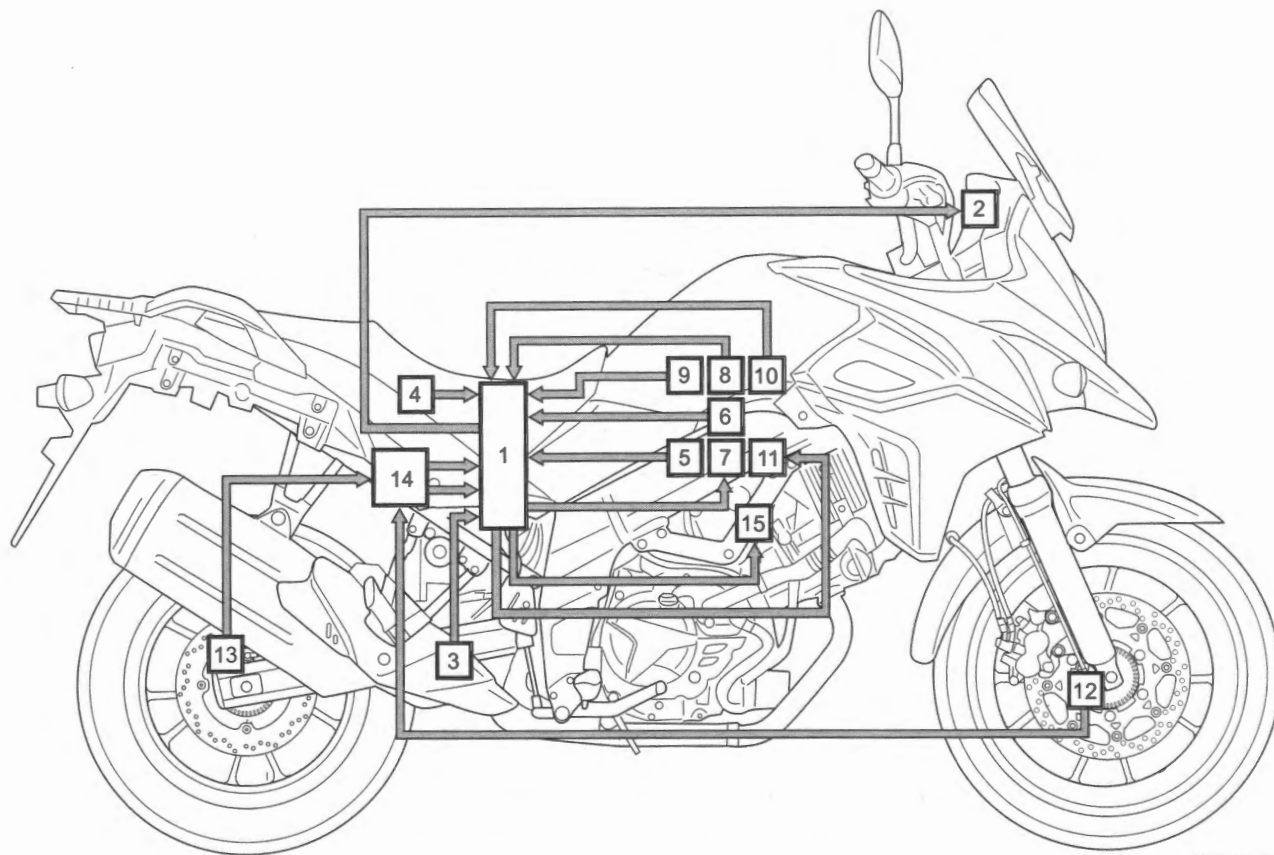

IH28K1110008-02

1. ECM	6. STP sensor	11. EVAP system purge control solenoid valve (if equipped)
2. Combination meter	7. STV actuator	12. Front wheel speed sensor
3. HO2 sensor	8. IAP sensor #1	13. Rear wheel speed sensor
4. TO sensor	9. IAP sensor #2	14. ABS control unit
5. TP sensor	10. IAT sensor	15. Ignition coil #2



## Diagnostic Information and Procedures

### Engine Symptom Diagnosis

BENH28K21104001

Condition	Possible cause	Correction / Reference Item
<b>Engine will not start or is hard to start (compression too low)</b>	Valve clearance out of adjustment.	Adjust. ⌚(Page 1D-39)
	Worn valve guides or poor seating of valves.	Repair or replace. ⌚(Page 1D-59)
	Mistimed valves.	Adjust. ⌚(Page 1D-39)
	Excessively worn piston rings.	Replace. ⌚(Page 1D-61)
	Worn down cylinder bores.	Replace. • Removal: ⌚(Page 1D-19) • Installation: ⌚(Page 1D-25)
	Too slow starter motor cranking.	Repair or replace. • Repair: ⌚(Page 1I-5) • Replace: ⌚(Page 1I-4)
	Poor seating of spark plugs.	Retighten. ⌚(Page 1H-6)
<b>Engine will not start or is hard to start (plug not sparking)</b>	Defective spark plugs.	Replace. ⌚(Page 1H-6)
	Too wide spark plug gap.	Adjust or replace. ⌚(Page 1H-7)
	Fouled spark plugs.	Clean or replace. ⌚(Page 1H-7)
	Wet spark plugs.	Dry or replace. ⌚(Page 1H-7)
	Defective spark plug caps.	Replace. ⌚(Page 1H-6)
	Defective ignition coils.	Replace. ⌚(Page 1H-8)
	Defective CKP sensor.	Replace. • Removal: ⌚(Page 1J-5) • Installation: ⌚(Page 1J-7)
	Defective ECM.	Replace. ⌚(Page 1C-4)
	Open-circuited wiring connections.	Repair or replace. ⌚(Page 9A-5)
	Open or short in high-tension cords.	Replace. ⌚(Page 1H-8)
<b>Engine will not start or is hard to start (no fuel reaching the intake port)</b>	Clogged fuel filter or fuel hose.	Clean or replace. • Fuel filter: ⌚(Page 1G-18) • Fuel hose: ⌚(Page 1G-8)
	Defective fuel pump.	Replace. ⌚(Page 1G-14)
	Defective fuel pump relay.	Replace. ⌚(Page 1G-19)
	Defective fuel pressure regulator.	Replace. ⌚(Page 1G-15)
	Defective fuel injectors.	Replace. ⌚(Page 1G-20)
	Defective ECM.	Replace. ⌚(Page 1C-4)
	Open-circuited wiring connections.	Repair or replace. ⌚(Page 9A-5)
<b>Engine will not start or is hard to start (incorrect fuel/air mixture)</b>	TP sensor out of adjustment.	Adjust. ⌚(Page 1C-8)
	Defective fuel pump.	Replace. ⌚(Page 1G-14)
	Defective fuel pressure regulator.	Replace. ⌚(Page 1G-15)
	Defective TP sensor.	Replace. ⌚(Page 1C-8)
	Defective CKP sensor.	Replace. • Removal: ⌚(Page 1J-5) • Installation: ⌚(Page 1J-7)
	Defective IAP sensor.	Replace. ⌚(Page 1C-5)
	Defective ECM.	Replace. ⌚(Page 1C-4)
	Defective ECT sensor.	Replace. ⌚(Page 1C-7)
	Defective IAT sensor.	Replace. ⌚(Page 1C-6)
	Clogged ISC valve air passage way.	Repair or replace. ⌚(Page 1D-14)

**1A-11 Engine General Information and Diagnosis:**

<b>Condition</b>	<b>Possible cause</b>	<b>Correction / Reference Item</b>
<b>Engine idles poorly</b>	Valve clearance out of adjustment.	Adjust. ⌚(Page 1D-39)
	Poor seating of valves.	Repair. ⌚(Page 1D-57)
	Defective valve guides.	Replace. ⌚(Page 1D-59)
	Worn down camshafts and/or camshafts surface.	Replace. • Removal: ⌚(Page 1D-19) • Installation: ⌚(Page 1D-25)
	Too wide spark plug gaps.	Adjust or replace. ⌚(Page 1H-7)
	Defective ignition coils.	Replace. ⌚(Page 1H-8)
	Defective CKP sensor.	Replace. • Removal: ⌚(Page 1J-5) • Installation: ⌚(Page 1J-7)
	Defective ECM.	Replace. ⌚(Page 1C-4)
	Defective TP sensor.	Replace. ⌚(Page 1C-8)
	Defective fuel pump.	Replace. ⌚(Page 1G-14)
	Imbalanced throttle valve.	Adjust. ⌚(Page 1D-15)
	Damaged or cracked vacuum hose.	Replace.
	Damaged or clogged ISC valve.	Clean or replace. ⌚(Page 1D-14)
	Dirty throttle body.	Clean. ⌚(Page 1D-14)
	ISC incorrect leaning.	Reset learned value. ⌚(Page 1C-3)
<b>Engine stalls often (incorrect fuel/air mixture)</b>	Defective IAP sensor or circuit.	Repair or replace. ⌚(Page 1C-4)
	Clogged fuel filter.	Clean or replace. ⌚(Page 1G-18)
	Defective fuel pump.	Replace. ⌚(Page 1G-14)
	Defective fuel pressure regulator.	Replace. ⌚(Page 1G-15)
	Defective ECT sensor.	Replace. ⌚(Page 1C-7)
	Defective thermostat.	Replace. ⌚(Page 1F-12)
	Defective IAT sensor.	Replace. ⌚(Page 1C-6)
	Damaged or cracked vacuum hose.	Replace.
<b>Engine stalls often (fuel injector improperly operating)</b>	Damaged or clogged ISC valve.	Clean or replace. ⌚(Page 1D-14)
	Defective fuel injectors.	Replace. ⌚(Page 1G-20)
	No injection signal from ECM.	Repair or replace. • Cylinder #1: ⌚(Page 1A-35) • Cylinder #2: ⌚(Page 1A-37)
	Open or short circuited wiring connections.	Repair or replace. ⌚(Page 9A-5)
<b>Engine stalls often (control circuit or sensor improperly operating)</b>	Defective battery or low battery voltage.	Replace or recharge. ⌚(Page 1J-10)
	Defective ECM.	Replace. ⌚(Page 1C-4)
	Defective fuel pressure regulator.	Replace. ⌚(Page 1G-15)
	Defective TP sensor.	Replace. ⌚(Page 1C-8)
	Defective IAT sensor.	Replace. ⌚(Page 1C-6)
	Defective CKP sensor.	Replace. • Removal: ⌚(Page 1J-5) • Installation: ⌚(Page 1J-7)
	Defective ECT sensor.	Replace. ⌚(Page 1C-7)
	Defective fuel pump relay.	Replace. ⌚(Page 1G-19)
	Defective ISC valve.	Replace. ⌚(Page 1D-9)
	ISC incorrect learning.	Reset learned value. ⌚(Page 1C-3)
<b>Engine stalls often (engine internal parts improperly operating)</b>	Fouled spark plugs.	Clean or replace. ⌚(Page 1H-7)
	Defective CKP sensor.	Replace. • Removal: ⌚(Page 1J-5) • Installation: ⌚(Page 1J-7)
	Defective ECM.	Replace. ⌚(Page 1C-4)
	Clogged fuel hose.	Clean or replace. ⌚(Page 1G-8)
	Valve clearance out of adjustment.	Adjust. ⌚(Page 1D-39)
	Dirty throttle body.	Clean. ⌚(Page 1D-14)

Condition	Possible cause	Correction / Reference Item
<b>Noisy engine (excessive valve chatter)</b>	Too large valve clearance.	Adjust. ⌚(Page 1D-39)
	Weakened or broken valve springs.	Replace. ⌚(Page 1D-52)
	Worn tappet or camshafts surface.	Replace. • Removal: ⌚(Page 1D-19) • Installation: ⌚(Page 1D-25)
	Worn or burnt camshaft journals.	Replace. ⌚(Page 1D-58)
<b>Noisy engine (noise seems to come from piston)</b>	Worn down pistons.	Replace. ⌚(Page 1D-60)
	Worn down cylinders.	Replace. • Removal: ⌚(Page 1D-19) • Installation: ⌚(Page 1D-25)
	Combustion chamber fouled with carbon.	Clean. ⌚(Page 1D-59)
	Worn piston pins or piston pin bores.	Replace. ⌚(Page 1D-60)
	Worn piston rings or ring grooves.	Replace. ⌚(Page 1D-61)
<b>Noisy engine (noise seems to come from cam chain)</b>	Stretched cam chain.	Replace. ⌚(Page 1D-65)
	Worn sprockets.	Replace. • Camshaft sprocket: – Removal: ⌚(Page 1D-19) – Installation: ⌚(Page 1D-25) • Cam chain drive sprocket: ⌚(Page 1D-65)
	Cam chain tension adjuster not working.	Repair or replace. ⌚(Page 1D-39)
<b>Noisy engine (noise seems to come from crankshaft)</b>	Rattling bearing due to wear.	Replace. • Left crankcase: ⌚(Page 1D-74) • Right crankcase: ⌚(Page 1D-75)
	Worn or burnt conrod crank pin bearings.	Replace. ⌚(Page 1D-77)
	Worn or burnt journal bearings.	Replace. ⌚(Page 1D-72)
<b>Noisy engine (noise seems to come from water pump)</b>	Too much play on pump shaft bearings.	Replace. ⌚(Page 1F-16)
	Worn or damaged impeller shaft.	Replace. ⌚(Page 1F-16)
	Worn or damaged mechanical seal.	Replace. ⌚(Page 1F-16)
	Contact between pump case and impeller.	Replace. ⌚(Page 1F-16)
<b>Engine runs poorly in high speed range (defective engine internal/ electrical parts)</b>	Weakened valve springs.	Replace. ⌚(Page 1D-52)
	Worn camshafts.	Replace. • Removal: ⌚(Page 1D-19) • Installation: ⌚(Page 1D-25)
	Valve timing out of adjustment.	Adjust. ⌚(Page 1D-39)
	Too narrow spark plug gaps.	Adjust or replace. ⌚(Page 1H-7)
	Ignition not advanced sufficiently due to poorly working timing advance circuit.	Replace ECM. ⌚(Page 1C-4)
	Defective ignition coils.	Replace. ⌚(Page 1H-8)
	Defective CKP sensor.	Replace. • Removal: ⌚(Page 1J-5) • Installation: ⌚(Page 1J-7)
	Defective ECM.	Replace. ⌚(Page 1C-4)
	Clogged air cleaner element.	Replace. ⌚(Page 1D-5)
	Clogged fuel hose, resulting in inadequate fuel supply to injector.	Clean and prime.
	Defective fuel pump.	Replace. ⌚(Page 1G-14)
	Defective TP sensor.	Replace. ⌚(Page 1C-8)
	Defective STP sensor.	Replace. ⌚(Page 1C-14)
Defective STVA.	Replace. ⌚(Page 1D-12)	

**1A-13 Engine General Information and Diagnosis:**

<b>Condition</b>	<b>Possible cause</b>	<b>Correction / Reference Item</b>
<b>Engine runs poorly in high speed range (defective air flow system)</b>	Clogged air cleaner element.	Replace. ⌚(Page 1D-5)
	Defective throttle valve.	Adjust and replace. ⌚(Page 1D-9)
	Defective secondary throttle valve.	Adjust and replace. ⌚(Page 1D-9)
	Sucking air from throttle body joint or intake pipe joint.	Retighten or replace. • Throttle body joint: ⌚(Page 1D-6) • Intake pipe joint: ⌚(Page 1D-16)
	Defective ECM.	Replace. ⌚(Page 1C-4)
	Unbalancing throttle valve synchronization.	Adjust. ⌚(Page 1D-15)
	Defective STP sensor.	Replace. ⌚(Page 1C-14)
<b>Engine runs poorly in high speed range (defective control circuit or sensor)</b>	Defective STVA.	Replace. ⌚(Page 1D-12)
	Low fuel pressure.	Repair or replace. • Fuel feed hose: ⌚(Page 1G-8) • Fuel pump: ⌚(Page 1G-15)
	Defective TP sensor.	Replace. ⌚(Page 1C-8)
	Defective IAT sensor.	Replace. ⌚(Page 1C-6)
	Defective CKP sensor.	Replace. • Removal: ⌚(Page 1J-5) • Installation: ⌚(Page 1J-7)
	Defective IAP sensor.	Replace. ⌚(Page 1C-5)
	Defective ECM.	Replace. ⌚(Page 1C-4)
	TP sensor out of adjustment.	Adjust. ⌚(Page 1C-8)
	Defective STP sensor.	Replace. ⌚(Page 1C-14)
	Defective STVA.	Replace. ⌚(Page 1D-12)
<b>Engine lacks power (defective engine internal/electrical parts)</b>	Loss of valve clearance.	Adjust. ⌚(Page 1D-39)
	Weakened valve springs.	Replace. ⌚(Page 1D-52)
	Valve timing out of adjustment.	Adjust. ⌚(Page 1D-39)
	Worn piston rings or cylinders.	Replace. • Piston ring: ⌚(Page 1D-61) • Cylinder: – Removal: ⌚(Page 1D-19) – Installation: ⌚(Page 1D-25)
	Poor seating of valves.	Repair. ⌚(Page 1D-57)
	Fouled spark plugs.	Clean or replace. ⌚(Page 1H-7)
	Incorrect spark plugs.	Replace. ⌚(Page 1H-6)
	Clogged fuel injectors.	Clean or replace. ⌚(Page 1G-21)
	Clogged air cleaner element.	Replace. ⌚(Page 1D-5)
	Sucking air from throttle body joint or intake pipe joint.	Retighten or replace. • Throttle body joint: ⌚(Page 1D-6) • Intake pipe joint: ⌚(Page 1D-16)
	Too much engine oil.	Drain out excess oil.
	Defective fuel pump.	Replace. ⌚(Page 1G-14)
	Defective ECM.	Replace. ⌚(Page 1C-4)
	Defective CKP sensor.	Replace. • Removal: ⌚(Page 1J-5) • Installation: ⌚(Page 1J-7)
	Defective ignition coils.	Replace. ⌚(Page 1H-8)
	Defective STP sensor.	Replace. ⌚(Page 1C-14)
	Defective STVA.	Replace. ⌚(Page 1D-12)

Condition	Possible cause	Correction / Reference Item
<b>Engine lacks power (defective control circuit or sensor)</b>	Low fuel pressure.	Repair or replace. • Fuel feed hose: ⌚(Page 1G-8) • Fuel pump: ⌚(Page 1G-15)
	Defective TP sensor.	Replace. ⌚(Page 1C-8)
	Defective IAT sensor.	Replace. ⌚(Page 1C-6)
	Defective CKP sensor.	Replace. • Removal: ⌚(Page 1J-5) • Installation: ⌚(Page 1J-7)
	Defective IAP sensor.	Replace. ⌚(Page 1C-5)
	TP sensor out of adjustment.	Adjust. ⌚(Page 1C-8)
	Defective ECM.	Replace. ⌚(Page 1C-4)
	Defective STP sensor.	Replace. ⌚(Page 1C-14)
	Defective STVA.	Replace. ⌚(Page 1D-12)
<b>Engine overheats (defective engine internal parts)</b>	Heavy carbon deposit on piston crown.	Clean.
	Not enough oil in the engine.	Add oil. ⌚(Page 1E-4)
	Defective oil pump or clogged oil circuit.	Replace or clean. ⌚(Page 1E-11)
	Use of incorrect engine oil.	Replace. ⌚(Page 1E-4)
	Sucking air from throttle body joint or intake pipe joint.	Retighten or replace. • Throttle body joint: ⌚(Page 1D-6) • Intake pipe joint: ⌚(Page 1D-16)
	Defective cooling system.	Refer to "Engine Cooling Symptom Diagnosis" in Section 1F (Page 1F-4).
<b>Engine overheats (lean fuel/air mixture)</b>	Short-circuited IAP sensors/lead wire.	Repair or replace. ⌚(Page 1C-5)
	Short-circuited IAT sensor/lead wire.	Repair or replace. ⌚(Page 1C-6)
	Sucking air from throttle body joint or intake pipe joint.	Repair or replace. • Throttle body joint: ⌚(Page 1D-6) • Intake pipe joint: ⌚(Page 1D-16)
	Defective fuel injectors.	Replace. ⌚(Page 1G-20)
	Defective ECT sensor.	Replace. ⌚(Page 1C-7)
<b>Engine overheats (other factors)</b>	Ignition timing is too advanced due to defective timing advance system (ECT sensor, CKP sensor or ECM).	Replace.
<b>Dirty or heavy exhaust smoke</b>	Too much engine oil.	Drain out excess oil.
	Worn piston rings or cylinders.	Replace. • Piston ring: ⌚(Page 1D-61) • Cylinder: – Removal: ⌚(Page 1D-19) – Installation: ⌚(Page 1D-25)
	Worn valve guides.	Replace. ⌚(Page 1D-59)
	Scored or scuffed cylinder walls.	Replace. • Removal: ⌚(Page 1D-19) • Installation: ⌚(Page 1D-25)
	Worn valve stems.	Replace. ⌚(Page 1D-52)
	Defective valve stem oil seals.	Replace. ⌚(Page 1D-52)
	Worn oil ring side rails.	Replace. ⌚(Page 1D-61)

DTC Check

BENH28K21104002


NOTE

- Do not disconnect the coupler from ECM, battery cable from battery, ECM ground wire from engine or main fuse before confirming DTC stored in memory. Such disconnection will erase memorized information in ECM memory.
- Before checking DTC, read self-diagnosis function "User mode and dealer mode" (Page 1A-2) carefully to have good understanding as to what functions are available and how to use it.
- DTC can be checked by using the SDS. Refer to the SDS operation manual for further details.

- 1) Remove the seat. (Page 9D-19)
- 2) Connect the special tool to the mode select coupler (6P) at the wiring harness.

Special tool

(A): 09930-82720

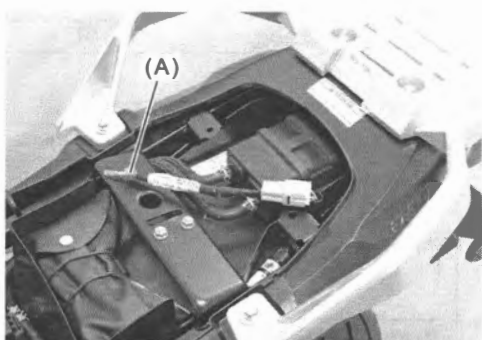

IH28K1110009-01

- 3) Start the engine or crank the engine for more than 4 seconds.
- 4) Turn the special tool's switch ON.



ID26J1110213-01

- 5) Check the DTC to determine the malfunction part. (Page 1A-16)



IH28K1110010-01

DTC Clearance

BENH28K21104003

NOTE

- The malfunction code is memorized in the ECM also when the lead wire coupler of any sensor is disconnected. Therefore, when a lead wire coupler has been disconnected in the diagnosis, erase the stored Past DTC.
- Past DTC can be erased by using the SDS. Refer to the SDS operation manual for further details.

- 1) Connect the special tool and turn the special tool's switch ON. Refer to "DTC Check" (Page 1A-15).
- 2) After repairing the trouble, turn OFF the ignition switch and turn ON again.
- 3) If the DTC is indicated (C00), the malfunction is cleared.



IH28K1110005-01

- 4) Disconnect the special tool and install the seat.

NOTE

Even though the Current DTC is cleared, Past DTC (previous malfunction history code) still remains stored in the ECM. Therefore, erase the Past DTC memorized in the ECM.

## DTC Table

BENH28K21104004

DTC		DTC name	DTC detecting condition
—	C00	None	—
P0030	C44	HO2 Sensor Heater Control Circuit Bank 1 Sensor 1 ☞(Page 1A-21)	HO2 sensor heater drive circuit is shorted to ground or open.
P0032		HO2 Sensor Heater Control Circuit High Bank 1 Sensor 1 ☞(Page 1A-21)	HO2 sensor heater drive circuit is shorted to power supply.
P0105	C17	IAP Sensor Circuit ☞(Page 1A-23)	The sensor output voltage is higher than 4.80 V.
P0106		IAP Sensor Circuit Range / Performance ☞(Page 1A-23)	The IAP sensor #1 vacuum hose has come off.
P0107		IAP Sensor Circuit Low ☞(Page 1A-23)	The sensor output voltage is lower than 0.10 V.
P0110	C21	IAT Sensor 1 Circuit ☞(Page 1A-25)	The sensor output voltage is higher than 4.60 V.
P0112		IAT Sensor 1 Circuit Low ☞(Page 1A-25)	The sensor output voltage is lower than 0.10 V.
P0115	C15	ECT Sensor Circuit ☞(Page 1A-27)	The sensor output voltage is higher than 4.85 V.
P0117		ECT Sensor Circuit Low ☞(Page 1A-27)	The sensor output voltage is lower than 0.10 V.
P0120	C14	TP Sensor / Switch "A" Circuit ☞(Page 1A-29)	The sensor output voltage is lower than 0.10 V.
P0123		TP Sensor / Switch "A" Circuit High ☞(Page 1A-29)	The sensor output voltage is higher than 4.80 V.
P0130	C44	O2 Sensor Circuit Bank 1 Sensor 1 ☞(Page 1A-31)	HO2 sensor output voltage is within 2.1 V – 2.9 V.
P0131		O2 Sensor Circuit Low Voltage Bank 1 Sensor 1 ☞(Page 1A-31)	The sensor output voltage is lower than 0.10 V.
P0132		O2 Sensor Circuit High Voltage Bank 1 Sensor 1 ☞(Page 1A-31)	The sensor output voltage is higher than 3.13 V.
P0170	C45	Fuel Trim Bank 1 ☞(Page 1A-33)	The fuel trim correction is out of its threshold value.
P0201	C32	Injector Circuit / Open – Cylinder 1 ☞(Page 1A-35)	Fuel injector #1 signal is interrupted by 8 times or more continuity although CKP signal is detected.
P0202	C33	Injector Circuit / Open – Cylinder 2 ☞(Page 1A-37)	Fuel injector #2 signal is interrupted by 8 times or more continuity although CKP signal is detected.
P0220	C29	TP Sensor / Switch "B" Circuit ☞(Page 1A-39)	The sensor output voltage is higher than 4.83 V.
P0222		TP Sensor / Switch "B" Circuit Low ☞(Page 1A-39)	The sensor output voltage is lower than 0.10 V.
P0230	C41	FP Primary Circuit ☞(Page 1A-41)	No voltage is detected, although the FP relay is ON.
P0231		FP Secondary Circuit Low ☞(Page 1A-41)	Voltage is applied to fuel pump even though the FP relay is OFF.
P0335	C12	CKP Sensor "A" Circuit ☞(Page 1A-43)	The signal does not reach ECM for 2 sec. or more, after receiving the starter signal.

**1A-17 Engine General Information and Diagnosis:**

DTC		DTC name	DTC detecting condition
P0351	C24	Ignition Coil "A" Primary / Secondary Circuit ☞(Page 1A-45)	Ignition coil #1 signal is interrupted by 8 times or more continuity although CKP signal is detected.
P0352	C25	Ignition Coil "B" Primary / Secondary Circuit ☞(Page 1A-45)	Ignition coil #2 signal is interrupted by 8 times or more continuity although CKP signal is detected.
P0418 *1	C49 *1	PAIR System Control "A" Circuit ☞(Page 1A-45)	No voltage is input to ECM even though the PAIR control solenoid valve is OFF.
P0443 *1	C62 *1	EVAP System Purge Control Valve Circuit ☞(Page 1A-47)	No voltage is input to ECM even though the EVAP system purge control solenoid valve is OFF.
P0449 *1		EVAP System Vent Valve / Solenoid Circuit ☞(Page 1A-47)	Voltage is input to ECM even though the EVAP system purge control solenoid valve is ON.
P0480	C60	Fan 1 Control Circuit ☞(Page 1A-49)	Cooling fan relay signal is not input to ECM.
P0500	C16	Vehicle Speed Sensor "A" ☞(Page 1A-51)	The front wheel speed sensor signal is not input for more than 3.0 sec.
P0506	C65	ISC System RPM Lower Than Expected ☞(Page 1A-53)	Idle speed dropped lower than desired idle speed by more than specified range.
P0507		ISC System RPM Higher Than Expected ☞(Page 1A-53)	Idle speed rose higher than desired idle speed by more than specified range.
P0914	C31	GP Sensor Circuit ☞(Page 1A-54)	Gear position signal voltage is lower than the specified value.
P1100	C13	IAP Sensor 2 Circuit ☞(Page 1A-56)	The sensor output voltage is higher than 4.80 V.
P1101		IAP Sensor 2 Circuit Range / Performance ☞(Page 1A-56)	The IAP sensor #2 vacuum hose has come off.
P1102		IAP Sensor 2 Circuit Low ☞(Page 1A-56)	The sensor output voltage is lower than 0.10 V.
P1610	C42	Ignition Switch Signal Circuit ☞(Page 1A-58)	Ignition switch signal is not input to the ECM. When the ID agreement is not verified (if equipped). ECM does not receive communication signal from the immobilizer antenna (if equipped).
P1700	C23	TO Sensor Circuit ☞(Page 1A-58)	The sensor output voltage is higher than 4.60 V.
P1701		TO Sensor Circuit Low ☞(Page 1A-58)	The sensor output voltage is lower than 0.20 V.
P2100	C28	Throttle Actuator "A" Control Motor Circuit ☞(Page 1A-60)	STVA control signal is not supplied from the ECM. ECM does not receive communication signal from the STVA or operation voltage does not reach STVA.
P2158	C91	Vehicle Speed Sensor "B" ☞(Page 1A-51)	The rear wheel speed sensor signal is not input for more than 3.0 sec.
P2258 *1	C49 *1	PAIR System Control "A" Circuit High ☞(Page 1A-45)	Voltage is input to ECM even though the PAIR control solenoid valve is ON.

In the LCD (DISPLAY) panel, the DTC is indicated from small code to large code.

\*1

If equipped.



**Fail-Safe Function Table**

BENH28K21104005

FI system is provided with fail-safe function to allow the engine to start and the motorcycle to run in a minimum performance necessary even under malfunction condition.

Item	Fail-safe mode	Starting ability	Running ability
IAP sensor	Intake air pressure value is fixed to 101.3 kPa (760 mmHg).	"YES"	"YES"
TP sensor	The throttle opening is fixed to full open position. Ignition timing is also fixed.	"YES"	"YES"
ECT sensor	Engine coolant temperature value is fixed to 70 °C (158 °F). Cooling fan is fixed on position.	"YES"	"YES"
IAT sensor	Intake air temperature value is fixed to 25 °C (77 °F).	"YES"	"YES"
Ignition signal	Cylinder #1 fuel-cut	"YES"	"YES"
		Cylinder #2 can run.	
	Cylinder #2 fuel-cut	"YES"	"YES"
		Cylinder #1 can run.	
STV actuator	ECM stops controlling secondary throttle valve.	"YES"	"YES"
STP sensor	ECM stops controlling secondary throttle valve.	"YES"	"YES"
Gear position signal	Gear position signal is fixed to 4th gear.	"YES"	"YES"
HO2 sensor	Feedback compensation is inhibited. (Air/fuel ratio is fixed to normal.)	"YES"	"YES"
PAIR control solenoid valve (if equipped)	ECM stops controlling PAIR control solenoid valve.	"YES"	"YES"
EVAP system purge control solenoid valve (if equipped)	ECM stops controlling EVAP system purge control solenoid valve.	"YES"	"YES"

The engine can start and can run even if the signal in the table is not received from each sensor. But, the engine running condition is not complete, providing only emergency help (by fail-safe circuit). In this case, it is necessary to bring the motorcycle to the workshop for complete repair.

When two ignition signals are not received by ECM, the fail-safe circuit can not work and ignition is stopped.

**FI System Troubleshooting**

BENH28K21104006

**Customer Complaint Analysis**

Record details of the problem (failure, complaint) and how it occurred as described by the customer. For this purpose, use of such an inspection form such as following will facilitate collecting information to the point required for proper analysis and diagnosis.

**NOTE**


---

**This form is a standard sample. The form should be modified according to conditions and characteristic of each market.**

---

**Example: Customer problem inspection form**

<b>User name:</b>	<b>Model:</b>	<b>VIN:</b>	
Date of issue:	Date Reg.:	Date of problem:	Mileage:

MIL condition (LED)	<input type="checkbox"/> Always ON / <input type="checkbox"/> Sometimes ON / <input type="checkbox"/> Always OFF / <input type="checkbox"/> Good condition
Malfunction display/code (LCD)	User mode: <input type="checkbox"/> No display / <input type="checkbox"/> Malfunction display (      )
	Dealer mode: <input type="checkbox"/> No code / <input type="checkbox"/> Malfunction code (      )

**PROBLEM SYMPTOMS**

<input type="checkbox"/> <b>Difficult Starting</b> <input type="checkbox"/> No cranking <input type="checkbox"/> No initial combustion <input type="checkbox"/> No combustion <input type="checkbox"/> Poor starting at ( <input type="checkbox"/> cold / <input type="checkbox"/> warm / <input type="checkbox"/> always) <input type="checkbox"/> Other	<input type="checkbox"/> <b>Poor Driveability</b> <input type="checkbox"/> Hesitation on acceleration <input type="checkbox"/> Back fire / <input type="checkbox"/> After fire <input type="checkbox"/> Lack of power <input type="checkbox"/> Surging <input type="checkbox"/> Abnormal knocking <input type="checkbox"/> Engine rpm jumps briefly <input type="checkbox"/> Other
<input type="checkbox"/> <b>Poor Idling</b> <input type="checkbox"/> Poor fast Idle <input type="checkbox"/> Abnormal idling speed ( <input type="checkbox"/> High / <input type="checkbox"/> Low) (      r/min) <input type="checkbox"/> Unstable <input type="checkbox"/> Hunting (      r/min to      r/min) <input type="checkbox"/> Other	<input type="checkbox"/> <b>Engine Stall when</b> <input type="checkbox"/> Immediately after start <input type="checkbox"/> Throttle valve is opened <input type="checkbox"/> Throttle valve is closed <input type="checkbox"/> Load is applied <input type="checkbox"/> Other
<input type="checkbox"/> OTHERS:	

**MOTORCYCLE/ENVIRONMENTAL CONDITION WHEN PROBLEM OCCURS**

Environmental condition	
Weather	<input type="checkbox"/> Fair / <input type="checkbox"/> Cloudy / <input type="checkbox"/> Rain / <input type="checkbox"/> Snow / <input type="checkbox"/> Always / <input type="checkbox"/> Other
Temperature	<input type="checkbox"/> Hot / <input type="checkbox"/> Warm / <input type="checkbox"/> Cool / <input type="checkbox"/> Cold (°C / °F) / <input type="checkbox"/> Always
Frequency	<input type="checkbox"/> Always / <input type="checkbox"/> Sometimes (times / day, month) / <input type="checkbox"/> Only once <input type="checkbox"/> Under certain condition
Road	<input type="checkbox"/> Urban / <input type="checkbox"/> Suburb / <input type="checkbox"/> Highway / <input type="checkbox"/> Mountainous ( <input type="checkbox"/> Uphill / <input type="checkbox"/> Downhill) <input type="checkbox"/> Tarmacadam / <input type="checkbox"/> Gravel / <input type="checkbox"/> Other
Motorcycle condition	
Engine condition	<input type="checkbox"/> Cold / <input type="checkbox"/> Warming up phase / <input type="checkbox"/> Warmed up / <input type="checkbox"/> Always / <input type="checkbox"/> Other at starting <input type="checkbox"/> Immediately after start / <input type="checkbox"/> Racing without load / <input type="checkbox"/> Engine speed (      r/min)
Motorcycle condition	During driving: <input type="checkbox"/> Constant speed / <input type="checkbox"/> Accelerating / <input type="checkbox"/> Decelerating <input type="checkbox"/> Right hand corner / <input type="checkbox"/> Left hand corner <input type="checkbox"/> At stop / <input type="checkbox"/> Motorcycle speed when problem occurs (      km/h,      mile/h) <input type="checkbox"/> Other:

**Visual Inspection**

Prior to diagnosis using the mode select switch or SDS, perform the following visual inspections. The reason for visual inspection is that mechanical failures (such as oil leakage) cannot be displayed on the screen with the use of mode select switch or SDS.

Inspection item		Referring section
Engine oil	Level	☞ (Page 1E-4)
	Leakage	
Engine coolant	Level	☞ (Page 1F-5)
	Leakage	☞ (Page 1F-6)
Fuel	Level	—
	Leakage	☞ (Page 1G-6)
Air cleaner element	Dirt	☞ (Page 1D-5)
	Clogging	
Battery	Corrosion of terminal	☞ (Page 1J-12)
Throttle cable	Play	☞ (Page 1D-9)
Vacuum hoses of air intake system	Disconnection	—
	Looseness	—
	Bend	—
Fuses	Burning	—
MIL	Operation	☞ (Page 1A-2)
Each indicator light	Operation	☞ (Page 9C-4)
Combination meter	Operation	☞ (Page 9C-9)
Exhaust system	Leakage of exhaust gas	☞ (Page 1K-3)
	Noise	
Harness coupler	Disconnection	☞ (Page 00-2)
	Poor contact	

DTC P0030 / P0032 (C44)


BENH28K21104007

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
<b>P0030 (C44): HO2 Sensor Heater Control Circuit Bank 1 Sensor 1</b> HO2 sensor heater drive circuit is shorted to ground or open.	<ul style="list-style-type: none"> <li>• HO2 sensor heater</li> <li>• HO2 sensor heater circuit</li> <li>• ECM</li> </ul>
<b>P0032 (C44): HO2 Sensor Heater Control Circuit High Bank 1 Sensor 1</b> HO2 sensor heater drive circuit is shorted to power supply.	

Wiring Diagram

Refer to "FI System Wiring Diagram" (Page 1A-6).

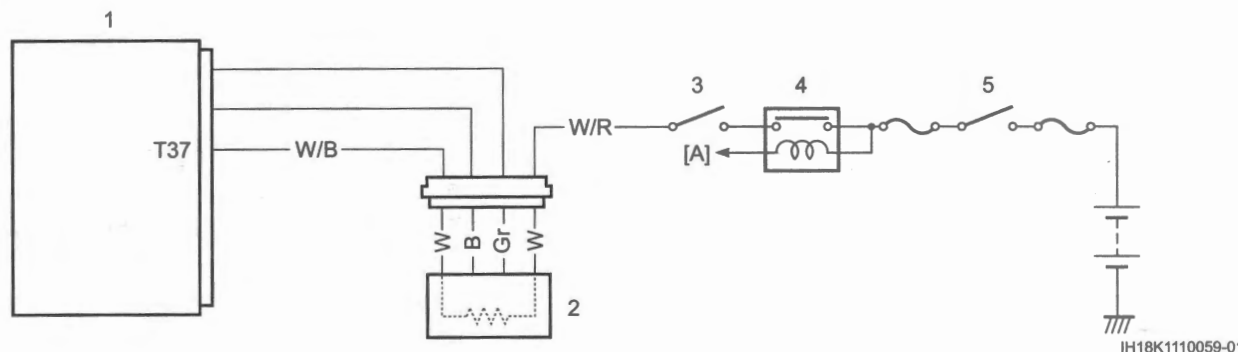

IH18K1110059-01

[A]: To side-stand switch	2. HO2 sensor	4. Side-stand relay
1. ECM	3. Engine stop switch	5. Ignition switch

Troubleshooting


Step 1

HO2 sensor heater power supply voltage check

- 1) Turn the ignition switch OFF.
- 2) Disconnect the HO2 sensor coupler. (Page 1C-9)
- 3) Check for proper terminal connection to the HO2 sensor coupler.
- 4) If connections are OK, turn ignition switch ON.

- 5) Measure the voltage between W/R wire and ground.

**HO2 sensor heater power supply voltage**  
**[Standard]: Battery voltage**

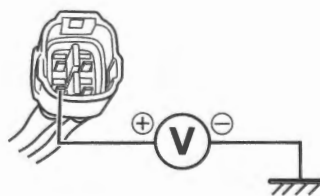

IE31J1110202-01

Is check result OK?


- Yes Go to Step 2.  
 No Repair or replace the W/R wire.

**Step 2**


**HO2 sensor heater drive circuit check**

- 1) Turn the ignition switch OFF.
- 2) Disconnect the ECM couplers. ⚡(Page 1C-4)
- 3) Check for proper terminal connection to the ECM couplers.
- 4) If connections are OK, check the following points.


- Resistance
  - W/B wire: less than 1 Ω

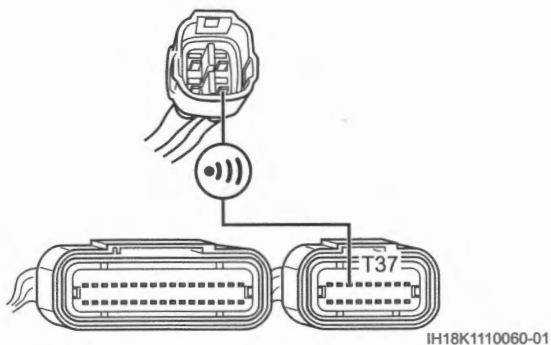


- Between W/B wire and ground: infinity

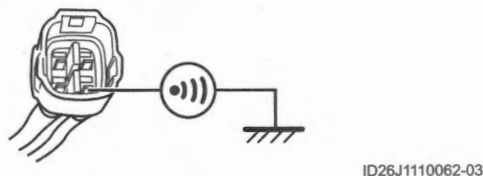

- Between W/B wire terminal and other terminal at HO2 sensor coupler: infinity

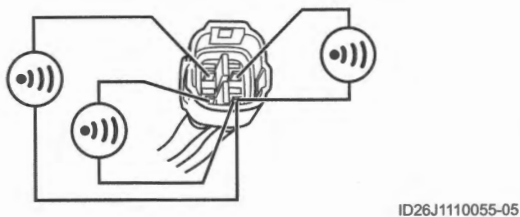

- Voltage
  - Turn the ignition switch ON.
  - W/B wire: approx. 0 V

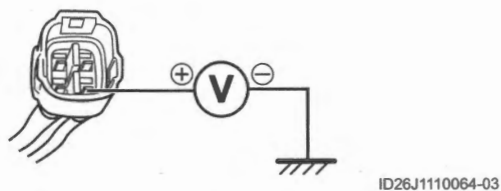

**Is check result OK?**

- Yes Go to Step 3.
- No Repair or replace the W/B wire.

**Step 3**

**HO2 sensor heater resistance check**

- 1) Turn the ignition switch OFF.
- 2) Measure the HO2 sensor resistance. Refer to "HO2 Sensor Heater Resistance" under "HO2 Sensor Inspection" in Section 1C (Page 1C-8).

**Is check result OK?**

- Yes Replace the ECM with a known good one, and inspect it again. ⚡(Page 1C-4)
- No Replace the HO2 sensor with a new one. ⚡(Page 1C-9)

DTC P0105 / P0106 / P0107 (C17)


BENH28K21104008

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
<b>P0105 (C17): IAP Sensor Circuit</b> The sensor output voltage is higher than 4.80 V.	<ul style="list-style-type: none"> <li>• Vacuum passage between throttle body and IAP sensor #1</li> <li>• IAP sensor #1</li> <li>• IAP sensor #1 circuit</li> <li>• ECM</li> </ul>
<b>P0106 (C17): IAP Sensor Circuit Range / Performance</b> The IAP sensor #1 vacuum hose has come off.	
<b>P0107 (C17): IAP Sensor Circuit Low</b> The sensor output voltage is lower than 0.10 V.	

Wiring Diagram

Refer to "FI System Wiring Diagram" (Page 1A-6).

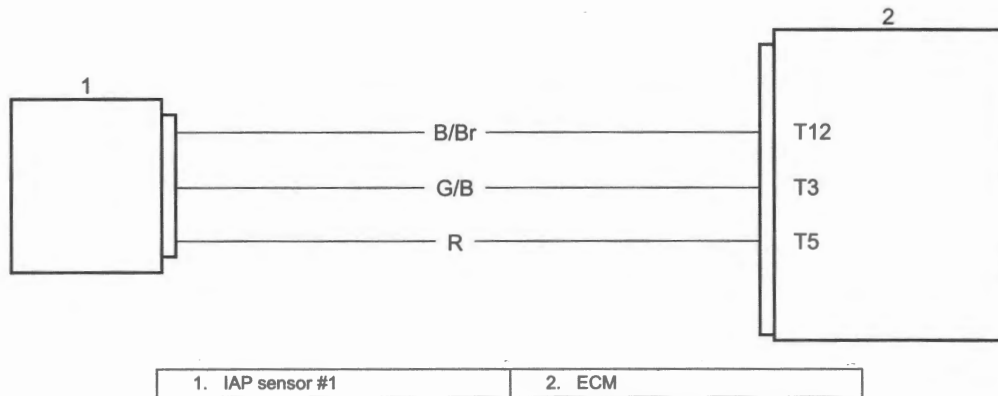

IH18K1110061-01

Troubleshooting

NOTE


When DTC P0106 (C17) and P1101 (C13) are detected together, check that each IAP sensor vacuum hose is connected correctly.

Step 1

IAP sensor power supply circuit check

- 1) Turn the ignition switch OFF.
- 2) Disconnect the IAP sensor #1 coupler. (Page 1C-5)
- 3) Check for proper terminal connection to the IAP sensor #1 coupler.
- 4) If connections are OK, turn the ignition switch ON.
- 5) Measure the voltage between the R wire and B/Br wire.

**IAP sensor #1 power supply voltage**  
**[Standard]: 4.75 – 5.25 V**

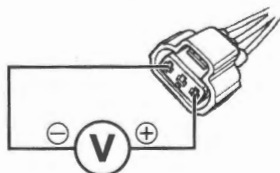

IH28K1110012-01


Is check result OK?

- Yes Go to Step 3.
- No Go to Step 2.

Step 2

IAP sensor ground circuit check

- 1) Measure the voltage between the R wire and ground.

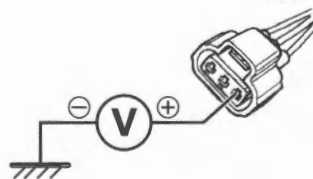

IH28K1110013-02


Is voltage same as Step 1?

- Yes Repair or replace the B/Br wire.
- No Repair or replace the R wire.


**Step 3**

**IAP sensor signal circuit check**


- 1) Turn the ignition switch OFF.
- 2) Disconnect the ECM couplers. (Page 1C-4)
- 3) Check for proper terminal connection to the ECM couplers.
- 4) If connections are OK, check the following points.
  - Resistance
    - G/B wire: less than 1 Ω

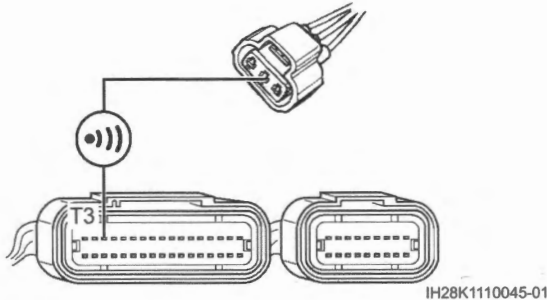


– Between G/B wire and ground: infinity

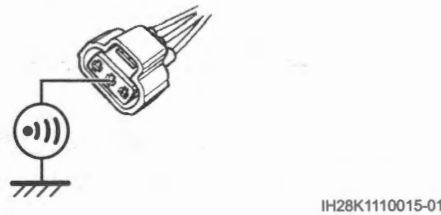

– G/B wire terminal and other terminal at IAP sensor #1 coupler: infinity

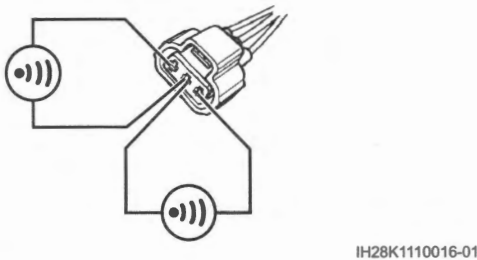

- Voltage
  - Turn the ignition switch ON.
  - G/B wire: approx. 0 V

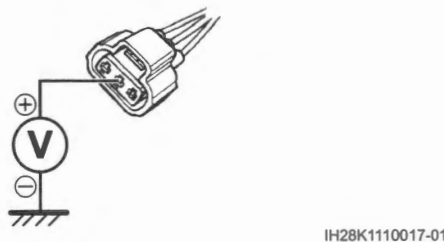

**Is check result OK?**

- Yes Go to Step 4.
- No Repair or replace the G/B wire.

**Step 4**

**IAP sensor output voltage at idle speed check**

- 1) Turn the ignition switch OFF.
- 2) Connect the ECM couplers and IAP sensor #1 coupler.
- 3) Measure the IAP sensor #1 output voltage at idle speed. Refer to "IAP Sensor Output Voltage at Idle Speed" under "IAP Sensor Inspection" in Section 1C (Page 1C-4).

**Is check result OK?**

- Yes Go to Step 5.
- No Check the vacuum hose for crack or damage.  
If vacuum hose is OK, replace the IAP sensor #1 with a new one. (Page 1C-5)

**Step 5**

**IAP sensor output voltage check**

- 1) Turn the ignition switch OFF.
- 2) Remove the IAP sensor #1. (Page 1C-5)
- 3) Measure the IAP sensor #1 output voltage. Refer to "IAP Sensor Output Voltage" under "IAP Sensor Inspection" in Section 1C (Page 1C-4).

**Is check result OK?**

- Yes Replace the ECM with a known good one, and inspect it again. (Page 1C-4)
- No Replace the IAP sensor #1 with a new one. (Page 1C-5)

DTC P0110 / P0112 (C21)


BENH28K21104009

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
<b>P0110 (C21): IAT Sensor 1 Circuit</b> The sensor output voltage is higher than 4.60 V.	<ul style="list-style-type: none"> <li>• IAT sensor</li> <li>• IAT sensor circuit</li> <li>• ECM</li> </ul>
<b>P0112 (C21): IAT Sensor 1 Circuit Low</b> The sensor output voltage is lower than 0.10 V.	

Wiring Diagram

Refer to "FI System Wiring Diagram" (Page 1A-6).

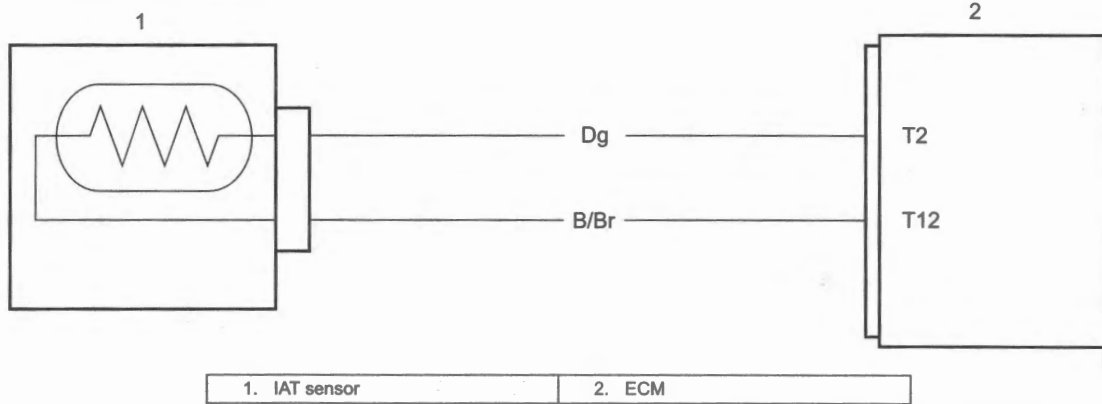

Troubleshooting


Step 1

IAT sensor input voltage check

- 1) Turn the ignition switch OFF.
- 2) Disconnect the IAT sensor coupler. (Page 1C-6)
- 3) Check for proper terminal connection to the IAT sensor coupler.
- 4) If connections are OK, turn the ignition switch ON.
- 5) Measure the voltage between the Dg wire and ground.

- 6) If OK, measure the voltage between the Dg wire and B/Br wire.

**IAT sensor power supply voltage**  
**[Standard]: 4.5 – 5.5 V**

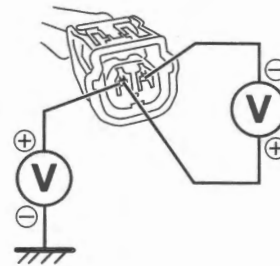

Is check result OK?

- Yes Go to Step 3.
- No Go to Step 2.




**Step 2**


**IAT sensor circuit check**

- 1) Turn the ignition switch OFF.
- 2) Disconnect the ECM couplers. (Page 1C-4)
- 3) Check for proper terminal connection to the ECM couplers.
- 4) If connections are OK, check the following points.


- Resistance
  - Dg wire and B/Br wire: less than 1 Ω

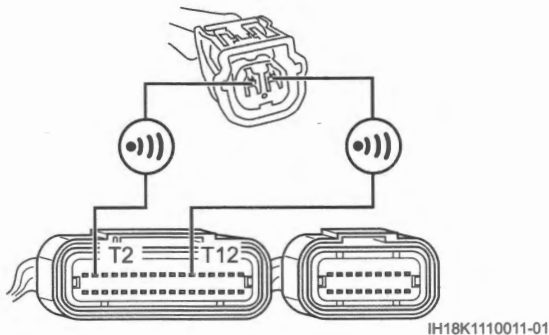


- Between Dg wire and ground: infinity
- Between B/Br wire and ground: infinity

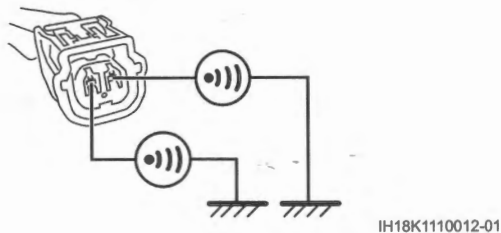

- Between Dg wire terminal and B/Br wire terminal at IAT sensor coupler: infinity

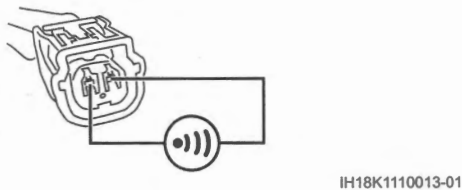

- Voltage
  - Turn the ignition switch ON.
  - Dg wire and B/Br wire: approx. 0 V

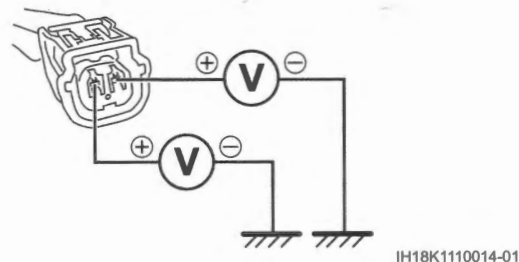

**Is check result OK?**

- Yes Replace the ECM with a known good one, and inspect it again. (Page 1C-4)
- No Repair or replace the defective wire harness.

**Step 3**

**IAT sensor resistance check**

- 1) Turn the ignition switch OFF.
- 2) Measure the IAT sensor resistance. (Page 1C-5)

**Is check result OK?**

- Yes Replace the ECM with a known good one, and inspect it again. (Page 1C-4)
- No Replace the IAT sensor with a new one. (Page 1C-6)

DTC P0115 / P0117 (C15)


BENH28K21104010

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
<b>P0115 (C15): ECT Sensor Circuit</b> The sensor output voltage is higher than 4.85 V.	<ul style="list-style-type: none"> <li>• ECT sensor</li> <li>• ECT sensor circuit</li> <li>• ECM</li> </ul>
<b>P0117 (C15): ECT Sensor Circuit Low</b> The sensor output voltage is lower than 0.10 V.	

Wiring Diagram

Refer to "FI System Wiring Diagram" (Page 1A-6).

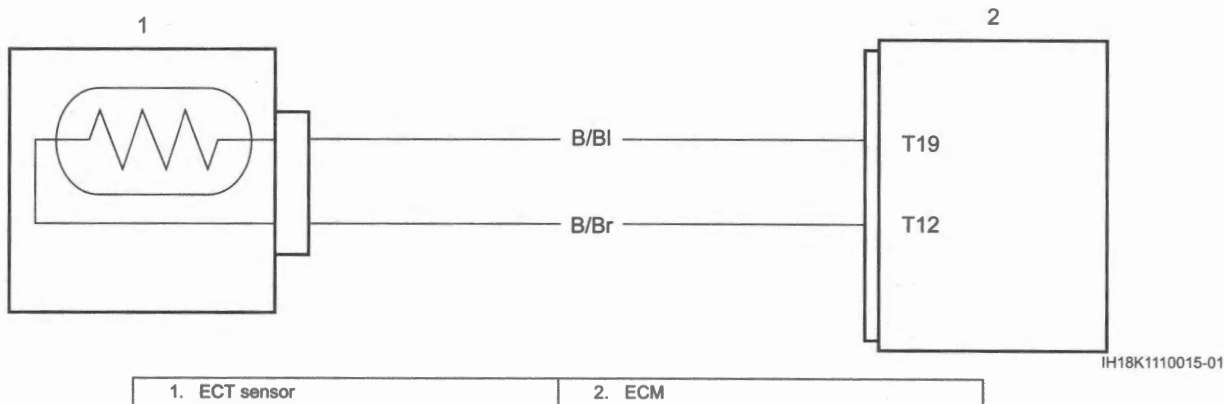

Troubleshooting


**Step 1**

**ECT sensor power supply voltage check**

- 1) Turn the ignition switch OFF.
- 2) Disconnect the ECT sensor coupler. (Page 1C-7)
- 3) Check for proper terminal connection to the ECT sensor coupler.
- 4) If connections are OK, turn the ignition switch ON.
- 5) Measure the voltage between the B/BI wire and ground.

- 6) If OK, measure the voltage between the B/BI wire and B/Br wire.

**ECT sensor power supply voltage**  
**[Standard]: 4.5 – 5.5 V**

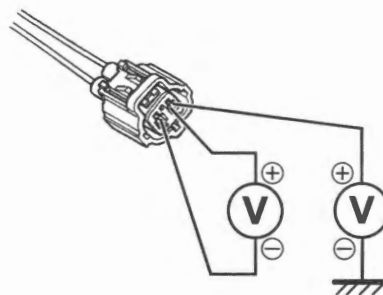


**Is check result OK?**

- Yes    Go to Step 3.
- No     Go to Step 2.

**Step 2**


**ECT sensor circuit check**

- 1) Turn the ignition switch OFF.
- 2) Disconnect the ECM couplers. ⚡(Page 1C-4)
- 3) Check for proper terminal connection to the ECM couplers.
- 4) If connections are OK, check the following points.
  - Resistance
    - B/BI wire and B/Br wire: less than 1 Ω

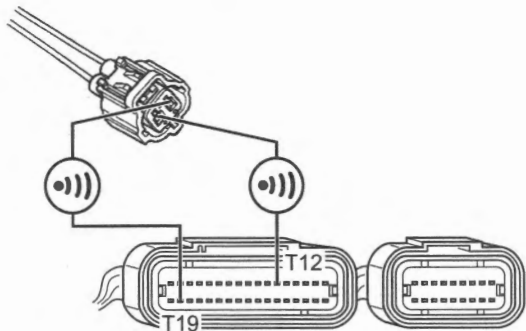


IH28K1110019-01

- Between B/BI wire and ground: infinity
- Between B/Br wire and ground: infinity

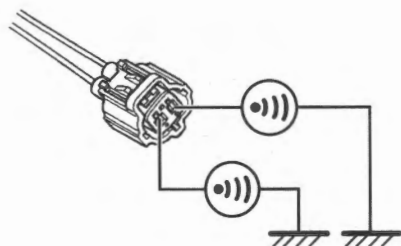


ID26J1110038-03

- Between B/BI wire terminal and B/Br wire terminal at ECT sensor coupler: infinity

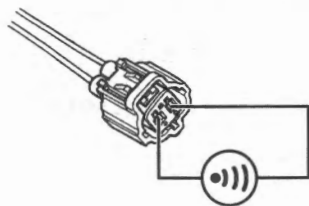

ID26J1110039-03

- Voltage
  - Turn the ignition switch ON.
  - B/BI wire and B/Br wire: approx. 0 V

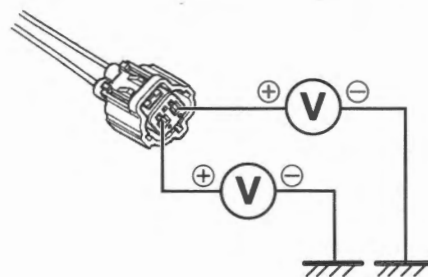

ID26J1110040-02

**Is check result OK?**

- Yes Replace the ECM with a known good one, and inspect it again. ⚡(Page 1C-4)
- No Repair or replace the defective wire harness.

**Step 3**

**ECT sensor resistance check**

- 1) Turn the ignition switch OFF.
- 2) Measure the ECT sensor resistance. ⚡(Page 1C-6)

**Is check result OK?**

- Yes Replace the ECM with a known good one, and inspect it again. ⚡(Page 1C-4)
- No Replace the ECT sensor with a new one. ⚡(Page 1C-7)

DTC P0120 / P0123 (C14)


BENH28K21104011

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
<b>P0120 (C14): TP Sensor / Switch "A" Circuit</b> The sensor output voltage is lower than 0.10 V.	<ul style="list-style-type: none"> <li>• TP sensor</li> <li>• TP sensor circuit</li> <li>• ECM</li> </ul>
<b>P0123 (C14): TP Sensor / Switch "A" Circuit High</b> The sensor output voltage is higher than 4.80 V.	

Wiring Diagram

Refer to "FI System Wiring Diagram" (Page 1A-6).

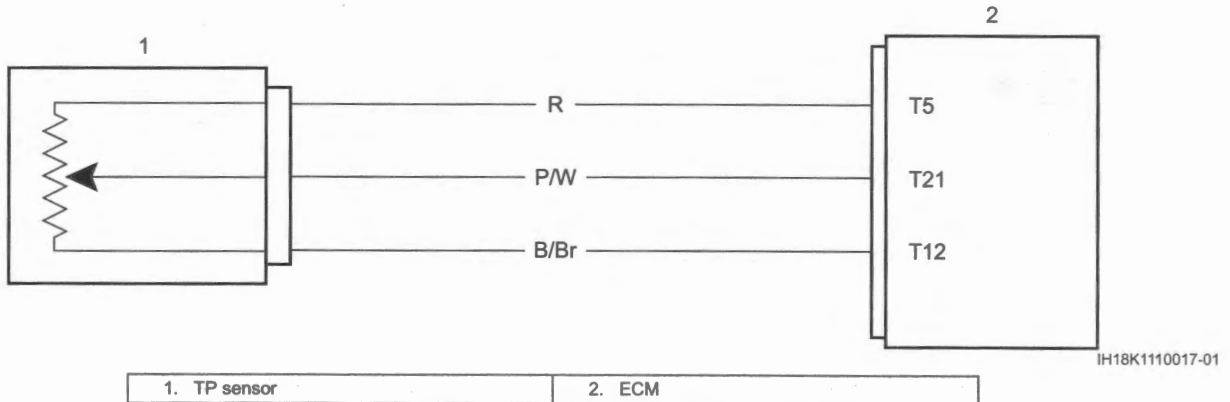


Troubleshooting

**Step 1**

**TP sensor power supply circuit check**

- 1) Turn the ignition switch OFF.
- 2) Disconnect the TP sensor coupler. (Page 1C-8)
- 3) Check for proper terminal connection to the TP sensor coupler.
- 4) If connections are OK, turn the ignition switch ON.
- 5) Measure the voltage between the R wire and B/Br wire.

**TP sensor power supply voltage**  
[Standard]: 4.5 – 5.5 V

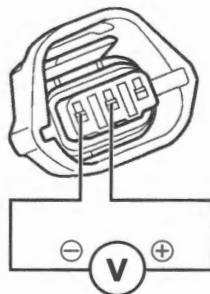

IE31J1110036-02


**Is check result OK?**

- Yes Go to Step 3.
- No Go to Step 2.

**Step 2**

**TP sensor ground circuit check**

- 1) Measure the voltage between the R wire and ground.

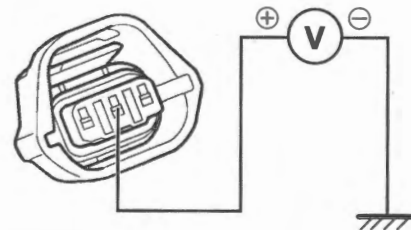

IE31J1110037-02


**Is voltage same as Step 1?**

- Yes Repair or replace the B/Br wire.
- No Repair or replace the R wire.


**Step 3**

**TP sensor signal circuit check**


- 1) Turn the ignition switch OFF.
- 2) Disconnect the ECM couplers. (Page 1C-4)
- 3) Check for proper terminal connection to the ECM couplers.
- 4) If connections are OK, check the following points.
  - Resistance
    - P/W wire: less than 1 Ω

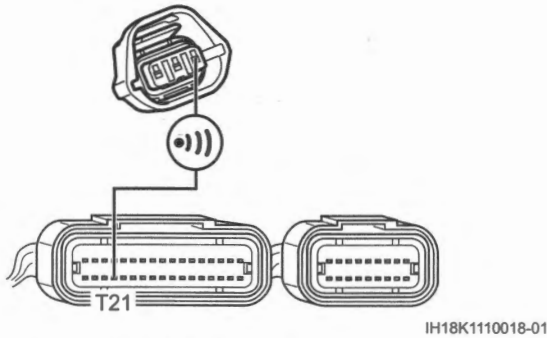


– Between P/W wire and ground: infinity

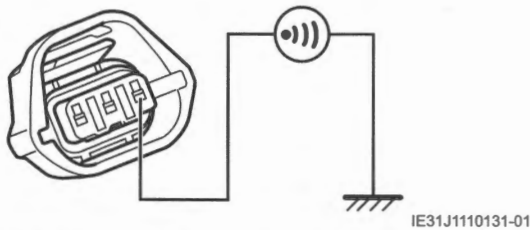

– Between P/W wire terminal and other terminal at TP sensor coupler: infinity

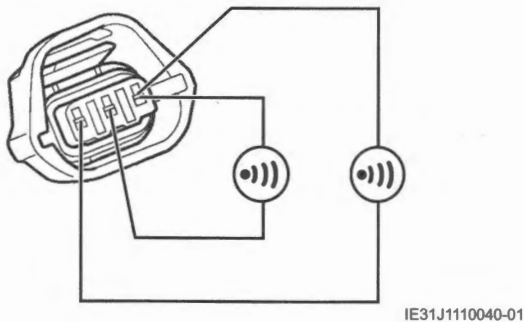

- Voltage
  - Turn the ignition switch ON.
  - P/W wire: approx. 0 V

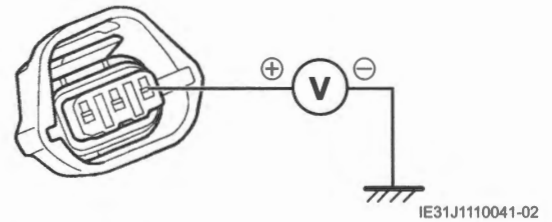

**Is check result OK?**

- Yes Go to Step 4.
- No Repair or replace the P/W wire.

**Step 4**

**TP sensor output voltage check**

- 1) Turn the ignition switch OFF.
- 2) Connect the ECM couplers.
- 3) Measure the TP sensor output voltage. (Page 1C-7)

**Is check result OK?**

- Yes Replace the ECM with a known good one, and inspect it again. (Page 1C-4)
- No Replace the TP sensor with a new one. (Page 1C-8)

DTC P0130 / P0131 / P0132 (C44)


BENH28K21104012

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
<b>P0130 (C44): O2 Sensor Circuit Bank 1 Sensor 1</b> HO2 sensor output voltage is within 2.1 V – 2.9 V.	<ul style="list-style-type: none"> <li>• HO2 sensor</li> <li>• HO2 sensor circuit</li> <li>• ECM</li> </ul>
<b>P0131 (C44): O2 Sensor Circuit Low Voltage Bank 1 Sensor 1</b> The sensor output voltage is lower than 0.10 V.	
<b>P0132 (C44): O2 Sensor Circuit High Voltage Bank 1 Sensor 1</b> The sensor output voltage is higher than 3.13 V.	

Wiring Diagram

Refer to "FI System Wiring Diagram" (Page 1A-6).

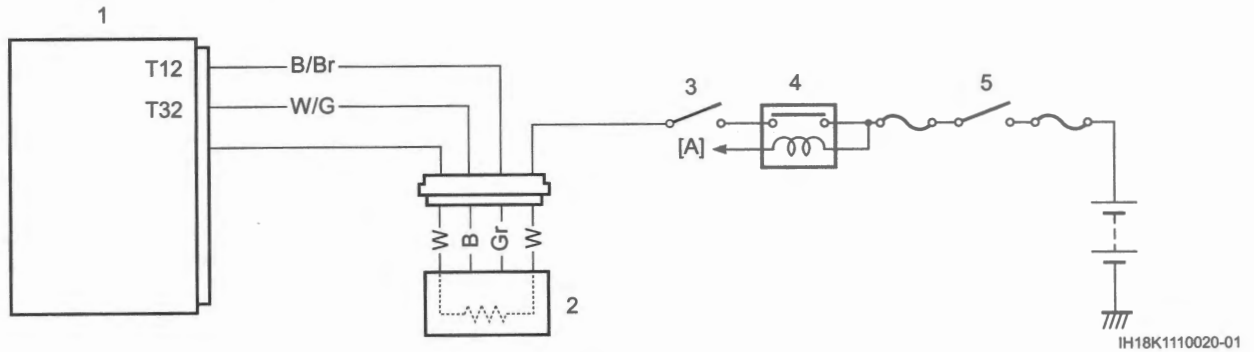

IH18K1110020-01


[A]: To side-stand switch	2. HO2 sensor	4. Side-stand relay
1. ECM	3. Engine stop switch	5. Ignition switch

**Troubleshooting**

**Step 1**


**HO2 sensor circuit check**

- 1) Turn the ignition switch OFF.
- 2) Disconnect the HO2 sensor coupler and ECM couplers.
  - HO2 sensor: (Page 1C-9)
  - ECM: (Page 1C-4)
- 3) Check for proper terminal connection to the HO2 sensor coupler and ECM couplers.
- 4) If connections are OK, check the following points.
  - Resistance
    - W/G wire and B/Br wire: less than 1 Ω

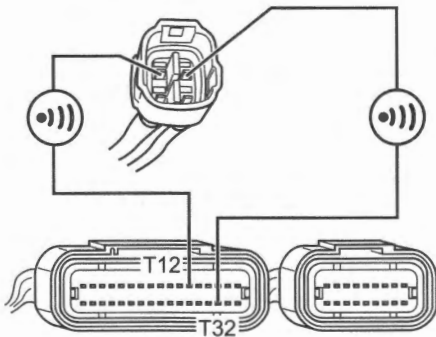


IH18K1110019-01

- Between W/G wire and ground: infinity
- Between B/Br wire and ground: infinity

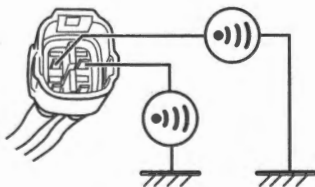


ID26J1110054-03

- Between W/G wire terminal and other terminal at HO2 sensor coupler: infinity

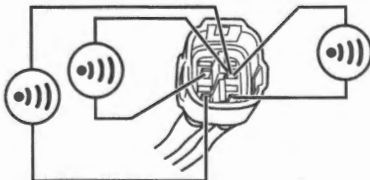


ID26J1110208-01

- Between B/Br wire terminal and other terminal at HO2 sensor coupler: infinity

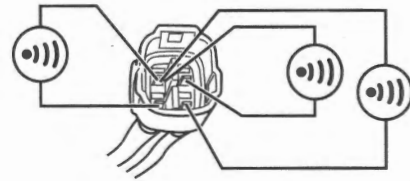

ID26J1110209-01

- Voltage
  - Turn the ignition switch ON.
  - W/G wire and B/Br wire: approx. 0 V

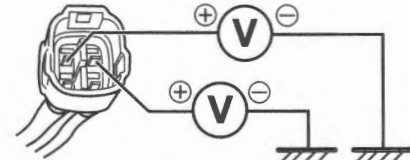

ID26J1110057-02

**Is check result OK?**

- Yes Go to Step 2.
- No Repair or replace the defective wire harness.

**Step 2**

**HO2 sensor output voltage check**

- 1) Turn the ignition switch OFF.
- 2) Connect the ECM couplers and HO2 sensor coupler.
- 3) Measure the HO2 sensor output voltage. Refer to "HO2 Sensor Output Voltage" under "HO2 Sensor Inspection" in Section 1C (Page 1C-8).

**Is check result OK?**

- Yes Replace the ECM with a known good one, and inspect it again. (Page 1C-4)
- No Replace the HO2 sensor with a new one. (Page 1C-9)

DTC P0170 (C45)


BENH28K21104013

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
<p><b>P0170 (C45): Fuel Trim Bank 1</b>                      The fuel trim correction is out of its threshold value.</p>	<ul style="list-style-type: none"> <li>• Fuel system</li> <li>• Air intake system</li> <li>• Exhaust system</li> <li>• Emission control system</li> <li>• HO2 sensor</li> <li>• HO2 sensor circuit</li> <li>• ECM</li> </ul>

**Wiring Diagram**

Refer to "FI System Wiring Diagram" (Page 1A-6).

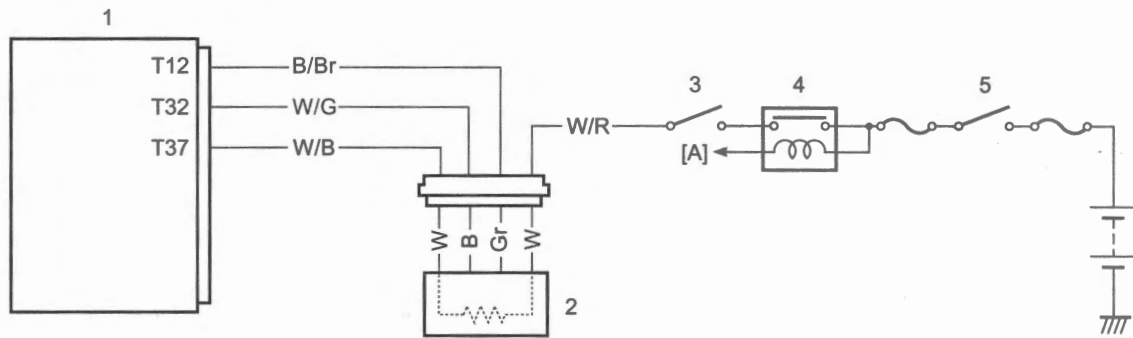

IH18K1110021-01

[A]: To side-stand switch	2. HO2 sensor	4. Side-stand relay
1. ECM	3. Engine stop switch	5. Ignition switch



**Troubleshooting****Step 1****Fuel system and emission control system check**

- 1) Check the following points related to fuel and emission control systems.
  - Fuel pressure: ☞(Page 1G-6)
  - Fuel injector circuit: Refer to "Wiring Diagram" under "DTC P0201 (C32)" (Page 1A-35) and "DTC P0202 (C33)" (Page 1A-37).
  - Fuel injector: ☞(Page 1G-21)
  - IAP sensor: ☞(Page 1C-4)
  - PAIR system (if equipped): ☞(Page 1B-11)
  - EVAP control system (if equipped): ☞(Page 1B-13)
  - PCV hose: ☞(Page 1B-12)

**Is check result OK?**

- Yes    Go to Step 2.
- No     Repair or replace defective parts.

**Step 2****Exhaust system and air intake system check**

- 1) Check exhaust system and air intake system for clogging and leakage.
  - Exhaust system: ☞(Page 1K-3)
  - Air intake system: Refer to "Step 3" under "DTC P0506 / P0507 (C65)" (Page 1A-53).

**Is check result OK?**

- Yes    Go to Step 3.
- No     Repair or replace defective part.

**Step 3****HO2 sensor circuit check**

- 1) Check HO2 sensor circuit. Refer to "Step 1" under "DTC P0130 / P0131 / P0132 (C44)" (Page 1A-31).

**Is check result OK?**

- Yes    Go to Step 4.
- No     Repair or replace defective wire harness.

**Step 4****DTC recheck**

- 1) Replace the HO2 sensor. ☞(Page 1C-9)
- 2) Perform "DTC Check" (Page 1A-15) and check DTC.

**Is DTC P0170 (C45) still detected?**

- Yes    Replace the ECM with a known good one, and inspect it again. ☞(Page 1C-4)
- No     End.
-

DTC P0201 (C32)


BENH28K21104014

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
<p><b>P0201 (C32): Injector Circuit / Open – Cylinder 1</b>                      Fuel injector #1 signal is interrupted by 8 times or more continuity although CKP signal is detected.</p>	<ul style="list-style-type: none"> <li>Fuel injector #1</li> <li>Fuel injector #1 circuit</li> <li>ECM</li> </ul>

Wiring Diagram

Refer to "FI System Wiring Diagram" (Page 1A-6).

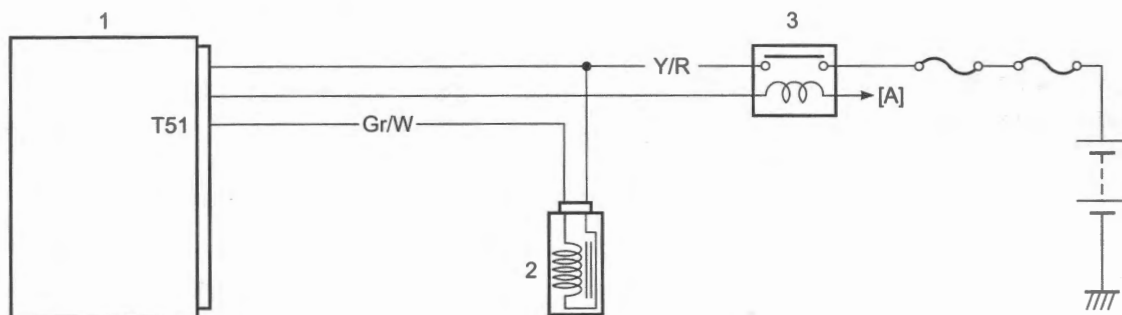

IH18K1110022-01

[A]: To engine stop switch	2. Fuel injector #1
1. ECM	3. FP relay

Troubleshooting

**Step 1**

**Fuel injector power supply voltage check**


- 1) Turn the ignition switch OFF.
- 2) Disconnect the fuel injector #1 coupler. Refer to "Fuel Injector On-Vehicle Inspection" in Section 1G (Page 1G-19).
- 3) Check for proper terminal connection to the fuel injector #1 coupler.
- 4) If connections are OK, turn the ignition switch ON.

- 5) Measure the voltage between Y/R wire and ground.

**NOTE**

**Fuel injector power supply voltage can be detected only for 3 seconds after ignition switch is turned ON.**

**Fuel injector #1 power supply voltage**  
**[Standard]: Battery voltage**

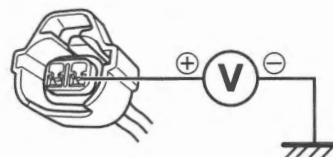

IF04K1110023-01


**Is check result OK?**

- Yes Go to Step 2.
- No Repair or replace the Y/R wire.


**Step 2**

**Fuel injector drive circuit check**

- 1) Turn the ignition switch OFF.
- 2) Disconnect the ECM couplers. (Page 1C-4)
- 3) Check for proper terminal connection to the ECM couplers.
- 4) If connections are OK, check the following points.
  - Resistance
    - Gr/W wire: less than 1 Ω

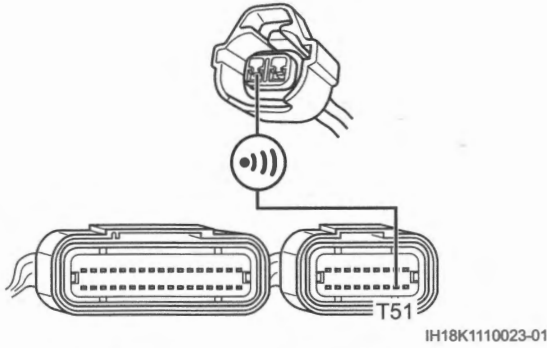


– Between Gr/W wire and ground: infinity

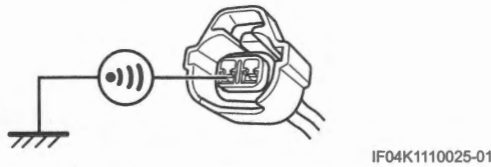

– Between Gr/W wire terminal and Y/R wire terminal at fuel injector #1 coupler: infinity



- Voltage
  - Turn the ignition switch ON.
  - Gr/W wire: approx. 0 V

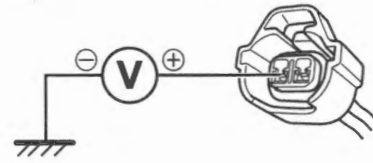

**Is check result OK?**

- Yes Go to Step 3.
- No Repair or replace the Gr/W wire.

**Step 3**

**Fuel injector resistance check**

- 1) Turn the ignition switch OFF.
- 2) Measure the fuel injector resistance. (Page 1G-19)

**Is check result OK?**

- Yes Replace the ECM with a known good one, and inspect it again. (Page 1C-4)
- No Replace the fuel injector #1 with a new one. (Page 1G-20)

DTC P0202 (C33)


BENH28K21104015

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
<b>P0202 (C33): Injector Circuit / Open – Cylinder 2</b> Fuel injector #2 signal is interrupted by 8 times or more continuity although CKP signal is detected.	<ul style="list-style-type: none"> <li>Fuel injector #2</li> <li>Fuel injector #2 circuit</li> <li>ECM</li> </ul>

Wiring Diagram

Refer to "FI System Wiring Diagram" (Page 1A-6).

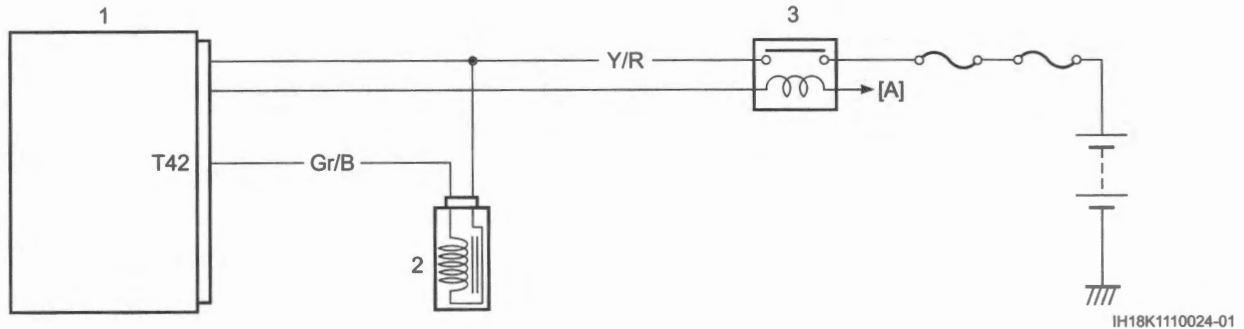

IH18K1110024-01

[A]: To engine stop switch	2. Fuel injector #2
1. ECM	3. FP relay

Troubleshooting

Step 1

Fuel injector power supply voltage check


- Turn the ignition switch OFF.
- Disconnect the fuel injector #2 coupler. Refer to "Fuel Injector On-Vehicle Inspection" in Section 1G (Page 1G-19).
- Check for proper terminal connection to the fuel injector #2 coupler.
- If connections are OK, turn the ignition switch ON.

- Measure the voltage between Y/R wire and ground.

NOTE

**Fuel injector power supply voltage can be detected only for 3 seconds after ignition switch is turned ON.**

**Fuel injector #2 power supply voltage**  
**[Standard]: Battery voltage**

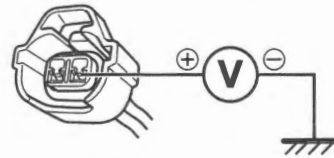

IF04K1110029-01


Is check result OK?

- Yes    Go to Step 2.
- No     Repair or replace the Y/R wire.


**Step 2**

**Fuel injector drive circuit check**


- 1) Turn the ignition switch OFF.
- 2) Disconnect the ECM couplers. (Page 1C-4)
- 3) Check for proper terminal connection to the ECM couplers.
- 4) If connections are OK, check the following points.
  - Resistance
    - Gr/B wire: less than 1 Ω

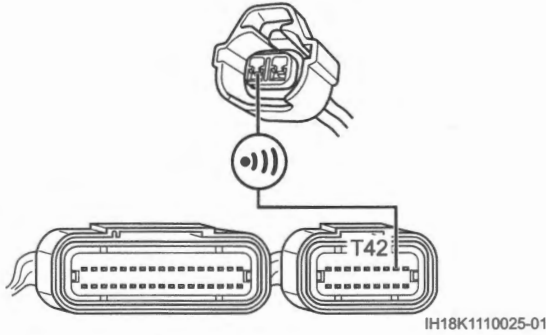


– Between Gr/B wire and ground: infinity

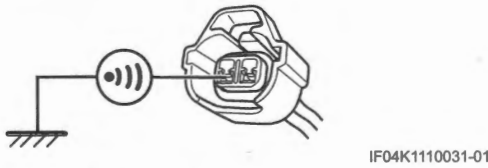

– Between Gr/B wire terminal and Y/R wire terminal at fuel injector #2 coupler: infinity

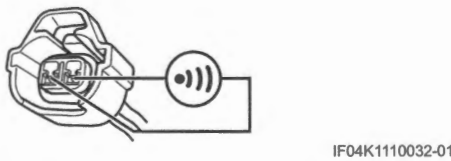

- Voltage
  - Turn the ignition switch ON.
  - Gr/B wire: approx. 0 V

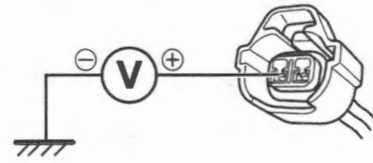

**Is check result OK?**

- Yes Go to Step 3.
- No Repair or replace the Gr/B wire.

**Step 3**

**Fuel injector resistance check**

- 1) Turn the ignition switch OFF.
- 2) Measure the fuel injector resistance. (Page 1G-19)

**Is check result OK?**

- Yes Replace the ECM with a known good one, and inspect it again. (Page 1C-4)
- No Replace the fuel injector #2 with a new one. (Page 1G-20)

DTC P0220 / P0222 (C29)


BENH28K21104016

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
<b>P0220 (C29): TP Sensor / Switch "B" Circuit</b> The sensor output voltage is higher than 4.83 V.	<ul style="list-style-type: none"> <li>• STP sensor</li> <li>• STP sensor circuit</li> </ul>
<b>P0222 (C29): TP Sensor / Switch "B" Circuit Low</b> The sensor output voltage is lower than 0.10 V.	<ul style="list-style-type: none"> <li>• ECM</li> </ul>

Wiring Diagram

Refer to "FI System Wiring Diagram" (Page 1A-6).

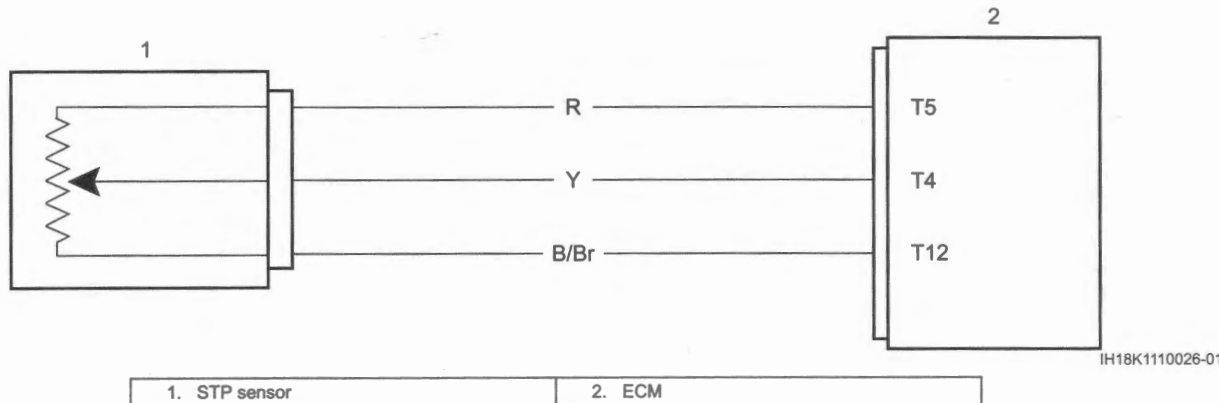

Troubleshooting

**Step 1**

**STP sensor power supply circuit check**

- 1) Turn the ignition switch OFF.
- 2) Disconnect the STP sensor coupler. (Page 1C-14)
- 3) Check for proper terminal connection to the STP sensor coupler.
- 4) If connections are OK, turn the ignition switch ON.
- 5) Measure the voltage between the R wire and B/Br wire.

**STP sensor power supply voltage**

[Standard]: 4.5 – 5.5 V



IE31J1110128-01


**Is check result OK?**

- Yes Go to Step 3.
- No Go to Step 2.

**Step 2**

**STP sensor ground circuit check**

- 1) Measure the voltage between the R wire and ground.

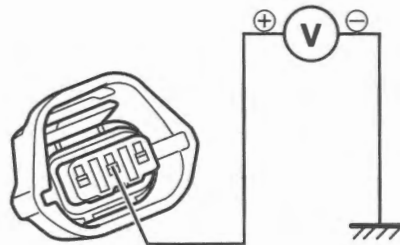

IE31J1110129-02


**Is voltage same as Step 1?**

- Yes Repair or replace the B/Br wire.
- No Repair or replace the R wire.


**Step 3**

**STP sensor signal circuit check**


- 1) Turn the ignition switch OFF.
- 2) Disconnect the ECM couplers. ⌚(Page 1C-4)
- 3) Check for proper terminal connection to the ECM couplers.
- 4) If connections are OK, check the following points.
  - Resistance
    - Y wire: less than 1 Ω

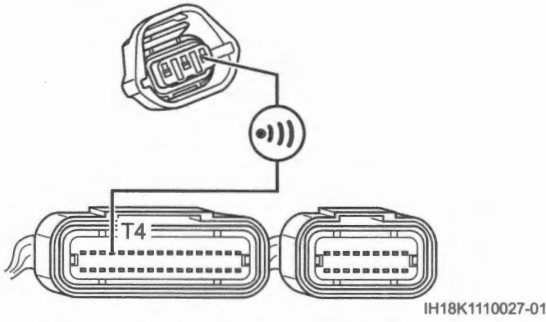


– Between Y wire and ground: infinity

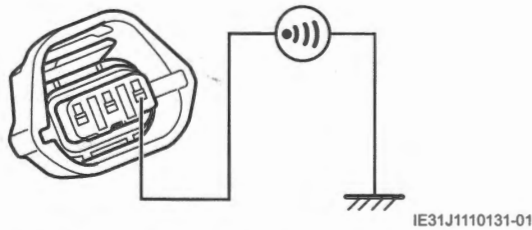

– Between Y wire terminal and other terminal at STP sensor coupler: infinity

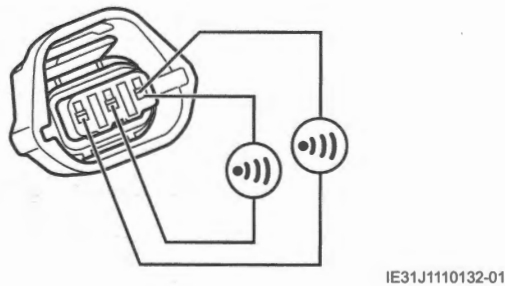

- Voltage
  - Turn the ignition switch ON.
  - Y wire: approx. 0 V

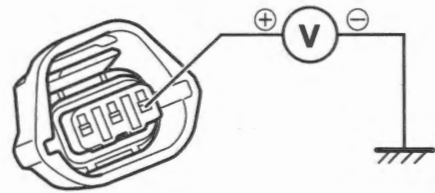

**Is check result OK?**

- Yes Go to Step 4.
- No Repair or replace the Y wire.

**Step 4**

**STP sensor output voltage check**

- 1) Turn the ignition switch OFF.
- 2) Connect the ECM couplers.
- 3) Measure the STP sensor output voltage. ⌚(Page 1C-13)

**Is check result OK?**

- Yes Replace the ECM with a known good one, and inspect it again. ⌚(Page 1C-4)
- No Replace the STP sensor with a new one. ⌚(Page 1C-14)

DTC P0230 / P0231 (C41)


BENH28K21104017

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
<b>P0230 (C41): FP Primary Circuit</b> No voltage is detected, although the FP relay is ON.	<ul style="list-style-type: none"> <li>Fuel pump relay</li> <li>Fuel pump relay circuit</li> <li>ECM</li> </ul>
<b>P0231 (C41): FP Secondary Circuit Low</b> Voltage is applied to fuel pump even though the FP relay is OFF.	

Wiring Diagram

Refer to "FI System Wiring Diagram" (Page 1A-6).

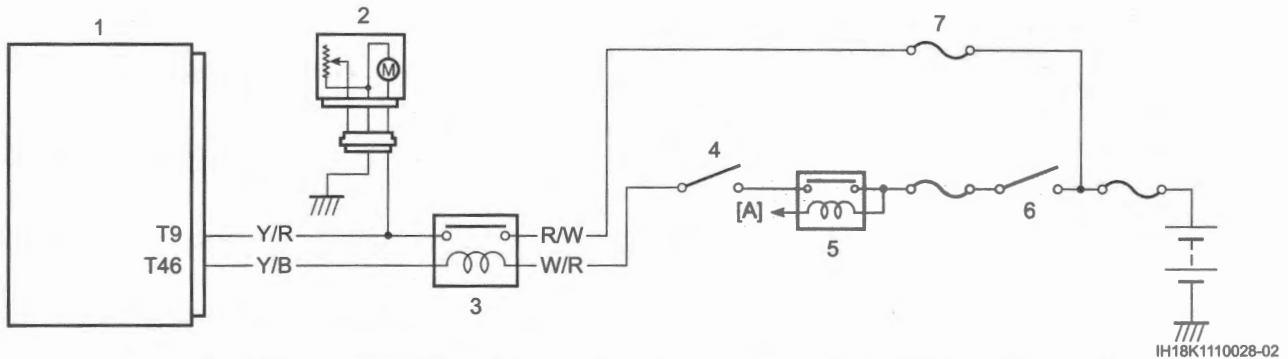

IH18K1110028-02

[A]: To side-stand switch	3. FP relay	6. Ignition switch
1. ECM	4. Engine stop switch	7. Fuel fuse
2. Fuel pump	5. Side-stand relay	

Troubleshooting

Step 1

FP relay power supply voltage check


- Turn the ignition switch OFF.
- Remove the FP relay. (Page 1G-19)
- Check for proper terminal connection to the FP relay terminal.
- If connections are OK, turn the ignition switch ON.
- Measure the voltage between W/R wire and ground.

- If OK, measure the voltage between R/W wire and ground.

NOTE

FP relay power supply voltage can be detected only for 3 seconds after ignition switch is turned ON.

FP relay power supply voltage  
 [Standard]: Battery voltage

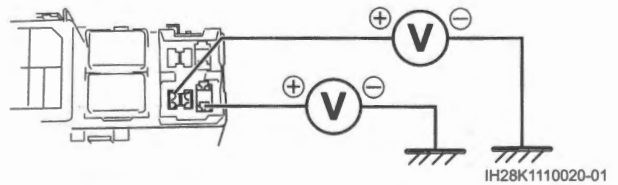

IH28K1110020-01

Is check result OK?

- Yes Go to Step 2.
- No Repair or replace the defective wire harness.



**Step 2**

**FP relay check**

1) Check the FP relay. (Page 1G-19)

**Is check result OK?**


Yes Go to Step 3.

No Replace the FP relay with a new one.  
(Page 1G-19)

**Step 3**


**FP relay drive circuit check**

- 1) Turn the ignition switch OFF.
- 2) Disconnect the fuel pump coupler and ECM couplers.
  - Fuel pump: (Page 1G-10)
  - ECM: (Page 1C-4)
- 3) Check for proper terminal connection to the ECM couplers.
- 4) If connections are OK, check the following points.
  - Resistance
    - Y/R wire and Y/B wire: less than 1 Ω

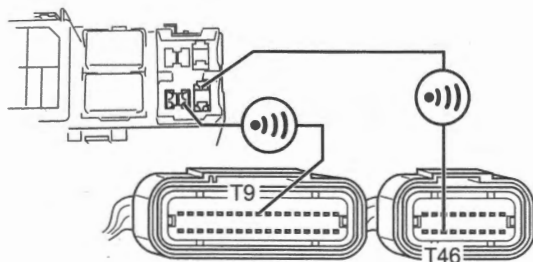


IH28K1110021-01

- Between Y/R wire and ground: infinity
- Between Y/B wire and ground: infinity

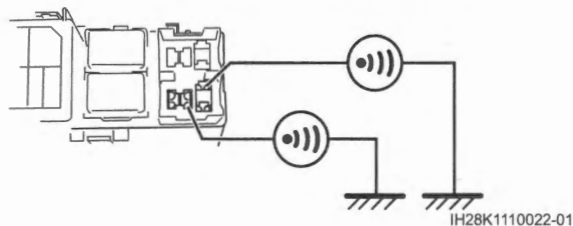

- Voltage
  - Turn the ignition switch ON.
  - Y/R wire and Y/B wire: approx. 0 V

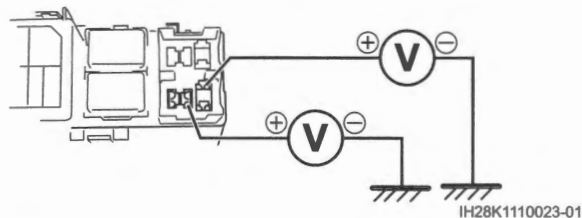

**Is check result OK?**

Yes Replace the ECM with a known good one, and inspect it again. (Page 1C-4)

No Repair or replace the defective wire harness.

DTC P0335 (C12)


BENH28K21104018

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
<p><b>P0335 (C12): CKP Sensor "A" Circuit</b>                      The signal does not reach ECM for 2 sec. or more, after receiving the starter signal.</p>	<ul style="list-style-type: none"> <li>• Metal particles or foreign material being stuck on the CKP sensor and rotor tip</li> <li>• CKP sensor</li> <li>• CKP sensor circuit</li> <li>• ECM</li> </ul>

Wiring Diagram

Refer to "FI System Wiring Diagram" (Page 1A-6).

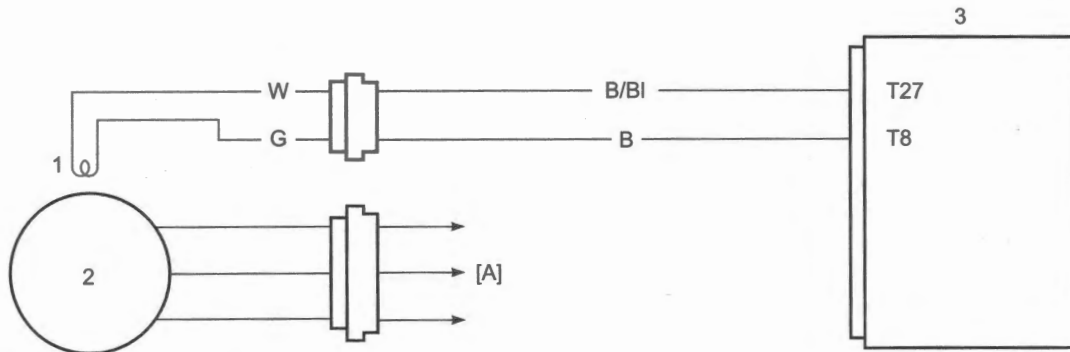

IH28K1110024-01

[A]: To regulator/rectifier	2. Generator
1. CKP sensor	3. ECM

Troubleshooting


Step 1

CKP sensor signal circuit check

- 1) Turn the ignition switch OFF.
- 2) Disconnect the CKP sensor coupler and ECM couplers.
  - CKP sensor: (Page 1C-11)
  - ECM: (Page 1C-4)
- 3) Check for proper terminal connection to the CKP sensor coupler and ECM couplers.


- 4) If connections are OK, check the following points.

- Resistance
  - B wire and B/BI wire: less than 1 Ω

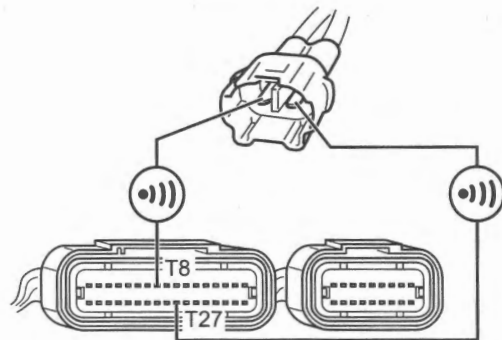


IH28K1110025-01

- Between B wire and ground: infinity
- Between B/BI wire and ground: infinity

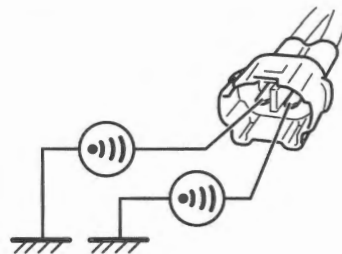


IH28K1110026-01

- Between the B wire terminal and B/BI wire terminal at CKP sensor coupler: infinity

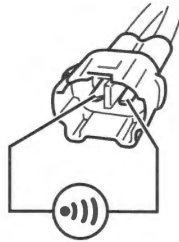

IH28K1110027-01

- Voltage
  - Turn the ignition switch ON.
  - B wire and B/BI wire: approx. 0 V

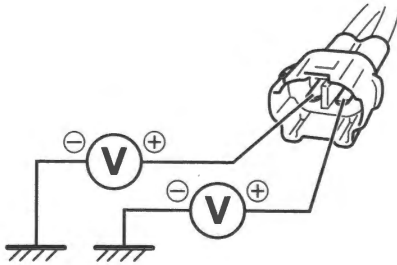

IH28K1110028-01

**Is check result OK?**

- Yes Go to Step 2.
- No Repair or replace the defective wire harness.

**Step 2**

**CKP sensor resistance check**

- 1) Turn the ignition switch OFF.
- 2) Measure the CKP sensor resistance. Refer to "CKP Sensor Resistance" under "CKP Sensor Inspection" in Section 1C (Page 1C-10).

**Is check result OK?**

- Yes Go to Step 3.
- No Replace the CKP sensor with a new one. (Page 1C-11)

**Step 3**

**CKP sensor peak voltage check**

- 1) Connect the ECM couplers.
- 2) Measure the CKP sensor peak voltage with the peak volt adapter. Refer to "CKP Sensor Peak Voltage" under "CKP Sensor Inspection" in Section 1C (Page 1C-10).


**Is check result OK?**

- Yes Replace the ECM with a known good one, and inspect it again. (Page 1C-4)
- No Go to Step 4.

**Step 4**

**CKP sensor and generator rotor check**

- 1) Turn the ignition switch OFF.
- 2) Remove the generator cover. (Page 1J-5)
- 3) Check that end face of the CKP sensor (1) and signal generator rotor teeth (2) are free from any metal particles and damage.

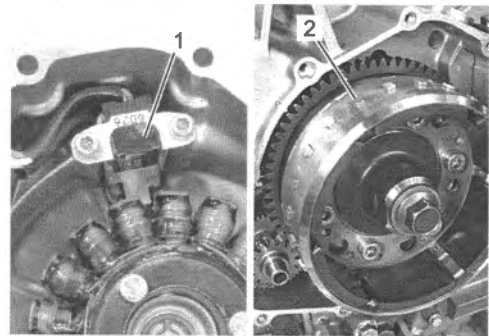

IH28K1110029-01

**Is check result OK?**

- Yes Replace the ECM with a known good one, and inspect it again. (Page 1C-4)
- No Clean or replace defective parts.

**DTC P0351 (C24)**

BENH28K21104019

**DTC Detecting Condition and Trouble Area**

DTC detecting condition	Trouble area
<b>P0351 (C24): Ignition Coil "A" Primary / Secondary Circuit</b> Ignition coil #1 signal is interrupted by 8 times or more continuity although CKP signal is detected.	Refer to "No Spark or Poor Spark" in Section 1H (Page 1H-4).

**DTC P0352 (C25)**

BENH28K21104020

**DTC Detecting Condition and Trouble Area**

DTC detecting condition	Trouble area
<b>P0352 (C25): Ignition Coil "B" Primary / Secondary Circuit</b> Ignition coil #2 signal is interrupted by 8 times or more continuity although CKP signal is detected.	Refer to "No Spark or Poor Spark" in Section 1H (Page 1H-4).

**DTC P0418 / P2258 (C49) [If Equipped]**


BENH28K21104021

**DTC Detecting Condition and Trouble Area**

DTC detecting condition	Trouble area
<b>P0418 (C49): PAIR System Control "A" Circuit</b> No voltage is input to ECM even though the PAIR control solenoid valve is OFF.	<ul style="list-style-type: none"> <li>• PAIR control solenoid valve</li> <li>• PAIR control solenoid valve circuit</li> <li>• ECM</li> </ul>
<b>P2258 (C49): PAIR System Control "A" Circuit High</b> Voltage is input to ECM even though the PAIR control solenoid valve is ON.	

**Wiring Diagram**

Refer to "FI System Wiring Diagram" (Page 1A-6).

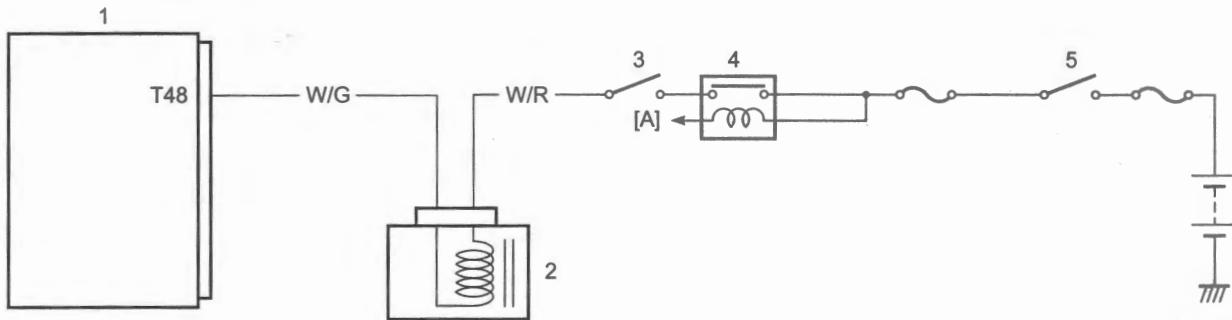

IH18K1110033-01

[A]: To side-stand switch	2. PAIR control solenoid valve	4. Side-stand relay
1. ECM	3. Engine stop switch	5. Ignition switch

**Troubleshooting**


**Step 1**

**PAIR control solenoid valve power supply voltage check.**

- 1) Turn the ignition switch OFF.
- 2) Disconnect the PAIR control solenoid valve coupler. ↗(Page 1B-10)
- 3) Check for proper terminal connection to the PAIR control solenoid valve coupler.
- 4) If connections are OK, turn the ignition switch ON.
- 5) Measure the voltage between the W/R wire and ground.

**PAIR control solenoid valve power supply voltage**

**[Standard]: Battery voltage**

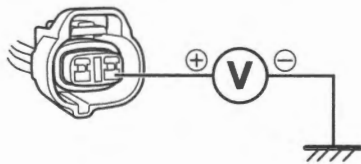

IF04K1110099-02


**Is check result OK?**

- Yes Go to Step 2.
- No Repair or replace the W/R wire.

**Step 2**


**PAIR control solenoid valve driver circuit check**

- 1) Turn the ignition switch OFF.
- 2) Disconnect the ECM couplers. ↗(Page 1C-4)
- 3) Check for proper terminal connection to the ECM couplers.
- 4) If connections are OK, check the following points.
  - Resistance
    - W/G wire: less than 1 Ω

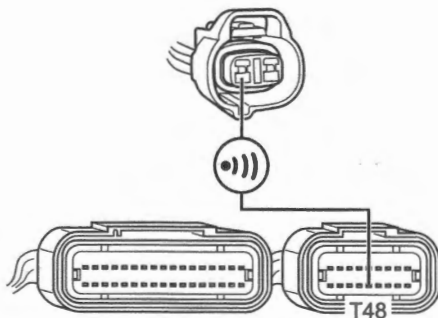


IH18K1110034-01

- Between W/G wire and ground: infinity

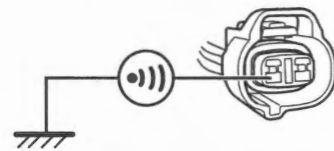


IF04K1110101-01

- Between W/G wire terminal and W/R wire terminal at PAIR control solenoid valve coupler: infinity

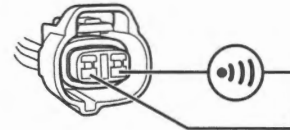

IF04K1110103-01

- Voltage
  - Turn the ignition switch ON.
  - W/G wire: approx. 0 V

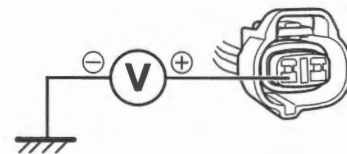

IF04K1110104-01

**Is check result OK?**

- Yes Go to Step 3.
- No Repair or replace the W/G wire.

**Step 3**

**PAIR control solenoid valve resistance check**

- 1) Turn the ignition switch OFF.
- 2) Measure the PAIR control solenoid valve resistance. Refer to "PAIR Control Solenoid Valve" under "PAIR System Inspection (If Equipped)" in Section 1B (Page 1B-11).

**Is check result OK?**

- Yes Replace the ECM with a known good one, and inspect it again. ↗(Page 1C-4)
- No Replace the PAIR control solenoid valve with a new one. ↗(Page 1B-10)

DTC P0443 / P0449 (C62) [If Equipped]


BENH28K21104022

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
<b>P0443 (C62): EVAP System Purge Control Valve Circuit</b> No voltage is input to ECM even though the EVAP system purge control solenoid valve is OFF.	<ul style="list-style-type: none"> <li>• EVAP system purge control solenoid valve</li> <li>• EVAP system purge control solenoid valve circuit</li> <li>• ECM</li> </ul>
<b>P0449 (C62): EVAP System Vent Valve / Solenoid Circuit</b> Voltage is input to ECM even though the EVAP system purge control solenoid valve is ON.	

Wiring Diagram

Refer to "FI System Wiring Diagram" (Page 1A-6).

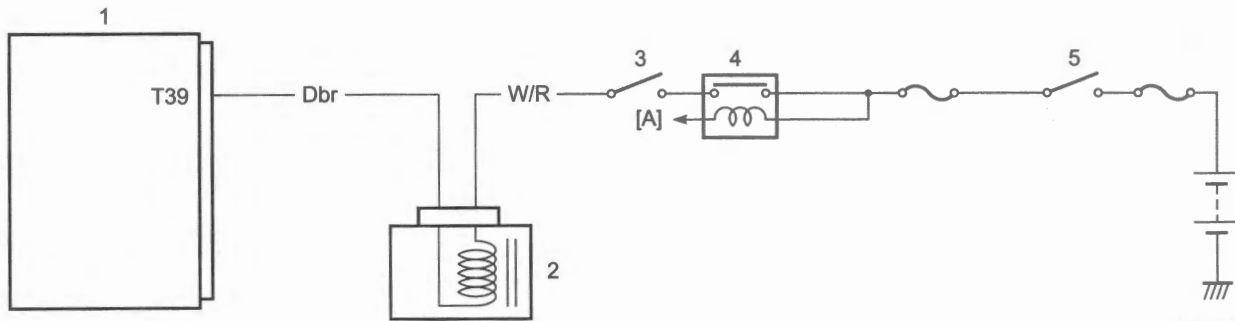

IH18K1110035-01

[A]: To side-stand switch	2. EVAP system purge control solenoid valve	4. Side-stand relay
1. ECM	3. Engine stop switch	5. Ignition switch

Troubleshooting


Step 1

**EVAP system purge control solenoid valve power supply voltage check**

- 1) Turn the ignition switch OFF.
- 2) Disconnect the EVAP system purge control solenoid valve coupler. (Page 1B-12)
- 3) Check for proper terminal connection to the EVAP system purge control solenoid valve coupler.
- 4) If connections are OK, turn the ignition switch ON.

- 5) Measure the voltage between the W/R wire and ground.

**EVAP system purge control solenoid valve power supply voltage**  
**[Standard]: Battery voltage**

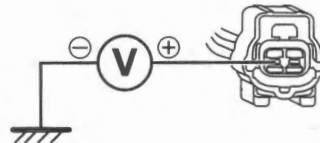

ID26J1110239-01


**Is check result OK?**

- Yes Go to Step 2.  
 No Repair or replace the W/R wire.


**Step 2**

**EVAP system purge control solenoid valve driver circuit check**


- 1) Turn the ignition switch OFF.
- 2) Disconnect the ECM couplers. ⌚(Page 1C-4)
- 3) Check for proper terminal connection to the ECM couplers.
- 4) If connections are OK, check the following points.
  - Resistance
    - Dbr wire: less than 1 Ω

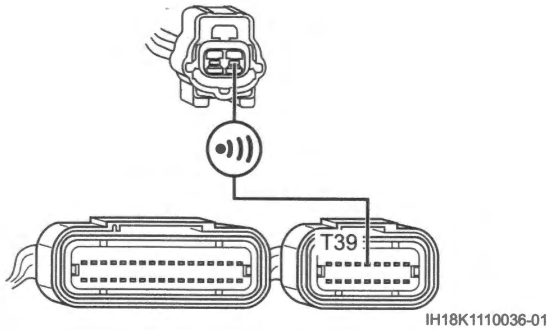


– Between Dbr wire and ground: infinity

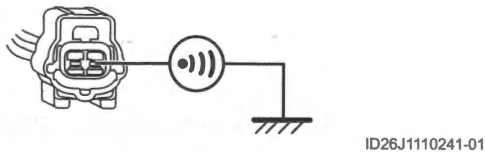

– Between Dbr wire terminal and W/R wire terminal at EVAP system purge control solenoid valve coupler: infinity

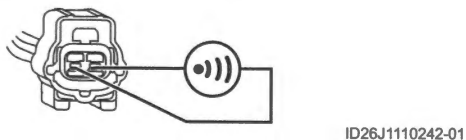

- Voltage
  - Turn the ignition switch ON.
  - Dbr wire: approx. 0 V

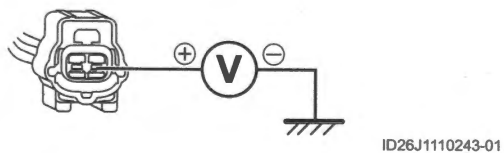

**Is check result OK?**

- Yes Go to Step 3.
- No Repair or replace the Dbr wire.

**Step 3**

**EVAP system purge control solenoid valve resistance check**

- 1) Turn the ignition switch OFF.
- 2) Measure the EVAP system purge control solenoid valve resistance. Refer to “EVAP System Purge Control Solenoid Valve” under “EVAP Control System Inspection (If Equipped)” in Section 1B (Page 1B-13).

**Is check result OK?**

- Yes Replace the ECM with a known good one, and inspect it again. ⌚(Page 1C-4)
- No Replace the EVAP system purge control solenoid valve with a new one. ⌚(Page 1B-12)

**DTC P0480 (C60)**


BENH28K21104023

**DTC Detecting Condition and Trouble Area**

DTC detecting condition	Trouble area
<b>P0480 (C60): Fan 1 Control Circuit</b> Cooling fan relay signal is not input to ECM.	<ul style="list-style-type: none"> <li>• Cooling fan relay</li> <li>• Cooling fan relay circuit</li> <li>• ECM</li> </ul>

**Wiring Diagram**

Refer to "FI System Wiring Diagram" (Page 1A-6).

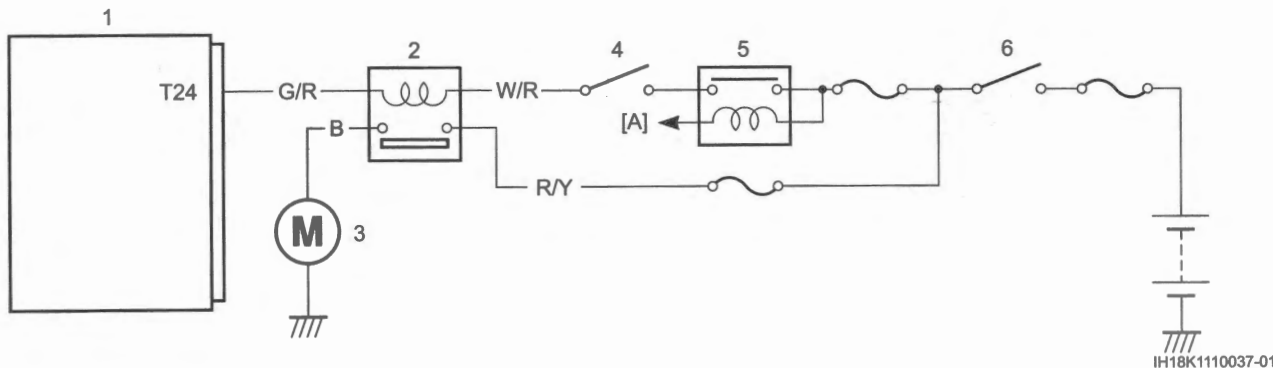

[A]: To side-stand switch	2. Cooling fan relay	4. Engine stop switch	6. Ignition switch
1. ECM	3. Cooling fan motor	5. Side-stand relay	


**Troubleshooting**

**Step 1**

**Cooling fan relay power supply voltage check**

- 1) Turn the ignition switch OFF.
- 2) Disconnect the cooling fan relay. (Page 1F-12)
- 3) Check for proper terminal connection to the cooling fan relay terminal.
- 4) If connections are OK, turn the ignition switch ON.
- 5) Measure the voltage between W/R wire and ground.

**Cooling fan relay power supply voltage**  
**[Standard]: Battery voltage**

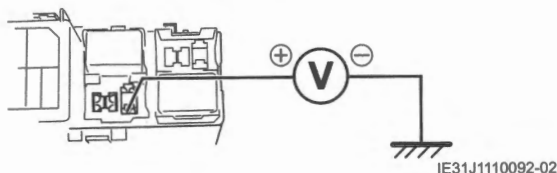

**Is check result OK?**

- Yes Go to Step 2.
- No Repair or replace the W/R wire.

**Step 2**

**Cooling fan relay check**

- 1) Check the cooling fan relay. (Page 1F-12)

**Is check result OK?**


- Yes Go to Step 3.
- No Replace the cooling fan relay with a new one. (Page 1F-12)




**Step 3**

**Cooling fan relay drive circuit check**


- 1) Turn the ignition switch OFF.
- 2) Disconnect the ECM couplers. (Page 1C-4)
- 3) Check for proper terminal connection to the ECM couplers.
- 4) If connections are OK, check the following points.
  - Resistance
    - G/R wire: less than 1 Ω

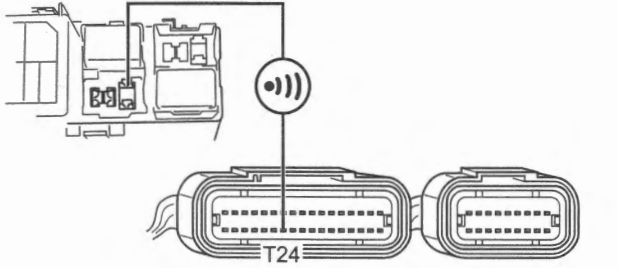

– Between G/R wire and ground: infinity

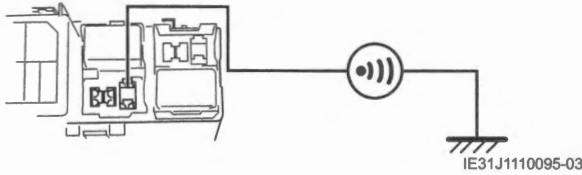

- Voltage
  - Turn the ignition switch ON.
  - G/R wire: approx. 0 V

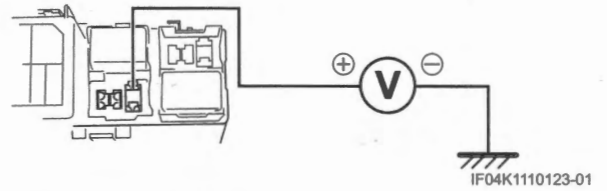

**Is check result OK?**

- Yes Replace the ECM with a known good one, and inspect it again. (Page 1C-4)
- No Repair or replace the G/R wire.

DTC P0500 (C16) / P2158 (C91)


BENH28K21104024

DTC Detecting Condition and Trouble Area

DTC detecting condition	Trouble area
<b>P0500 (C16): Vehicle Speed Sensor "A"</b> The front wheel speed sensor signal is not input for more than 3.0 sec.	<ul style="list-style-type: none"> <li>• Front wheel speed sensor circuit</li> <li>• ABS control unit</li> <li>• ECM</li> </ul>
<b>P2158 (C91): Vehicle Speed Sensor "B"</b> The rear wheel speed sensor signal is not input for more than 3.0 sec.	<ul style="list-style-type: none"> <li>• Rear wheel speed sensor circuit</li> <li>• ABS control unit</li> <li>• ECM</li> </ul>

Wiring Diagram

Refer to "FI System Wiring Diagram" (Page 1A-6).

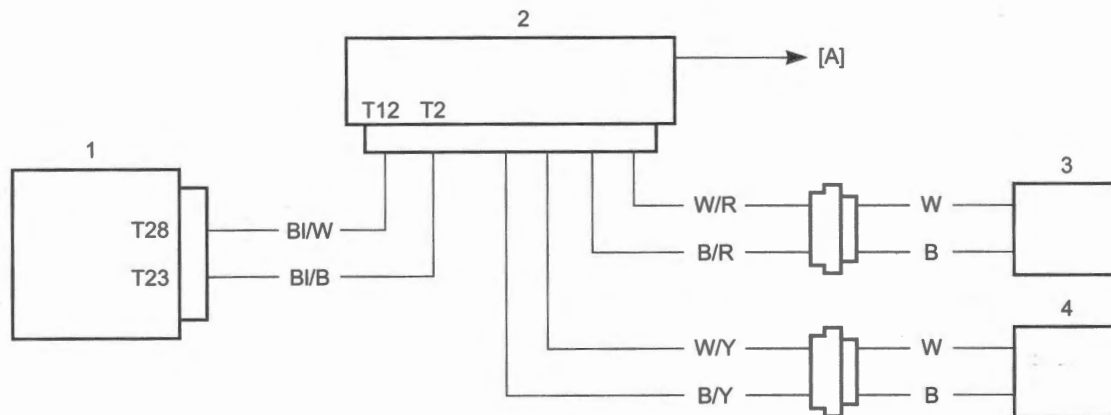

IH28K1110030-02

[A]: To ignition fuse	2. ABS control unit	4. Rear wheel speed sensor
1. ECM	3. Front wheel speed sensor	

**Troubleshooting**

**Step 1**

**ABS DTC check**

- 1) Check that DTC is detected in ABS. (Page 4E-16)

**Is the DTC detected?**


- Yes Go to troubleshooting for DTCs. Refer to "DTC Table" in Section 4E (Page 4E-20).
- No Go to Step 2.

**Step 2**

**Speed sensor signal circuit check (from ABS control unit to ECM)**


- 1) Turn the ignition switch OFF.
- 2) Disconnect the ABS control unit coupler and ECM couplers.
  - ABS control unit: (Page 4E-32)
  - ECM: (Page 1C-4)
- 3) Check for proper terminal connection to the ABS control unit coupler and ECM couplers.
- 4) If connections are OK, check the following points.
  - Resistance
    - BI/B (front), BI/W (rear) wire: less than 1 Ω

**Front**

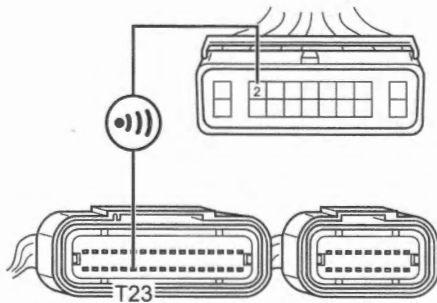

IH28K1110031-01


**Rear**

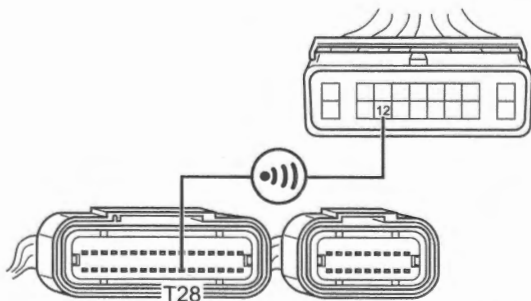

IH28K1110050-01


- BI/B (front), BI/W (rear) wire and ground: infinity

**Front**

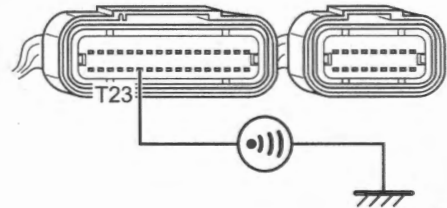

IH18K1110047-01

**Rear**

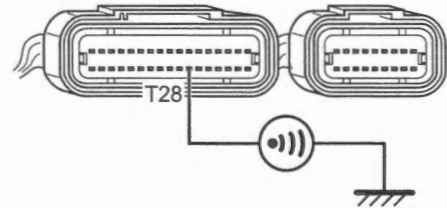

IH28K1110051-01

**Is check result OK?**

- Yes Replace the ECM with a known good one, and inspect again. (Page 1C-4)
- No Repair or replace the defective wire.

**DTC P0506 / P0507 (C65)**

BENH28K21104025

**DTC Detecting Condition and Trouble Area**

DTC detecting condition	Trouble area
<b>P0506 (C65): ISC System RPM Lower Than Expected</b> Idle speed dropped lower than desired idle speed by more than specified range.	<ul style="list-style-type: none"> <li>• Air passage</li> <li>• STVA</li> <li>• Engine mechanism</li> </ul>
<b>P0507 (C65): ISC System RPM Higher Than Expected</b> Idle speed rose higher than desired idle speed by more than specified range.	


**Troubleshooting****NOTICE**

Be careful not to disconnect the STVA coupler at least 5 seconds after ignition switch is turned to OFF.

If the ECM coupler is disconnected within 5 seconds after ignition switch is turned to OFF, there is a possibility of an unusual value being written in the ECM and causing an error of ISC valve (STV interlinked) operation.

**Step 1****Engine combustion check**

- 1) Run the engine at idle speed.
- 2) By spraying water to exhaust pipes, check evaporation from each of them to make sure for equal combustion among cylinders.

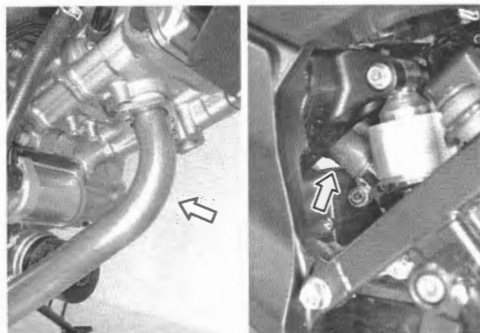

IH28K1110032-01

**Is check result OK?**

- Yes Go to Step 2.  
No Repair or replace defective parts.

**Step 2****STVA operation check**

- 1) Check STV actuator. Refer to "Step 3" under "DTC P2100 (C28)" (Page 1A-60).

**Is check result OK?**

- Yes Go to Step 3.  
No Replace the throttle body. (Page 1D-9)

**Step 3****Air intake system check**

- 1) Check air intake system air for clogging and leakage.



IH28K1110033-01

**Is check result OK?**

- Yes Go to Step 4.  
No Repair or replace defective parts.

**Step 4****Engine mechanical systems check**

- 1) Check the following points related to engine mechanical system.
  - Engine compression: (Page 1D-3)
  - Fuel pressure: (Page 1G-6)

**Is check result OK?**

- Yes Replace the ECM with a known good one, and inspect it again. (Page 1C-4)  
No Repair or replace defective parts.

**DTC P0914 (C31)**


BENH28K21104026

**DTC Detecting Condition and Trouble Area**

DTC detecting condition	Trouble area
<b>P0914 (C31): GP Sensor Circuit</b> Gear position signal voltage is lower than the specified value.	<ul style="list-style-type: none"> <li>GP switch</li> <li>GP switch circuit</li> <li>ECM</li> </ul>

**Wiring Diagram**

Refer to "FI System Wiring Diagram" (Page 1A-6).

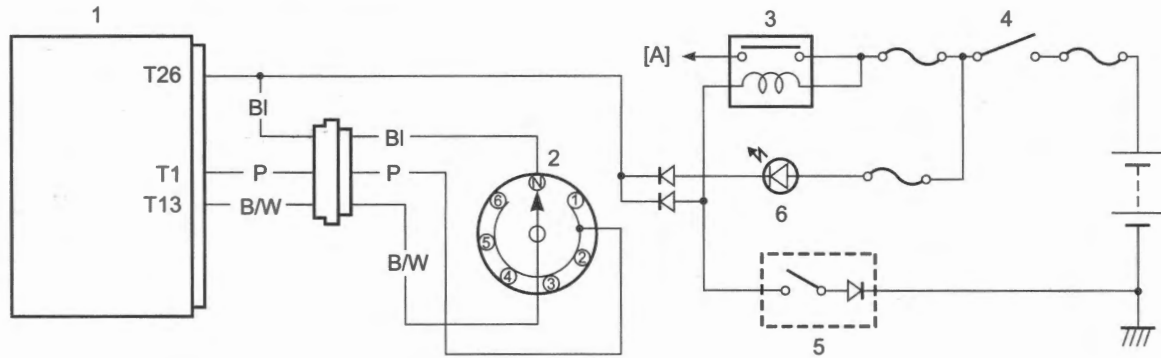

IH18K1110050-01

[A]: To engine stop switch	2. GP switch	4. Ignition switch	6. Neutral indicator light
1. ECM	3. Side-stand relay	5. Side-stand switch	

**Troubleshooting**


**Step 1**

**GP switch power supply voltage check**

- 1) Turn the ignition switch OFF.
- 2) Disconnect the GP switch coupler. (Page 5B-12)
- 3) Support the motorcycle with a jack.
- 4) Fold the side-stand to up position.
- 5) Check for proper terminal connection to the GP switch coupler.
- 6) If connections are OK, turn the ignition switch ON.
- 7) Measure the voltage between the P wire and ground.

- 8) If OK, measure the voltage between the P wire and B/W wire.

**GP switch power supply voltage**  
**[Standard]: 4.5 – 5.5 V**

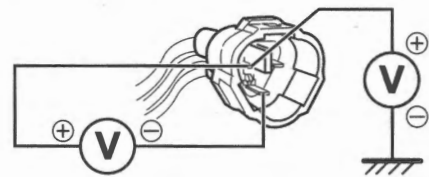

IF04K1110075-01

**Is check result OK?**


- Yes Go to Step 3.  
 No Go to Step 2.

**Step 2**


**GP switch circuit check**

- 1) Turn the ignition switch OFF.
- 2) Disconnect the ECM couplers. (Page 1C-4)
- 3) Check for proper terminal connection to the ECM couplers.
- 4) If connections are OK, check the following points.


- Resistance
  - P wire and B/W wire: less than 1 Ω

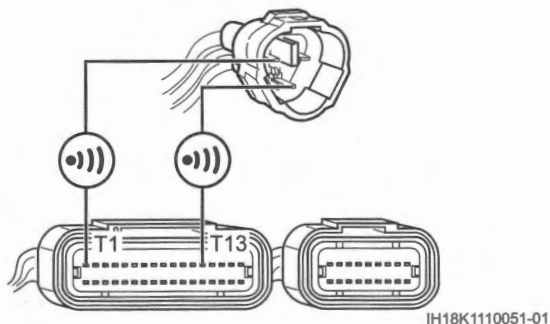


- Between P wire and ground: infinity
- Between B/W wire and ground: infinity

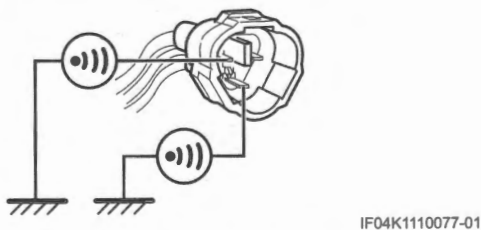

- Between P wire terminal and other terminal at GP switch coupler: infinity

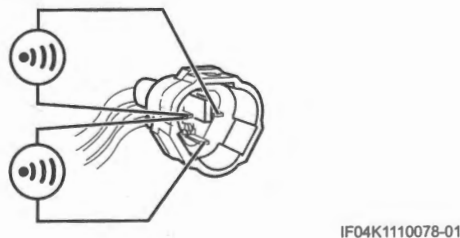

- Voltage
  - Turn the ignition switch ON.
  - P wire and B/W wire: approx. 0 V

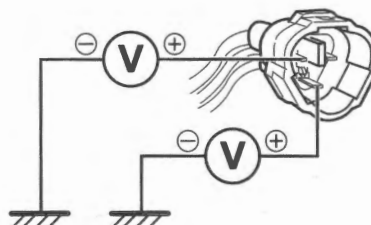

IF04K1110079-01

**Is check result OK?**

- Yes Replace the ECM with a known good one, and inspect it again. (Page 1C-4)
- No Repair or replace the defective wire harness.

**Step 3**

**GP switch voltage check**

- 1) Turn the ignition switch OFF.
- 2) Connect the ECM couplers.
- 3) Measure the GP switch voltage. (Page 5B-11)

**Is check result OK?**

- Yes Replace the ECM with a known good one, and inspect it again. (Page 1C-4)
- No Replace the GP switch with a new one. (Page 5B-12)

**DTC P1100 / P1101 / P1102 (C13)**


BENH28K21104027

**DTC Detecting Condition and Trouble Area**

DTC detecting condition	Trouble area
<b>P1100 (C13): IAP Sensor 2 Circuit</b> The sensor output voltage is higher than 4.80 V.	<ul style="list-style-type: none"> <li>• Vacuum passage between throttle body and IAP sensor #2</li> <li>• IAP sensor #2</li> <li>• IAP sensor #2 circuit</li> <li>• ECM</li> </ul>
<b>P1101 (C13): IAP Sensor 2 Circuit Range / Performance</b> The IAP sensor #2 vacuum hose has come off.	
<b>P1102 (C13): IAP Sensor 2 Circuit Low</b> The sensor output voltage is lower than 0.10 V.	

**Wiring Diagram**

Refer to "FI System Wiring Diagram" (Page 1A-6).

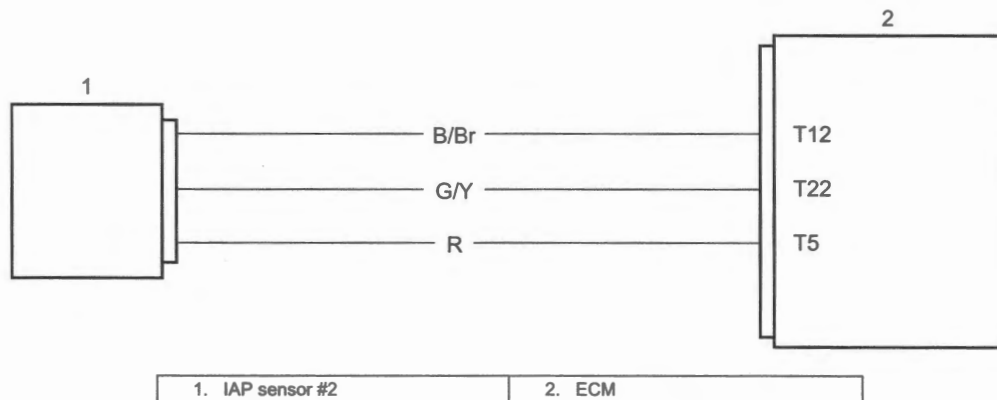

IH18K1110052-01

**Troubleshooting**

**NOTE**

When DTC P1101 (C13) and P0106 (C17) are detected together, check that each IAP sensor vacuum hose is connected correctly.


**Step 1**

**IAP sensor power supply circuit check**

- 1) Turn the ignition switch OFF.
- 2) Disconnect the IAP sensor #2 coupler. (Page 1C-5)
- 3) Check for proper terminal connection to the IAP sensor #2 coupler.
- 4) If connections are OK, turn the ignition switch ON.
- 5) Measure the voltage between the R wire and B/Br wire.

**IAP sensor #2 power supply voltage**

[Standard]: 4.75 – 5.25 V

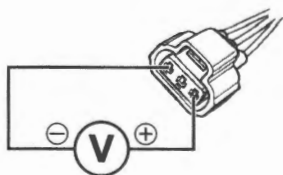

IH28K1110012-01


**Is check result OK?**

- Yes Go to Step 3.
- No Go to Step 2.

**Step 2**

**IAP sensor ground circuit check**

- 1) Measure the voltage between the R wire and ground.

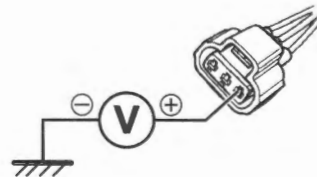

IH28K1110013-02


**Is voltage same as Step 1?**

- Yes Repair or replace the B/Br wire.
- No Repair or replace the R wire.


**Step 3**

**IAP sensor signal circuit check**


- 1) Turn the ignition switch OFF.
- 2) Disconnect the ECM couplers. (Page 1C-4)
- 3) Check for proper terminal connection to the ECM couplers.
- 4) If connections are OK, check the following points.
  - Resistance
    - G/Y wire: less than 1  $\Omega$

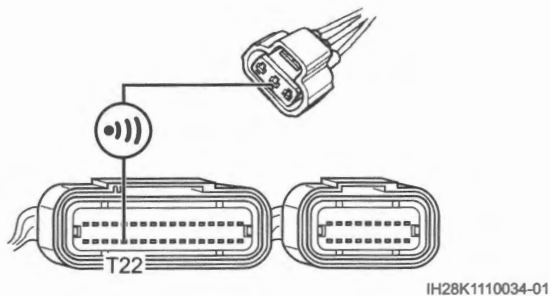


– Between G/Y wire and ground: infinity

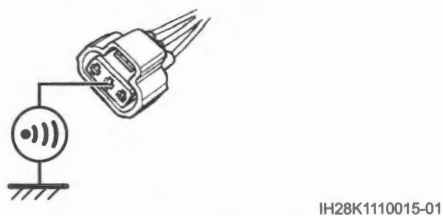

– G/Y wire terminal and other terminal at IAP sensor #2 coupler: infinity

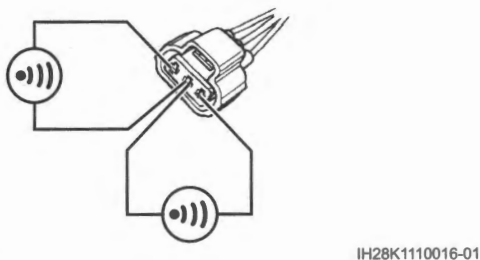

- Voltage
  - Turn the ignition switch ON.
  - G/Y wire: approx. 0 V

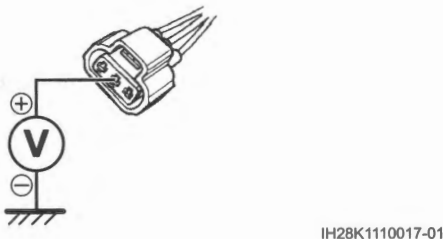

**Is check result OK?**

- Yes Go to Step 4.
- No Repair or replace the G/Y wire.

**Step 4**

**IAP sensor output voltage at idle speed check**

- 1) Turn the ignition switch OFF.
- 2) Connect the ECM couplers and IAP sensor #2 coupler.
- 3) Measure the IAP sensor #2 output voltage at idle speed. Refer to "IAP Sensor Output Voltage at Idle Speed" under "IAP Sensor Inspection" in Section 1C (Page 1C-4).

**Is check result OK?**

- Yes Go to Step 5.
- No Check the vacuum hoses for crack or damage.
  - If vacuum hoses are OK, replace the IAP sensor #2 with a new one. (Page 1C-5)

**Step 5**

**IAP sensor output voltage check**

- 1) Turn the ignition switch OFF.
- 2) Remove the IAP sensor #2. (Page 1C-5)
- 3) Measure the IAP sensor #2 output voltage. Refer to "IAP Sensor Output Voltage" under "IAP Sensor Removal and Installation" in Section 1C (Page 1C-5).

**Is check result OK?**

- Yes Replace the ECM with a known good one, and inspect it again. (Page 1C-4)
- No Replace the IAP sensor #2 with a new one. (Page 1C-5)



**DTC P1610 (C42)**

BENH28K21104028

**DTC Detecting Condition and Trouble Area**

DTC detecting condition	Trouble area
<p><b>P1610 (C42): Ignition Switch Signal Circuit</b>                      Ignition switch signal is not input to the ECM.                      When the ID agreement is not verified (if equipped).                      ECM does not receive communication signal from the immobilizer antenna (if equipped).</p>	<ul style="list-style-type: none"> <li>• Ignition switch</li> <li>• Ignition switch circuit</li> <li>• Immobilizer system (if equipped)</li> <li>• Immobilizer system circuit (if equipped)</li> <li>• ECM</li> </ul>

**Troubleshooting**

Refer to "Ignition Switch Inspection" in Section 1H (Page 1H-10) for details.

**DTC P1700 / P1701 (C23)**


BENH28K21104029

**DTC Detecting Condition and Trouble Area**

DTC detecting condition	Trouble area
<p><b>P1700 (C23): TO Sensor Circuit</b>                      The sensor output voltage is higher than 4.60 V.</p>	<ul style="list-style-type: none"> <li>• TO sensor</li> <li>• TO sensor circuit</li> <li>• ECM</li> </ul>
<p><b>P1701 (C23): TO Sensor Circuit Low</b>                      The sensor output voltage is lower than 0.20 V.</p>	

**Wiring Diagram**

Refer to "FI System Wiring Diagram" (Page 1A-6).

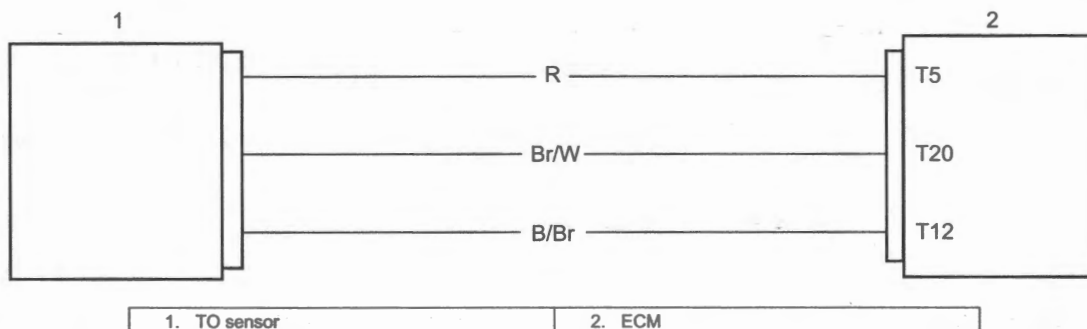

IH18K1110054-02

**Troubleshooting**


**Step 1**

**TO sensor power supply circuit check**

- 1) Turn the ignition switch OFF.
- 2) Disconnect the TO sensor coupler. (Page 1C-12)
- 3) Check for proper terminal connection to the TO sensor coupler.
- 4) If connections are OK, turn the ignition switch ON.

- 5) Measure the voltage between the R wire and B/Br wire.

**TO sensor power supply voltage**  
**[Standard]: 4.5 – 5.5 V**

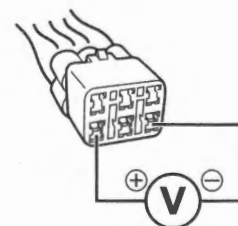

IH28K1110035-01


**Is check result OK?**

- Yes    Go to Step 3.
- No    Go to Step 2.

**Step 2**

**TO sensor ground circuit check**

- 1) Measure the voltage between the R wire and ground.

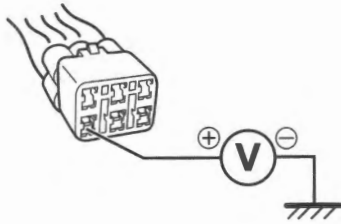

IH28K1110036-01


**Is voltage same as Step 1?**

- Yes Repair or replace the B/Br wire.
- No Repair or replace the R wire.

**Step 3**


**TO sensor signal circuit check**

- 1) Turn the ignition switch OFF.
- 2) Disconnect the ECM couplers. (Page 1C-4)
- 3) Check for proper terminal connection to the ECM couplers.
- 4) If connections are OK, check the following points.
  - Resistance
    - Br/W wire: less than 1 Ω

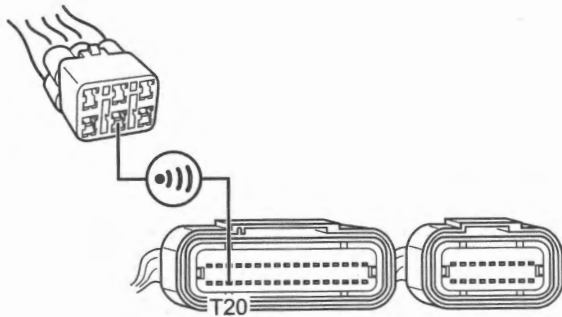


IH28K1110037-01

– Between Br/W wire and ground: infinity

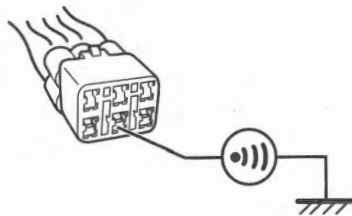


IH28K1110038-01

- Between Br/W wire terminal and other terminal at TO sensor coupler: infinity

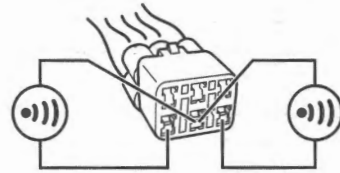

IH28K1110039-01

- Voltage
  - Turn the ignition switch ON.
  - Br/W wire: approx. 0 V

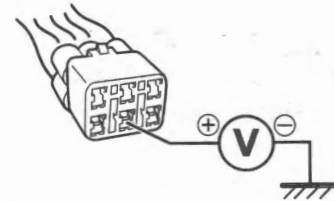

IH28K1110040-01

**Is check result OK?**

- Yes Go to Step 4.
- No Repair or replace the Br/W wire.

**Step 4**

**TO sensor output voltage check**

- 1) Turn the ignition switch OFF.
- 2) Connect the ECM couplers and TO sensor coupler.
- 3) Measure the TO sensor output voltage. Refer to "TO Sensor Output Voltage" under "TO Sensor Inspection" in Section 1C (Page 1C-12).

**Is check result OK?**

- Yes Replace the ECM with a known good one, and inspect it again. (Page 1C-4)
- No Replace the TO sensor with a new one. (Page 1C-12)

**DTC P2100 (C28)**


BENH28K21104030

**DTC Detecting Condition and Trouble Area**

DTC detecting condition	Trouble area
<p><b>P2100 (C28): Throttle Actuator "A" Control Motor Circuit</b>                      STVA control signal is not supplied from the ECM.                      ECM does not receive communication signal from the STVA or operation voltage does not reach STVA.</p>	<ul style="list-style-type: none"> <li>• STVA</li> <li>• STVA circuit</li> <li>• ECM</li> </ul>

**Wiring Diagram**

Refer to "FI System Wiring Diagram" (Page 1A-6).


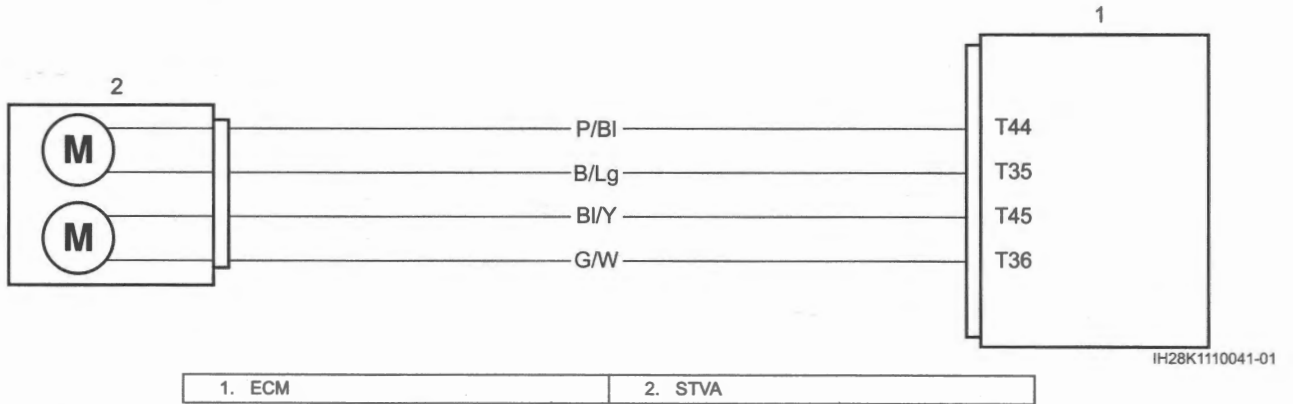


**Troubleshooting**


**Step 1**

**STVA circuit check**


- 1) Turn the ignition switch OFF.
- 2) Disconnect the STVA coupler and ECM couplers.
  - STVA: (Page 1C-15)
  - ECM: (Page 1C-4)
- 3) Check for proper terminal connection to the STVA coupler and ECM couplers.
- 4) If connections are OK, check the following points.
  - Resistance
    - P/BI, B/Lg, BI/Y and G/W wires: less than 1 Ω

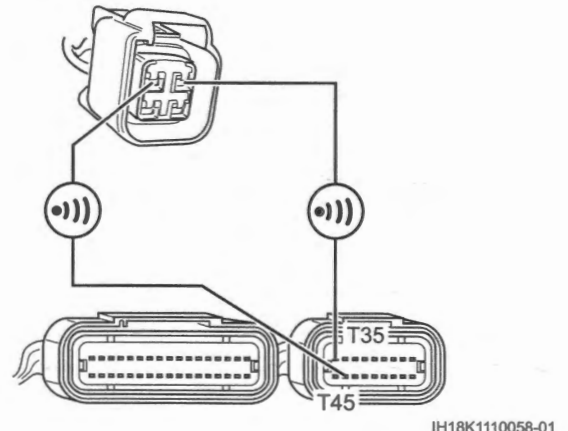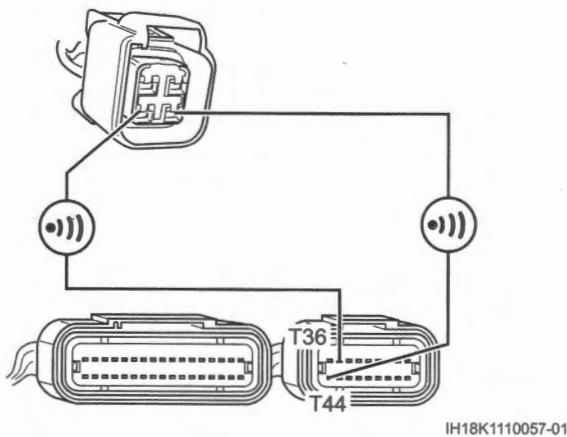

- Between P/BI wire and ground: infinity
- Between B/Lg wire and ground: infinity
- Between BI/Y wire and ground: infinity
- Between G/W wire and ground: infinity

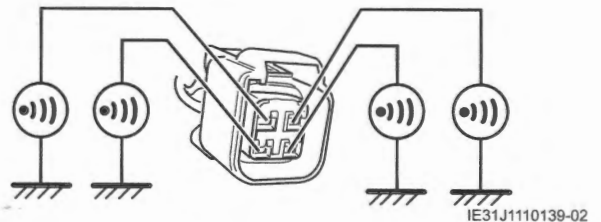


- Between P/BI wire terminal and other terminal at STVA coupler: infinity

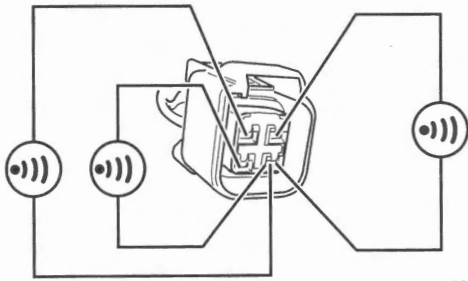


IE31J1110140-01

- Between B/Lg wire terminal and other terminal at STVA coupler: infinity

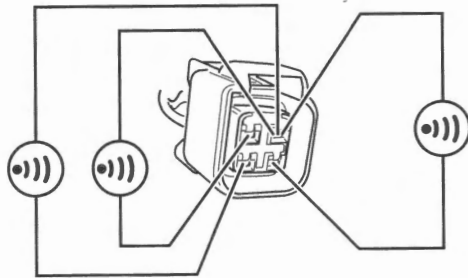


IE31J1110142-01

- Between BI/Y wire terminal and other terminal at STVA coupler: infinity

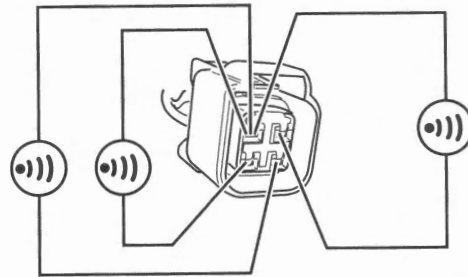


IE31J1110143-01

- Between G/W wire terminal and other terminal at STVA coupler: infinity

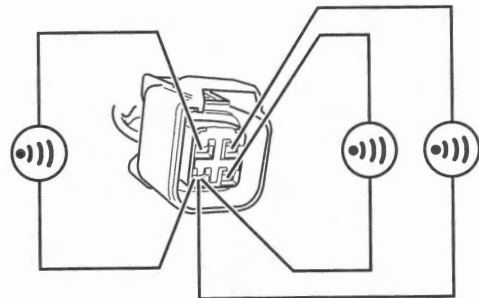

IE31J1110141-01

- Voltage
  - Turn the ignition switch ON.
  - P/BI, B/Lg, BI/Y and G/W wires: approx. 0 V

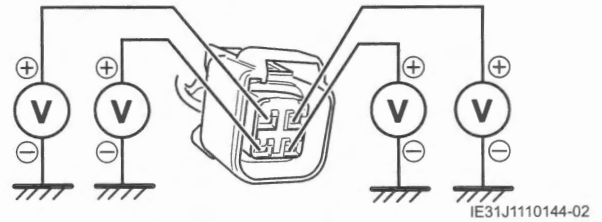

IE31J1110144-02

**Is check result OK?**

- Yes Go to Step 2.
- No Repair or replace the defective wire harness.

**Step 2**

**STVA resistance check**

- 1) Turn the ignition switch OFF.
- 2) Measure the STVA resistance. (Page 1C-15)


**Is check result OK?**

- Yes Go to Step 3.
- No Replace the throttle body with a new one. (Page 1D-9)

**Step 3**

**STV operation check**

- 1) Remove the air cleaner element. (Page 1D-5)
- 2) Connect the STVA coupler and ECM couplers.
- 3) Check whether the STVs open by turning the ignition switch ON.

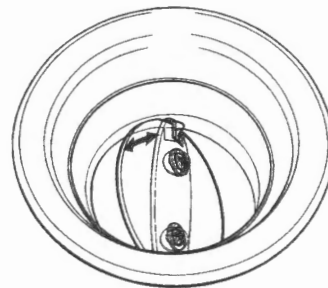

I705H1110063-01

**Is check result OK?**


- Yes Replace the ECM with a known good one, and inspect it again. (Page 1C-4)
- No Replace the throttle body with a new one. (Page 1D-9)

## Repair Instructions

### Select Switch Inspection

BENH28K21106001

- 1) Turn the ignition switch OFF.
- 2) Remove the air cleaner box. (Page 1D-6)
- 3) Disconnect the left handle switch coupler (1).

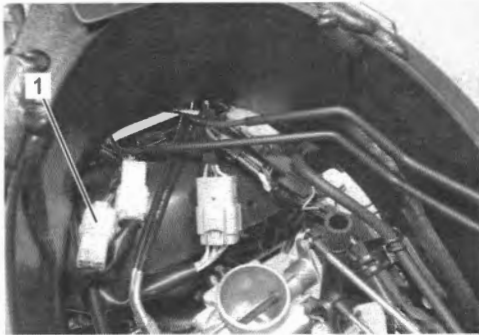

IH28K1110046-01

- 4) Inspect the select switch for continuity with a multi circuit tester.  
If any abnormality is found, replace the left handle switch with a new one. Refer to "Handlebar Removal and Installation" in Section 6B (Page 6B-3).

Color Position	P	B/G
FREE		
PUSH	○	○


IH28K1110047-01

- 5) Connect the left handle switch coupler. Refer to "Wiring Harness Routing Diagram" in Section 9A (Page 9A-7).
- 6) Install the air cleaner box. (Page 1D-6)

### Mode Switch Inspection

BENH28K21106002

- 1) Turn the ignition switch OFF.
- 2) Remove the air cleaner box. (Page 1D-6)
- 3) Disconnect the left handle switch coupler (1).

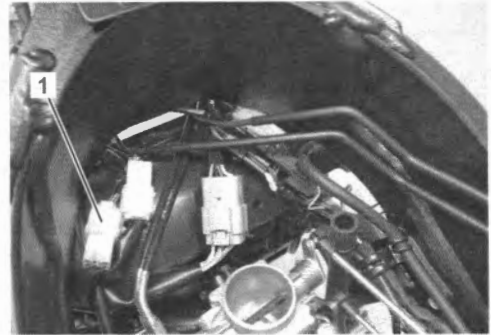

IH28K1110046-01

- 4) Inspect the mode switch for continuity with a multi circuit tester.  
If any abnormality is found, replace the left handle switch with a new one. Refer to "Handlebar Removal and Installation" in Section 6B (Page 6B-3).

Color Position	Y/G	G	B/G
UP	○		○
FREE			
DOWN		○	○

IH28K1110048-02


- 5) Connect the left handle switch coupler. Refer to "Wiring Harness Routing Diagram" in Section 9A (Page 9A-7).
- 6) Install the air cleaner box. (Page 1D-6)

## Special Tools and Equipment

### Special Tool

BENH28K21108001

09904-41051  
Conversion cable  
(Page 1A-3)

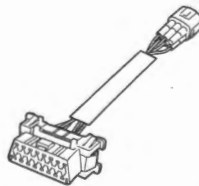

09930-82720  
Mode selection switch  
(Page 1A-4) /  
(Page 1A-15)



# Emission Control Devices

## Precautions

### Precautions for Emission Control Devices

BENH28K2120001


Refer to "General Precautions" in Section 00 (Page 00-1), "Precautions for Electrical Circuit Service" in Section 00 (Page 00-2) and "Precautions for Circuit Tester" in Section 00 (Page 00-7).

## General Description

### Fuel Injection System Description

BENH28K21201001

DL650A/XA motorcycles are equipped with a fuel injection system for emission level control. This fuel injection system is precision designed, manufactured and adjusted to comply with the applicable emission limits. With varying engine conditions, all of the fuel injection volumes are precisely controlled by the programmed injection maps in the ECM to reduce CO, NOX and HC. Adjusting, interfering with, improper replacement, or resetting of any of the fuel injection components may adversely affect injection performance and cause the motorcycle to exceed the exhaust emission level limits.

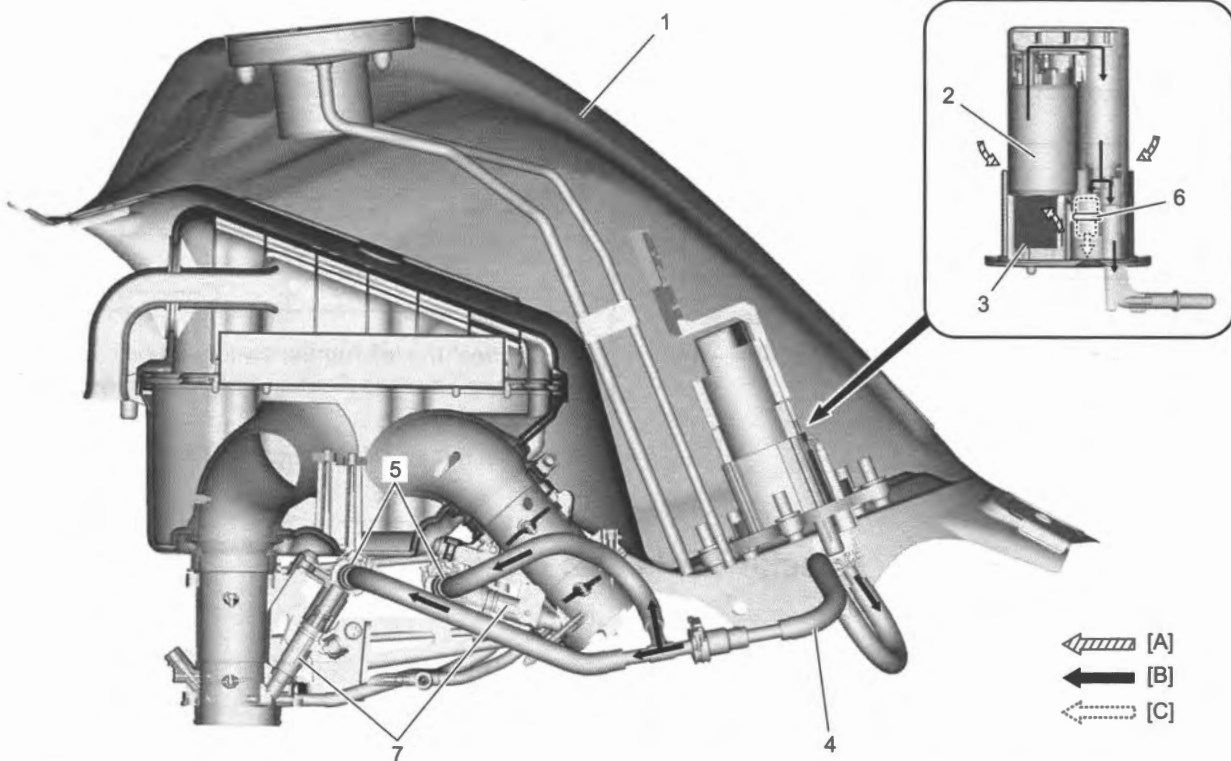



IH28K1120001-01

[A]: Before-pressurized fuel	1. Fuel tank	4. Fuel feed hose	7. Fuel injector
[B]: Pressurized fuel	2. Fuel pump	5. Fuel delivery pipe	
[C]: Relieved fuel	3. Fuel filter	6. Fuel pressure regulator	

## Crankcase Emission Control System Description

BENH28K21201002

The engine is equipped with a PCV system. Blow-by gas in the engine is constantly drawn into the crankcase, which is returned to the combustion chamber through the PCV (breather) hose (1), air cleaner (2) and throttle body (3).

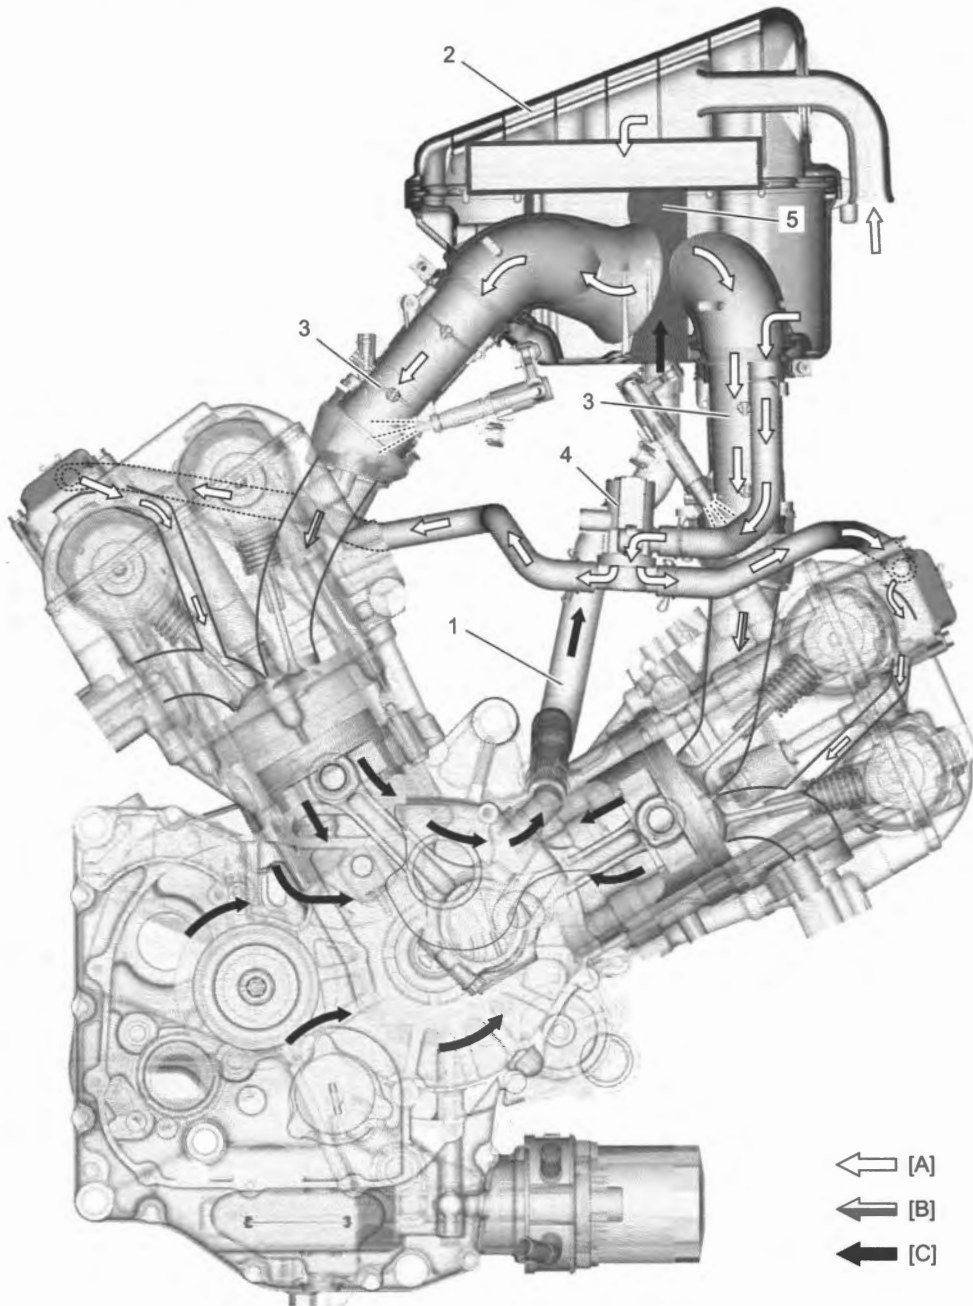


IH28K1120002-01

[A]: Fresh air	[C]: Blow-by gas	5. Breather filter
[B]: Fuel/Air mixture	4. PAIR control solenoid valve (if equipped)	

**Exhaust Emission Control System Description**

BENH28K21201003

The exhaust emission control system is composed of the PAIR system (if equipped), exhaust control system, HO2 sensor, three-way catalyst system and ISC system. The fresh air is drawn into the exhaust ports through the PAIR control solenoid valve and PAIR reed valves (if equipped). The PAIR control solenoid valve (if equipped) is operated by the ECM, which is controlled according to the signals from TP sensor, ECT sensor, IAT sensor, IAP sensor and CKP sensor. ISC valve (secondary throttle valve interlinked) adjusts the bypass air volume of the throttle body to control engine idling speed with various sensor signals by varying engine running conditions and the idling control contributes to reduce exhaust emission level.

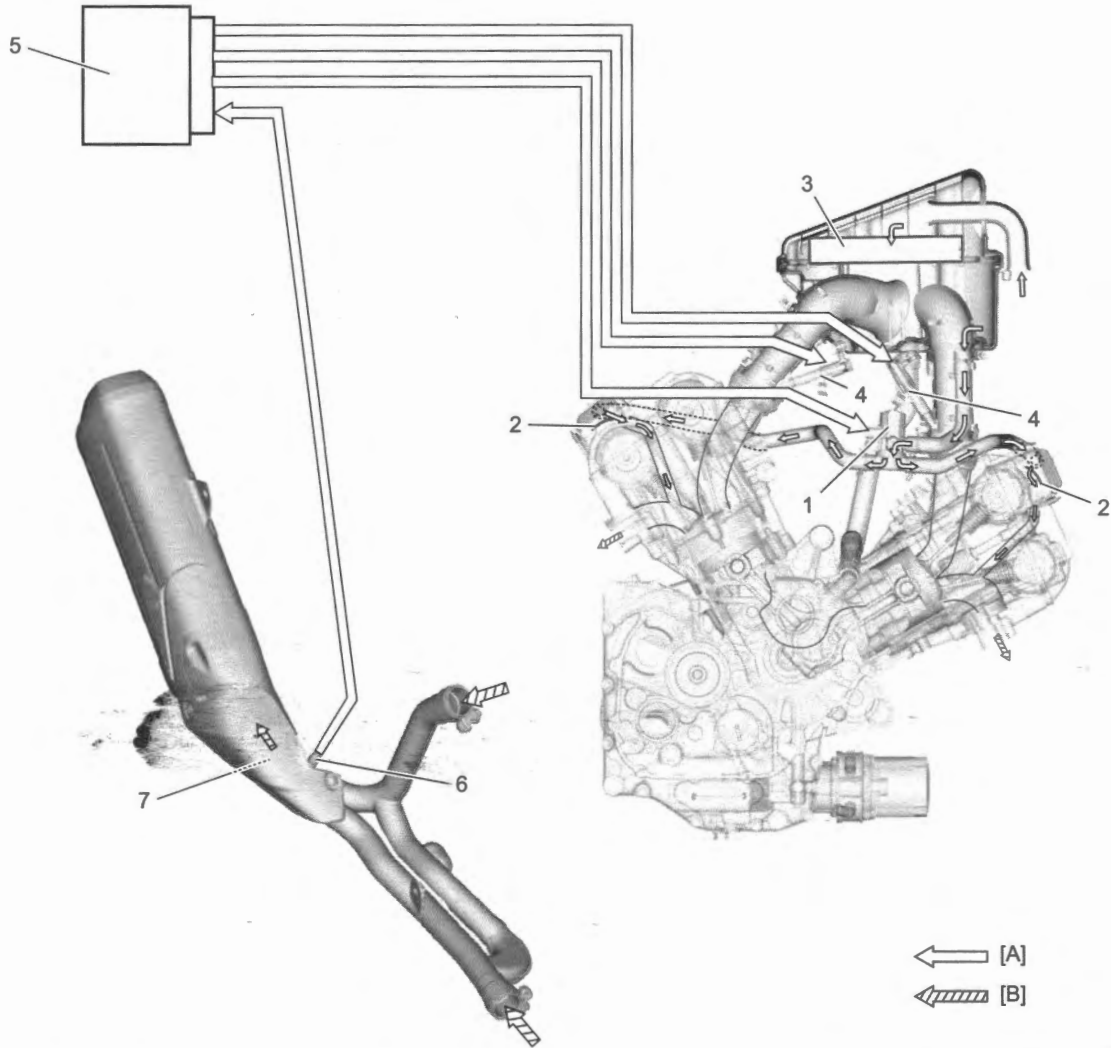

IH28K1120003-03

[A]: Fresh air	2. PAIR reed valve (if equipped)	5. ECM
[B]: Exhaust gas	3. Air cleaner chamber	6. HO2 sensor
1. PAIR control solenoid valve (if equipped)	4. Fuel injector	7. Three-way catalyst



**Noise Emission Control System Description**

BENH28K21201004

**TAMPERING WITH THE NOISE CONTROL SYSTEM PROHIBITED:** Local law or federal law prohibits the following acts or the causing thereof:


- The removal or rendering inoperative by any person, other than for purposes of maintenance, repair or replacement, of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use.
- The use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

**Among Those Acts Presumed to Constitute Tampering are the Acts Listed Below:**

- Removing or puncturing the muffler, baffles, header pipes, screen type spark arrester (if equipped) or any other component which conducts exhaust gases.
- Removing or puncturing the air cleaner case, air cleaner cover, baffles or any other component which conducts intake air.
- Replacing the exhaust system or muffler with a system or muffler not marked with the same model specific code as the code listed on the Motorcycle Noise Emission Control Information label.

Evaporative Emission Control System Diagram (If Equipped)

BENH28K21201005

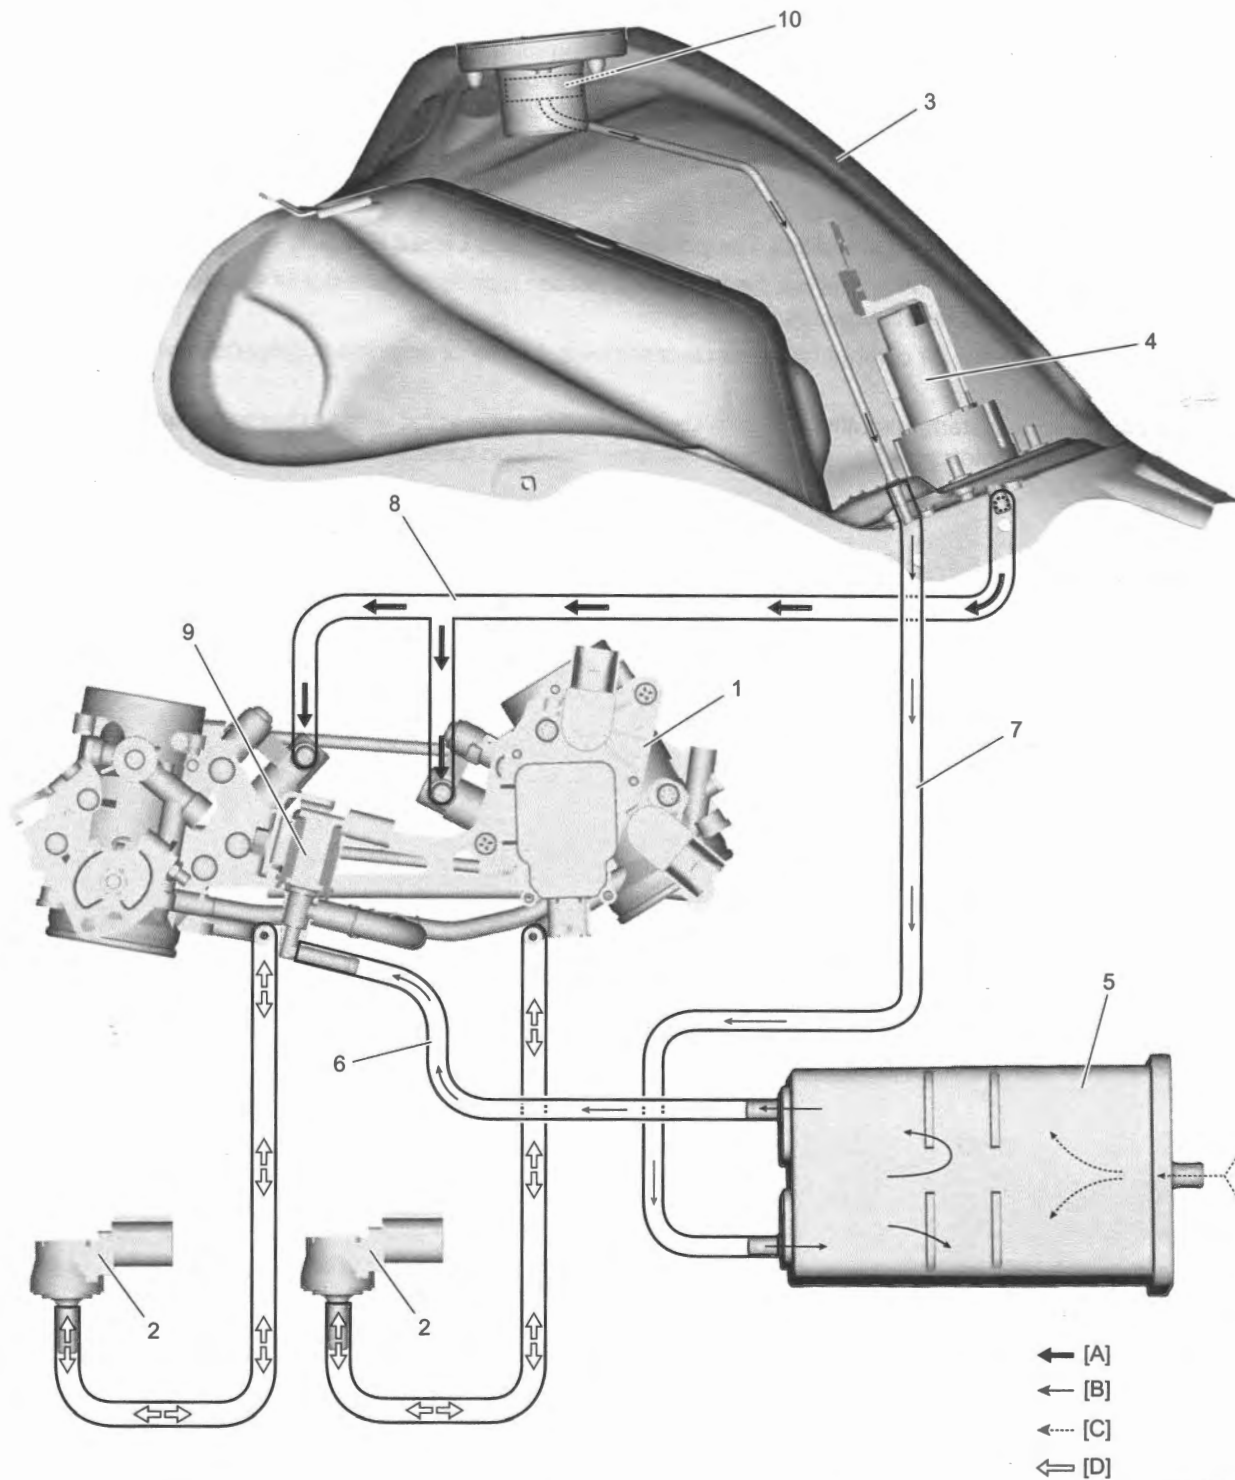


[A]: Fuel	2. IAP sensor	7. Surge hose
[B]: HC vapor	3. Fuel tank	8. Fuel feed hose
[C]: Fresh air	4. Fuel pump	9. EVAP system purge control solenoid valve
[D]: Vacuum	5. EVAP canister	10. Fuel shut-off valve
	1. Throttle body	6. Purge hose

IH28K1120004-03

# Schematic and Routing Diagram

## PAIR System Hose Routing Diagram (If Equipped)

BENH28K21202001

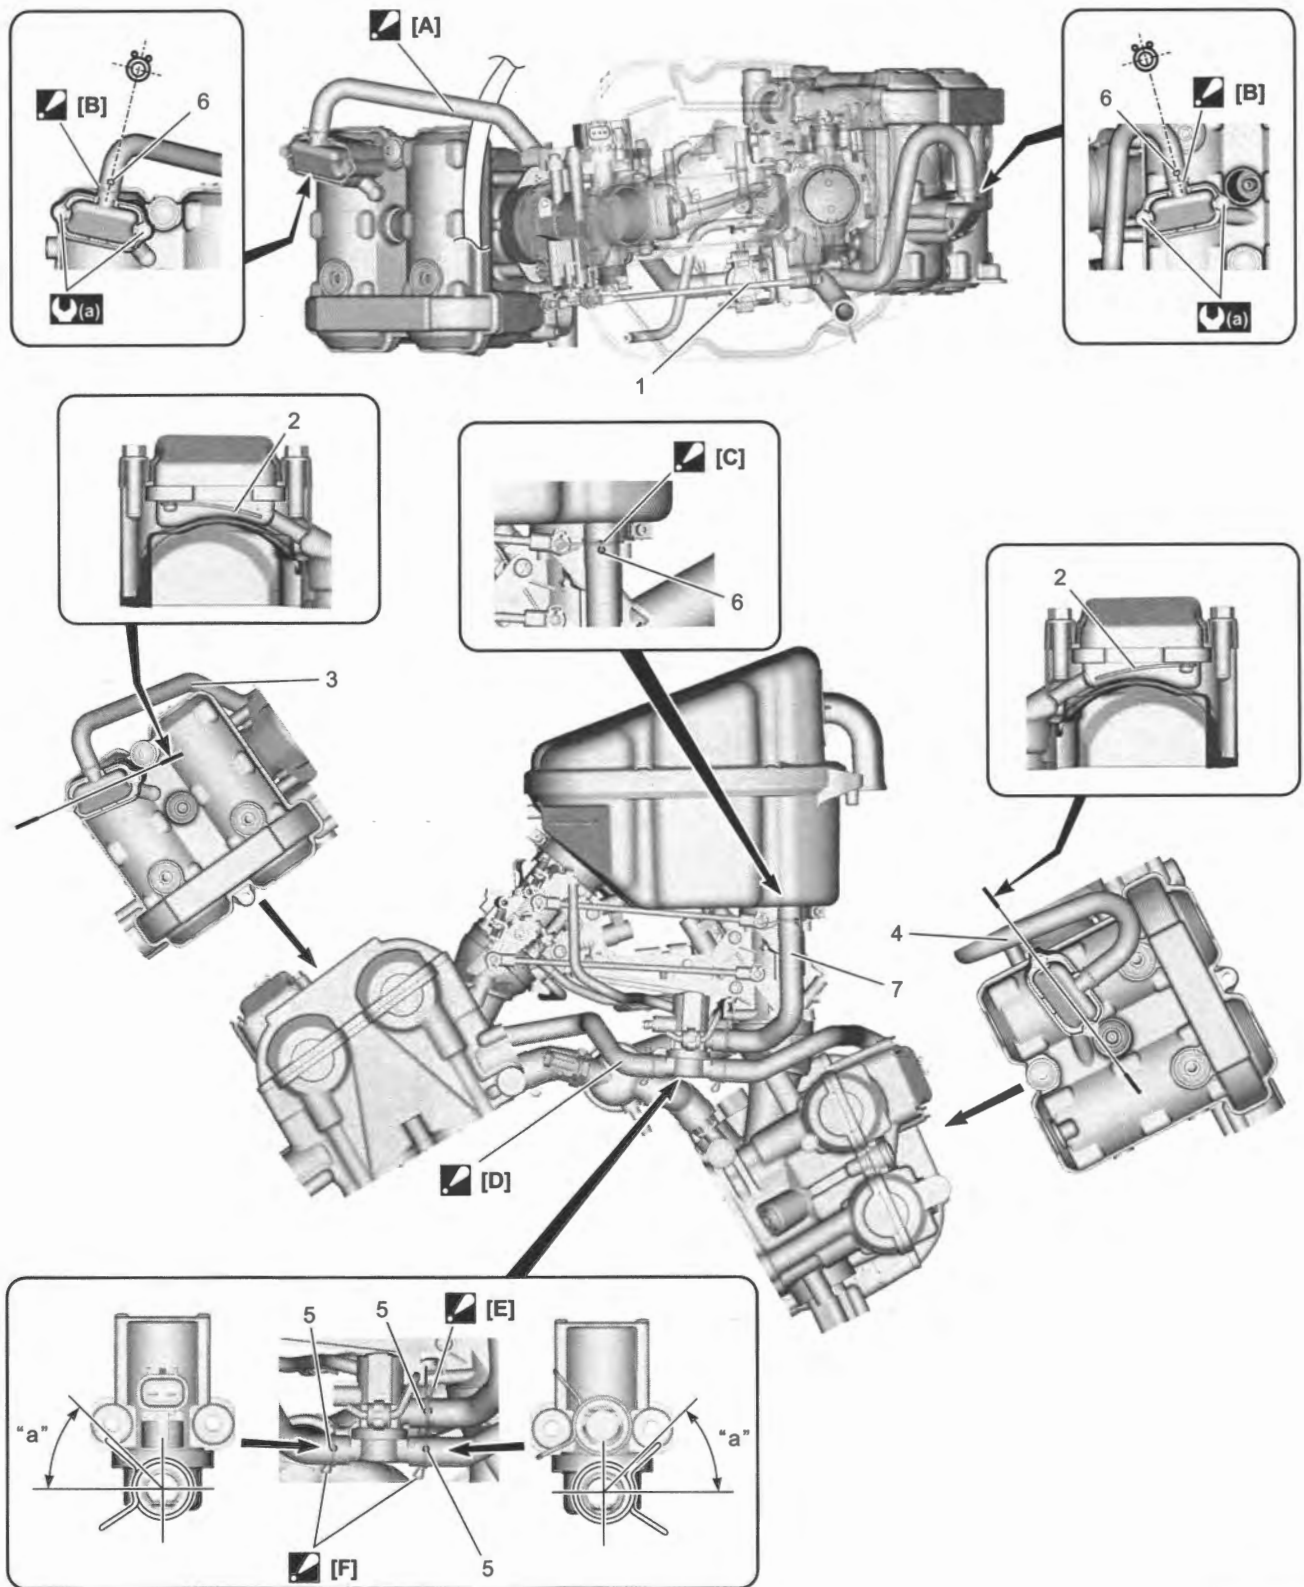


# 1B-7 Emission Control Devices:

☑ [A]: Pass the PAIR hose #2 upward of wiring harness.	3. PAIR hose #2
☑ [B]: Align the white mark with the clamp end.	4. PAIR hose #1
☑ [C]: Locate the front side clamp end to the white marking.	5. Yellow marking
☑ [D]: Pass the PAIR hose #2 above the thermostat inlet connector.	6. White marking
☑ [E]: Face the clamp end outside.	7. PAIR air cleaner hose
☑ [F]: Face the clamp end inside.	"a": Approx. 45°
1. PAIR control solenoid valve	ⓐ : 10 N·m (1.0 kgf·m, 7.5 lbf·ft)
2. PAIR reed valve	

## PCV Hose Routing Diagram


BENH28K21202002

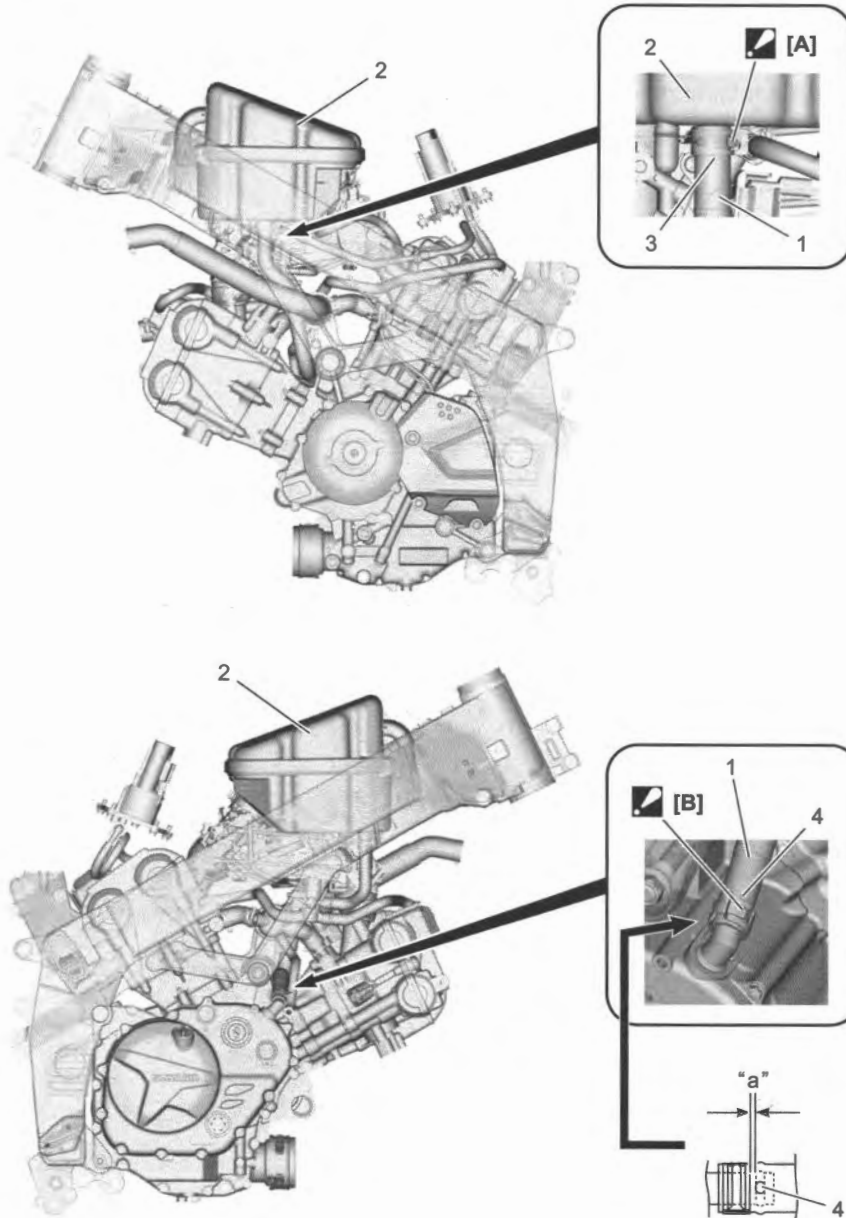

IH28K1120006-01

☑ [A]: Face the clamp end backward.	3. Yellow mark
☑ [B]: Blue marking should be positioned between clamp ends. Do not contact the starter motor lead wire and water hose.	4. Blue mark
1. PCV hose	"a": Clearance
2. Air cleaner box	

## EVAP Canister Hose Routing Diagram (If Equipped)

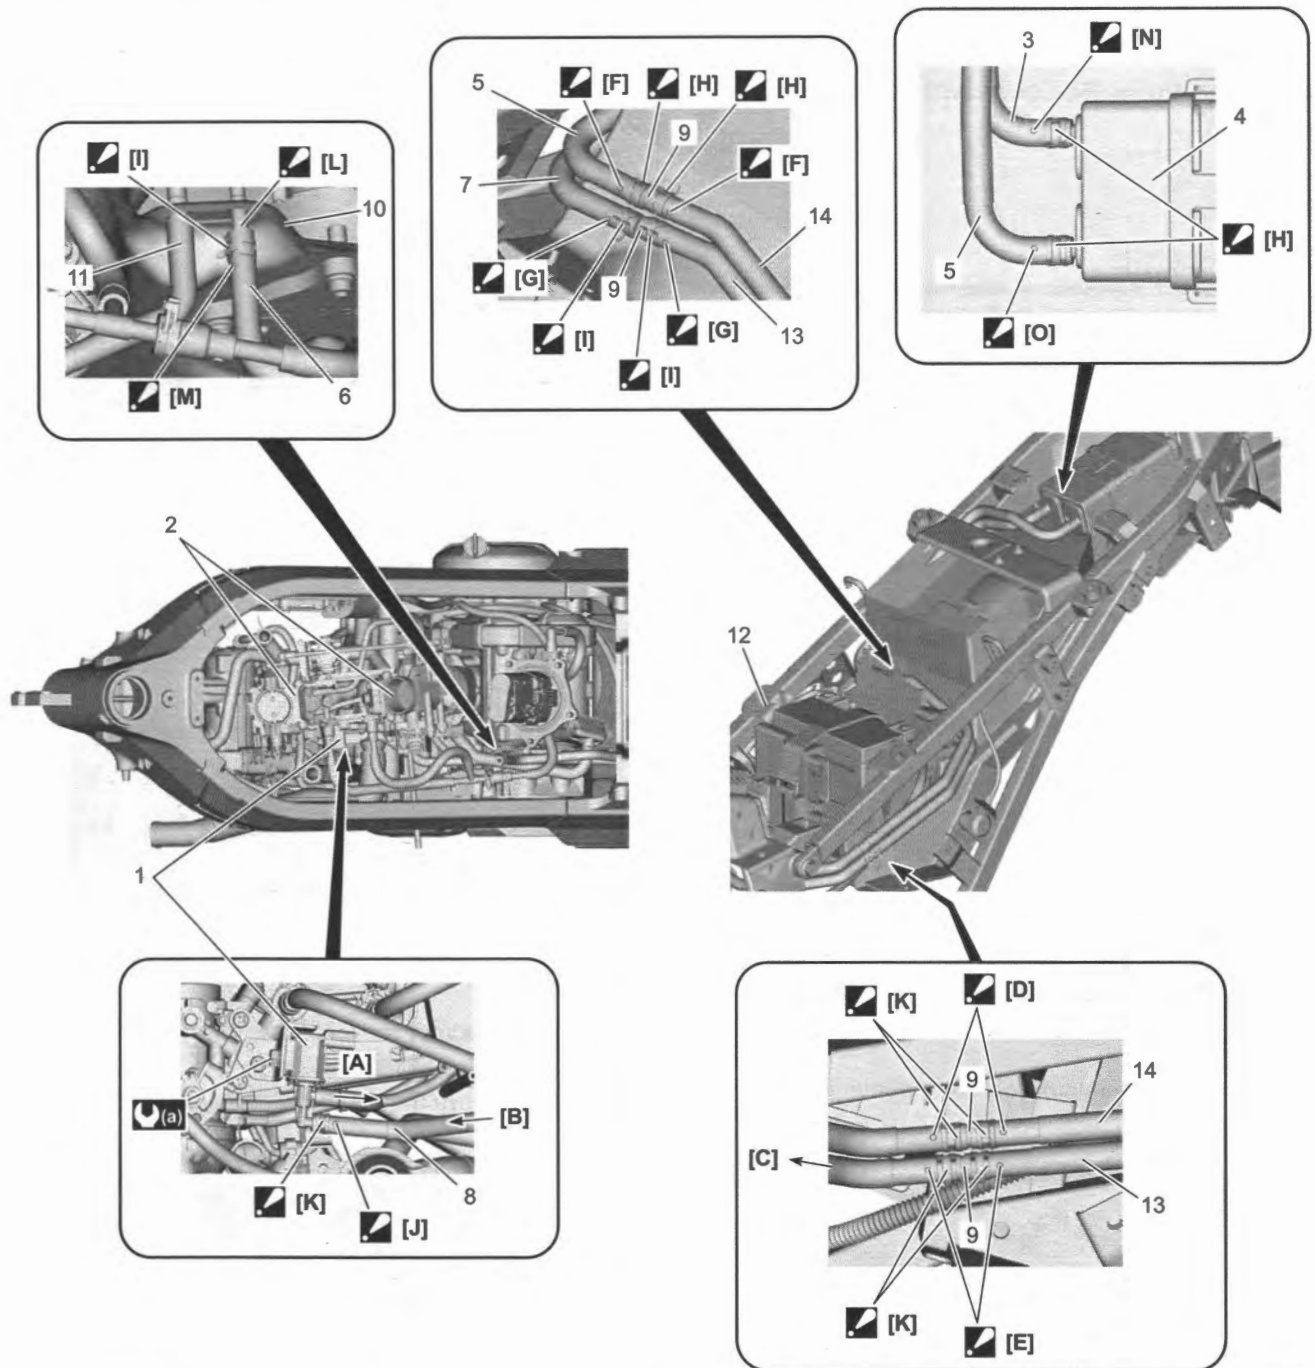

IH28K1120007-03

[A]: To throttle body	1. EVAP system purge control solenoid valve
[B]: From EVAP canister	2. Throttle body
[C]: To EVAP system purge control solenoid valve	3. Purge hose No. 1
☑ [D]: Face the pink mark outside.	4. EVAP canister
☑ [E]: Face the blue mark outside.	5. Surge hose No. 1
☑ [F]: Face the green mark forward.	6. Surge hose No. 2
☑ [G]: Face the yellow mark forward.	7. Purge hose No. 1
☑ [H]: Face the clamp end upward.	8. Purge hose No. 2
☑ [I]: Face the clamp end forward.	9. Hose joint
☑ [J]: Face the red mark outside.	10. Fuel tank
☑ [K]: Face the clamp end outside.	11. Fuel tank breather hose
☑ [L]: Insert the surge hose No. 2 to the "R" part of fuel breather pipe.	12. Battery holder
☑ [M]: Face the white mark forward.	13. EVAP hose
☑ [N]: Face the red mark upward.	14. EVAP No. 2 hose

[O]: Face the white mark upward.

[a]: 7.0 N-m (0.71 kgf-m, 5.20 lbf-ft)

## Repair Instructions

### PAIR Reed Valve Removal and Installation (If Equipped)

BENH28K21206001

#### Removal

#### **⚠ WARNING**


The hot radiator and hot engine can burn you.  
Wait until the radiator and the engine are cool enough to touch.

#### Cylinder #1

- 1) Remove the radiator mounting bolt (1).
- 2) Move the radiator (2) forward.


#### **NOTICE**

Be careful not to damage the radiator fins.

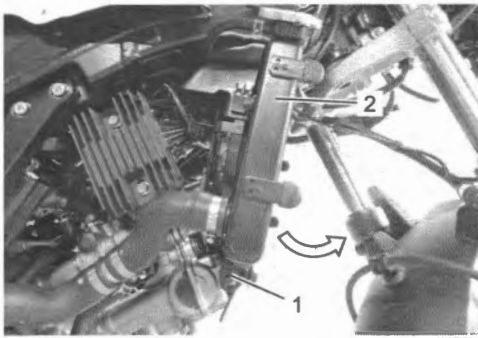

IH28K1120008-01

- 3) Remove the regulator/rectifier mounting bolts (1).

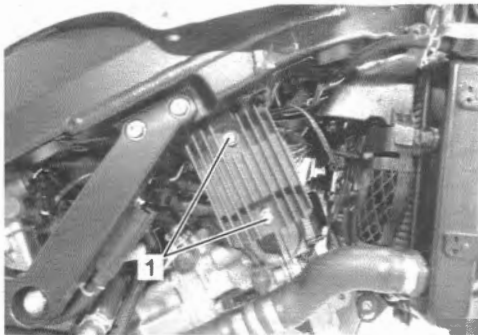


IH28K1120009-01

- 4) Disconnect the PAIR hose (1) and remove the PAIR reed valve cover (2).
- 5) Remove the PAIR reed valve (3).




IH28K1120010-01

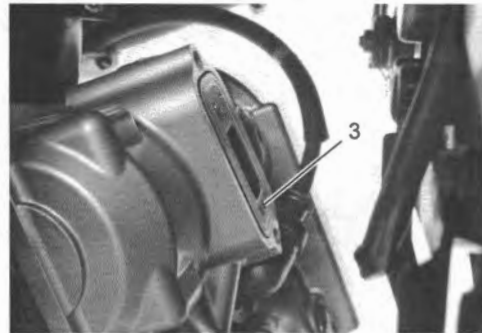

IH28K1120011-01


#### Cylinder #2

- 1) Lift and support the fuel tank. ⚡ (Page 1G-10)
- 2) Remove the radiator reservoir tank mounting bolts (1) and move the reservoir tank (2).

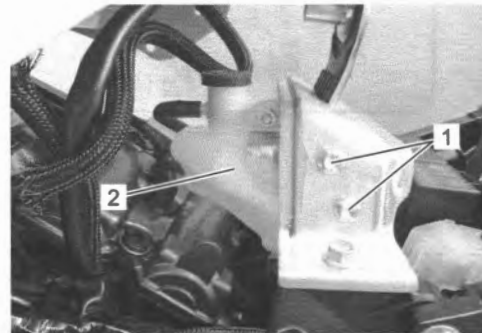


IH28K1120012-01

- 3) Disconnect the PAIR hose (1) and remove the PAIR reed valve cover (2).
- 4) Remove the PAIR reed valve (3).

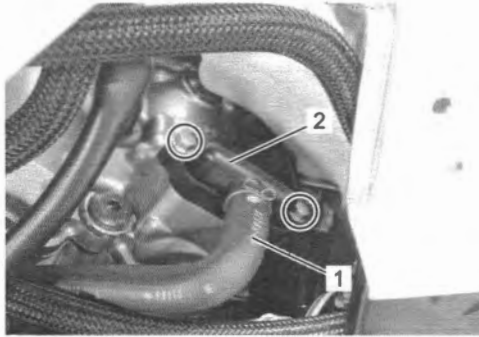

IH28K1120013-01

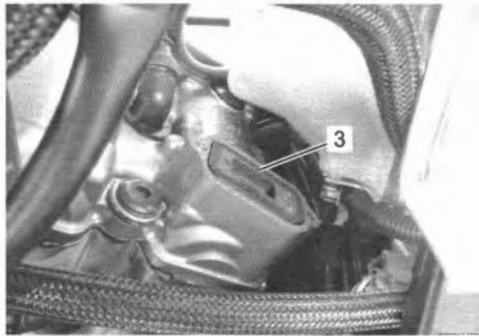

IH28K1120014-01

### Installation


Install the PAIR reed valve in the reverse order of removal. Pay attention to the following points:

- Tighten PAIR reed valve cover bolts (1) to the specified torque.


#### Tightening torque

PAIR reed valve cover bolt (a): 10 N·m (1.0 kgf-m, 7.5 lbf-ft)

- Connect the PAIR hose (2). Refer to "PAIR System Hose Routing Diagram (If Equipped)" (Page 1B-6).

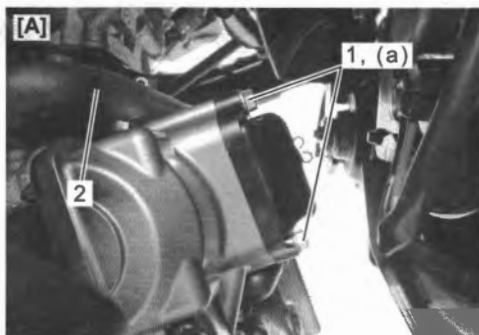

IH28K1120015-01

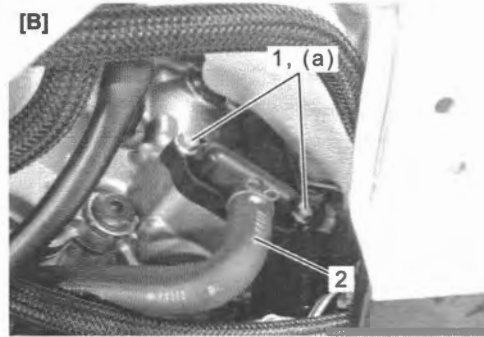

IH28K1120016-01

[A]: Cylinder #1

[B]: Cylinder #2

- Install the radiator. (Page 1F-7)

### PAIR Control Solenoid Valve Removal and Installation (If Equipped)


BENH28K21206002

#### Removal

- 1) Remove the air cleaner box. (Page 1D-6)
- 2) Disconnect the PAIR control solenoid valve coupler (1) and PAIR hoses (2).
- 3) Remove the PAIR control solenoid valve (3).



IH28K1120017-01

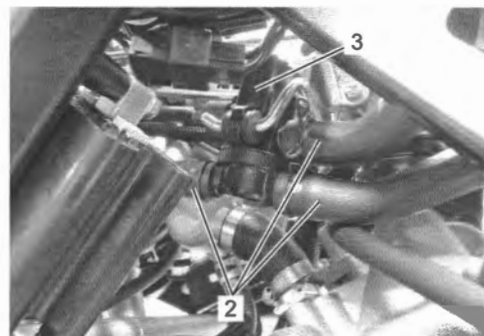

IH28K1120018-01

#### Installation

Install the PAIR control solenoid valve in the reverse order of removal. Pay attention to the following point:

- Connect the PAIR hoses properly. Refer to "PAIR System Hose Routing Diagram (If Equipped)" (Page 1B-6).

**PAIR System Inspection (If Equipped)**


BENH28K21206003

**PAIR Hose**

- 1) Remove the air cleaner box. (Page 1D-6)
- 2) Inspect the PAIR hoses (1) for wear or damage. If it is worn or damaged, replace the PAIR hose with a new one. (Page 1B-12)



IH28K1120019-02

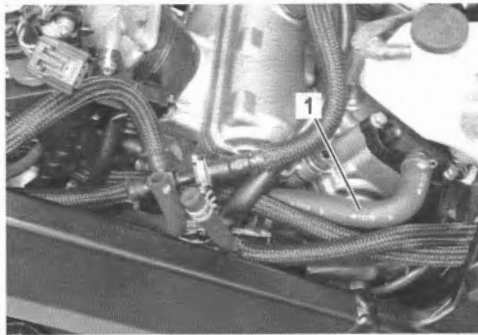

IH28K1120020-01

- 3) Install the removed parts.

**PAIR Reed Valve**

- 1) Remove the PAIR reed valve. (Page 1B-9)
- 2) Inspect the reed valves for carbon deposit. If carbon deposit is found on the reed valve, replace the PAIR reed valve with a new one.




IF31J1120010-01

- 3) Install the PAIR reed valve. (Page 1B-9)

**PAIR Control Solenoid Valve**

- 1) Remove the PAIR control solenoid valve. (Page 1B-10)

- 2) Check that air flows through the air inlet port to the air outlet ports. If air does not flow out, replace the PAIR control solenoid valve with a new one.

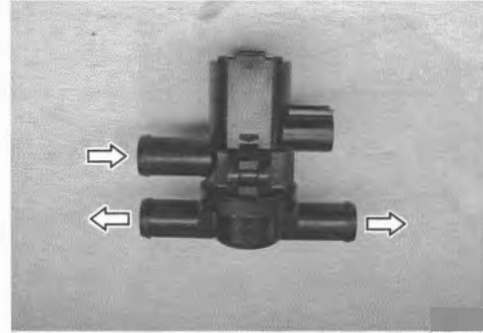

IF31J1120011-01

- 3) Connect the 12 V battery to the PAIR control solenoid valve terminals and check the air flow. If air does not flow out, the solenoid valve is in normal condition.

**PAIR control solenoid valve power supply voltage (if equipped)**

**[Standard]: Battery voltage**



IF31J1120012-01

- 4) Check the resistance between the terminals of the PAIR control solenoid valve. If the resistance is out of the specified valve, replace the PAIR control solenoid valve with a new one.

**PAIR control solenoid valve resistance (if equipped)**

**20 – 30 °C (68 – 86 °F) [Standard] 20 – 24 Ω**



IF31J1120013-01

- 5) Install the PAIR control solenoid valve. (Page 1B-10)



## PAIR Hose Removal and Installation (If Equipped)

BENH28K21206004

Refer to "PAIR System Hose Routing Diagram (If Equipped)" (Page 1B-6).

### Removal

- 1) Remove the air cleaner box. (Page 1D-6)
- 2) Move the radiator forward. Refer to "PAIR Reed Valve Removal and Installation (If Equipped)" (Page 1B-9).
- 3) Remove the PAIR hose.

### Installation

- 1) Install the PAIR hose.
- 2) Install the removed parts.

## PCV Hose Inspection

BENH28K21206005

- 1) Lift and support the fuel tank. (Page 1G-10)
- 2) Inspect the PCV hose (1) for wear and damage. If it is worn or damaged, replace the PCV hose with a new one. (Page 1B-12)
- 3) Check that the PCV hose (1) is securely connected.



IH28K1120021-01

- 4) Install the removed parts.

## PCV Hose Removal and Installation

BENH28K21206006

Refer to "PCV Hose Routing Diagram" (Page 1B-7).

### Removal

- 1) Remove the air cleaner box. (Page 1D-6)
- 2) Remove the PCV hose.

### Installation

- 1) Install the PCV hose.
- 2) Install the removed parts.

## EVAP Control System Removal and Installation (If Equipped)

BENH28K21206007

Refer to "EVAP Canister Hose Routing Diagram (If Equipped)" (Page 1B-8).

### Hose

#### Removal

- 1) Remove the EVAP system purge control solenoid valve. Refer to "EVAP System Purge Control Solenoid Valve" (Page 1B-12).
- 2) Remove the EVAP hoses.


#### Installation

- 1) Install the EVAP hoses.
- 2) Install the removed parts.

## EVAP Canister

#### Removal

- 1) Remove the seat. (Page 9D-19)
- 2) Disconnect the surge hose No. 1 (1) and purge hose No. 1 (2).
- 3) Remove the EVAP canister (3).

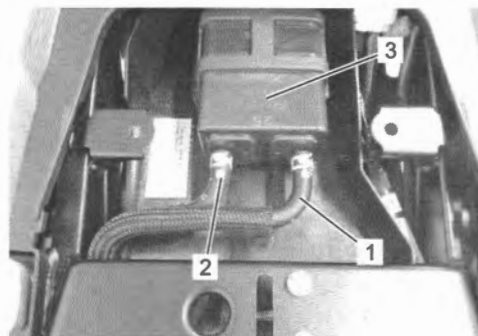

IH28K1120022-01

#### Installation

Install the EVAP canister in the reverse order of removal.

## EVAP System Purge Control Solenoid Valve


#### Removal

- 1) Remove the air cleaner box. (Page 1D-6)
- 2) Disconnect the coupler (1) and remove the EVAP system purge control solenoid valve (2).



IH28K1120023-01

- 3) Disconnect the purge hoses (1) and remove the EVAP system purge control solenoid valve (2).

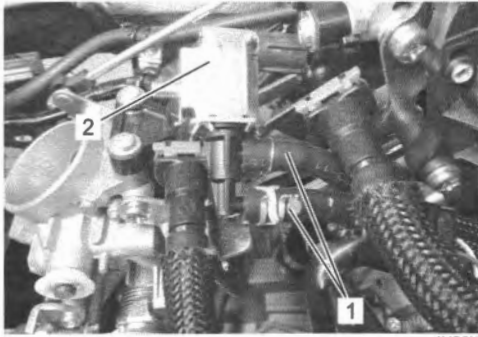

IH28K1120024-01


**Installation**

Install the EVAP system purge control solenoid valve in the reverse order of removal. Pay attention to the following point:

- Tighten the EVAP system purge control solenoid valve nut (1) to the specified torque.

**Tightening torque**

**EVAP system purge control solenoid valve nut (a): 7.0 N·m (0.71 kgf-m, 5.20 lbf-ft)**

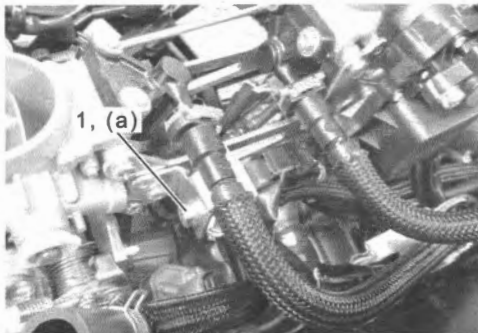

IH28K1120025-01

**EVAP Control System Inspection (If Equipped)**

BENH28K21206008


Refer to "EVAP Control System Removal and Installation (If Equipped)" (Page 1B-12).

**Hose**

Inspect the hoses for wear or damage. If it is worn or damaged, replace the hose with a new one.

**EVAP Canister**


Inspect the EVAP canister body for damage to the body. If any defect is found, replace the EVAP canister (1) with a new one.

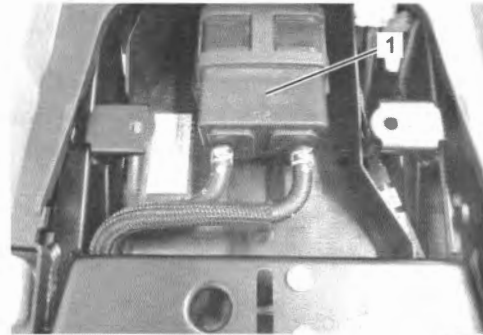

IH28K1120026-01

**EVAP System Purge Control Solenoid Valve**

- 1) Check that no air flows through both of the air inlet and outlet ports. If air flows out, replace the EVAP system purge control solenoid valve with a new one.

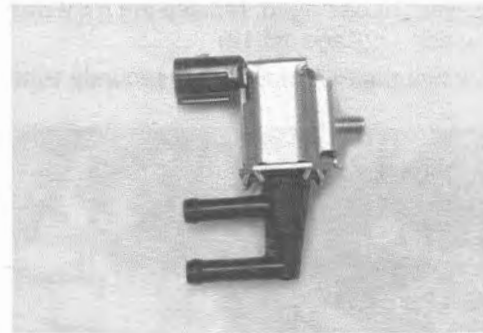


I718H2120003-03

- 2) Connect the 12 V battery to the terminals of the EVAP system purge control solenoid valve (1) and check the air flow. If air flows out, the solenoid valve is in normal condition.

**EVAP system purge control solenoid valve power supply voltage (if equipped)**

**[Standard]: Battery voltage**

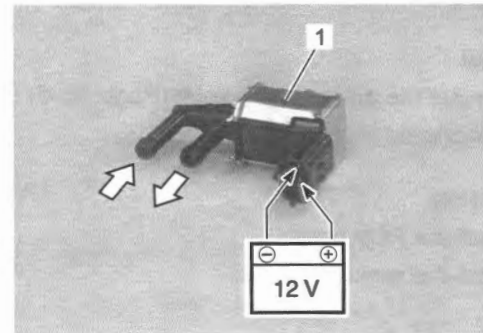


IE31J1120019-01

- 3) Check the resistance between the terminals of the EVAP system purge control solenoid valve (1). If the resistance is not within the standard range, replace the EVAP system purge control solenoid valve with a new one.

**EVAP system purge control solenoid valve resistance (if equipped)**

20 °C (68 °F) [Standard] 30 – 34 Ω

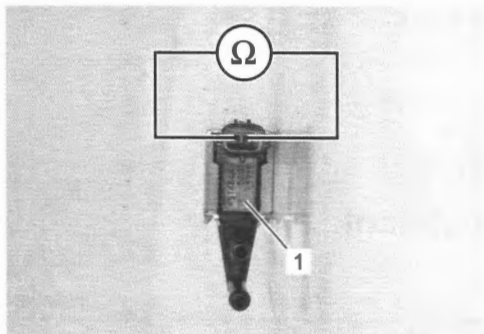


IE31J1120016-01

**Fuel Shut-off Valve**

Refer to "Fuel Tank Cap Removal and Installation" in Section 1G (Page 1G-10).

- 1) Hold the fuel tank cap so that the fuel tank cap breather hole (1) is aligned with and closely contacts the packing breather port (2) and the fuel tank cap upper surface (3) is located lower than the fuel tank cap ring upper surface (4).


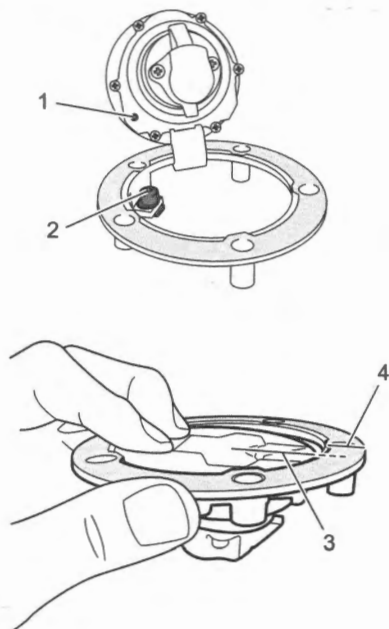


IH13K1120032-03

- 2) Keep the step 1), connect the vacuum pump gauge to the breather port (1) with the fuel tank cap turned upright, and give positive pressure to check that air can pass through.

**Special tool**

(A): 09917-47011

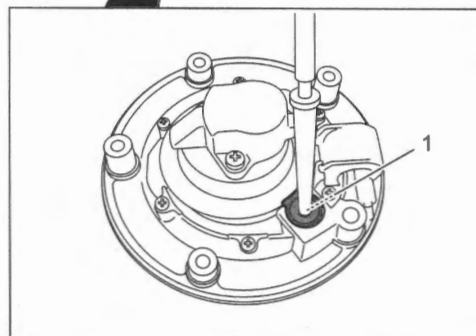
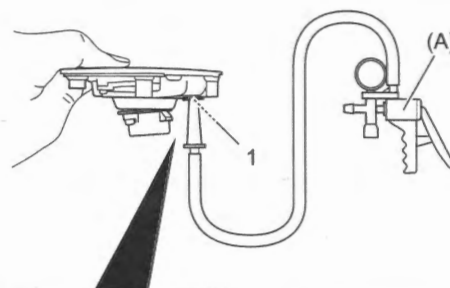


IH13K1120033-03

- 3) Keep the step 1), connect the vacuum pump gauge to the breather port (1) with the fuel tank cap turned upside down, and give negative pressure to check that air cannot pass through. If any defect is found, replace the fuel tank cap with a new one.

**Special tool**

(A): 09917-47011

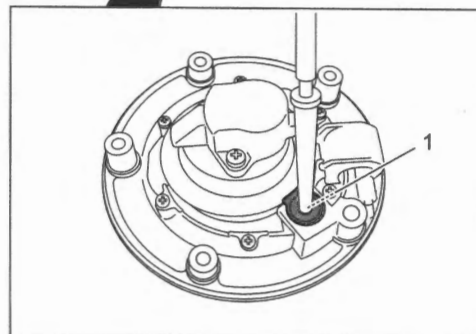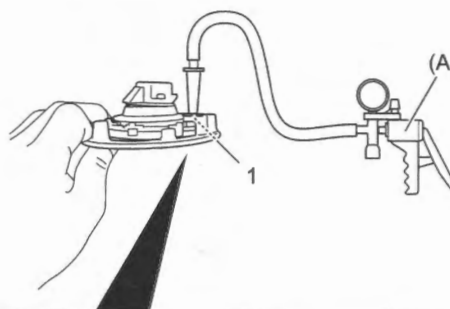

IH13K1120034-03

## Specifications

### Tightening Torque Specifications

BENH28K21207001

Fastening part	Tightening torque			Note
	N·m	kgf·m	lbf·ft	
PAIR reed valve cover bolt	10	1.0	7.5	☞(Page 1B-10)
EVAP system purge control solenoid valve nut	7.0	0.71	5.20	☞(Page 1B-13)

#### Reference:

For the tightening torques of fasteners not specified in this page, refer to:

“PAIR System Hose Routing Diagram (If Equipped)” (Page 1B-6)

“EVAP Canister Hose Routing Diagram (If Equipped)” (Page 1B-8)

“Fasteners Information” in Section 0C (Page 0C-11)

## Special Tools and Equipment

### Special Tool


BENH28K21208001

09917-47011

Vacuum pump gauge set

☞(Page 1B-14) /

☞(Page 1B-14)

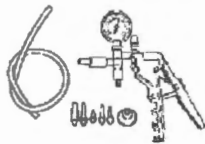

# Engine Electrical Devices

## Precautions

### Precautions for Engine Electrical Device

BENH28K21300001


Refer to "General Precautions" in Section 00 (Page 00-1), "Precautions for Electrical Circuit Service" in Section 00 (Page 00-2), "Precautions for Circuit Tester" in Section 00 (Page 00-7) and "Precautions for SDS-II" in Section 00 (Page 00-7).

## General Description

### ISC Valve System Description


BENH28K21301001

The ISC valve system is interlinked with the secondary throttle valve. In the throttle body is provided a bypass through which air volume is varied when the cutaway on the secondary throttle shaft is moved, causing the engine idle speed to be adjusted.

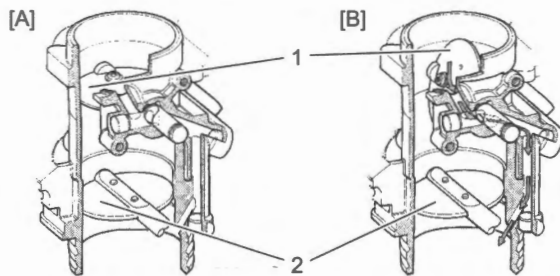

IE31J1130001-01

[A]: When ISC Valve is Closed.	1. Secondary throttle valve
[B]: When ISC Valve is Opened.	2. Throttle valve

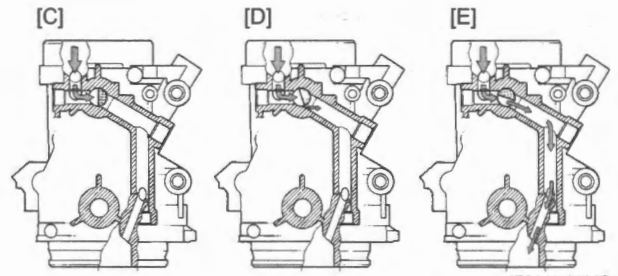


IE31J1130005-01

[C]: Opening angle is 0%	[E]: Opening angle is 80% or more
[D]: Opening angle is 20%	

## Schematic and Routing Diagram

### HO2 Sensor Lead Wire Routing Diagram

BENH28K21302001

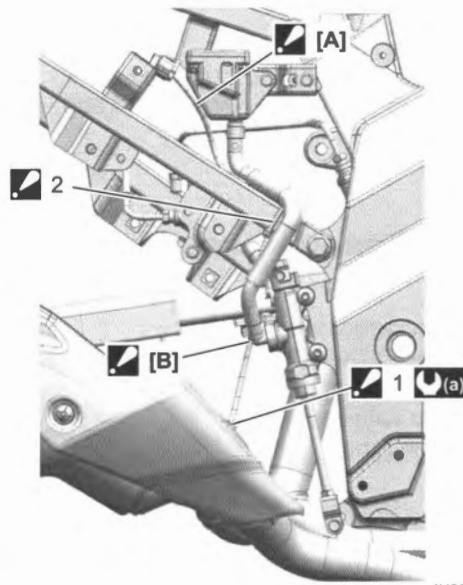

IH28K1130001-02

<p>☑ [A]: Pass the HO2 sensor lead wire between the rear brake reservoir hose and rear fender (front).</p>	<p>☑ 2. Clamp</p> <ul style="list-style-type: none"> <li>• Clamp the HO2 sensor read wire to the seat rail.</li> <li>• Face the clamp end downward and cut off excess tip of the clamp.</li> </ul>
<p>☑ [B]: Pass the HO2 sensor lead wire through the rear brake reservoir hose inside.</p>	<p>⤵(a) : 25 N-m (2.5 kgf-m, 18.5 lbf-ft)</p>
<p>☑ 1. HO2 sensor : Apply nickel based anti seize to the thread part.</p>	

## Component Location

### Engine Electrical Components Location

Refer to "Electrical Components Location" in Section 0A (Page 0A-8).

BENH28K21303001

## Diagnostic Information and Procedures

### Engine Symptom Diagnosis

Refer to "Engine Symptom Diagnosis" in Section 1A (Page 1A-10).

BENH28K21304001

## Repair Instructions

### ISC Valve (Secondary Throttle Valve Interlinked) Inspection

BENH28K21306001


Refer to "STP Sensor Inspection and Adjustment" (Page 1C-13).

### ISC Aperture Learned Value Reset

BENH28K21306002


When disassembling or replacing the throttle body, reset the ISC aperture learned value to the following procedures:

- 1) Remove the seat. (Page 9D-19)
- 2) Set up the SDS-II tool referring to the SDS-II operation manual for further details.
- 3) Turn the ignition switch ON.
- 4) Click the "Active control".
- 5) Click the "ISC aperture learned value reset".

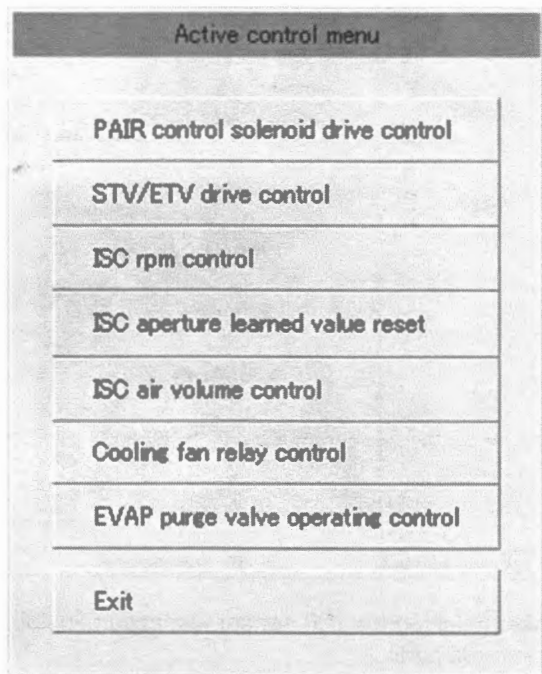

IH18K1130046-01


- 6) Click the "Reset" button to clear the ISC aperture leaned valve.

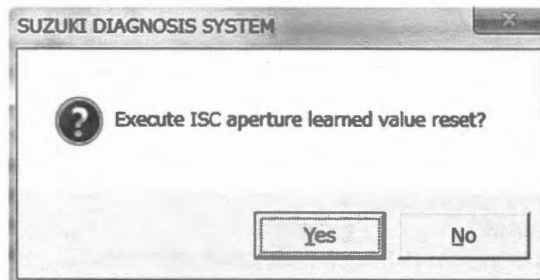

IF04K1130053-03

#### NOTE

The leaned value of the ISC valve (secondary throttle valve interlinked) is set at Preset position.

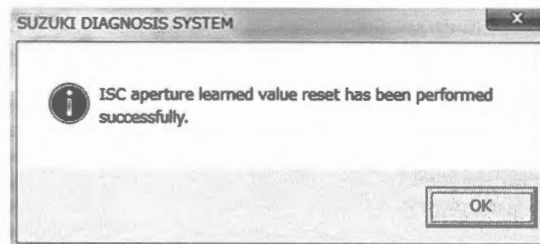

IF04K1130057-02

- 7) Close the SDS-II tool and turn the ignition switch OFF.

#### NOTE

The ISC valve (secondary throttle valve interlinked) opening initialization is automatically started after the ignition switch is turned OFF position.


- 8) Install the seat. (Page 9D-19)

**ECM Removal and Installation**

BENH28K21306003

**Removal**

- 1) Disconnect the battery (-) lead wire. (Page 1J-11)
- 2) Detach the band (1).
- 3) Disconnect the ECM couplers (2) and remove the ECM (3).

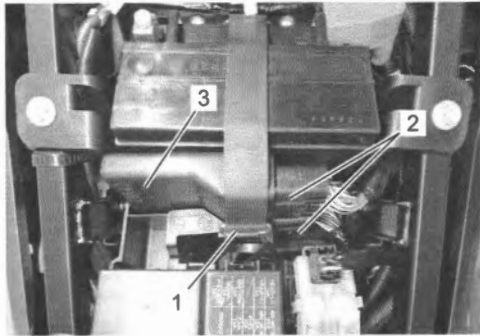

IH28K1130002-01

**Installation**

Install the ECM in the reverse order of removal.

**IAP Sensor Inspection**

BENH28K21306004

**IAP Sensor Output Voltage at Idle Speed**

- 1) Check the IAP sensor power supply voltage and circuit. Refer to "DTC P0105 / P0106 / P0107 (C17)" in Section 1A (Page 1A-23) and "DTC P1100 / P1101 / P1102 (C13)" in Section 1A (Page 1A-56).
- 2) Turn the ignition switch OFF.
- 3) Connect the IAP sensor coupler and ECM couplers.
- 4) Insert the needle point probes to the lead wire coupler.

**Special tool**  
**09900-25009**

- 5) Run the engine at idle speed, measure the IAP sensor output voltage between the G/B wire and B/Br wire (IAP sensor #1) (1) or G/Y wire and B/Br wire (IAP sensor #2) (2). If the voltage is not within the specified value, replace the IAP sensor. (Page 1C-5)

**IAP sensor #1 output voltage**


**Idle speed at 1 atm.**

**[Standard]: Approx. 2.5 V**


**IAP sensor #2 output voltage**

**Idle speed at 1 atm.**

**[Standard]: Approx. 2.5 V**

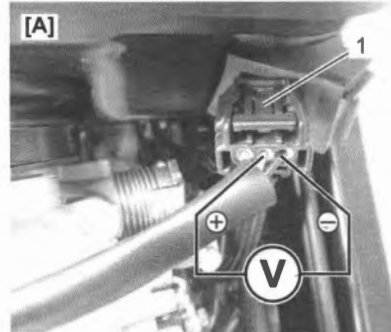

IH28K1130003-02

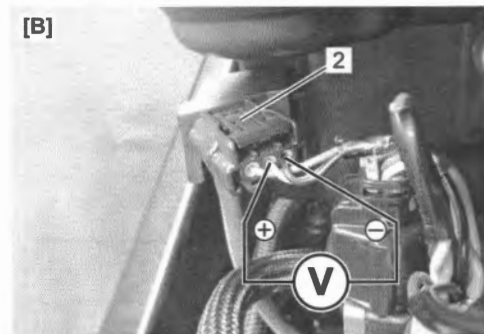

IH28K1130004-02

[A]: IAP sensor #1	[B]: IAP sensor #2
--------------------	--------------------

- 6) After finishing the IAP sensor inspection, install the removed parts.




### IAP Sensor Output Voltage

- 1) Turn the ignition switch OFF.
- 2) Remove the IAP sensor. (Page 1C-5)
- 3) Connect the vacuum pump gauge to the vacuum port of the IAP sensor.
- 4) Arrange 3 new 1.5 V batteries (1) in series (check that total voltage is 4.5 – 5.0 V) and connect (-) terminal to the ground terminal (2) and (+) terminal to the terminal (3).
- 5) Measure the voltage between terminal (4) and ground. Also, check if voltage reduces when vacuum is applied using the vacuum pump gauge. If the voltage is not within the specified value, replace the IAP sensor. (Page 1C-5)

#### Special tool

(A): 09917-47011

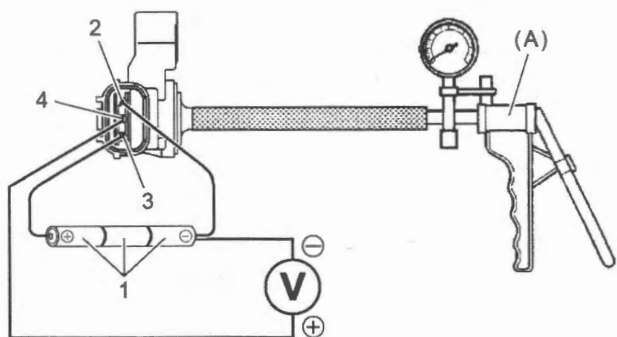

IH18K1130047-01

ALTITUDE (Reference)		ATMOSPHERIC PRESSURE		OUTPUT VOLTAGE
m	ft	kPa	mmHg	V
0 – 610	0 – 2001	100 – 94	760 – 705	3.4 – 4.0
611 – 1524	2005 – 5000	94 – 85	705 – 638	3.0 – 3.7
1525 – 2438	5003 – 7999	85 – 76	638 – 570	2.6 – 3.4
2439 – 3048	8002 – 10000	76 – 70	570 – 525	2.4 – 3.1

IF04K1130058-02


- 6) After finishing the IAP sensor inspection, install the removed parts.

### IAP Sensor Removal and Installation

BENH28K21306005


#### Removal

- 1) Remove the fuel tank. (Page 1G-10)
- 2) Disconnect the IAP sensor couplers (1).

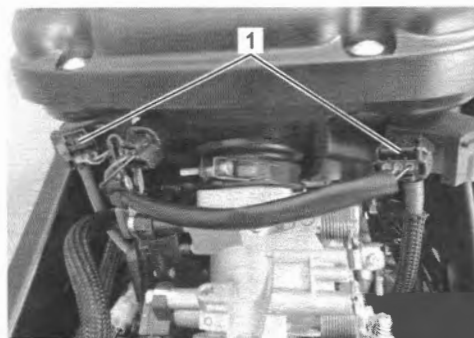

IH28K1130005-01

- 3) Detach the IAP sensor #1 (1) and #2 (2) from sensor holder.
- 4) Disconnect the vacuum hoses (3) from IAP sensors.

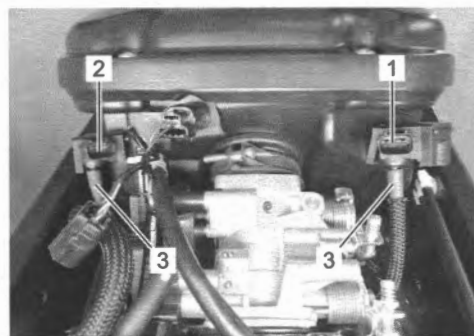

IH28K1130006-01

#### Installation

Attach the IAP sensor in the reverse order of removal.

#### IAT Sensor Inspection

BENH28K21306006

Refer to "IAT Sensor Removal and Installation" (Page 1C-6).

Measure the resistance of the IAT sensor. Make sure that the resistance value decreases as temperature increase. If measured resistance does not change as specified, replace IAT sensor with a new one.

#### NOTE

**IAT sensor resistance measurement method is the same way as that of the ECT sensor.**

(Page 1C-6)

#### IAT sensor resistance

0 °C (32 °F) [Standard]: 5400 – 6600 Ω


80 °C (176 °F) [Standard]: 290 – 390 Ω

## IAT Sensor Removal and Installation


BENH28K21306007

### Removal

- 1) Remove the fuel tank. (Page 1G-10)
- 2) Disconnect the IAT sensor coupler (1) and remove the IAT sensor (2).

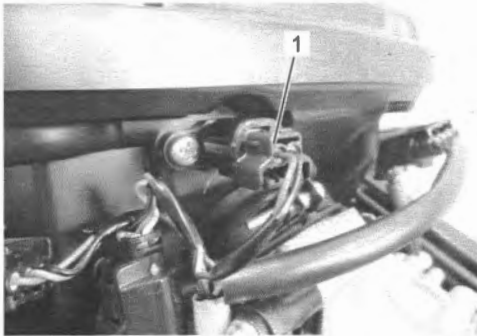

IH28K1130007-01

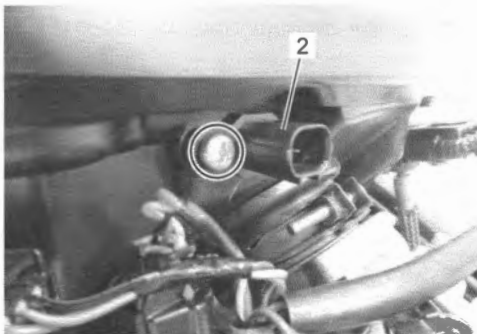

IH28K1130008-01


### Installation

Install the IAT sensor in the reverse order of removal. Pay attention to the following point:


- Install the new O-ring (1) and tighten the IAT sensor screw (2) to the specified torque.

#### Tightening torque

IAT sensor screw (a): 1.3 N·m (0.13 kgf-m, 0.95 lbf-ft)

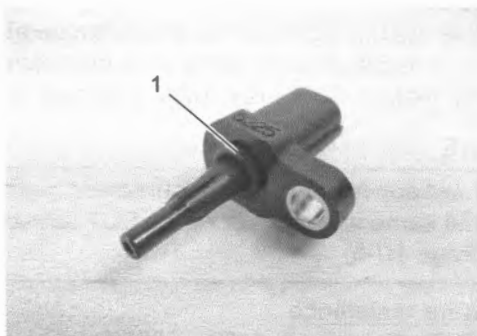

IH28K1130009-01

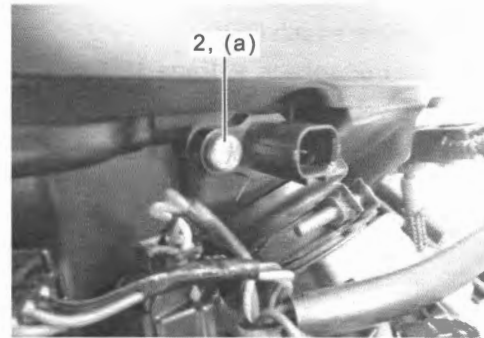

IH28K1130010-01

### ECT Sensor Inspection

BENH28K21306008

Refer to "ECT Sensor Removal and Installation" (Page 1C-7).

Measure the resistance between terminals of the ECT sensor (1). Make sure that the resistance value decreases as temperature increase. If measured resistance does not change as specified, replace ECT sensor with a new one.


#### NOTICE

- Handle the ECT sensor carefully as it will easily be broken if it receives excessively large shocks or forces.
- Keep the ECT sensor and thermometer (2) not in contact with the heater's water container.


#### ECT sensor resistance

20 °C (68 °F) [Standard]: 2320 – 2590 Ω

80 °C (176 °F) [Standard]: 310 – 326 Ω

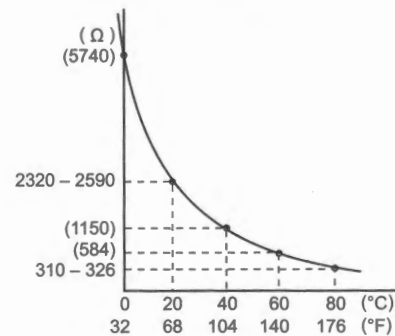

IH18K1130048-01

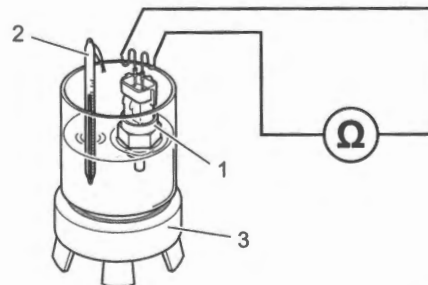

3. Heater

ID26J1130060-01

## ECT Sensor Removal and Installation

BENH28K21306009

### Removal

- 1) Drain engine coolant. (Page 1F-5)
- 2) Remove the throttle body. (Page 1D-9)
- 3) Disconnect the ECT sensor coupler (1).




IH28K1130011-01

- 4) Hold the thermostat inlet connector (1) by hand, and remove the ECT sensor (2).

### NOTICE

Take special care when handling the ECT sensor. It may cause damage if it gets an excessive impact.

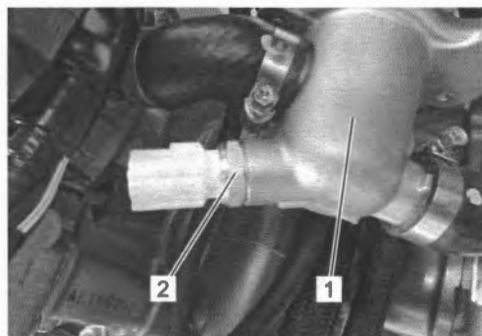

IH28K1130012-01


### Installation

Install the ECT sensor in the reverse order of removal. Pay attention to the following point:

- Install the new gasket washer (1) and tighten the ECT sensor (2) to the specified torque.

### Tightening torque

ECT sensor (a): 18 N·m (1.8 kgf·m, 13.5 lbf·ft)

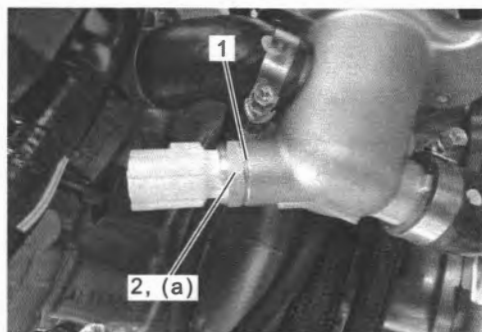

IH28K1130013-02

## TP Sensor Inspection

BENH28K21306010

- 1) Check that the throttle cable play is within the specification. (Page 1D-9)
- 2) Check the TP sensor power supply voltage and circuit. (Page 1A-29)
- 3) Turn the ignition switch OFF and connect the ECM couplers.
- 4) Connect the special tool between the TP sensor and its coupler.

### Special tool

(A): 09900-28631



IH28K1130014-01

- 5) Insert the probes to the lead wire coupler and turn the ignition switch ON.
- 6) Measure the voltage between the P/W wire and B/Br wire by turning the throttle grip open and close. If the voltage is not within the specified value, adjust or replace the TP sensor. Refer to "TP Sensor Adjustment" (Page 1C-8) or "TP Sensor Removal and Installation" (Page 1C-8).


### TP sensor output voltage

Closed [Standard]: 1.10 – 1.14 V

Opened [Standard]: 4.34 – 4.54 V

### Special tool

(A): 09900-28631

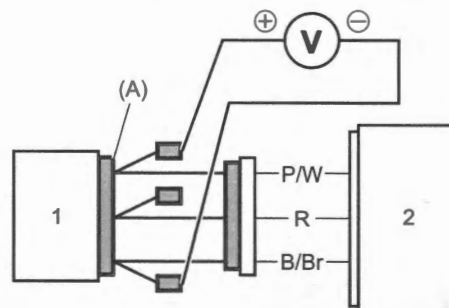

IH18K1130013-01

1. TP sensor	2. ECM
--------------	--------

- 7) After finishing the TP sensor inspection, disconnect the special tool and install the removed parts.

## TP Sensor Adjustment


BENH28K21306011

- 1) Check the TP sensor output voltage. ⚡(Page 1C-7)
- 2) If voltage is not within the specified value, loosen the TP sensor mounting screw (1) with the special tool.

**Special tool**  
09930-11950

- 3) Adjust the TP sensor (2) until the output voltage comes within the specified value.
- 4) Tighten the TP sensor mounting screw (1) to the specified torque.

**Tightening torque**  
TP sensor mounting screw (a): 3.5 N·m (0.36 kgf-m, 2.60 lbf-ft)

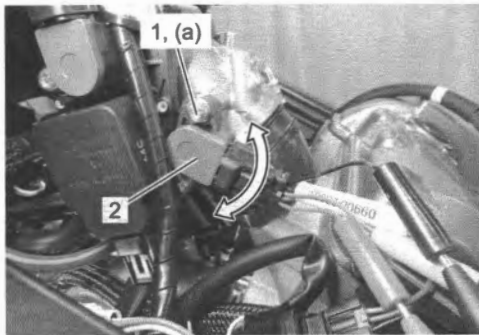

IH28K1130015-01

- 5) Disconnect the special tool and install the removed parts.


## TP Sensor Removal and Installation

BENH28K21306012

### Removal

- 1) Turn the ignition switch OFF.
- 2) Remove the fuel tank. ⚡(Page 1G-10)
- 3) Disconnect the TP sensor coupler (1).
- 4) Prior to disassembly, mark the sensor's original position with a paint or scribe for accurate reinstallation.
- 5) Remove the TP sensor (2) with the special tool.

**Special tool**  
09930-11950

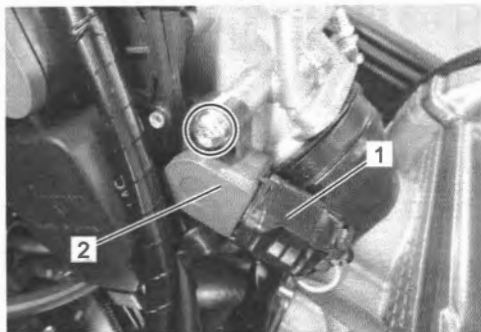


IH28K1130016-01

## Installation

Install the TP sensor in the reverse order of removal. Pay attention to the following points:

- Apply a thin coat of engine oil to the new O-ring (1).
- With the throttle valve fully closed, install the TP sensor (2) aligning the throttle shaft end (3) with the groove (4) of the TP sensor.

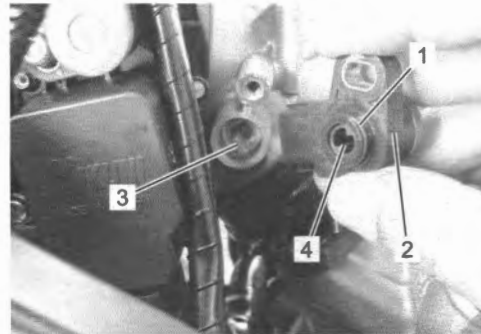


IH28K1130017-01

- Tighten the TP sensor mounting screw (1) to the specified torque.

**Special tool**  
09930-11950

**Tightening torque**  
TP sensor mounting screw (a): 3.5 N·m (0.36 kgf-m, 2.60 lbf-ft)

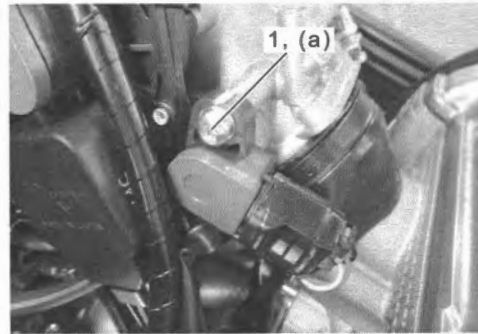

IH28K1130018-01

- Check the throttle valve operating smoothly.
- Adjust the position of TP sensor. ⚡(Page 1C-8)

## HO2 Sensor Inspection

BENH28K21306013


### HO2 Sensor Output Voltage

- 1) Remove the seat. ⚡(Page 9D-19)
- 2) Insert the needle point probes to the lead wire coupler.

**Special tool**  
09900-25009

- 3) Start the engine and warm up the engine enough.
- 4) Measure the HO2 sensor output voltage between the B wire and Gr wire, in idling condition.

- 5) If OK,  
 a) Remove the regulator/rectifier mounting bolts (1).

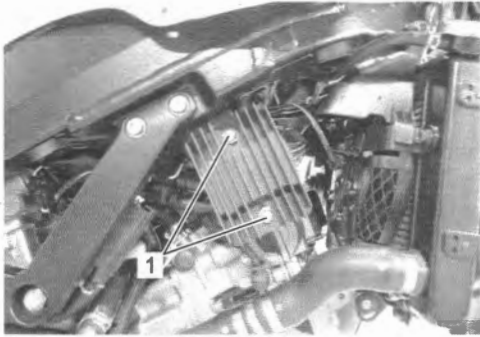

IH28K1130019-01

- b) Pinch the PAIR hose (if equipped) (1) with a proper hose clamp.




IH28K1130020-01

- 6) Measure the HO2 sensor output voltage while holding the engine speed at 5000 r/min.

**HO2 sensor output voltage**

Idle speed [Standard]: 0.90 V or less  
 5000 r/min [Standard]: 0.90 V or less

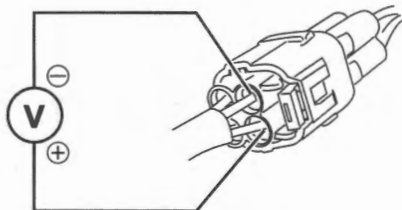

IE31J1110198-01

- 7) If the HO2 sensor output voltage is not within the standard range, replace the HO2 sensor. (Page 1C-9)  
 8) After finishing the HO2 sensor inspection, remove a proper hose clamp and install the removed parts.

**HO2 Sensor Heater Resistance**

- 1) Remove the seat. (Page 9D-19)  
 2) Disconnect the HO2 sensor coupler (1).




IH28K1130021-01

- 3) Measure the HO2 sensor heater resistance between the terminals of the HO2 sensor. If the resistance is out of the specified value, replace the HO2 sensor. (Page 1C-9)

**HO2 sensor heater resistance**

23 °C (73.4 °F) [Standard]: 11.5 – 17.5 Ω

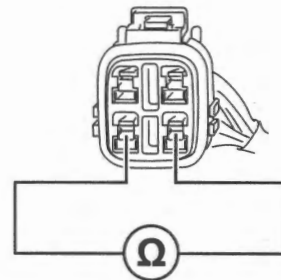

IE31J1110206-01

- 4) After finishing the HO2 sensor inspection, install the removed parts.

**HO2 Sensor Removal and Installation**

BENH28K21306014

**Removal**

**⚠ WARNING**


**Do not remove the HO2 sensor while it is hot.**

**NOTICE**

- Be careful not to expose the HO2 sensor to excessive shock.
- Do not use an impact wrench when removing or installing the HO2 sensor.
- Be careful not to twist or damage the sensor lead wire.


- 1) Remove the seat. (Page 9D-19)  
 2) Remove the right frame cover. (Page 9D-21)

- 3) Disconnect the HO2 sensor coupler (1).

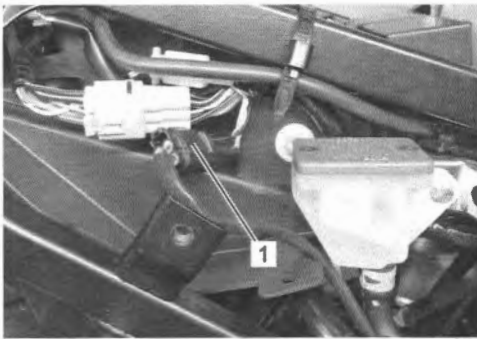


IH28K1130044-01

- 4) Disconnect the clamp (1).

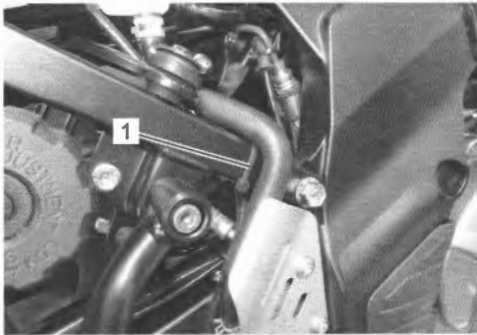

IH28K1130045-01

- 5) Remove the muffler cover (1).

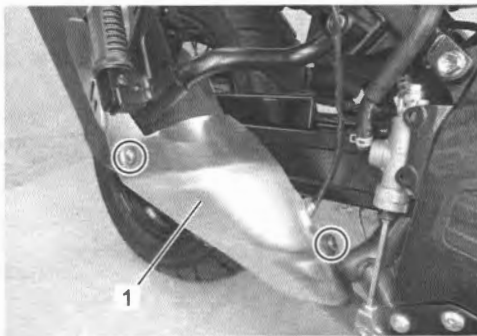

IH28K1130023-04

- 6) Remove the HO2 sensor (1).



IH28K1130024-01

**Installation**


Install the HO2 sensor in the reverse order of removal. Pay attention to the following points:

- Apply nickel based anti seize to the thread part of HO2 sensor (1).

- Tighten the HO2 sensor (1) to the specified torque.

**Tightening torque**

HO2 sensor (a): 25 N·m (2.5 kgf-m, 18.5 lbf-ft)

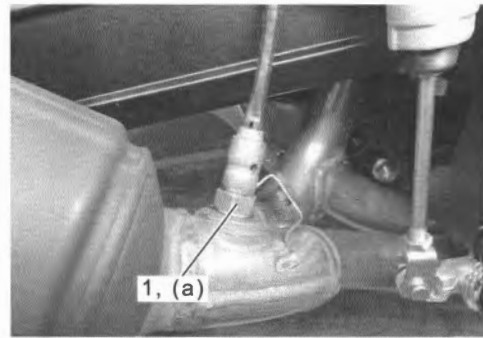

IH28K1130025-01

- Route the HO2 sensor lead wires. Refer to "HO2 Sensor Lead Wire Routing Diagram" (Page 1C-2) and "Wiring Harness Routing Diagram" in Section 9A (Page 9A-7).
- Install the muffler cover. ↻ (Page 1K-4)

**CKP Sensor Inspection**



BENH28K21306015

**CKP Sensor Peak Voltage**

**NOTE**

**Be sure that all the couplers are connected properly and the battery used is in fully charged condition.**

- 1) Disconnect the fuel injector couplers. Refer to "Fuel Injector On-Vehicle Inspection" in Section 1G (Page 1G-19).
- 2) Disconnect the CKP sensor coupler (1).

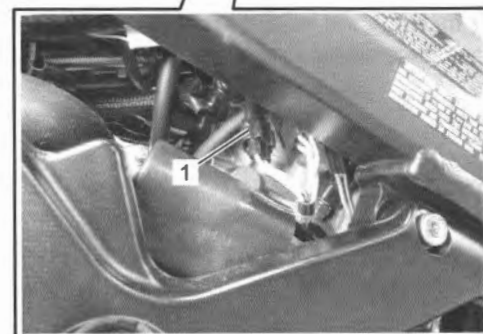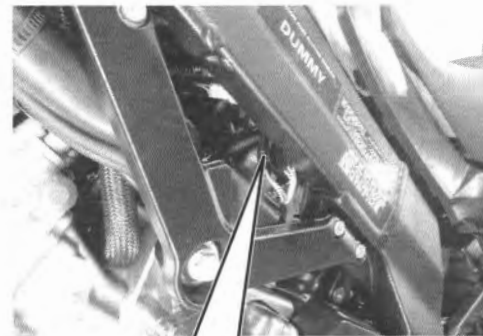


IH28K1130026-01

- 3) Connect the multi circuit tester with the peak volt adapter (1) as follows.

**CKP sensor – circuit tester connection**

	<b>(+) Probe</b>	<b>(-) Probe</b>
<b>CKP sensor (2)</b>	<b>G lead wire</b>	<b>W lead wire</b>



IH28K1130027-01

- 4) Insert the needle point probes to the lead wire coupler, measure the CKP sensor peak voltage in the following procedures:

**Special tool**  
**09900-25009**

- a) Shift the transmission into neutral, turn the ignition switch ON.
  - b) Press the starter switch and allow the engine to crank for a few seconds, and then measure the CKP sensor peak voltage.
- 5) Repeat the b) procedure several times and measure the highest peak voltage.  
If the voltage is lower than standard range, inspect for coupler connection and metal particles or foreign material being stuck on the CKP sensor and rotor tip. If the peak voltage is within the standard range, check the continuity between the CKP sensor coupler and ECM coupler.



**CKP sensor peak voltage**

**When cranking [Standard]: 1 V or more**

- 6) After measuring the CKP sensor peak voltage, install the removed parts.


**CKP Sensor Resistance**

- 1) Disconnect the CKP sensor coupler (1).

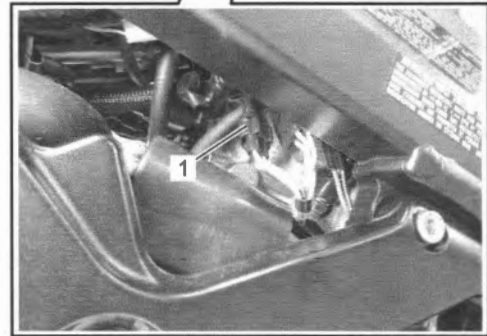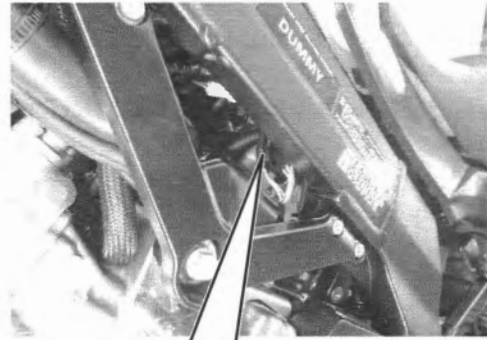

IH28K1130026-01

- 2) Check that the resistance between G lead wire of CKP sensor and ground is infinity.




IH28K1130028-01

- 3) Measure the resistance between the W lead wire and G lead wire. If the resistance is not within the standard range, replace the CKP sensor. Refer to "CKP Sensor Removal and Installation" (Page 1C-11).

**CKP sensor resistance**

**25 °C (77 °F) [Standard]: 156 – 234 Ω**



IH28K1130029-01

- 4) After measuring the CKP sensor resistance, connect the CKP sensor coupler.

**CKP Sensor Removal and Installation**

BENH28K21306016

Refer to "Generator Removal" in Section 1J (Page 1J-5) and "Generator Installation" in Section 1J (Page 1J-7).

**TO Sensor Inspection**

BENH28K21306017

**TO Sensor Output Voltage**

- 1) Remove the seat. (Page 9D-19)
- 2) Check the TO sensor power supply voltage and circuit. (Page 1A-58)
- 3) Turn the ignition switch OFF and connect the ECM couplers.
- 4) Dismount the TO sensor from its bracket and connect the TO sensor coupler.
- 5) Insert the needle point probes to the lead wire coupler.


**Special tool**  
09900-25009

- 6) Turn the ignition switch ON, measure the TO sensor output voltage between the Br/W wire and B/Br wire. If the voltage is not within the specified value, replace the TO sensor. (Page 1C-12)


**TO sensor output voltage**

**Normal [Standard]: 0.4 – 1.4 V**

**Leaning 65° [Standard]: 3.7 – 4.4 V**

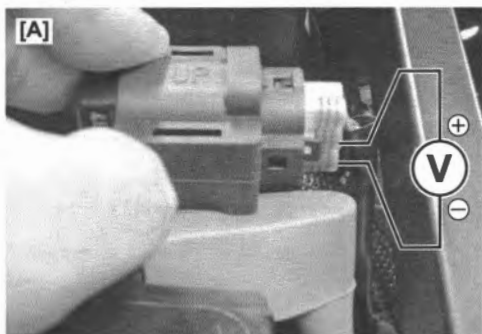

IH28K1130030-01

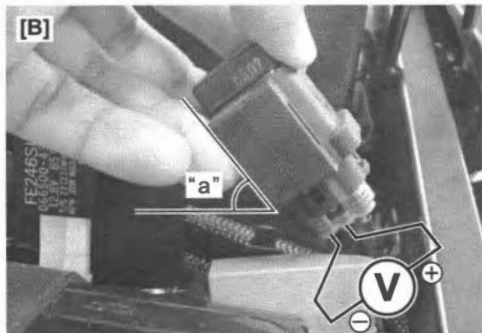

IH28K1130031-02

[A]: When sensor is horizontal (normal) level.

[B]: When sensor is leaned 65° "a" or more, left and right, from the horizontal level.


- 7) After finishing the TO sensor inspection, install the removed parts.

**TO Sensor Resistance**

- 1) Remove the seat. (Page 9D-19)
- 2) Remove the TO sensor. (Page 1C-12)
- 3) Measure the resistance between terminals (1) and (2). If the resistance is out of the specified value, replace the TO sensor. (Page 1C-12)

**TO sensor resistance**

**[Standard]: 16500 – 22300 Ω**

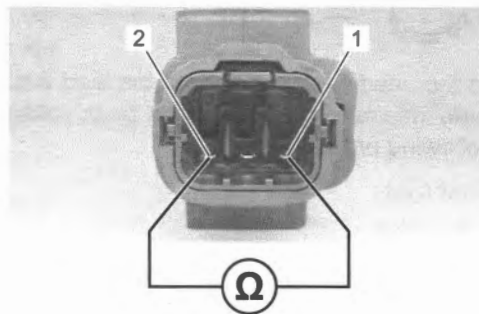

IH28K1130032-01

- 4) After finishing the TO sensor inspection, install the removed parts.


**TO Sensor Removal and Installation**

BENH28K21306018

Refer to "Seat Removal and Installation" in Section 9D (Page 9D-19).

**Removal**

Remove the TO sensor (1) and disconnect the coupler (2).

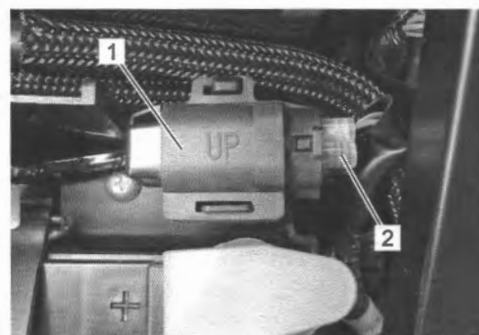

IH28K1130033-01



**Installation**

Install the TO sensor in the reverse order of removal. Pay attention to the following point:

- When installing the TO sensor, bring the “UP” letters (1) upward.




IH28K1130034-01

**STP Sensor Inspection and Adjustment**

BENH28K21306019

Refer to “Air Cleaner Box Removal and Installation” in Section 1D (Page 1D-6).

- 1) Check the STP sensor power supply voltage and circuit. (Page 1A-39)
- 2) Turn the ignition switch OFF.
- 3) Disconnect the STVA coupler (1).

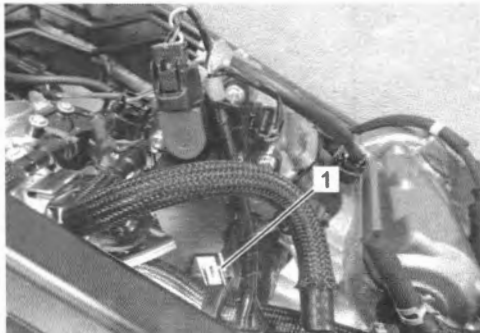

IH28K1130035-01

- 4) Connect the special tool between the STP sensor and its coupler.

**Special tool**  
(A): 09900-28631





IH28K1130036-01

- 5) Turn the ignition switch ON.

- 6) Measure the voltage between the Y wire and B/Br wire by turning the STV close and open with your finger.

**STP sensor output voltage**  
Closed [Standard]: 0.57 – 0.67 V  
Opened [Standard]: 4.4 – 4.6 V

**Special tool**  
(A): 09900-28631

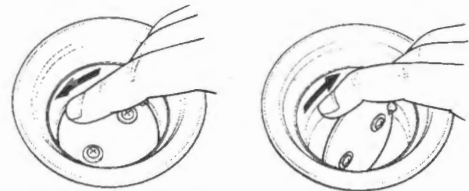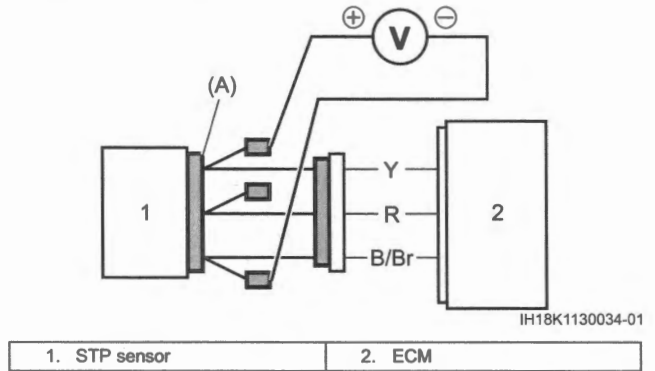


IH18K1130035-01

- 7) If voltage is not within the specified value, loosen the STP sensor mounting screw (1) with the special tool.

**Special tool**  
09930-11950

- 8) Adjust the STP sensor (2) until the output voltage comes within the specified value.
- 9) Tighten the STP sensor mounting screw (1) to the specified torque.

**Tightening torque**  
STP sensor mounting screw (a): 3.5 N·m (0.36 kgf-m, 2.60 lbf-ft)

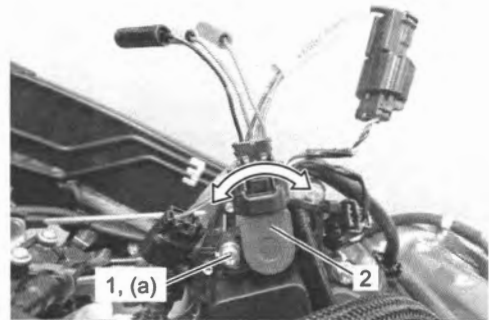

IH28K1130037-01

- 10) Disconnect the special tool and install the removed parts.

## STP Sensor Removal and Installation

BENH28K21306020

### Removal


- 1) Turn the ignition switch OFF.
- 2) Remove the air cleaner box. (Page 1D-6)
- 3) Disconnect the clamp (1) and STP sensor coupler (2).



IH28K1130038-01

- 4) Prior to disassembly, mark the sensor's original position with a paint or scribe for accurate reinstallation.
- 5) Remove the STP sensor (1) with the special tool.


**Special tool**  
09930-11950

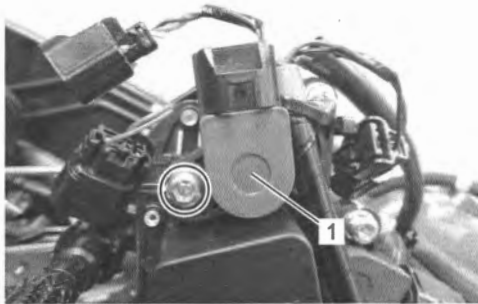

IH28K1130039-01


### Installation

- 1) Close the STV by finger.

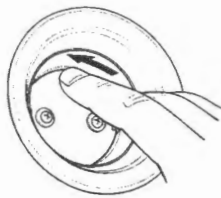

I718H1130017-01

- 2) Apply a thin coat of engine oil to the new O-ring (1).
- 3) With the STV fully closed, install the STP sensor (2) aligning the secondary throttle shaft end (3) with the groove (4) of the STP sensor.

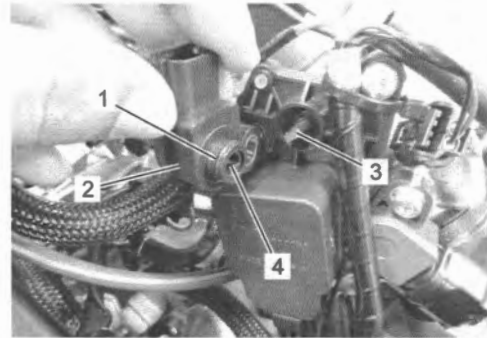


IH28K1130040-01

- 4) Tighten the STP sensor mounting screw (1) to the specified torque.

**Special tool**  
09930-11950

### Tightening torque

**STP sensor mounting screw (a): 3.5 N·m (0.36 kgf-m, 2.60 lbf-ft)**

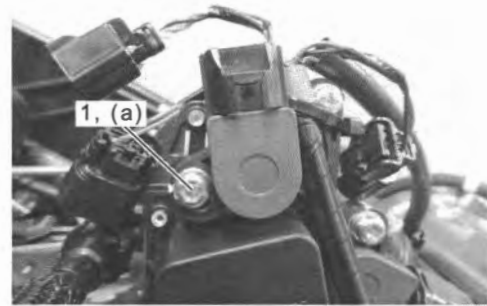

IH28K1130041-01

- 5) Check the STV operating smoothly.
- 6) Adjust the position of STP sensor. (Page 1C-13)
- 7) Clamp the wiring harness. Refer to "Wiring Harness Routing Diagram" in Section 9A (Page 9A-7).
- 8) Install the removed parts.

### STV Actuator Inspection


BENH28K21306021

Refer to "Throttle Body Removal and Installation" in Section 1D (Page 1D-9).

**NOTICE**

**Never remove the STVA from the throttle body. It is available only as a throttle body assembly.**

- 1) Check that the resistance between each terminal of STVA and ground is infinity.

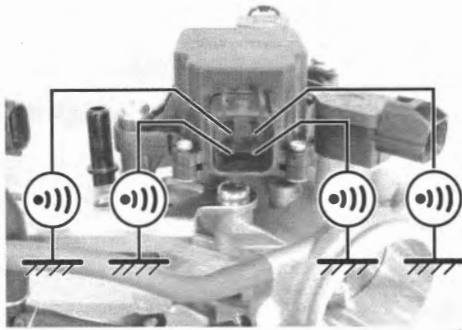


IH28K1130042-01

- 2) Measure the resistance between the terminals (1) and (3), and between the terminals (2) and (4). If the resistance is out of the specified value, replace the throttle body.

**STVA resistance**

**[Standard]: Approx. 7 Ω**

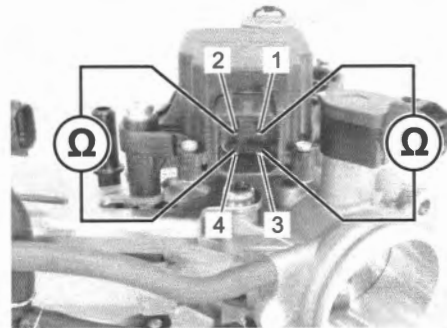

IH28K1130043-01

## Specifications

### Tightening Torque Specifications

BENH28K21307001

Fastening part	Tightening torque			Note
	N·m	kgf·m	lbf·ft	
IAT sensor screw	1.3	0.13	0.95	☞(Page 1C-6)
ECT sensor	18	1.8	13.5	☞(Page 1C-7)
TP sensor mounting screw	3.5	0.36	2.60	☞(Page 1C-8) / ☞(Page 1C-8)
HO2 sensor	25	2.5	18.5	☞(Page 1C-10)
STP sensor mounting screw	3.5	0.36	2.60	☞(Page 1C-13) / ☞(Page 1C-14)

**Reference:**



For the tightening torques of fasteners not specified in this page, refer to:  
 "HO2 Sensor Lead Wire Routing Diagram" (Page 1C-2)  
 "Fasteners Information" in Section 0C (Page 0C-11)

## Special Tools and Equipment

### Special Tool

BENH28K21308001

<p>09900-25009 Needle point probe set ☞ (Page 1C-4) / ☞ (Page 1C-8) / ☞ (Page 1C-11) / ☞ (Page 1C-12)</p>	<p>09900-28631 TP Sensor test lead ☞ (Page 1C-7) / ☞ (Page 1C-7) / ☞ (Page 1C-13) / ☞ (Page 1C-13)</p>
<p>09917-47011 Vacuum pump gauge set ☞ (Page 1C-5)</p>	<p>09930-11950 Torx® wrench (T25H) Torx® is the registered trademark of Camcar Division of Textron inc. U.S.A. ☞ (Page 1C-8) / ☞ (Page 1C-8) / ☞ (Page 1C-8) / ☞ (Page 1C-13) / ☞ (Page 1C-14) / ☞ (Page 1C-14)</p>

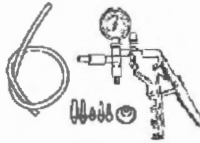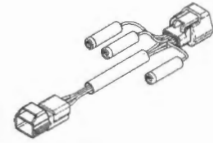

# Engine Mechanical

## Precautions

### Precautions for Engine Mechanical

BENH28K21400001

Refer to "General Precautions" in Section 00 (Page 00-1) and "Precautions for Electrical Circuit Service" in Section 00 (Page 00-2).

#### NOTE

---


Identify the position of each removed part. Organize the parts in their respective groups (e.g., intake, exhaust) so that they can be reinstalled in their original positions.

---

## Schematic and Routing Diagram

### Throttle Cable Routing Diagram

BENH28K21402001

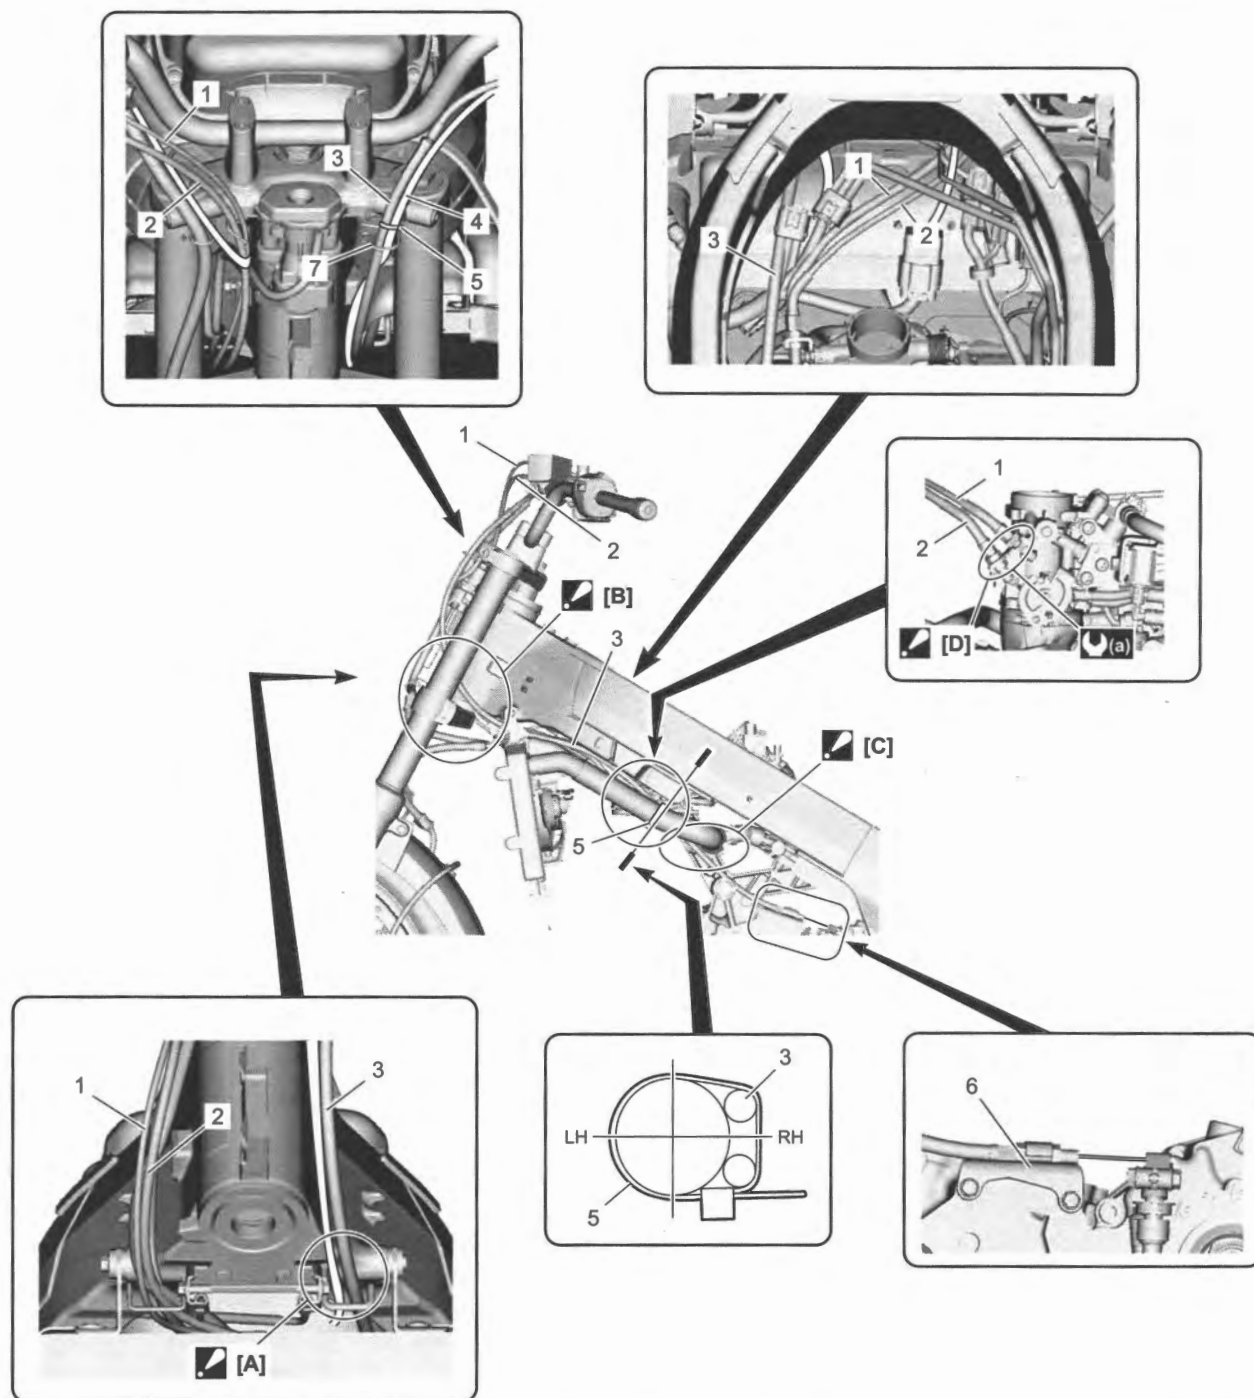

IH28K1140001-04

<ul style="list-style-type: none"> <li>☑ [A]: Pass the clutch cable outside of left handle switch lead wire.</li> </ul>	3. Clutch cable
<ul style="list-style-type: none"> <li>☑ [B]: Pass the clutch cable left side of frame head pipe. Pass the throttle cables right side of frame head pipe.</li> </ul>	4. Left handle switch lead wire
<ul style="list-style-type: none"> <li>☑ [C]: Pass the clutch cable under the radiator inlet hose.</li> </ul>	5. Clamp
<ul style="list-style-type: none"> <li>☑ [D]: The clearance between the throttle cable adjuster and the lock-nut is within one turn of the adjuster counterclockwise.</li> </ul>	6. Clutch cable stopper
1. Throttle cable No. 1	7. Clutch cable guide
2. Throttle cable No. 2	Ⓐ : 4.5 N-m (0.46 kgf-m, 3.35 lbf-ft)

## Diagnostic Information and Procedures

### Engine Mechanical Symptom Diagnosis

BENH28K21404001

Refer to "Engine Symptom Diagnosis" in Section 1A (Page 1A-10).

### Compression Pressure Check

BENH28K21404002

The compression pressure reading of a cylinder is a good indicator of its internal condition.

The decision to overhaul the cylinder is often based on the results of a compression test. Periodic maintenance records kept at your dealership should include compression readings for each maintenance service.

#### NOTE


- Before checking the engine for compression pressure, make sure that the cylinder head bolts are tightened to the specified torque values and the valves are properly adjusted.
- Make sure that the battery is in fully-charged condition.

- 1) Warm up the engine.
- 2) Remove the air cleaner box. (Page 1D-6)
- 3) Disconnect the all spark plug caps and remove the outside spark plugs (cylinders #1 and #2). (Page 1H-6)
- 4) Install the compression gauge and adapter in the spark plug hole. Make sure that the connection is tight.

#### Special tool


(A): 09915-64512

(B): 09913-10750

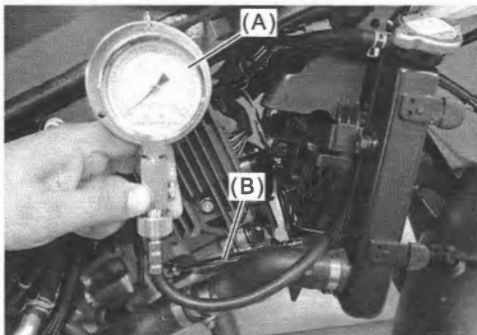

IH28K1140002-01

- 5) Keep the throttle grip in the fully-opened position.

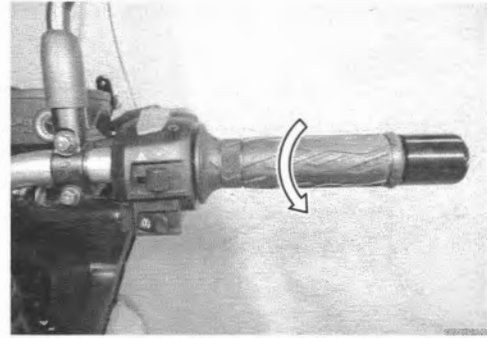

IH28K1140003-01

- 6) Press the starter switch and crank the engine for a few seconds. Record the maximum gauge reading as the cylinder compression.
- 7) Repeat this procedure with the other cylinder.

#### Compression pressure

[Standard]: 1300 – 1700 kPa (13.3 – 17.3 kgf/cm<sup>2</sup>, 188 – 246 psi)

[Limit]: 1100 kPa (11.2 kgf/cm<sup>2</sup>, 159 psi)

#### Compression pressure difference

[Limit]: 200 kPa (2.0 kgf/cm<sup>2</sup>, 29.0 psi)

If compression pressure is less than the service limit, it is considered any of the following reasons:

- Excessively worn cylinder walls
- Worn piston or piston rings
- Piston rings stuck in grooves
- Poor valve seating
- Ruptured or otherwise defective cylinder head gasket






#### Overhaul the engine in the following cases:

- Compression pressure in one of the cylinder is 1100 kPa (11.2 kgf/cm<sup>2</sup>, 159 psi) or less.
  - Compression pressures of all cylinders are 1300 kPa (13.3 kgf/cm<sup>2</sup>, 188 psi) or less.
  - Compression pressure difference between 2 cylinders is more than 200 kPa (2.0 kgf/cm<sup>2</sup>, 29.0 psi).
- 8) After checking the compression pressure, install the removed parts.

# Repair Instructions

## Intake System Construction

BENH28K21406001

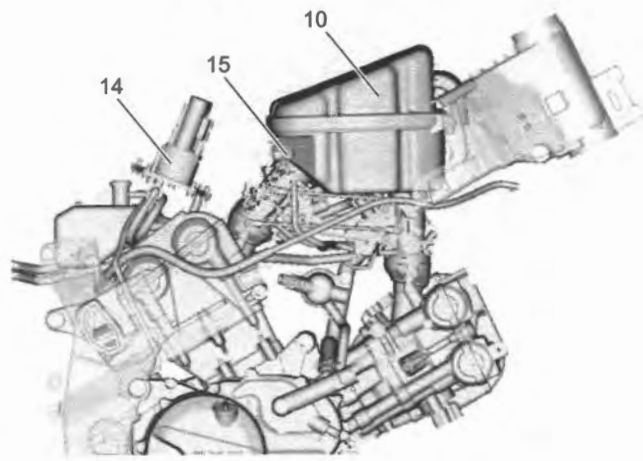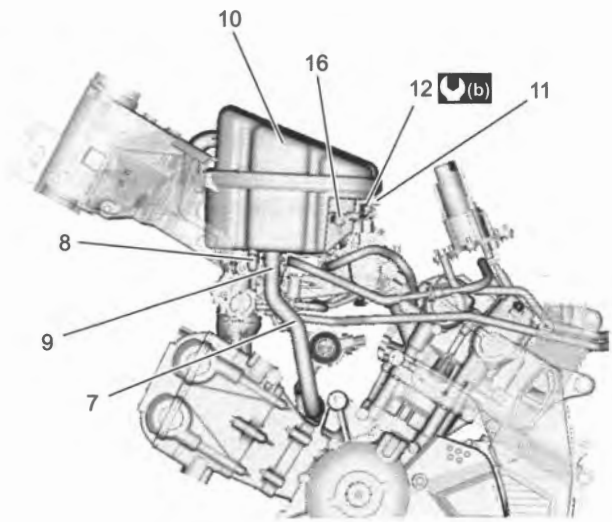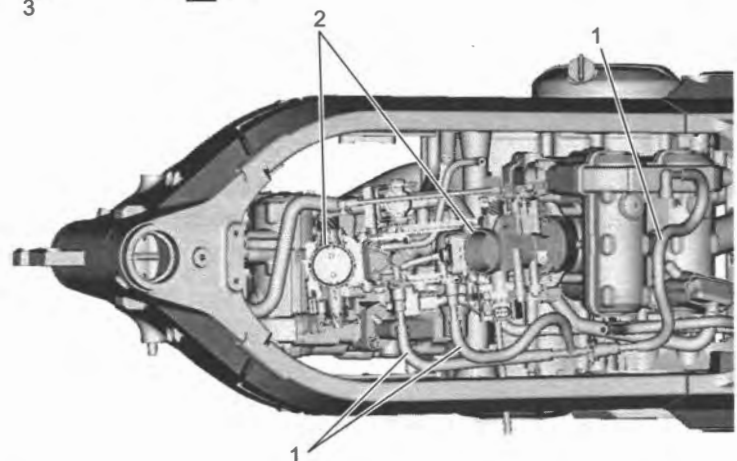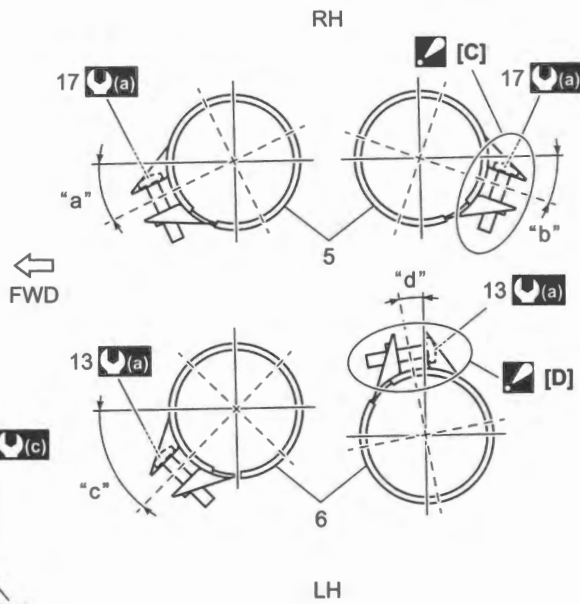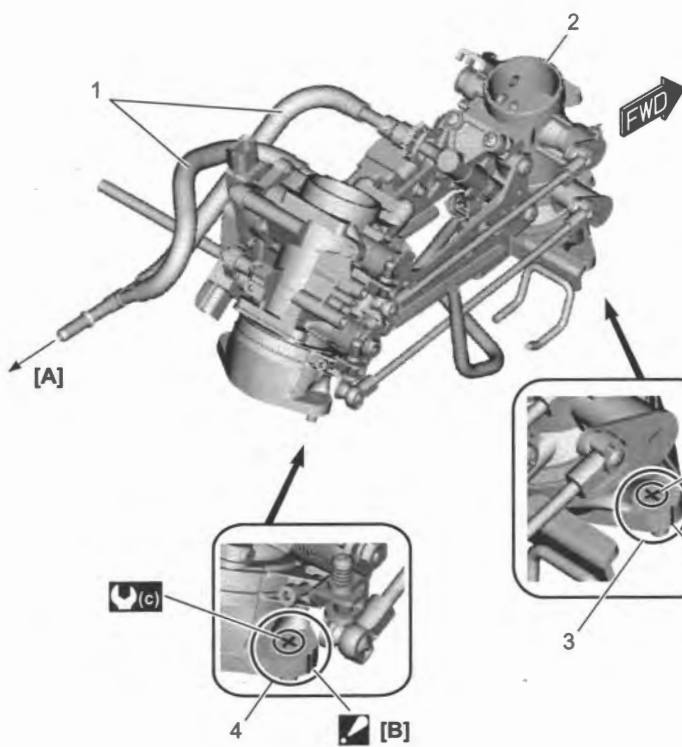




[A]: To fuel pump	11. IAT sensor
☑ [B]: Face the rib side of the intake pipe to right side.	12. IAT sensor screw
☑ [C]: Do not contact the clamp to the STVA.	13. Intake pipe screw
☑ [D]: Do not contact the clamp to the throttle body.	14. Fuel pump
1. Fuel feed hose	15. IAP sensor #1
2. Throttle body	16. IAP sensor #2
3. One rib	17. Outlet tube clamp
4. Two ribs	"a": 25 – 30°
5. Air cleaner outlet tube clamp	"b": 20°
6. Intake pipe clamp	"c": 45°
7. PCV hose	"d": 0 – 10°
8. Drain plug	ⓐ : 1.5 N·m (0.15 kgf·m, 1.10 lbf·ft)
9. Yellow marking	ⓑ : 1.3 N·m (0.13 kgf·m, 0.95 lbf·ft)
10. Air cleaner box	ⓒ : 8.4 N·m (0.86 kgf·m, 6.20 lbf·ft)

### Air Cleaner Element Removal and Installation

BENH28K21406002


#### Removal

- 1) Remove the fuel tank. ☞ (Page 1G-10)
- 2) Remove the air cleaner cap (1).

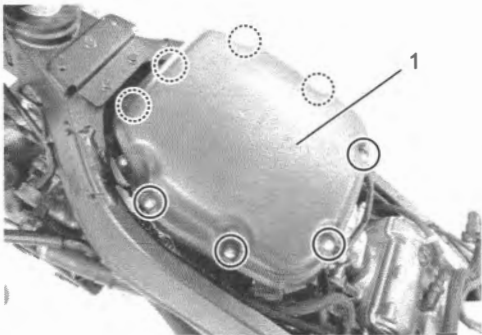

IH28K1140005-01

- 3) Remove the air cleaner element (1).

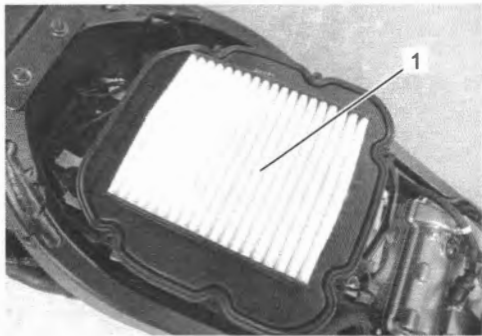

IH28K1140006-01

#### Installation

Install the air cleaner element in the reverse order of removal.

### Air Cleaner Element Inspection and Cleaning

BENH28K21406003


Refer to "Air Cleaner Element Removal and Installation" (Page 1D-5).

#### Inspection

- 1) Inspect the air cleaner element for clogging. If it is clogged with dirt, clean or replace it.

#### NOTICE


**If driving under dusty conditions, clean the air cleaner element more frequently. Make sure that the air cleaner is in good condition at all times. Life of the engine depends largely on this component.**

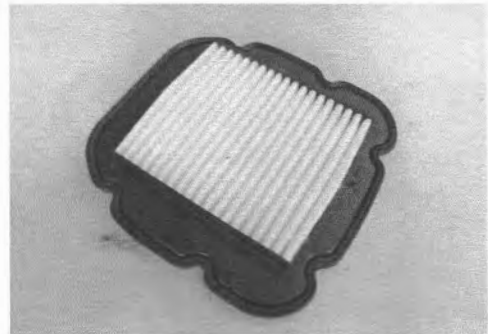

IH28K1140007-01

- 2) Remove the air cleaner box. ☞ (Page 1D-6)

- 3) Check the drain plug (1) for clogging, crack or damage. If any defect is found, clean or replace it.

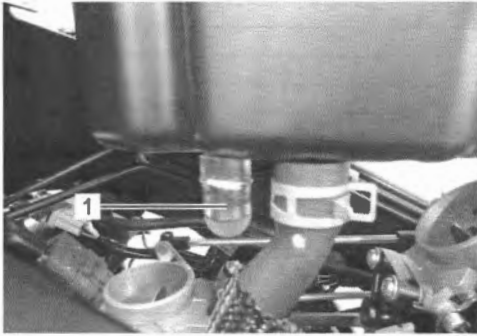

IH28K1140008-01

- 4) After finishing the air cleaner element inspection, install the removed parts.

### Cleaning

Carefully use compressed air to clean the air cleaner element.

### NOTICE

Always apply compressed air to the inside of the air cleaner element. If compressed air is applied to the outside, dirt will be forced into the pores of the air cleaner element, restricting air flow through the air cleaner element.




IH28K1140009-01

## Air Cleaner Box Removal and Installation

BENH28K21406004


### Removal

- 1) Remove the fuel tank. (Page 1G-10)
- 2) Disconnect the IAP sensor couplers (1).
- 3) Detach the IAP sensors (2) from sensor holders.
- 4) Disconnect the IAT sensor coupler (3).

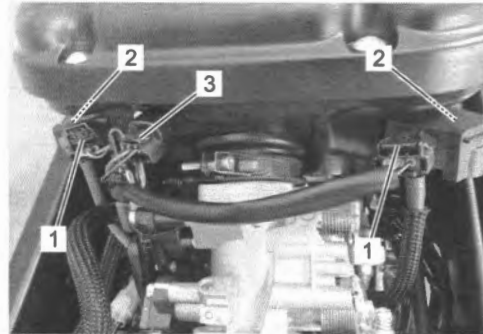

IH28K1140010-03

- 5) Remove the regulator/rectifier (1) from the bracket.

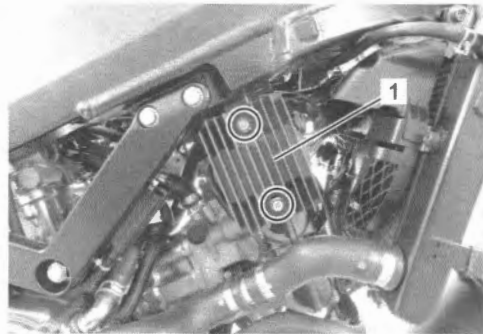


IH28K1140011-01

6) Loosen the air cleaner outlet tube clamp screws (1).




IH28K1140012-01

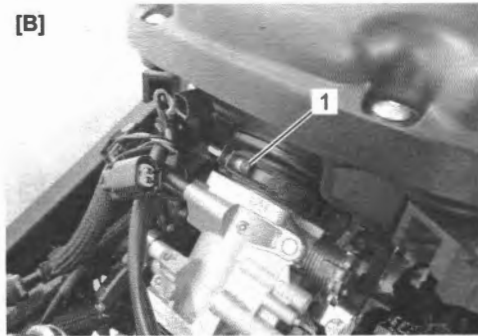

IH28K1140013-01

[A]: Cylinder #1	[B]: Cylinder #2
------------------	------------------

7) Disconnect the PCV hose (1).

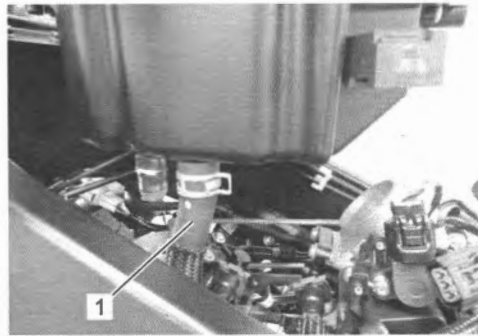

IH28K1140014-01

8) Disconnect the PAIR hose (1) (if equipped).



IH28K1140015-01

9) Remove the air cleaner box.


### Installation

Install the air cleaner box in the reverse order of removal. Pay attention to the following points:


- Connect the PCV hose. Refer to "PCV Hose Routing Diagram" in Section 1B (Page 1B-7).
- Position the air cleaner outlet tube clamps and tighten the air cleaner outlet tube clamp screws (1) to the specified torque. ⚙️ (Page 1D-4)

### Tightening torque

Air cleaner outlet tube clamp screw (a): 1.5 N·m ( 0.15 kgf-m, 1.10 lbf-ft)

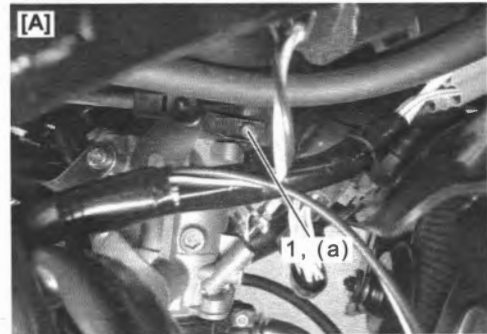

IH28K1140016-01

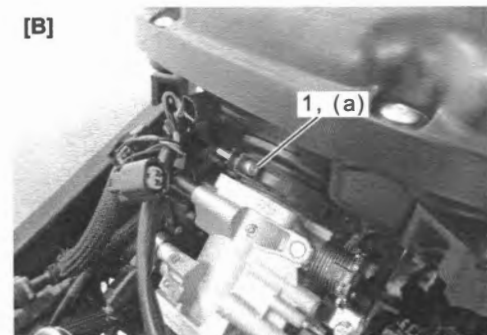


IH28K1140017-01

[A]: Cylinder #1	[B]: Cylinder #2
------------------	------------------

- Connect the PAIR hose (if equipped). Refer to "PAIR System Hose Routing Diagram (If Equipped)" in Section 1B (Page 1B-6).

Throttle Body Components

BENH28K21406005

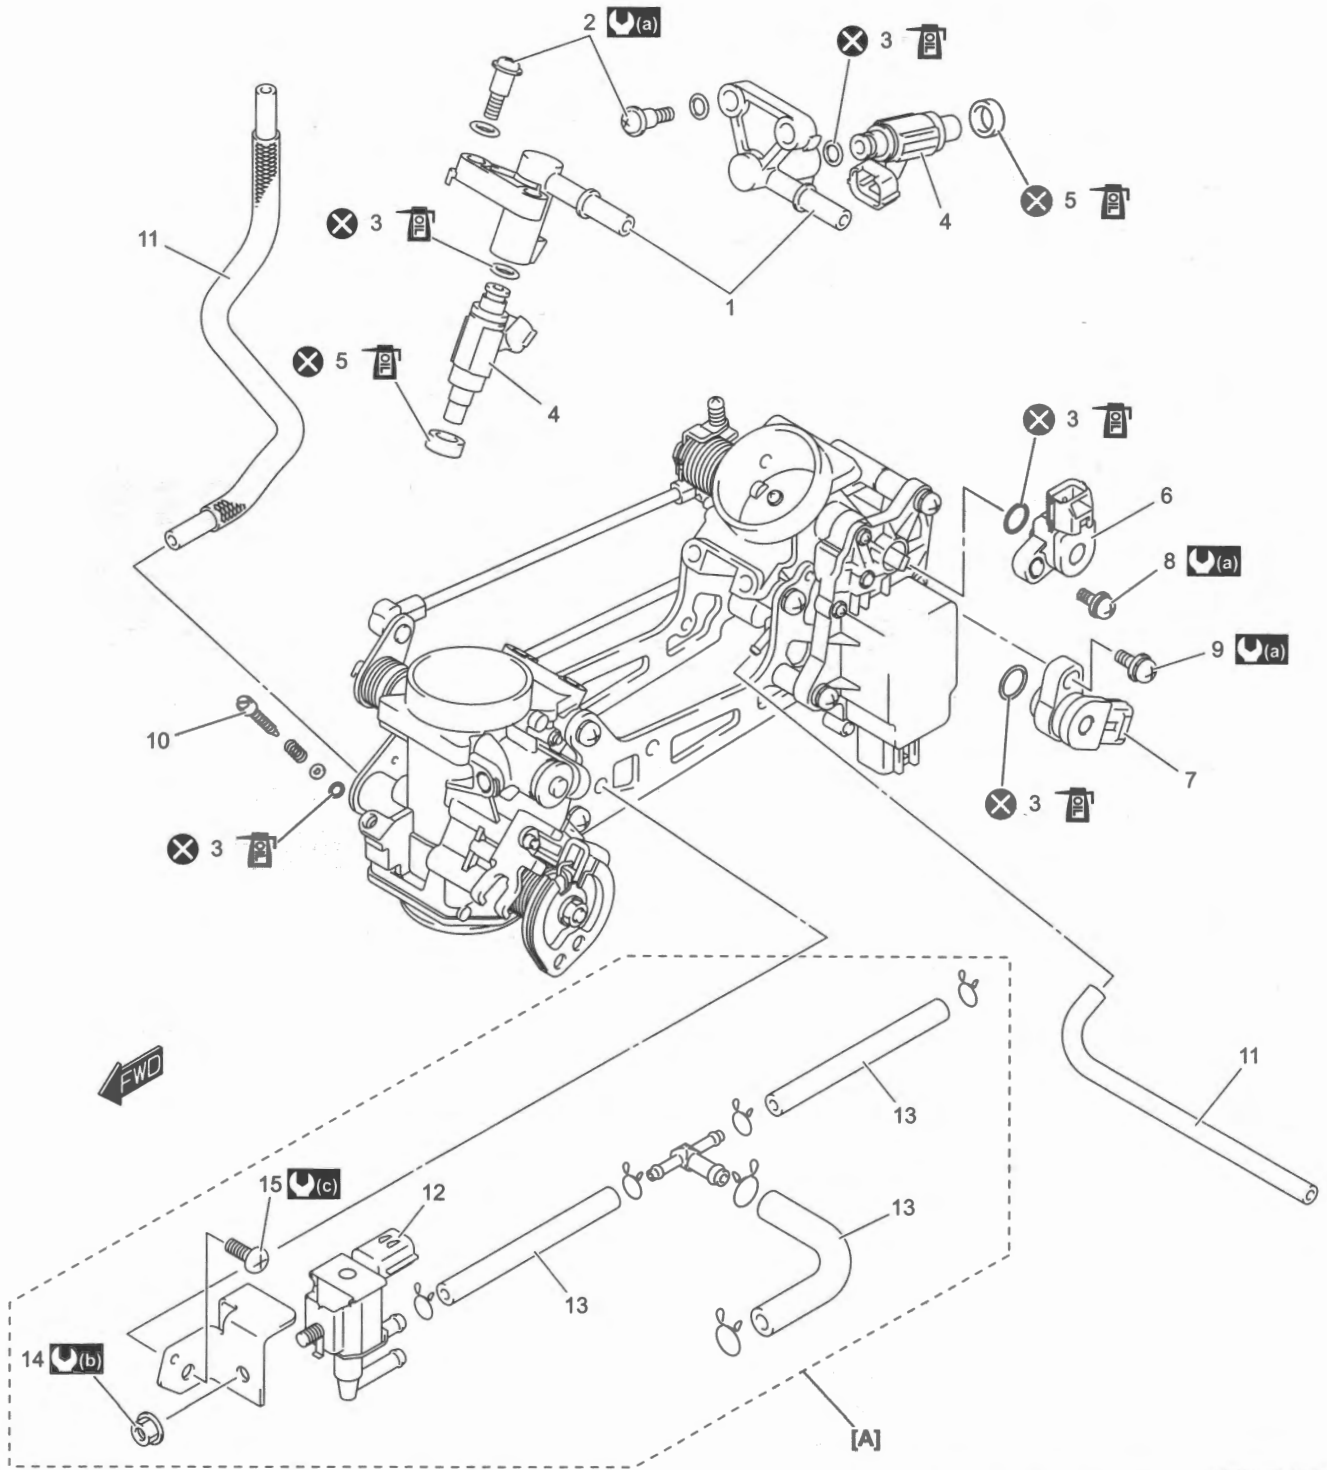

IH28K1140188-01

[A]: If equipped	7. TP sensor	14. EVAP system purge control solenoid valve nut
1. Fuel delivery pipe	8. STP sensor mounting screw	15. EVAP system purge control solenoid valve bracket screw
2. Fuel delivery pipe mounting screw	9. TP sensor mounting screw	: 3.5 N·m (0.36 kgf·m, 2.60 lbf·ft)
3. O-ring	10. Air screw	: 7.0 N·m (0.71 kgf·m, 5.20 lbf·ft)
4. Fuel injector	11. IAP sensor vacuum hose	: 5.0 N·m (0.51 kgf·m, 3.70 lbf·ft)
5. Cushion seal	12. EVAP system purge control solenoid valve	: Apply engine oil.
6. STP sensor	13. Purge hose	: Do not reuse.

## Throttle Cable Play On-Vehicle Inspection and Adjustment


BENH28K21406006

### Inspection

Turn the throttle grip slowly and inspect the throttle cable play "a" at the periphery of the grip.

### Throttle cable play

[Standard]: 2.0 – 4.0 mm (0.079 – 0.157 in)

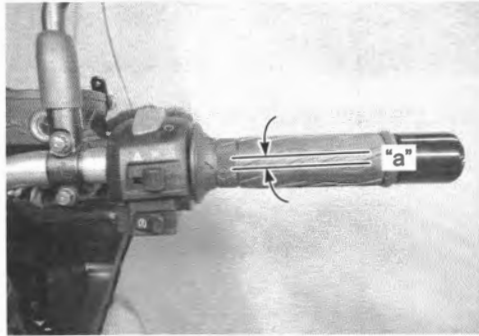


IH28K1140018-01

### Adjustment

- 1) Remove the rubber boot (1).
- 2) Loosen the lock-nut (2) of the throttle pulling cable.
- 3) Turn the adjuster (3) in or out until the throttle cable play (at the throttle grip) is within the specification. (Page 1D-9)
- 4) Tighten the lock-nut (2) while holding the adjuster (3).

### ⚠ WARNING

After the adjustment is completed, check that handlebar movement does not raise the engine idle speed and that the throttle grip returns smoothly and automatically.

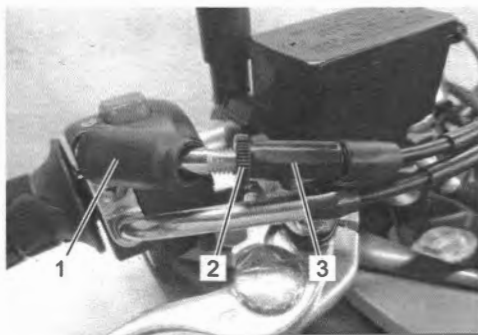

IH28K1140019-01

- 5) Install the rubber boot.

## Throttle Cable Removal and Installation

BENH28K21406007

Refer to "Throttle Cable Routing Diagram" (Page 1D-2).

### Removal

- 1) Remove the air cleaner box. (Page 1D-6)
- 2) Disconnect the throttle cables from the right handle switch. Refer to "Handlebar Removal and Installation" in Section 6B (Page 6B-3).
- 3) Disconnect the throttle cables (1) from the throttle body.



IH28K1140020-01

- 4) Remove the throttle cables.

### Installation

Install the throttle cables in the reverse order of removal. Pay attention to the following points:


- Install the throttle cables to the throttle body. Refer to "Throttle Body Removal and Installation" (Page 1D-9).
- After installing, check the throttle cable play and proper operation. (Page 1D-9)

## Throttle Body Removal and Installation

BENH28K21406008


### Removal

- 1) Disconnect the battery (-) lead wire. Refer to "Battery Removal and Installation" in Section 1J (Page 1J-11).
- 2) Remove the air cleaner box. (Page 1D-6)
- 3) Disconnect the fuel feed hose (1) from the throttle body. (Page 1G-7)

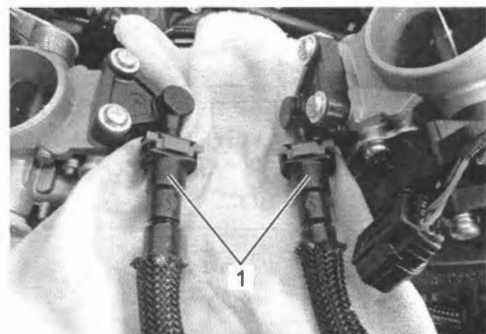


IH28K1140021-01

- 4) Disconnect the clamp (1), STVA coupler (2), STP sensor coupler (3) and TP sensor coupler (4).

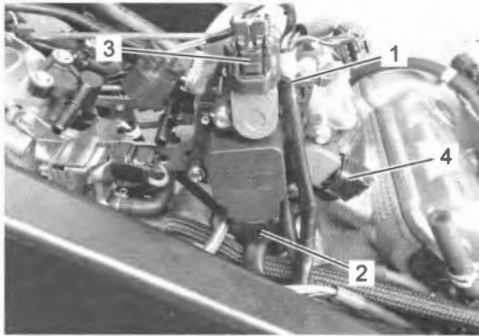

- 5) Disconnect the EVAP system purge control solenoid valve coupler (1) and purge hose No. 1 (2) (if equipped).

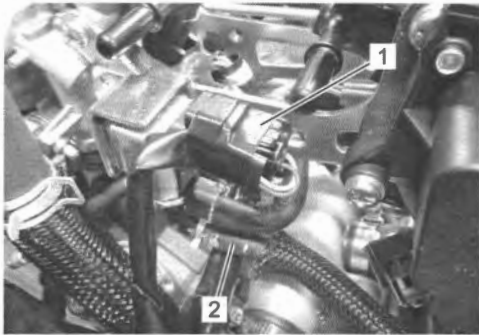

- 6) Disconnect the fuel injector couplers (1).




- 7) Disconnect the throttle cables (1) from the throttle body.

**NOTICE**

After disconnecting the throttle cables, do not snap the throttle valve from the open to full close. It may cause damage to the throttle valve and throttle body.



- 8) Remove the bolts and move the regulator/rectifier (1).

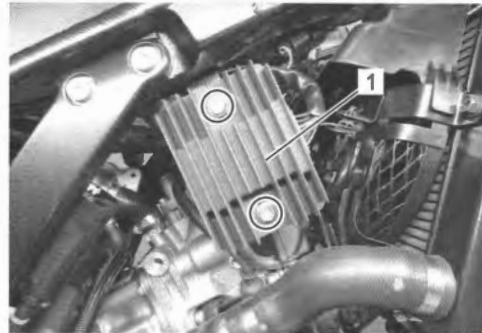


- 9) Loosen the intake pipe clamp screws (1) and remove the throttle body upward.



[A]: Cylinder #1

[B]: Cylinder #2

- 10) Disconnect the PAIR control solenoid valve (1) from the bracket (2) (if equipped).

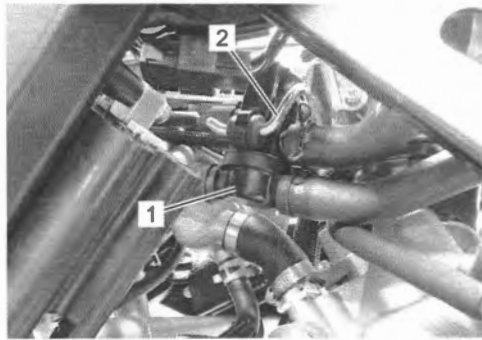

IH28K1140028-01


- 11) Remove the throttle body.

**NOTICE**

If foreign materials like mud and sand are adhered to the intake pipe or the throttle body, they are likely to get into the intake port.  
When foreign materials like mud or sand are adhered, remove them before starting the work.

**Installation**

- Connect the purge hose No. 1 and EVAP system purge control solenoid valve coupler (if equipped). Refer to "EVAP Canister Hose Routing Diagram (If Equipped)" in Section 1B (Page 1B-8).
- Connect the PAIR control solenoid valve (1) to the bracket (2) (if equipped).

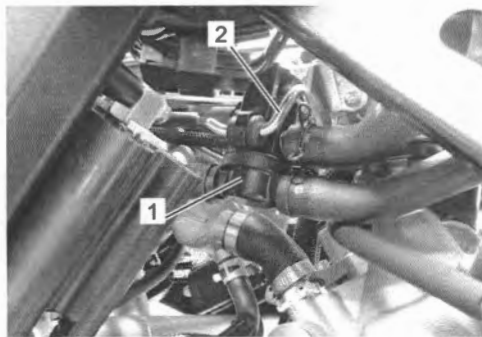


IH28K1140029-02

- Install the throttle body in the following procedures:
  - a. Connect the throttle pulling cable (1) and throttle returning cable (2) to the throttle body.
  - b. Install the throttle body to the intake pipes.
  - c. Position the intake pipe clamps and tighten the intake pipe clamp screws to the specified torque. (Page 1D-4)
  - d. Loosen each throttle cable lock-nut (3).
  - e. Turn in each throttle cable adjuster (4) fully and then make the clearance "a", turning it back counterclockwise one turn or less.
  - f. Tighten the throttle cable lock-nuts (3) to the specified torque.


**Tightening torque**

Throttle cable lock-nut (a): 4.5 N·m (0.46 kgf-m, 3.35 lbf-ft)

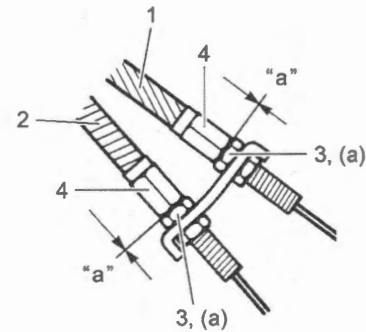

IH28K1140030-01


- Connect the fuel injector couplers.

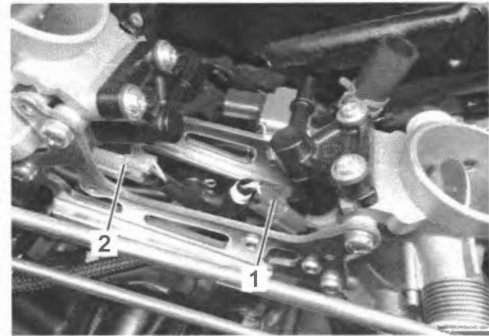

IH28K1140031-01

Coupler	Coupler color
Fuel injector #1 (1)	Br
Fuel injector #2 (2)	Gr

- Connect the STVA coupler (1), STP sensor coupler (2), TP sensor coupler (3) and clamp (4).

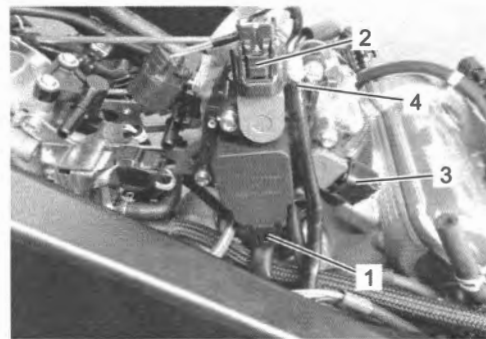

IH28K1140032-01

- Connect the fuel feed hose to the throttle body. (Page 1G-7)
- Install the air cleaner box. (Page 1D-6)
- Adjust the throttle cable play. (Page 1D-9)
- Reset the ISC aperture learned value. (Page 1C-3)


## Throttle Body Disassembly and Reassembly

BENH28K21406009

Refer to "Throttle Body Removal and Installation" (Page 1D-9).


### NOTICE

- Identify the position of each removed part. Organize the parts in their respective groups so that they can be reinstalled in their original positions.
- Never remove the STVA (1), link rods (2) and link plates (3).

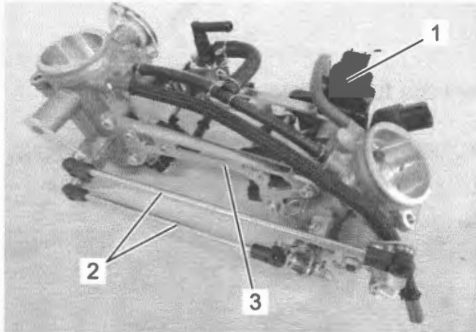


IH28K1140033-01

- Never remove the throttle valves (1) and secondary throttle valves (2).

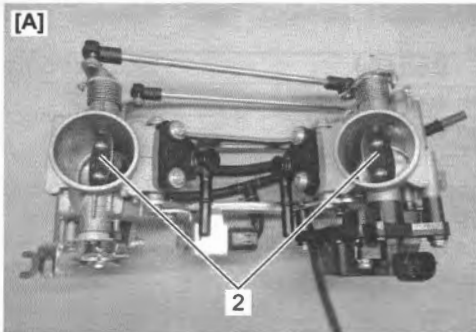

IH28K1140034-01

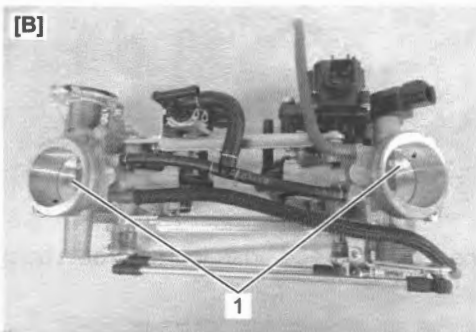


IH28K1140035-01

[A]: Upper side

[B]: Lower side


- These adjusting screws (1), (2), (3) and (4) are factory-adjusted at the time of delivery and therefore avoid removing or turning it unless otherwise necessary.

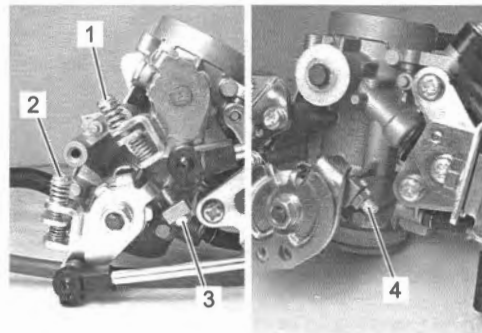

IH18K1140026-01


### Disassembly

- 1) Disconnect the IAP sensor vacuum hoses (1).

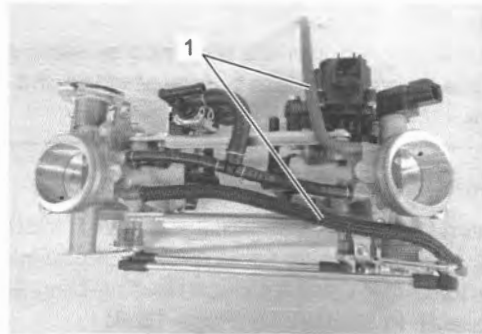

IH28K1140036-01


- 2) Disconnect the purge hoses (1) and remove EVAP system purge control solenoid valve (2) (if equipped).

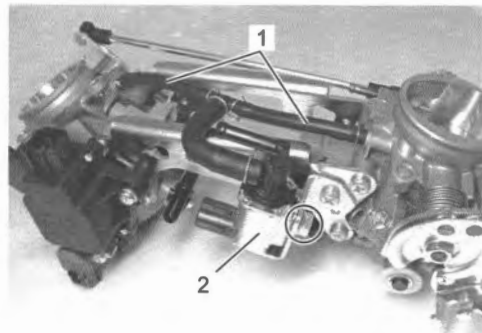

IH18K1140028-01




- 3) Remove the EVAP system purge control solenoid valve bracket (1) (if equipped).

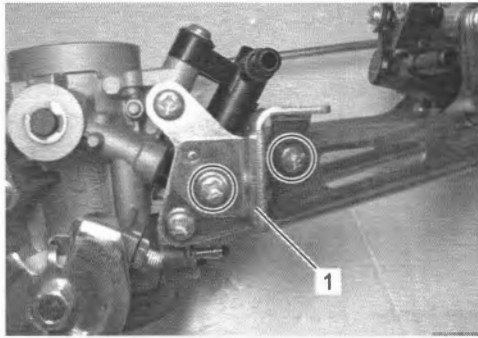


IH18K1140029-01

- 4) Remove the fuel delivery pipes (1). Refer to "Fuel Injector / Fuel Delivery Pipe Removal and Installation" in Section 1G (Page 1G-20).

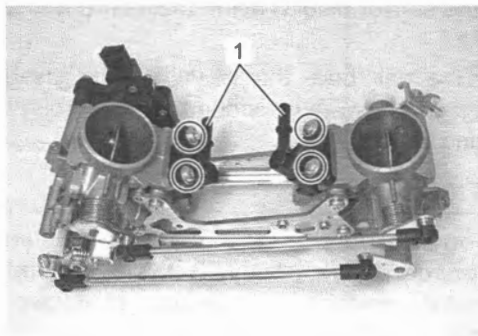


IH18K1140030-01

- 5) Remove the TP sensor (1). (Page 1C-8)  
 6) Remove the STP sensor (2). (Page 1C-14)

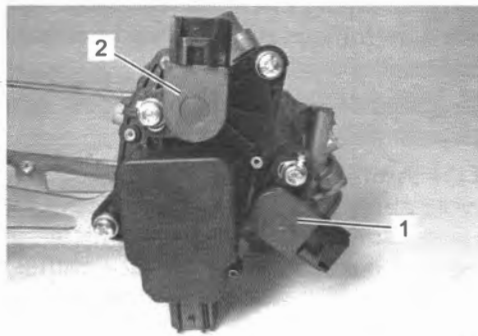


IH18K1140031-01

- 7) Before removing each air screw (1), determine the setting by slowly turning it clockwise and count the number of turns required to lightly seat the air screw. This counted number is important when reassembling air screw to the original position.  
 8) Remove the air screws (1).

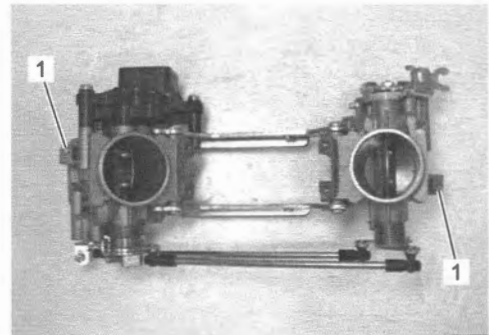

IH18K1140032-01

- 9) Remove the O-ring (1), washer (2) and spring (3).

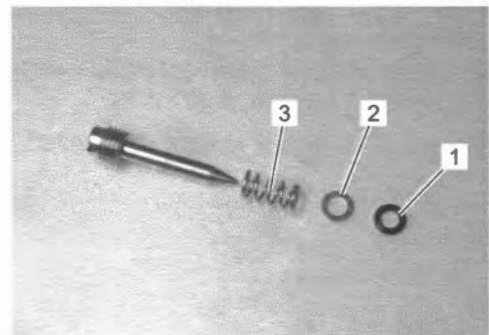


IH18K1140033-02

### Reassembly

Reassemble the throttle body in the reverse order of disassembly. Pay attention to the following points:

- Apply a thin coat of the engine oil to the new O-rings (1) and install each air screw (2) to the original setting by turning the air screw in until it lightly seats, and then backing it out the same number of turns counted during disassembly.

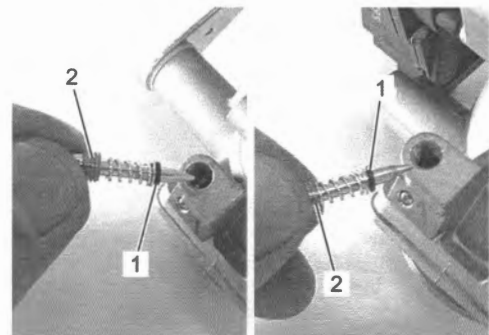


IH18K1140034-01

- Tighten the EVAP system purge control solenoid valve bracket screws (1) to the specified torque (if equipped).

### Tightening torque

**EVAP system purge control solenoid valve bracket screw (a): 5.0 N·m (0.51 kgf-m, 3.70 lbf-ft)**

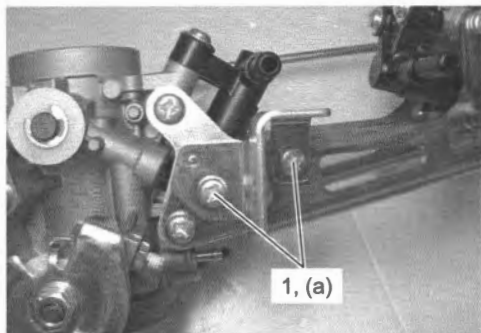


IH18K1140035-01

- Tighten the EVAP system purge control solenoid valve nut (1) to the specified torque (if equipped).

### Tightening torque

**EVAP system purge control solenoid valve nut (a): 7.0 N·m (0.71 kgf-m, 5.20 lbf-ft)**

- Connect the purge hoses (2) (if equipped).

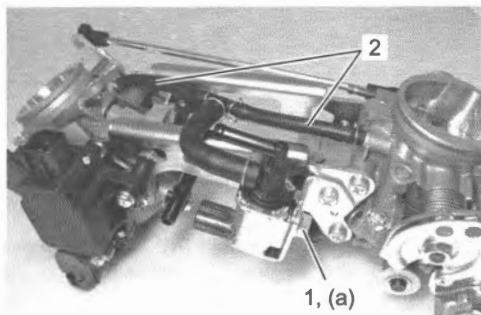


IH18K1140036-01

- Connect the IAP sensor #1 vacuum hose (1) and IAP sensor #2 vacuum hose (2).

### NOTE

The IAP sensor #1 vacuum hose (1) is longer than the IAP sensor #2 vacuum hose (2).

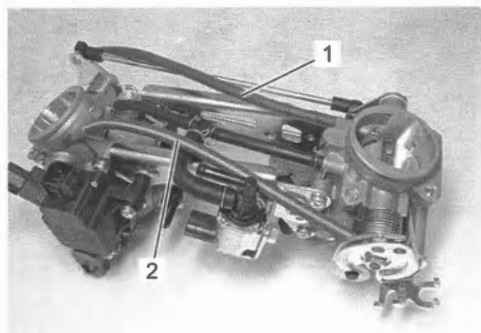

IH18K1140037-01

## Throttle Body Inspection and Cleaning

BENH28K21406010

Refer to "Throttle Body Removal and Installation" (Page 1D-9).

### Inspection

Check following items for any defects or clogging. Replace the each parts or throttle body, if necessary.

- O-rings
- Throttle valves
- Secondary throttle valves
- Fuel delivery pipes
- Cushion seals
- Fuel injectors
- Vacuum hoses

### Cleaning

- Plug the sensor hole(s) in the main bore with tape or the like.
- Clean the main bore, throttle valve and passage(s) using a cotton swab moistened with a carburetor cleaning chemical.


### NOTICE

- **Some carburetor cleaning chemicals are very corrosive. Always follow the chemical manufacturer's instructions for proper use, handling and storage.**
- **Do not dip the throttle body in a carburetor cleaning chemical or do not splay the cleaning chemical directly to the throttle valve. Cleaning chemical will penetrate into electronic parts resulting in cause of malfunction.**
- **Do not use wire to clean passages. Wire may damage them.**
- **If the throttle valve is molybdenum-coated, avoid applying cleaning chemical to the coated surfaces. Cleaning chemical loosens the coating, so the air-tightness of the throttle valve would be impaired.**
- **Do not apply any cleaning chemical to parts made of rubber and plastic materials. Cleaning chemical may damage these parts.**

## Throttle Valve Synchronization


BENH28K21406011

- 1) Remove the air cleaner box. (Page 1D-6)
- 2) Disconnect the IAP sensor vacuum hoses (1) from the throttle body.

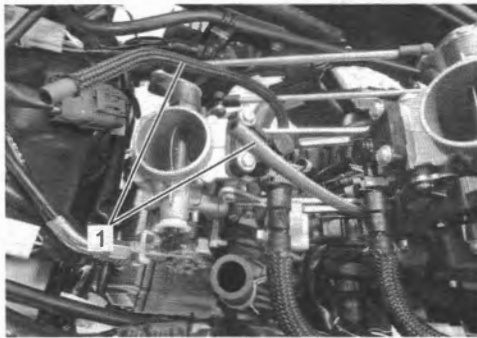

IH28K1140037-01

- 3) Connect the respective vacuum tester hoses (1) to each vacuum nipple on the throttle body.

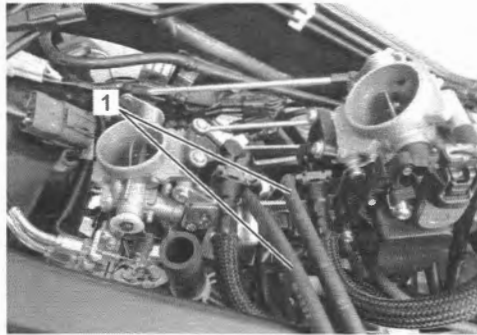


IH28K1140038-01

- 4) Connect the fuel feed hose and fuel pump coupler.
- 5) Set up the SDS-II tool referring to the SDS-II operation manual for further details.
- 6) Start the engine.
- 7) Click "Data monitor".
- 8) Warm up the engine (water temp. more than 90 °C (194 °F)).
- 9) Click "Active control".
- 10) Click "ISC air volume control".
- 11) Click "On" button to fix the ISC air volume among 2 cylinders.

### NOTE

**When making this synchronization, be sure that the water temperature is within 90 – 105 °C (194 – 221 °F).**

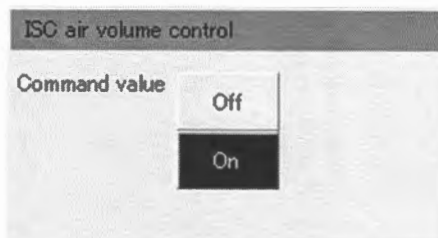

IF04K1140337-02

- 12) Check for the synchronization of vacuum from cylinders #1 and #2.



IH28K1140039-01

- 13) Equalize the vacuum of the cylinders by turning each air screws (1) and keep it turning at idling speed.

### NOTE

**Always set the engine speed at idle speed.**



IH28K1140040-01

- 14) If the adjustment is not yet correct, remove each air screw and clean them using a swab moistened with a carburetor cleaner (petroleum solvent) and blow dry with a compressed air. Also, clean the air screw passageways. Refer to "Throttle Body Disassembly and Reassembly" (Page 1D-12).

### NOTE

- **Slowly turn the air screw in clockwise and count the number of turns until the air screw is lightly seated.**
- **Make a note of how many turns were made so the air screw can be reset correctly after cleaning.**

- 15) Repeat the procedures of 4) to 12).
- 16) Close the SDS-II tool and turn the ignition switch OFF.
- 17) Disconnect the vacuum tester and install the removed parts.
- 18) After completing the throttle valve synchronization, clear the DTC and reset the ISC aperture learned value. (Page 1C-3)


### Intake Pipe Removal and Installation

BENH28K21406012

Refer to "Throttle Body Removal and Installation" (Page 1D-9).

#### Removal

Remove the intake pipes (1).

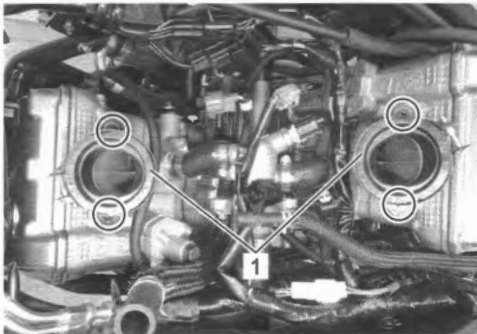


IH28K1140041-01

#### Installation

##### NOTE

The intake pipe can be identified by the marks.

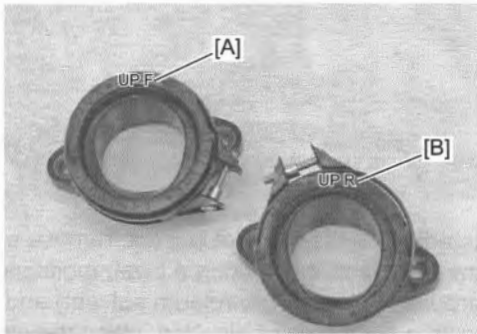


IH18K1140043-02

[A]: "F" (intake pipe #1)

[B]: "R" (intake pipe #2)

1) Apply adhesive to the intake pipe (1) and install the new O-ring to the intake pipe.

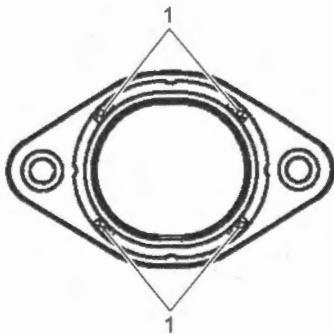

IH18K1140300-01

2) Apply grease to the O-ring.

"A": Grease 99000-25011 (SUZUKI SUPER GREASE A)



IH28K1140042-01

3) Install the intake pipes (1).


##### NOTE

Face the "UP" mark (2) on the intake pipe to upper.

4) Tighten the intake pipe screws (3) to the specified torque.

##### Tightening torque

Intake pipe screw (a): 8.4 N·m (0.86 kgf-m, 6.20 lbf-ft)

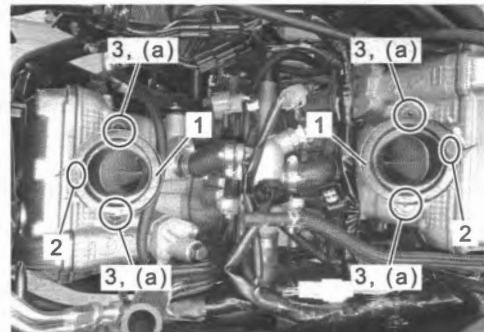

IH28K1140043-01

## Cylinder Head Cover Removal and Installation

BENH28K21406013


### Removal

#### Cylinder #1

- 1) Remove the side cowlings. (Page 9D-25)
- 2) Remove the under cowling (if equipped). (Page 9D-30)
- 3) Remove the radiator mounting bolt (1) and move the radiator (2) forward.

#### NOTICE

Be careful not to damage the radiator fins.

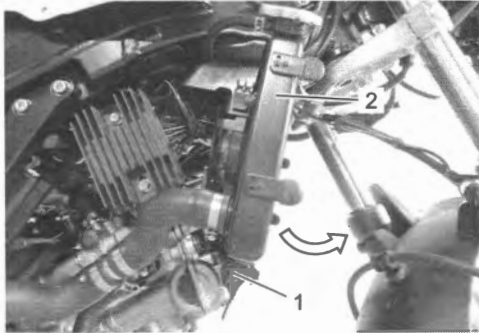


IH28K1140044-01

- 4) Remove the PAIR reed valve (1) (if equipped). (Page 1B-9)




IH28K1140045-03

- 5) Disconnect the spark plug cap (center) (1).
- 6) Remove the cylinder head cover (2) and its gasket.

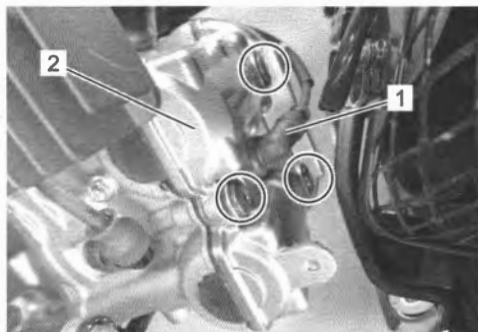

IH28K1140046-01


- 7) Remove the dowel pin (1) and PAIR passage gasket (2) (if equipped).

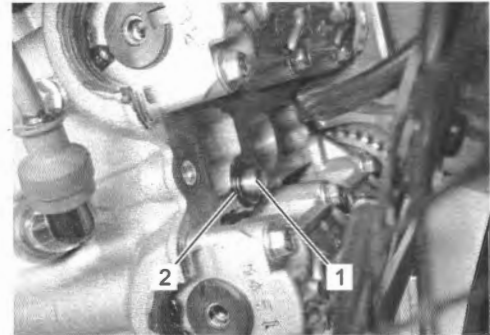

IH28K1140047-02


#### Cylinder #2

- 1) Remove the fuel tank. (Page 1G-10)
- 2) Remove the fuel tank rear bracket mounting bolts (1) and move the bracket (2).

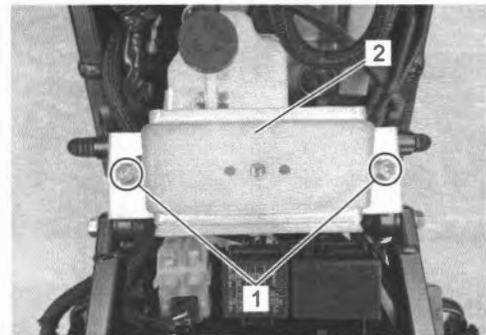

IH28K1140048-01


- 3) Remove the PAIR reed valve (1) (if equipped). (Page 1B-9)

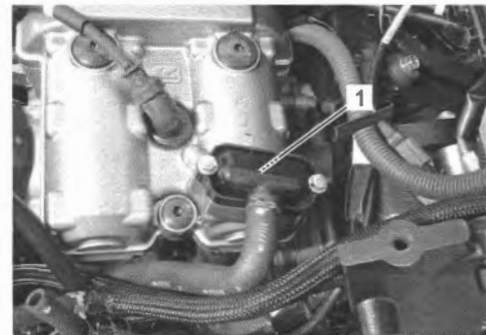

IH28K1140049-01


## 1D-18 Engine Mechanical:

- 4) Disconnect the spark plug cap (center) (1).
- 5) Remove the cylinder head cover (2) and its gasket.

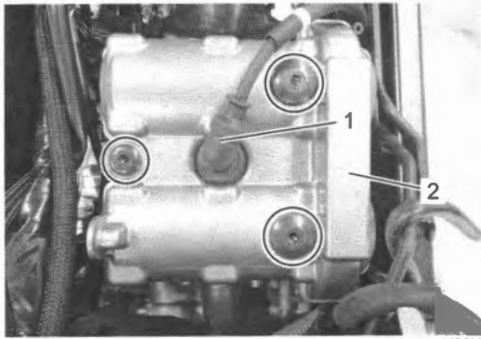

IH28K1140050-01

- 6) Remove the dowel pin (1) and PAIR passage gasket (2) (if equipped).

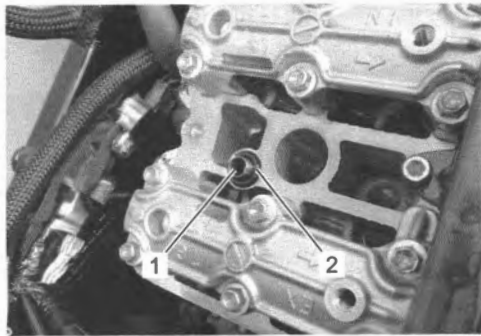

IH28K1140051-01

### Installation

Install the cylinder head cover in the reverse order of removal. Pay attention to the following points:


- Install the new PAIR passage gasket (1) (if equipped).



IH28K1140186-01

- Install the new gasket (1) to each cylinder head cover.
- Apply sealant to the "A" of the gasket as shown.

"A": Sealant 99000-31140 (SUZUKI BOND 1207B)

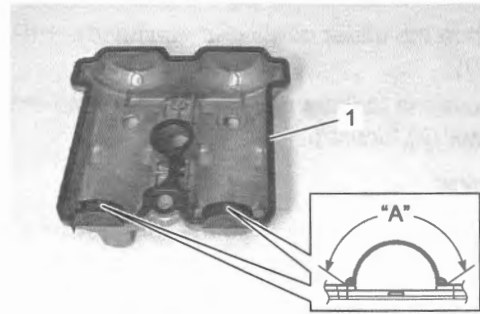


IH18K1140053-02

- Place the cylinder head covers on each cylinder head.

### NOTE


The cylinder head covers can be distinguished by radiator mounting hole [A].

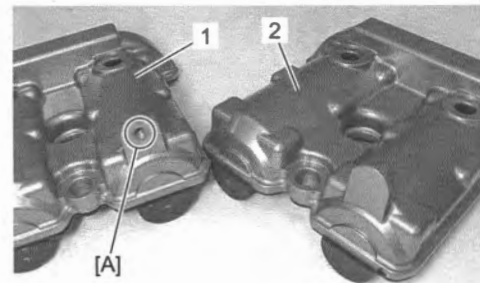

IH18K1140054-02

1. Cylinder #1	2. Cylinder #2
----------------	----------------

- Set the new gaskets (1) to each cylinder head cover bolts and coat the both sides of the gasket with engine oil.

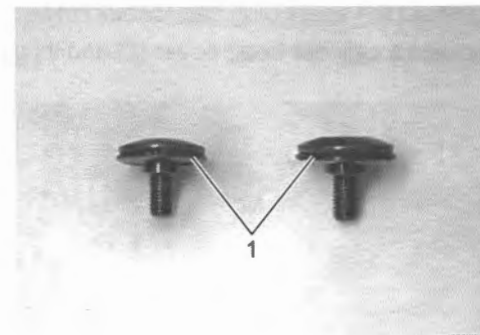


IH18K1140313-01

- Tighten the cylinder head cover bolts (1) to the specified torque.


**Tightening torque**

**Cylinder head cover bolt (a): 14 N·m (1.4 kgf-m, 10.5 lbf-ft)**

**Cylinder #1**

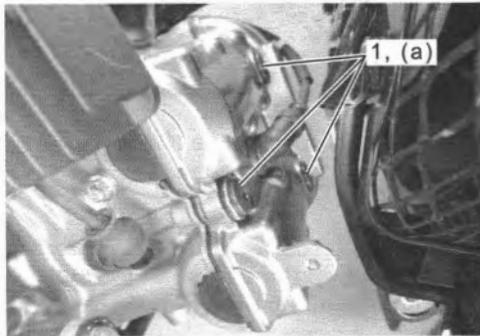

**Cylinder #2**

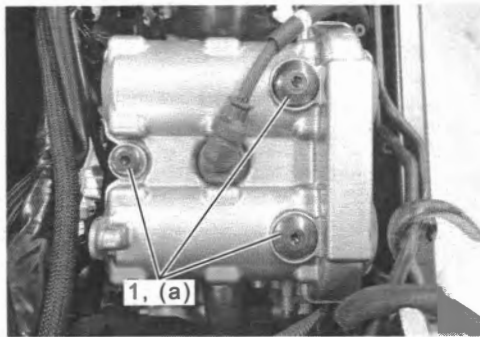


- Install the PAIR reed valve (if equipped). (Page 1B-9)
- Connect the spark plug cap. (Page 1H-6)
- Install the regulator/rectifier. Refer to "Regulator / Rectifier Construction" in Section 1J (Page 1J-9).
- Install the radiator mounting bolt. Refer to "Radiator / Cooling Fan Motor Removal and Installation" in Section 1F (Page 1F-7).

**Cylinder Head Cover Inspection**

BENH28K21406014

Refer to "Cylinder Head Cover Removal and Installation" (Page 1D-17).

Inspect the cylinder head cover for carbon deposit. If carbon deposit is found there, remove the carbon.

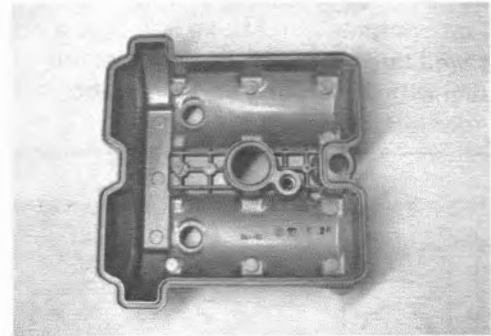

**Cam Chain Tension Adjuster / Camshaft / Cylinder Head Assembly / Cam Chain Guide / Cylinder Removal**

BENH28K21406015


Refer to "Cylinder Head Cover Removal and Installation" (Page 1D-17) and "Spark Plug Removal and Installation" in Section 1H (Page 1H-6).

Refer to "Exhaust Pipe / Muffler Removal and Installation" in Section 1K (Page 1K-4).

**Cylinder #1 Removal**

**Cam chain tension adjuster #1 / camshaft #1**


- 1) Remove the radiator assembly. (Page 1F-7)
- 2) Remove the throttle body. (Page 1D-9)
- 3) Remove the cylinder head cover #1. (Page 1D-17)
- 4) Remove the TDC plug (1) and camshaft hole plug (2).

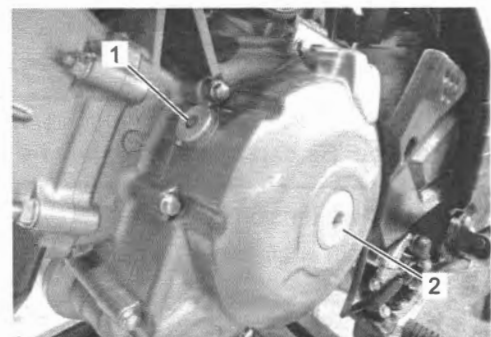


- Turn the crankshaft to bring the [ F ] line (1) on generator rotor to the index mark (2) on the generator cover and also to bring the camshafts to the position as shown.

**NOTE**

At the above condition, the cylinder #1 is at TDC on compression stroke and also the engraved lines (3) on the camshafts are parallel with the mating surface of the cylinder head #1.

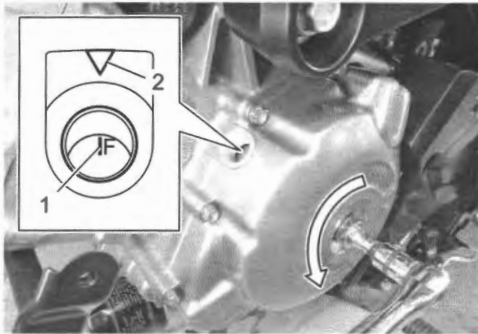

IH28K1140055-01

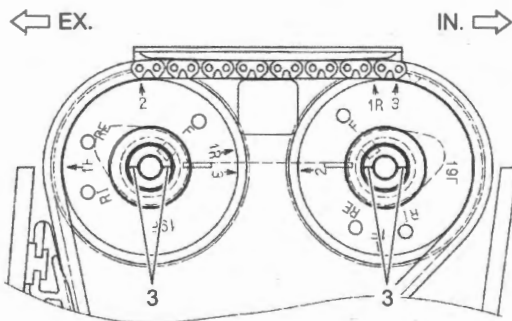


IH18K1140318-01

- Remove the cam chain tension adjuster plug (1), gasket washer (2) and spring (3).


**▲ CAUTION**

The cam chain tension adjuster plug (1) is spring loaded. Be careful when removing it.

- Release the high-tension cord from the clamp (4).
- Remove the cam chain tension adjuster #1 (5) and gasket.

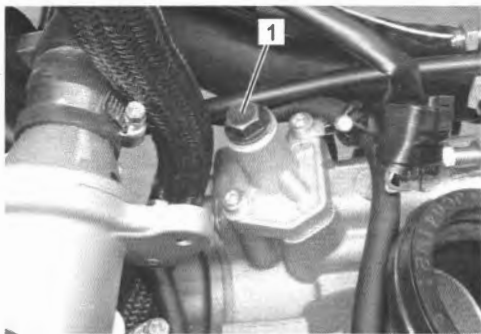

IH28K1140056-01

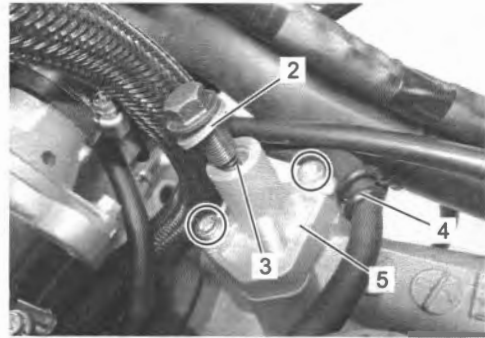


IH28K1140057-01

- Remove the cam chain guide No. 2 (1).
- Remove the camshaft journal holders (2).


**NOTICE**

Be sure to loosen the camshaft journal holder bolts evenly by shifting the wrench diagonally.

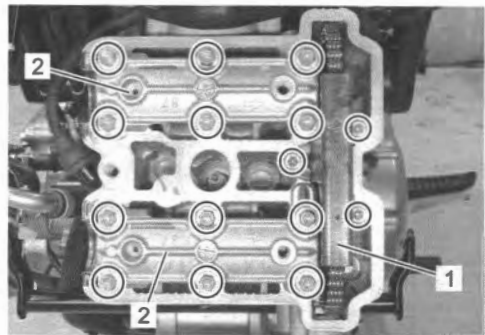

IH28K1140058-01

- Remove the dowel pins (1).
- Remove the intake camshaft (2) and exhaust camshaft (3).

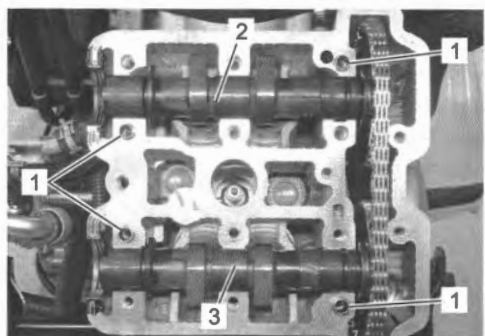


IH28K1140059-01




**Cylinder head assembly #1**

- 1) Disconnect the ECT sensor coupler (1) and water hoses (2), and remove the thermostat connector assembly (3).

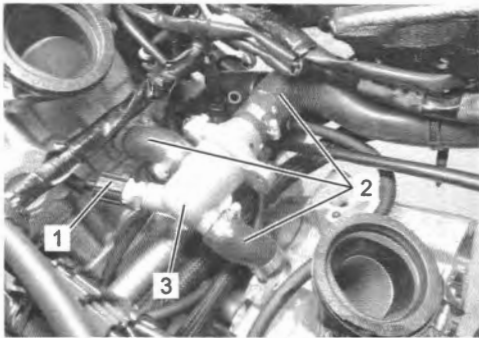


IH28K1140060-01

- 2) Remove the cylinder head bolts (M6) (1).

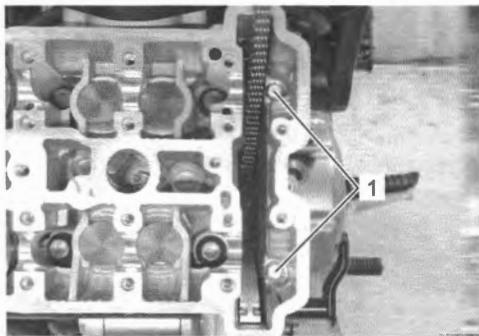

IH28K1140061-01

- 3) Remove the cylinder head bolt (M6) (1).
- 4) Loosen the cylinder nuts (2).

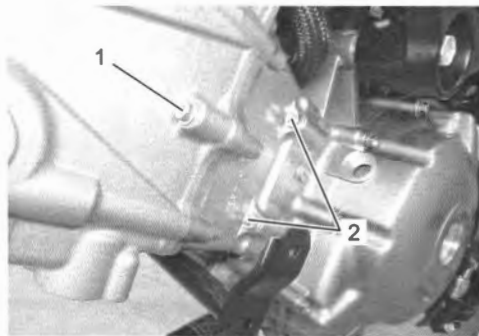

IH28K1140062-01

- 5) Disconnect the spark plug cap (side) (1).




IH28K1140063-01

- 6) Remove the cylinder head bolts (M10).

**NOTE**


**Loosen the cylinder head bolts little by little diagonally.**

- 7) Remove the cylinder head assembly (1).

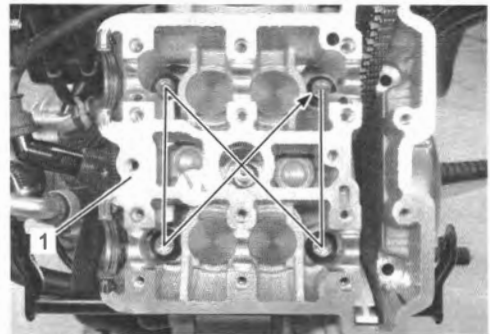

IH28K1140064-01

- 8) Remove the cylinder head gasket (1) and dowel pins (2).

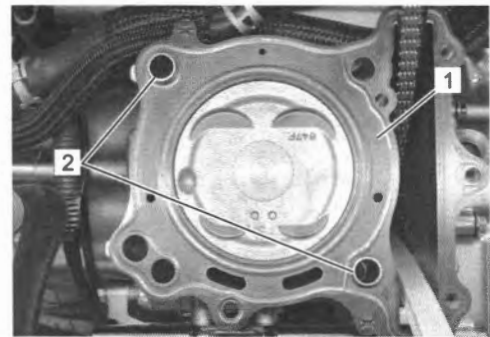

IH28K1140065-01

**Cam chain guide #1**


Remove the cam chain guide No. 1 (1).



IH28K1140066-01


**Cylinder #1**

- 1) Remove the under cowling front bracket (1) (if equipped).

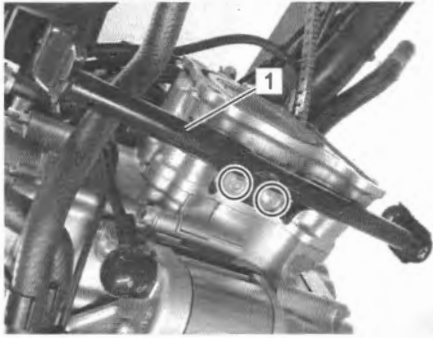


IH28K1140067-01

- 2) Remove the cylinder nuts (1) and cylinder (2).

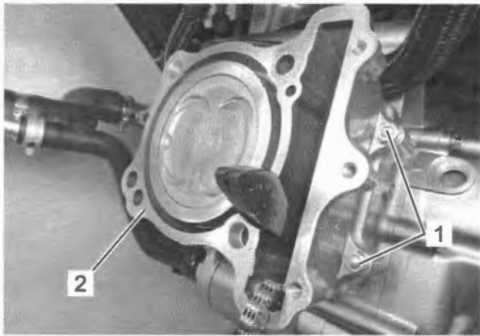

IH28K1140068-01

- 3) Remove the cylinder gasket (1) and dowel pins (2).

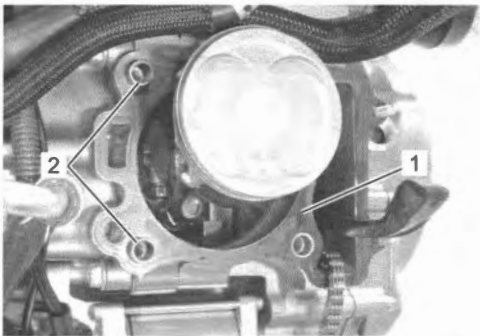

IH28K1140069-01


**Cylinder #2 Removal**

**Cam chain tension adjuster #2 / camshaft #2**


- 1) Remove the fuel tank. (Page 1G-10)
- 2) Remove the cylinder head cover #2. (Page 1D-17)
- 3) Rotate the crankshaft 360 degrees (1 turn) counterclockwise and align the [IF] line (1) on the generator rotor with the index mark (2) on the generator cover.

**NOTE**

At the above condition, the cylinder #2 is at ATDC 90° on expansion stroke and also the engraved lines (3) on the camshafts are parallel with the mating surface of the cylinder head #2.

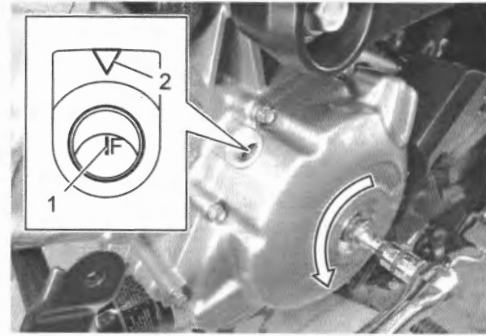

IH28K1140055-01

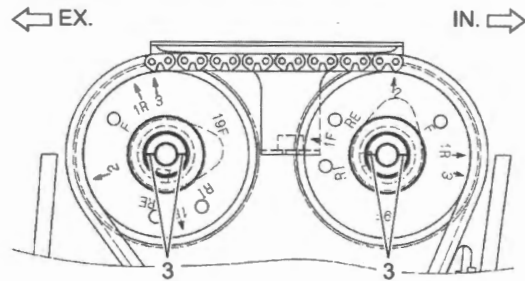

IH18K1140319-01


- 4) Remove the rear brake reservoir tank mounting bolt (1).



IH28K1140070-01


- 5) Remove the rear shock absorber. (Page 2C-3)

- 6) Remove the brake hose guide (1) mounting screw (2) and move the guide backward.

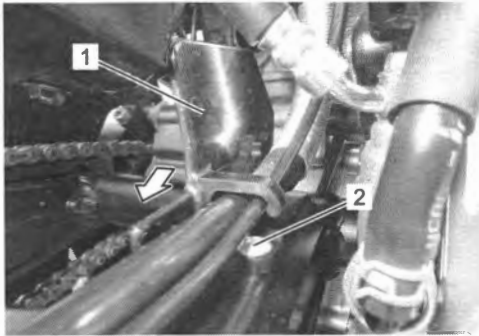

IH28K1140071-01

- 7) Remove the exhaust pipe #2 (1).

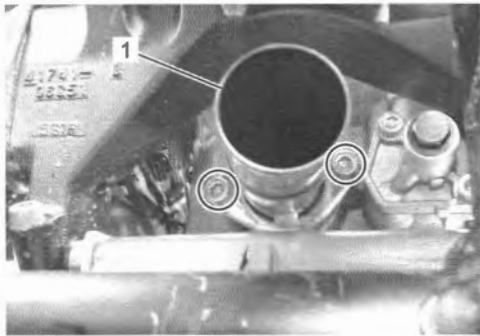


IH28K1140072-01

- 8) Remove the cam chain tension adjuster plug (1), gasket washer (2) and spring (3).


**▲ CAUTION**

The cam chain tension adjuster plug (1) is spring loaded. Be careful when removing it.

- 9) Remove the cam chain tension adjuster #2 (4) and gasket.

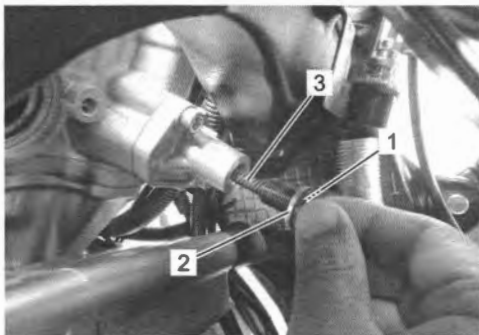

IH28K1140073-02

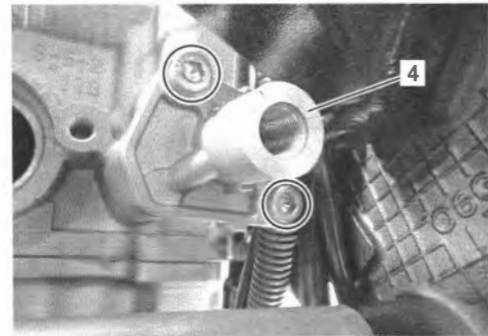


IH28K1140074-01

- 10) Remove the cam chain guide No. 2 (1).

- 11) Remove the camshaft journal holders (2).

**NOTICE**


Be sure to loosen the camshaft journal holder bolts evenly by shifting the wrench diagonally.

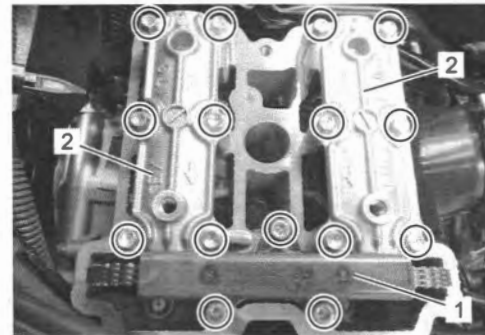

IH28K1140075-01

- 12) Remove the dowel pins (1).

- 13) Remove the intake camshaft (2) and exhaust camshaft (3).

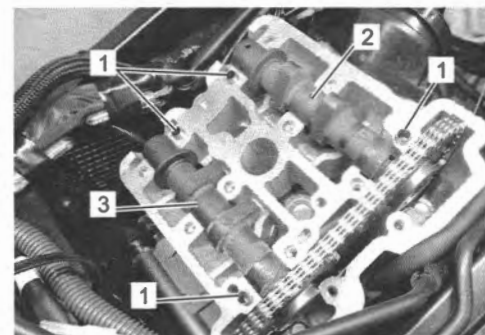

IH28K1140076-01


**Cylinder head assembly #2**

- 1) Disconnect the ECT sensor coupler (1) and water hoses (2), and remove the thermostat connector assembly (3).




IH28K1140060-01

- 2) Remove the cylinder head bolts (M6) (1).

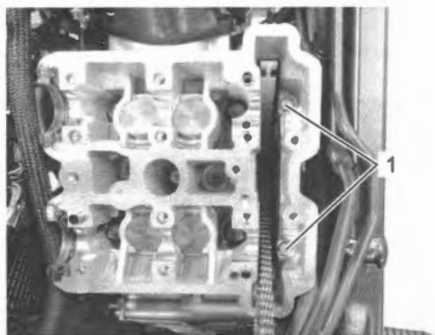

IH28K1140077-01

- 3) Remove the cylinder head bolt (M6) (1).
- 4) Loosen the cylinder nuts (2).

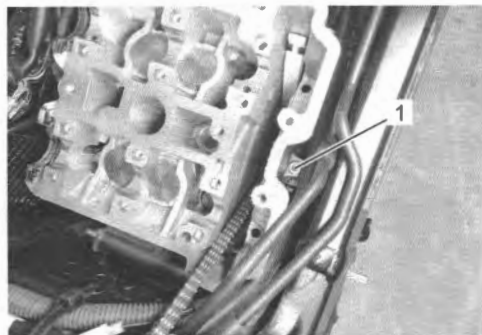

IH28K1140078-01




IH28K1140079-01

- 5) Remove the cylinder head bolts (M10).

**NOTE**

**Loosen the cylinder head bolts little by little diagonally.**

- 6) Remove the cylinder head assembly (1).

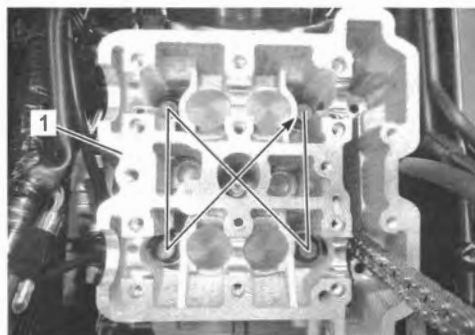

IH28K1140080-01

- 7) Remove the cylinder head gasket (1) and dowel pins (2).



IH28K1140081-01

**Cam chain guide #2**


Remove the cam chain guide No. 1 (1).



IH28K1140082-01

**Cylinder #2**

- 1) Remove the cylinder nuts (1) and cylinder (2).

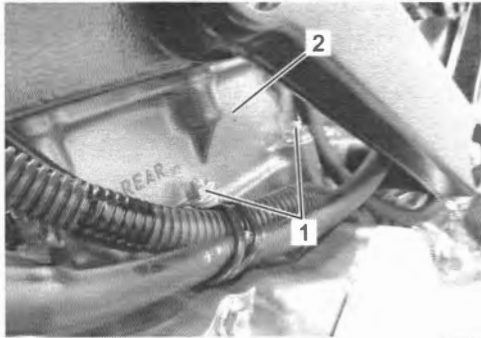

IH28K1140083-01

- 2) Remove the cylinder gasket (1) and dowel pins (2).



IH28K1140084-01

**Cam Chain Tension Adjuster / Camshaft / Cylinder Head Assembly / Cam Chain Guide / Cylinder Installation**


BENH28K21406016

**Cylinder**

- 1) Thoroughly wipe off oil from the fitting surface of the crankcase.
- 2) Apply sealant lightly to the mating surfaces at the parting line between the right and left crankcases as shown.


**"A": Sealant 99000-31110 (SUZUKI BOND 1215)**

**Cylinder #1**

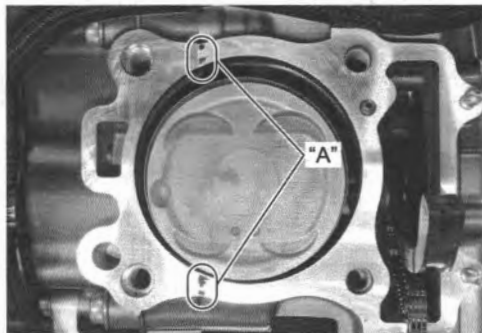

IH28K1140085-01

**Cylinder #2**

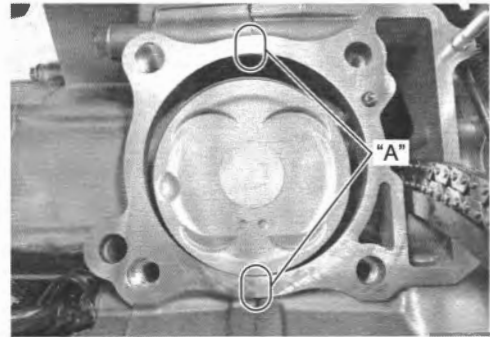


IH28K1140086-01

- 3) Install the dowel pins (1) and new cylinder gaskets (2).
- 4) Apply molybdenum oil solution to the sliding surface of the pistons, piston rings and cylinder walls.

**NOTE**

The cylinders can be identified by the embossed letters.

**"A": Assembly lubrication (Molybdenum oil solution)**

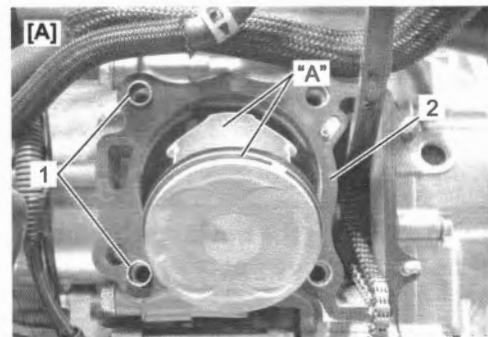


IH28K1140087-01




IH28K1140088-01

[A]: Cylinder #1	[B]: Cylinder #2
------------------	------------------

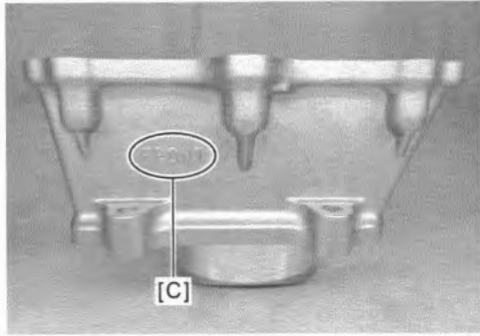

IH28K1140089-01

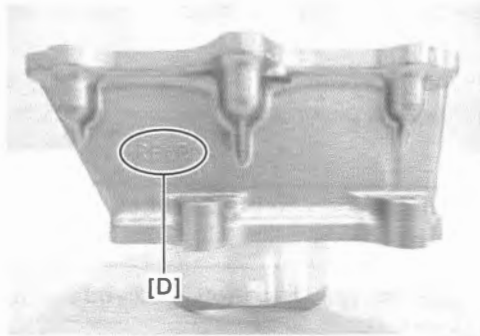

IH28K1140090-01

[C]: "FRONT" (cylinder #1)	[D]: "REAR" (cylinder #2)
----------------------------	---------------------------

5) Hold the piston rings in proper positions, and insert each piston into the respective cylinders. ⚠ (Page 1D-61)

**NOTICE**


- When installing the position into the cylinder, take care not to bend the piston rings.
- When installing the cylinders, keep the cam chains taut.

6) Tighten the cylinder nuts (1) temporarily.  
**Cylinder #1**



IH28K1140091-01

**Cylinder #2**

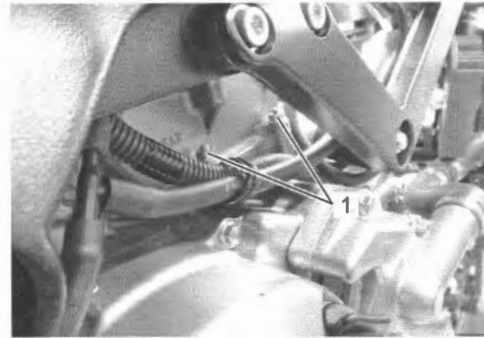

IH28K1140092-01


**Cam Chain Guide**

Pull the cam chains out of the cylinders and install the cam chain guides (1).

**NOTE**


There are the guide holders for the bottom ends of each cam chain guide cast in the crankcase. Be sure that the cam chain guides are inserted properly.

**Cylinder #1**

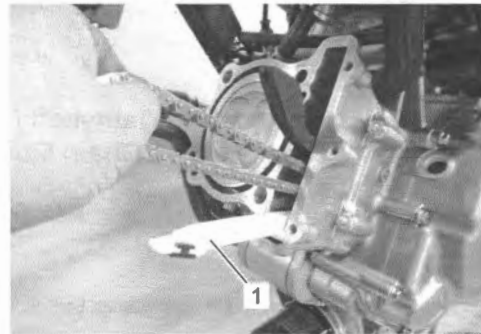

IH28K1140093-01

**Cylinder #2**

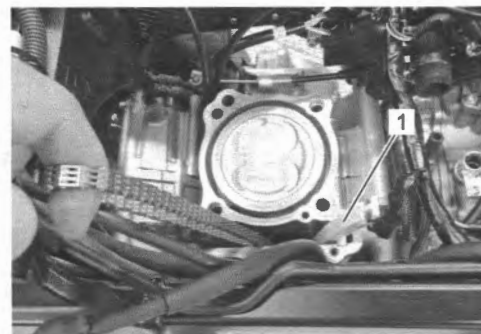


IH28K1140094-01

**Cylinder Head Assembly**


- 1) Install the dowel pins (1) and new cylinder head gaskets (2).

**Cylinder #1**

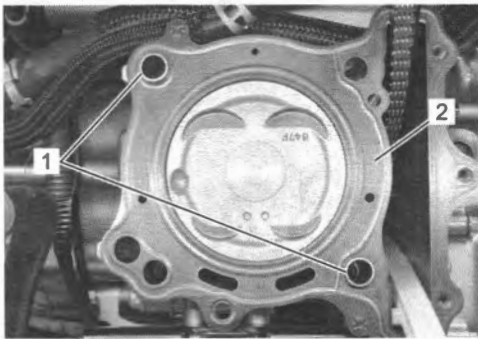

IH28K1140095-01

**Cylinder #2**

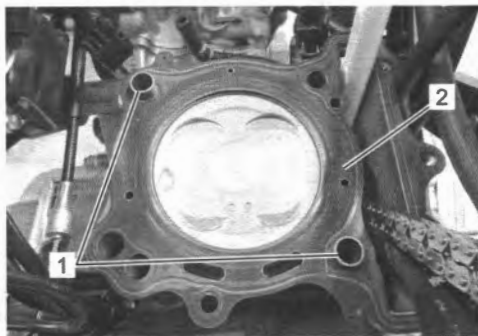


IH28K1140096-01


- 2) Place each cylinder head assembly on the respective cylinders.

**NOTE**

- The cylinder heads can be identified by the embossed letters.
- When installing the cylinder head assemblies, keep the cam chain taut.

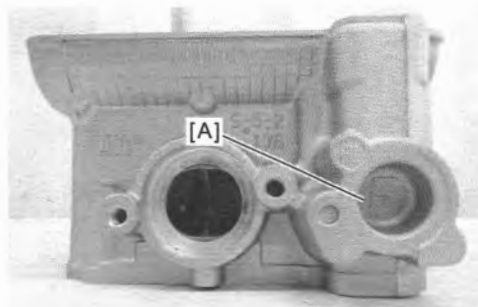


IH28K1140097-01

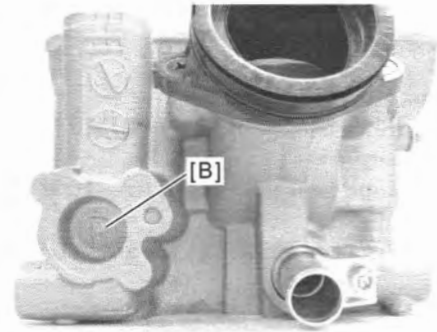

IH28K1140098-01

[A]: "F" (cylinder #1)	[B]: "R" (cylinder #2)
------------------------	------------------------

- 3) Apply engine oil to the both side of the washers (1) and thread portion (2) of the bolts before installing the cylinder head bolts (M10).




IH18K1140307-01

- 4) Tighten the cylinder head bolts (M10) to the specified two-step torque with a torque wrench sequentially and diagonally.

**Tightening torque**


**Cylinder head bolt (M10): 25 → 42 N·m (2.5 → 4.3 kgf-m, 18.5 → 31.0 lbf-ft)**

**Cylinder #1**

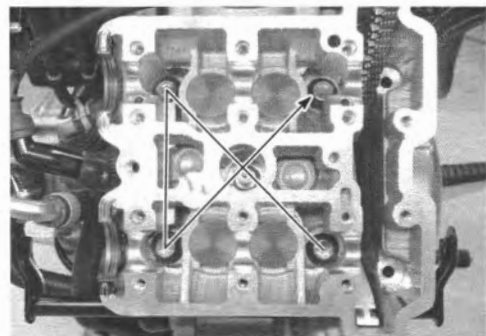

IH28K1140099-01

**Cylinder #2**

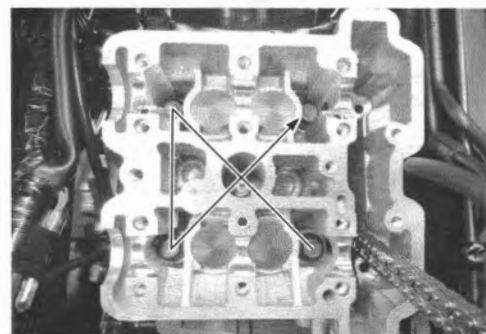

IH28K1140100-01

- 5) Tighten the cylinder head bolts (M6) (L70) (1), cylinder head bolt (M6) (L40) (2) and cylinder nuts (3) to the specified torque.


**Tightening torque**

Cylinder head bolt (M6) (L70) (a): 10 N·m (1.0 kgf-m, 7.5 lbf-ft)


Cylinder head bolt (M6) (L40) (b): 10 N·m (1.0 kgf-m, 7.5 lbf-ft)

Cylinder nut (c): 10 N·m (1.0 kgf-m, 7.5 lbf-ft)

**Cylinder #1**

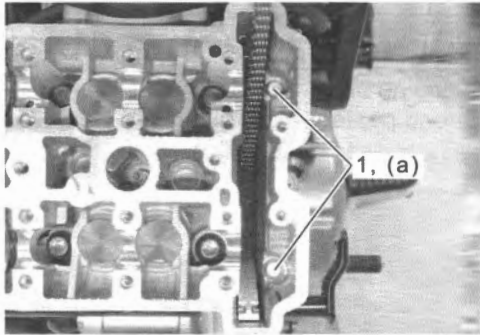


IH28K1140101-01

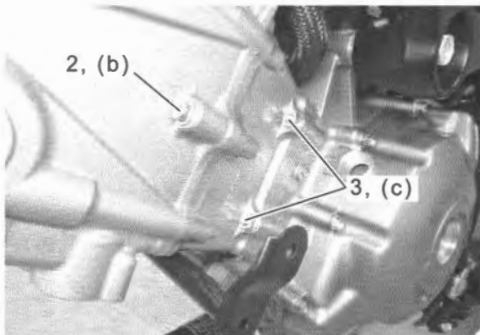


IH28K1140102-01


**Cylinder #2**

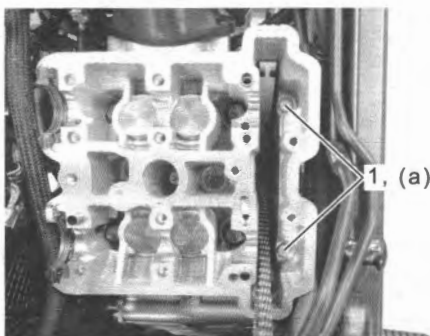

IH28K1140103-01

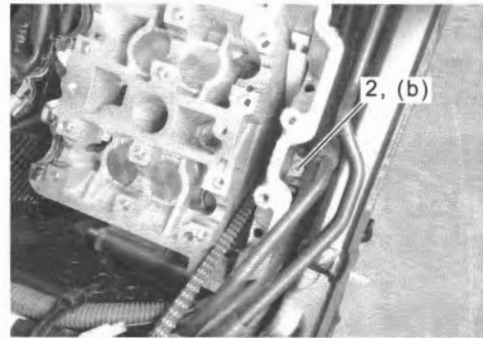

IH28K1140104-02

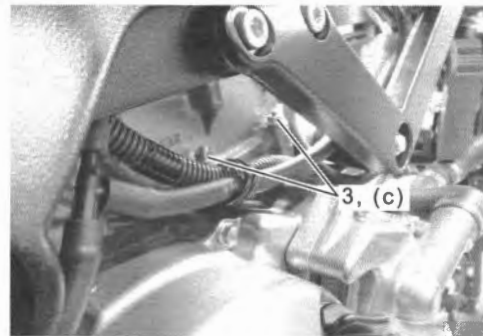

IH28K1140105-01

**Camshaft #1 / Cam Chain Tension Adjuster #1**

**NOTE**

Before installing the camshaft, check that the tappets are installed correctly.


- 1) Apply engine oil to the camshaft journals and cam surfaces.

**NOTE**

Identify the camshafts according to the following embossed letters.

Intake camshaft (1): [A]

Exhaust camshaft (2): [B]

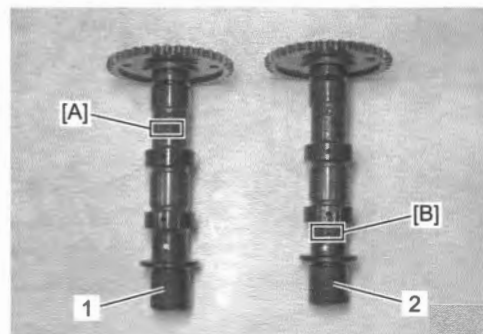

IH18K1140071-01


[A]: INF	[B]: EXP
----------	----------



- Turn the crankshaft counterclockwise and align [ ] F line (1) on the generator rotor to the index mark (2) on the generator cover while keeping the cam chains pulled upward.


**NOTICE**

- Pull the cam chain upward, or the chain will be caught between crankcase and cam drive sprocket.
- To adjust the camshaft timing correctly, be sure to align [ ] F line (1) with the index mark (2) and hold this position when installing the camshafts.

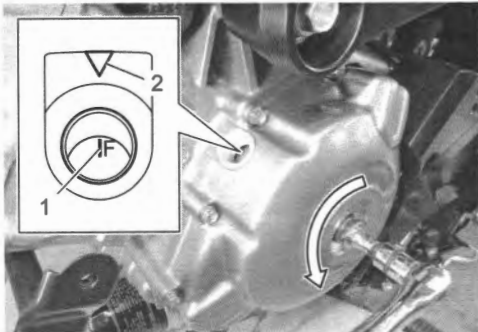

IH28K1140055-01

- Pull the cam chain lightly.
- The exhaust camshaft sprocket has an arrow mark 1F (1). Install the exhaust camshaft so that the arrow mark 1F (1) is aligned with the mating surface of the cylinder head.
- Engage the cam chain with the exhaust camshaft sprocket.

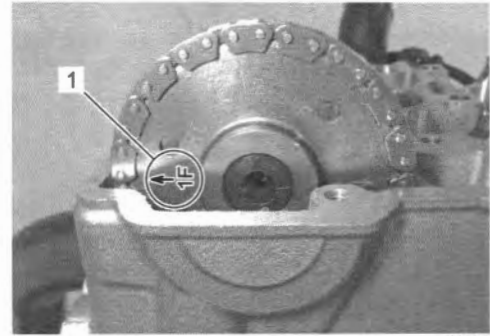


IH18K1140073-03


- The other arrow marked 2 (1) should now be pointing straight up. Starting from the roller pin that is directly above the arrow marked 2 (1), count out 16th roller pins (from the exhaust camshaft side going towards the intake camshaft side).
- Engage the 16th roller pin (2) on the cam chain with the arrow marked 3 (3) on the intake sprocket.

**NOTE**

The cam chain should now be on sprockets. Be careful not to move the crankshaft until the camshaft journal holders and cam chain tension adjuster are secured.

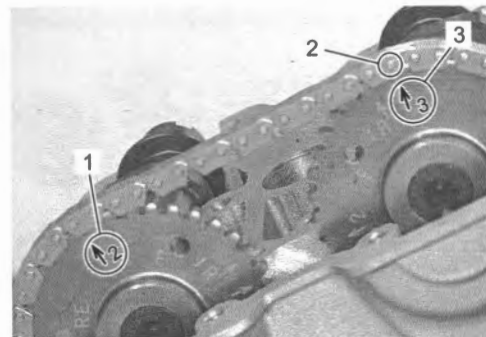


IH18K1140302-04

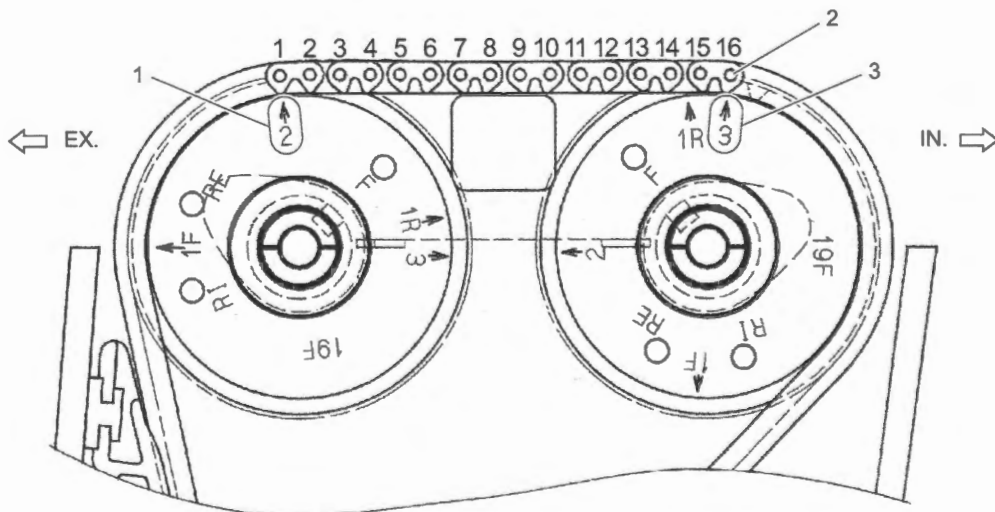

IH18K1140320-02

- 8) Install the dowel pins (1).

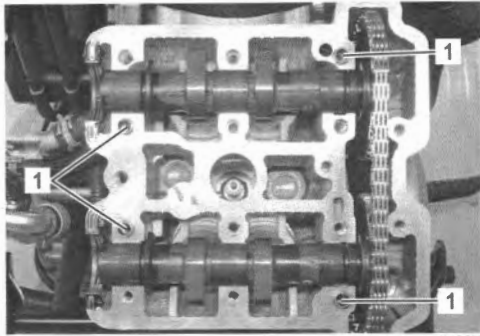

IH28K1140108-01


- 9) Install the camshaft journal holders (1), intake and exhaust.

**NOTICE**


Damage to head or camshaft journal holder thrust surfaces may result if the camshaft journal holders (1) are not drawn down evenly.

**NOTE**

Align the flange (2) of the camshafts with the groove (3) of the camshaft journal holders. Each camshaft journal holder is identified with a cast-on letters (IN, EX).

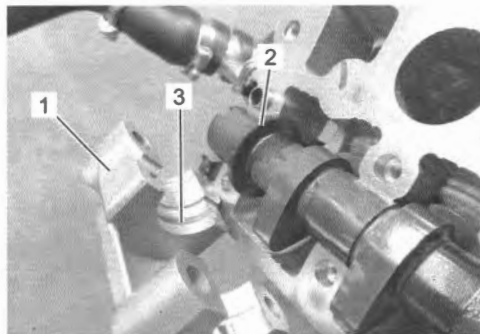

IH28K1140109-04

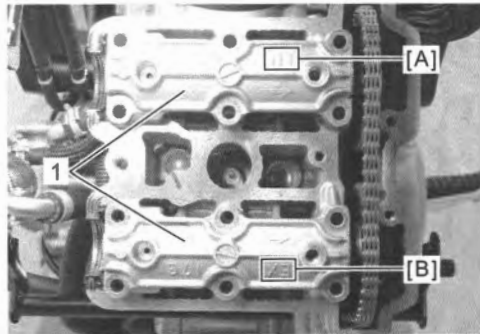

IH28K1140110-01

[A]: IN.	[B]: EX.
----------	----------

- 10) Fasten the camshaft journal holders evenly by tightening the camshaft journal holder bolts sequentially and diagonally.

**NOTICE**


The camshaft journal holder bolts are made of a special material and much superior in strength, compared with other types of high strength bolts.

Take special care not to use other types of bolts.

- 11) Tighten the camshaft journal holder bolts (1) to the specified torque.


**Tightening torque**

Camshaft journal holder bolt (a): 10 N·m (1.0 kgf-m, 7.5 lbf-ft)

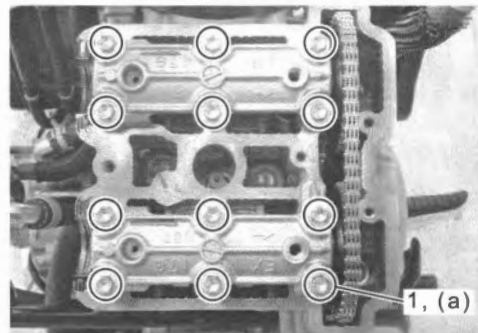

IH28K1140111-01

- 12) Push the stopper (1) and retract the push rod (2).

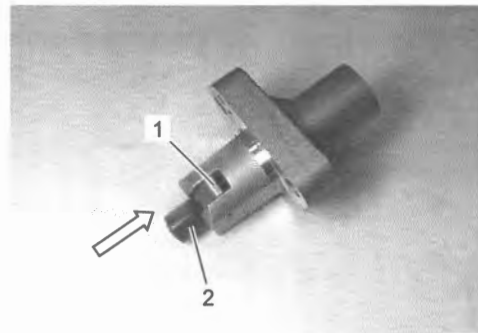


IH18K1140081-01


- 13) Install a new gasket (1).
- 14) Install the cam chain tension adjuster (2) with [F-UP] mark (3) faced to the top of cylinder head.
- 15) Tighten the cam chain tension adjuster bolts (4) to the specified torque.

**Tightening torque**

Cam chain tension adjuster bolt (a): 10 N·m (1.0 kgf-m, 7.5 lbf-ft)

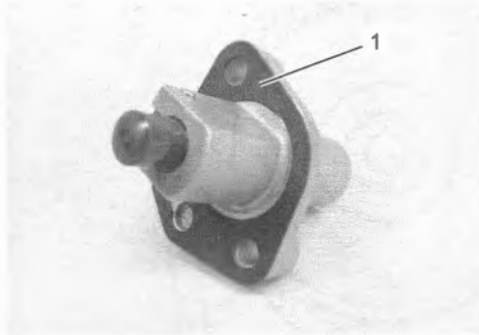

IH28K1140112-01

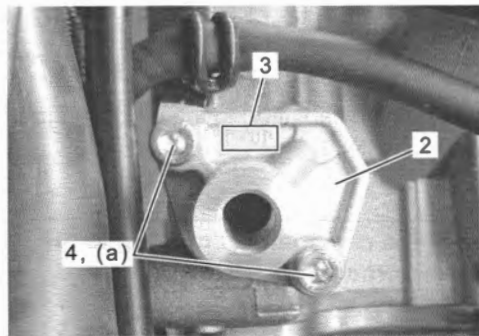


IH28K1140113-01

- 16) Install the spring (1), new gasket washer (2) and cam chain tension adjuster plug (3).

**NOTE**

Click sound is heard when the cam chain tension adjuster plug is installed.

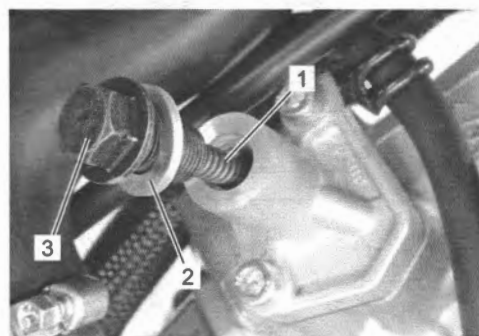

IH28K1140114-01


- 17) Tighten the cam chain tension adjuster plug (1) to the specified torque.

**NOTICE**

After installing the cam chain tension adjuster, check to be sure that the adjuster works properly by checking the slack of cam chain.


**Tightening torque**

Cam chain tension adjuster plug (a): 23 N·m (2.3 kgf-m, 17.0 lbf-ft)

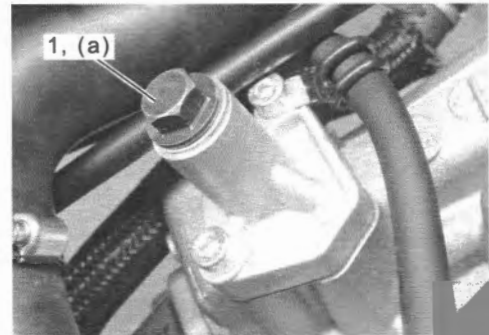

IH28K1140115-01

- 18) Install the cam chain guide No. 2 (1).

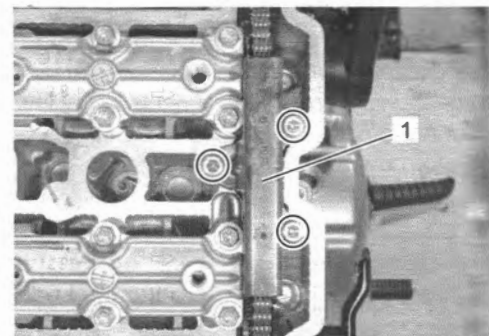


IH28K1140116-01

19) After installing the cam chain guide No. 2, rotate the crankshaft (2 turn), and recheck the positions of the camshaft #1.

**NOTICE**

**Pull the cam chain #2 upward, or the chain will be caught between crankcase and cam drive sprocket.**

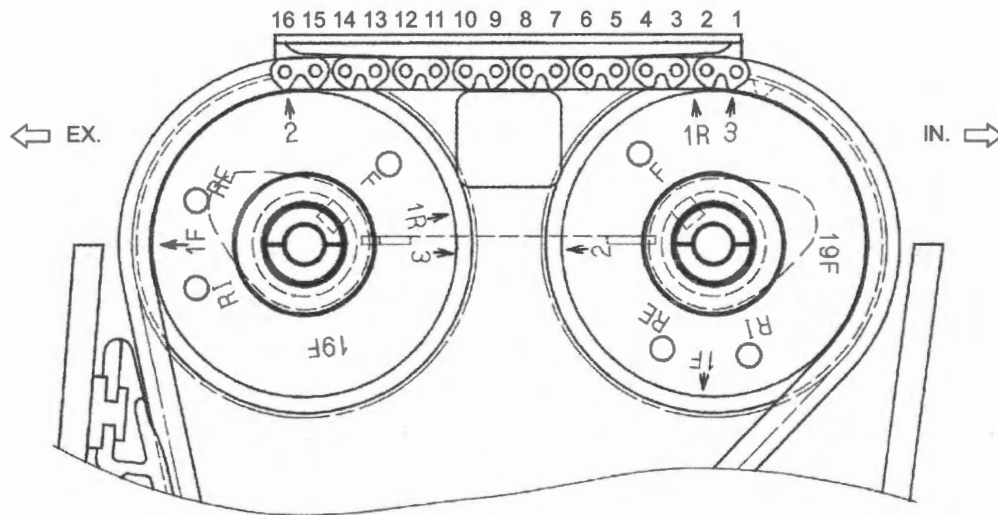


IH18K1140321-01

**Camshaft #2 / Cam Chain Tension Adjuster #2**

1) From the position where the camshafts #1 have now been installed, rotate the crankshaft 360 degrees (1 turn) counterclockwise and align the [ I F ] line (1) on the generator rotor with the index mark (2) of the generator cover.

**NOTICE**

- Pull the cam chains upward, or the chain will be caught between crankcase and cam drive sprocket.
- To adjust the camshaft timing correctly, be sure to align [ I F ] line (1) with the index mark (2) and hold this position when installing the camshafts.

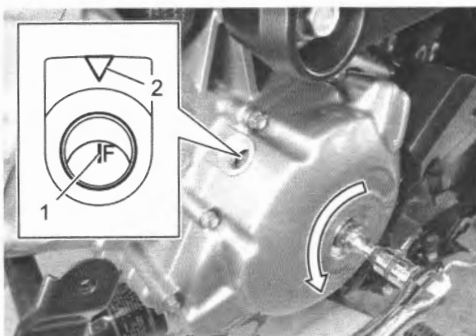


IH28K1140055-01

2) Apply engine oil solution to the camshaft journal and cam surfaces.

**NOTE**

**Identify the camshafts according to the following embossed letters.**

**Intake camshaft (1): [A]  
Exhaust camshaft (2): [B]**

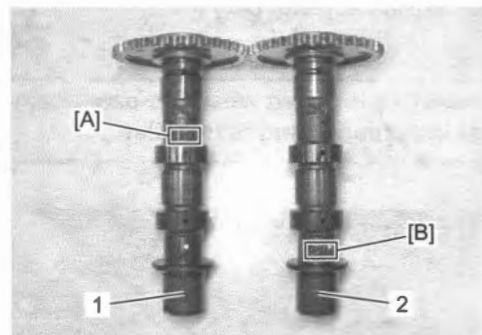

IH18K1140087-01

[A]: INR	[B]: EXR
----------	----------

- 3) Pull the cam chain lightly.
- 4) The intake camshaft sprocket has an arrow mark 1R (1). Install the intake camshaft so that the arrow mark 1R (1) is aligned with the mating surface of the cylinder head.
- 5) Engage the cam chain with the intake camshaft sprocket.




IH28K1140117-02


- 6) The other arrow marked 2 (1) should now be pointing straight up. Starting from the roller pin that is directly above the arrow marked 2 (1), count out 16 roller pins (from the intake camshaft side going towards the exhaust camshaft side).
- 7) Engage the 16th roller pin (2) on the cam chain with the marked 3 (3) on the exhaust sprocket.

**NOTE**

The cam chain should now be on sprockets. Be careful not to move the crankshaft until the camshaft journal holders and cam chain tension adjuster are secured.

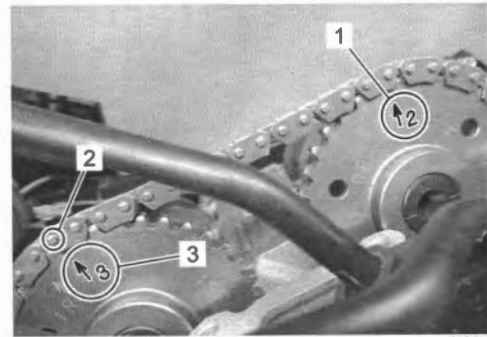


IH28K1140118-03

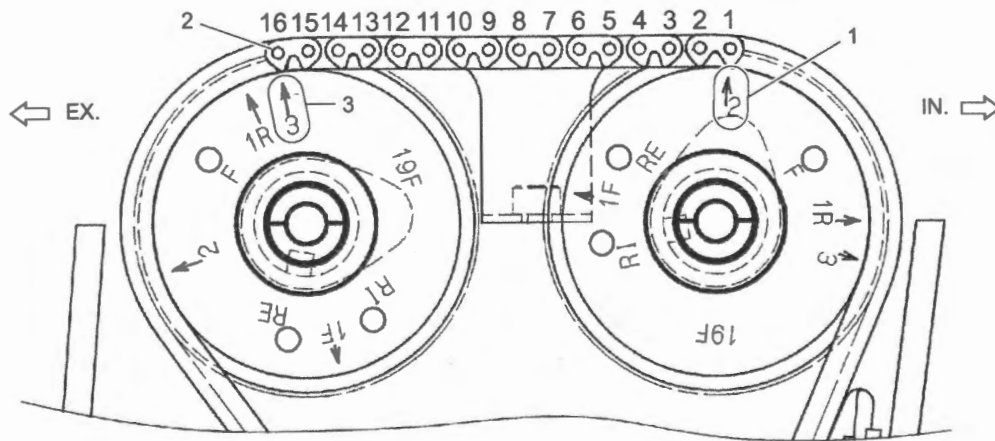

IH18K1140322-02

- 8) Install the dowel pins (1).

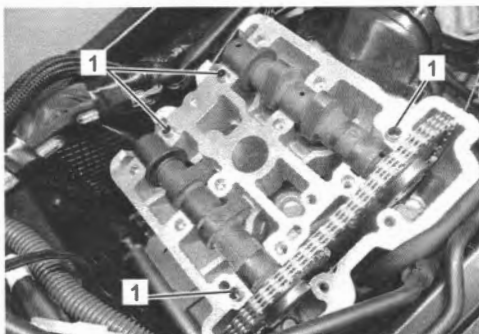

IH28K1140119-01


- 9) Install the camshaft journal holders (1), intake and exhaust.

**NOTICE**


Damage to head or camshaft journal holder thrust surfaces may result if the camshaft journal holders (1) are not drawn down evenly.

**NOTE**

Align the flange (2) of the camshafts with the groove (3) of the camshaft journal holders. Each camshaft journal holder is identified with a cast-on letters (IN, EX).

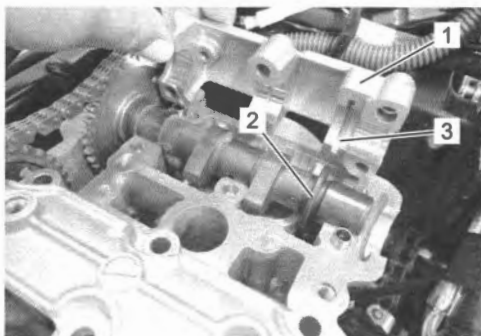

IH28K1140120-01

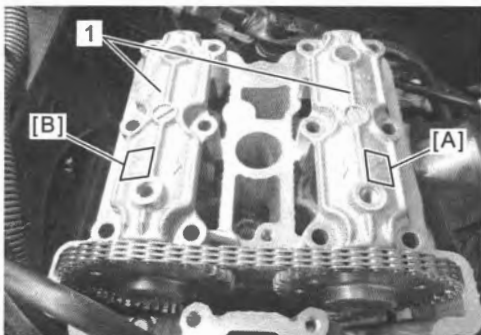

IH28K1140121-01

[A]: IN.	[B]: EX.
----------	----------

- 10) Fasten the camshaft journal holders evenly by tightening the camshaft journal holder bolts sequentially and diagonally.


**NOTICE**

The camshaft journal holder bolts are made of a special material and much superior in strength, compared with other types of high strength bolts. Take special care not to use other types of bolts.

- 11) Tighten the camshaft journal holder bolts (1) to the specified torque.


**Tightening torque**

Camshaft journal holder bolt (a): 10 N·m (1.0 kgf-m, 7.5 lbf-ft)

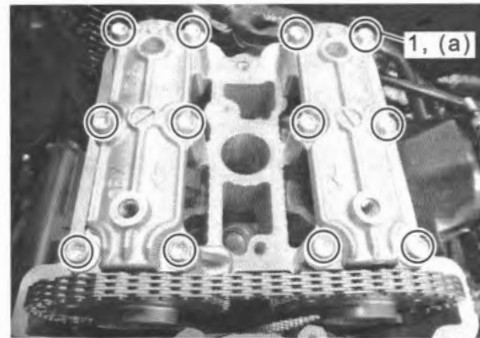

IH28K1140122-01

- 12) Push the stopper (1) and retract push rod (2).

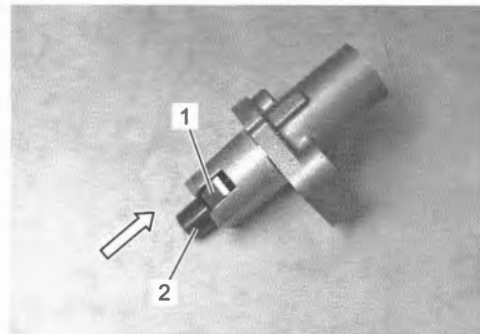


IH18K1140096-01


- 13) Install a new gasket (1).  
 14) Install the cam chain tension adjuster (2) with [R-UP] mark (3) faced to the top of cylinder head.  
 15) Tighten the cam chain tension adjuster bolts (4) to the specified torque.

**Tightening torque**

Cam chain tension adjuster bolt (a): 10 N·m (1.0 kgf-m, 7.5 lbf-ft)

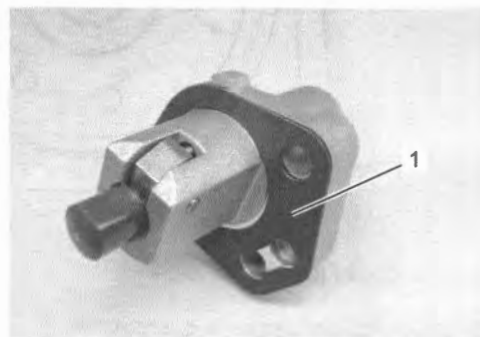

IH28K1140123-01

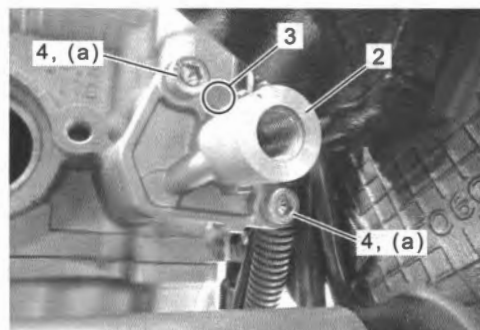


IH28K1140124-01

- 16) Install the spring (1), new gasket washer (2) and cam chain tension adjuster plug (3).

**NOTE**

Click sound is heard when the cam chain tension adjuster plug is installed.

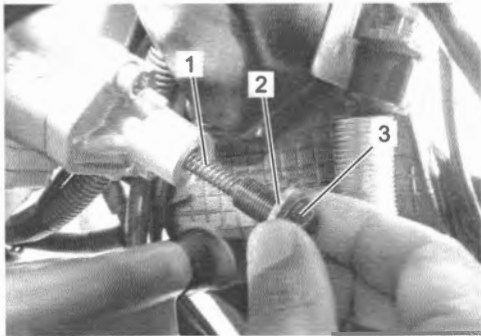

IH28K1140125-01

- 17) Tighten the cam chain tension adjuster plug (1) to the specified torque.

**NOTICE**

After installing the cam chain tension adjuster, check to be sure that the adjuster works properly by checking the slack of cam chain.


**Tightening torque**

Cam chain tension adjuster plug (a): 23 N·m (2.3 kgf-m, 17.0 lbf-ft)




IH28K1140126-01

- 18) Insert the protrusion (1) of brake hose guide into the hole (2) of swingarm, and tighten the screw (3).

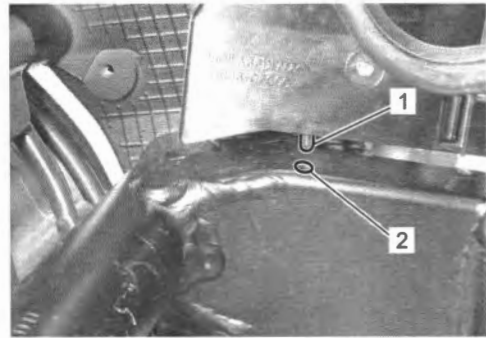


IH28K1140127-02

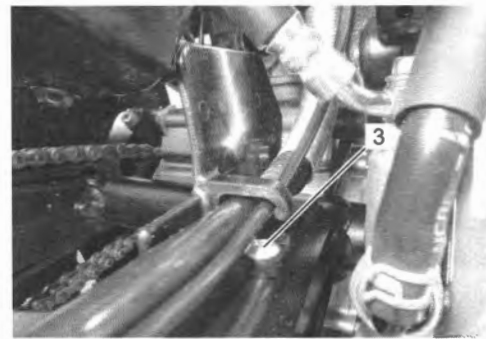


IH28K1140128-02

- 19) Tighten the rear brake reservoir tank mounting bolt (1). Refer to "Rear Brake Hose Routing Diagram" in Section 4A (Page 4A-4).

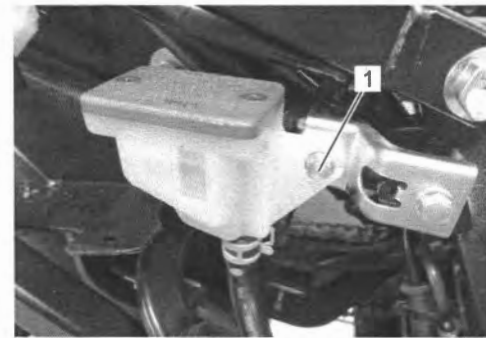


IH28K1140070-01

- 20) Install the cam chain guide No. 2 (1).

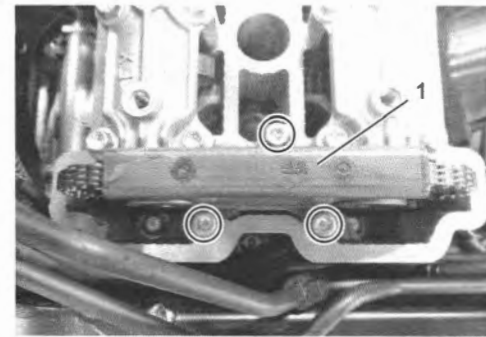

IH28K1140129-01

21) After installing the cam chain guide No. 2, rotate the crankshaft (2 turn), and recheck the positions of the camshafts #2.

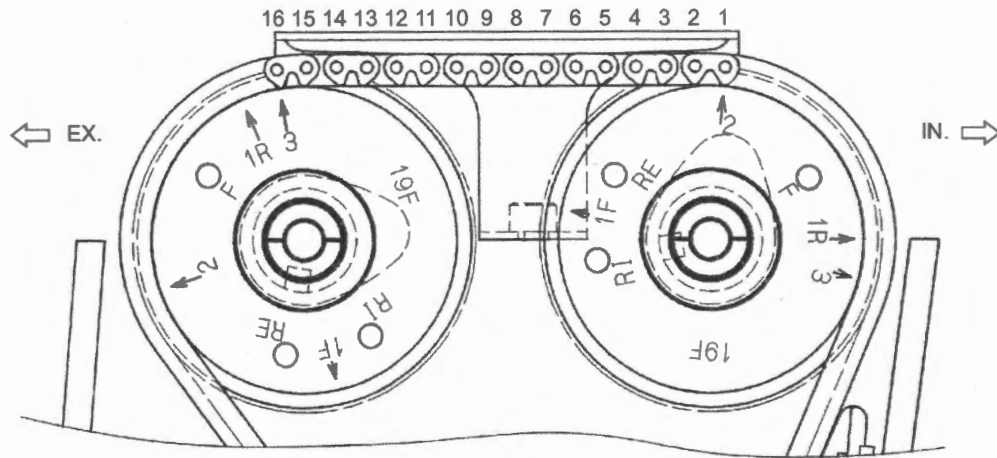


IH18K1140323-01

- 22) Check and adjust the valve clearance. (Page 1D-39)
- 23) Apply engine oil to the new O-ring (1).
- 24) Install the new gasket washer (2).
- 25) Tighten the crankshaft hole plug (3) and TDC plug (4) to the specified torque.


**Tightening torque**

**Crankshaft hole plug (a): 11 N·m (1.1 kgf-m, 8.5 lbf-ft)**

**TDC plug (b): 23 N·m (2.3 kgf-m, 17.0 lbf-ft)**

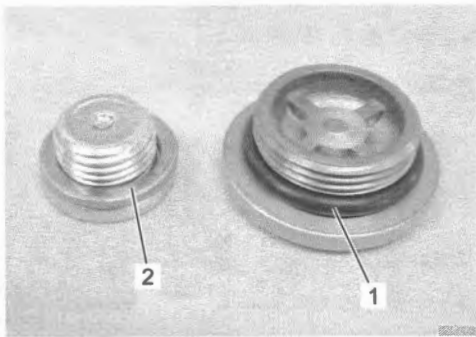

IH28K1140130-01

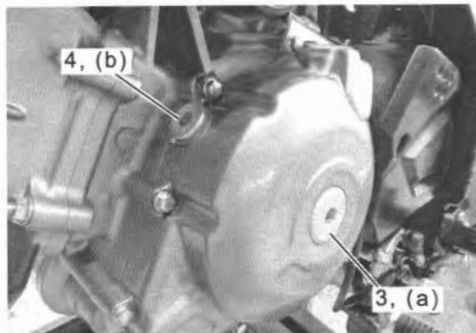

IH28K1140131-01

- 26) Install the cylinder head cover. (Page 1D-17)
- 27) Install the exhaust pipe #2 (1). (Page 1K-4)



IH28K1140150-01

- 28) Install the rear shock absorber. (Page 2C-3)
- 29) Connect the water hoses (1) and install the thermostat connector assembly (2). Refer to "Water Hose Routing Diagram" in Section 1F (Page 1F-2).
- 30) Connect the ECT sensor coupler (3).



IH28K1140151-01

- 31) Install the throttle body. (Page 1D-9)



- 32) Check to make sure that the wire harness, cables and hoses are properly routed.
  - Wire harness: ⌚(Page 9A-7)
  - Throttle cable: ⌚(Page 1D-2)
  - PAIR system hose: ⌚(Page 1B-6)
  - PCV hose: ⌚(Page 1B-7)
  - EVAP canister hose: ⌚(Page 1B-8)
  - Water hose: ⌚(Page 1F-2)
  - Fuel tank water drain hose and breather hose: ⌚(Page 1G-3)
- 33) Install the radiator assembly. ⌚(Page 1F-7)
- 34) Pour engine coolant. ⌚(Page 1F-5)
- 35) Pour engine oil. ⌚(Page 1E-4)
- 36) After finishing the engine parts installation, check the following items.
  - Throttle cable play: ⌚(Page 1D-9)
  - Throttle Valve synchronization: ⌚(Page 1D-15)
  - Engine oil leakage: ⌚(Page 1E-4)
  - Engine coolant leakage: ⌚(Page 1F-6)
- 37) Install the under cowling (if equipped). ⌚(Page 9D-30)
- 38) Install the side cowlings. ⌚(Page 9D-25)

**Camshaft Inspection**


BENH28K21406017

Refer to "Cam Chain Tension Adjuster / Camshaft / Cylinder Head Assembly / Cam Chain Guide / Cylinder Removal" (Page 1D-19) and "Cam Chain Tension Adjuster / Camshaft / Cylinder Head Assembly / Cam Chain Guide / Cylinder Installation" (Page 1D-25).

**Camshaft Identification**

The camshafts can be identified by the engraved letter [A] stamped on the camshaft.

	Letter [A]
Intake camshaft #1	INF
Exhaust camshaft #1	EXF
Intake camshaft #2	INR
Exhaust camshaft #2	EXR

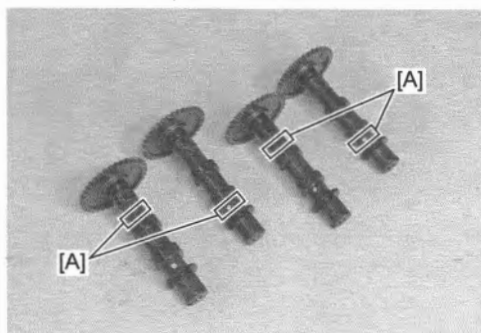

IH18K1140104-02

**Cam Wear**

Check the camshaft for wear or damage. Measure the cam height "a" with a micrometer. Replace a camshaft if the cams are worn to the service limit.


**Cam height**

Intake [Limit]: 35.18 mm (1.385 in)

Exhaust [Limit]: 35.38 mm (1.393 in)

**Special tool**

09900-20202

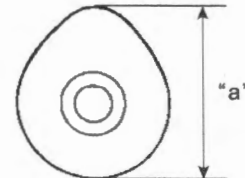

IH18K1140303-01


**Camshaft Journal Wear**

- 1) Determine whether or not each journal is worn down to the limit by measuring the oil clearance with the camshaft installed in place.
- 2) Measure the clearance at the widest portion with the special tool.

**Special tool**

(A): 09900-22301

(B): 09900-22302

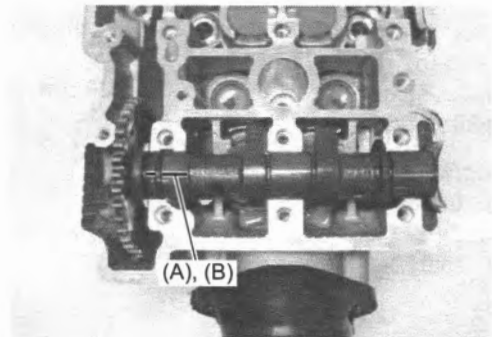

IH18K1140106-01

- 3) Install camshaft journal holder and tighten the camshaft journal holder bolts evenly and diagonally to the specified torque. ⌚(Page 1D-25)

**NOTE**

**Do not rotate the camshaft with the plastigage in place.**


- 4) Remove the camshaft journal holder and measure the width of the compressed plastigage using the envelope scale.

- 5) This measurement should be taken at the widest part of the compressed plastigage.

**Camshaft journal oil clearance**

Intake [Limit]: 0.150 mm (0.0059 in)

Exhaust [Limit]: 0.150 mm (0.0059 in)

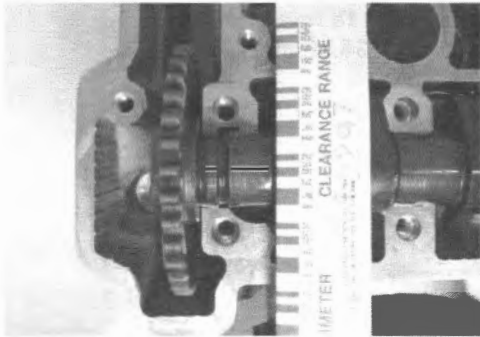

IH18K1140107-01

- 6) If the camshaft journal oil clearance exceeds the limit, measure the inside diameter of the camshaft journal holder and the outside diameter of the camshaft journal. Replace the camshaft or the cylinder head depending upon which one exceeds the specification.

**Camshaft journal holder I.D.**

Intake [Standard]: 22.007 – 22.028 mm (0.8665 – 0.8672 in)

Exhaust [Standard]: 22.007 – 22.028 mm (0.8665 – 0.8672 in)

**Camshaft journal O.D.**

Intake [Standard]: 21.959 – 21.980 mm (0.8646 – 0.8653 in)


Exhaust [Standard]: 21.959 – 21.980 mm (0.8646 – 0.8653 in)

**Special tool**


(A): 09900-20602

(B): 09900-22403

(C): 09912-66310

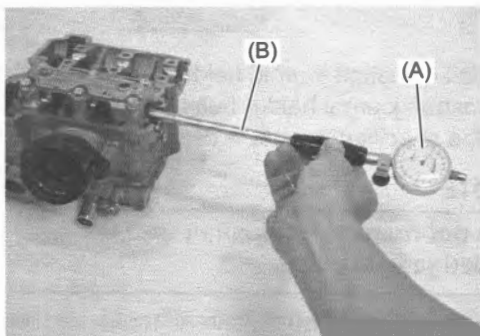

IH18K1140108-01

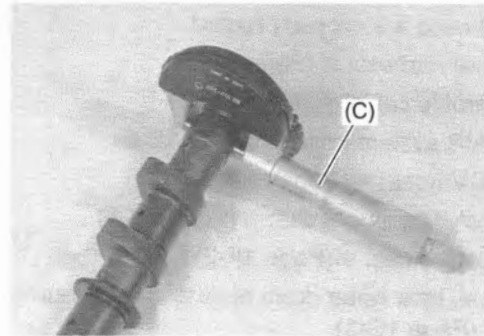

IH18K1140110-01

**Camshaft Runout**

Measure the runout using the dial gauge. Replace the camshaft if the runout exceeds the limit.

**Camshaft runout**


Intake & Exhaust [Limit]: 0.10 mm (0.004 in)

**Special tool**

(A): 09900-20607

(B): 09900-20701

(C): 09900-21304

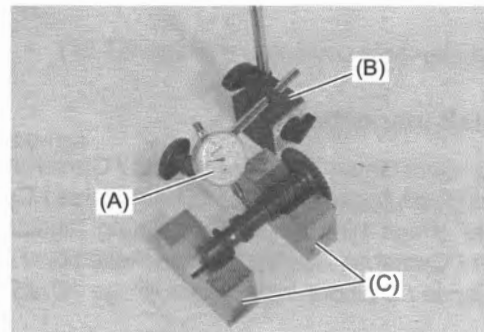


IH18K1140109-01

**Camshaft Sprocket**

Inspect the teeth of each camshaft sprocket for wear or damage.

If any defects are found, replace the camshaft assembly and cam chain as a set.

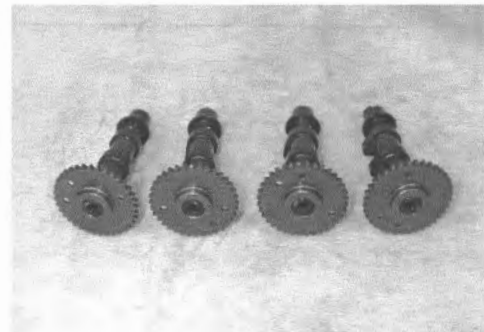


IH18K1140111-01

### Cam Chain Tension Adjuster Inspection

BENH28K21406018

Refer to "Cam Chain Tension Adjuster / Camshaft / Cylinder Head Assembly / Cam Chain Guide / Cylinder Removal" (Page 1D-19) and "Cam Chain Tension Adjuster / Camshaft / Cylinder Head Assembly / Cam Chain Guide / Cylinder Installation" (Page 1D-25). Unlock the ratchet (1), and move the push rod (2) in place to see if it slides smoothly. If any stickness is noted or ratchet mechanism is faulty, replace the cam chain tension adjuster assembly with a new one.

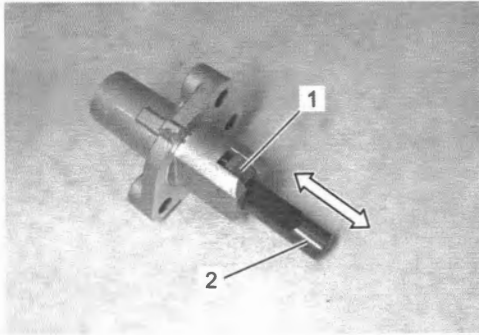

IH18K1140112-01

### Valve Clearance Inspection and Adjustment

BENH28K21406019


Refer to "Cylinder Head Cover Removal and Installation" (Page 1D-17) and "Spark Plug Removal and Installation" in Section 1H (Page 1H-6).

#### Inspection

Valve clearance adjustment must be checked and adjusted, a) at the time of periodic inspection, b) when the valve mechanism is serviced, and c) when the camshafts are removed for servicing.


### NOTE

- The cam must be at positions, (1) or (2), when checking or adjusting the valve clearance. Clearance readings should not be taken with the cam in any other position than these two positions.
- The valve clearance should be taken when each cylinder is at Top Dead Center (TDC) of compression stroke.
- The clearance specification is for COLD state.
- To turn the crankshaft for valve clearance checking, be sure to use a wrench, and rotate in the normal running direction.

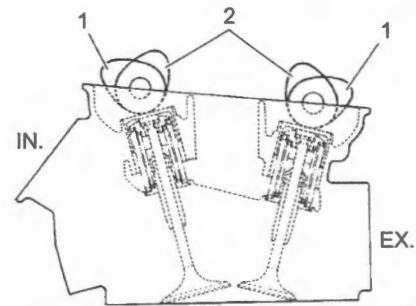

IH18K1140304-01

- 1) Remove the TDC plug (1) and crankshaft hole plug (2).


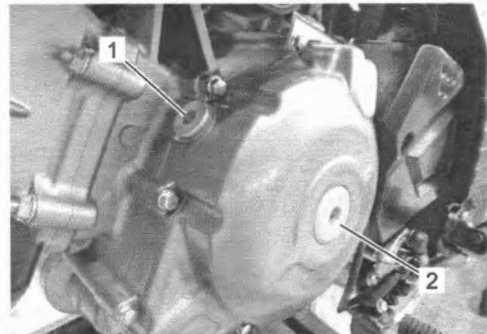


IH28K1140054-01

- 2) Turn the crankshaft to set the cylinder #1 at TDC of compression stroke. (Align the [ F ] line (1) on the generator rotor to the index mark (2) of generator cover hole and also bring the camshafts to the position as shown.)

**NOTE**

If the camshafts are not in position (3), turn the crankshaft 360° (1 turns) and confirm the position again.

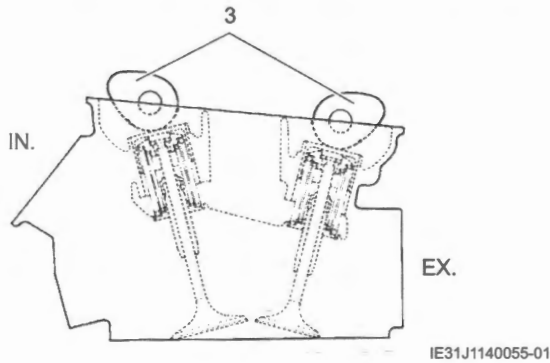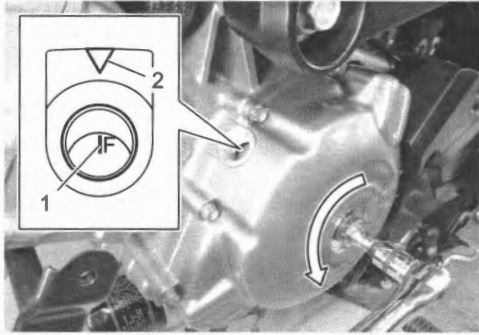

- 3) To inspect the cylinder #1 valve clearance, use a thickness gauge between the tappet and the cam. If the clearance is out of specification, adjust it into the specified range.

**Valve clearance**


When engine cold

Intake [Standard]: 0.10 – 0.20 mm (0.0040 – 0.0078 in)



Exhaust [Standard]: 0.20 – 0.30 mm (0.0079 – 0.0118 in)

**Special tool**

(A): 09900-20803

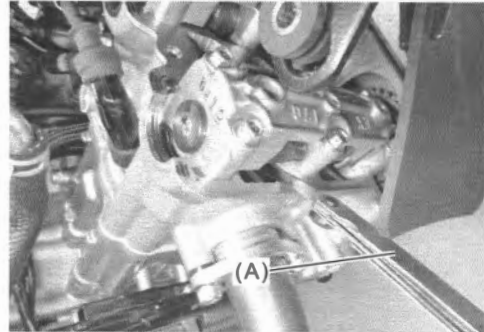


- 4) Turn the crankshaft 270 degrees (3/4 turn) to set the cylinder #2 at TDC of compression stroke. (Align the [ R ] line (1) on the generator rotor to the index mark (2) of generator cover hole and also bring the camshafts to the position (3) as shown.)

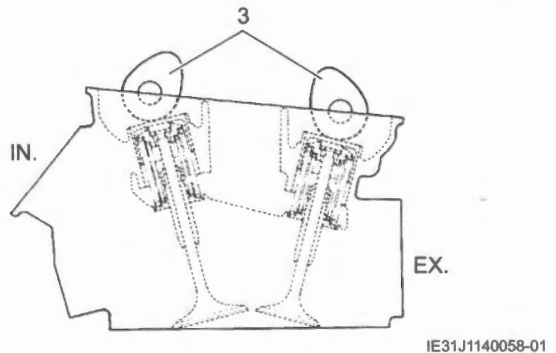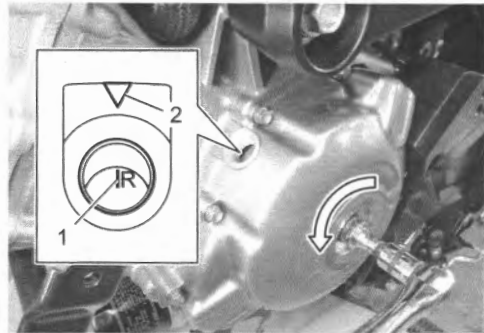

- 5) Inspect the cylinder #2 valve clearance as the same manner of cylinder #1 and adjust the clearance if necessary.

**Special tool**  
**(A): 09900-20803**

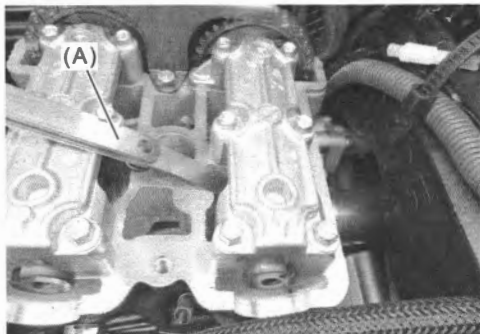


IH28K1140134-01

**Adjustment**

The clearance is adjusted by replacing the existing tappet shim with a thicker or thinner shim.

- 1) Remove the intake camshaft or exhaust camshaft. (Page 1D-19)
- 2) Remove the tappet (1) and shim (2) by fingers or magnetic hand.

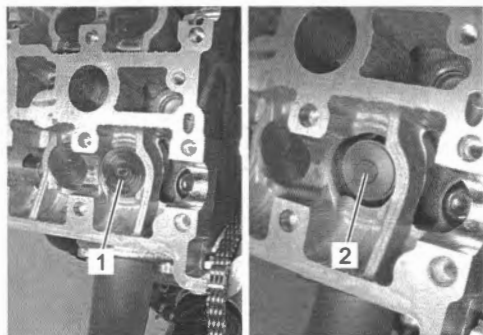

IH18K1140119-01

- 3) Check the figures printed on the shim. These figures indicate the thickness of the shim, as illustrated.



IH18K1140120-01

- 4) Select a replacement shim that will provide a clearance within the specified range. For the purpose of this adjustment, a total of 21 sizes of tappet shim are available ranging from 1.20 to 2.20 mm (0.048 – 0.086 in) in steps of 0.05 mm (0.002 in).


**NOTICE**

**Both the right and left valve clearances should be as closely as possible.**

- 5) Fit the selected shim (1) to the valve stem end, with numbers toward tappet. Be sure to check shim size with micrometer to ensure its size.

**NOTE**

- Apply engine oil to tappet shim top and bottom faces.
- When seating the tappet shim, be sure the figure printed surface faces the tappet.

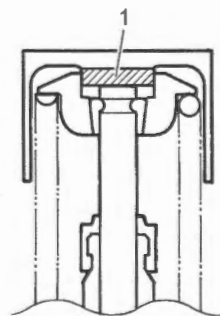

IE31J1140061-01

TAPPET SHIM SELECTION TABLE (INTAKE)  
TAPPET SHIM NO. (12892-05C00-XXX)

TAPPET SHIM SET (12800-05830)

MEASURED TAPPET CLEARANCE (mm)	SUFFIX NO.	120	125	130	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220
	PRESENT SHIM SIZE (mm)	1.20	1.25	1.30	1.35	1.40	1.45	1.50	1.55	1.60	1.65	1.70	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20
0.00-0.04				1.20	1.25	1.30	1.35	1.40	1.45	1.50	1.55	1.60	1.65	1.70	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10
0.05-0.09			1.20	1.25	1.30	1.35	1.40	1.45	1.50	1.55	1.60	1.65	1.70	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15
0.10-0.20	SPECIFIED CLEARANCE/NO ADJUSTMENT REQUIRED																					
0.21-0.25		1.30	1.35	1.40	1.45	1.50	1.55	1.60	1.65	1.70	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20	2.20	
0.26-0.30		1.35	1.40	1.45	1.50	1.55	1.60	1.65	1.70	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20	2.20		
0.31-0.35		1.40	1.45	1.50	1.55	1.60	1.65	1.70	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20	2.20			
0.36-0.40		1.45	1.50	1.55	1.60	1.65	1.70	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20	2.20				
0.41-0.45		1.50	1.55	1.60	1.65	1.70	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20	2.20					
0.46-0.50		1.55	1.60	1.65	1.70	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20	2.20						
0.51-0.55		1.60	1.65	1.70	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20	2.20							
0.56-0.60		1.65	1.70	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20	2.20								
0.61-0.65		1.70	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20	2.20									
0.66-0.70		1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20	2.20										
0.71-0.75		1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20	2.20											
0.76-0.80		1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20	2.20												
0.81-0.85		1.90	1.95	2.00	2.05	2.10	2.15	2.20	2.20													
0.86-0.90		1.95	2.00	2.05	2.10	2.15	2.20	2.20														
0.91-0.95		2.00	2.05	2.10	2.15	2.20	2.20															
0.96-1.00		2.05	2.10	2.15	2.20	2.20																
1.01-1.05		2.10	2.15	2.20	2.20																	
1.06-1.10		2.15	2.20	2.20																		
1.11-1.15		2.20	2.20																			

**HOW TO USE THIS CHART:**

- I. Measure tappet clearance. "ENGINE IS COLD"
- II. Measure present shim size.
- III. Match clearance in vertical column with present shim size in horizontal column.

**EXAMPLE**

Tappet clearance is 0.23 mm  
Present shim size 1.65 mm  
Shim size to be used 1.75 mm

(INTAKE SIDE)

TAPPET SHIM SELECTION TABLE [EXHAUST]  
TAPPET SHIM NO. (12892-05C00-XXX)

TAPPET SHIM SET (12800-05830)

MEASURED TAPPET CLEARANCE (mm)	SUFFIX NO.	120	125	130	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220
	PRESENT SHIM SIZE (mm)	1.20	1.25	1.30	1.35	1.40	1.45	1.50	1.55	1.60	1.65	1.70	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20
0.05-0.09					1.20	1.25	1.30	1.35	1.40	1.45	1.50	1.55	1.60	1.65	1.70	1.75	1.80	1.85	1.90	1.95	2.00	2.05
0.10-0.14				1.20	1.25	1.30	1.35	1.40	1.45	1.50	1.55	1.60	1.65	1.70	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10
0.15-0.19			1.20	1.25	1.30	1.35	1.40	1.45	1.50	1.55	1.60	1.65	1.70	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15
0.20-0.30	SPECIFIED CLEARANCE/NO ADJUSTMENT REQUIRED																					
0.31-0.35	1.30	1.35	1.40	1.45	1.50	1.55	1.60	1.65	1.70	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20	2.20		
0.36-0.40	1.35	1.40	1.45	1.50	1.55	1.60	1.65	1.70	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20				
0.41-0.45	1.40	1.45	1.50	1.55	1.60	1.65	1.70	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20					
0.46-0.50	1.45	1.50	1.55	1.60	1.65	1.70	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20						
0.51-0.55	1.50	1.55	1.60	1.65	1.70	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20							
0.56-0.60	1.55	1.60	1.65	1.70	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20								
0.61-0.65	1.60	1.65	1.70	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20									
0.66-0.70	1.65	1.70	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20										
0.71-0.75	1.70	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20											
0.76-0.80	1.75	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20												
0.81-0.85	1.80	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20													
0.86-0.90	1.85	1.90	1.95	2.00	2.05	2.10	2.15	2.20														
0.91-0.95	1.90	1.95	2.00	2.05	2.10	2.15	2.20															
0.96-1.00	1.95	2.00	2.05	2.10	2.15	2.20																
1.01-1.05	2.00	2.05	2.10	2.15	2.20																	
1.06-1.10	2.05	2.10	2.15	2.20																		
1.11-1.15	2.10	2.15	2.20																			
1.16-1.20	2.15	2.20																				
1.21-1.25	2.20																					

HOW TO USE THIS CHART:

- I. Measure tappet clearance. "ENGINE IS COLD"
- II. Measure present shim size.
- III. Match clearance in vertical column with present shim size in horizontal column.

EXAMPLE

Tappet clearance is 0.33 mm  
Present shim size 1.65 mm  
Shim size to be used 1.75 mm

(EXHAUST SIDE)

6) Install the intake camshaft or exhaust camshaft.  
(Page 1D-25)

7) Rotate the engine so that the tappet is depressed fully. This will squeeze out oil trapped between the shim and the tappet that could cause an incorrect measurement, then check the clearance again to confirm that it is within the specified range.

8) After finishing the valve clearance adjustment, check the engine for smooth starting and free from any abnormal noise.

Engine Assembly Removal

BENH28K21406020

- 1) Drain engine oil. (Page 1E-4)
- 2) Drain engine coolant. (Page 1F-5)
- 3) Disconnect the battery (-) lead wire. (Page 1J-11)
- 4) Remove the throttle body. (Page 1D-9)
- 5) Remove the radiator assembly. (Page 1F-7)
- 6) Remove the all spark plug caps. (Page 1H-6)
- 7) Remove the muffler (1) and exhaust pipe #1 (2). (Page 1K-4)



IH28K1140135-02

- 8) Disconnect the ECT sensor coupler (1).
- 9) Disconnect the radiator inlet hose (2).




IH28K1140136-01

- 10) Disconnect the GP switch coupler (1).




IH28K1140137-01

- 11) Disconnect the CKP sensor coupler (1) and generator coupler (2).

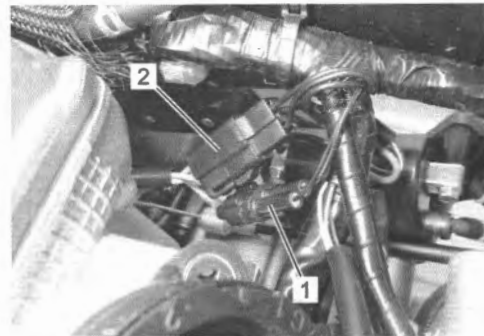


IH28K1140138-01

- 12) Remove the starter motor lead wire (1).
- 13) Remove the oil pressure switch lead wire (2).

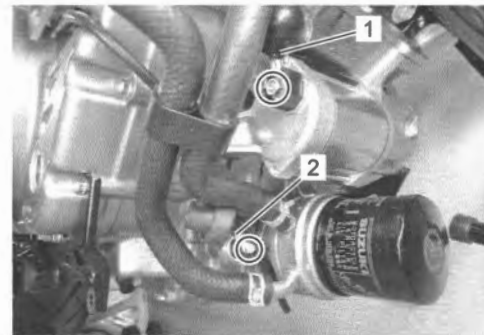


IH28K1140139-01

- 14) Release the water pump drain hose (1) and oil pressure switch lead wire (2) from the clamp (3).

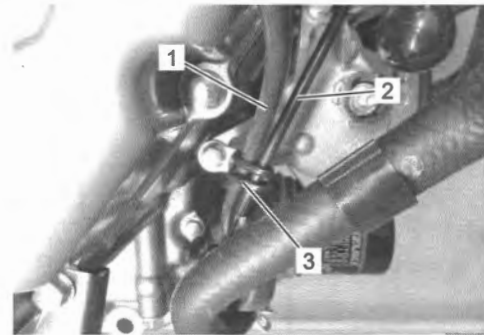

IH28K1140140-01


- 15) Release the fuel tank drain hose (1) and wire harness (2) from the clamp (3).

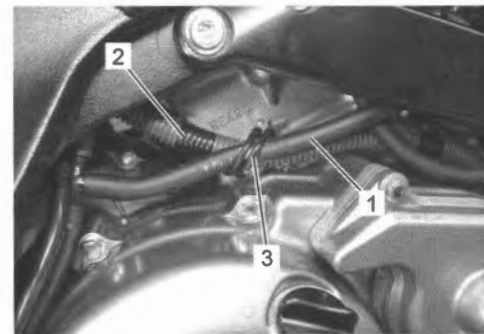

IH28K1140141-01



16) Disconnect the engine ground lead wire (1).

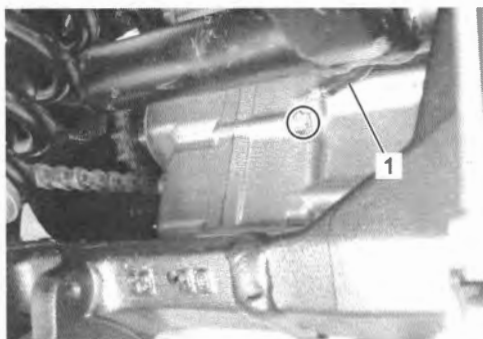

IH28K1140142-01

17) Remove the gearshift link arm (1).

**NOTE**


Mark the gearshift shaft head at which the gearshift link arm slit is set for correct reinstallation.



IH28K1140143-01


18) Remove the engine sprocket cover. (Page 3A-4)

19) Remove the clutch release arm (1), return spring (2) and washer (3).

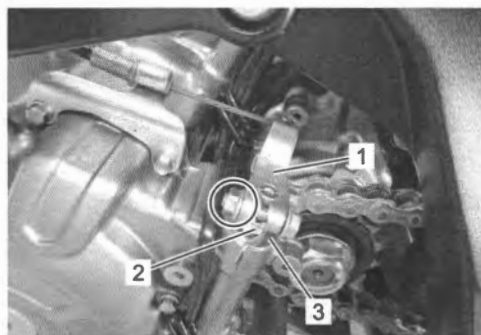


IH28K1140144-01

20) Disconnect the clutch cable (1) from the clutch cable stopper (2).

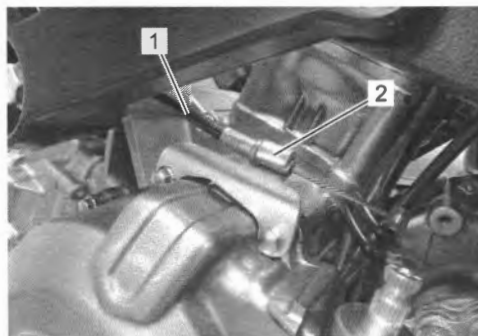


IH28K1140145-02

21) Remove the side-stand switch (1) and disconnect the clamp (2).

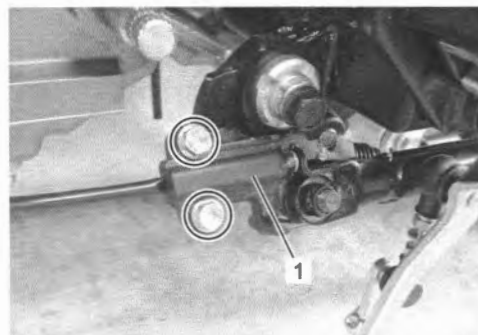


IH28K1140146-01

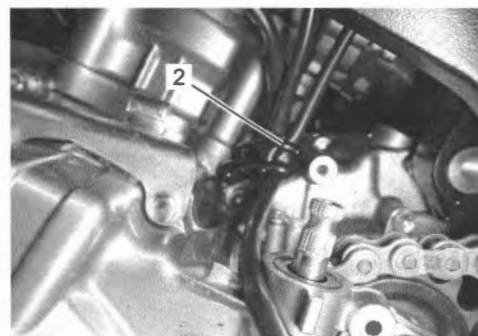


IH28K1140147-02

22) Cut the clamp (1).

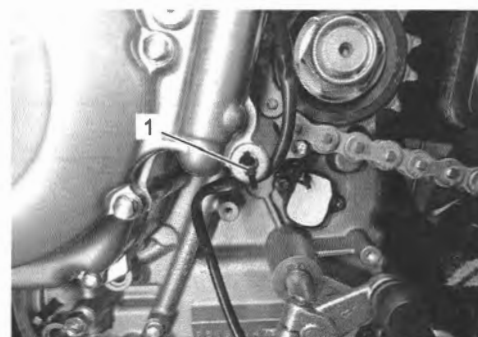

IH28K1140190-01


23) Remove the engine sprocket (1). (Page 3A-4)

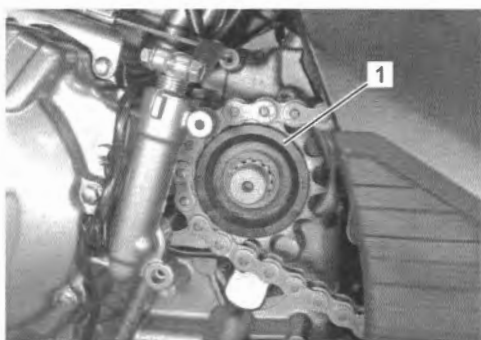

24) Remove the bolts and move the right front footrest bracket (1).



25) Release the fuel tank water drain hose No. 2 (1) from the clamp (2).

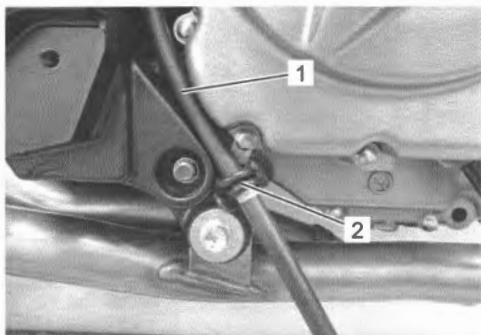


26) Set the wooden block (1) to the jack (2).


27) Support the engine with a jack (2).

**▲ CAUTION**

**Do not support at the oil filter (3).**

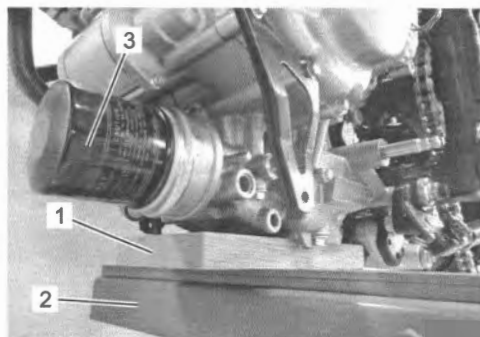


28) Remove the engine mounting nut (1) and bolt (2).

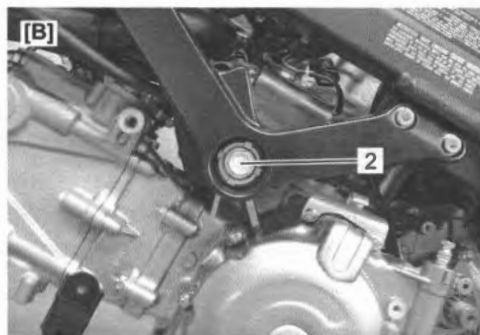

[A]: RH side [B]: LH side

29) Loosen the engine mounting thrust adjuster lock-nut (1) with the special tool.

**Special tool**  
**(A): 09940-14990**

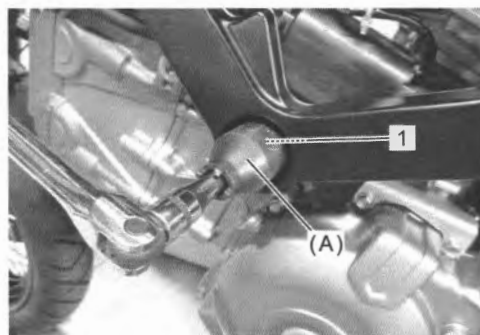


30) Loosen the engine mounting thrust adjuster (1).



IH28K1140156-01

31) Disconnect the ignition coil #1 read wire coupler (1) and release the clamp (2).

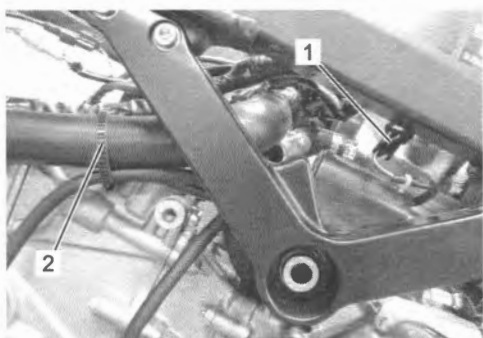


IH28K1140157-02

32) Remove the left engine mounting bracket (1).




IH28K1140158-01

33) Remove the engine mounting nut (1) and bolt (2).

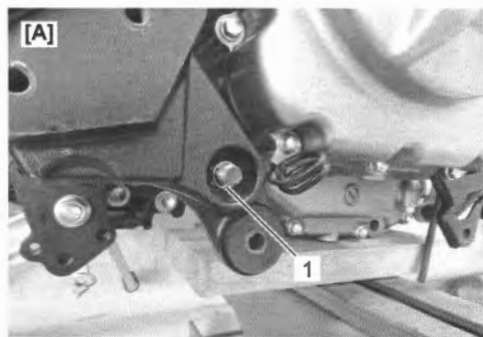

IH28K1140159-01

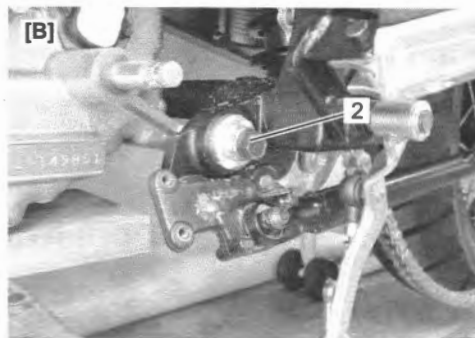


IH28K1140160-01

[A]: RH side [B]: LH side


34) Loosen the engine mounting thrust adjuster lock-nut (1) with the special tool.

**Special tool**  
(A): 09940-14990

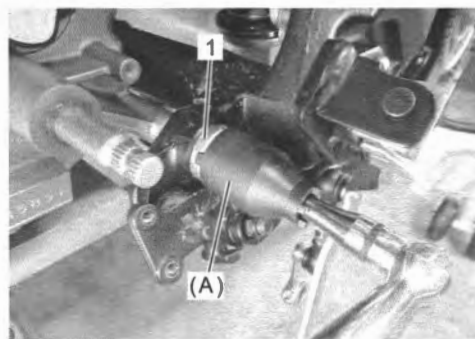


IH28K1140161-01

35) Loosen the engine mounting thrust adjuster (1).

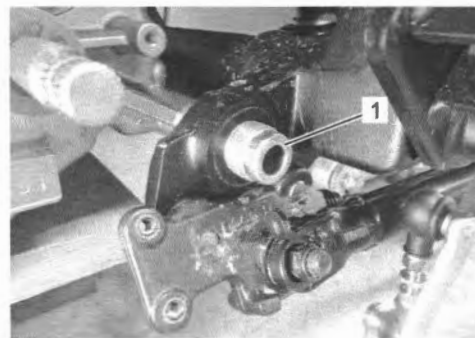


IH28K1140162-01

36) Loosen the pinch bolt (1).

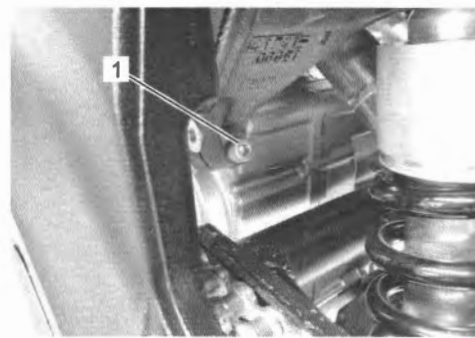

IH28K1140163-01

- 37) Remove the engine mount bolt (1) and gradually lower the engine. Then, take off the drive chain from the drive shaft.

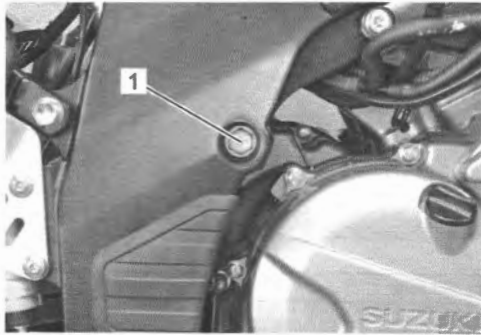


IH28K1140164-01

- 38) Remove the engine assembly (1) to the left side of motorcycle.

**CAUTION**

- Be careful not to contact the exhaust pipe #2 with the frame and swingarm.
- Be careful not to contact the left crankcase lower engine mounting hole with the side-stand mounting bolts.

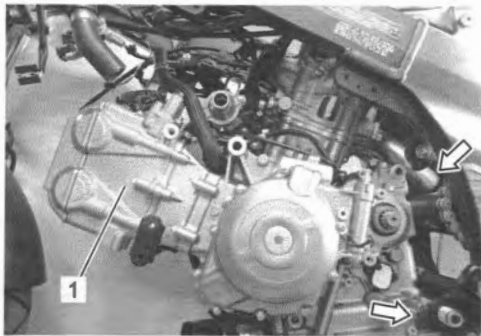


IH28K1140165-01

**Engine Assembly Installation**

BENH28K21406021

Install the engine assembly in the reverse order of engine removal. Pay attention to the following points:

- Install the collar (1) to the frame.

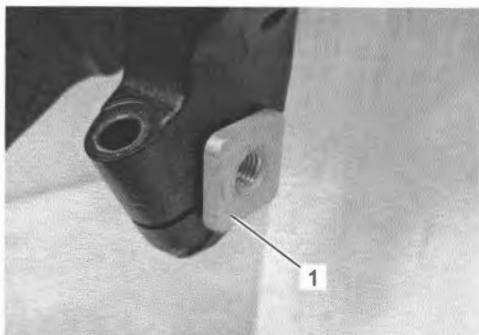

IH28K1140189-01


- When reusing the left engine mounting bracket bolts (1), clean the thread part and apply the thread lock to them.

“A”: Thread lock cement 99000-32150 (THREAD LOCK CEMENT 1322D)

- Install the left engine mounting bracket (2) to the specified torque.

**Tightening torque**

Engine mounting bracket bolt (a): 35 N·m (3.6 kgf-m, 26.0 lbf-ft)

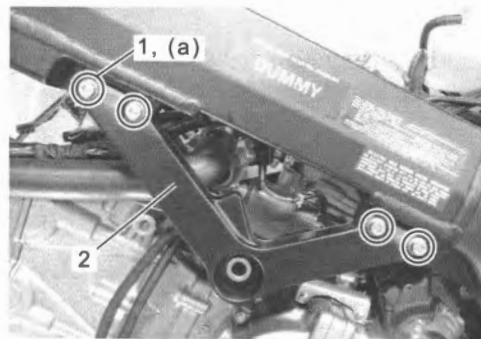


IH28K1140167-01

- Gradually raise the engine assembly, and then put the drive chain (1) on the driveshaft (2).

**NOTICE**


Be careful not to pinch the wiring harness between the frame and the engine.

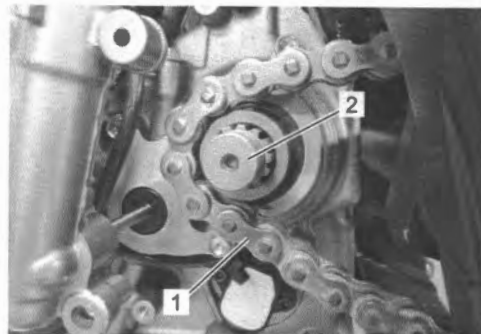


IH28K1140168-01

- Install the upper engine mounting bolt #1 (1), upper engine mounting bolt #2 (2), lower engine mounting bolt #2 (3) and new nuts (4), and tighten them temporarily.

**Left side**

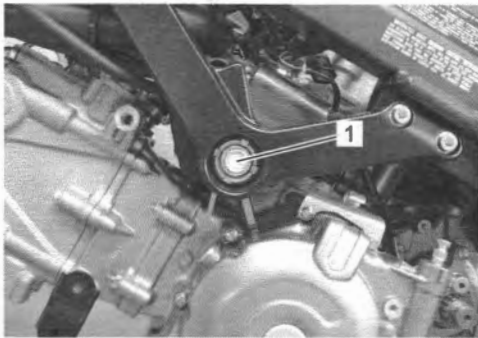


IH28K1140169-01

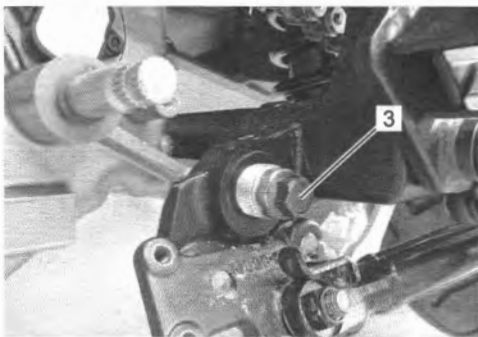


IH28K1140170-01


**Right side**

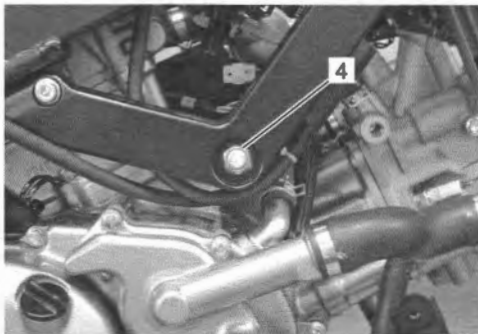

IH28K1140171-01

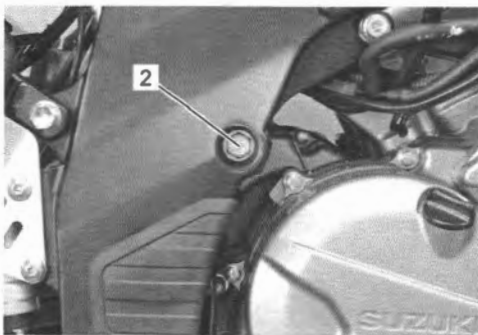

IH28K1140172-01

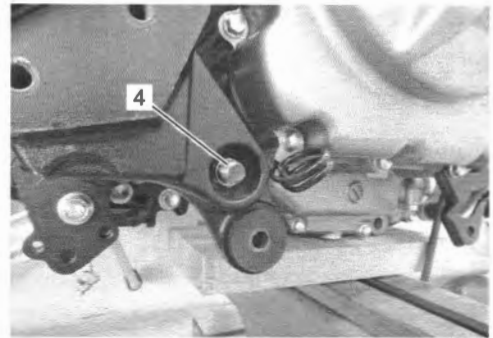

IH28K1140173-01

- Tighten the engine mounting thrust adjusters (1) and (2) to the specified torque.


**Tightening torque**

**Engine mounting thrust adjuster (a): 12 N·m (1.2 kgf-m, 9.0 lbf-ft)**

**Left side**



IH28K1140174-01

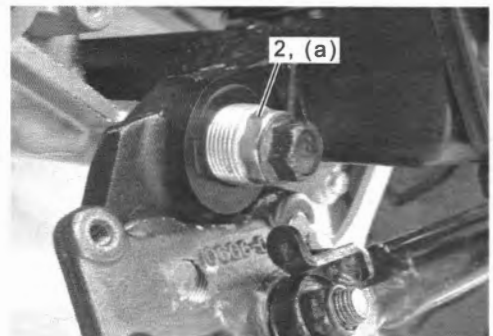


IH28K1140175-01

- Tighten the engine mounting thrust adjuster lock-nuts (1) and (2) to the specified torque with the special tool.


**Special tool**  
09940-14990

**Tightening torque**  
Engine mounting thrust adjuster lock-nut (a): 45 N·m (4.6 kgf-m, 33.5 lbf-ft)

Left side

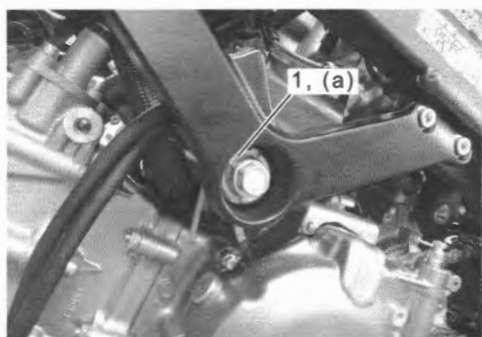

IH28K1140176-01

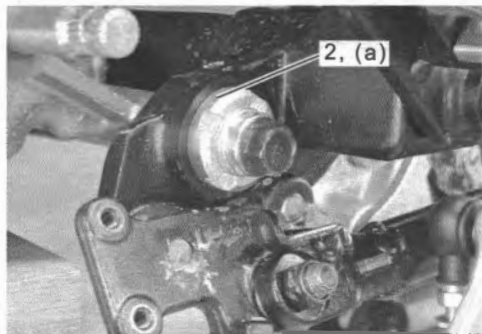


IH28K1140177-01

- Tighten the upper engine mounting bolt #2 (1) to the specified torque.

**Tightening torque**  
Engine mounting bolt (a): 55 N·m (5.6 kgf-m, 40.5 lbf-ft)

Right side

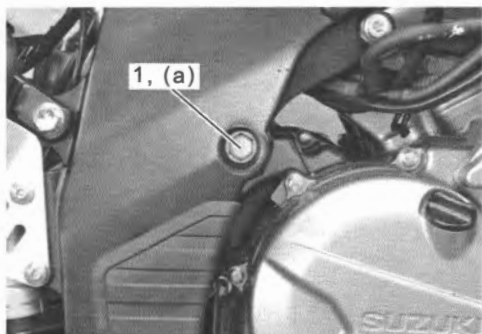


IH28K1140178-01

- Tighten the pinch bolt (1) to the specified torque.

**Tightening torque**  
Engine mounting bolt (a): 25 N·m (2.5 kgf-m, 18.5 lbf-ft)

Rear side

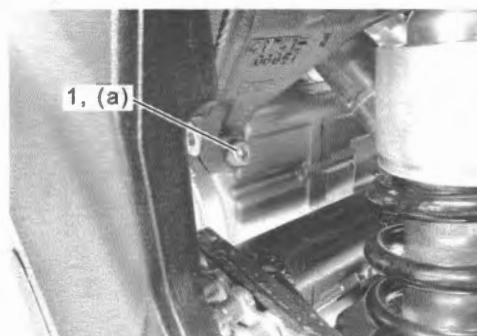


IH28K1140179-01


- Tighten the engine mounting nuts (1) and (2) to the specified torque.

**Tightening torque**  
Engine mounting nut (a): 93 N·m (9.5 kgf-m, 69.0 lbf-ft)  
Engine mounting nut (b): 55 N·m (5.6 kgf-m, 40.5 lbf-ft)


Right side

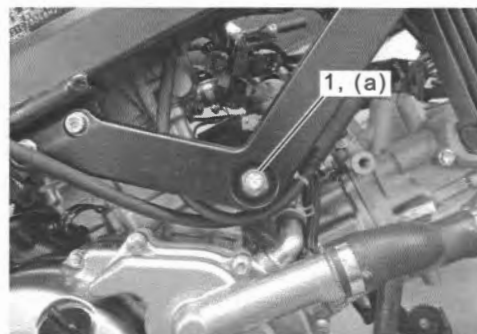

IH28K1140180-01

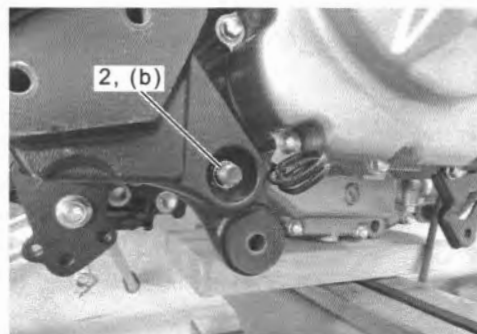

IH28K1140181-01

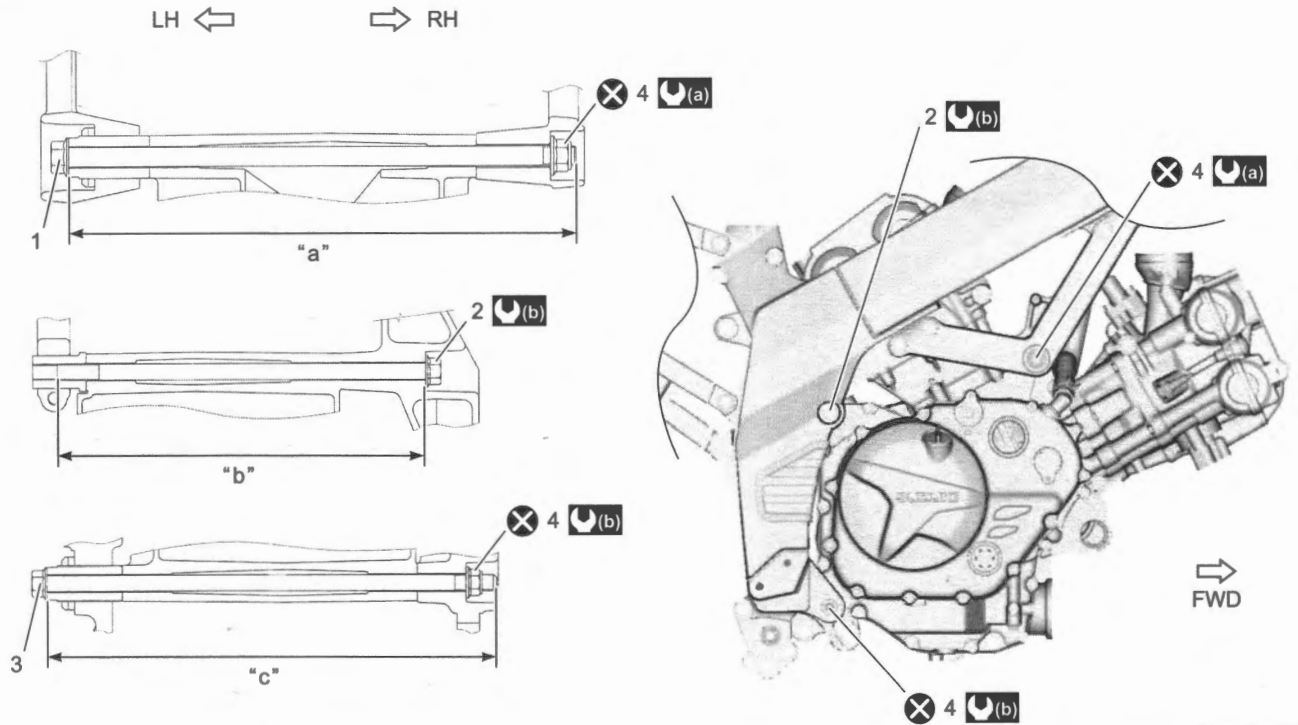

IH28K1140187-03


1. Engine mounting bolt (crankcase upper)	"b": 225 mm (8.86 in)
2. Engine mounting bolt (crankcase rear upper)	"c": 275 mm (8.86 in)
3. Engine mounting bolt (crankcase rear lower)	(a) : 93 N·m (9.5 kgf·m, 69.0 lbf·ft)
4. Engine mounting nut	(b) : 55 N·m (5.6 kgf·m, 40.5 lbf·ft)
"a": 310 mm (12.2 in)	X : Do not reuse.

- Adjust the drive chain slack. Refer to "Drive Chain Inspection and Adjustment" in Section 3A (Page 3A-3).
- Install the PAIR hose (if equipped). Refer to "PAIR Hose Removal and Installation (If Equipped)" in Section 1B (Page 1B-12).
- Install the throttle body. Refer to "Throttle Body Removal and Installation" (Page 1D-9).
- Install the exhaust pipe #1 and muffler. Refer to "Exhaust Pipe / Muffler Removal and Installation" in Section 1K (Page 1K-4).
- Install the radiator. Refer to "Radiator / Cooling Fan Motor Removal and Installation" in Section 1F (Page 1F-7).
- Install the air cleaner box. Refer to "Air Cleaner Box Removal and Installation" (Page 1D-6).
- Pour engine coolant. Refer to "Engine Coolant Replacement" in Section 1F (Page 1F-5) and "Engine Cooling System Inspection" in Section 1F (Page 1F-6).
- Pour engine oil. Refer to "Engine Oil Replacement" in Section 1E (Page 1E-4).
- Install the clutch release arm. Refer to "Clutch Push Rod (Left) / Clutch Release Camshaft Removal and Installation" in Section 5C (Page 5C-7).
- Check the gearshift lever height. (Page 5B-13)
- Check the wiring harness routing. (Page 9A-7)
- Check the radiator hose routing. (Page 1F-2)
- After finishing the engine installation, check the following items.
  - Throttle cable play: (Page 1D-9)
  - Clutch cable play: (Page 5C-2)
  - Throttle valve synchronization: (Page 1D-15)
  - Engine oil leakage: (Page 1E-4)
  - Engine coolant leakage: (Page 1F-6)

### Cam Chain Guide Inspection

BENH28K21406022

- 1) Remove the cam chain guides No. 1 and No. 2. Refer to "Cam Chain Tension Adjuster / Camshaft / Cylinder Head Assembly / Cam Chain Guide / Cylinder Removal" (Page 1D-19).
- 2) Check the contacting surface of the cam chain guides. If it is worn or damaged, replace it with a new one.

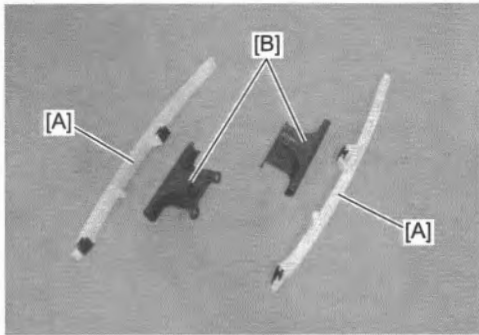

IH18K1140186-01

[A]: Cam chain guide No. 1

[B]: Cam chain guide No. 2

- 3) Install the cam chain guides No. 1 and No. 2. Refer to "Cam Chain Tension Adjuster / Camshaft / Cylinder Head Assembly / Cam Chain Guide / Cylinder Installation" (Page 1D-25).

### Cylinder Inspection

BENH28K21406023

Refer to "Cam Chain Tension Adjuster / Camshaft / Cylinder Head Assembly / Cam Chain Guide / Cylinder Removal" (Page 1D-19) and "Cam Chain Tension Adjuster / Camshaft / Cylinder Head Assembly / Cam Chain Guide / Cylinder Installation" (Page 1D-25).


### Cylinder Distortion

Check the gasket surface of the cylinder for distortion with a straightedge and thickness gauge, taking a clearance reading at several places as indicated. If the largest reading at any position of the straightedge exceeds the limit, replace the cylinder.

### Cylinder distortion

[Limit]: 0.05 mm (0.0019 in)

**Special tool**  
09900-20803

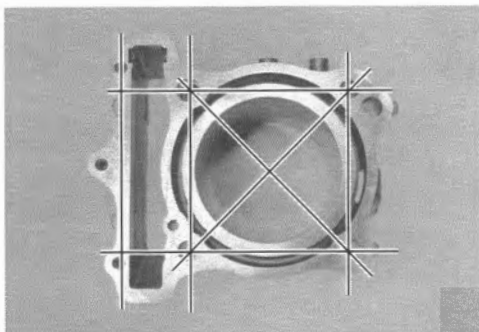

I944H1140244-01

### Cylinder Bore

Check the cylinder wall for any scratches, nicks or other damage.

Measure the cylinder bore diameter at six places. If any one of the measurements exceed the limit, replace the cylinder.


### Cylinder bore

[Standard]: 81.000 – 81.015 mm (3.1890 – 3.1895 in)


[Limit]: No nicks or scratches

### Special tool

(A): 09900-20530

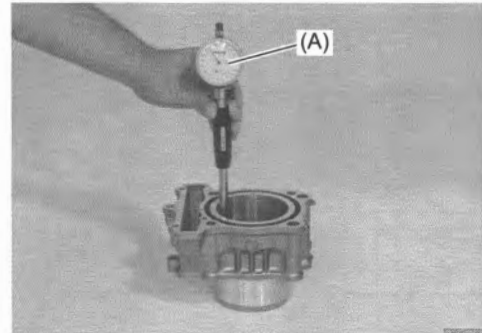

IH18K1140187-01

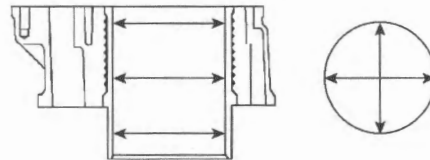

IH18K1140188-01

### Valve / Valve Spring Removal and Installation

BENH28K21406024

Refer to "Cam Chain Tension Adjuster / Camshaft / Cylinder Head Assembly / Cam Chain Guide / Cylinder Removal" (Page 1D-19) and "Cam Chain Tension Adjuster / Camshaft / Cylinder Head Assembly / Cam Chain Guide / Cylinder Installation" (Page 1D-25).


### NOTE

**Identify the position of each removed part.**  
**Organize the parts so that they can be reinstalled in their original positions.**



**Removal**

- 1) Remove the tappet (1) and shim (2) by fingers or magnetic hand.

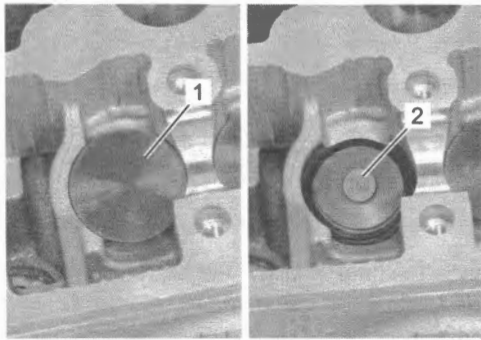

IH18K1140189-01

- 2) Install the sleeve protector between the valve spring and cylinder head.

**NOTICE**

To prevent damage of the tappet sliding surface with the valve lifter attachment, use the special tool.

**Special tool**

(A): 09919-28620


- 3) Using the special tools, compress the valve spring and remove the two cotter halves (1) from the valve stem.

**Special tool**

(B): 09916-14510


(C): 09916-14522

09916-84511

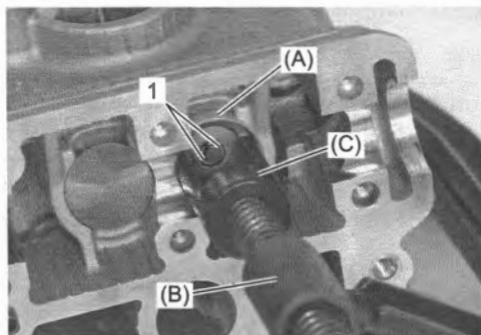


IH18K1140190-01

- 4) Remove the valve spring retainer (1) and valve spring (2).
- 5) Pull out the valve (3) from the combustion chamber side.

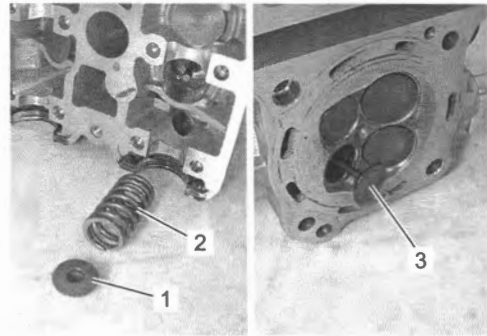

IH18K1140191-01


- 6) Remove the valve stem oil seal (1) and valve spring seat (2).

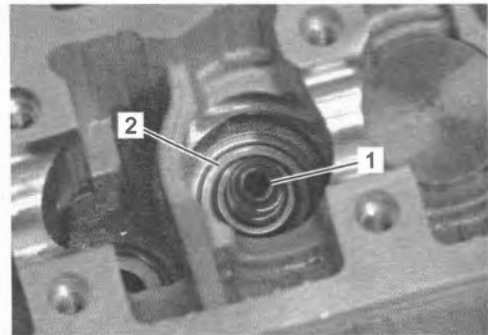

IH18K1140192-01

**Installation**

- 1) Install the valve spring seat (1).
- 2) Apply engine oil to the new valve stem oil seal (2), and press-fit it into position.

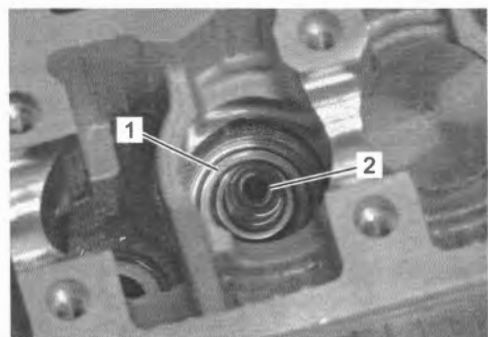


IH18K1140193-01

- 3) Insert the valve, with its stem coated with molybdenum oil solution all around and along the full stem length without any break.

**NOTICE**


When inserting the valve, take care not to damage the lip of the oil seal.

**"A": Assembly lubrication (Molybdenum oil solution)**

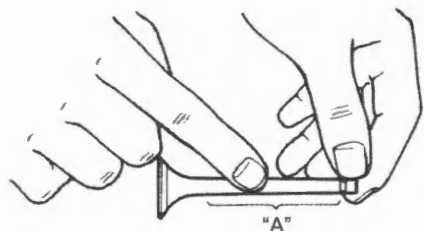

ID26J1140087-01

- 4) Install the valve spring with the small-pitch portion (1) facing cylinder head.

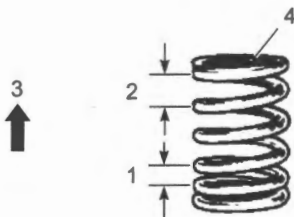

ID26J1140274-03

2. Large-pitch portion	4. Paint
3. UPWARD	


- 5) Put on the valve spring retainer (1), and using the special tools, press down the spring, fit the cotter halves (2) to the stem end.

**NOTICE**

- Be sure to restore each spring and valve to their original positions.
- Be careful not to damage the valve and valve stem when handling it.
- Compressing of the valve spring must be limited to the extent only necessary to prevent the spring from fatigue.


**Special tool**

- (A): 09919-28620  
 (B): 09916-14510  
 (C): 09916-14522  
 09916-84511

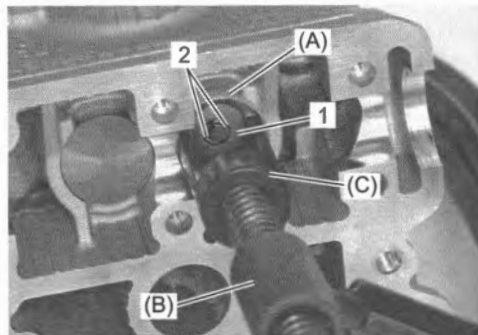

IH18K1140194-01

- 6) Release the lifter to allow the cotter halves (1) to wedge in between valve spring retainer (2) and valve stem (3).
- 7) Be sure that the rounded lip (4) of the cotter fits snugly into the groove (5) in the stem end.

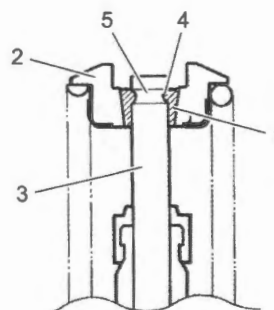


IH18K1140195-01

- 8) Apply engine oil to the stem ends and tappet shims (1).
- 9) Apply engine oil to the tappets (2).
- 10) Install the tappet shims (1) and the tappets (2) to their original positions.

**NOTE**

When seating the tappet shim, be sure the figure printed surface faces the tappet.

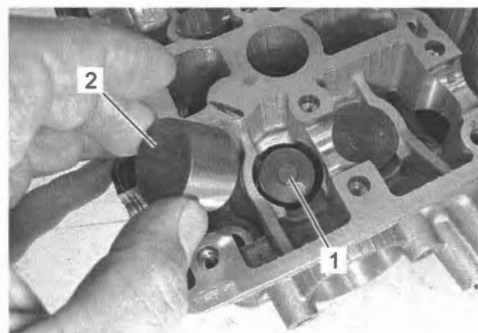

IH18K1140196-01

**Valve Inspection**

BENH28K21406025

Refer to "Valve / Valve Spring Removal and Installation" (Page 1D-52).

**Valve Stem Runout**


Support the valve using V-blocks, and check its runout using the dial gauge as shown in the figure. If the runout exceeds the service limit, replace the valve.

**Valve stem runout**

**Intake & Exhaust [Limit]: 0.05 mm (0.0019 in)**

**Special tool**

- (A): 09900-20607
- (B): 09900-20701
- (C): 09900-21304

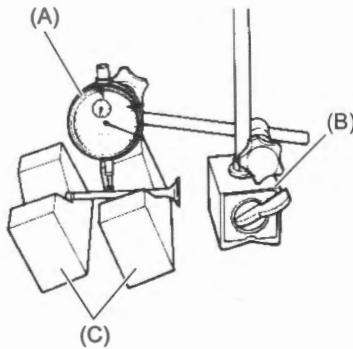

ID26J1140091-01

**Valve Head Radial Runout**


Place the dial gauge at a right angle to the valve head face and measure the valve head radial runout. If it measures more than the service limit, replace the valve.

**Valve head radial runout**

**Intake & Exhaust [Limit]: 0.03 mm (0.0011 in)**

**Special tool**

- (A): 09900-20607
- (B): 09900-20701
- (C): 09900-21304

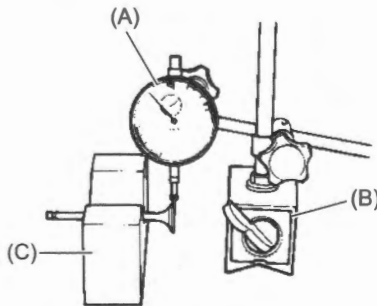

ID26J1140092-01

**Valve Face Wear**

Visually inspect each valve face for wear. Replace any valve with an abnormally worn face. The thickness of the valve face decreases as the face wears. Measure the valve head "a". If it is out of specification, replace the valve with a new one.


**Valve head thickness**

**Intake [Limit]: 0.5 mm (0.02 in)**

**Exhaust [Limit]: 0.5 mm (0.02 in)**

**Special tool**

**09900-20101**

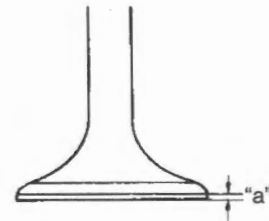

I649G1140233-02

**Valve Stem Wear**

Measure the valve stem O.D. using the micrometer. If it is out of specification, replace the valve with a new one. If the valve stem O.D. is within specification but the valve stem deflection is not, replace the valve guide. After replacing the valve or valve guide, recheck the valve stem deflection.


**Valve stem O.D.**

**Intake [Standard]: 4.475 – 4.490 mm (0.1762 – 0.1767 in)**

**Exhaust [Standard]: 4.455 – 4.470 mm (0.1754 – 0.1759 in)**

**Special tool**

**(A): 09912-66310**

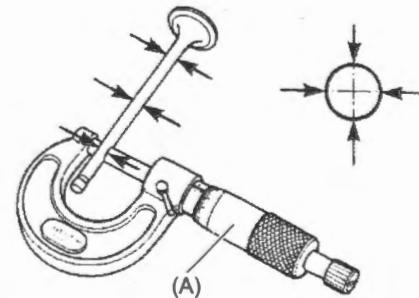

ID26J1140094-01

**Valve Stem Deflection**


Lift the valve about 10 mm (0.39 in) "a" from the valve seat. Measure the valve stem deflection in two directions, (1) and (2), perpendicular to each other, positioning the dial gauge as shown. If the deflection measured exceeds the limit, then determine whether the valve or guide should be replaced with a new one.

**Valve stem deflection**

**Intake & Exhaust [Limit]: 0.35 mm (0.013 in)**

**Special tool**

**(A): 09900-20607  
09900-20701**

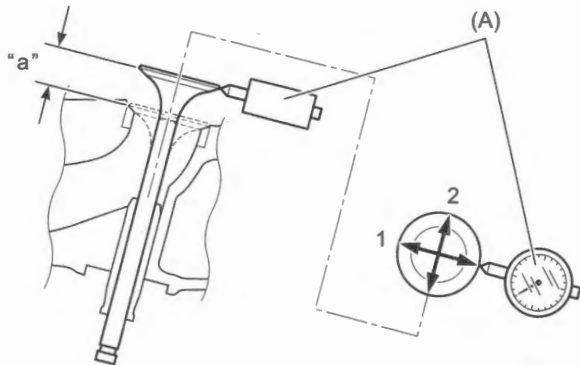


IH18K1140324-02

**Valve Seat Width**

- 1) Visually check for valve seat width on each valve face. If the valve face has worn abnormally, replace the valve.
- 2) Coat the valve seat with a red lead (Prussian Blue) and set the valve in place.
- 3) Rotate the valve with light pressure.

**Special tool**

**(A): 09916-10911**

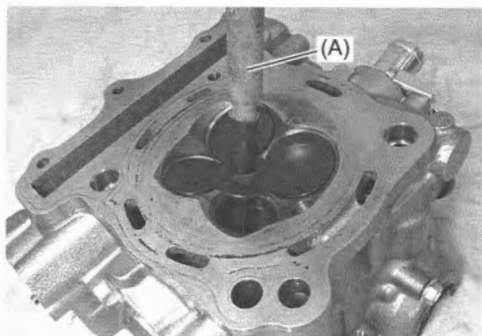

IH18K1140197-01

- 4) Check that the transferred red lead (Blue) on the valve face is uniform all around and in center of the valve face.


If the seat width "a" measured exceeds the standard value, or seat width is not uniform reface the seat using the seat cutter. (Page 1D-57)

**Valve seat width**

**Intake [Standard]: 0.9 – 1.1 mm (0.036 – 0.043 in)**

**Exhaust [Standard]: 0.9 – 1.1 mm (0.036 – 0.043 in)**


**in)**

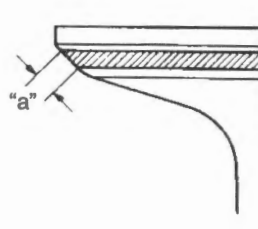

I649G1140246-02

**Valve Seat Sealing Condition**

- 1) Clean and assemble the cylinder head and valve components.
- 2) Fill the intake and exhaust ports with gasoline to check for leaks. If any leaks occur, inspect the valve seat and face for burrs or other things that could prevent the valve from sealing. (Page 1D-57)

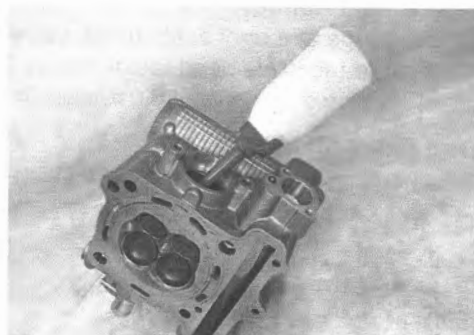

IH18K1140198-01

### Valve Seat Repair

BENH28K21406026

Refer to "Valve / Valve Spring Removal and Installation" (Page 1D-52).


The valve seats (1) for both the intake and exhaust valves are machined to two different angles. The seat contact surface is cut at 45°.

#### NOTICE

- The valve seat contact area must be inspected after each cut.
- Do not use lapping compound after the final cut is made. The finished valve seat should have a velvety smooth finish but not a highly polished or shiny finish. This will provide a soft surface for the final seating of the valve which will occur during the first few seconds of engine operation.

#### NOTE

After servicing the valve seats, be sure to check the valve clearance after the cylinder head has been installed. ↻ (Page 1D-39)

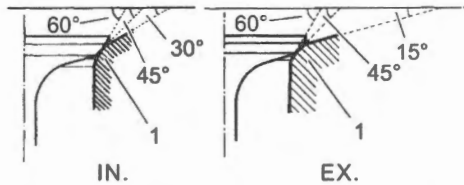

IH18K1140314-01

	Intake	Exhaust
Seat angle	30°/45°/60°	15°/45°/60°
Seat width	0.9 – 1.1 mm (0.036 – 0.043 in)	←
Valve diameter	31 mm (1.2 in)	25.5 mm (1.00 in)
Valve guide I.D.	4.500 – 4.512 mm (0.1772 – 0.1776 in)	←

### Valve Spring Inspection

BENH28K21406027

Refer to "Valve / Valve Spring Removal and Installation" (Page 1D-52).

The force of the coil spring keeps the valve seat tight. Weakened spring results in reduced engine power output and often accounts for the chattering noise coming from the valve mechanism.

Check the valve springs for proper strength by measuring its free length and also by the force required to compress it. If the spring length is less than the service limit or if the force required to compress the spring does not fall within the range specified, replace spring as a set.

#### Valve spring free length

Intake [Limit]: 37.1 mm (1.46 in)

Exhaust [Limit]: 37.1 mm (1.46 in)

#### Valve spring pre-load


When compressed to 33.40 mm (1.315 in)

Intake [Standard]: 127 – 147 N (13.0 – 15.0 kgf, 28.6 – 33.0 lbf)

Exhaust [Standard]: 127 – 147 N (13.0 – 15.0 kgf, 28.6 – 33.0 lbf)

#### Special tool

(A): 09900-20102

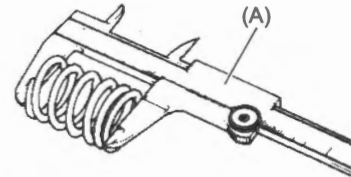

ID26J1140098-01



ID26J1140263-01

## Cylinder Head Disassembly and Reassembly

BENH28K21406028

Refer to "Cam Chain Tension Adjuster / Camshaft / Cylinder Head Assembly / Cam Chain Guide / Cylinder Removal" (Page 1D-19) and "Cam Chain Tension Adjuster / Camshaft / Cylinder Head Assembly / Cam Chain Guide / Cylinder Installation" (Page 1D-25).

### NOTE

The cylinder heads #1 and #2 are assembled symmetrically and therefore the disassembly procedure for one side is the same as that for the other side.


### Disassembly

- 1) Remove the oil gallery plug (M6) (1) and connector hose union (2).



IH18K1140199-01


- 2) Remove the oil jet (for cam chain tension adjuster) (1). (Page 1E-8)

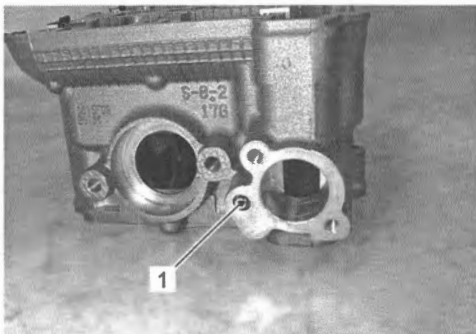

IH18K1140200-01

- 3) Remove the following parts.

- Intake pipe (1): (Page 1D-16)
- Valves (2) and valve springs: (Page 1D-52)
- Valve guides: (Page 1D-59)

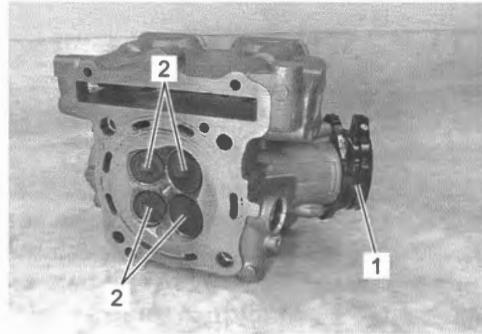

IH18K1140201-01


### Reassembly

Reassemble the cylinder head in the reverse order of disassembly. Pay attention to the following points:

- Install the new O-ring (1).
- Tighten the connector hose union bolt (2) to the specified torque.

### Tightening torque

Connector hose union bolt (a): 10 N·m (1.0 kgf-m, 7.5 lbf-ft)

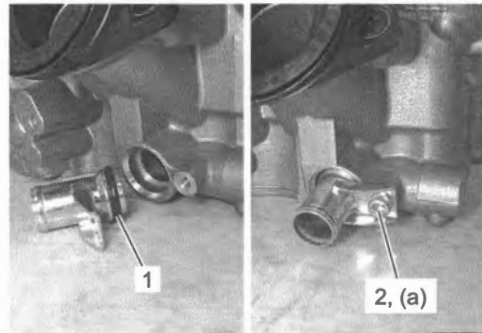


IH18K1140202-03

- Install the new gasket washer to the oil gallery plug (M6) (1) and tighten it to the specified torque.

### Tightening torque

Oil gallery plug (M6) (a): 10 N·m (1.0 kgf-m, 7.5 lbf-ft)

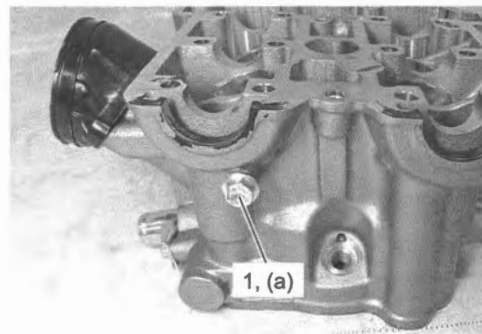

IH18K1140203-01

## Cylinder Head Inspection

BENH28K21406029


Refer to "Cam Chain Tension Adjuster / Camshaft / Cylinder Head Assembly / Cam Chain Guide / Cylinder Removal" (Page 1D-19) and "Cam Chain Tension Adjuster / Camshaft / Cylinder Head Assembly / Cam Chain Guide / Cylinder Installation" (Page 1D-25).

- 1) Decarbonize the combustion chambers.
- 2) Check the gasket surface of the cylinder head for distortion with a straightedge and thickness gauge, taking a clearance reading at several places as indicated. If the largest reading at any position of the straightedge exceeds the limit, replace the cylinder head.

### Cylinder head distortion

[Limit]: 0.05 mm (0.0019 in)

**Special tool**  
09900-20803

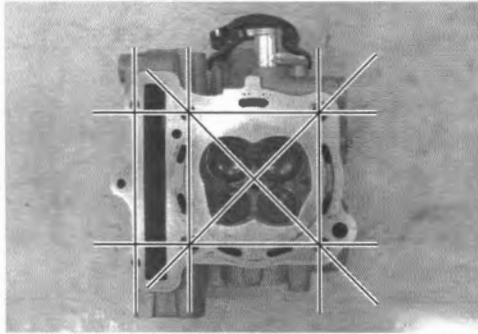

IH18K1140204-01

## Valve Guide Replacement

BENH28K21406030


Refer to "Valve / Valve Spring Removal and Installation" (Page 1D-52).

- 1) Using the special tool, drive the valve guide out toward the intake or exhaust camshaft side.

### **NOTE**

- Discard the removed valve guide sub assemblies.
- Only oversized valve guides are available as replacement parts. (Part No. 11115-18D72)

**Special tool**  
(A): 09916-43211

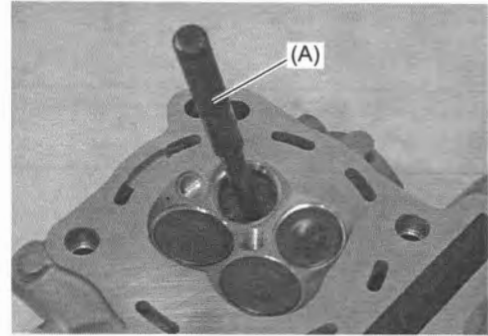

IH18K1140205-01


- 2) Refinish the valve guide holes in the cylinder head using the special tools.
- 3) Remove the special tools by turning clockwise and raising them at the same time.

### **NOTICE**

**Never turn the special tools counterclockwise, as this will dull the blades.**

### **Special tool**

(A): 09916-34580  
(B): 09916-34542

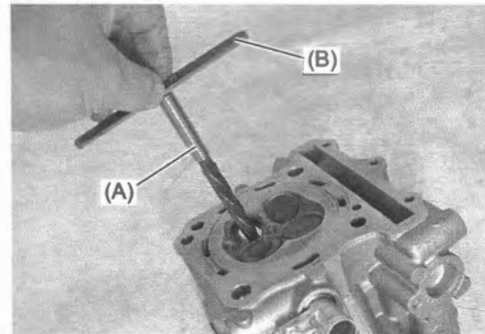

IH18K1140206-01

- 4) Cool down the new valve guides in a freezer for about one hour and heat the cylinder head to 100 – 150 °C (212 – 302 °F).

### **NOTICE**

**Do not use a burner to heat the valve guide hole to prevent cylinder head distortion.**

- 5) Apply engine oil to each valve guide and valve guide hole.

### **NOTICE**

**Failure to oil the valve guide hole before driving the new guide into place may result in a damaged guide or head.**

- 6) Drive the guide into the guide hole using the valve guide installer and attachment.


**NOTE**

Install the valve guide until the attachment contacts the cylinder head.

**Special tool**


(A): 09916-43211

(B): 09916-53330

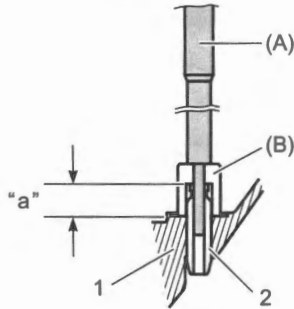

ID26J1140106-01

1. Cylinder head	"a": 13.6 mm (0.535 in)
2. Valve guide	

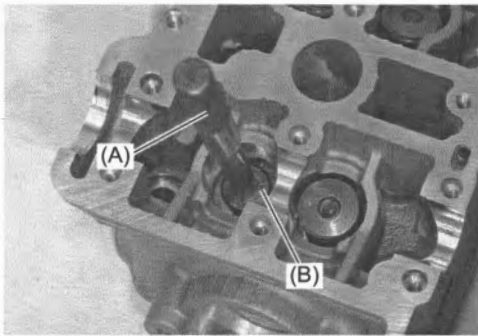

IH18K1140207-01

- 7) After installing the valve guides, refinish their guiding bores using the reamer. Be sure to clean and oil the guides after reaming.


**NOTE**

- Cool down the cylinder head to ambient air temperature.
- Insert the reamer from the combustion chamber and always turn the reamer handle clockwise.

**Special tool**

(A): 09916-34542

(B): 09916-33210

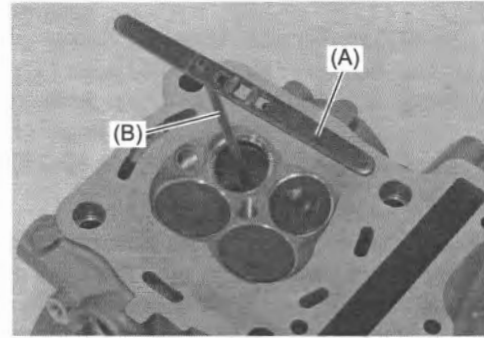

IH18K1140208-01

**Piston Removal and Installation**

BENH28K21406031


Refer to "Cam Chain Tension Adjuster / Camshaft / Cylinder Head Assembly / Cam Chain Guide / Cylinder Removal" (Page 1D-19) and "Cam Chain Tension Adjuster / Camshaft / Cylinder Head Assembly / Cam Chain Guide / Cylinder Installation" (Page 1D-25).

**NOTE**

- The pistons #1 and #2 are installed symmetrically and therefore the removal procedure for one side is the same as that for the other side.
- Place a clean rag over the cylinder base so as not to drop the piston pin circlip into the crankcase.

**Removal**

- 1) Remove the piston pin circlip (1).
- 2) Draw out the piston pin (2) and remove the piston (3).

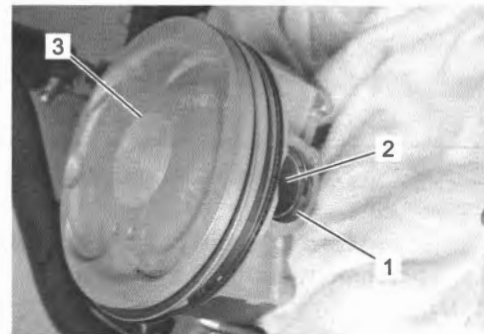

IH28K1140183-01




**Installation**

- 1) When installing the piston pin, apply molybdenum oil solution onto the piston pin.

**NOTE**

When installing the piston, the indents (1) on the piston head must be faced to exhaust side.

**"A": Assembly lubrication (Molybdenum oil solution)**

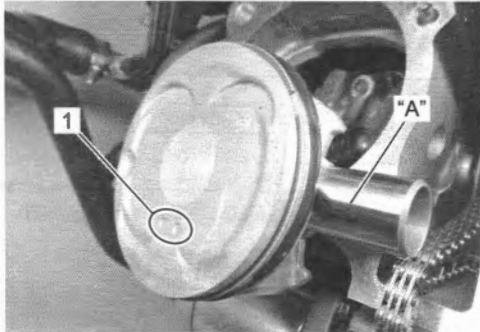


IH28K1140184-02

- 2) Place a clean rag over the cylinder base so as not to drop the piston pin circlip (1) into the crankcase.
- 3) Install the new piston pin circlip (1).

**NOTE**

End gap of the circlip (2) should not be aligned with the cutaway (3) in the piston pin bore.

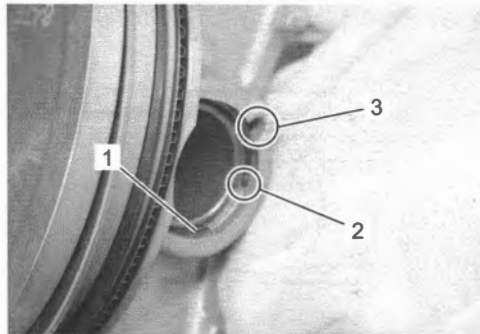

IH28K1140185-03

**Piston Ring Removal and Installation**

BENH28K21406032


Refer to "Piston Removal and Installation" (Page 1D-60).

**Removal**

- 1) Carefully spread the ring opening with your thumbs and then push up the opposite side of the 1st ring to remove it.

**NOTE**

Do not expand the piston ring excessively since it is apt to be broken down.

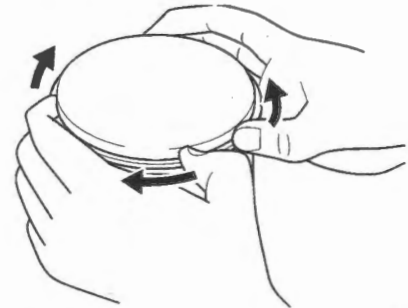

I831G1140178-01


- 2) Remove the 2nd ring and oil ring in the same procedure.

**Installation**

**NOTE**

- When installing the piston ring, be careful not to damage the piston.
- Do not expand the piston ring excessively since it is apt to be broken down.


- 1) Install the piston rings in the order of the oil ring, 2nd ring and 1st ring.
  - a) The first member to go into the oil ring groove is a spacer (1). After placing the spacer, fit the two side rails (2).

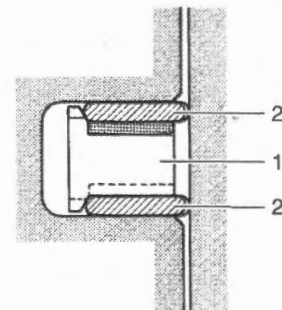

IH18K1140308-01

**NOTICE**

When installing the spacer, be careful not to allow its two ends to overlap in the groove.

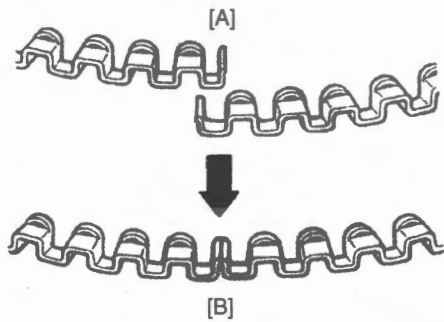


ID26J1140275-03

[A]: Incorrect	[B]: Correct
----------------	--------------


b) Install the 2nd ring (1) and 1st ring (2) to piston.

**NOTE**

- 1st ring (2) and 2nd ring (1) differ in shape.
- 2nd ring (1) has letters [2T] marked on the side. Be sure to bring the marked side to the top when fitting it to the piston.
- Bring the concave side of 1st ring (2) to the top when fitting it to the piston.




IE31J1140196-01

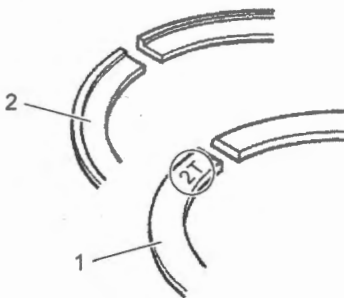

IH18K1140212-01

2) Position the gaps of the three rings and side rails as shown. Before inserting piston into the cylinder, check that the gaps are so located.

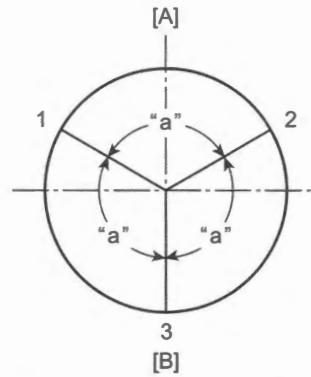

IH18K1140213-01

[A]: EX.
[B]: IN.
1. 2nd ring and lower side rail
2. Upper side rail
3. 1st ring and spacer
*a*: 120°

**Piston and Piston Ring Inspection**

BENH28K21406033

Refer to "Piston Ring Removal and Installation" (Page 1D-61).

**Piston Diameter**


Measure the piston diameter at "a" position from the skirt end using the micrometer. If the piston diameter is less than the service limit, replace the piston.

**Piston diameter**

Measure at 20 mm (0.79 in) from the skirt end  
[Limit]: 80.880 mm (3.1843 in)


**Special tool**

(A): 09900-20204

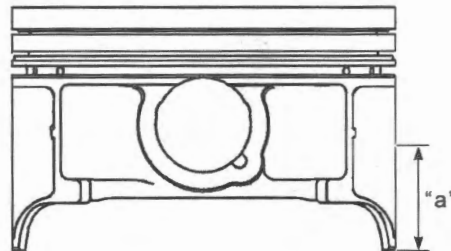

IH18K1140214-01

"a": 20 mm (0.79 in)

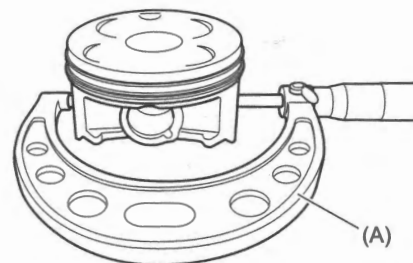

IH18K1140325-02

**Piston to Cylinder Clearance**

Subtract the piston diameter from the cylinder bore diameter. If the piston to cylinder clearance exceeds the service limit, replace both the cylinder and the piston.

**Piston to cylinder clearance**

[Limit]: 0.120 mm (0.0047 in)

**Piston Ring to Groove Clearance**

- 1) Remove the carbon deposit from the piston rings and ring grooves.
- 2) Install the piston ring and lift the ring upward while pressing it to the piston, and measure the clearance underneath the ring.  
If the clearance exceeds the limit, replace both the piston and piston rings.

**Piston ring to groove clearance**

1st [Limit]: 0.180 mm (0.0070 in)

2nd [Limit]: 0.150 mm (0.0059 in)

**Piston ring groove width**

1st [Standard]: 0.83 – 0.85 mm (0.0327 – 0.0334 in)

1st [Standard]: 1.30 – 1.32 mm (0.0512 – 0.0519 in)

2nd [Standard]: 1.01 – 1.03 mm (0.0398 – 0.0405 in)

Oil [Standard]: 2.01 – 2.03 mm (0.0792 – 0.0799 in)

**Piston ring thickness**

1st [Standard]: 0.76 – 0.81 mm (0.030 – 0.031 in)


1st [Standard]: 1.08 – 1.10 mm (0.0426 – 0.0433 in)

2nd [Standard]: 0.97 – 0.99 mm (0.0382 – 0.0389 in)


**Special tool**

(A): 09900-20803


(B): 09912-66310

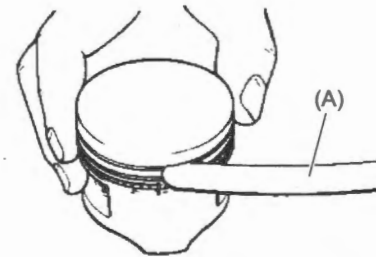

IF04K1140242-01

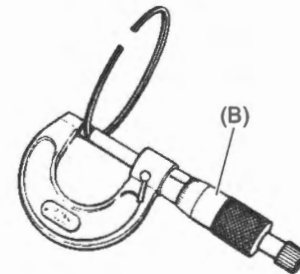

ID26J1140125-01

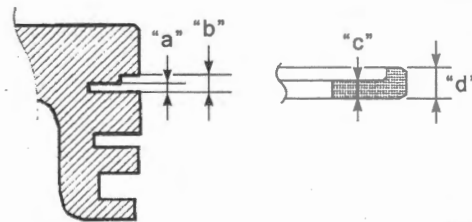

IE31J1140200-01

"a": 0.83 – 0.85 mm (0.0327 – 0.0334 in)
"b": 1.30 – 1.32 mm (0.0512 – 0.0519 in)
"c": 0.76 – 0.81 mm (0.030 – 0.031 in)
"d": 1.08 – 1.10 mm (0.0426 – 0.0433 in)

**Piston Ring Free End Gap and Piston Ring End Gap**

- 1) Measure the piston ring free end gap using the vernier calipers. If any of the measurements exceed the service limit, replace the piston ring with a new one.
- 2) Fit the piston ring squarely into the cylinder.
- 3) Measure the piston ring end gap using the thickness gauge. If any of the measurements exceed the service limit, replace the piston ring with new one.

**Piston ring free end gap**

1st [Limit]: 5.2 mm (0.21 in)

2nd [Limit]: 7.2 mm (0.29 in)

**Piston ring end gap**


1st [Limit]: 0.50 mm (0.019 in)

2nd [Limit]: 0.50 mm (0.019 in)


**Special tool**

(A): 09900-20101

(B): 09900-20803

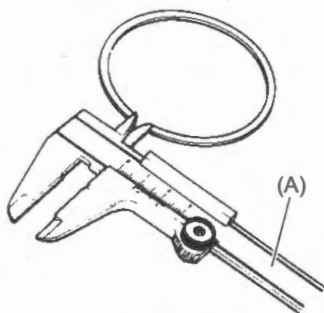

ID26J1140126-02

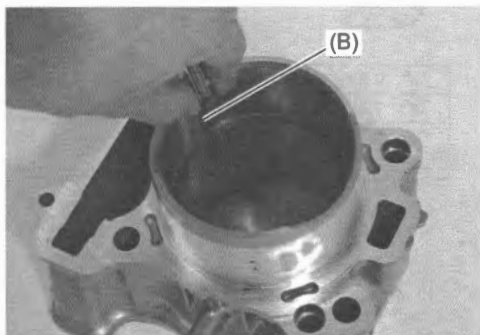

IH18K1140216-01

**Piston Pin Bore**

Measure the piston pin bore inside diameter using the small bore gauge. If measurement is out of specification, replace the piston.


**Piston pin bore I.D.**

[Limit]: 20.030 mm (0.7885 in)

**Special tool**

(A): 09900-20602

(B): 09900-22403

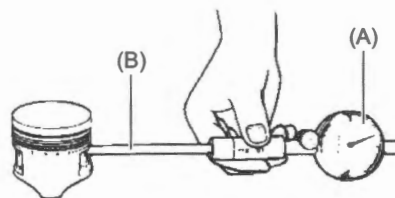

IF04K1140246-01

**Piston Pin**


Inspect the piston pin outside surface for wear and damage. Measure the piston pin outside diameter at three positions using the micrometer. If any of the measurements are out of specification, replace the piston pin.

**Piston pin O.D.**

[Limit]: 19.980 mm (0.7867 in)

**Special tool**

(A): 09912-66310

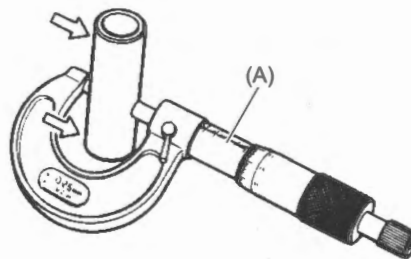

ID26J1140129-01

## Cam Chain Tensioner / Cam Chain / Cam Chain Drive Sprocket Removal and Installation


BENH28K21406034

Refer to "Cam Chain Tension Adjuster / Camshaft / Cylinder Head Assembly / Cam Chain Guide / Cylinder Removal" (Page 1D-19) and "Cam Chain Tension Adjuster / Camshaft / Cylinder Head Assembly / Cam Chain Guide / Cylinder Installation" (Page 1D-25).

### Removal


#### Cylinder #1

- 1) Remove the generator rotor (1). (Page 1J-5)
- 2) Remove the starter clutch gear (2) and starter idle gear (3). (Page 1I-9)

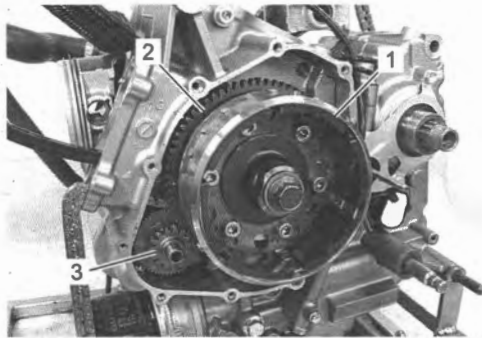

IH18K1140217-01

- 3) Remove the cam chain tensioner (1) and washer.
- 4) Remove the cam chain (2).

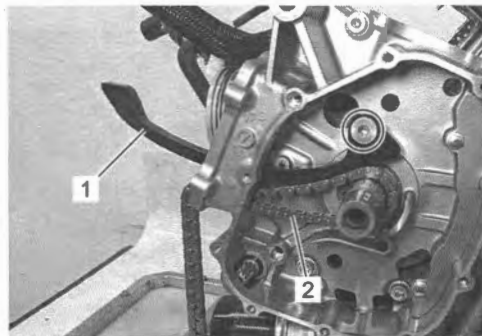

IH18K1140218-01

#### Cylinder #2

- 1) Remove the primary drive gear assembly (1). Refer to "Crankcase Assembly Disassembly" (Page 1D-66).




IH18K1140219-01

- 2) Remove cam chain tensioner (1) and washer.



IH18K1140220-01

- 3) Remove the cam chain (1) and cam chain drive sprocket (2).

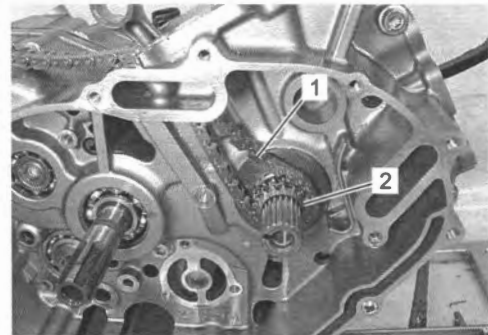

IH18K1140221-01


### Installation

Install the cam chain tensioner, cam chain and cam chain drive sprocket in the reverse order of removal. Pay attention to the following points:

- Install the cam chain drive sprocket (1).

### NOTE

Align the punch mark (2) on the cam chain drive sprocket with the punch mark (3) on the crankshaft.

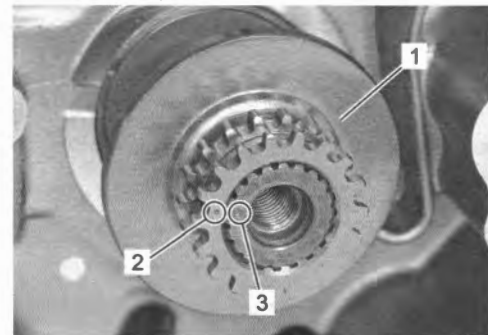


IH18K1140222-01

- Install the cam chain tensioner (1), washer (2) and cam chain tensioner bolt (3).
- Tighten the cam chain tensioner bolt (3) to the specified torque.

**Tightening torque**

**Cam chain tensioner bolt (a): 10 N·m (1.0 kgf-m, 7.5 lbf-ft)**

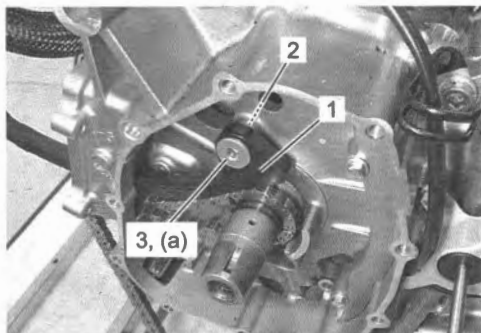


IH18K1140223-02

**Cam Chain Tensioner Inspection**

BENH28K21406035

Refer to "Cam Chain Tensioner / Cam Chain / Cam Chain Drive Sprocket Removal and Installation" (Page 1D-65).

Check the contacting surface of the cam chain tensioner. If it is worn or damaged, replace it with a new one.

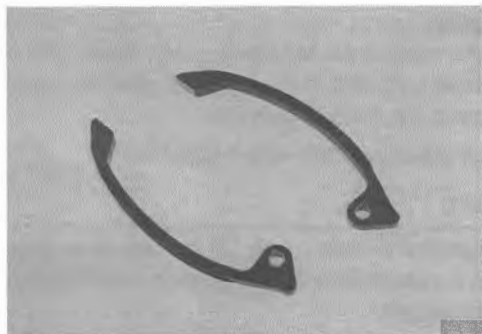


I944H1140224-01

**Crankcase Assembly Disassembly**

BENH28K21406036

Refer to "Engine Assembly Removal" (Page 1D-44) and "Piston Removal and Installation" (Page 1D-60).

- 1) Remove the radiator outlet hoses (1), oil cooler hoses (2) and PCV hose (3).

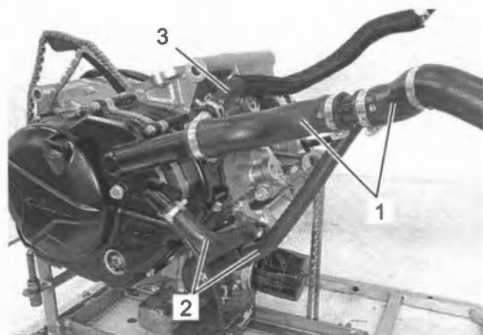

IH18K1140224-02

- 2) Remove the starter motor assembly (1). (Page 1I-4)



IH18K1140225-01

- 3) Remove the generator cover (1). (Page 1J-5)




IH18K1140226-01

- 4) Remove the clutch cover and clutch component parts (1). (Page 5C-10)




IH18K1140227-01

- 5) Remove the oil pump assembly (1). (Page 1E-11)

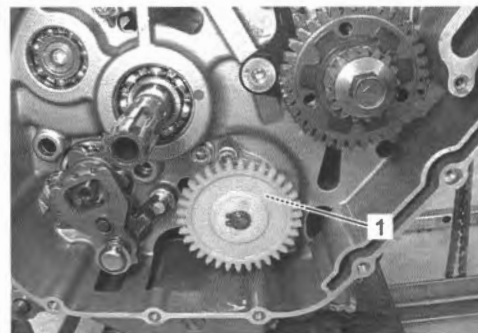


IH18K1140233-01

- 6) Remove the transmission oil guide (1). (Page 1E-13)

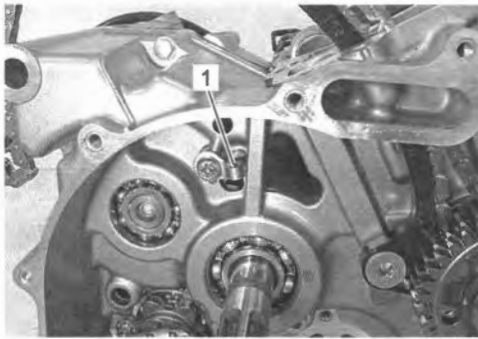

IH18K1140229-01

- 7) Remove the gearshift shaft assembly (1), gearshift cam plate (2), gearshift cam stopper (3) and gearshift arm stopper (4). (Page 5B-14)

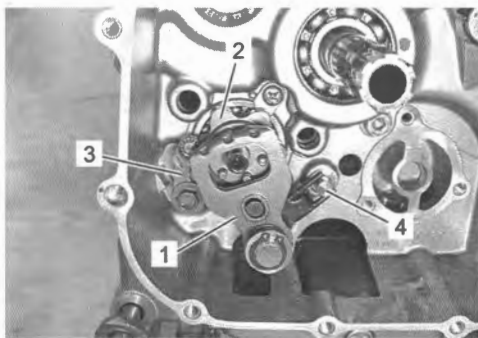


IH18K1140309-01

- 8) Hold the generator rotor (1) with the special tool and remove the primary drive gear bolt (2).

**NOTE**


This primary drive gear bolt (2) has left-hand threads.

Special tool  
(A): 09930-44530

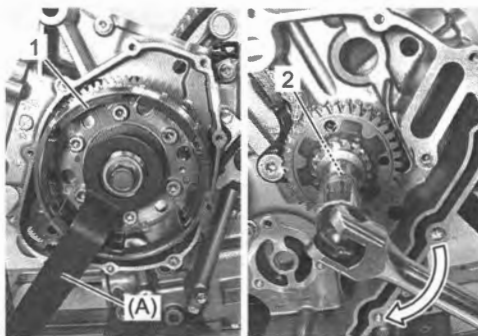


IH18K1140231-01

- 9) Remove the water pump drive gear (1) and primary drive gear assembly (2).

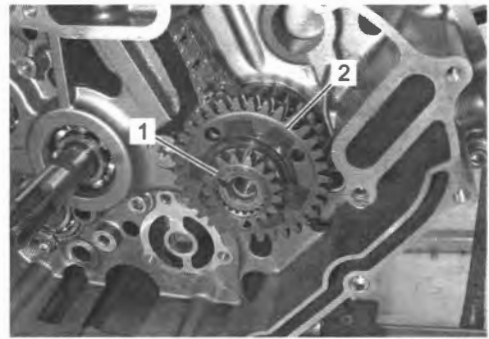


IH18K1140232-01

- 10) Remove the cam chain tensioner (1), cam chain (2) and cam chain drive sprocket (3).

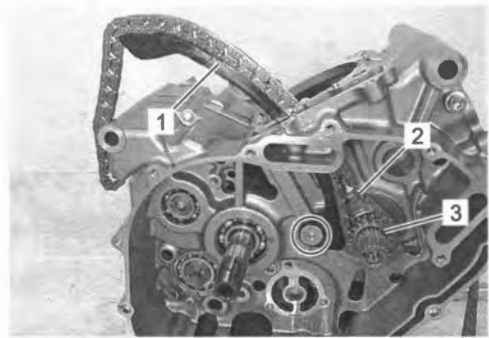

IH18K1140228-02

- 11) Remove the oil filter (1). (Page 1E-5)  
12) Remove the oil cooler (2). (Page 1E-7)  
13) Remove the oil pressure switch (3). (Page 1E-8)

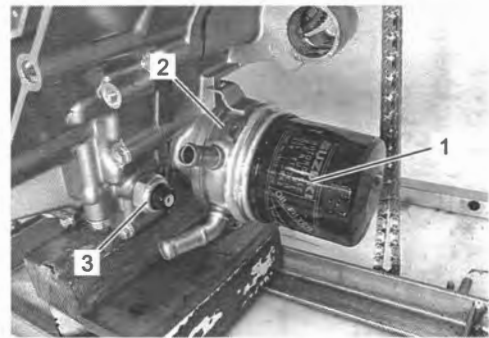

IH18K1140234-01

## 1D-68 Engine Mechanical:

- 14) Remove the generator rotor (1). (Page 1J-5)  
15) Remove the starter clutch gear (2) and starter idle gear (3). (Page 1I-9)




IH18K1140235-01

- 16) Remove the cam chain tensioner (1) and cam chain (2).




IH18K1140236-02

- 17) Remove the clutch push rod (left) (1) and engine sprocket spacer (2).

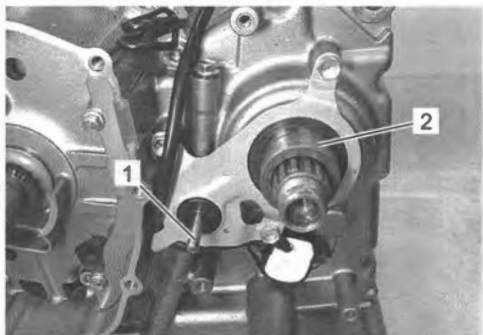

IH18K1140237-01

- 18) Remove the GP switch (1).

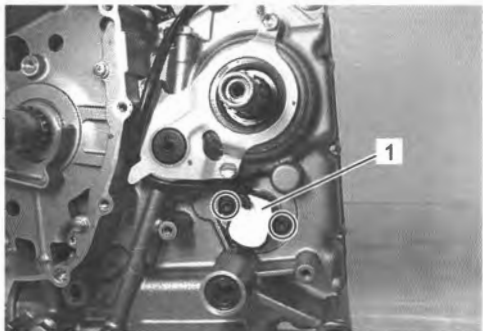


IH18K1140238-02


- 19) Remove the crankcase bolts (M6) (1) and (M8) (2).

### NOTE

Loosen the crankcase bolts diagonally with the smaller size first.

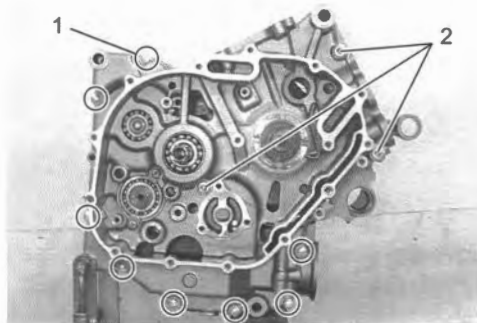

IH18K1140240-01

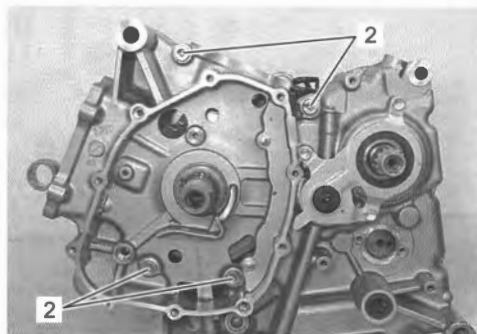

IH18K1140239-02


- 20) Remove the right crankcase (1) with the special tool.

### NOTE

- Fit the crankcase separating tool, so that the tool arms are in parallel with the side of crankcase.
- The crankshaft and transmission components should remain in the left crankcase half.

### Special tool


(A): 09920-13120

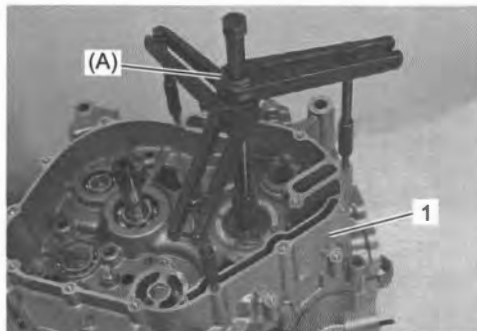

IH18K1140241-02



21) Remove the dowel pins (1) and O-rings (2).

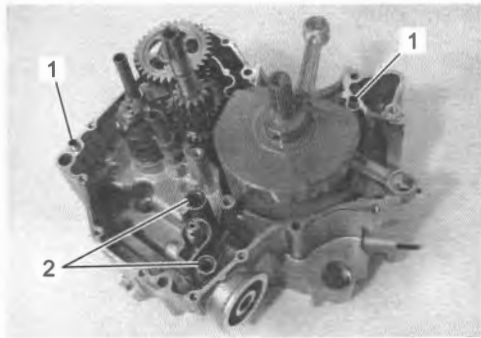

IH18K1140242-01

22) Remove the following parts from the crankcases.

- Crankshaft assembly: ☞(Page 1D-71)
- Transmission component parts: ☞(Page 5B-3)
- Oil strainer and oil pressure regulator: ☞(Page 1E-5)
- Left crankcase bearings and oil seals: ☞(Page 1D-74)
- Right crankcase bearing: ☞(Page 1D-75)

**Crankcase Assembly Reassembly**

BENH28K21406037

Refer to "Piston Removal and Installation" (Page 1D-60) and "Engine Assembly Installation" (Page 1D-48).

- 1) Install the following parts to the crankcases.
  - Right crankcase bearing: ☞(Page 1D-75)
  - Left crankcase bearings and oil seals: ☞(Page 1D-74)
  - Oil strainer and oil pressure regulator: ☞(Page 1E-5)
  - Transmission component parts: ☞(Page 5B-3)
  - Crankshaft assembly: ☞(Page 1D-71)
- 2) Apply engine oil to each running and sliding part.
- 3) Apply engine oil to the left crankshaft journal bearing (1).




IH18K1140243-02

4) Clean the mating surfaces of the left and right crankcase.

5) Install the dowel pins (1).

6) Apply engine oil to the new O-rings (2) and install it to the left crankcase.

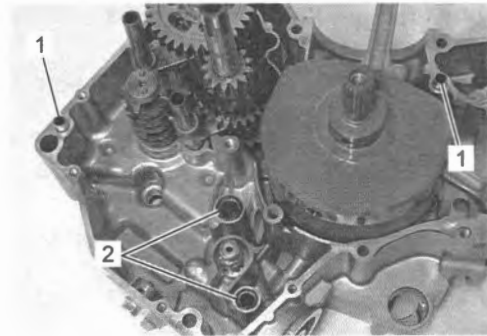


IH18K1140244-01

7) Apply sealant to the mating surface of the right crankcase.

**NOTE**

- **Make surfaces free from moisture, oil, dust and other foreign materials.**
- **Spread on surfaces thinly to form an even layer, and assemble the crankcases within few minutes.**
- **Take extreme care not to apply any sealant to the oil hole, oil groove and bearing.**
- **Apply to distorted surfaces as it forms a comparatively thick film.**

"A": Sealant 99000-31110 (SUZUKI BOND 1215)

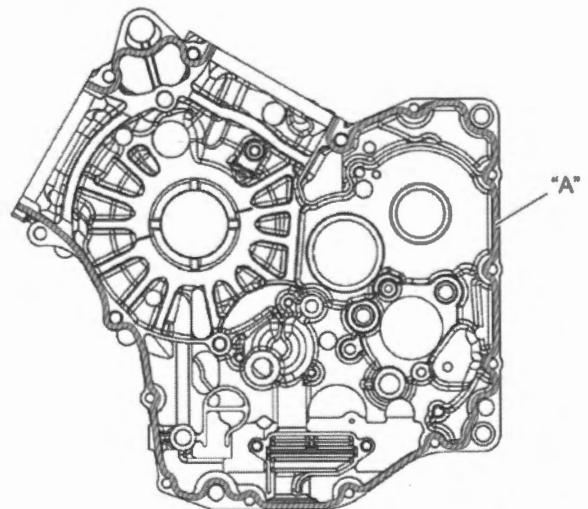

IH18K1140245-03

- 8) Install the right crankcase to the left crankcase.
- 9) Tighten the crankcase bolts a little at a time to equalize the pressure.

**NOTE**


- Tighten the larger diameter crankcase bolts first and then smaller ones diagonally and evenly.
- Fit the clamp (1) to the crankcase bolt. Refer to "Wiring Harness Routing Diagram" in Section 9A (Page 9A-7).

**Tightening torque**


Crankcase bolt (M8) (L80) (a): 26 N·m (2.7 kgf-m, 19.5 lbf-ft)

Crankcase bolt (M8) (L55) (b): 26 N·m (2.7 kgf-m, 19.5 lbf-ft)

Crankcase bolt (M6) (c): 11 N·m (1.1 kgf-m, 8.5 lbf-ft)

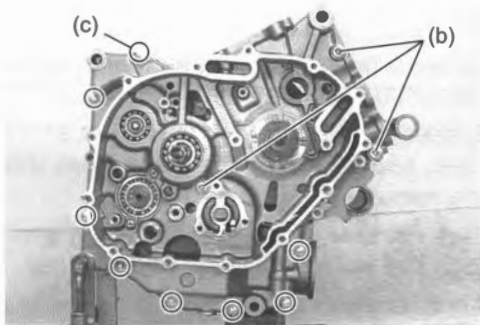

IH18K1140246-01

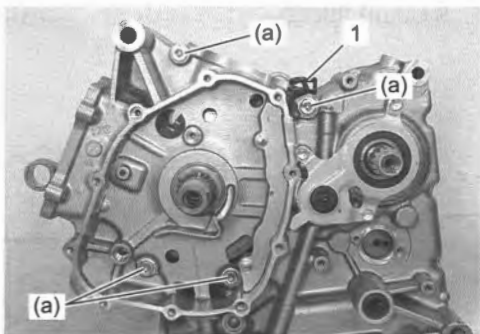

IH18K1140247-01

- 10) After the crankcase bolts have been tightened, check if the crankshaft, driveshaft and countershaft rotate smoothly.



IH18K1140248-01



IH18K1140249-01


- 11) Install the GP switch. ⚙ (Page 5B-12)
- 12) Install the clutch push rod (left). ⚙ (Page 5C-7)
- 13) Apply grease to the new O-ring (1) and oil seal lip (2).

**"A": Grease 99000-25011 (SUZUKI SUPER GREASE A)**

- 14) Install the engine sprocket spacer (3) onto the driveshaft.


**NOTE**

**The grooved side (4) of the engine sprocket spacer faces crankcase side.**

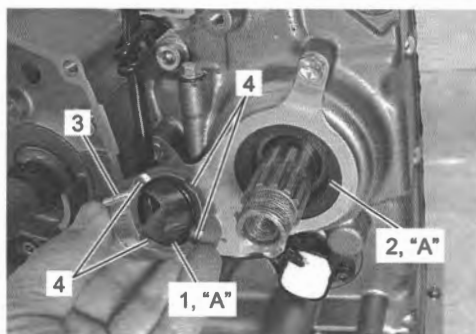

IH18K1140250-01

- 15) Install the cam chain and cam chain tensioner.   
☞(Page 1D-65)
- 16) Install the starter idle gear and starter clutch gear.   
☞(Page 1I-9)
- 17) Install the generator rotor. ☞(Page 1J-7)
- 18) Install the oil pressure switch. ☞(Page 1E-8)
- 19) Install the oil cooler. ☞(Page 1E-7)
- 20) Install the oil filter. ☞(Page 1E-5)
- 21) Install the cam chain drive sprocket, cam chain and cam chain tensioner. ☞(Page 1D-65)
- 22) Install the primary drive gear assembly (1) and water pump drive gear (2).

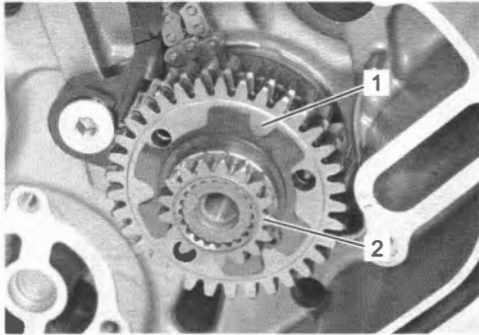

IH18K1140251-01

- 23) Install the primary drive gear bolt (1).


**NOTE**

The primary drive gear bolt (1) has left-hand threads.

- 24) Hold the generator rotor with the special tool and tighten the primary drive gear bolt (1) to the specified torque.

**Special tool**  
(A): 09930-44530

**Tightening torque**  
Primary drive gear bolt (a): 70 N·m (7.1 kgf·m, 52.0 lbf·ft)

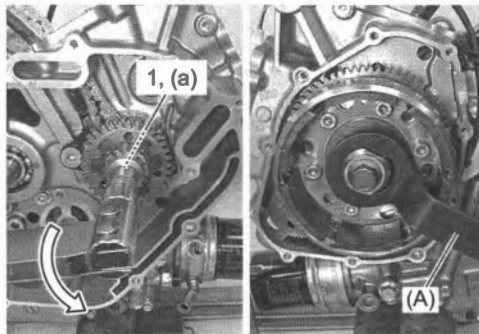

IH18K1140252-01

- 25) Install the gearshift arm stopper, gearshift cam stopper, gearshift cam plate and gearshift shaft assembly. ☞(Page 5B-14)
- 26) Install the transmission oil guide. ☞(Page 1E-13)
- 27) Install the oil pump assembly. ☞(Page 1E-11)
- 28) Install the clutch component parts and clutch cover.   
☞(Page 5C-12)
- 29) Install the generator cover. ☞(Page 1J-7)
- 30) Install the starter motor assembly. ☞(Page 1I-4)
- 31) Connect the PCV hose. Refer to "PCV Hose Routing Diagram" in Section 1B (Page 1B-7).
- 32) Connect the oil cooler hoses and radiator outlet hoses. Refer to "Water Hose Routing Diagram" in Section 1F (Page 1F-2).


**Crankshaft Assembly Removal and Installation**

BENH28K21406038

Refer to "Crankcase Assembly Disassembly" (Page 1D-66) and "Crankcase Assembly Reassembly" (Page 1D-69).

**Removal**


Remove the crankshaft assembly (1).

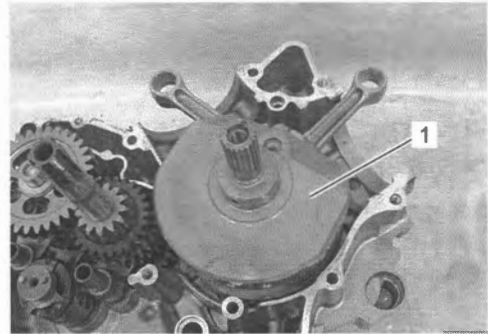

IH18K1140253-01

**Installation**

- 1) Apply engine oil to the crankshaft journals (1).

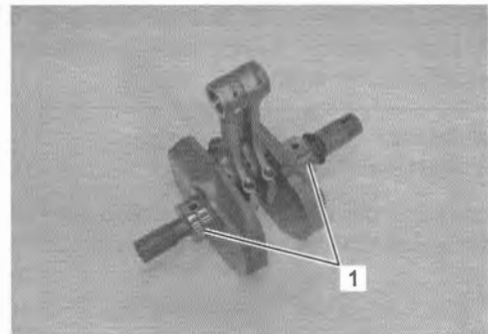

IH18K1140254-01


- 2) Install the crankshaft assembly (1) into the left crankcase.

**NOTICE**

Never strike the crankshaft assembly (1) with a plastic hammer when inserting it into the crankcase.

**NOTE**

- Be sure to set the crankshaft assembly (1) in the proper direction.
- Of the two conrods, the one with the embossed letter (2) marked should be brought to the cylinder #2.

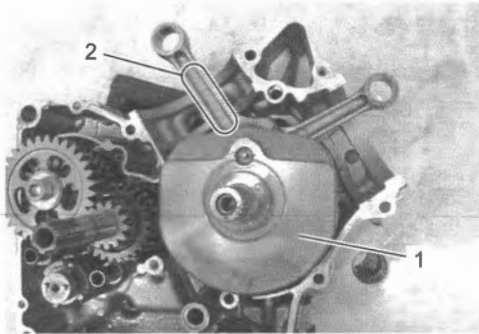

IH18K1140255-01

**Crankshaft Journal Bearing Removal and Installation**

BENH28K21406039

Refer to "Crankshaft Assembly Removal and Installation" (Page 1D-71) and "Transmission Removal and Installation" in Section 5B (Page 5B-3).

**Removal**

- 1) Set the special tool as shown to remove the crankshaft journal bearings (1) with the special tool.


**NOTE**

Remove the crankshaft journal bearings in only one direction, from inside to outside of each crankcase half.


**Special tool**

(A): 09913-60221

- 2) Gradually press out the crankshaft journal bearings with the special tool by using the hydraulic press.

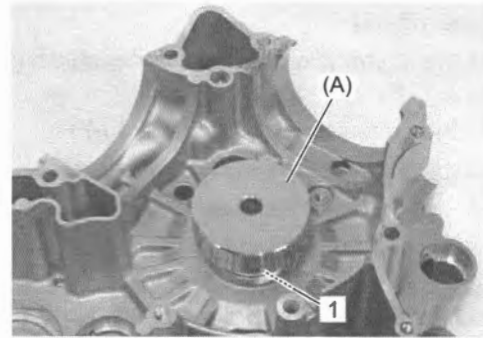

IH18K1140256-01

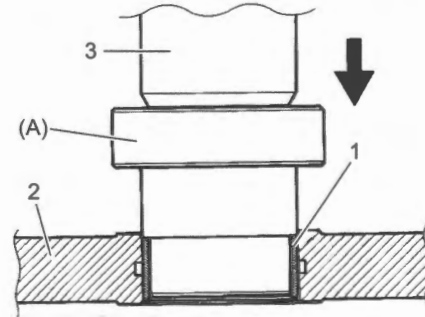

ID26J1140177-03

1. Crankshaft journal bearing	3. Hydraulic press
2. Crankcase	


- 3) Do the same for the other bearings.

**Installation**

- 1) Apply engine oil to the inside surface of the special tool before fitting the crankshaft journal bearing (1) in the special tool.

**Special tool**

(A): 09913-60221

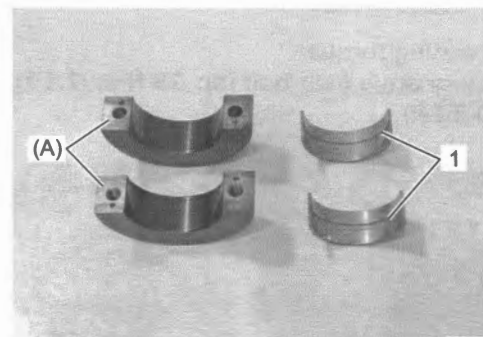


IH18K1140257-01

- 2) When setting the crankshaft journal bearing into the special tool, align the side edge of the crankshaft journal bearing with the line (1) engraved inside the tool and the end of the crankshaft journal bearing with the mating surface (2) of the tool as well.

**NOTE**

The upper and lower crankshaft journal bearings are same.

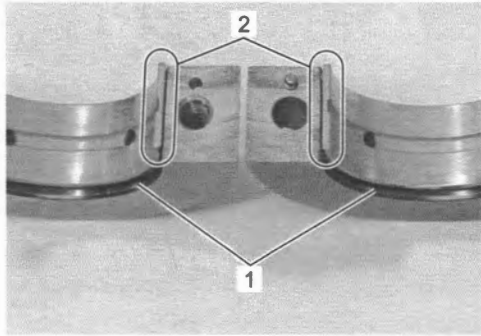


IH18K1140258-01

- 3) Combine the special tool and tighten the bolts to the specified torque.


**Tightening torque**

Special tool bolt (a): 23 N·m (2.3 kgf-m, 17.0 lbf-ft)

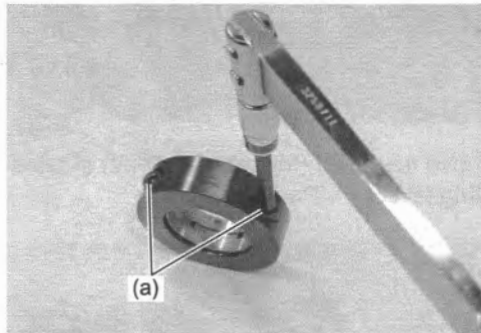

IH18K1140259-01

- 4) Before installing the crankshaft journal bearings, lightly shave off the sharp edge part (1) of the crankcase chamfer by using an oilstone.

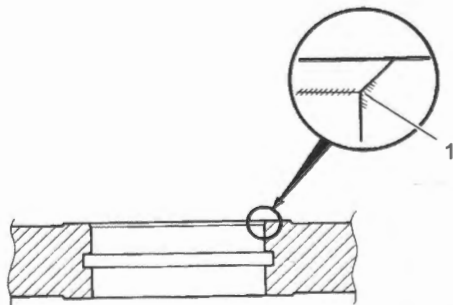

ID26J1140181-07


- 5) Apply engine oil to the inside surface of the crankcase.  
 6) Set the crankshaft journal bearings installed in the special tool to the crankcase half as shown.

**NOTICE**

- Be sure the crankshaft journal bearing protruded side (1) faces the crankcase bore.
- Align the bearing/special tool mating surface (2) with the lines (3) on the crankcase.

**NOTE**

Install the crankshaft journal bearing from inside to outside of each crankcase half.

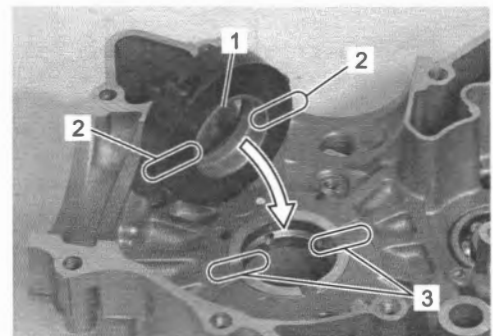


IH18K1140260-02

- 7) Apply enough engine oil to the special tool and the crankshaft journal bearings and then set the special tool carefully.

**Special tool**

(A): 09913-60221

- 8) Press fit the crankshaft journal bearing gradually using a hydraulic press.

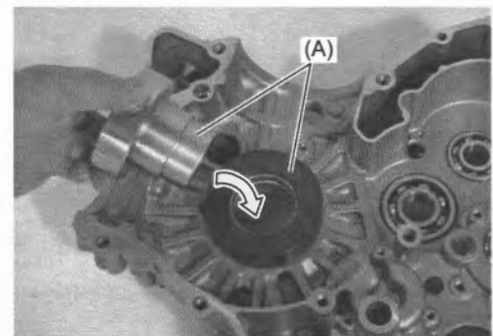

IH18K1140261-01


**Left Crankcase Disassembly and Reassembly**

BENH28K21406040


Refer to "Crankshaft Assembly Removal and Installation" (Page 1D-71) and "Transmission Removal and Installation" in Section 5B (Page 5B-3).

**Disassembly**

- 1) Remove the oil drain plug (1) and oil gallery plugs (M6) (2), (M8) (3) and (M12) (4).

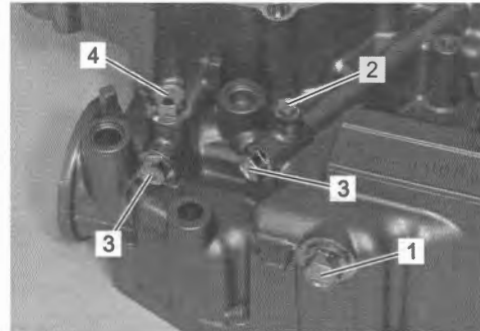


IH18K1140264-01

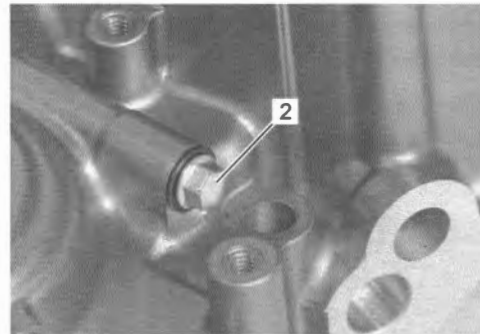


IH18K1140265-01

- 2) Remove the oil jet (for cylinder head) (1) and piston cooling jet (2). (Page 1E-8)

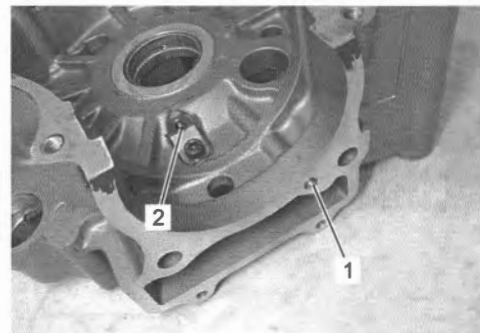

IH18K1140266-01

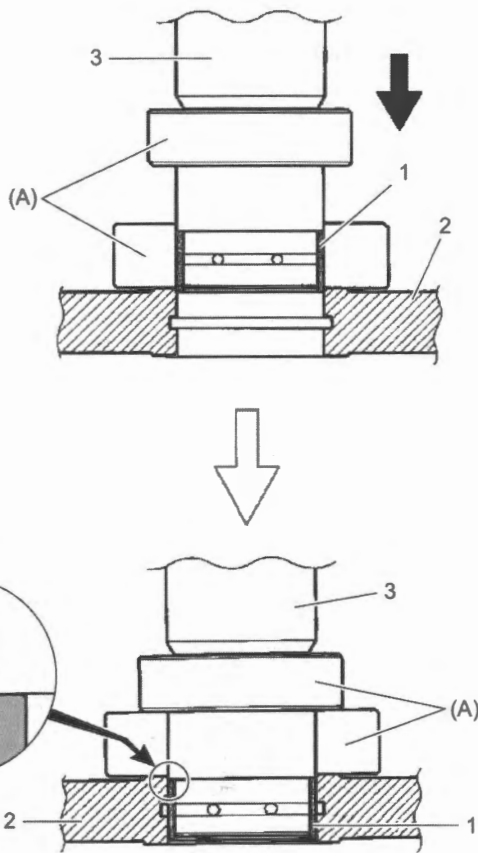

IH18K1140329-01

1. Crankshaft journal bearing	3. Hydraulic press
2. Crankcase	"a": 1.0 mm (0.04 in)


- 9) After installing the crankshaft journal bearings (1), check the crankshaft journal bearing surface for any scratch or damage.



IH18K1140263-01


- 10) Do the same for the other crankshaft journal bearings.

- 3) Remove the oil jet (for transmission) (1). (Page 1E-8)
- 4) Remove the gearshift shaft oil seal (2). (Page 5B-17)
- 5) Remove the oil separator plate (3).

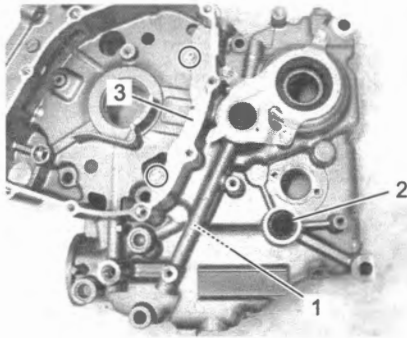

IH18K1140267-01

- 6) Remove the oil pressure regulator (1). (Page 1E-5)
- 7) Remove the countershaft bearing (2), driveshaft bearing (3) and gearshift cam bearing (4). (Page 5B-9)
- 8) Remove the crankshaft journal bearings (5). (Page 1D-72)

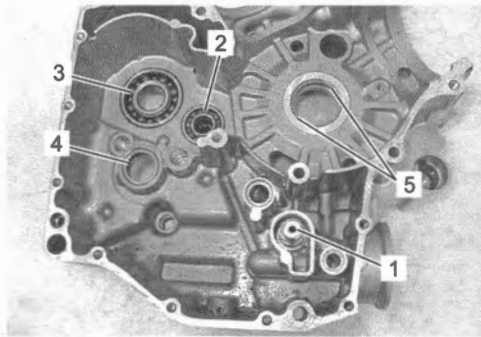

IH18K1140268-02

### Reassembly

Reassemble the left crankcase in the reverse order of the disassembly. Pay attention to the following point.

- Install the new gasket washers to the oil gallery plugs (M6) (1), (M8) (2) and (M12) (3) and oil drain plug (4) and tighten each plug to the specified torque.


### Tightening torque

**Oil gallery plug (M6) (a): 10 N·m (1.0 kgf-m, 7.5 lbf-ft)**


**Oil gallery plug (M8) (b): 18 N·m (1.8 kgf-m, 13.5 lbf-ft)**

**Oil gallery plug (M12) (c): 21 N·m (2.1 kgf-m, 15.5 lbf-ft)**

**Drain plug (d): 21 N·m (2.1 kgf-m, 15.5 lbf-ft)**

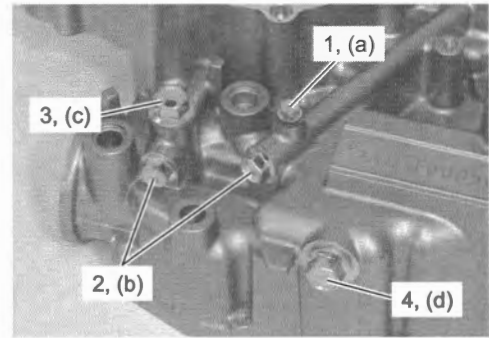

IH18K1140269-01

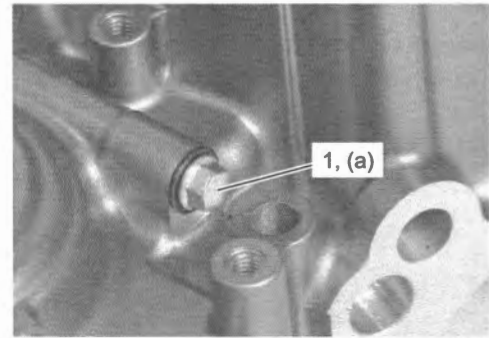

IH18K1140270-01


### Right Crankcase Disassembly and Reassembly

BENH28K21406041

Refer to "Crankcase Assembly Disassembly" (Page 1D-66) and "Crankcase Assembly Reassembly" (Page 1D-69).


### Disassembly

- 1) Remove the oil gallery plugs (M8) (1) and (M16) (2).

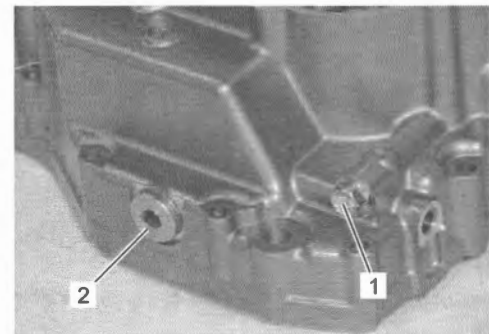


IH18K1140271-01

- 2) Remove the oil jet (for cylinder head) (1) and piston cooling jet (2). (Page 1E-8)

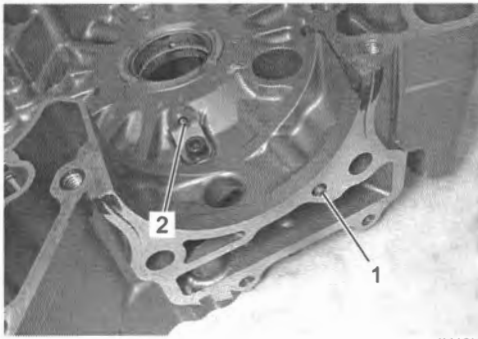

IH18K1140272-01

- 3) Remove the gearshift cam bearing (1) driveshaft bearing (2) and countershaft bearing (3). (Page 5B-10)
- 4) Remove the oil strainer (4). (Page 1E-5)
- 5) Remove the crankshaft journal bearings (5). (Page 1D-72)

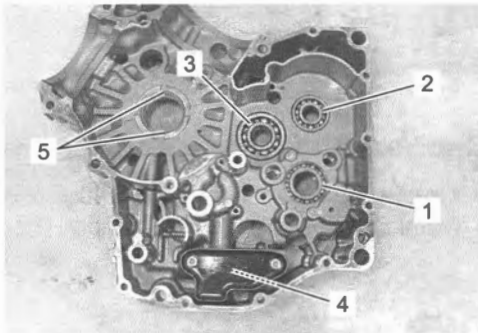

IH18K1140273-02

**Reassembly**


Reassemble the right crankcase in the reverse order of the disassembly. Pay attention to the following point:

- Install the new gasket washers to the oil gallery plugs (M8) (1) and (M16) (2), and tighten each plug to the specified torque.

**Tightening torque**

**Oil gallery plug (M8) (a): 18 N·m (1.8 kgf-m, 13.5 lbf-ft)**

**Oil gallery plug (M16) (b): 35 N·m (3.6 kgf-m, 26.0 lbf-ft)**

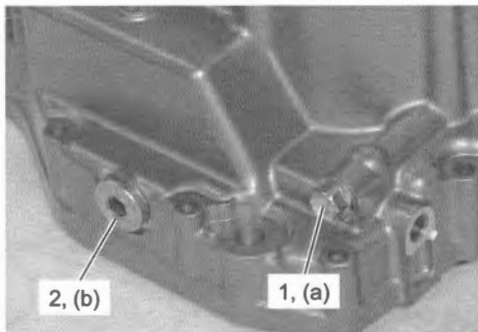

IH18K1140274-01


**Crankcase Bearing / Oil Seal Inspection**

BENH28K21406042

Refer to "Crankshaft Assembly Removal and Installation" (Page 1D-71) and "Transmission Removal and Installation" in Section 5B (Page 5B-3).


**Bearing**

Inspect the play of the bearing by hand while it is in the crankcase. Rotate the inner race by hand to inspect for abnormal noise and smooth rotation. Replace the bearing if there is anything unusual. Refer to "Left Crankcase Disassembly and Reassembly" (Page 1D-74) and "Right Crankcase Disassembly and Reassembly" (Page 1D-75).

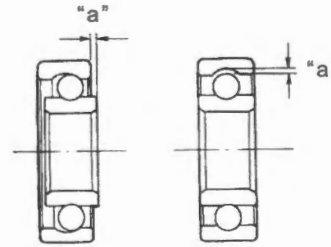


IE31J1140298-01

"a": Play

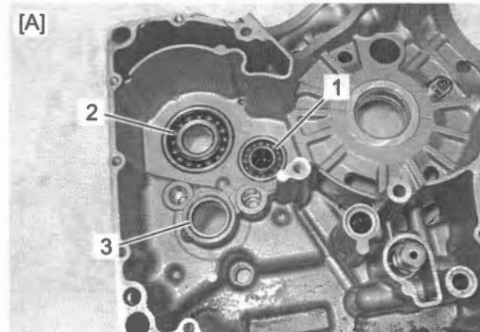

IH18K1140275-01

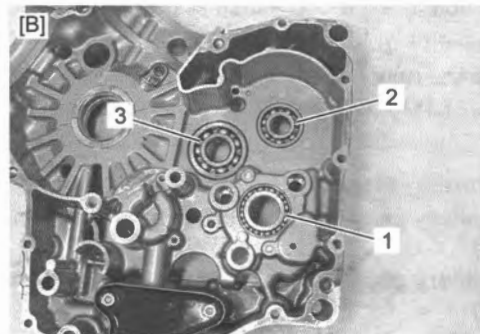


IH18K1140276-01

[A]: Left crankcase	2. Driveshaft bearing
[B]: Right crankcase	3. Countershaft bearing
1. Gearshift cam bearing	



**Oil Seal**

Inspect oil seal lip for wear or damage. If any defects are found, replace the oil seal with a new one. Refer to "Left Crankcase Bearing / Oil Seal Removal and Installation" in Section 5B (Page 5B-9) and "Gearshift Shaft Oil Seal Removal and Installation" in Section 5B (Page 5B-17).

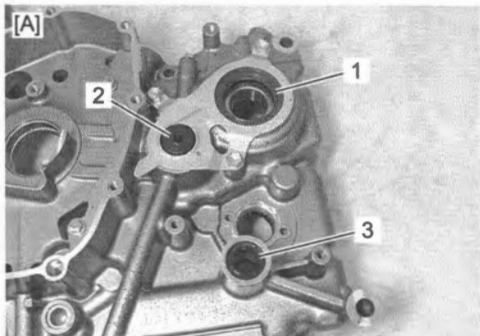

IH18K1140277-01

[A]: Left crankcase	2. Clutch push rod oil seal
1. Driveshaft oil seal	3. Gearshift shaft oil seal


**Conrod Removal and Installation**

BENH28K21406043

Refer to "Crankshaft Assembly Removal and Installation" (Page 1D-71).

**Removal**

- 1) Loosen the conrod cap bolts (1), and tap the conrod cap bolts lightly with plastic hammer to remove the conrod cap.
- 2) Remove the conrods and mark them to identify their respective cylinders.

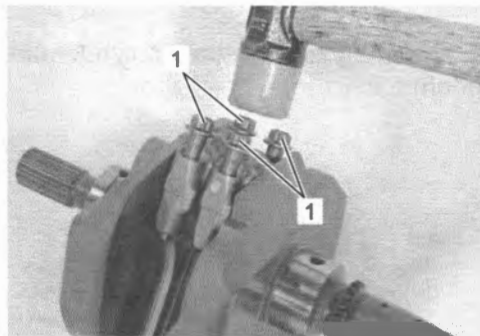

IH18K1140278-01


- 3) Remove the crank pin bearings (1).

**NOTICE**

When removing the crank pin bearings, be careful not to scratch the conrods and the bearings.

**NOTE**


- Do not remove the crank pin bearings (1) unless absolutely necessary.
- Make a note of where the bearings are removed from so that they can be reinstalled in their original positions.

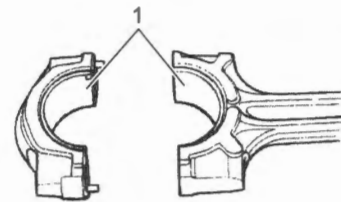

ID26J1140264-01


**Installation**

- 1) Clean the conrod big end.
- 2) When installing the crank pin bearings into the conrod cap and conrod, be sure to fix the stopper part (1) first, and then press in the opposite side of the bearing.

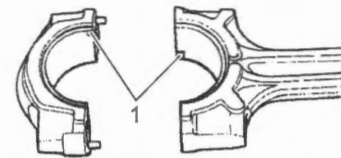


IH18K1140279-01

- 3) Apply engine oil solution to the crank pin and bearing surface (1).

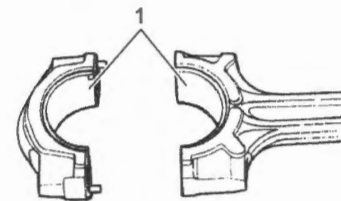


IH18K1140280-01

- 4) When fitting the conrod cap, make sure that I.D. code (1) on each conrod face intake side and that embossed lettering (2) on each conrod faces outside.

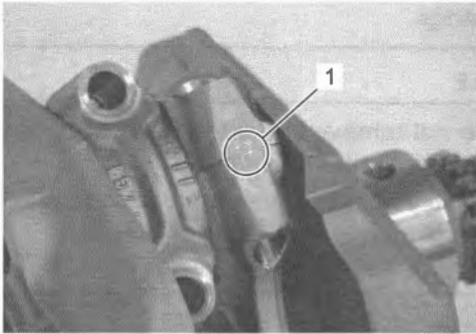


IH18K1140281-02

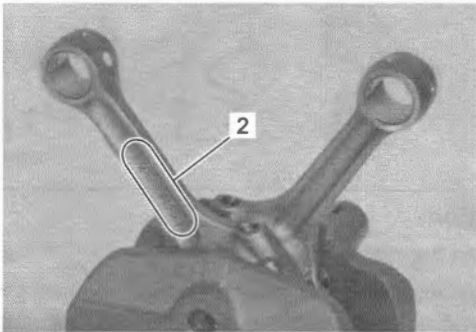

IH18K1140282-01

- 5) Apply engine oil to the flange and thread portion (1) of the conrod cap bolts.

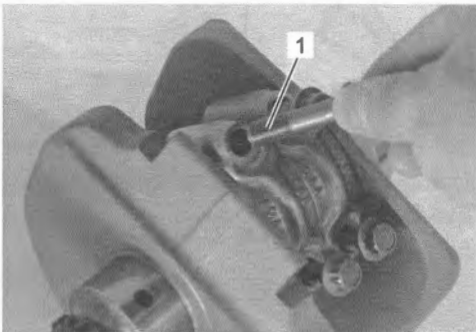


IH18K1140283-01


- 6) Tighten the conrod cap bolts (1) as following two steps.

**Tightening torque**

**Conrod cap bolt (a): 21 N·m (2.1 kgf-m, 15.5 lbf-ft) → turn clockwise 90°**

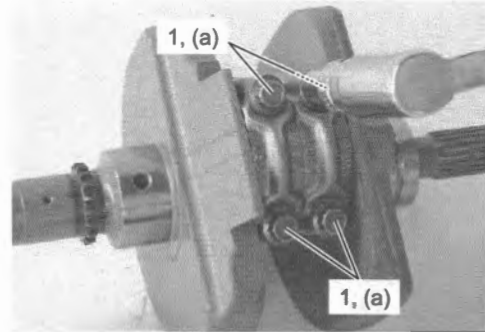

IH18K1140284-02

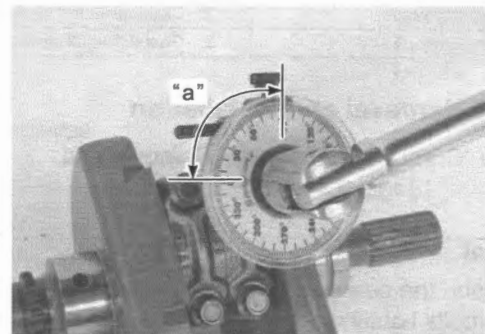


IH18K1140285-01

"a": 90°

- 7) Apply molybdenum oil to the conrod big end side surfaces.

**"A": Assembly lubrication (Molybdenum oil solution)**

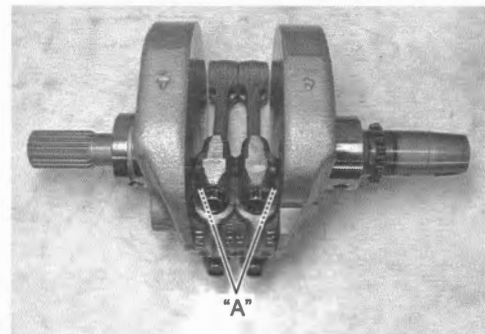

IH18K1140286-01

- 8) Check that the conrod moves smoothly.

### Conrod / Crankshaft Inspection

BENH28K21406044

Refer to "Conrod Removal and Installation" (Page 1D-77).

#### Conrod Small End I.D.

Measure the conrod small end inside diameter with the small bore gauge.

If the conrod small end inside diameter exceeds the service limit, replace the conrod.


#### Conrod small end I.D.

[Limit]: 20.040 mm (0.7889 in)

#### Special tool

(A): 09900-20602

(B): 09900-22403

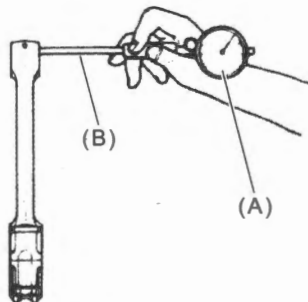

ID26J1140219-01

#### Conrod Big End Side Clearance


- 1) Check the conrod big end side clearance with thickness gauge.

#### Conrod big end side clearance

[Limit]: 0.5 mm (0.019 in)

#### Special tool

(A): 09900-20803

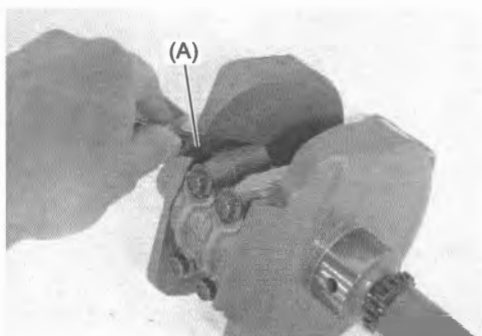

IH18K1140287-01

- 2) If the clearance exceeds the limit, remove the conrod and measure the conrod big end width and crank pin width "a". If the width exceed the limit, replace the conrod or crankshaft. (Page 1D-77)

#### Conrod big end width

[Standard]: 20.95 – 21.00 mm (0.8248 – 0.8267 in)


#### Crank pin width

[Standard]: 42.17 – 42.22 mm (1.661 – 1.662 in)

#### Special tool

(A): 09912-66310

09900-20101

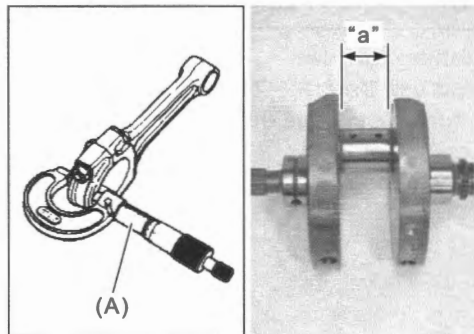

IH18K1140310-01


### Conrod Crank Pin Bearing Inspection and Selection

BENH28K21406045

Refer to "Conrod Removal and Installation" (Page 1D-77).

#### Inspection

- 1) Inspect the bearing surfaces for any signs of fusion, pitting, burn or flaws. If any, replace them with a specified set of bearings.

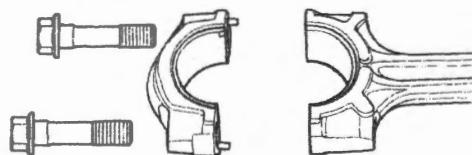


IH18K1140288-01

- 2) Place the plastigage axially along the crank pin, avoiding the oil hole, as shown.

#### Special tool

(A): 09900-22301

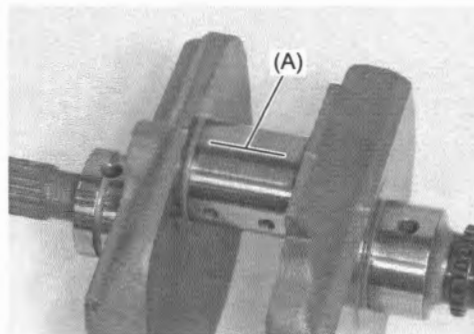

IH18K1140289-01


- 3) Tighten the conrod cap bolts to the specified torque, in two stages. (Page 1D-77)

**NOTE**

- When installing the conrod cap to the crank pin, make sure that I.D. code (1) on the conrod faces towards the intake side.
- Never rotate the crankshaft or conrod when a piece of plastigage is installed.

**Tightening torque**

Conrod cap bolt (a): 21 N·m (2.1 kgf·m, 15.5 lbf·ft) → turn clockwise 90°

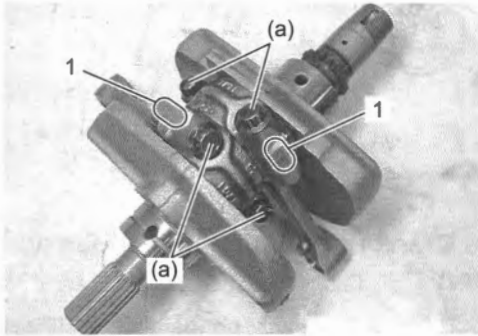

IH18K1140290-01


- 4) Remove the conrod caps and measure the width of the compressed plastigage using the envelope scale. This measurement should be taken at the widest part of the compressed plastigage. If the oil clearance exceeds the service limit, select the specified bearings from the bearing selection table.

**Conrod big end oil clearance**

[Standard]: 0.032 – 0.056 mm (0.0013 – 0.0022 in)  
 [Limit]: 0.080 mm (0.0031 in)

**Special tool**


(A): 09900-22301

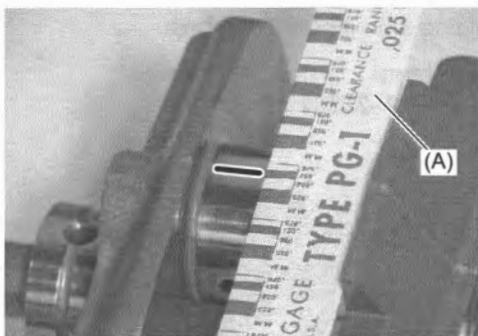

IH18K1140291-01

**Selection**

- 1) Check the corresponding conrod I.D. code numbers ([1] or [2]) (1).

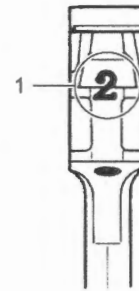

IH18K1140292-01


**Conrod big end I.D.**

[Standard]: 41.000 – 41.016 mm (1.6142 – 1.6148 in)

**Conrod I.D. specification**

Code (1)	I.D. specification
1	41.000 – 41.008 mm (1.6142 – 1.6144 in)
2	41.008 – 41.016 mm (1.6145 – 1.6148 in)

- 2) Check the corresponding crank pin O.D. code numbers ([1], [2] or [3]) (1).

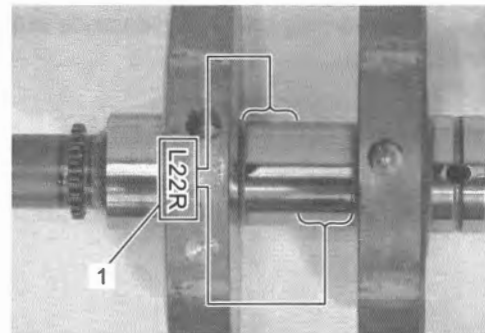

IH18K1140293-02

- 3) Measure the conrod crank pin O.D. with the special tool. If any of the measurements are out of specification, replace the crankshaft.

**NOTE**

The crank pin O.D. measurement should be taken at 10.5 mm (0.413 in) and 31.5 mm (1.240 in) positions from the crank pin end.

**Crank pin O.D.**


[Standard]: 37.976 – 38.000 mm (1.4952 – 1.4960 in)

**Crank pin O.D. specification**

Code	O.D. specification
1	37.992 – 38.000 mm (1.4958 – 1.4960 in)
2	37.984 – 37.992 mm (1.4955 – 1.4957 in)
3	37.976 – 37.984 mm (1.4952 – 1.4954 in)

**Special tool**

(A): 09900–20202

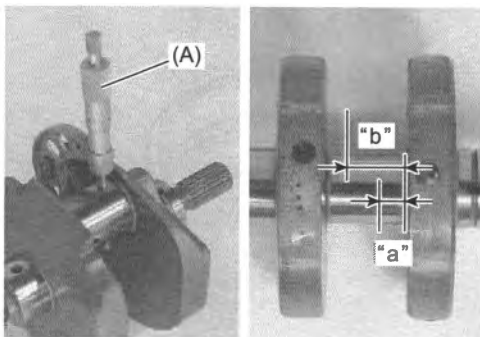

IH18K1140294-02

"a": 10.5 mm (0.413 in)	"b": 31.5 mm (1.240 in)
-------------------------	-------------------------

- 4) Select the specified bearings from the bearing selection table.

**NOTICE**

The bearings should be replaced as a set.

**Bearing selection table**

	Code	Crank pin O.D.		
		1	2	3
Conrod I.D.	1	Green	Black	Brown
	2	Black	Brown	Yellow


IH18K1140326-01

**Crank pin bearing thickness**

[Standard]: 1.480 – 1.496 mm (0.0583 – 0.0588 in)

**Bearing thickness specification**

Color (1) (Part No.)	Thickness
Green (12164-46E10-0A0)	1.480 – 1.484 mm (0.0583 – 0.0584 in)
Black (12164-46E10-0B0)	1.484 – 1.488 mm (0.05843 – 0.05858 in)
Brown (12164-46E10-0C0)	1.488 – 1.492 mm (0.0586 – 0.0587 in)
Yellow (12164-46E10-0D0)	1.492 – 1.496 mm (0.05874 – 0.05889 in)

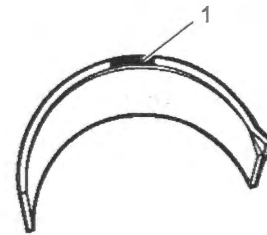

IH18K1140327-02

1. Color code


**Crankshaft Journal Bearing Inspection and Selection**

BENH28K21406046


Refer to "Crankshaft Assembly Removal and Installation" (Page 1D-71) and "Transmission Removal and Installation" in Section 5B (Page 5B-3).

**Inspection**

- 1) Inspect the crankshaft journal bearings (1) and crankshaft journals (2) on right and left for any damage. If any, replace the bearings and crankshaft as a specified set.

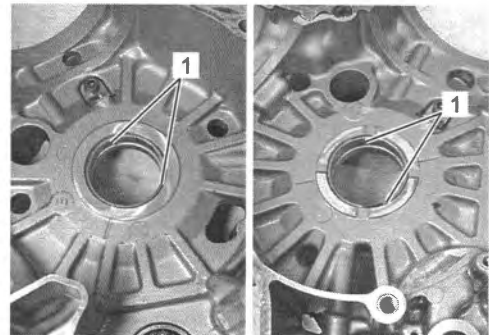

IH18K1140295-02

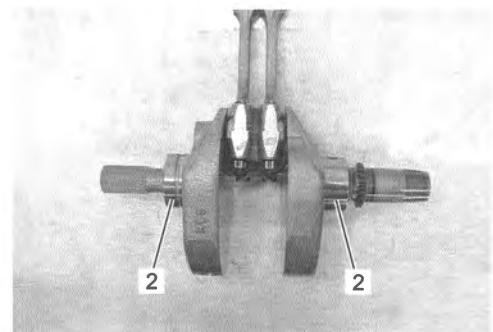

IH18K1140296-01

## 1D-82 Engine Mechanical:


- 2) Measure the crankshaft O.D. with the special tool. If any of the measurements are out of specification, replace the crankshaft and bearings as a set.

### Crankshaft journal O.D.

[Standard]: 41.985 – 42.000 mm (1.6530 – 1.6535 in)

### Special tool

(A): 09900–20202

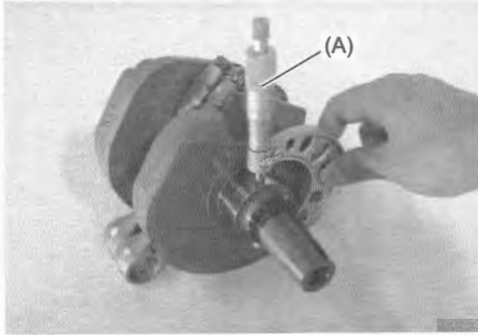


IH18K1140297-01

### Selection

- 1) Select the specified bearings from the crankcase journal I.D. codes. The crankcase journal I.D. codes ((A), (B) or (C)) (1), is stamped on the inside of each crankcase half.

### NOTICE

The bearings should be replaced as a set.

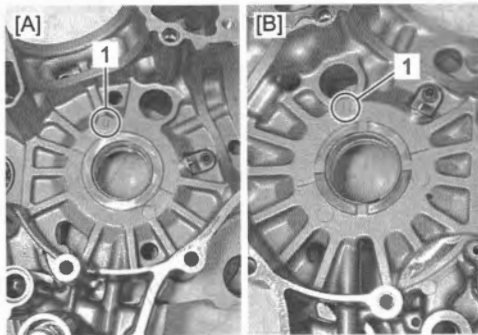

IH18K1140298-02

[A]: Left crankcase

[B]: Right crankcase

### Crankcase journal I.D.

[Standard]: 46.000 – 46.018 mm (1.8111 – 1.8117 in)

### Crankcase journal I.D. specification

Code (1)	I.D. specification	Bearing color
A	46.000 – 46.006 mm (1.8111 – 1.8112 in)	Green
B	46.006 – 46.012 mm (1.8113 – 1.8114 in)	Black
C	46.012 – 46.018 mm (1.8115 – 1.8117 in)	Brown

### Crankcase journal bearing thickness

[Standard]: 1.999 – 2.008 mm (0.0787 – 0.0790 in)

### Bearing thickness specification

Color (2) (Part No.)	Thickness
Green (12229-44H10-0A0)	1.999 – 2.002 mm (0.0787 – 0.0788 in)
Black (12229-44H10-0B0)	2.002 – 2.005 mm (0.07882 – 0.07893 in)
Brown (12229-44H10-0C0)	2.005 – 2.008 mm (0.07894 – 0.07905 in)



IE31J1140288-01

2. Color code

## Specifications

### Tightening Torque Specifications

BENH28K21407001

Fastening part	Tightening torque			Note
	N·m	kgf·m	lbf·ft	
Air cleaner outlet tube clamp screw	1.5	0.15	1.10	☞(Page 1D-7)
Throttle cable lock-nut	4.5	0.46	3.35	☞(Page 1D-11)
EVAP system purge control solenoid valve bracket screw	5.0	0.51	3.70	☞(Page 1D-14)
EVAP system purge control solenoid valve nut	7.0	0.71	5.20	☞(Page 1D-14)
Intake pipe screw	8.4	0.86	6.20	☞(Page 1D-16)
Cylinder head cover bolt	14	1.4	10.5	☞(Page 1D-19)
Cylinder head bolt (M10)	25 → 42 N·m (2.5 → 4.3 kgf·m, 18.5 → 31.0 lbf·ft)			☞(Page 1D-27)
Cylinder head bolt (M6) (L70)	10	1.0	7.5	☞(Page 1D-28)
Cylinder head bolt (M6) (L40)	10	1.0	7.5	☞(Page 1D-28)
Cylinder nut	10	1.0	7.5	☞(Page 1D-28)
Camshaft journal holder bolt	10	1.0	7.5	☞(Page 1D-30) / ☞(Page 1D-34)
Cam chain tension adjuster bolt	10	1.0	7.5	☞(Page 1D-31) / ☞(Page 1D-34)
Cam chain tension adjuster plug	23	2.3	17.0	☞(Page 1D-31) / ☞(Page 1D-35)
Crankshaft hole plug	11	1.1	8.5	☞(Page 1D-36)
TDC plug	23	2.3	17.0	☞(Page 1D-36)
Engine mounting bracket bolt	35	3.6	26.0	☞(Page 1D-48)
Engine mounting thrust adjuster	12	1.2	9.0	☞(Page 1D-49)
Engine mounting thrust adjuster lock-nut	45	4.6	33.5	☞(Page 1D-50)
Engine mounting bolt	55	5.6	40.5	☞(Page 1D-50)
Engine mounting bolt	25	2.5	18.5	☞(Page 1D-50)
Engine mounting nut	93	9.5	69.0	☞(Page 1D-50)
Engine mounting nut	55	5.6	40.5	☞(Page 1D-50)
Connector hose union bolt	10	1.0	7.5	☞(Page 1D-58)
Oil gallery plug (M6)	10	1.0	7.5	☞(Page 1D-58) / ☞(Page 1D-75)
Cam chain tensioner bolt	10	1.0	7.5	☞(Page 1D-66)
Crankcase bolt (M8) (L80)	26	2.7	19.5	☞(Page 1D-70)
Crankcase bolt (M8) (L55)	26	2.7	19.5	☞(Page 1D-70)
Crankcase bolt (M6)	11	1.1	8.5	☞(Page 1D-70)
Primary drive gear bolt	70	7.1	52.0	☞(Page 1D-71)
Special tool bolt	23	2.3	17.0	☞(Page 1D-73)
Oil gallery plug (M8)	18	1.8	13.5	☞(Page 1D-75) / ☞(Page 1D-76)
Oil gallery plug (M12)	21	2.1	15.5	☞(Page 1D-75)
Drain plug	21	2.1	15.5	☞(Page 1D-75)
Oil gallery plug (M16)	35	3.6	26.0	☞(Page 1D-76)
Conrod cap bolt	21 N·m (2.1 kgf·m, 15.5 lbf·ft) → turn clockwise 90°			☞(Page 1D-78) / ☞(Page 1D-80)

#### Reference:

For the tightening torques of fasteners not specified in this page, refer to:

- “Throttle Cable Routing Diagram” (Page 1D-2)
- “Intake System Construction” (Page 1D-4)
- “Throttle Body Components” (Page 1D-8)
- “Engine Assembly Installation” (Page 1D-48)
- “Fasteners Information” in Section 0C (Page 0C-11)

## Special Tools and Equipment

### Recommended Service Material

BENH28K21408001









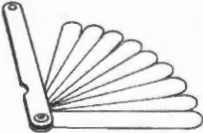
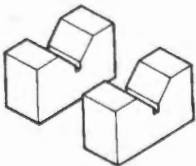
Material	SUZUKI recommended product or Specification		Note
Assembly lubrication	Molybdenum oil solution	—	☞(Page 1D-25) / ☞(Page 1D-54) / ☞(Page 1D-61) / ☞(Page 1D-78)
Grease	SUZUKI SUPER GREASE A	P/No.: 99000-25011	☞(Page 1D-16) / ☞(Page 1D-70)
Sealant	SUZUKI BOND 1215	P/No.: 99000-31110	☞(Page 1D-25) / ☞(Page 1D-69)
	SUZUKI BOND 1207B	P/No.: 99000-31140	☞(Page 1D-18)
Thread lock cement	THREAD LOCK CEMENT 1322D	P/No.: 99000-32150	☞(Page 1D-48)

#### NOTE









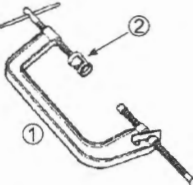
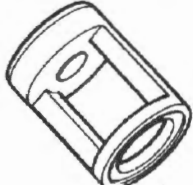


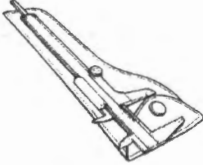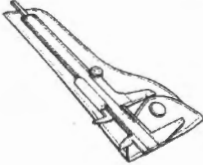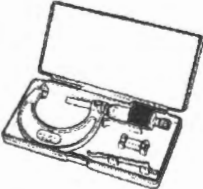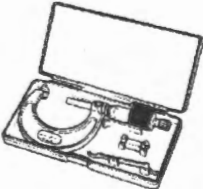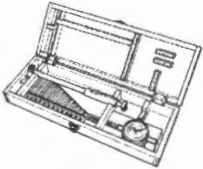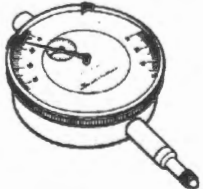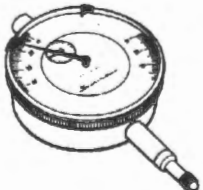

**Required service material(s) is also described in:  
“Throttle Body Components” (Page 1D-8)**

### Special Tool

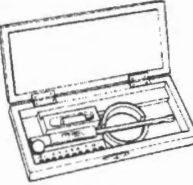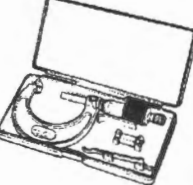

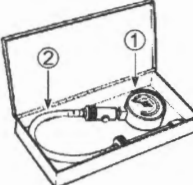



BENH28K21408002

09900-20101 Vernier calipers (150 mm) ☞(Page 1D-55) / ☞(Page 1D-64) / ☞(Page 1D-79)		09900-20102 Vernier calipers (200 mm) ☞(Page 1D-57)	
09900-20202 Micrometer (25 - 50 mm) ☞(Page 1D-37) / ☞(Page 1D-81) / ☞(Page 1D-82)		09900-20204 Micrometer (75 - 100 mm) ☞(Page 1D-62)	
09900-20530 Cylinder gauge set ☞(Page 1D-52)		09900-20602 Dial gauge (1 x 0.001 mm) ☞(Page 1D-38) / ☞(Page 1D-64) / ☞(Page 1D-79)	
09900-20607 Dial gauge (10 x 0.01 mm) ☞(Page 1D-38) / ☞(Page 1D-55) / ☞(Page 1D-55) / ☞(Page 1D-56)		09900-20701 Dial gauge chuck ☞(Page 1D-38) / ☞(Page 1D-55) / ☞(Page 1D-55) / ☞(Page 1D-56)	
09900-20803 Thickness gauge ☞(Page 1D-40) / ☞(Page 1D-41) / ☞(Page 1D-52) / ☞(Page 1D-59) / ☞(Page 1D-63) / ☞(Page 1D-64) / ☞(Page 1D-79)		09900-21304 V blocks ☞(Page 1D-38) / ☞(Page 1D-55) / ☞(Page 1D-55)	



<p>09900-22301 Plastigage (0.025 - 0.076 mm) ☞(Page 1D-37) / ☞(Page 1D-79) / ☞(Page 1D-80)</p>		<p>09900-22302 Plastigage (0.051 - 0.152 mm) ☞(Page 1D-37)</p>	
<p>09900-22403 Small bore gauge (18 - 35 mm) ☞(Page 1D-38) / ☞(Page 1D-64) / ☞(Page 1D-79)</p>		<p>09912-66310 Micrometer (0 - 25 mm) ☞(Page 1D-38) / ☞(Page 1D-55) / ☞(Page 1D-63) / ☞(Page 1D-64) / ☞(Page 1D-79)</p>	
<p>09913-10750 Compression gauge adapter ☞(Page 1D-3)</p>		<p>09913-60221 Journal bearing installer / holder set ☞(Page 1D-72) / ☞(Page 1D-72) / ☞(Page 1D-73)</p>	
<p>09915-64512 Compression gauge set (2500 kPa) 1. Gauge 2. Hose (Adapter) ☞(Page 1D-3)</p>		<p>09916-10911 Valve lapper set ☞(Page 1D-56)</p>	
<p>09916-14510 Valve lifter 1. Main unit 2. Attachment ☞(Page 1D-53) / ☞(Page 1D-54)</p>		<p>09916-14522 Valve lifter attachment ☞(Page 1D-53) / ☞(Page 1D-54)</p>	
<p>09916-33210 Valve guide reamer (ø4.5) ☞(Page 1D-60)</p>		<p>09916-34542 Reamer handle ☞(Page 1D-59) / ☞(Page 1D-60)</p>	
<p>09916-34580 Valve guide reamer (ø10.8) ☞(Page 1D-59)</p>		<p>09916-43211 Valve guide installer / remover ☞(Page 1D-59) / ☞(Page 1D-60)</p>	

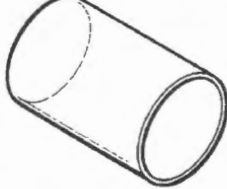**1D-86 Engine Mechanical:**
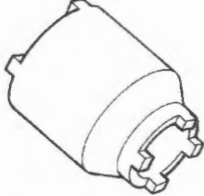
<p>09916-53330 Valve guide installer attachment ☞(Page 1D-60)</p>		<p>09916-84511 Tweezers ☞(Page 1D-53) / ☞(Page 1D-54)</p>	
<p>09919-28620 Sleeve protector ☞(Page 1D-53) / ☞(Page 1D-54)</p>		<p>09920-13120 Crankcase separator 1. Main unit 2. Bolt 3. Attachment ☞(Page 1D-68)</p>	
<p>09930-44530 Rotor holder ☞(Page 1D-67) / ☞(Page 1D-71)</p>		<p>09940-14990 Engine mounting adjuster wrench ☞(Page 1D-46) / ☞(Page 1D-47) / ☞(Page 1D-50)</p>	

# Engine Lubrication System

## Precautions

### Precautions for Engine Oil


Refer to "Fuel / Oil / Fluid / Coolant Recommendation" in Section 0C (Page 0C-13).

BENH28K21500001

# Schematic and Routing Diagram

Engine Lubrication System Chart Diagram

BENH28K21502001

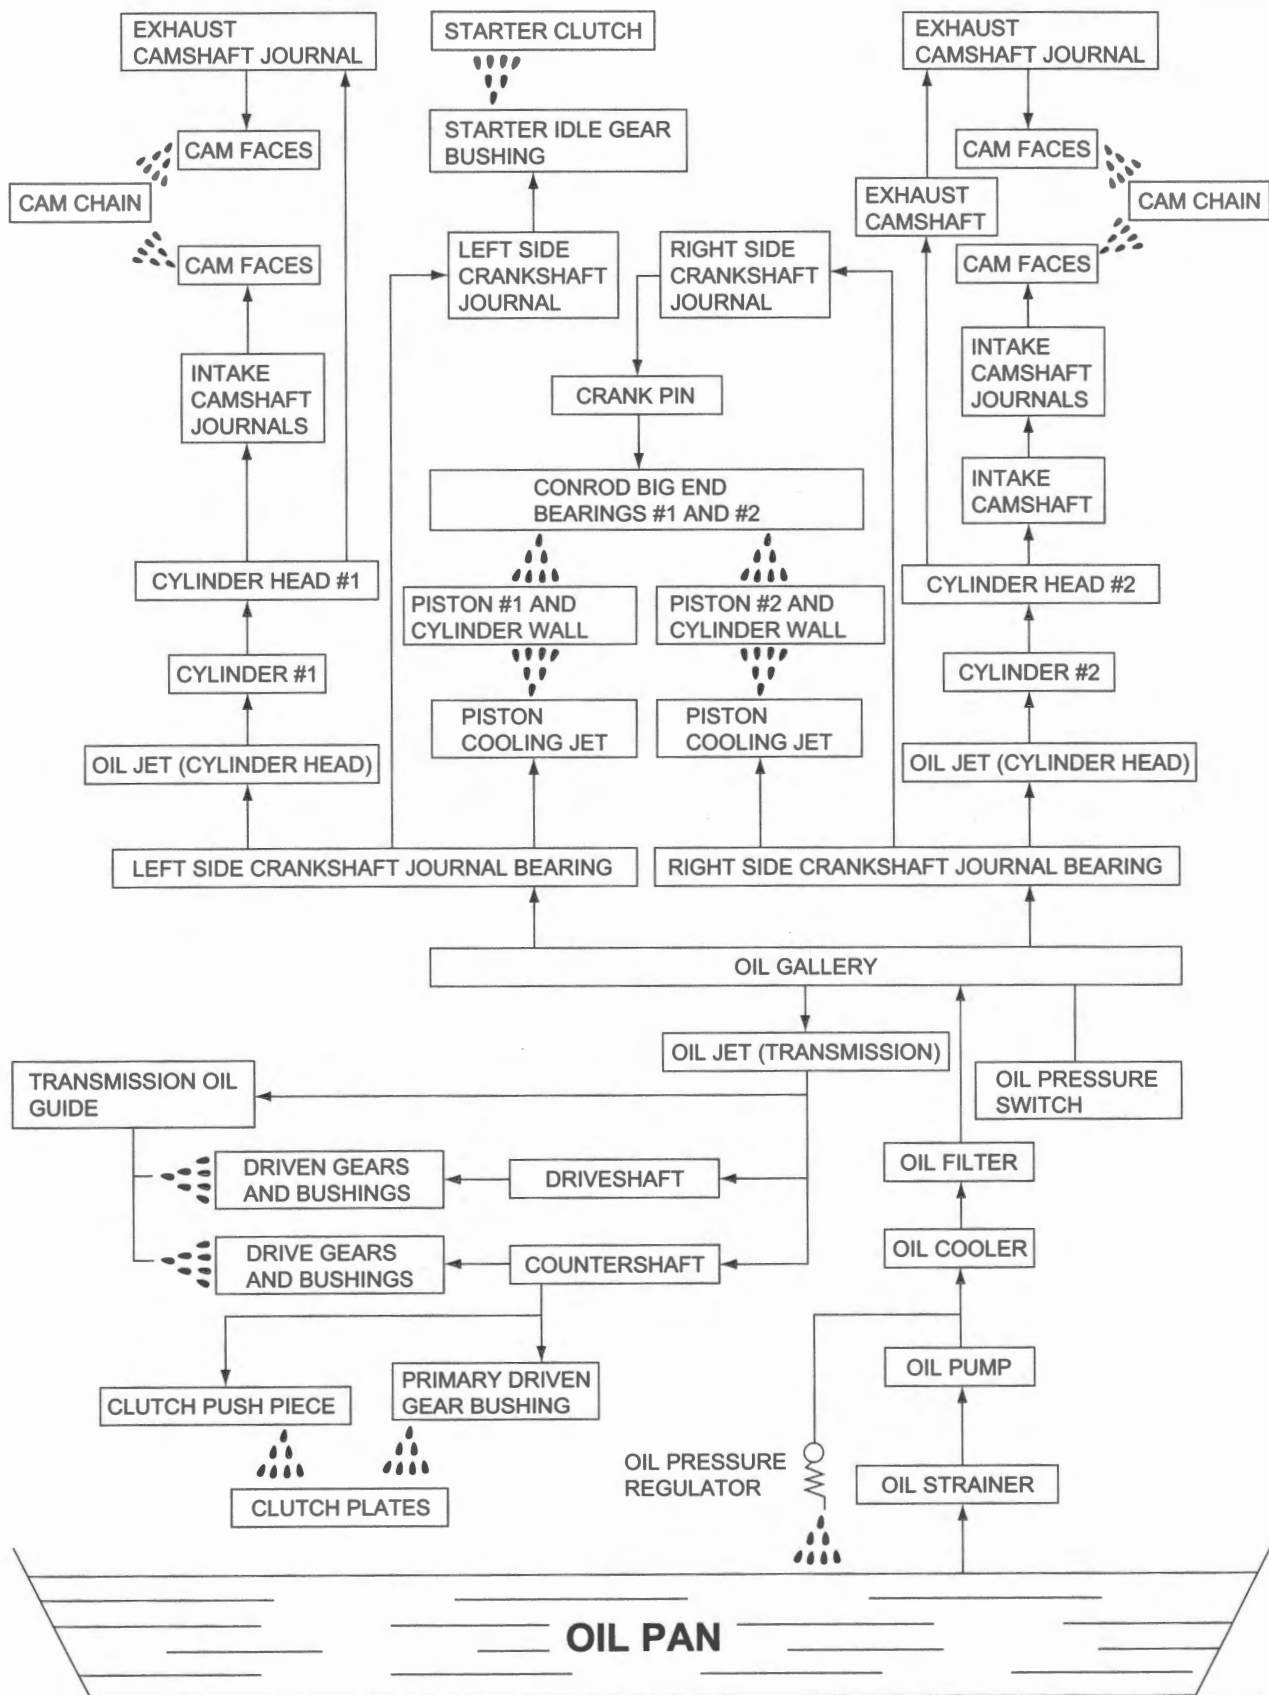

## Diagnostic Information and Procedures

### Engine Lubrication Symptom Diagnosis

BENH28K21504001

Condition	Possible cause	Correction / Reference Item
<b>Engine overheats</b>	Insufficient amount of engine oil.	Check level and add. (Page 1E-4)
	Defective oil pump.	Replace. (Page 1E-11)
	Clogged oil circuit.	Clean.
	Incorrect engine oil.	Change. (Page 1E-4)
	Clogged oil cooler.	Replace. (Page 1E-7)
<b>Exhaust smoke is dirty or thick</b>	Excessive amount of engine oil.	Check level and drain. (Page 1E-4)
<b>Engine lacks power</b>	Excessive amount of engine oil.	Check level and drain. (Page 1E-4)

### Oil Pressure Check

BENH28K21504002


Check the engine oil pressure periodically. This will give a good indication of the condition of the moving parts.

#### NOTE

**Before checking the oil pressure, check the following:**

- Oil level: (Page 1E-4)
- Oil leaks (If leak is found, repair it.)
- Oil quality (If oil is discolored or deteriorated, replace it.)

- 1) Start the engine and check if the oil pressure indicator light is turned on. If the light stays on, check the oil pressure indicator light circuit. If the circuit is OK, check the oil pressure in the following manner.
- 2) Remove the under cowling (if equipped). (Page 9D-30)
- 3) Remove the oil gallery plug (M12) (1).

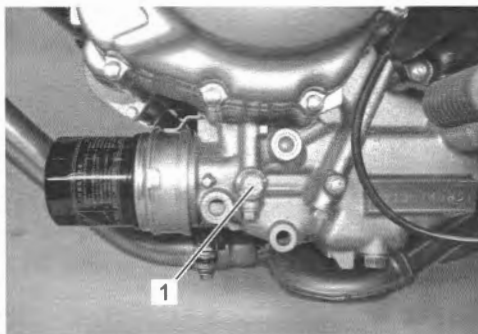


IH28K1150001-01

- 4) Install the oil pressure gauge and attachment into the oil gallery.

#### Special tool

- (A): 09915-77331
- (B): 09915-74521
- (C): 09915-70610

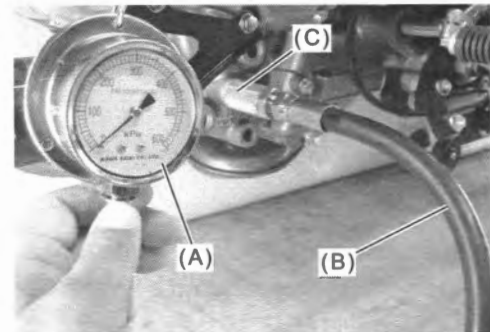

IH28K1150002-01

- 5) Warm up the engine as follows:  
 Summer: 10 min. at 2000 r/min  
 Winter: 20 min. at 2000 r/min
- 6) After warm up, increase the engine speed to 3000 r/min and read the oil pressure gauge. If the oil pressure is lower or higher than the specification, the following causes may be considered.

#### Oil pressure

At 60 °C (140 °F), 3000 r/min

[Standard]: 200 – 600 kPa (2.0 – 6.1 kgf/cm<sup>2</sup>, 29.0 – 87.0 psi)

High oil pressure	Low oil pressure
<ul style="list-style-type: none"> <li>• Engine oil viscosity is too high</li> <li>• Clogged oil passage</li> <li>• Combination of the above items</li> </ul>	<ul style="list-style-type: none"> <li>• Clogged oil filter</li> <li>• Oil leakage from the oil passage</li> <li>• Damaged O-ring</li> <li>• Defective oil pump</li> <li>• Combination of the above items</li> </ul>

- 7) Stop the engine and remove the oil pressure gauge and attachment.

#### ▲ WARNING


**To avoid the risk of being burned, remove the oil pressure gauge when the oil has cooled.**

## 1E-4 Engine Lubrication System:

- 8) Install the new gasket washer to the oil gallery plug (M12) (1).
- 9) Install the oil gallery plug (M12) and tighten it to the specified torque.

### Tightening torque

**Oil gallery plug (M12) (a): 21 N·m (2.1 kgf-m, 15.5 lbf-ft)**

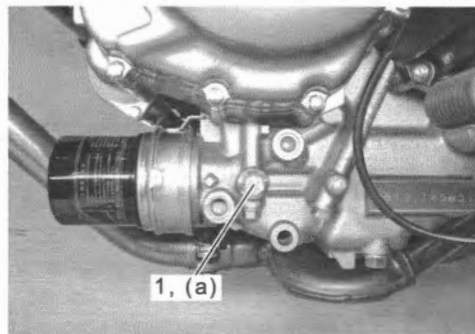

IH28K1150003-01

- 10) Check the engine oil level. ☞ (Page 1E-4)

## Repair Instructions

### Engine Oil Inspection

BENH28K21506001


#### Engine Oil Leakage Inspection

Visually check the cylinder, crankcase, etc. for oil leakage.

#### Engine Oil Level Inspection

- 1) Keep the motorcycle upright on a level surface.
- 2) Start the engine at idle speed for a few minutes. Turn off the engine and wait for about three minutes.
- 3) Check the oil level and deterioration through the inspection window.

If the oil level is below mark "L", add new oil up to "F" level. However, if the oil is deteriorated or discoloration, replace it.

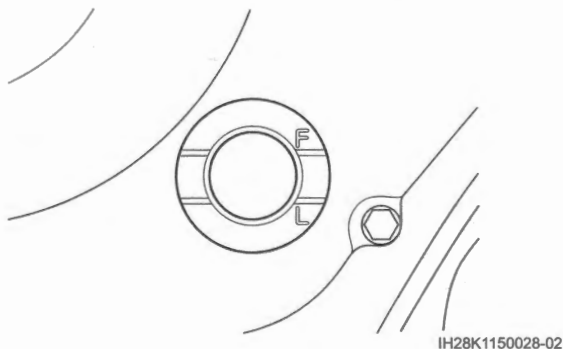

IH28K1150028-02


### Engine Oil Replacement

BENH28K21506002

- 1) Keep the motorcycle upright on a level surface.
- 2) Start the engine at idle speed for a few minutes and then turn off the engine.
- 3) Place an oil pan under the engine and remove the oil filler cap (1).
- 4) Drain engine oil by removing the oil drain plug (2).

#### ▲ CAUTION

**To avoid getting burned, do not touch the engine, engine oil and exhaust system.**

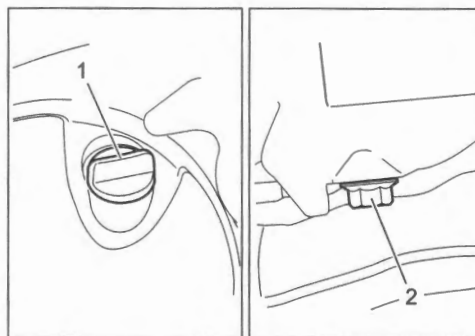


IH28K1150029-01

- 5) Install the new gasket washer (1) to the oil drain plug (2) and tighten the oil drain plug to the specified torque.

### Tightening torque

**Oil drain plug (a): 21 N·m (2.1 kgf-m, 15.5 lbf-ft)**

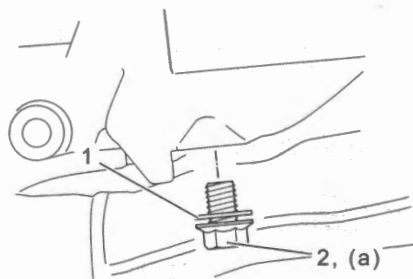

IH28K1150030-03

- 6) Pour new oil through the oil filler hole.

### Necessary amount of engine oil

**Oil change [Standard]: 2400 ml (2.5 US qt, 2.1 Imp qt)**

**Oil and filter change [Standard]: 2600 ml (2.7 US qt, 2.3 Imp qt)**

**Engine overhaul [Standard]: 3000 ml (3.2 US qt, 2.6 Imp qt)**

- 7) Install the oil filler cap.
- 8) Start the engine and check for oil leakage.
- 9) Stop the engine and check the engine oil level again. Refer to "Engine Oil Inspection" (Page 1E-4).

## Oil Filter Replacement

BENH28K21506003


- 1) Drain engine oil. (Page 1E-4)
- 2) Remove the oil filter (1) with the special tool.

### NOTE

Detach the special tool once the oil filter has come loose, and then remove the filter by hand.

### Special tool

(A): 09915-40620

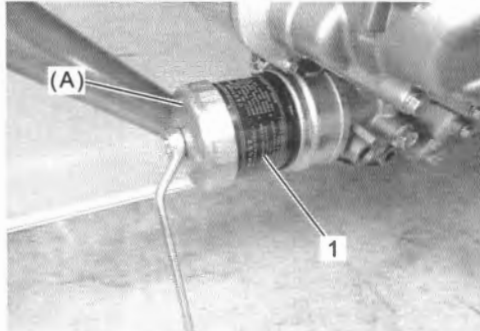

IH28K1150009-01

- 3) Apply engine oil lightly to the O-ring of new oil filter (1) before installation.

### NOTICE

**ONLY USE A GENUINE SUZUKI MOTORCYCLE OIL FILTER.**

Other manufacturer's oil filters may differ in thread specifications (thread diameter and pitch), filtering performance and durability which may lead to engine damage or oil leaks. Also, do not use a genuine Suzuki automobile oil filter on this motorcycle.

- 4) Install a new oil filter. Turn it by hand until you feel that the oil filter O-ring contacts the oil filter mounting surface. Then, tighten the oil filter two full turns (or to specified torque) with the special tool.

### NOTE


To properly tighten the oil filter, use the special tool. Never tighten the oil filter by hand only.

### Special tool

(A): 09915-40620

### Tightening torque

Oil filter (a): 20 N·m (2.0 kgf-m, 15.0 lbf-ft)

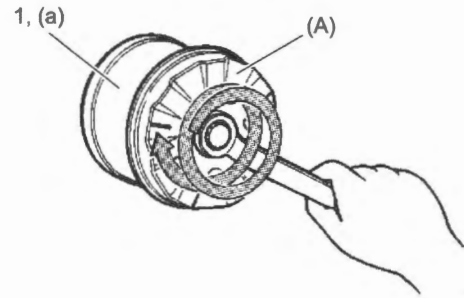

IH18K1150050-01

- 5) Pour new engine oil. (Page 1E-4)


## Oil Strainer / Oil Pressure Regulator Removal and Installation

BENH28K21506004

Refer to "Crankcase Assembly Disassembly" in Section 1D (Page 1D-66) and "Crankcase Assembly Reassembly" in Section 1D (Page 1D-69).


### Removal

- 1) Remove the oil pressure regulator (1).

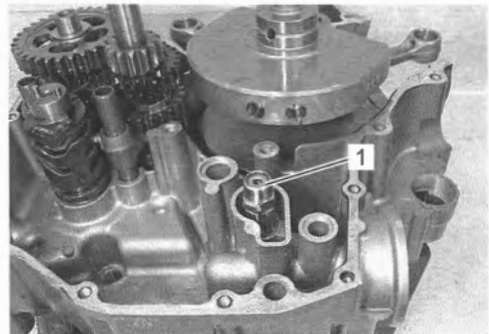

IH18K1150010-01

- 2) Remove the oil strainer plate (1).
- 3) Remove the oil strainer (2).

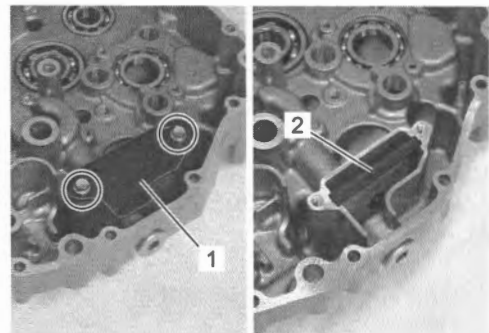

IH18K1150011-02

## 1E-6 Engine Lubrication System:


### Installation

Install the oil strainer and oil pressure regulator in the reverse order of removal. Pay attention to the following points:


- Install the oil strainer (1).

#### NOTICE

- The lip (2) of the oil strainer should be positioned downward.
- The shorter side "a" of the oil strainer should be positioned inside.

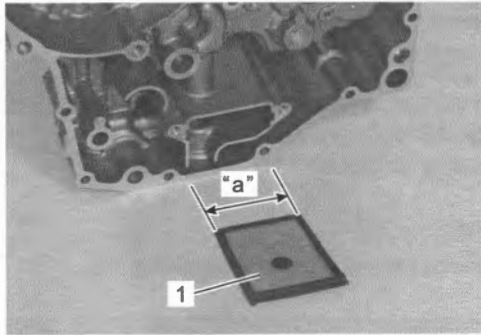

IH18K1150051-02

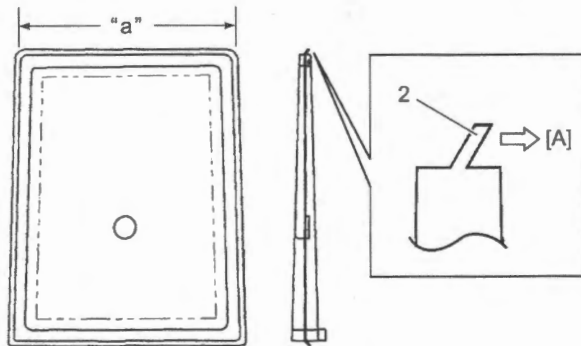


IH18K1150052-01

[A]: Down side

- Tighten the oil pressure regulator (1) to the specified torque.

#### Tightening torque

Oil pressure regulator (a): 28 N·m (2.9 kgf-m, 21.0 lbf-ft)

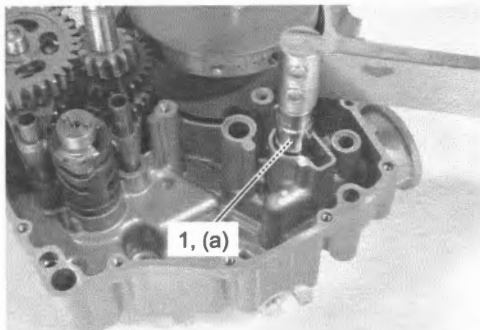

IH18K1150013-01

### Oil Strainer Inspection and Cleaning


BENH28K21506005

Refer to "Oil Strainer / Oil Pressure Regulator Removal and Installation" (Page 1E-5).

If the oil strainer is clogged with sediment or rust, clean the oil strainer using compressed air.

#### NOTE

When the oil strainer is dirtied excessively, replace the oil strainer with a new one.

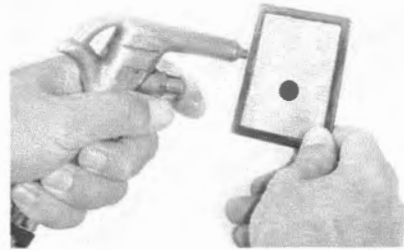

I944H1150009-01


### Oil Pressure Regulator Inspection

BENH28K21506006

Refer to "Oil Strainer / Oil Pressure Regulator Removal and Installation" (Page 1E-5).

Inspect the operation of the oil pressure regulator (1) by pushing on the piston with a proper bar.

If the piston does not operate, replace the oil pressure regulator with a new one.

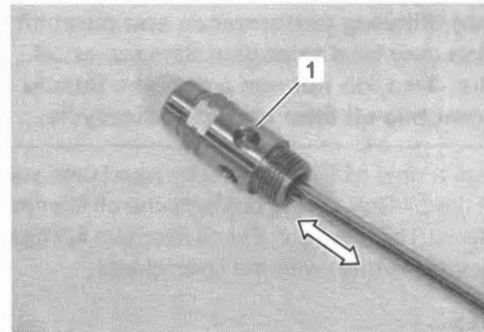

IH18K1150014-01



## Oil Cooler / Oil Cooler Hose Inspection


BENH28K21506007

### Oil Cooler Hose Inspection

Refer to "Water Hose Inspection" in Section 1F (Page 1F-11).

### Oil Cooler Inspection

Inspect the oil cooler (1) for engine oil leakage. If any defects are found, replace the oil cooler with a new one. (Page 1E-7)

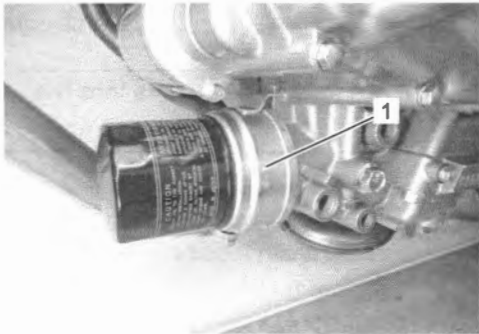


IH28K1150010-01

## Oil Cooler Removal and Installation

BENH28K21506008

### Removal

- 1) Drain engine coolant. (Page 1F-5)
- 2) Remove the oil filter. (Page 1E-5)
- 3) Disconnect the oil cooler inlet hose (1) and oil cooler outlet hose (2).
- 4) Remove the oil cooler union bolt (3) and washer (4).
- 5) Remove the oil cooler (5).

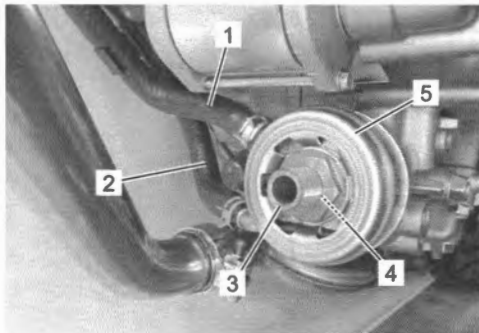


IH28K1150011-01

### Installation

Install the oil cooler in the reverse order of removal. Pay attention to the following points:

- Apply engine oil to the new O-ring (1).
- Fit the concave part (2) of the oil cooler onto the convex part (3) of the crankcase and install the oil cooler (4).

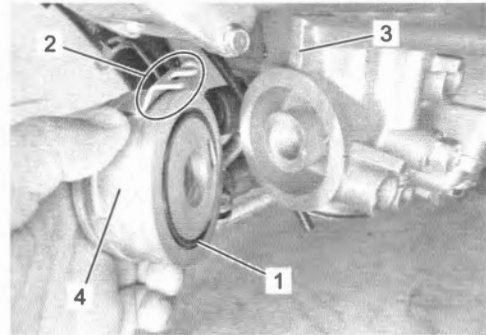


IH28K1150012-01

- Install the new gasket washer and tighten the oil cooler union bolt (1) to the specified torque.

### Tightening torque

Oil cooler union bolt (a): 70 N·m (7.1 kgf-m, 52.0 lbf-ft)

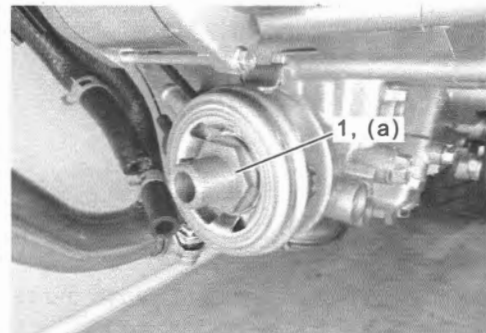

IH28K1150013-01


- Connect the oil cooler inlet hose and oil cooler outlet hose. (Page 1F-2)
- Install the oil filter and pour engine oil. (Page 1E-5)
- Pour engine coolant. (Page 1F-5)

**Oil Pressure Switch Removal and Installation**


BENH28K21506009

**Removal**

- 1) Turn the ignition switch OFF.
- 2) Drain engine oil. (Page 1E-4)
- 3) Disconnect the oil pressure switch lead wire (1).
- 4) Remove the oil pressure switch (2).

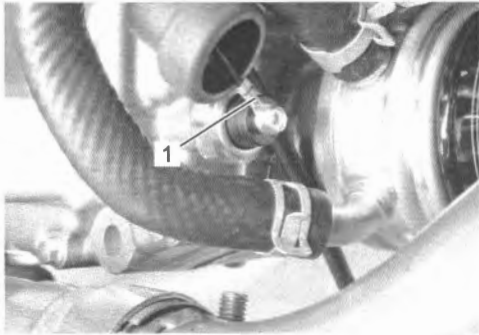

IH28K1150014-01

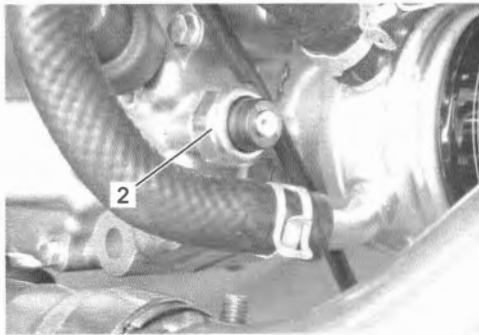

IH28K1150015-01

**Installation**

- 1) Install the oil pressure switch (1), apply the sealant to its thread part and tighten it to the specified torque.


**NOTE**

**Do not apply sealant to oil pressure switch hole.**

**“A”:** Sealant 99000-31140 (SUZUKI BOND 1207B)

**Tightening torque**

**Oil pressure switch (a): 13 N·m (1.3 kgf-m, 9.5 lbf-ft)**

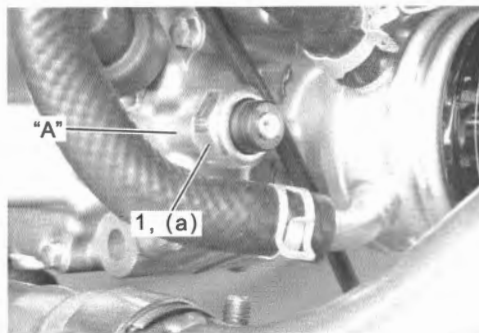

IH28K1150016-01

- 2) Connect the oil pressure switch lead wire. (Page 9A-7)
- 3) Pour engine oil. (Page 1E-4)

**Oil Pressure Switch Inspection**

BENH28K21506010

Refer to “Oil Pressure Indicator / Oil Pressure Indicator Light Inspection” in Section 9C (Page 9C-9).

**Oil Jet / Piston Cooling Jet Removal and Installation**


BENH28K21506011

**NOTE**


**Be careful not to drop any parts into the crankcase.**

**Oil Jet (For Cam Chain Tension Adjuster) Removal**

- 1) Remove the cam chain tension adjusters. (Page 1D-19)
- 2) Remove the oil jets (1).

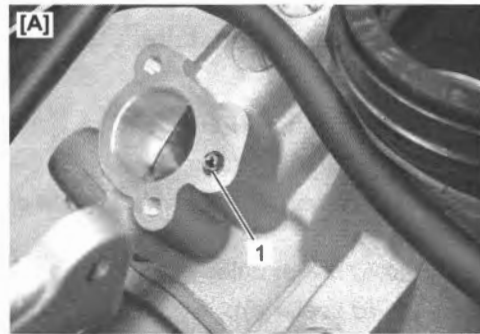

IH28K1150017-02

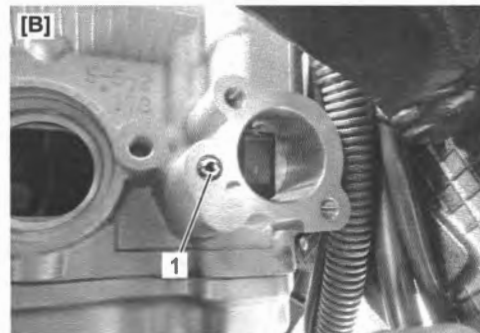


IH28K1150018-02

[A]: Cylinder #1	[B]: Cylinder #2
------------------	------------------

**Installation**

Install the oil jet (for cam chain tension adjuster) in the reverse order of removal. Pay attention to the following point:

- Apply engine oil to the new O-ring (1).

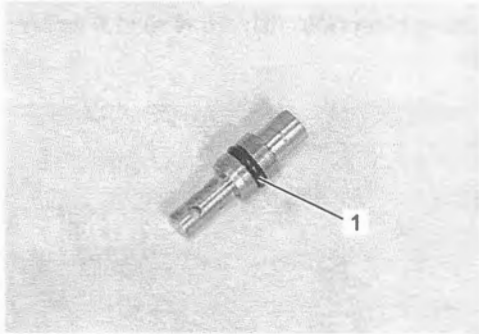

IH18K1150022-01


**Oil Jet (For Cylinder Head)**

**Removal**

- 1) Remove the cylinders. (Page 1D-19)
- 2) Remove the oil jets (for cylinder head) (1).



IH28K1150019-01

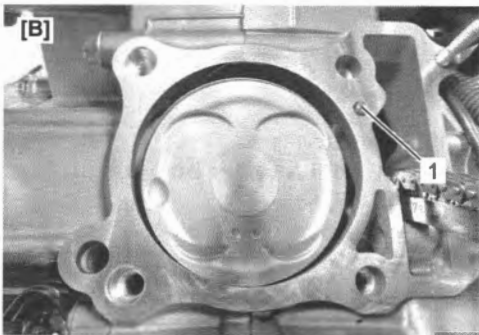

IH28K1150020-01


[A]: Cylinder #1

[B]: Cylinder #2

**Installation**

Install the oil jet (for cylinder head) in the reverse order of removal. Pay attention to the following point:

- Apply engine oil to the new O-ring (1).

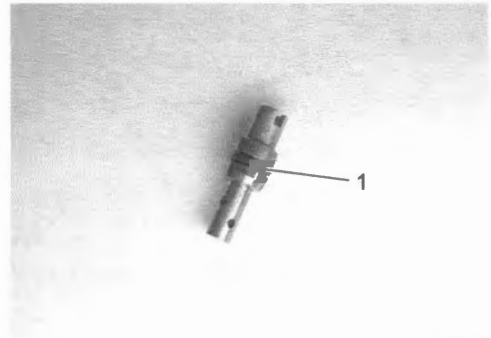


IH18K1150024-01

**Oil Jet (For Transmission)**


**Removal**

- 1) Drain engine oil. (Page 1E-4)
- 2) Remove the generator cover. (Page 1J-5)
- 3) Remove the engine sprocket. (Page 3A-4)
- 4) Remove the clutch push rod (left) (1).
- 5) Remove the driveshaft oil seal retainer bolts (2).

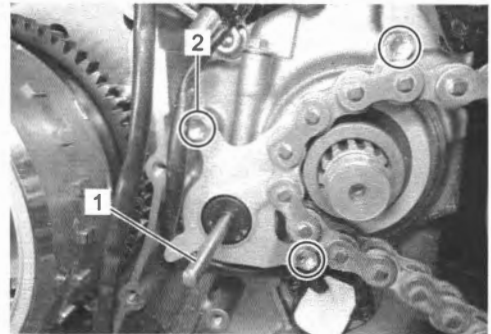

IH28K1150021-01


- 6) Remove the clutch push rod oil seal (1).

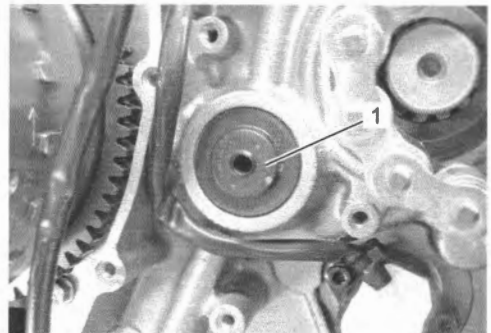

IH28K1150022-01


## 1E-10 Engine Lubrication System:

- 7) Remove the oil gallery plug (M8) (1) and (M6) (2).

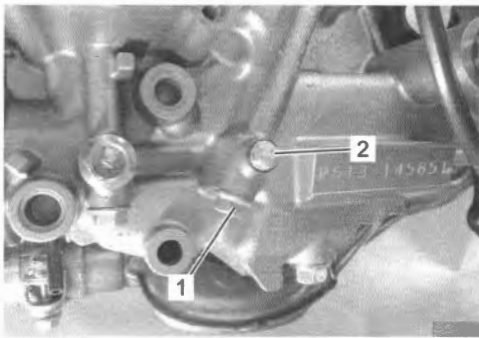

IH28K1150023-01

- 8) Remove the oil gallery jet (for transmission) (1) with a suitable bar (2).

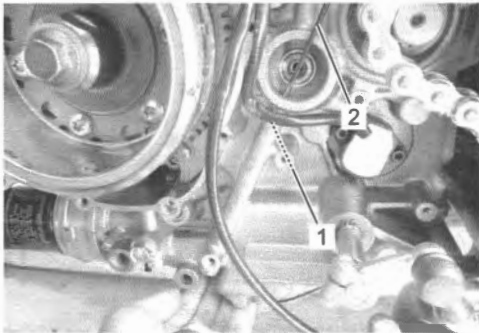


IH28K1150024-01

### Installation


Install the oil jet (for transmission) in the reverse order of removal. Pay attention to the following points:

- Apply engine oil to the new O-ring (1).

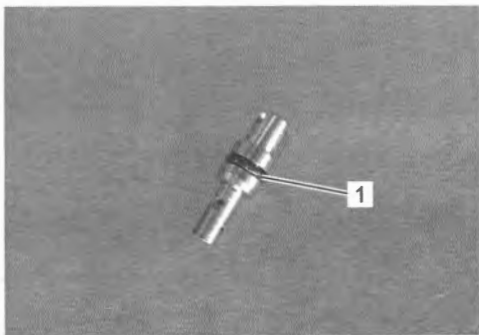

IH18K1150029-01

- Install the oil gallery jet (for transmission) (1) with a suitable bar (2).

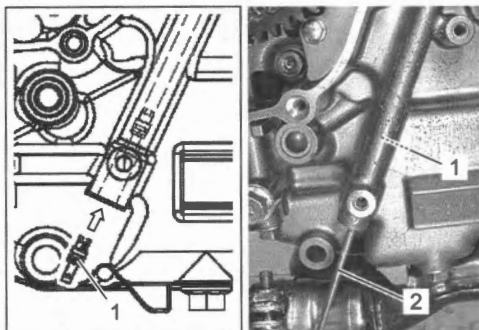


IH18K1150030-01

- Install the new gaskets.
- Tighten the oil gallery plug (M8) (1) and (M6) (2) to the specified torque.

### Tightening torque

Oil gallery plug (M8) (a): 18 N·m (1.8 kgf-m, 13.5 lbf-ft)

Oil gallery plug (M6) (b): 10 N·m (1.0 kgf-m, 7.5 lbf-ft)

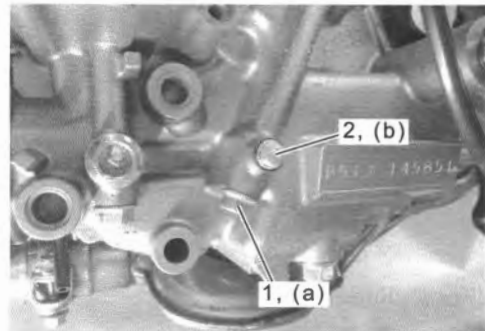


IH28K1150025-01

- Install the new clutch push rod oil seal (1) with the special tool.

### Special tool

(A): 09913-70210

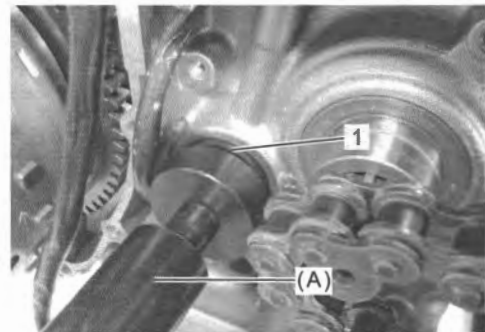


IH28K1150026-01

- Tighten the driveshaft oil seal retainer bolts (1) to the specified torque.

### Tightening torque

Driveshaft oil seal retainer bolt (a): 10 N·m (1.0 kgf-m, 7.5 lbf-ft)

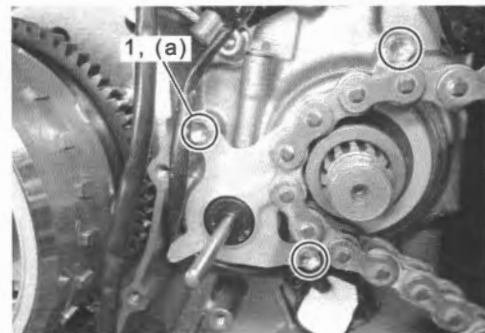

IH28K1150027-01


- Install the clutch push rod (left). ☞(Page 5C-7)
- Install the engine sprocket. ☞(Page 3A-4)
- Install the generator cover. ☞(Page 1J-7)

**Piston Cooling Jet**

**Removal**


- 1) Remove the pistons. (Page 1D-60)
- 2) Remove the piston cooling jet plates (1) and piston cooling oil jets (2).

**Cylinder #1**

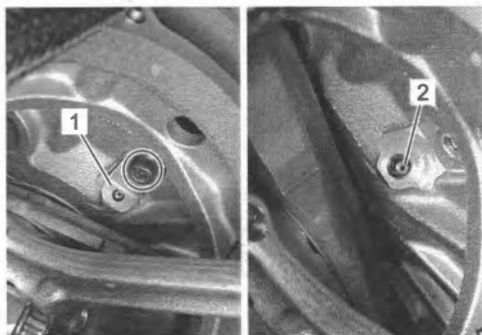

IH18K1150034-01

**Cylinder #2**

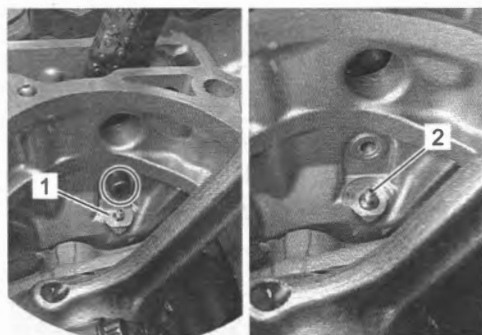

IH18K1150035-01

**Installation**


Install the piston cooling jet in the reverse order of removal. Pay attention to the following points:

- Apply engine oil to the new O-ring (1).
- Apply thread lock to the piston cooling jet bolt (2) and tighten it to the specified torque.

**“A”:** Thread lock cement 99000-32150 (THREAD LOCK CEMENT 1322D)

**Tightening torque**

**Piston cooling jet bolt (a):** 10 N·m (1.0 kgf-m, 7.5 lbf-ft)

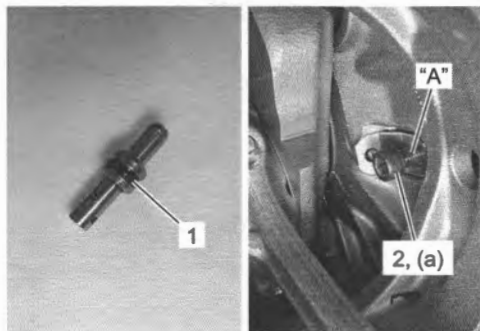


IH18K1150036-03

**Oil Jet / Piston Cooling Jet Inspection**

BENH28K21506012

Refer to “Oil Jet / Piston Cooling Jet Removal and Installation” (Page 1E-8).

Make sure that the oil jets and piston cooling jets are not clogged. If they are clogged, clean their oil passage using a wire of the proper size and compressed air.

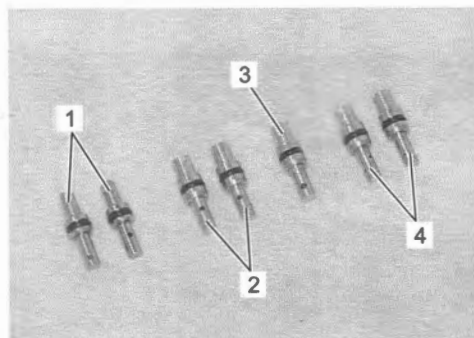

IH18K1150037-01

1.	Piston cooling jet
2.	Oil jet (for cylinder head)
3.	Oil jet (for transmission)
4.	Oil jet (for cam chain tensioner adjuster)

**Oil Pump Removal and Installation**


BENH28K21506013

Refer to “Clutch Removal” in Section 5C (Page 5C-10) and “Clutch Installation” in Section 5C (Page 5C-12).

**Removal**

- 1) Remove the snap ring (1) and oil pump driven gear (2).

**Special tool**  
**09900-06107**

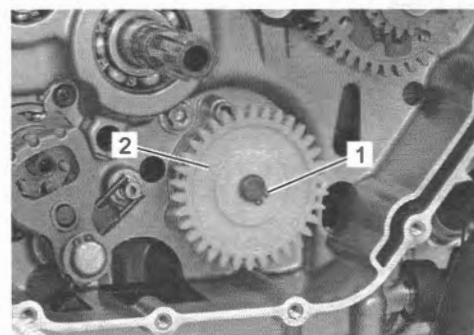


IH18K1150038-02

## 1E-12 Engine Lubrication System:

- 2) Remove the pin (1) and washer (2).
- 3) Remove the oil pump assembly (3).

### NOTICE

**Do not attempt to disassemble the oil pump assembly. The oil pump is available only as an assembly.**

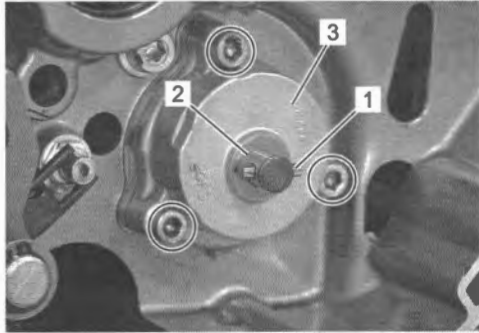

IH18K1150039-02


### Installation

Install the oil pump in the reverse order of removal. Pay attention to the following points:

- Tighten the oil pump mounting bolts (1) to the specified torque.

### Tightening torque

**Oil pump mounting bolt (a): 10 N·m (1.0 kgf·m, 7.5 lbf·ft)**

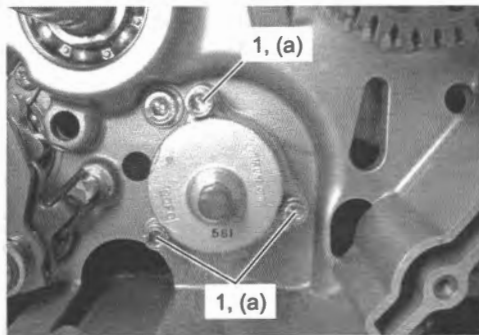


IH18K1150040-01

- Install the oil pump driven gear (1) and new snap ring (2).

### Special tool

**09900-06107**

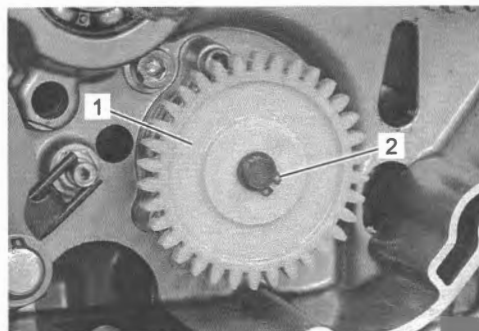

IH18K1150041-02

## Oil Pump Inspection

BENH28K21506014

Refer to "Oil Pump Removal and Installation" (Page 1E-11).

Rotate the oil pump by hand and check that it moves smoothly. If it does not move smoothly, replace the oil pump assembly.



IH18K1150042-01

## Oil Separator Removal and Installation


BENH28K21506015

### Removal

- 1) Drain engine oil. ☞(Page 1E-4)
- 2) Drain engine coolant. ☞(Page 1F-5)
- 3) Remove the clutch cover. ☞(Page 5C-10)
- 4) Remove the snap ring (1), water pump driven gear (2), pin (3) and washer (4).


### Special tool

**09900-06107**

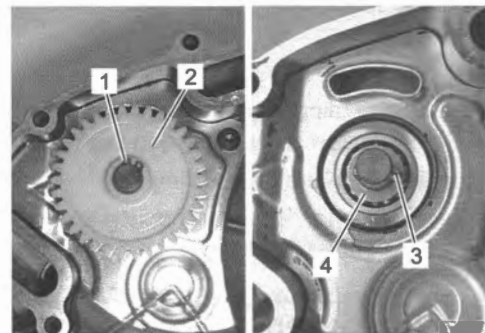

IH18K1150043-01

- 5) Remove the oil separator (1).

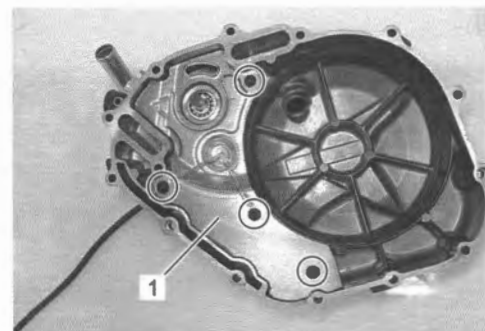


IH18K1150044-01

**Installation**

- 1) Install the oil separator (1) and tighten the screws (2) to the specified torque.

**Tightening torque**


**Oil separator screw (a): 10 N·m (1.0 kgf-m, 7.5 lbf-ft)**

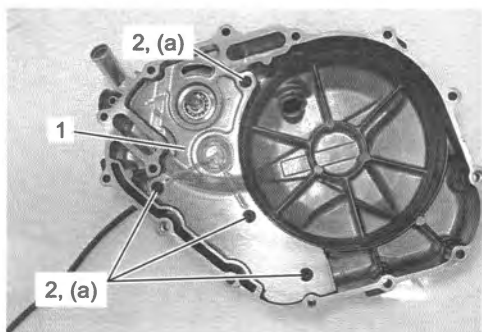

IH18K1150045-01

- 2) Install the washer (1), pin (2), washer pump driven gear (3) and new snap ring (4).

**Special tool**  
**09900-06107**

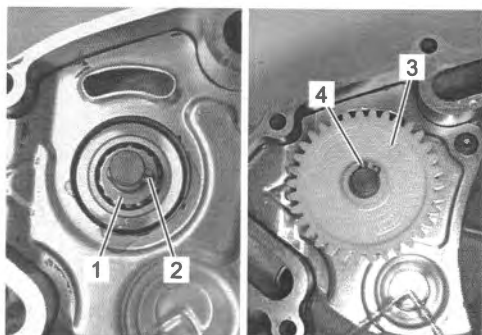

IH18K1150046-01

- 3) Install the clutch cover. ☞(Page 5C-12)
- 4) Pour engine oil. ☞(Page 1E-4)
- 5) Pour engine coolant and bleed air from the cooling system. ☞(Page 1F-5)


**Transmission Oil Guide Removal and Installation**

BENH28K21506016

Refer to "Clutch Removal" in Section 5C (Page 5C-10) and "Clutch Installation" in Section 5C (Page 5C-12).

**Removal**

- 1) Remove the transmission oil guide retainer (1).

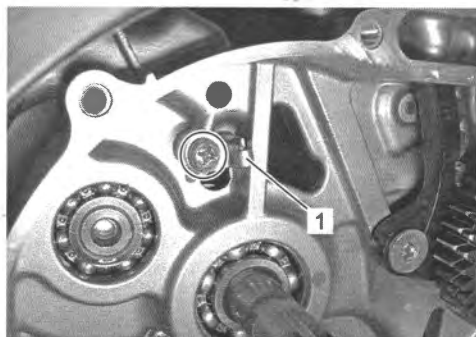

IH18K1150047-01

- 2) Remove the transmission oil guide (1).



IH18K1150048-01

## 1E-14 Engine Lubrication System:

### Installation

Install the transmission oil guide in the reverse order of removal. Pay attention to the following point:


- Tighten the transmission oil guide retainer screw (1) to the specified torque.

#### NOTE

Align the projection (2) of the transmission oil guide with the groove (3) of transmission oil guide retainer.

#### Tightening torque

Transmission oil guide retainer screw (a): 8.4 N·m (0.86 kgf-m, 6.20 lbf-ft)

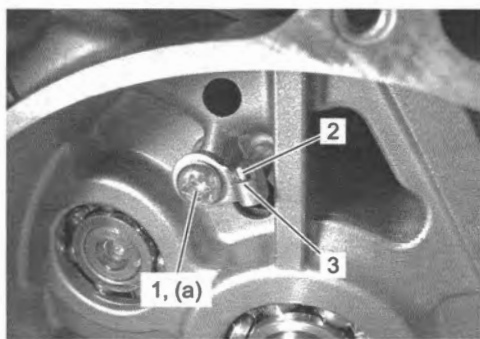


IH18K1150049-02

### Transmission Oil Guide Inspection

BENH28K21506017

Refer to "Transmission Oil Guide Removal and Installation" (Page 1E-13).

If the transmission oil guide is clogged, clean the oil guide.

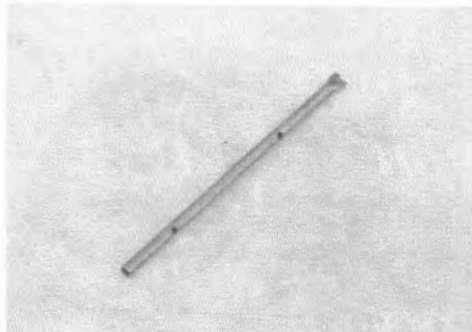

IC11J1150017-01

## Specifications

### Tightening Torque Specifications

BENH28K21507001

Fastening part	Tightening torque			Note
	N·m	kgf-m	lbf-ft	
Oil gallery plug (M12)	21	2.1	15.5	☞ (Page 1E-4)
Oil drain plug	21	2.1	15.5	☞ (Page 1E-4)
Oil filter	20	2.0	15.0	☞ (Page 1E-5)
Oil pressure regulator	28	2.9	21.0	☞ (Page 1E-6)
Oil cooler union bolt	70	7.1	52.0	☞ (Page 1E-7)
Oil pressure switch	13	1.3	9.5	☞ (Page 1E-8)
Oil gallery plug (M8)	18	1.8	13.5	☞ (Page 1E-10)
Oil gallery plug (M6)	10	1.0	7.5	☞ (Page 1E-10)
Driveshaft oil seal retainer bolt	10	1.0	7.5	☞ (Page 1E-10)
Piston cooling jet bolt	10	1.0	7.5	☞ (Page 1E-11)
Oil pump mounting bolt	10	1.0	7.5	☞ (Page 1E-12)
Oil separator screw	10	1.0	7.5	☞ (Page 1E-13)
Transmission oil guide retainer screw	8.4	0.86	6.20	☞ (Page 1E-14)

#### Reference:

For the tightening torques of fasteners not specified in this page, refer to: "Fasteners Information" in Section 0C (Page 0C-11)



## Special Tools and Equipment







### Recommended Service Material

BENH28K21508001

Material	SUZUKI recommended product or Specification		Note
Sealant	SUZUKI BOND 1207B	P/No.: 99000-31140	☞ (Page 1E-8)
Thread lock cement	THREAD LOCK CEMENT 1322D	P/No.: 99000-32150	☞ (Page 1E-11)
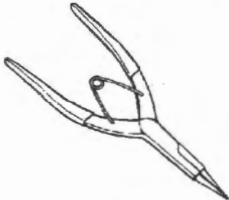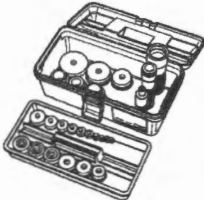
### Special Tool

BENH28K21508002

<p>09900-06107 Snap ring pliers (External) ☞ (Page 1E-11) / ☞ (Page 1E-12) / ☞ (Page 1E-12) / ☞ (Page 1E-13)</p>		<p>09913-70210 Bearing installer set ☞ (Page 1E-10)</p>	
<p>09915-40620 Oil filter wrench  ☞ (Page 1E-5) / ☞ (Page 1E-5)</p>		<p>09915-70610 Oil pressure gauge attachment ☞ (Page 1E-3)</p>	
<p>09915-74521 Oil pressure gauge hose  ☞ (Page 1E-3)</p>		<p>09915-77331 Oil pressure gauge (1000 kPa) ☞ (Page 1E-3)</p>	

# Engine Cooling System

## Precautions

### Precautions for Engine Cooling System

BENH28K21600001

Refer to "General Precautions" in Section 00 (Page 00-1) and "Precautions for Electrical Circuit Service" in Section 00 (Page 00-2).

#### ⚠ WARNING

- You can be injured by boiling fluid or steam if you open the radiator cap when the engine is hot. After the engine cools, wrap a thick cloth around cap and carefully remove the cap by turning it a quarter turn to allow pressure to escape and then turn the cap all the way off.
- The engine must be cool before servicing the cooling system.
- Coolant is harmful:
  - If it comes in contact with skin or eyes, flush with water.
  - If swallowed accidentally, do not induce vomiting and call physician immediately.
  - Keep it away from children.

### Precautions for Engine Coolant

BENH28K21600002

Refer to "Fuel / Oil / Fluid / Coolant Recommendation" in Section 0C (Page 0C-13).

## General Description

### Engine Coolant Description


BENH28K21601001

Refer to "Fuel / Oil / Fluid / Coolant Recommendation" in Section 0C (Page 0C-13).

## Schematic and Routing Diagram

### Cooling Circuit Diagram


BENH28K21602001

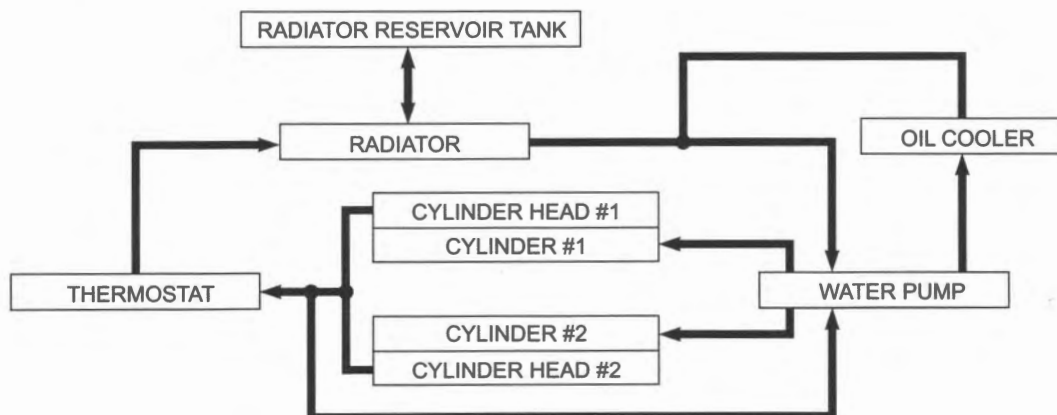

IH28K1160046-02



Water Hose Routing Diagram

BENH28K21602002

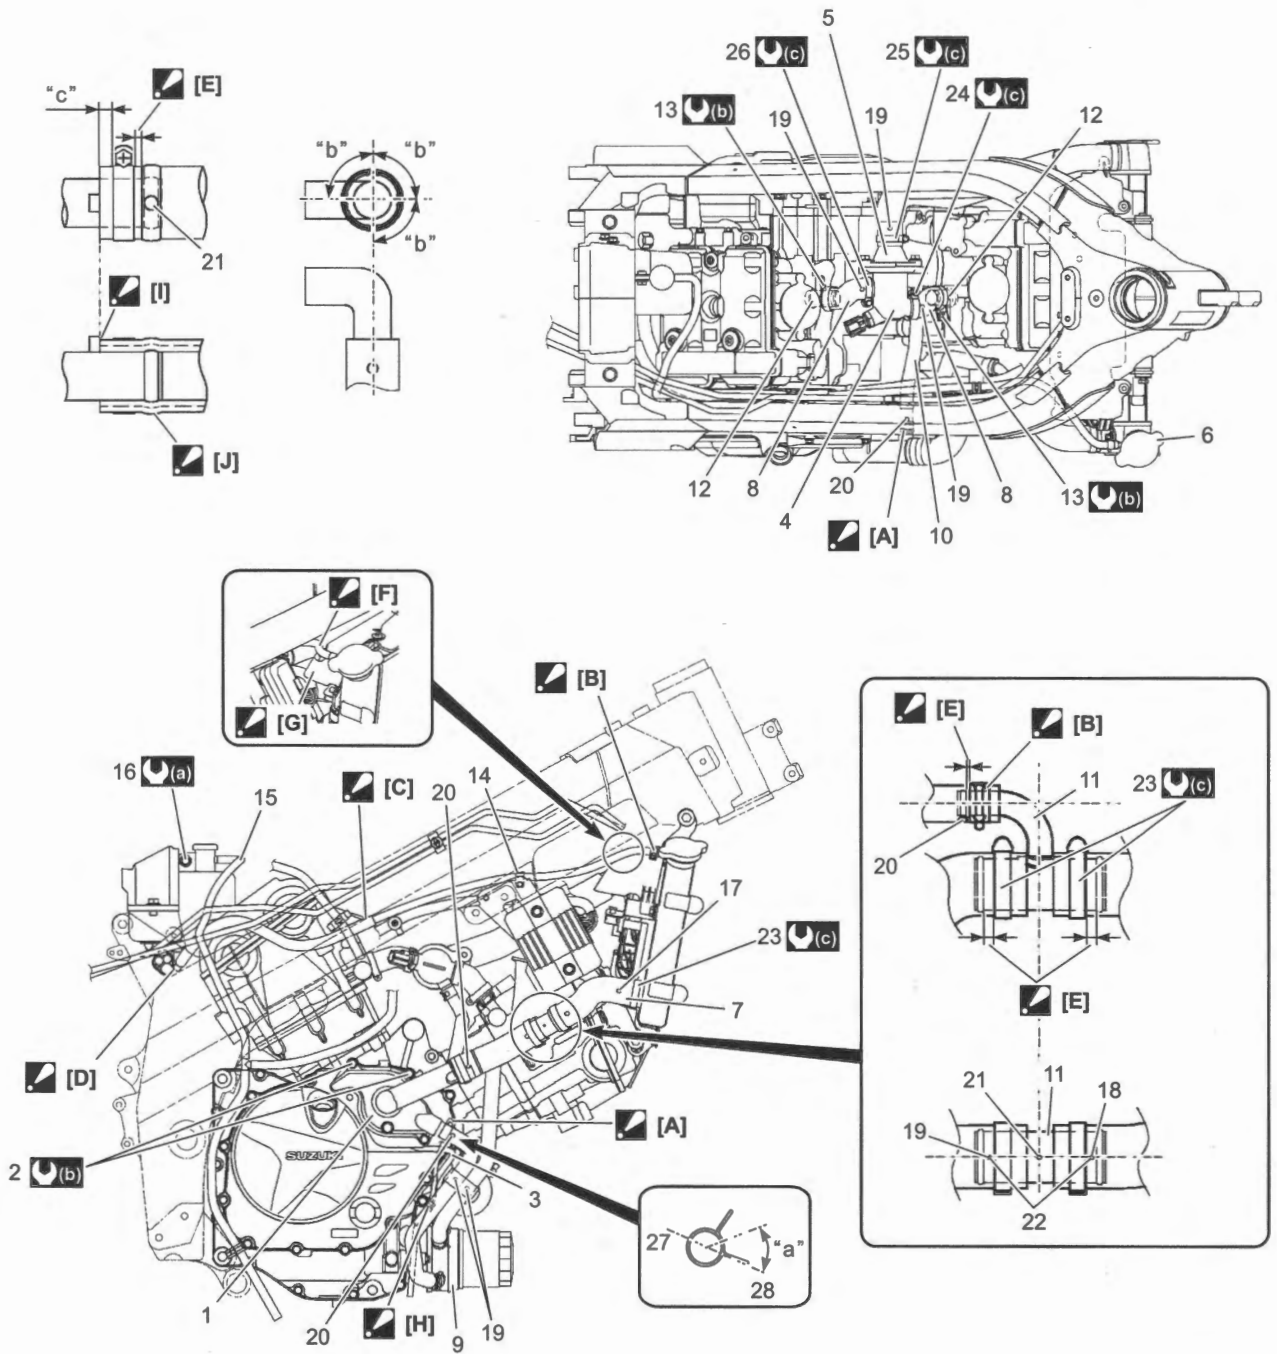

# 1F-3 Engine Cooling System:

☑ [A]: Face the clamp end upward.	13. Union bolt
☑ [B]: Face the clamp end downward.	14. Radiator reservoir tank hose clamp
☑ [C]: Pass the radiator reservoir tank inlet hose left side of the high-tension cord.	15. Radiator reservoir tank overflow hose
☑ [D]: Pass the radiator reservoir tank inlet hose in front of the wire harness and fuel tank hose.	16. Radiator reservoir tank bolt
☑ [E]: Clearance	17. Pink marking
☑ [F]: Pass the radiator reservoir tank inlet hose into the concave part of the radiator heat shield.	18. Radiator hose side: Light blue marking
☑ [G]: The concave part of the radiator heat shield.	19. Radiator hose, connector inlet hose and oil cooler hoses side: White marking
☑ [H]: Clamp the water pump drain hose and oil pressure switch lead wire.	20. Yellow marking
☑ [I]: Insert the hose end to the stopper.	21. Match mark
☑ [J]: Without hose stopper, the match mark position on the bulge.	22. Water hose three-way union side: White marking
1. Water pump assembly	23. Water hose clamp : Face the screw head lower left side.
2. Water pump case bolt	24. Water hose clamp : Face the screw head upper left side.
3. Water pump drain hose	25. Water hose clamp : Face the screw head upper front side.
4. Thermostat inlet connector	26. Water hose clamp : Face the screw head upper right side.
5. Thermostat connector cap	27. Right side
6. Radiator cap	28. Left side
7. Radiator outlet No. 1 hose	"a": 0 - 45°
8. Connector inlet hose	"b": 90°
9. Oil cooler assembly	"c": 2.0 - 8.0 mm (0.08 - 0.30 in)
10. Connector to water pump hose	☑ (a) : 5.5 N-m (0.56 kgf-m, 4.05 lbf-ft)
11. Water hose three-way union	☑ (b) : 10 N-m (1.0 kgf-m, 7.5 lbf-ft)
12. Connector hose union	☑ (c) : 1.5 N-m (0.15 kgf-m, 1.10 lbf-ft)

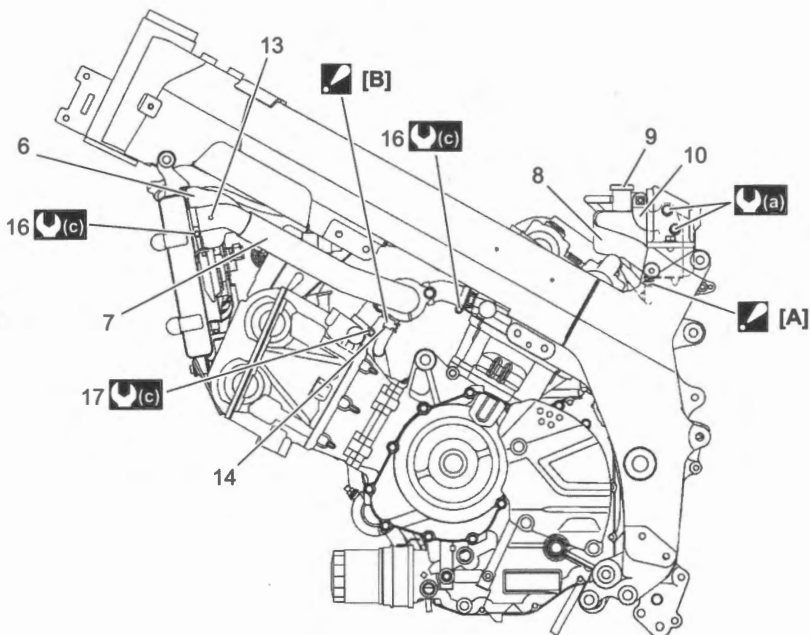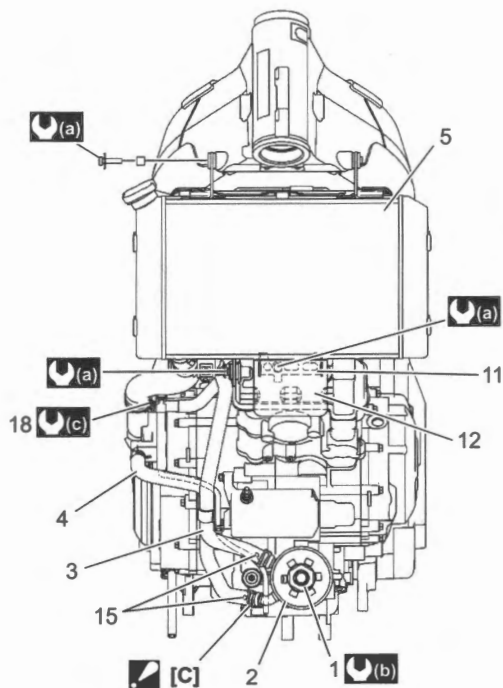

<input checked="" type="checkbox"/> [A]: Face the clamp end left side.	10. Radiator reservoir tank bracket
<input checked="" type="checkbox"/> [B]: Face the clamp end backward.	11. Radiator under rubber bracket
<input checked="" type="checkbox"/> [C]: Face the clamp end forward.	12. Radiator heat rubber
1. Oil cooler union bolt	13. Yellow marking
2. Oil cooler assembly	14. White marking
3. Oil cooler inlet hose	15. Red marking
4. Oil cooler outlet hose	16. Water hose clamp : Face the screw head lower left side.
5. Radiator assembly	17. Water hose clamp : Face the screw head left back side.
6. Radiator heat shield	18. Water hose clamp : Face the screw head left lower side.
7. Radiator inlet hose	(a) : 10 N·m (1.0 kgf·m, 7.5 lbf·ft)
8. Radiator reservoir tank	(b) : 70 N·m (7.1 kgf·m, 52.0 lbf·ft)
9. Radiator reservoir tank cap	(c) : 1.5 N·m (0.15 kgf·m, 1.10 lbf·ft)

## Diagnostic Information and Procedures

### Engine Cooling Symptom Diagnosis

BENH28K21604001


Condition	Possible cause	Correction / Reference Item
<b>Engine overheats</b>	Not enough engine coolant.	Add engine coolant.  (Page 1F-5)
	Radiator core clogged with dirt or scale.	Clean.  (Page 1F-10)
	Faulty cooling fan.	Repair or replace.  (Page 1F-7)
	Defective cooling fan relay, or open-or-short circuited.	Repair or replace.  (Page 1F-12)
	Clogged water passage.	Clean.
	Air trapped in the cooling circuit.	Bleed air.  (Page 1F-5)
	Defective water pump.	Replace.  (Page 1F-16)
	Use of incorrect engine coolant.	Replace.  (Page 1F-5)
	Defective thermostat.	Replace.  (Page 1F-12)
	Defective ECT sensor.	Replace.  (Page 1C-7)
Defective ECM.	Replace.  (Page 1C-4)	
<b>Engine over cools</b>	Defective cooling fan relay, or open-or-short circuited.	Repair or replace.  (Page 1F-12)
	Extremely cold weather.	Put on radiator cover.
	Defective thermostat.	Replace.  (Page 1F-12)
	Defective ECT sensor.	Replace.  (Page 1C-7)
	Defective ECM.	Replace.  (Page 1C-4)

## Repair Instructions

### Engine Coolant Level Inspection

BENH28K21606001

- 1) Keep the motorcycle upright.
- 2) Remove the seat. (Page 9D-19)
- 3) Remove the right side cowling. (Page 9D-25)
- 4) Check the engine coolant level by observing the "F" (1) and "L" (2) lines on the engine coolant reservoir tank. If the level is below the "L" line, lift and support the fuel tank. (Page 1G-10)  
Then add engine coolant to the bottom of "F" line from the engine coolant reservoir tank filler.

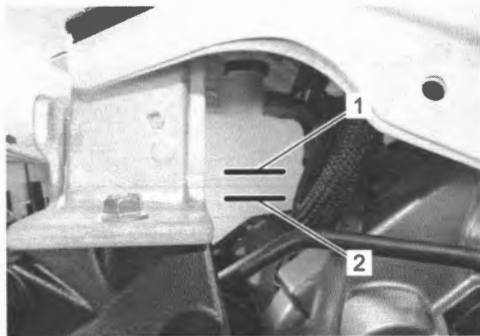


IH28K1160003-01

### Engine Coolant Replacement

BENH28K21606002

Refer to "Engine Coolant Description" (Page 1F-1).

- 1) Support the motorcycle upright.
- 2) Remove the right side cowling. (Page 9D-25)
- 3) Remove the radiator cap.
- 4) Remove the water drain bolt (1) and drain engine coolant.

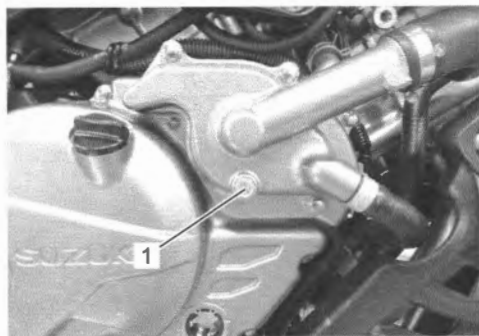


IH28K1160004-01

- 5) Flush the radiator with fresh water if necessary.
- 6) Install the new gasket washer to water drain bolt.

- 7) Tighten the water drain bolt (1) to the specified torque.

#### Tightening torque

**Water drain bolt (a): 13 N·m (1.3 kgf-m, 9.5 lbf-ft)**

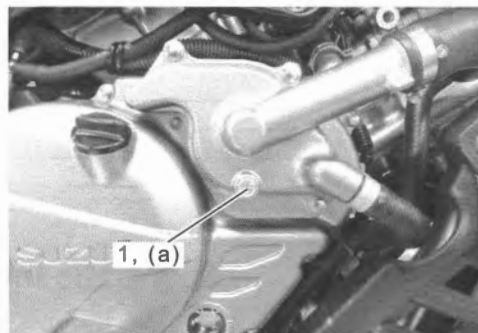

IH28K1160005-01

- 8) Pour the specified engine coolant up to the radiator inlet.

#### Engine coolant

**Engine side [Standard]: Approx. 1700 ml (1.80 US qt, 1.50 Imp qt)**

**Reserve tank side [Standard]: Approx. 250 ml (0.26 US qt, 0.22 Imp qt)**



IH28K1160006-01

- 9) Slowly swing the motorcycle, right and left, to bleed the air trapped in the cooling circuit.
- 10) Add engine coolant up to the radiator inlet.
- 11) Start up the engine and bleed air from the radiator inlet completely.
- 12) Add engine coolant up to the radiator inlet.
- 13) Repeat the 8), 9) procedures until no air bleeds from the radiator inlet.
- 14) Close the radiator cap securely.
- 15) After warming up and cooling down the engine several times, add the engine coolant up to the "F" level of the reservoir tank. (Page 1F-5)
- 16) Install the right side cowling. (Page 9D-25)

### Engine Cooling System Inspection

BENH28K21606003

- 1) Remove the right side cowling. (Page 9D-25)
- 2) Remove the radiator cap.
- 3) Connect the special tool to the filler.
- 4) Pressurize the cooling system with approx. 123 kPa (1.3 kgf/cm<sup>2</sup>, 17.8 psi) of pressure, and then check if it holds the pressure for 10 seconds.


**NOTICE**

Do not exceed the radiator cap release pressure, or the radiator cap and subsequently the radiator, can be damaged.

**Special tool**

(A): 09918-78211

(B): 09918-78220

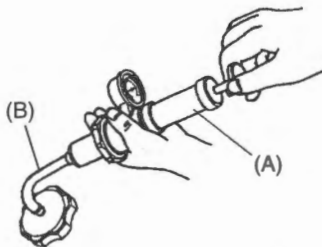

ID26J1160006-05

- 5) Install the radiator cap.
- 6) Install the right side cowling. (Page 9D-25)

### Radiator Cap Inspection

BENH28K21606004

- 1) Remove the right side cowling. (Page 9D-25)
- 2) Remove the radiator cap (1).



IH28K1160007-01

- 3) Attach the radiator cap (1) to the special tool.
- 4) Slowly apply pressure to the radiator cap. If the radiator cap does not hold the pressure for at least 10 seconds, replace it with a new one.


**Radiator cap valve opening pressure**

[Standard]: 93.3 – 122.7 kPa (1.0 – 1.3 kgf/cm<sup>2</sup>, 13.5 – 17.8 psi)

**Special tool**

(A): 09918-78211

(B): 09918-78220

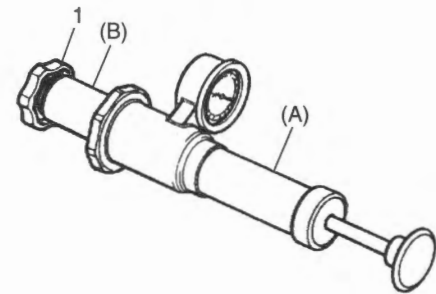


ID26J1160007-04

- 5) Install the radiator cap.
- 6) Install the right side cowling. (Page 9D-25)

### Cooling Fan On-Vehicle Inspection

BENH28K21606005

- 1) Disconnect the cooling fan motor coupler (1).

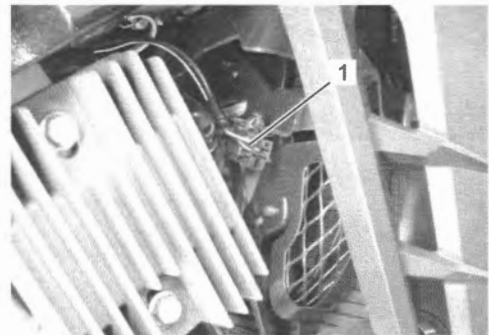

IH28K1160008-01

- 2) Test the cooling fan motor (3) for load current with an ammeter (2) connected. If the fan motor does not turn, replace the cooling fan assembly with a new one. (Page 1F-7)


**NOTE**

- When making this test, it is not necessary to remove the cooling fan.
- Make sure that the battery (1) has a capacity enough to supply the motor with 12 V.
- With the motor running at full speed, the ammeter should indicate an amperage not higher than 5 A.

**Cooling fan operating temperature**

OFF→ON [Standard]: 105 °C (221 °F)

ON→OFF [Standard]: 99 °C (210 °F)

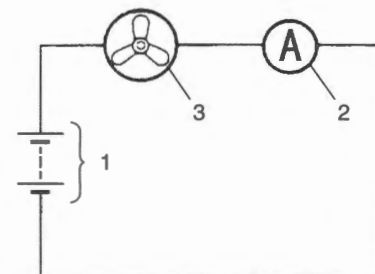

ID26J1160029-01


## 1F-7 Engine Cooling System:

- 3) After finishing the cooling fan inspection, connect the cooling fan motor coupler.

### Radiator Hose Inspection

BENH28K21606006

- 1) Remove the side cowlings. (Page 9D-25)
- 2) Check the radiator hoses for crack, damage or engine coolant leakage. If any defect is found, replace the radiator hose with a new one.
- 3) Any leakage from the connecting section (1) should be corrected by proper tightening. (Page 1F-2)

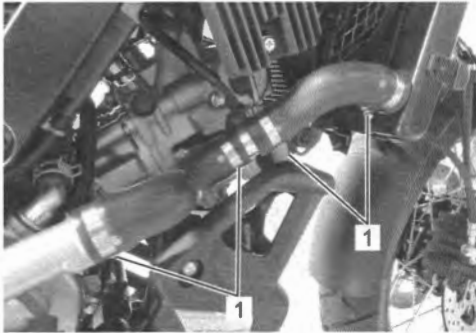

IH28K1160009-01



IH28K1160010-01


- 4) Install the side cowlings. (Page 9D-25)

### Radiator / Cooling Fan Motor Removal and Installation

BENH28K21606007


#### Removal

- 1) Drain engine coolant. (Page 1F-5)
- 2) Remove the side cowlings. (Page 9D-25)
- 3) Disconnect the cooling fan motor coupler (1).
- 4) Disconnect the radiator outlet hose (2) and radiator reservoir tank inlet hose (3).

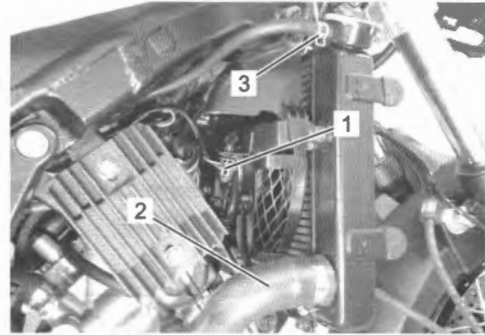


IH28K1160012-01

- 5) Disconnect the radiator inlet hose (1) and horn coupler (2).

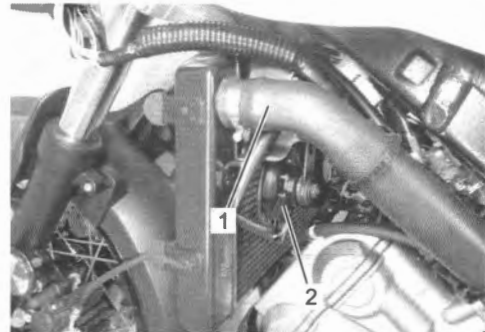


IH28K1160013-02

- 6) Remove the bolts (1) and move the front brake hose clamp (2).

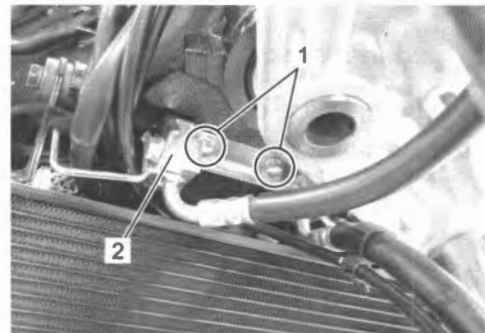

IH28K1160011-01


- 7) Remove the radiator mounting bolts (1).

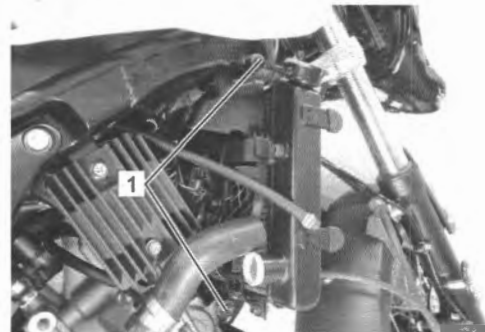

IH28K1160014-01




- 8) Detach the radiator from the mount (1) and then remove the radiator assembly (2).

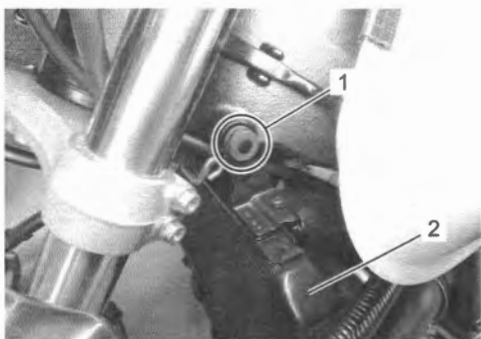

IH28K1160015-02

- 9) Detach the right handle switch coupler clamp (1).  
 10) Detach the ignition switch lead wire coupler and immobilizer coupler (if equipped) lead wire clamp (2).

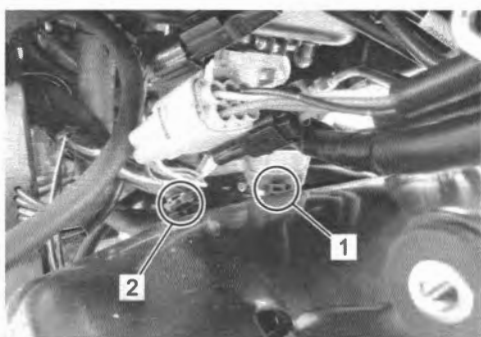


IH28K1160016-01

- 11) Detach the left handle switch coupler clamps (1).




IH28K1160017-01

- 12) Remove the radiator heat shield (1).

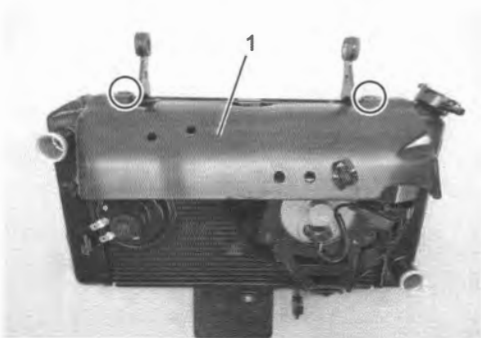


IH28K1160018-01

- 13) Remove the horn (1).

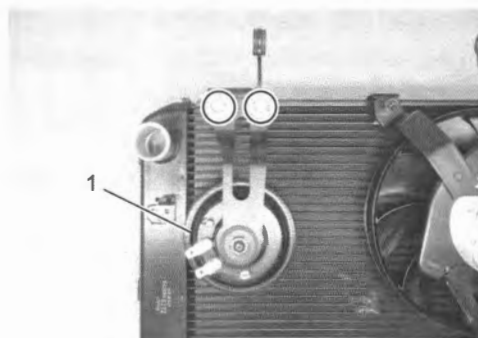


IH28K1160019-01

- 14) Remove the cooling fan assembly (1).

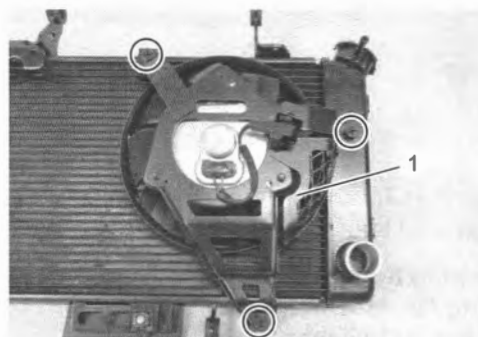


IH28K1160020-01

- 15) Remove the radiator heat rubber (1) and radiator under rubber bracket (2).

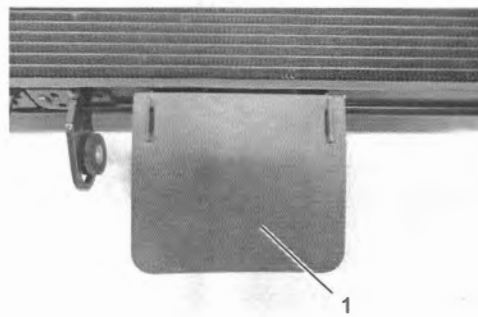

IH28K1160021-01

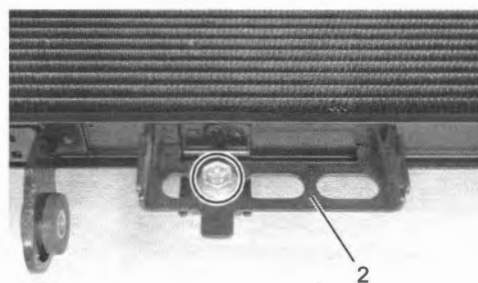

IH28K1160022-01

## 1F-9 Engine Cooling System:


### Installation

Install the radiator and cooling fan motor in the reverse order of removal. Pay attention to the following points:

- Tighten the radiator under rubber bracket bolt (1) to the specified torque.

#### Tightening torque


**Radiator under rubber bracket bolt (a): 10 N·m (1.0 kgf-m, 7.5 lbf-ft)**

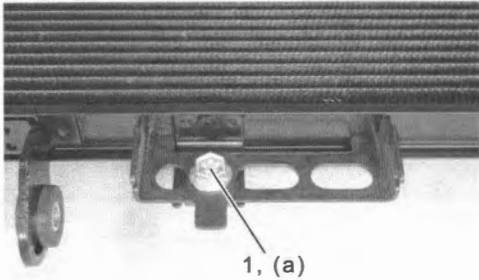


- Tighten the cooling fan assembly mounting bolts (1) to the specified torque.

#### Tightening torque

**Cooling fan assembly mounting bolt (a): 4.9 N·m (0.50 kgf-m, 3.65 lbf-ft)**

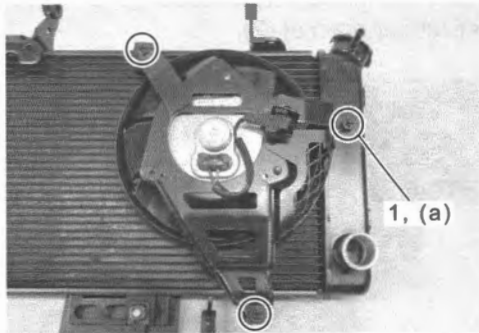


- Fit the projection (1) to the radiator and slit (2) to the cooling fan bracket.

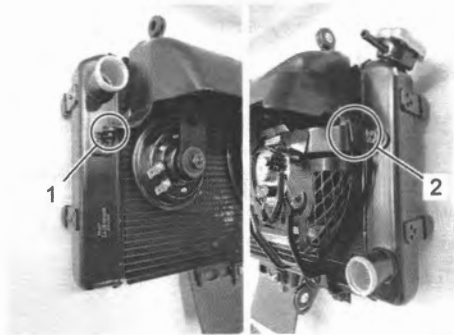

- Tighten the radiator mounting bolts (1) to the specified torque.

#### Tightening torque


**Radiator mounting bolt (a): 10 N·m (1.0 kgf-m, 7.5 lbf-ft)**

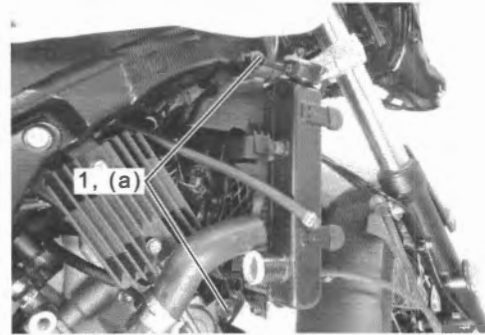

- Install the radiator reservoir tank mounting bolts (1) to the specified torque.

#### Tightening torque

**Radiator reservoir tank mounting bolt (a): 10 N·m (1.0 kgf-m, 7.5 lbf-ft)**

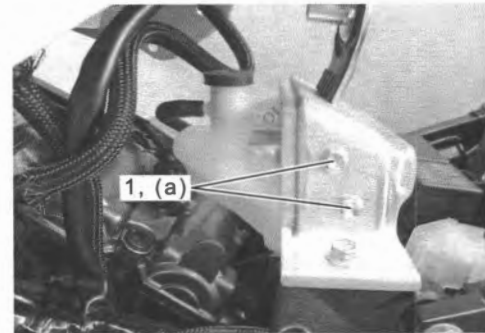


- Connect the radiator hoses securely. (Page 1F-2)
- Pour engine coolant and bleed air from the cooling system. (Page 1F-5)

## Radiator Inspection and Cleaning

BENH28K21606008

### Inspection

- 1) Inspect the radiator for coolant leaks. If any defects are found, replace the radiator with a new one. (Page 1F-7)
- 2) If the fins are bent or dented, repair them by carefully straightening them with the blade of a small screwdriver.

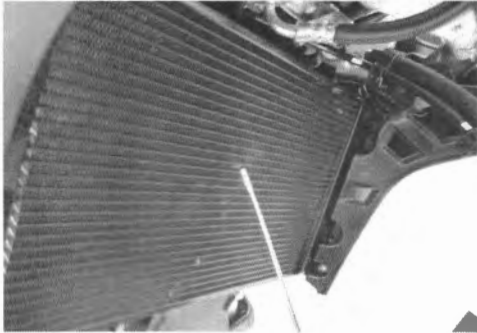

IH28K1160027-01

### Cleaning

Blow out any foreign matter that is stuck in the radiator fins using compressed air.

#### NOTICE

- Do not bend the fins when using compressed air.
- Apply compressed air from the engine side. If compressed air is applied from the other side, dirt will be forced into the pores of radiator.




IH28K1160028-01

## Radiator Reservoir Tank Inspection

BENH28K21606009

- 1) Lift and support the fuel tank. (Page 1G-10)
- 2) Inspect the radiator reservoir tank (1) coolant leaks. If any defects are found, replace the radiator reservoir tank with a new one. (Page 1F-10)

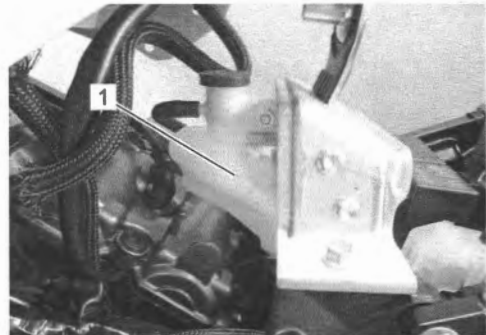


IH28K1160029-01

## Radiator Reservoir Tank Removal and Installation

BENH28K21606010


### Removal

- 1) Lift and support the fuel tank. (Page 1G-10)
- 2) Remove the radiator reservoir tank mounting bolts (1).

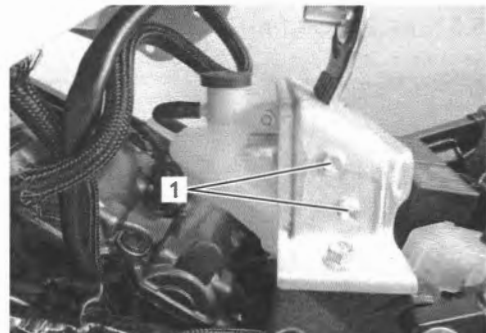

IH28K1160030-01


- 3) Disconnect the radiator reservoir tank inlet hose (1), overflow hose (2) and drain the engine coolant.
- 4) Remove the radiator reservoir tank (3).

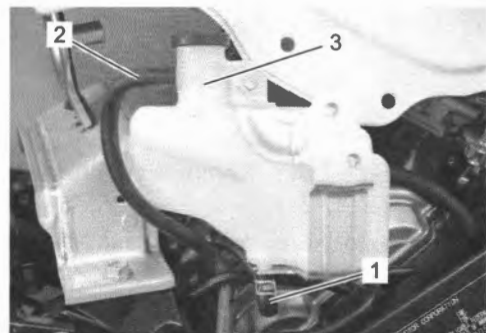

IH28K1160032-01

## 1F-11 Engine Cooling System:

- 5) Remove the radiator reservoir tank mounting bracket (1).

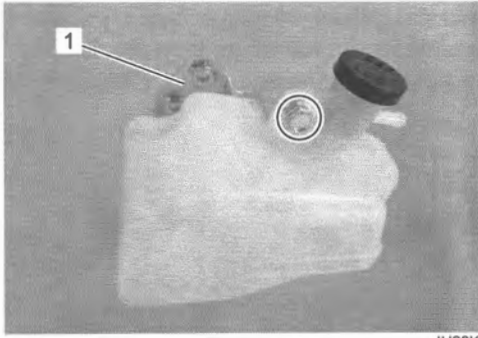

IH28K1160033-01

### Installation

Install radiator reservoir tank in the reverse order of removal. Pay attention to the following points:


- Apply thread lock to the radiator reservoir tank mounting bracket bolt (1).

**“A”:** Thread lock cement 99000-32150 (THREAD LOCK CEMENT 1322D)

- Tighten the radiator reservoir tank mounting bracket bolt (1) to the specified torque.

### Tightening torque

**Radiator reservoir tank mounting bracket bolt (a):** 5.5 N·m (0.56 kgf-m, 3.70 lbf-ft)

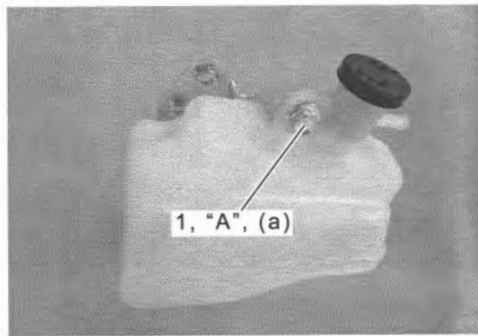

IH28K1160034-03

- Install the radiator reservoir tank. Refer to “Water Hose Routing Diagram” (Page 1F-2).
- Fill the radiator reservoir tank to the “F” line. ☞ (Page 1F-5)


### Water Hose Inspection

BENH28K21606011


Refer to “Front Side Cover Removal and Installation” in Section 9D (Page 9D-24).

- 1) Check the water hoses for crack, damage or engine coolant leakage. If any defect is found, replace the radiator hose with a new one.

- 2) Any leakage from the connecting section (1) should be corrected by proper tightening. ☞ (Page 1F-2)

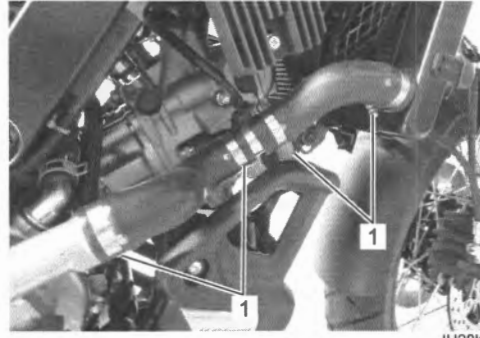


IH28K1160009-01

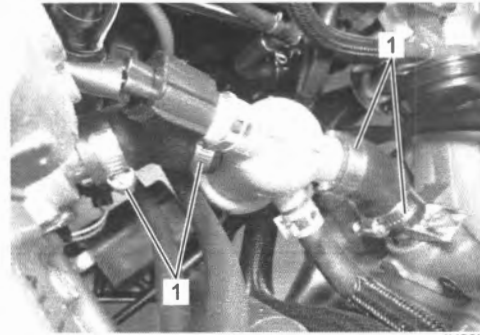

IH28K1160035-01



IH28K1160036-01

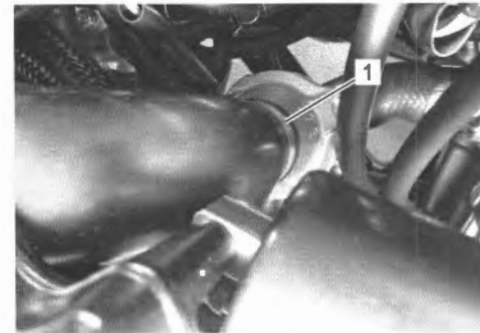

IH28K1160037-01

### Water Hose Removal and Installation

BENH28K21606012

Refer to "Water Hose Routing Diagram" (Page 1F-2).

#### Removal

- 1) Drain engine coolant. (Page 1F-5)
- 2) Remove the throttle body. (Page 1D-9)
- 3) Remove the water hoses.

#### Installation

- 1) Install the water hose. Refer to "Water Hose Routing Diagram" (Page 1F-2).
- 2) Pour engine coolant and bleed air from the cooling circuit. (Page 1F-5)
- 3) Install the removed parts.

### Cooling Fan Relay Inspection


BENH28K21606013

- 1) Turn the ignition switch OFF.
- 2) Remove the seat. (Page 9D-19)
- 3) Remove the cap and cooling fan relay (1).



IH28K1160038-01

- 4) First check for insulation with a circuit tester between terminals (3) and (4). Next, check for continuity between (3) and (4) with 12 V voltage applied, positive (+) to terminal (1) and negative (-) to terminal (2). If continuity does not exist, replace the relay with a new one.

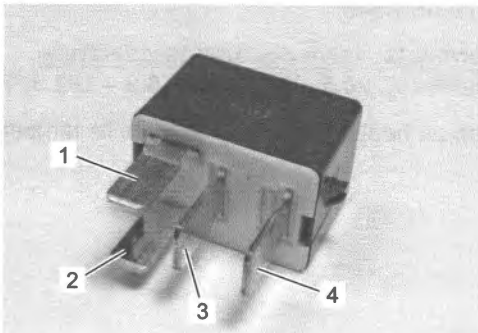

IE31J1160038-01


- 5) Install the removed parts.

### Thermostat Removal and Installation

BENH28K21606014

#### Removal

- 1) Drain engine coolant. (Page 1F-5)
- 2) Release the wire harness clamp (1).

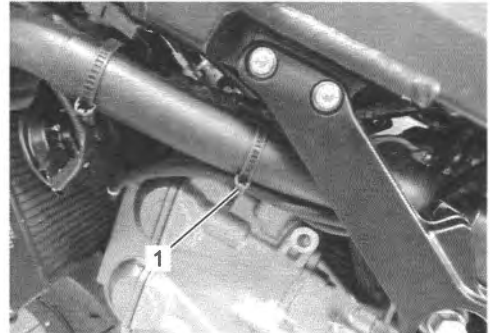

IH28K1160039-01

- 3) Place a rag under the thermostat connector cap (1) and then remove the thermostat connector cap (1).



IH28K1160040-01

- 4) Remove the thermostat (1).




IH28K1160041-01

**Installation**

- 1) Install the thermostat (1).

**NOTE**

The jiggle valve (2) of the thermostat faces upside.

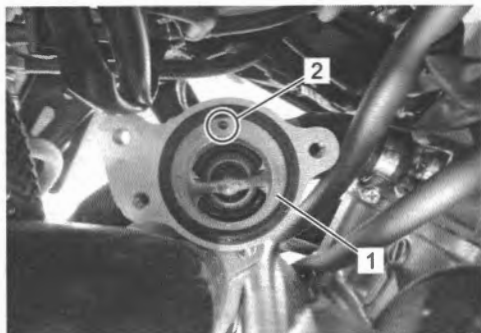

IH28K1160042-01

- 2) Install the thermostat connector cap (1) and tighten the bolts (2) to the specified torque.

**Tightening torque**

Thermostat connector cap bolt (a): 10 N·m (1.0 kgf-m, 7.5 lbf-ft)



IH28K1160043-01

- 3) Pour engine coolant and bleed air from the cooling system. (Page 1F-5)
- 4) Connect the wire harness clamp (1).



IH28K1160039-01

**Thermostat Inspection**

BENH28K21606015


Refer to "Thermostat Removal and Installation" (Page 1F-12).

- 1) Inspect the thermostat pellet for signs of cracking.
- 2) Test the thermostat at the bench for control action.

**NOTE**

- Do not contact the thermostat (1) and the column thermometer (2) with a pan.
- As the thermostat operating response to water temperature change is gradual, do not raise water temperature too quickly.
- The thermostat with its valve open even slightly under normal temperature must be replaced.

- 3) Immerse the thermostat (1) in the water contained in a beaker and note that the immersed thermostat is in suspension.
- 4) Heat the water by placing the beaker on a heater (3) and observe the rising temperature on a thermometer (2).

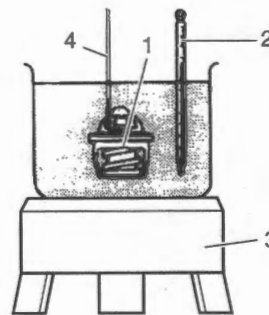

ID26J1160035-04

4. String

- 5) Read the thermometer just when opening the thermostat. If this reading, which is the temperature level at which the thermostat valve begins to open, is out of the standard value, replace the thermostat with a new one.

**Thermostat valve opening temperature**


[Standard]: 80.5 – 83.5 °C (176.9 – 182.3 °F)

- 6) Keep on heating the water to raise its temperature.

7) Just when the water temperature reaches specified value, the thermostat valve should have been lifted by at least 8 mm (0.3 in) "a". A thermostat failing to satisfy either of the two requirements (start-to-open temperature and valve lift) must be replaced.

**Thermostat valve lift**


At 95 °C (203 °F) [Standard]: 8.0 mm (0.3 in) or more

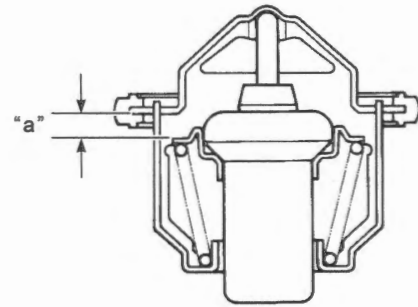

I944H1160022-01

**Water Pump Assembly Components**

BENH28K21606016

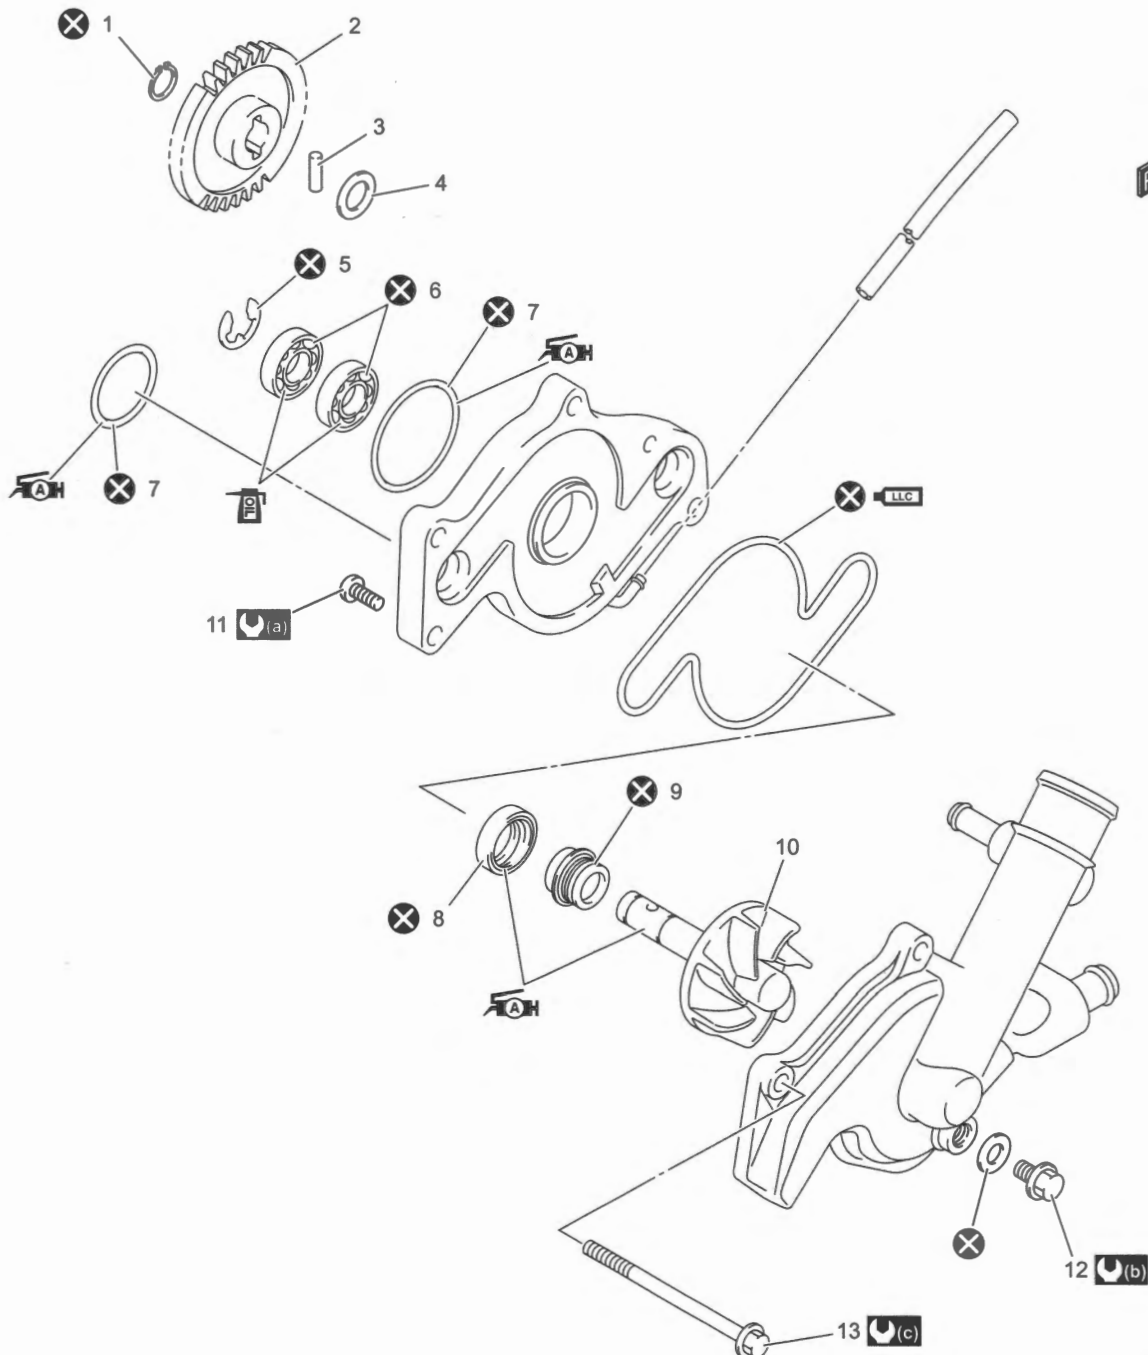

IH28K1160047-01

## 1F-15 Engine Cooling System:

1. Snap ring	6. Bearing	11. Water pump case screw	(c) : 10 N-m (1.0 kgf-m, 7.5 lbf-ft)
2. Water pump driven gear	7. O-ring	12. Water drain bolt	(A) : Apply grease.
3. Pin	8. Oil seal	13. Water pump case bolt	: Apply engine coolant.
4. Washer	9. Mechanical seal ring	(a) : 4.5 N-m (0.46 kgf-m, 3.35 lbf-ft)	: Apply engine oil.
5. E-ring	10. Impeller	(b) : 13 N-m (1.3 kgf-m, 9.5 lbf-ft)	: Do not reuse.


### Water Pump Removal and Installation

BENH28K21606017

#### Removal

- 1) Drain engine oil. (Page 1E-4)
- 2) Drain engine coolant. (Page 1F-5)
- 3) Remove the clutch cover. (Page 5C-10)
- 4) Remove the snap ring (1), water pump driven gear (2), pin (3) and washer (4).

**Special tool**  
09900-06107

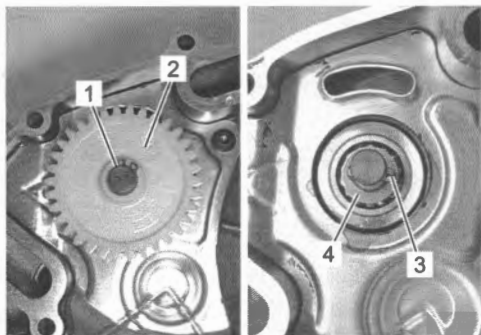

IH18K1160036-01

- 5) Remove the water pump (1).




IH18K1160037-01

#### Installation

- 1) Apply grease to the new O-rings (1).

**"A": Grease 99000-25011 (SUZUKI SUPER GREASE A)**


- 2) Install the water pump (2).

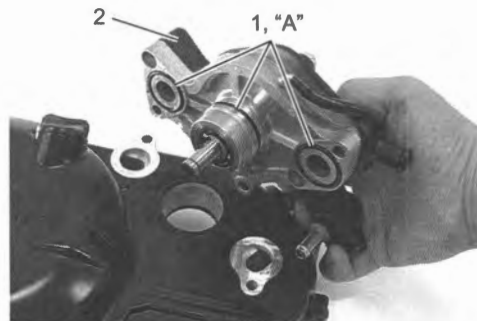

IH18K1160038-01

- 3) Install the washer (1), pin (2), water pump driven gear (3) and new snap ring (4).

**Special tool**  
09900-06107

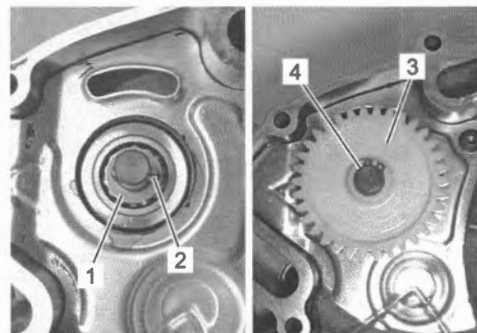

IH18K1160039-01

- 4) Install the clutch cover. (Page 5C-12)
- 5) Pour engine oil. (Page 1E-4)
- 6) Pour engine coolant and bleed air from the cooling system. (Page 1F-5)




**Water Pump Disassembly and Reassembly**

BENH28K21606018

Refer to "Water Pump Removal and Installation" (Page 1F-15).


**Disassembly**

- 1) Remove the O-rings (1).

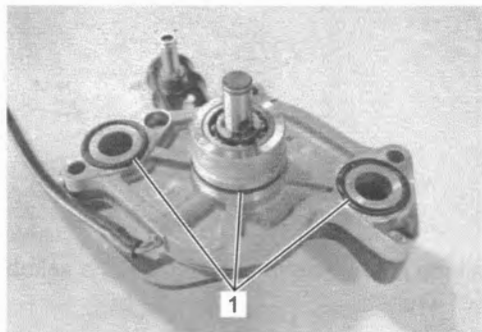


IH18K1160040-02

- 2) Remove the water pump holder (1).

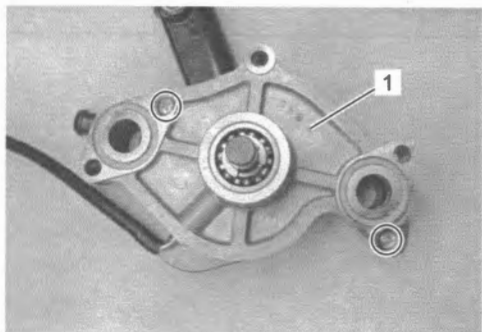


IH18K1160041-02

- 3) Remove the O-ring (1).

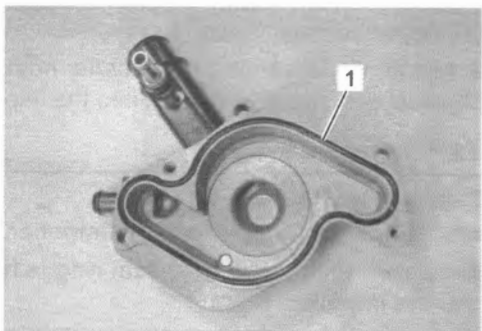


IH18K1160042-01

- 4) Remove the E-ring (1) and impeller (2).

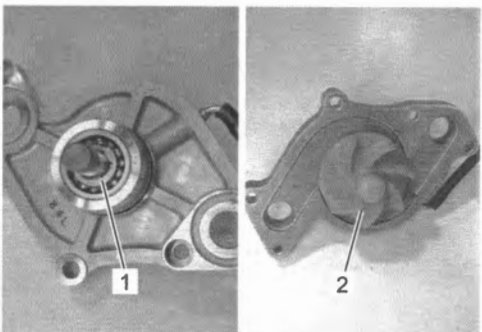

IH18K1160043-02

- 5) Remove the mechanical seal ring (1) and rubber seal (2).

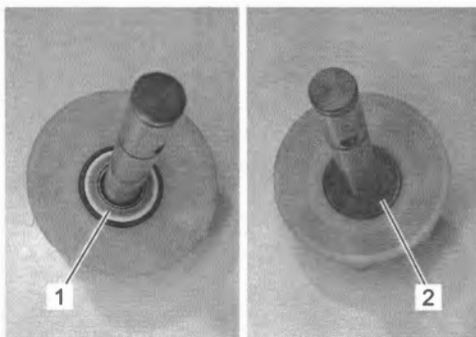


IH18K1160044-02

- 6) Remove the mechanical seal (1) using the special tool.


**Special tool**

(A): 09921-20240

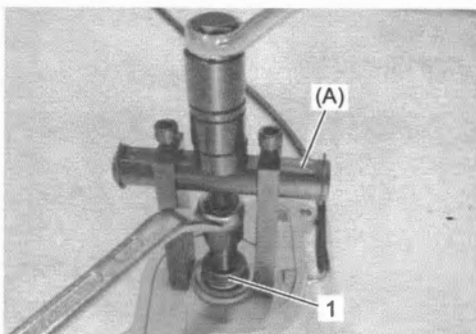

IH18K1160045-02

- 7) Remove the oil seal (1).

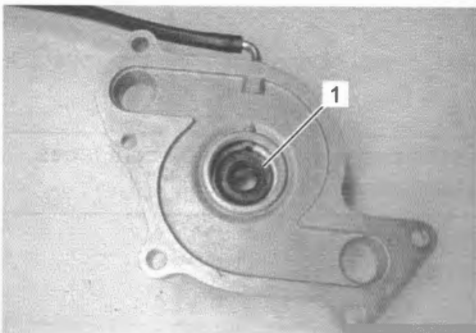


IH18K1160046-01

## 1F-17 Engine Cooling System:

8) Remove the bearings (1) using the special tool.

**Special tool**

**(A): 09921-20240**

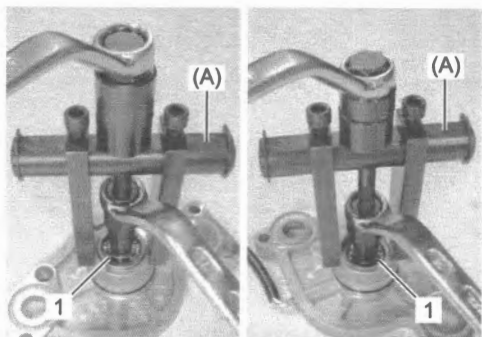


IH18K1160047-02

### Reassembly

1) Apply engine oil to the bearings and install the new bearings using the special tool.

**Special tool**

**(A): 09913-70210**

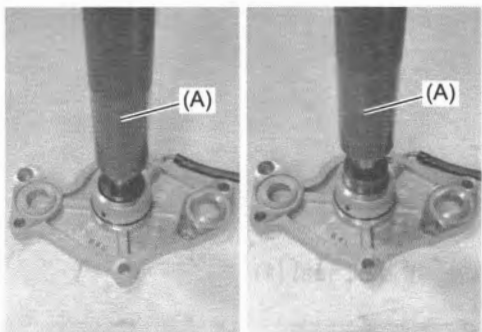

IH18K1160048-01


2) Install the new oil seal (1) using the special tool.

### NOTE

**The stamped mark on the oil seal faces mechanical seal side.**

**Special tool**

**(A): 09913-70210**

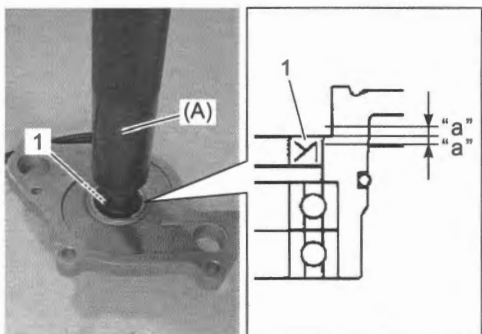


IH18K1160049-04

"a": Max. 0.5 mm (0.19 in) from the edge

3) Apply grease to the oil seal lip.

**"A": Grease 99000-25011 (SUZUKI SUPER GREASE A)**

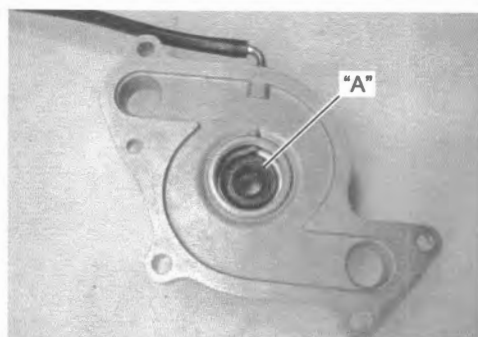


IH18K1160050-01

4) Install the new mechanical seal using a suitable size socket wrench.

### NOTE

**On the new mechanical seal, the sealer has been applied.**

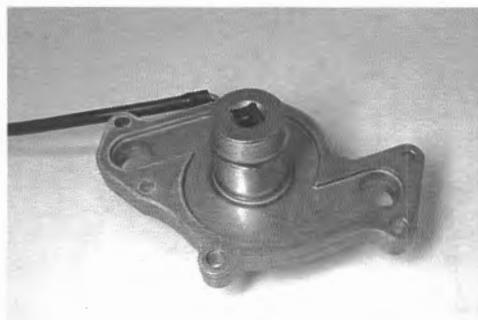


IH18K1160051-01

5) Install the rubber seal (1) into the impeller.

6) After wiping off the oily or greasy matter from the mechanical seal ring (2), install it into the impeller.

### NOTE

- The paint marked side (3) of the mechanical seal ring faces the impeller.
- Make sure the mechanical seal ring is fit into the impeller.

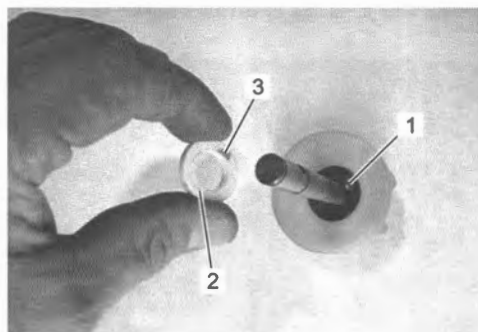


IH18K1160052-02

7) Apply grease to the impeller shaft.


**"A": Grease 99000-25011 (SUZUKI SUPER GREASE A)**

8) Install the impeller (1).

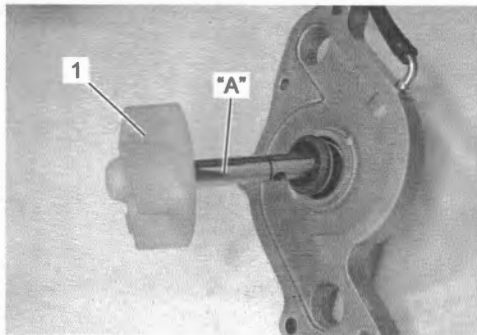


IH18K1160054-01

9) Install the new E-ring (1) to the impeller shaft.

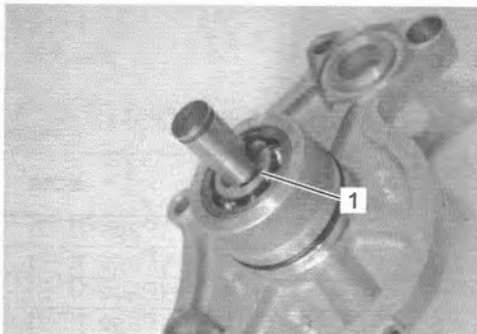

IH18K1160053-01

10) Install the new O-ring (1) and apply engine coolant to it.

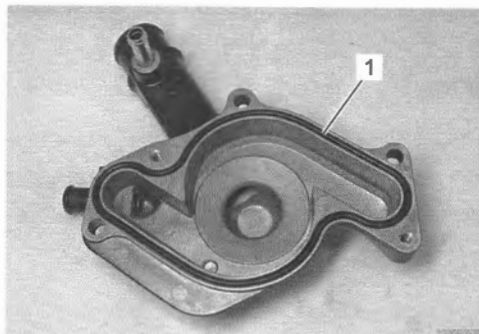


IH18K1160055-01

11) Install the water pump case and tighten the screws (1) to the specified torque.

**Tightening torque**

**Water pump case screw (a): 4.5 N·m (0.46 kgf-m, 3.35 lbf-ft)**

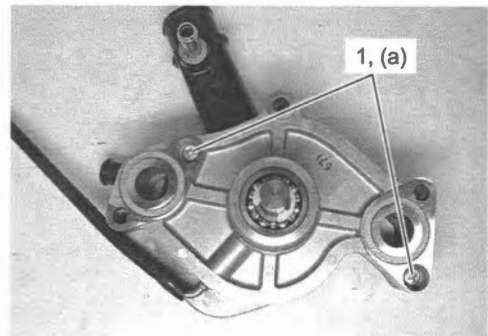

IH18K1160056-01

### Water Pump Related Parts Inspection


BENH28K21606019

Refer to "Water Pump Disassembly and Reassembly" (Page 1F-16).

#### Mechanical Seal

Visually inspect the mechanical seal (1) for damage, with particular attention given to the sealing face.

Replace the mechanical seal (1) that shows indications of leakage.

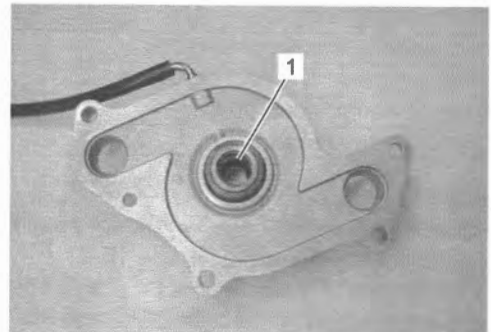


IH18K1160057-01

#### Oil Seal

Visually inspect the oil seal (1) for damage, with particular attention given to the lip.

Replace the oil seal (1) that shows indications of leakage.

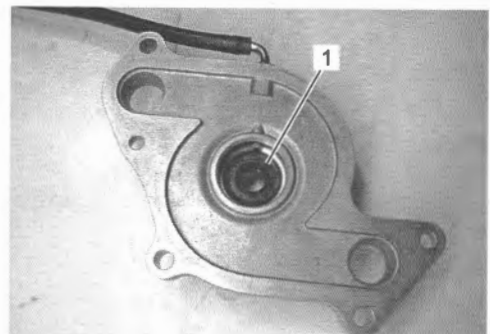


IH18K1160058-02

## 1F-19 Engine Cooling System:

### Bearing


Inspect the play of the outer bearings (1) and inner bearing by hand while it is in the water pump case. Rotate the inner race by hand to inspect for abnormal noise and smooth rotation. Replace the bearings (1) if necessary.

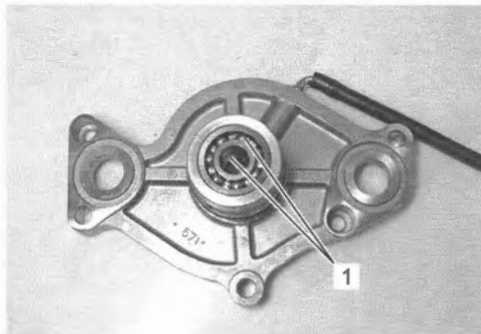

IH18K1160059-02

### Impeller

Visually inspect the impeller (1) and its shaft (2) for damage. Replace the impeller if necessary.

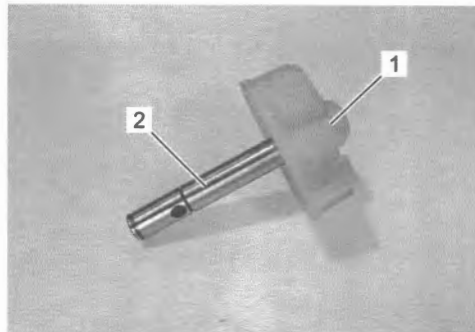

IH18K1160060-02

## Specifications

### Tightening Torque Specifications

BENH28K21607001

Fastening part	Tightening torque			Note
	N·m	kgf·m	lbf·ft	
Water drain bolt	13	1.3	9.5	☞(Page 1F-5)
Radiator under rubber bracket bolt	10	1.0	7.5	☞(Page 1F-9)
Cooling fan assembly mounting bolt	4.9	0.50	3.65	☞(Page 1F-9)
Radiator mounting bolt	10	1.0	7.5	☞(Page 1F-9)
Radiator reservoir tank mounting bolt	10	1.0	7.5	☞(Page 1F-9)
Radiator reservoir tank mounting bracket bolt	5.5	0.56	3.70	☞(Page 1F-11)
Thermostat connector cap bolt	10	1.0	7.5	☞(Page 1F-13)
Water pump case screw	4.5	0.46	3.35	☞(Page 1F-18)

### Reference:

For the tightening torques of fasteners not specified in this page, refer to:

“Water Hose Routing Diagram” (Page 1F-2)

“Water Pump Assembly Components” (Page 1F-14)

“Fasteners Information” in Section 0C (Page 0C-11)

## Special Tools and Equipment

### Recommended Service Material

BENH28K21608001



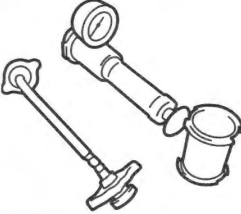
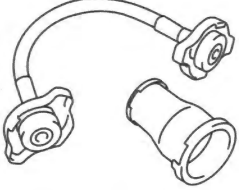
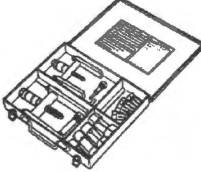
Material	SUZUKI recommended product or Specification	Note
Grease	SUZUKI SUPER GREASE A P/No.: 99000-25011	☞ (Page 1F-15) / ☞ (Page 1F-17) / ☞ (Page 1F-18)
Thread lock cement	THREAD LOCK CEMENT 1322D P/No.: 99000-32150	☞ (Page 1F-11)

**NOTE**

Required service material(s) is also described in:  
**“Water Pump Assembly Components” (Page 1F-14)**

### Special Tool

BENH28K21608002
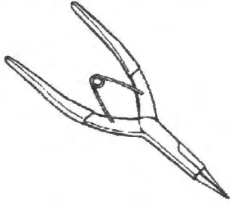
<p>09900-06107 Snap ring pliers (External) ☞ (Page 1F-15) / ☞ (Page 1F-15)</p> 	<p>09913-70210 Bearing installer set ☞ (Page 1F-17) / ☞ (Page 1F-17)</p> 
<p>09918-78211 Radiator cap tester kit ☞ (Page 1F-6) / ☞ (Page 1F-6)</p> 	<p>09918-78220 Radiator cap tester adapter ☞ (Page 1F-6) / ☞ (Page 1F-6)</p> 
<p>09921-20240 Bearing remover set ☞ (Page 1F-16) / ☞ (Page 1F-17)</p> 	

# Fuel System

## Precautions

### Precautions for Fuel System

BENH28K21700001

---

#### **▲ WARNING**

- Keep away from fire or spark.
  - During disassembling, use care to minimize spillage of gasoline.
  - Spilled gasoline should be wiped off immediately.
  - Work in a well-ventilated area.
- 

#### **▲ CAUTION**

- To prevent the fuel system (fuel tank, fuel hose, etc.) from contamination with foreign particles, blind all openings.
  - After removing the throttle body, tape the cylinder intake section to prevent foreign particles from entering.
-


## General Description

### Fuel System Description

BENH28K21701001

#### Fuel System

The fuel delivery system consists of the fuel tank (1), fuel pump (2) (including fuel pressure regulator (3)) and fuel filter (4), fuel feed hoses (5), fuel delivery pipes (6) and fuel injectors (7). There is no fuel return hose. The fuel in the fuel tank is pumped up by the fuel pump and pressurized fuel flows into the injectors installed in the fuel delivery pipes. Fuel pressure is regulated by the fuel pressure regulator. As the fuel pressure applied to the fuel injector (the fuel pressure in the fuel delivery pipe) is always kept at the specified level and fuel is injected into the throttle body in conic dispersion when the injector opens according to the injection signal from the ECM. The fuel relieved by the fuel pressure regulator flows back to the fuel tank.

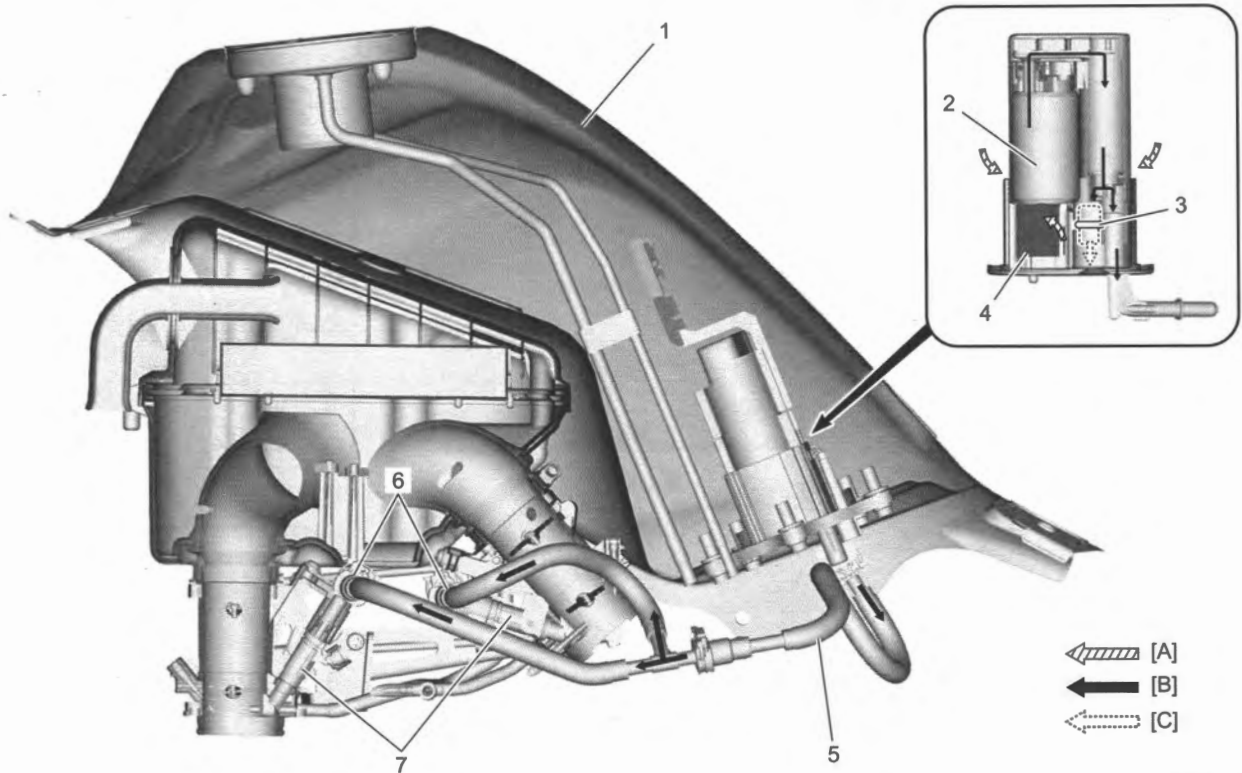

IH28K1170001-01


[A]: Before-pressurized fuel	[B]: Pressurized fuel	[C]: Relieved fuel
------------------------------	-----------------------	--------------------

# Schematic and Routing Diagram

## Fuel Tank Water Drain Hose and Fuel Tank Breather Hose Routing Diagram

BENH28K21702001

Without EVAP Control System

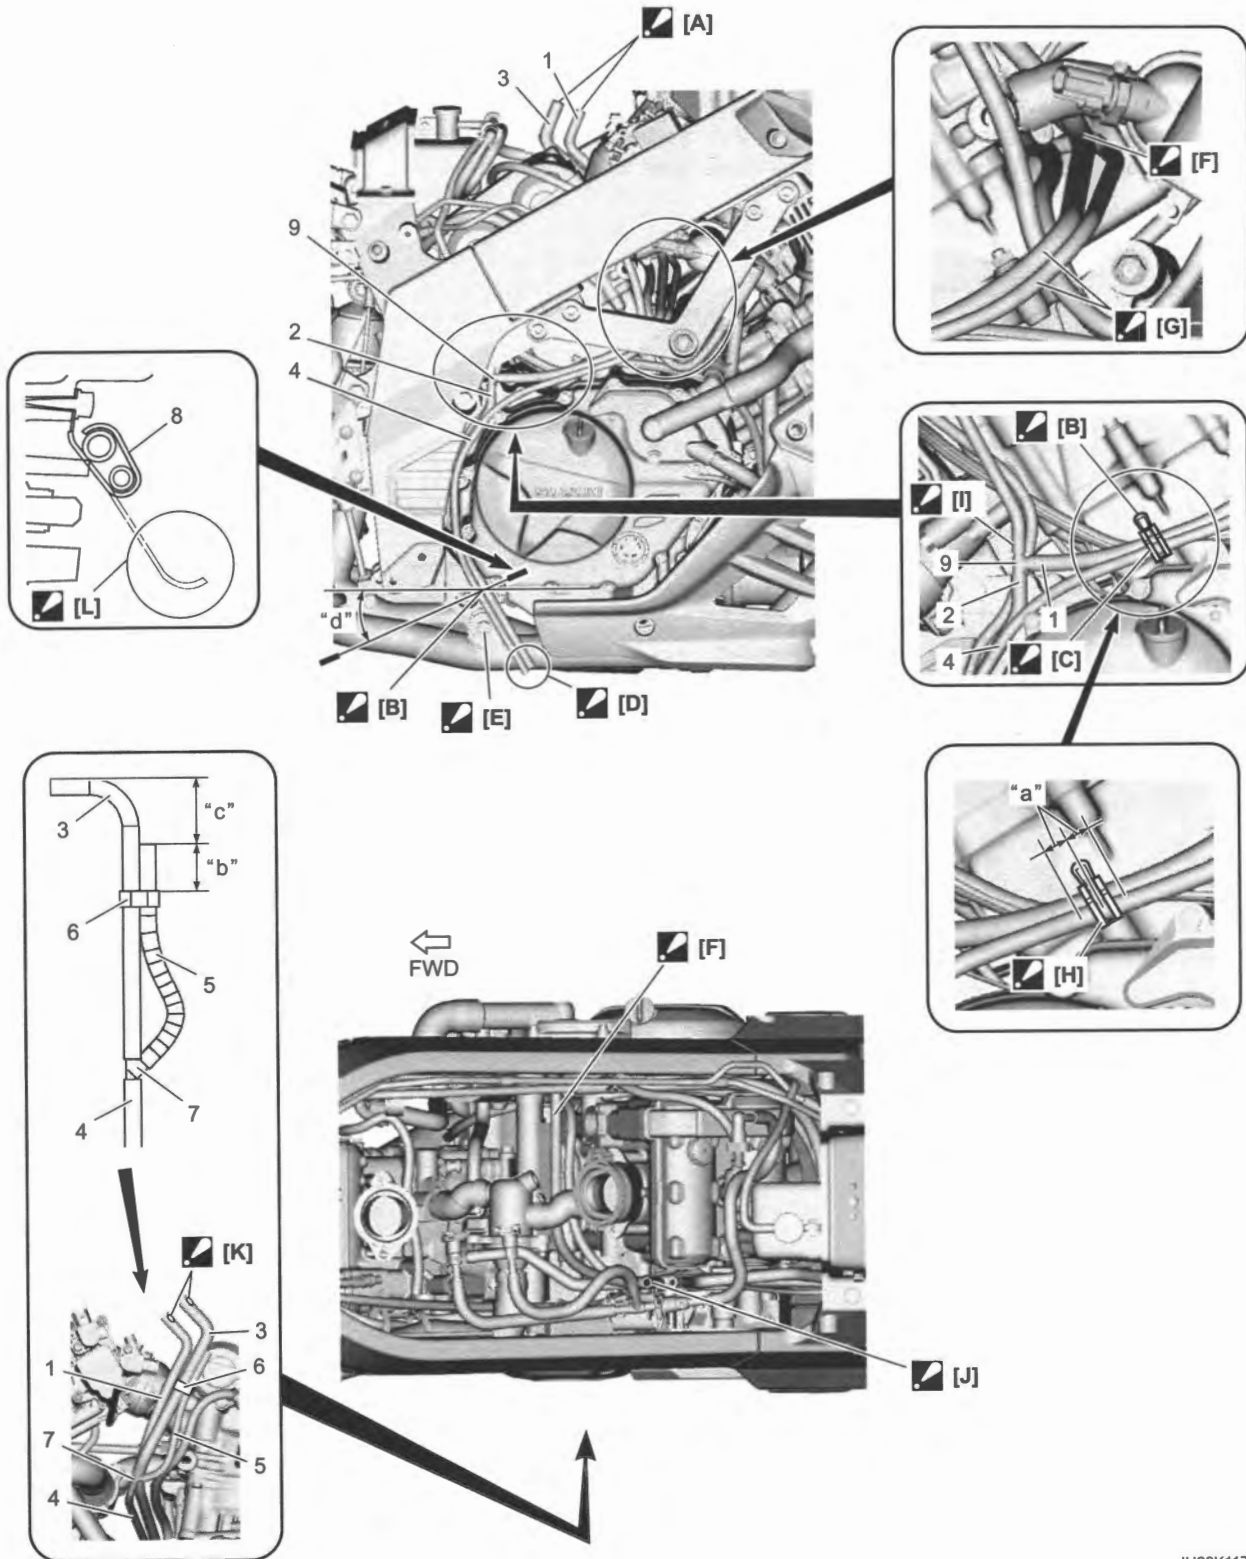




<input checked="" type="checkbox"/> [A]: Insert the tip of the hose to the bottom of tank nipple.	2. Fuel tank water drain hose No. 2
<input checked="" type="checkbox"/> [B]: Clamp the paint of the fuel tank water drain hose No. 2.	3. Fuel tank breather hose No. 1
<input checked="" type="checkbox"/> [C]: Clamp the hose together with the starter motor lead wire.	4. Fuel tank breather hose No. 2
<input checked="" type="checkbox"/> [D]: Align the tip of the hose. The tip of the hose must not come to contact with the under cowl.	5. Fuel tank breather hose No. 3
<input checked="" type="checkbox"/> [E]: The hose must not come to contact with the exhaust pipe support tightening part.	6. Breather hose clamp
<input checked="" type="checkbox"/> [F]: Pass the drain hose under the thermostat inlet connector.	7. Fuel tank breather joint
<input checked="" type="checkbox"/> [G]: Pass the drain hose above the high-tension cord.	8. Drain hose clamp
<input checked="" type="checkbox"/> [H]: Clamp the fuel tank water drain hose No. 1 at the white paint within the tolerance of 10 mm.	9. Water drain joint
<input checked="" type="checkbox"/> [I]: Connect the thinner side of water drain joint to the radiator reservoir tank overflow hose.	"a": 10 mm (0.40 in)
<input checked="" type="checkbox"/> [J]: Pass the drain hose inside the fuel feed hose.	"b": 20 – 40 mm (0.79 – 1.50 in)
<input checked="" type="checkbox"/> [K]: Face the white mark backward.	"c": 30 – 50 mm (1.20 – 1.90 in)
<input checked="" type="checkbox"/> [L]: Be careful to the direction of the clamp.	"d": 20 – 40°
1. Fuel tank water drain hose No. 1	

# 1G-5 Fuel System:

## With EVAP Control System

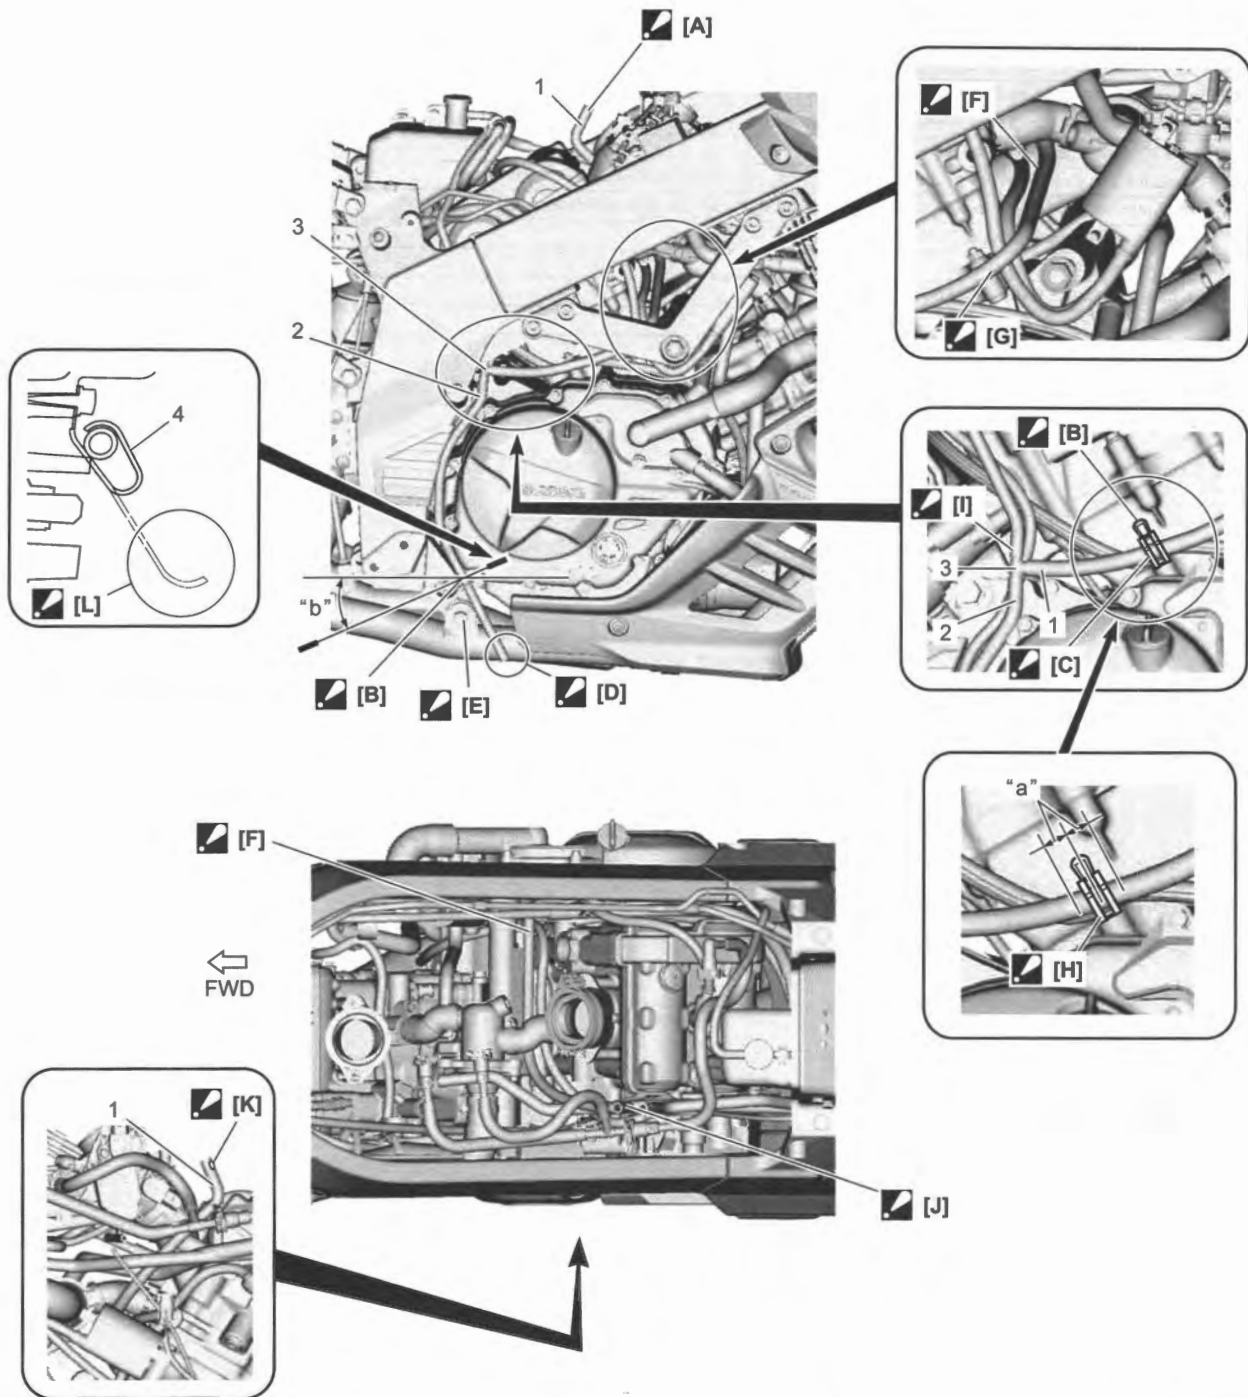

IH28K1170003-01

<p>☑ [A]: Insert the tip of the hose to the bottom of tank nipple.</p>	<p>☑ [J]: Pass the drain hose inside the fuel feed hose.</p>
<p>☑ [B]: Clamp the paint of the fuel tank water drain hose No. 2.</p>	<p>☑ [K]: Face the white mark backward.</p>
<p>☑ [C]: Clamp the hose together with the starter motor lead wire.</p>	<p>☑ [L]: Be careful to the direction of the clamp.</p>
<p>☑ [D]: The tip of the hose must not come to contact with the under cowl.</p>	<p>1. Fuel tank water drain hose No. 1</p>
<p>☑ [E]: The hose must not come to contact with the exhaust pipe support tightening part.</p>	<p>2. Fuel tank water drain hose No. 2</p>
<p>☑ [F]: Pass the drain hose under the thermostat inlet connector.</p>	<p>3. Water drain joint</p>
<p>☑ [G]: Pass the drain hose above the high-tension cord.</p>	<p>4. Drain hose clamp</p>
<p>☑ [H]: Clamp the fuel tank water drain hose No. 1 at the white paint within the tolerance of 10 mm.</p>	<p>"a": 10 mm (0.40 in)</p>
<p>☑ [I]: Connect the thinner side of water drain joint to the radiator reservoir tank overflow hose.</p>	<p>"b": 20 - 40°</p>

## Diagnostic Information and Procedures

### Fuel System Diagnosis

BENH28K21704001


Refer to "Engine Symptom Diagnosis" in Section 1A (Page 1A-10).

## Repair Instructions

### Fuel Pressure Inspection

BENH28K21706001

- 1) Lift and support the fuel tank. (Page 1G-10)
- 2) Disconnect the fuel feed hose No. 1 (1). (Page 1G-7)

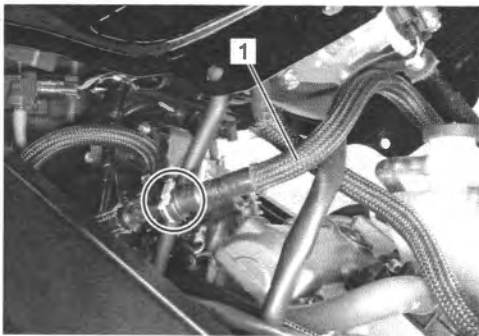


IH28K1170061-01

- 3) Install the special tools between the fuel feed hose No. 1 and fuel feed hose No. 2.

#### Special tool

- (A): 09940-40211
- (B): 09940-40220
- (C): 09915-77331
- (D): 09915-74521

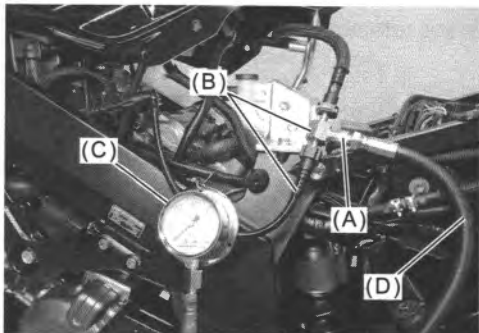

IH28K1170005-02

- 4) Turn the ignition ON and check for fuel pressure. If the fuel pressure is lower than the specification, check for the followings:
  - Fuel hose leakage
  - Clogged fuel filter
  - Pressure regulator
  - Fuel pump
 If the fuel pressure is higher than the specification, check for the followings:
  - Fuel pump
  - Pressure regulator

#### Fuel pressure

[Standard]: 289 – 299 kPa (2.9 – 3.0 kgf/cm<sup>2</sup>, 41.9 – 43.3 psi)

- 5) Remove the special tools.

#### ⚠ WARNING


Before removing the special tools, turn the ignition switch OFF and release the fuel pressure slowly.

- 6) After finishing the fuel pressure inspection, install the removed parts.

**Fuel Discharge Amount Inspection**


BENH28K21706002

- 1) Lift and support the fuel tank. (Page 1G-10)
- 2) Disconnect the fuel feed hose (1). (Page 1G-7)

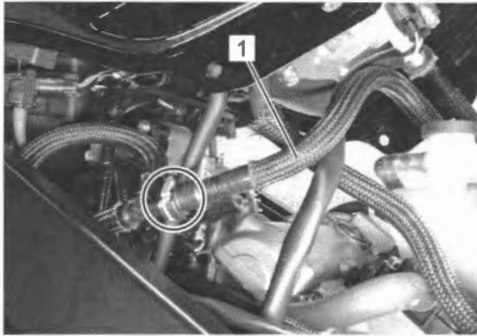

IH28K1170061-01

- 3) Place the measuring cylinder (1) and insert the fuel feed hose No. 1 (2) into the measuring cylinder.

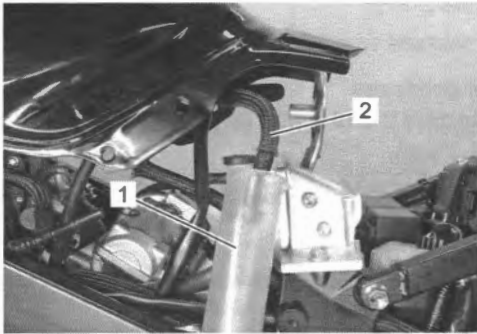

IH28K1170006-03

- 4) Remove the fuel pump relay. (Page 1G-19)
- 5) Connect the battery (-) lead wire.
- 6) Connect the fuel pump relay lead wire terminal (between Y/R wire terminal (1) and R/W wire terminal (2)) using a jumper wire (3) for 10 seconds and measure the amount of fuel discharged. If the discharge amount is out of the specification, the following cause may be considered.

Possible cause	Correction
Clogged fuel filter	Replace
Defective fuel pump	Replace


**NOTE**

The battery must be in fully charged condition.

**FP discharge amount**

Per 10 seconds

[Standard]: 166 ml (5.61 US oz, 5.84 Imp oz) or more

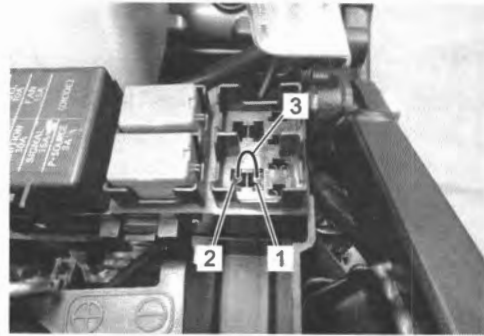

IH28K1170007-01


- 7) After finishing the fuel discharge inspection, install the removed parts.

**Fuel Feed Hose Disconnection and Reconnection**

BENH28K21706003

**Disconnection**


- 1) Lift and support the fuel tank. (Page 1G-10)
- 2) Place a rag over the fuel feed hose.
- 3) Pull the retainer (1).
- 4) Disconnect the fuel feed hose joint (2) from fuel pipe.

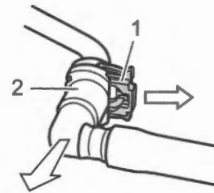

IE31J1170034-01

**Reconnection**

- 1) Insert the fuel feed hose joint (1) to fuel pipe.
- 2) Lock the retainer (2).

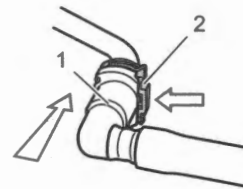

IE31J1170035-01


- 3) Confirm that fuel feed hose joint is not disconnected by hand.

### Fuel Feed Hose Removal and Installation

BENH28K21706004


#### Removal

- 1) Lift and support the fuel tank. (Page 1G-10)
- 2) Disconnect the fuel feed hose No. 1 (1) from the fuel feed hose No. 2. (Page 1G-7)

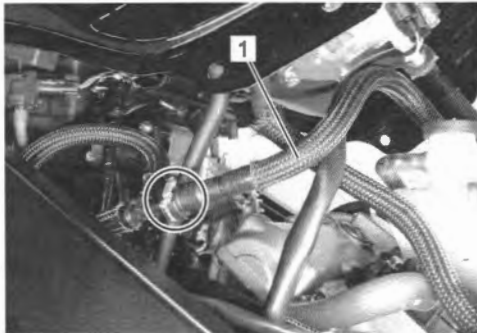


IH28K1170061-01

- 3) Remove the air cleaner box. (Page 1D-6)
- 4) Disconnect the fuel feed hose No. 2 (1). (Page 1G-7)

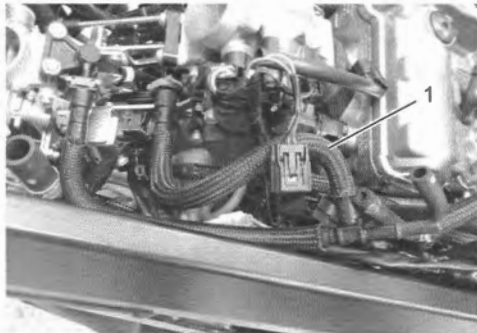

IH28K1170062-01

- 5) Disconnect the fuel feed hose No. 1 (1) from the fuel tank. (Page 1G-7)

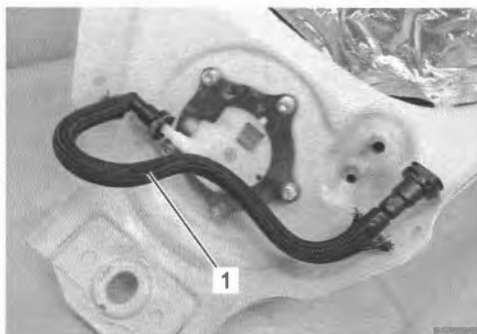

IH28K1170063-01


#### Installation

Connect the fuel feed hoses. Refer to "Intake System Construction" in Section 1D (Page 1D-4).

### Fuel Hose Inspection


BENH28K21706005

- 1) Lift and support the fuel tank. (Page 1G-10)
- 2) Inspect the fuel feed hose No. 1 for damage and fuel leakage. If any defects are found, the fuel feed hose No. 1 (1) must be replaced. (Page 1G-7)

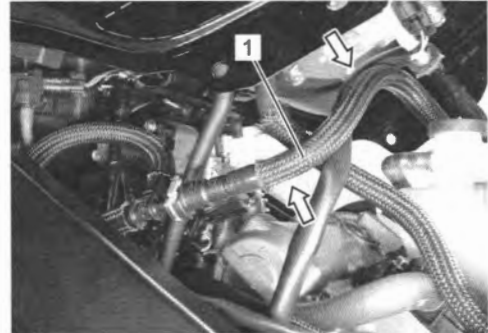


IH28K1170064-01

- 3) Disconnect the fuel feed hose No. 1 (1) from the fuel feed hose No. 2. (Page 1G-7)

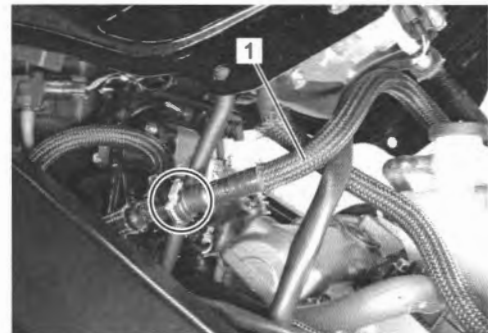

IH28K1170061-01

- 4) Remove the air cleaner box. (Page 1D-6)
- 5) Inspect the fuel feed hose No. 2 (1) for damage and fuel leakage. If any defects are found, the fuel feed hose No. 2 (1) must be replaced. (Page 1G-7)

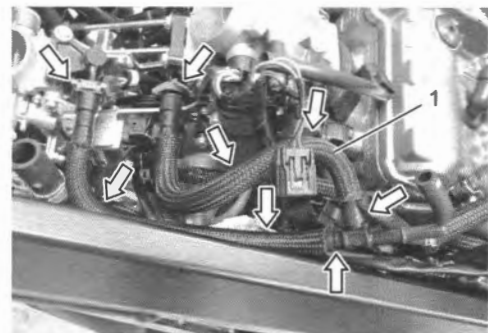


IH28K1170065-01

- 6) After finishing the fuel feed hose inspection, install the removed parts.

Fuel Tank Construction

BENH28K21706006

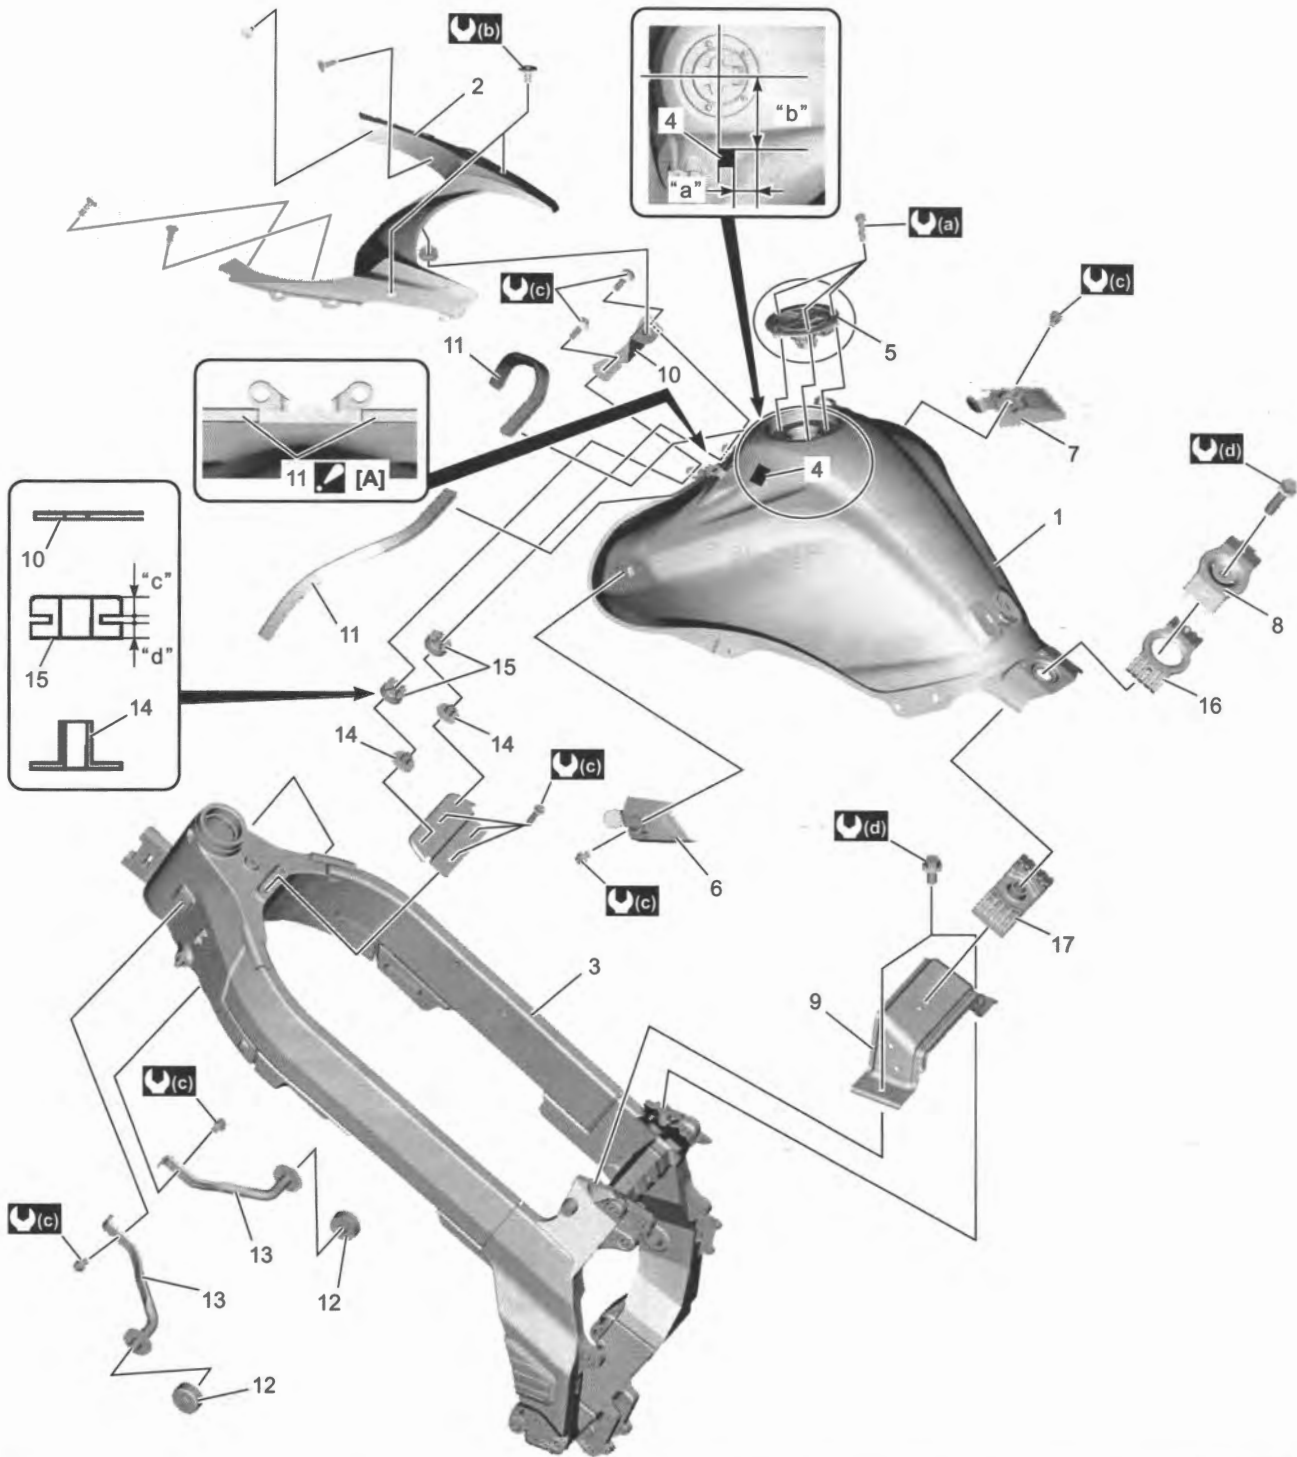

IH28K1170060-04


[A]: Align the fuel tank molding end and edge of fuel tank bracket.	9. Fuel tank rear bracket	"a": 37 – 41 mm (1.5 – 1.6 in)
1. Fuel tank	10. Front cover bracket	"b": 95 – 99 mm (3.7 – 3.8 in)
2. Fuel tank front cover	11. Fuel tank molding	"c": 5.0 mm (0.20 in)
3. Frame	12. Front side bracket cushion	"d": 4.0 mm (0.16 in)
4. Fuel tank cover fastener	13. Front side bracket	(a) : 3.0 N·m (0.31 kgf·m, 2.25 lbf·ft)
5. Fuel tank filler cap	14. Fuel tank front washer	(b) : 5.5 N·m (0.56 kgf·m, 4.05 lbf·ft)
6. Fuel tank cover bracket LH	15. Fuel tank front cushion	(c) : 10 N·m (1.0 kgf·m, 7.5 lbf·ft)
7. Fuel tank cover bracket RH	16. Fuel tank rear upper cushion	(d) : 23 N·m (2.3 kgf·m, 17.0 lbf·ft)
8. Fuel tank mount stay	17. Fuel tank rear lower cushion	

**Fuel Tank Cap Removal and Installation**

BENH28K21706007

**Removal**

- 1) Open the fuel tank cap with the ignition key.
- 2) Remove the fuel tank cap (1).

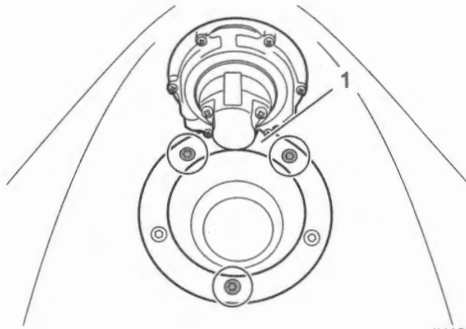

IH13K1170066-06


**Installation**

Install the fuel tank cap in the reverse order of removal. Pay attention to the following point:

- Tighten the fuel tank cap bolts (1) to the specified torque.

**Tightening torque**

**Fuel tank cap bolt (a): 3.0 N·m (0.31 kgf-m, 2.25 lbf-ft)**

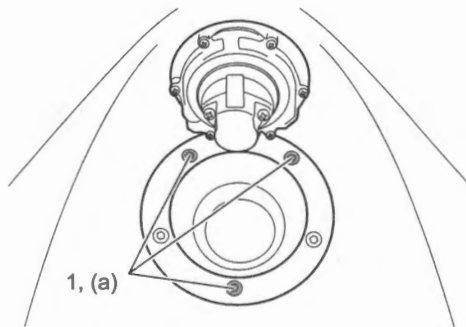


IH13K1170067-04

**Fuel Tank Removal and Installation**

BENH28K21706008


**Removal**

- 1) Remove the side cowling. (Page 9D-25)
- 2) Remove the fuel tank rear mounting bolt (1), fuel tank mount stay (2), upper cushion (3) and lower cushion (4).

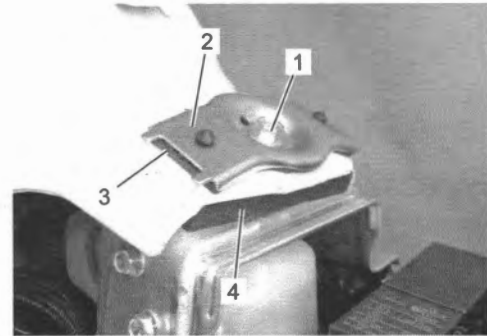

IH28K1170010-01

- 3) Remove the fuel tank front mounting bolts (1) and front cover bracket (2).

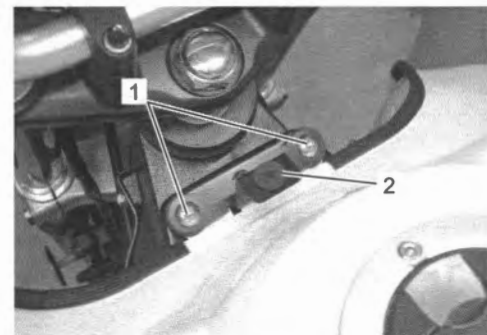


IH28K1170011-01

- 4) Lift and support the fuel tank with the fuel tank mount stay (1).

**▲ CAUTION**


**Lifting up the fuel tank by force can damage the hoses and wiring harness.**

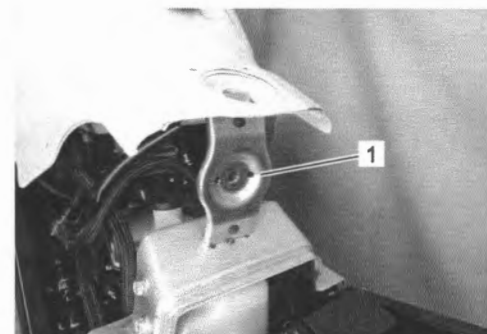

IH28K1170012-01


## 1G-11 Fuel System:

- 5) Disconnect the fuel feed hose No. 1 (1). (Page 1G-7)

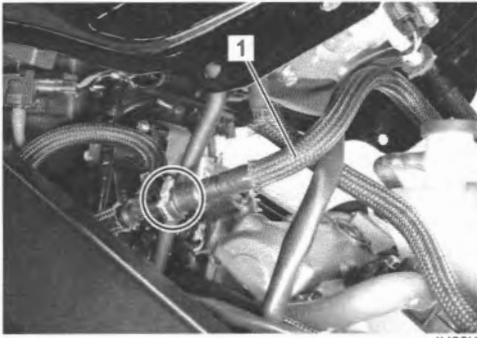


IH28K1170061-01

- 6) Disconnect the fuel pump coupler (1).  
7) Disconnect the fuel tank breather hose (if equipped) (2) and fuel tank water drain hose No. 1 (3).

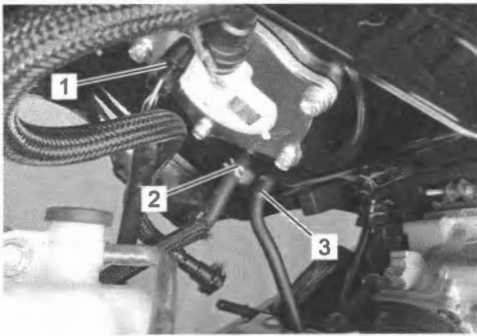


IH28K1170013-02

- 8) Remove the fuel tank (1).

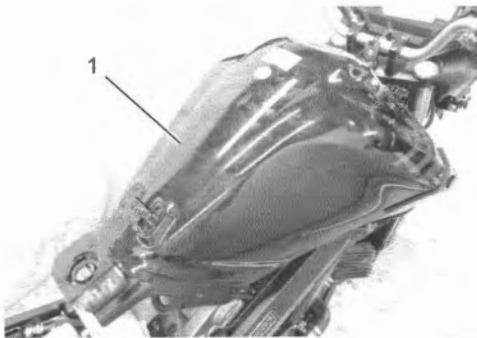


IH28K1170014-02

- 9) Disconnect the fuel feed hose No. 1 (1) from the fuel tank. (Page 1G-7)

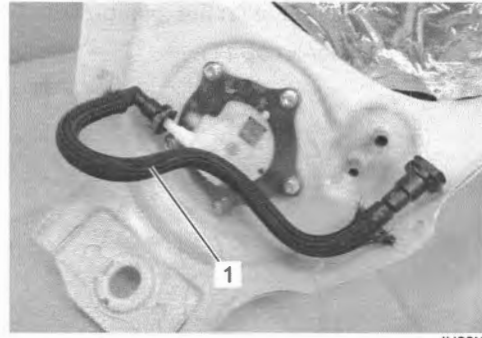

IH28K1170063-01

- 10) Remove the fuel tank cover cushion (1).  
11) Remove the fuel tank cover bracket (2).

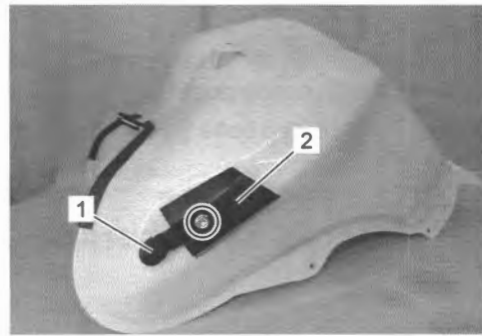

IH28K1170015-01


### Installation

Install the fuel tank in the reverse order of removal. Pay attention to the following points:

- Tighten the fuel tank cover bracket (1) to the specified torque.

### Tightening torque

**Fuel tank cover bracket bolt (a): 10 N·m (1.0 kgf-m, 7.5 lbf-ft)**

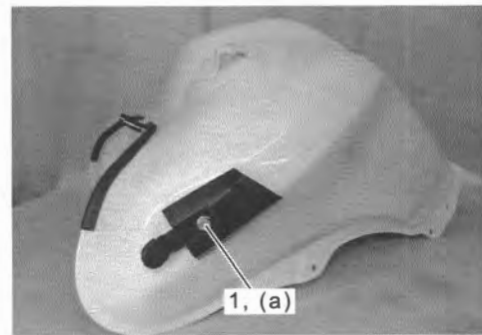

IH28K1170016-01



- Connect the fuel tank water drain hose No. 1 and fuel tank breather hose (if equipped). ↻ (Page 1G-3)


**NOTICE**

**Be sure not to bend or twist the hoses when installing.**

- Tighten the fuel tank front mounting bolts (1) to the specified torque.

**Tightening torque**

**Fuel tank front mounting bolt (a): 10 N·m (1.0 kgf-m, 7.5 lbf-ft)**

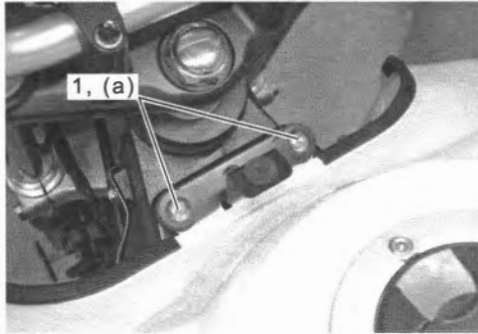


IH28K1170017-01

- Tighten the fuel tank rear mounting bolt (1) to the specified torque.

**Tightening torque**


**Fuel tank rear mounting bolt (a): 23 N·m (2.3 kgf-m, 17.0 lbf-ft)**

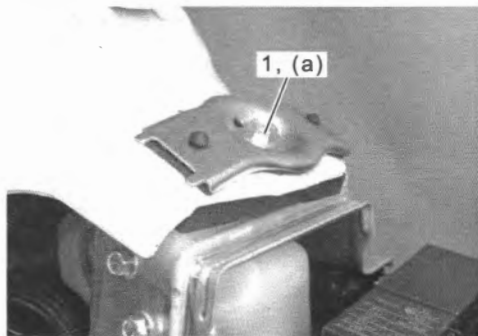

IH28K1170018-01

Fuel Pump Components

BENH28K21706009

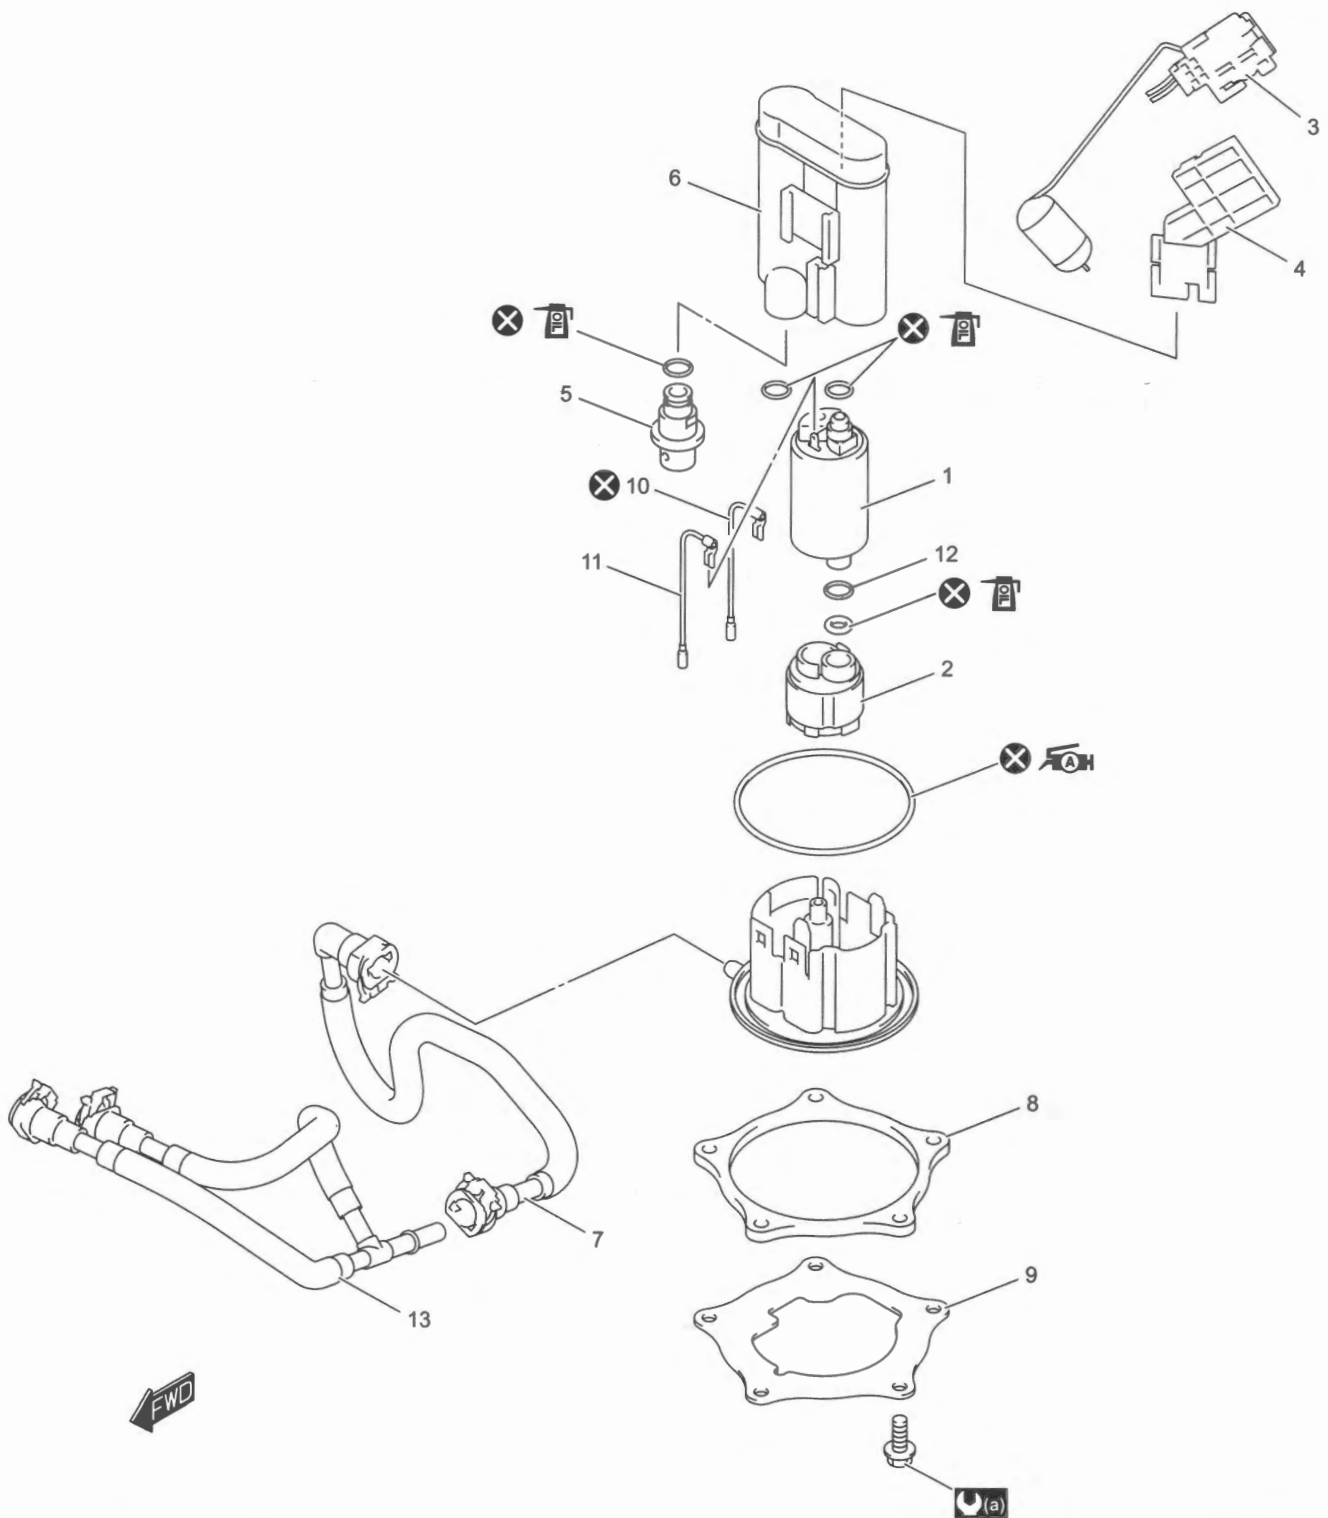

IH28K1170019-01

1. Fuel pump	7. Fuel feed hose No. 1	13. Fuel feed hose No. 2
2. Fuel filter	8. Fuel pump inner plate	(a) : 10 N-m (1.0 kgf-m, 7.5 lbf-ft)
3. Fuel level sender gauge	9. Fuel pump outer plate	: Apply grease.
4. Fuel level sender gauge attachment	10. Fuel level sender gauge (+) lead wire	: Apply engine oil.
5. Fuel pressure regulator	11. Fuel level sender gauge (-) lead wire	: Do not reuse.
6. Reservoir cup	12. Spacer	

### Fuel Pump On-Vehicle Inspection

BENH28K21706010

Turn the ignition switch ON and check that the fuel pump operates for a few seconds.

If the fuel pump motor does not make operating sound, inspect the fuel pump circuit connections, the fuel pump relay and TO sensor.

- Fuel pump relay: ⌚(Page 1G-19)
- TO sensor: ⌚(Page 1A-58)

If the fuel pump relay, TO sensor and fuel pump circuit connections are OK, the fuel pump may be faulty, replace the fuel pump with a new one. ⌚(Page 1G-14)


### Fuel Pump Assembly Removal and Installation

BENH28K21706011

Refer to "Fuel Tank Removal and Installation" (Page 1G-10).


#### Removal

- 1) Remove the fuel pump mounting bolts (1) diagonally.

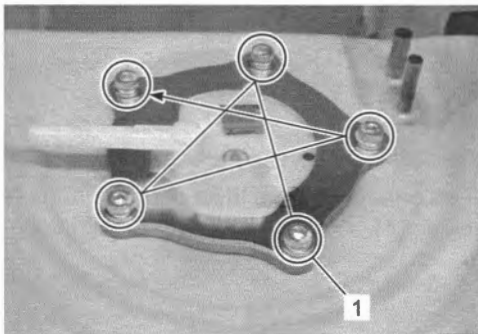


IH28K1170020-01

- 2) Remove the fuel pump outer plate (1).

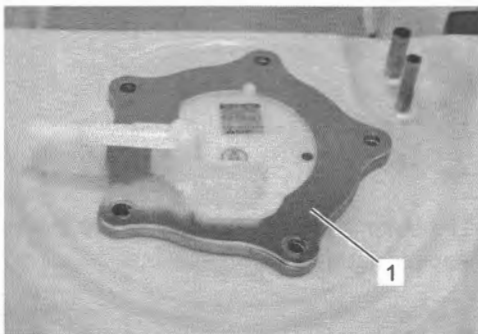


IH28K1170021-01

- 3) Remove the fuel pump inner plate (1).

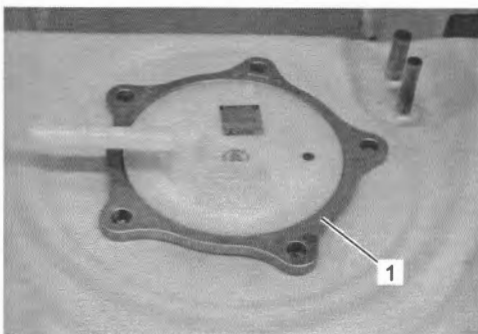


IH28K1170022-01

- 4) Remove the fuel pump assembly (1).

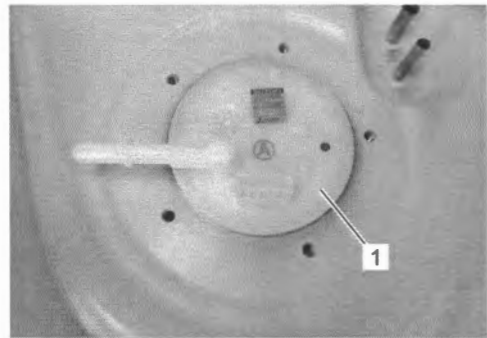


IH28K1170023-01

- 5) Remove the O-ring (1).

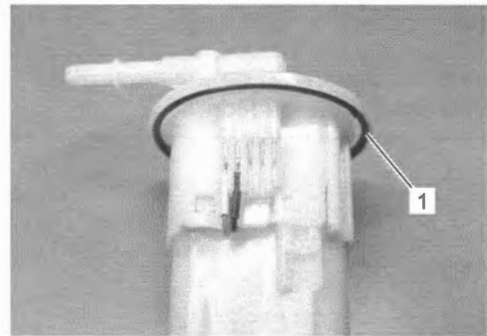

IH28K1170024-01


- 6) Remove the fuel tank inner vessel (1).

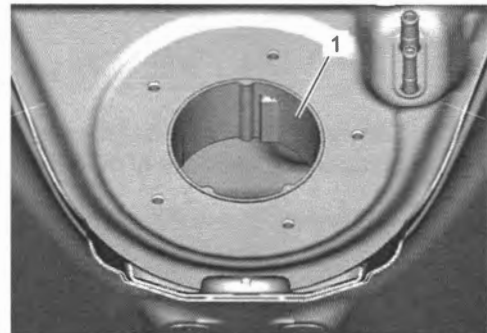

IH28K1170025-03

#### Installation


- 1) Install the fuel tank inner vessel (1) align protrusion (2) of fuel tank with the groove (3) of inner vessel.

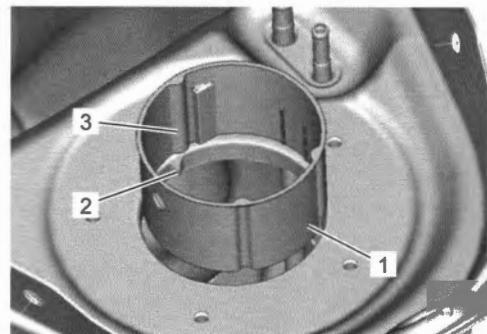

IH28K1170026-04

## 1G-15 Fuel System:

- 2) Install a new O-ring (1) and the fuel pump assembly to the fuel tank.

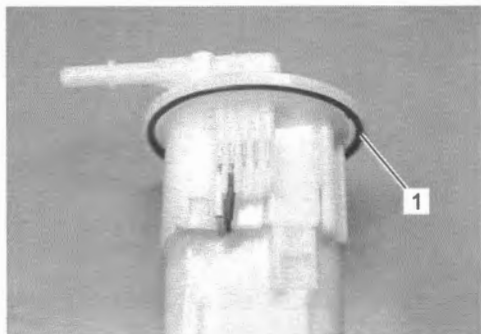


IH28K1170024-01

- 3) Install the fuel pump inner plate (1).


### NOTE

The stamped mark (2) on the inner plate should face to the outside.

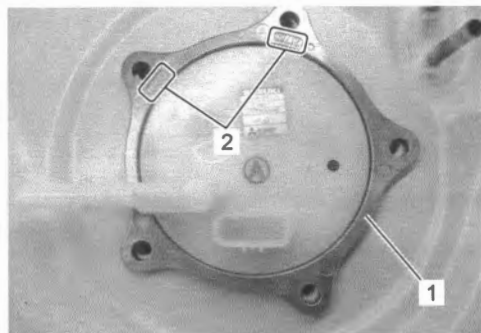

IH28K1170028-01

- 4) Install the fuel pump outer plate (1) align protrusion (2) of fuel pump with the groove of outer plate.

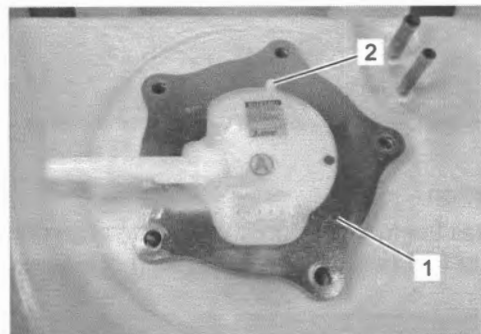


IH28K1170029-01

- 5) Tighten all the fuel pump mounting bolts (1) lightly in the order "1" – "5", and then tighten them to the specified torque in the order "1" – "6" in the figure.

### Tightening torque

Fuel pump mounting bolt (a): 10 N·m (1.0 kgf-m, 7.5 lbf-ft)

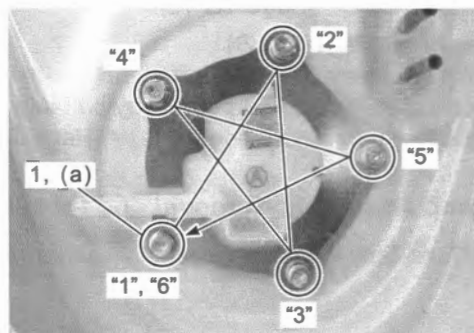

IH28K1170030-01


### Fuel Pump Disassembly and Reassembly

BENH28K21706012

Refer to "Fuel Pump Assembly Removal and Installation" (Page 1G-14).


### Disassembly

- 1) Remove the fuel level sender gauge as follows:
  - a) Disconnect the fuel level sender gauge lead wires (1).

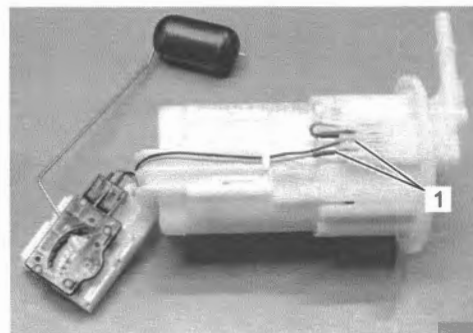


IH28K1170031-01

- b) Unhook the hooks (1) and remove the fuel level sender gauge (2).

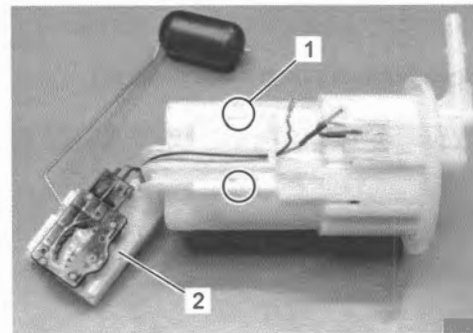


IH28K1170032-01

- c) Unhook the hooks (1) and remove the fuel level sender gauge (2) from the fuel level sender gauge attachment (3).

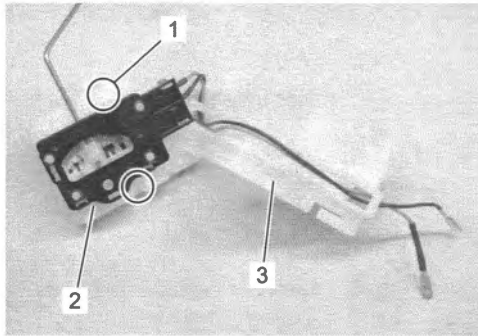


IH28K1170033-01

- 2) Disconnect the fuel pump lead wires (1).  
 3) Unhook the hooks (2) and remove the flange (3).

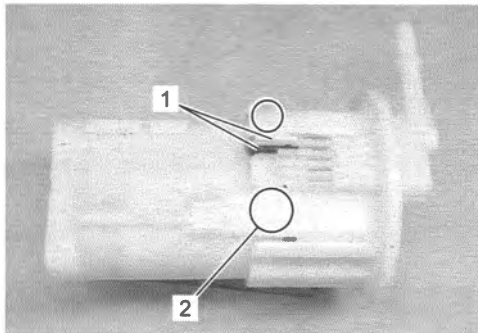


IH28K1170034-01

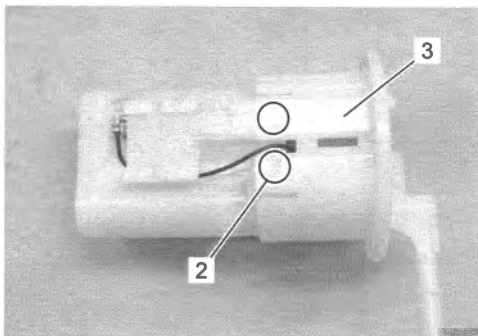


IH28K1170035-01

- 4) Remove the O-ring (1) from the flange.

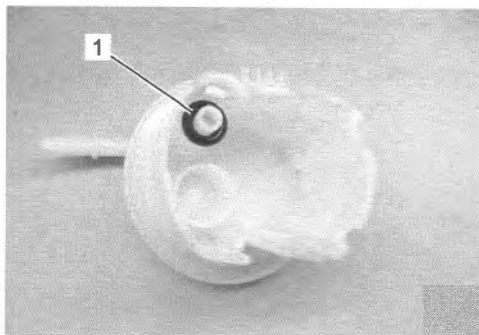


IH28K1170036-01

- 5) Remove the fuel filter (1).

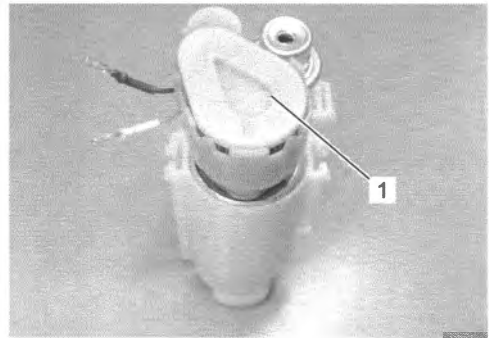


IH28K1170037-01

- 6) Remove the fuel pump as follows:  
 a) Remove the fuel pump (1).

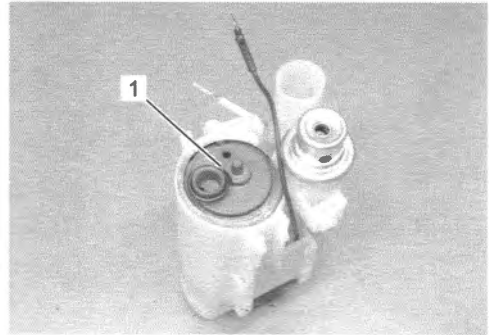


IH28K1170038-01

- b) Remove the O-rings (1) and spacer (2).

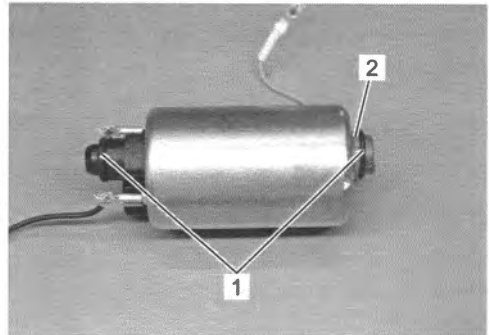

IH28K1170039-01


- c) Disconnect the lead wires (1).

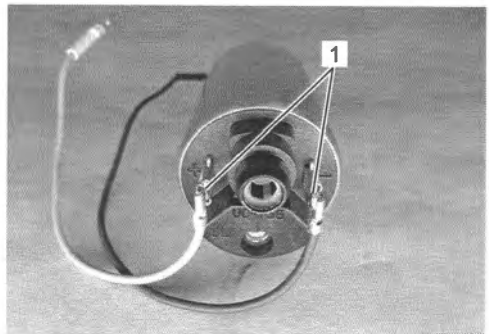

IH28K1170040-01


## 1G-17 Fuel System:

7) Remove the fuel pressure regulator (1).

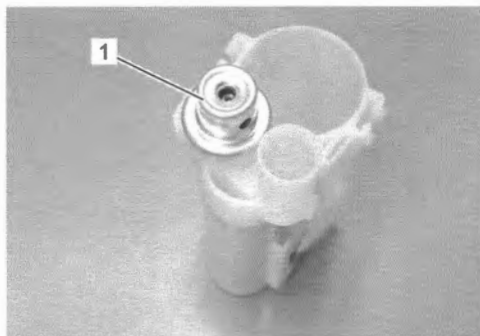

IH28K1170041-01

8) Remove the O-ring (1).

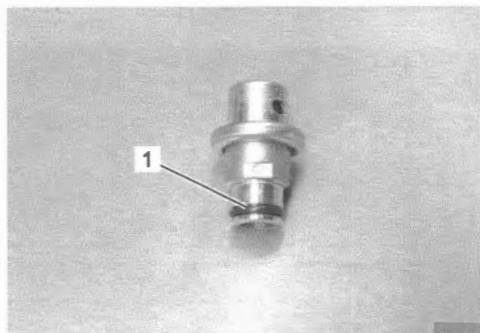


IH28K1170042-01

### Reassembly


Reassemble the fuel pump in the reverse order of the disassembly. Pay attention to the following points:

- Replaced the removed fuel pump (+) lead wire (1) with the new ones.

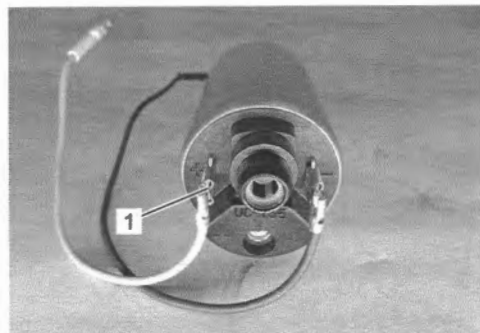


IH28K1170043-01


- Apply engine oil lightly to the new O-rings (1) and install them.

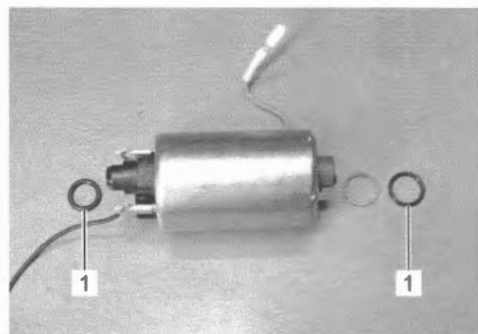

IH28K1170044-01

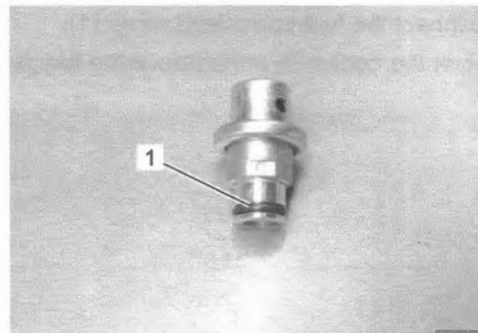


IH28K1170042-01

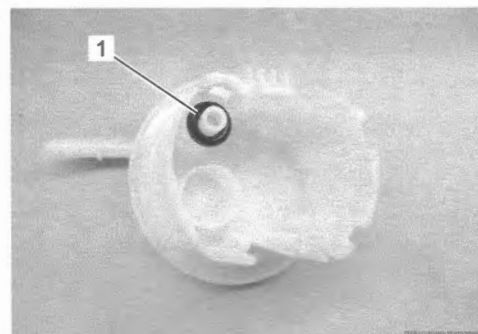


IH28K1170036-01


- Connect all lead wires securely so as not to cause contact failure.
- Route all lead wires securely.

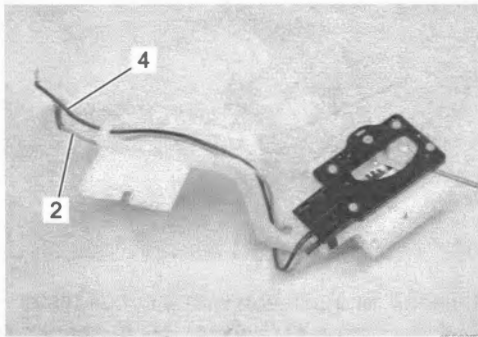


IH28K1170045-01

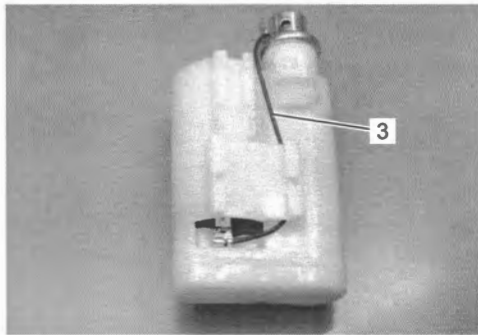


IH28K1170046-01

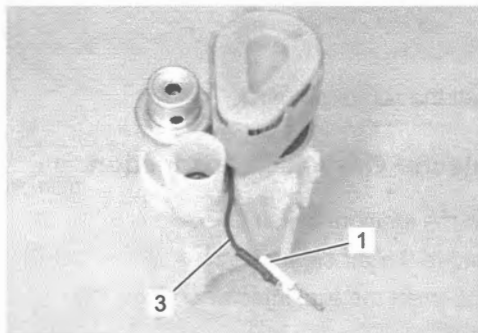

IH28K1170047-01

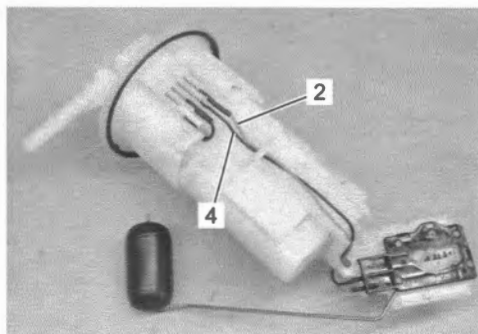

IH28K1170048-01

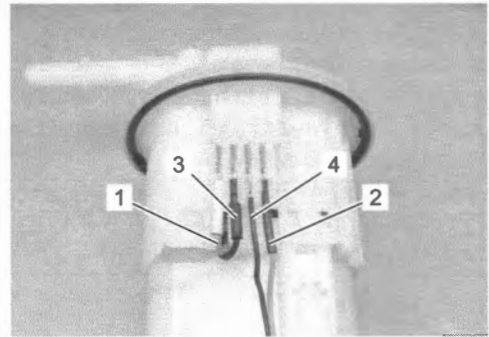

IH28K1170049-02


1.	Fuel pump (+) lead wire (Bl)
2.	Fuel level sender gauge (+) lead wire (R)
3.	Fuel pump (-) lead wire (B)
4.	Fuel level sender gauge (-) lead wire (B)

### Fuel Filter Inspection

BENH28K21706013

Refer to "Fuel Pump Disassembly and Reassembly" (Page 1G-15).

Inspect the fuel filter for dirt. If the fuel filter is dirtied excessively, replace the fuel filter with a new one.

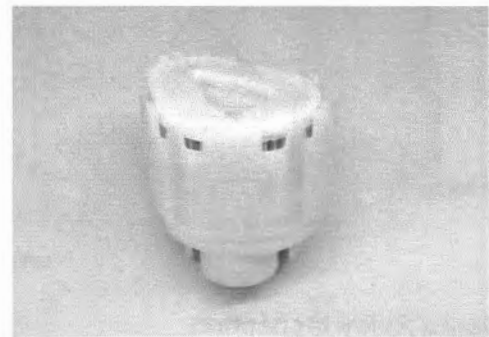

IH28K1170050-01


**Fuel Level Gauge Inspection**

BENH28K21706014

Refer to "Fuel Pump Assembly Removal and Installation" (Page 1G-14).

Measure the resistance at each fuel level sender gauge in float position. If the resistance is incorrect, replace fuel level sender gauge with a new one.

	Float position	Resistance
"a"	221.5 mm (8.720 in)	8 – 12 Ω
"b"	36.1 mm (1.421 in)	267 – 273 Ω

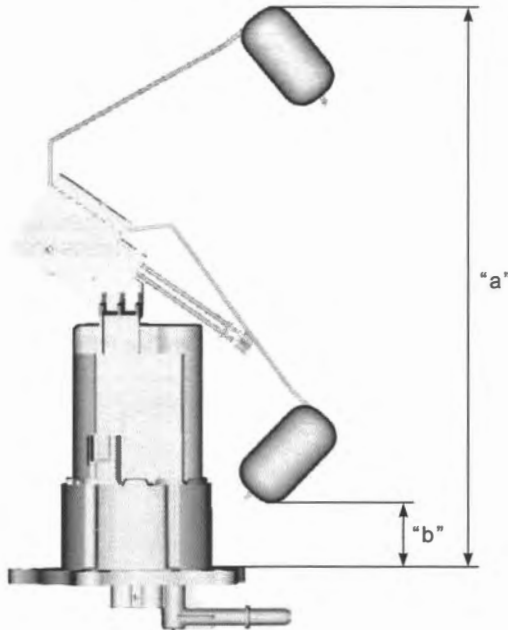


IH28K1170051-01

**Fuel Pump Relay Inspection**

BENH28K21706015

- 1) Remove the seat. (Page 9D-19)
- 2) Disconnect the battery (-) lead wire (1).
- 3) Remove the relay box cover (2).

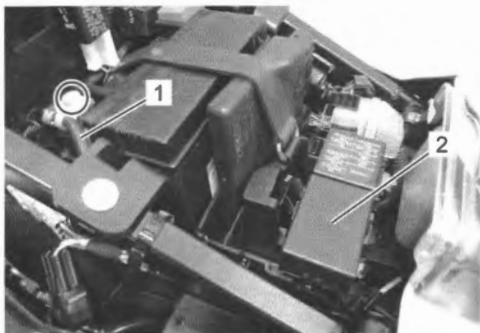


IH28K1170052-01

- 4) Remove the fuel pump relay (1).



IH28K1170053-01

- 5) First, check for insulation with a circuit tester between terminals (3) and (4). Next, check for continuity between (3) and (4) with 12 V voltage applied, positive (+) to terminal (1) and negative (-) to terminal (2). If continuity does not exist, replace the relay with a new one.

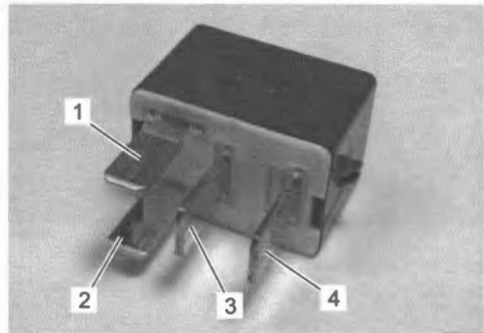


IE31J1170030-01

- 6) Install the removed parts.

**Fuel Injector On-Vehicle Inspection**

BENH28K21706016

- 1) Turn the ignition switch OFF.
- 2) Remove the air cleaner box. (Page 1D-6)
- 3) Disconnect the fuel injector coupler (1).

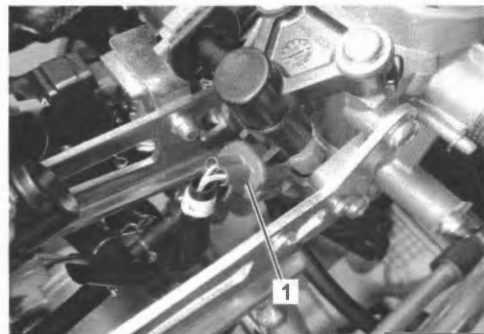


IH28K1170054-01



- 4) Measure the fuel injector resistance between terminals. If resistance is out of specification, replace the fuel injector with a new one. (Page 1G-20)

**Fuel injector resistance**

20 °C (68 °F) [Standard]: 11.5 – 12.5 Ω

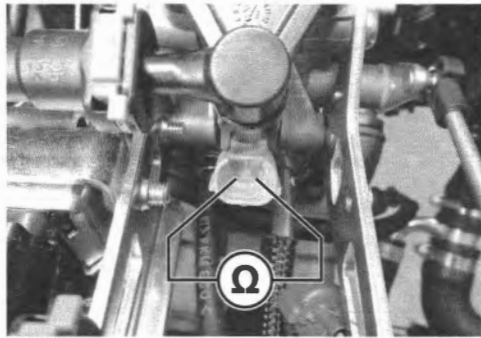

IH28K1170055-01

- 5) After finishing the fuel injector inspection, install the removed parts.

**Fuel Injector / Fuel Delivery Pipe Removal and Installation**

BENH28K21706017

**NOTE**


The fuel injector can be removed without removing the throttle body.

**Removal**

- 1) Turn the ignition switch OFF.
- 2) Remove the air cleaner box. (Page 1D-6)
- 3) Disconnect the fuel feed hose (1) from the fuel delivery pipes. (Page 1G-8)
- 4) Disconnect the fuel injector couplers (2).
- 5) Remove the fuel delivery pipes (3).


**NOTICE**

Do not twist the fuel delivery pipe.

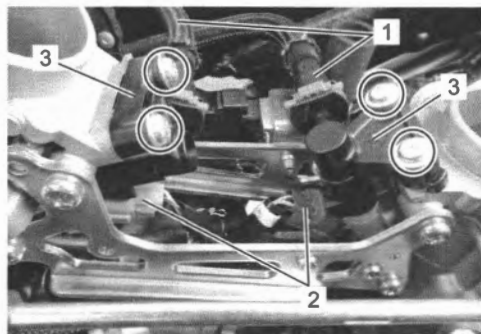

IH28K1170056-02

- 6) Remove the fuel injectors (1) from the fuel delivery pipes (2).

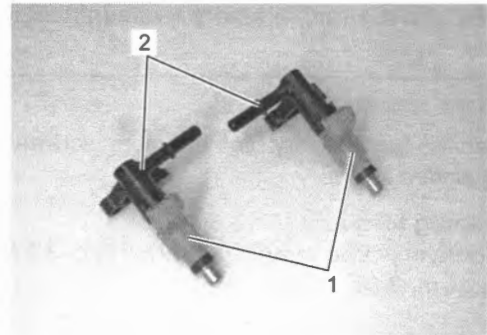


IH28K1170057-01

**Installation**

Install the fuel injector and fuel delivery pipe in the reverse order of removal. Pay attention to the following points:

- Apply a thin coat of engine oil to the new O-ring (1) and new cushion seal (2).

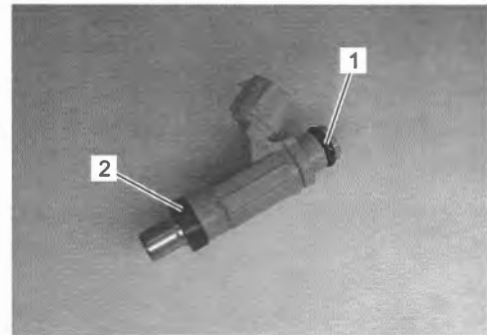


IH18K1170046-01

- Wipe off the surface on the fuel delivery pipe (1) where the fuel injector (2) will be seated with a clean rag.
- Align the coupler (3) of fuel injector with boss (4) of the fuel delivery pipe, install each fuel injector by pushing it straight to the fuel delivery pipe.

**NOTICE**

Never turn the fuel injector while pushing it.

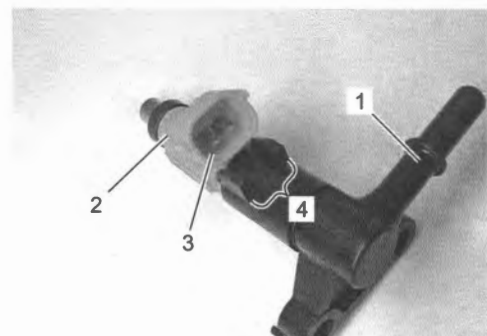

IH18K1170047-01

## 1G-21 Fuel System:

- Install the fuel delivery pipe (1) to the throttle body.


### NOTICE

**Never turn the fuel injectors while installing it.**

- Install the rubber washers (2).
- Tighten the fuel delivery pipe mounting screws (3) to the specified torque.


### Tightening torque

**Fuel delivery pipe mounting screw (a): 3.5 N·m (0.36 kgf-m, 2.60 lbf-ft)**

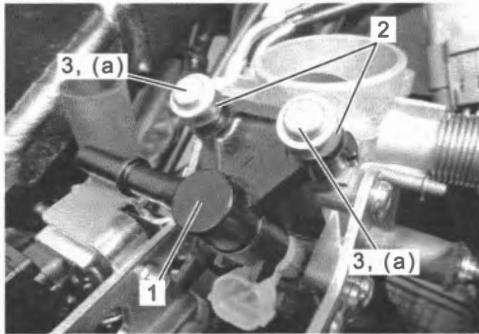

IH28K1170058-01

- Connect the fuel injector couplers to the fuel injector. Make sure that each coupler is installed in the correct position.

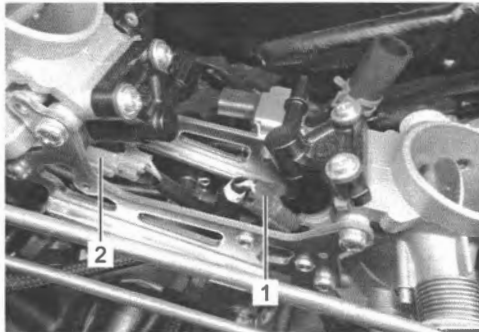

IH28K1170059-01

Coupler	Coupler color
Injector #1 (1)	Br
Injector #2 (2)	Gr

## Fuel Injector Inspection and Cleaning

BENH28K21706018

Refer to "Fuel Injector / Fuel Delivery Pipe Removal and Installation" (Page 1G-20).

Check the fuel injector filter for evidence of dirt and contamination. If present, clean and check for presence of dirt in the fuel lines and fuel tank.



IH18K1170050-01

## Specifications

### Tightening Torque Specifications

BENH28K21707001

Fastening part	Tightening torque			Note
	N-m	kgf-m	lbf-ft	
Fuel tank cap bolt	3.0	0.31	2.25	☞ (Page 1G-10)
Fuel tank cover bracket bolt	10	1.0	7.5	☞ (Page 1G-11)
Fuel tank front mounting bolt	10	1.0	7.5	☞ (Page 1G-12)
Fuel tank rear mounting bolt	23	2.3	17.0	☞ (Page 1G-12)
Fuel pump mounting bolt	10	1.0	7.5	☞ (Page 1G-15)
Fuel delivery pipe mounting screw	3.5	0.36	2.60	☞ (Page 1G-21)

#### Reference:

For the tightening torques of fasteners not specified in this page, refer to:

“Fuel Tank Construction” (Page 1G-9)

“Fuel Pump Components” (Page 1G-13)

“Fasteners Information” in Section 0C (Page 0C-11)

## Special Tools and Equipment

### Recommended Service Material

BENH28K21708001





#### NOTE

Required service material(s) is also described in:

“Fuel Pump Components” (Page 1G-13)

### Special Tool

BENH28K21708002
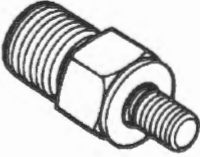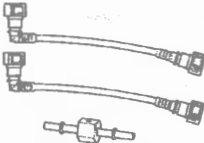
<p>09915-74521 Oil pressure gauge hose ☞ (Page 1G-6)</p> 	<p>09915-77331 Oil pressure gauge (1000 kPa) ☞ (Page 1G-6)</p> 
<p>09940-40211 Fuel pressure gauge adapter Discontinued ☞ (Page 1G-6)</p> 	<p>09940-40220 Fuel pressure gauge attachment ☞ (Page 1G-6)</p> 


# Ignition System

## General Description


### Immobilizer Description (If Equipped)

BENH28K21801001

The immobilizer verifies that the key ID (1) agrees with ECM ID by means of radio communication through the immobilizer antenna (2). When the ID agreement is verified, the system makes the engine ready to start.

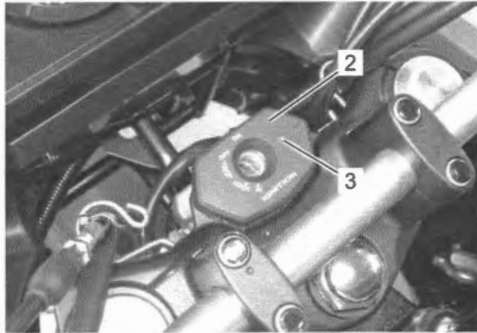

IH28K1180031-01

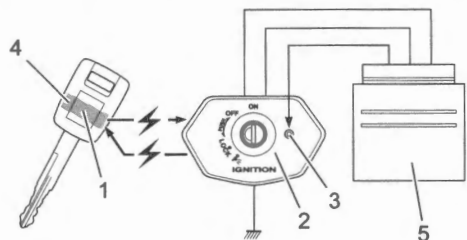


IE31J1180002-01

3. Indicator light	5. ECM
4. Transponder	

### Operation

When the ignition switch (1) is turned ON with the engine stop switch (2) and side-stand relay (3) in ON, the immobilizer antenna (4) and ECM (5) are powered ON. The ECM transmits a signal to the transponder (6) through the immobilizer antenna (4) in order to make comparison between the key ID and ECM ID. With the signal received, the transponder transmits the key ID signal to ECM (5) so that ECM (5) can make comparison with its own ID, and if it matches, the engine is made ready to start.

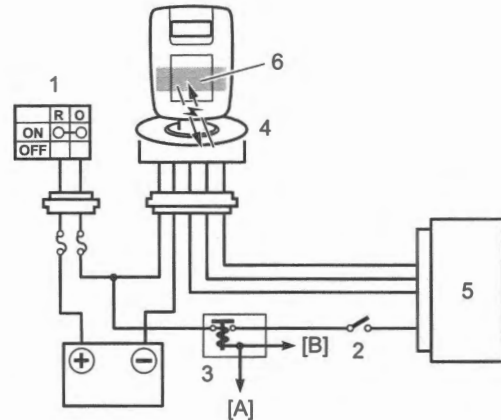


IE31J1180003-01

[A]: To side-stand switch	[B]: To GP switch
---------------------------	-------------------


Also, when the ignition switch is turned ON, the indicator light (1) flashes as many as the number of IDs registered in ECM. Thereafter, if the IDs are in agreement, the indicator light turns on for two seconds to notify of completion in successful communication. If the indicator light (LED) (1) flashes fast, it notifies of communication error or disagreement of ID.

### NOTICE

- If the indicator light (1) flashes fast, turn the ignition switch OFF then ON to make judgment again as there is possible misjudgment due to environmental radio interference.
- When the battery performance is lowered in winter (low temperature), the system may at times makes a re-judgment at the time of beginning the starter motor operation. In this case, the indicator light (1) operation starts immediately after the starter operation.

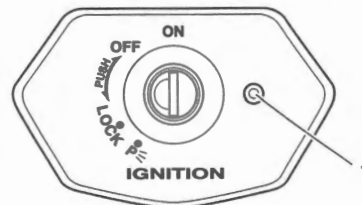


IE31J1180004-01

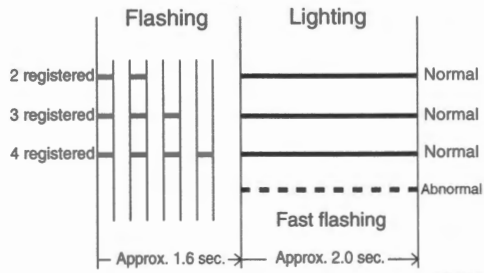

## Schematic and Routing Diagram

### Ignition System Diagram

BENH28K21802001

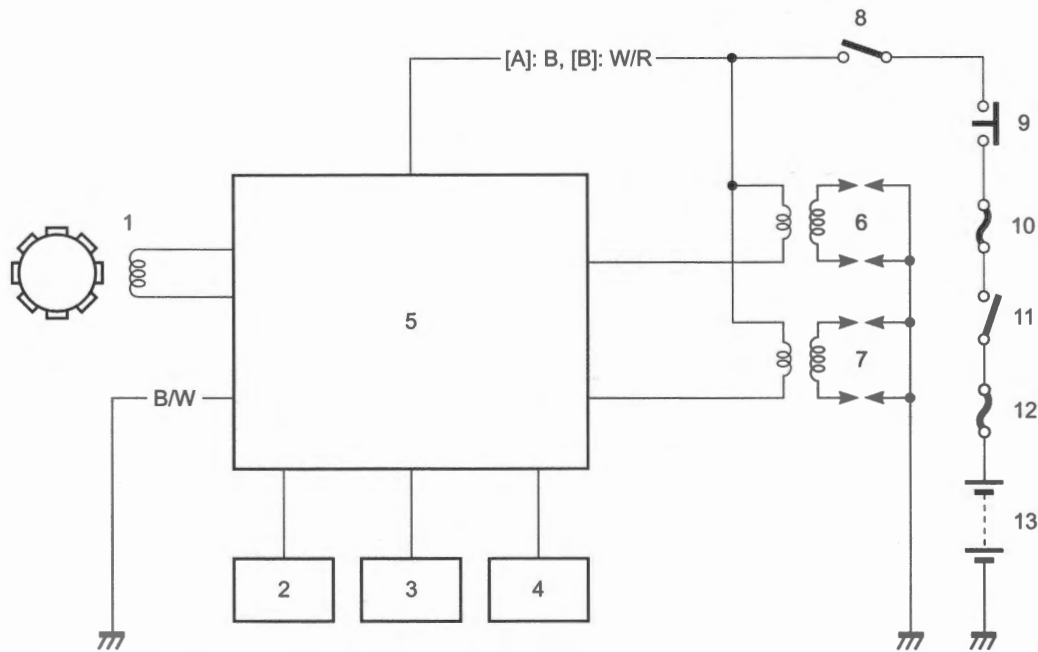

IH28K1180001-01

[A]: For E.U. and Japan	4. GP switch	9. Side-stand relay
[B]: Except for E.U. and Japan	5. ECM	10. Ignition fuse
1. CKP sensor	6. Ignition coil #1	11. Ignition switch
2. TP sensor	7. Ignition coil #2	12. Main fuse
3. ECT sensor	8. Engine stop switch	13. Battery

## Component Location

### Ignition System Components Location

BENH28K21803001

Refer to "Electrical Components Location" in Section 0A (Page 0A-8).

## Diagnostic Information and Procedures

### Ignition System Symptom Diagnosis

BENH28K21804001

Condition	Possible cause	Correction / Reference Item
<b>Spark plug not sparking</b>	Defective spark plugs.	Replace. ☞(Page 1H-6)
	Fouled spark plugs.	Clean or replace. ☞(Page 1H-6)
	Wet spark plugs.	Clean and dry or replace. ☞(Page 1H-7)
	Defective ignition coils or spark plug caps.	Replace. ☞(Page 1H-8)
		Replace. • Removal: ☞(Page 1J-5) • Installation: ☞(Page 1J-7)
	Defective ECM.	Replace. ☞(Page 1C-4)
	Open-circuited wiring connections.	Repair or replace. ☞(Page 9A-5)
	Open or short in high-tension cords.	Replace. ☞(Page 1H-8)
<b>Engine stalls easily (no spark)</b>	Fouled spark plugs.	Replace. ☞(Page 1H-6)
	Defective CKP sensor.	Replace. • Removal: ☞(Page 1J-5) • Installation: ☞(Page 1J-7)
	Defective ECM.	Replace. ☞(Page 1C-4)
<b>Spark plug is wet or quickly becomes fouled with carbon</b>	Excessively rich air/fuel mixture.	Inspect FI system.
	Excessively idling speed.	Inspect FI system.
	Incorrect gasoline.	Change.
	Dirty air cleaner element.	Replace. ☞(Page 1D-5)
<b>Spark plug quickly becomes fouled with oil or carbon</b>	Worn piston rings.	Replace. ☞(Page 1D-61)
	Worn pistons.	Replace. ☞(Page 1D-60)
	Worn cylinders.	Replace. • Removal: ☞(Page 1D-19) • Installation: ☞(Page 1D-25)
	Excessive valve-stem to valve-guide clearance.	Replace. ☞(Page 1D-52)
	Worn valve stem oil seals.	Replace. ☞(Page 1D-52)
<b>Spark plug electrodes overheat or burn</b>	Overheated engine.	Tune-up.
	Loose spark plugs.	Tighten. ☞(Page 1H-6)
	Excessively lean air/fuel mixture.	Inspect FI system.

**No Spark or Poor Spark**

BENH28K21804002

**Troubleshooting****Step 1**

- 1) Check that the transmission is in neutral and the engine stop switch is in the "RUN" position.
- 2) Check that the fuse is not blown and the battery is fully-charged before diagnosing.
- 3) Check the ignition system couplers for poor connections.

**Is check result OK?**

- Yes    Go to Step 2.
- No     Repair or replace defective part.

**Step 2**

- 1) Turn the ignition switch ON.
- 2) Measure the battery voltage between B (for E.U. and Japan) or W/R (except for E.U. and Japan) wire (+) and B/W wire (-) of ECM. Refer to "Ignition System Diagram" (Page 1H-2).

**Is the voltage OK?**

- Yes    Go to Step 3.
- No     • Faulty ignition switch.  
        • Faulty side-stand relay.  
        • Faulty engine stop switch.  
        • Broken wire harness or poor connection of related circuit couplers.

**Step 3**

Measure the ignition coil primary peak voltage. Refer to "Ignition Coil Inspection" (Page 1H-8).

**Is the peak voltage OK?**

- Yes    Go to Step 4.
- No     Go to Step 5.

**Step 4**

Inspect the spark plugs. ⚡ (Page 1H-7)

**Is the spark plug(-s) OK?**

- Yes    Go to Step 5.
- No     Faulty spark plug(-s).

**Step 5**

Inspect the ignition coil(-s). ⚡ (Page 1H-8)

**Is the ignition coil(-s) OK?**

- Yes    Go to Step 6.
- No     Faulty ignition coil(-s).

**Step 6**

Measure the CKP sensor peak voltage and its resistance. Refer to "CKP Sensor Inspection" in Section 1C (Page 1C-10).


**Are the peak voltage and resistance OK?**

- Yes     • Faulty ECM.  
        • Open or short circuit in wire harness.  
        • Poor connection of ignition couplers.
- No     • Faulty CKP sensor.  
        • Metal particles or foreign material being stuck on the CKP sensor and rotor tip.

# Repair Instructions

## Ignition Coil Construction

BENH28K21806001

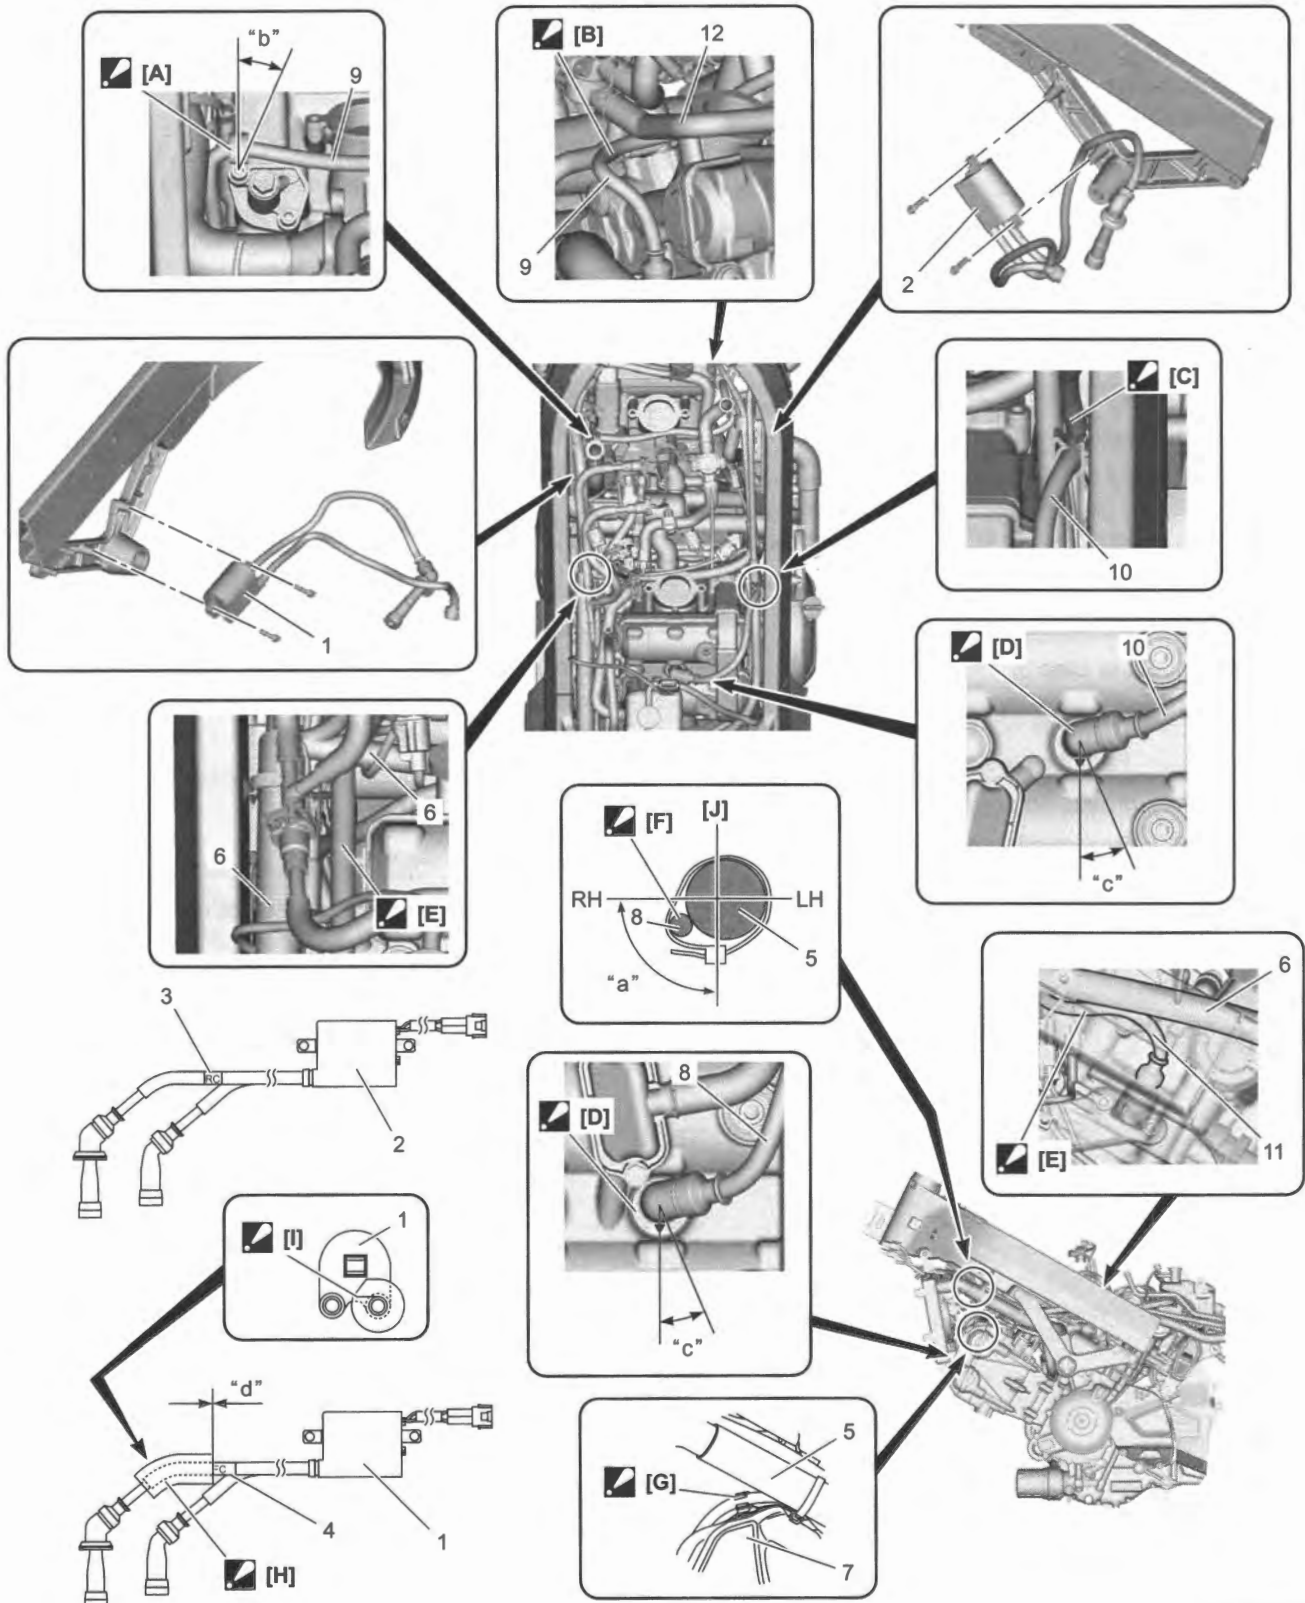



<p>☑ [A]: Clamp the high-tension cord (side) of ignition coil #1 positioning the clamp within angle "b".</p>	4. FC mark
<p>☑ [B]: With PAIR System, pass the high-tension cord (side) under the PAIR hose (if equipped).</p>	5. Radiator inlet hose
<p>☑ [C]: Fit the high-tension cord (center) of ignition coil #2 in the clamp from front side.</p>	6. Main harness
<p>☑ [D]: Install the spark plug cap fully facing mark "△" on the plug cap exhaust side within angle "C" and push in the plug cap seal securely.</p>	7. Left under cowling (if equipped)
<p>☑ [E]: Pass the high-tension cord (side) under the main harness.</p>	8. High-tension cord (center) of ignition coil #1
<p>☑ [F]: Position the high-tension cord (center) of ignition coil #1 along the radiator hose within area "a" and fix it with the clamp firmly. : Face the clamp end inside.</p>	9. High-tension cord (side) of ignition coil #1
<p>☑ [G]: Clamp the high-tension cord (center) of ignition coil #1 with the clamp on the left under cowling (if equipped). : Face the clamp end outside.</p>	10. High-tension cord (center) of ignition coil #2
<p>☑ [H]: Wrap the high-tension cord (center) of ignition coil #1 with the high-tension cord cushion (if equipped).</p>	11. High-tension cord (side) of ignition coil #2
<p>☑ [I]: Stick the high-tension cord cushion ends firmly.</p>	12. PAIR hose
<p>☑ [J]: Upper side.</p>	"b": 0° – 15°
<p>1. Ignition coil #1</p>	"c": 0° – 10°
<p>2. Ignition coil #2</p>	"d": 0 ± 5 mm
<p>3. RC mark</p>	

## Spark Plug Removal and Installation

BENH28K21806002

### Removal

#### ⚠ WARNING


The hot radiator and hot engine can burn you.  
Wait until the radiator and the engine are cool enough to touch.

### Cylinder #1

- 1) Remove the radiator mounting bolt (1).
- 2) Move the radiator (2) forward.


#### NOTICE

Be careful not to damage the radiator fins.

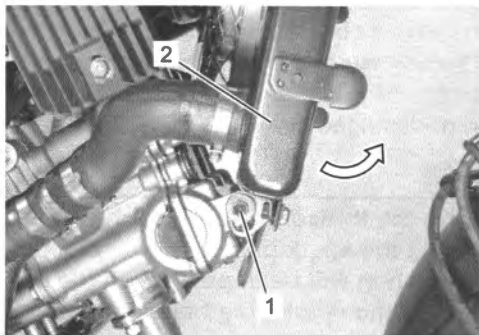

IH28K1180002-01

- 3) Disconnect the spark plug caps (1).

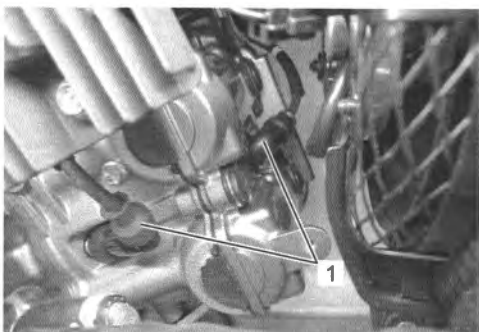


IH28K1180003-01

- 4) Remove the spark plugs (1) with a spark plug wrench.

#### Special tool

(A): 09930-10121

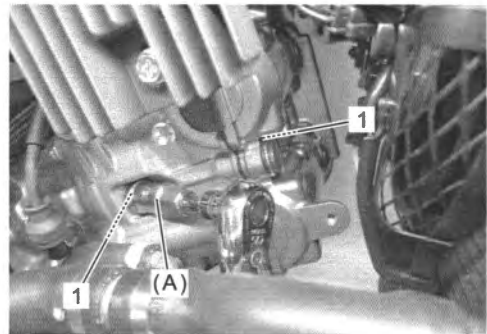

IH28K1180004-01

### Cylinder #2


- 1) Lift and support the fuel tank. (Page 1G-10)
- 2) Remove the radiator reservoir tank mounting bolts (1) and move the reservoir tank.



IH28K1180005-01

## 1H-7 Ignition System:

- 3) Disconnect the spark plug caps (1).

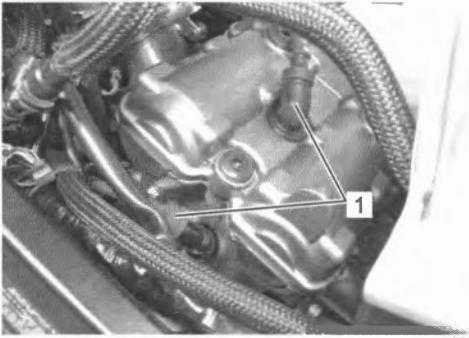


IH28K1180006-01

- 4) Remove the spark plugs (1) with a spark plug wrench.

### Special tool

(A): 09930-10121

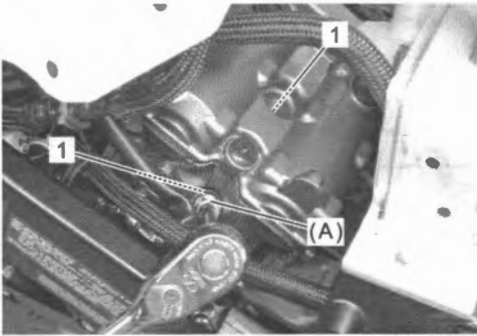

IH28K1180007-01

### Installation

Install the spark plug in the reverse order of removal. Pay attention to the following points:

- Screw the spark plugs into the cylinder head with fingers, and then tighten them to the specified torque.

### NOTICE


**Do not cross thread or over tighten the spark plug, or such an operation will damage the aluminum threads of the cylinder head.**

**Special tool**  
09930-10121

**Tightening torque**  
**Spark plug: 11 N·m (1.1 kgf·m, 8.5 lbf·ft)**

- Connect the spark plug caps. Refer to "Ignition Coil Construction" (Page 1H-5).

### Center side of spark plug cap

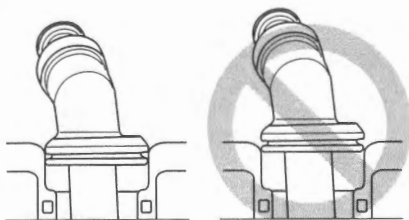

IE31J1180030-01

- Tighten the radiator mounting bolt. ☞(Page 1F-7)
- Tighten the radiator reservoir tank mounting bolts. ☞(Page 1F-10)

### Spark Plug Inspection

BENH28K21806003

Refer to "Spark Plug Removal and Installation" (Page 1H-6).

### Carbon Deposits

Check carbon deposits on the spark plug. If carbon is deposited, remove it using a spark plug cleaner machine or carefully use a tool with a pointed end.


### Spark Plug Gap

Measure the spark plug gap "a" using a thickness gauge. Adjust the spark plug gap if necessary.

### Spark plug

Type [Standard]: NGK MR8E-9

Gap [Standard]: 0.8 – 0.9 mm (0.032 – 0.035 in)

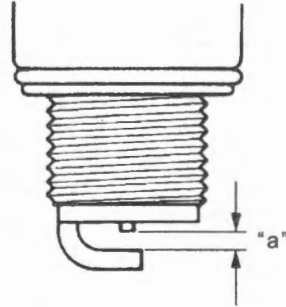

ID26J1180010-02

### Electrodes Condition

Check the worn or burnt condition of the electrodes. If it is extremely worn or burnt, replace the spark plug. And also replace the spark plug if it has a broken insulator, or damaged thread.

### NOTICE

**Confirm the thread size and reach when replacing the spark plug. If the reach is too short, carbon will be deposited on the screw portion of the spark plug hole and engine damage may result.**


## Ignition Coil Removal and Installation

BENH28K21806004

Refer to "Ignition Coil Construction" (Page 1H-5).


### Removal

- 1) Remove the throttle body. (Page 1D-9)
- 2) Disconnect the all spark plug caps. (Page 1H-6)
- 3) Disconnect the ignition coil #2 lead wire coupler (1).
- 4) Remove the ignition coil #2 (2).

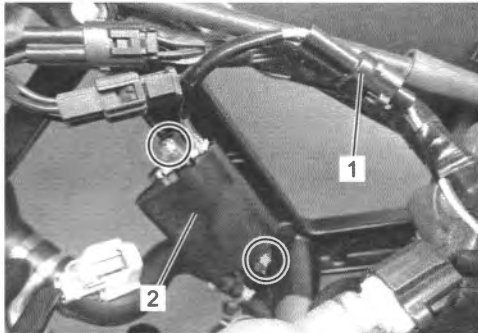

IH28K1180008-01

- 5) Disconnect the ignition coil #1 lead wire coupler (1).
- 6) Remove the ignition coil #1 (2).

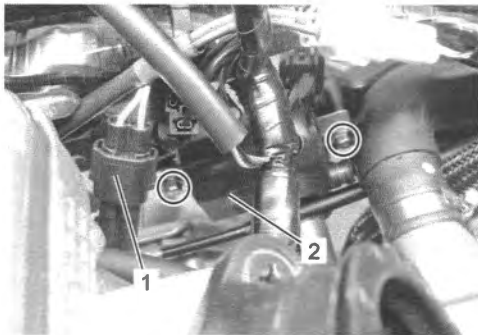

IH28K1180009-01

### Installation

Install the ignition coil in the reverse order of removal. Pay attention to the following points:

- Pass the high-tension cords (1) of ignition coil #2 under the engine mounting bracket (2).



IH28K1180010-01

- Connect the ignition coil #1 and #2 lead wire couplers. Refer to "Wiring Harness Routing Diagram" in Section 9A (Page 9A-7).

## Ignition Coil Inspection

BENH28K21806005

### Ignition Coil Primary Peak Voltage

- 1) Remove the air cleaner box. (Page 1D-6)
- 2) Disconnect the fuel injector couplers. Refer to "Fuel Injector On-Vehicle Inspection" in Section 1G (Page 1G-19).
- 3) Disconnect the all spark plug caps. (Page 1H-6)
- 4) Connect the new spark plugs to each spark plug cap and ground them to the cylinder heads.

### NOTE

Be sure that all the spark plugs are connected properly and the battery used is in fully-charged condition.



IH28K1180011-01



IH28K1180012-01

[A]: Cylinder #1

[B]: Cylinder #2

- 5) Insert the needle point probe to the lead wire coupler.

**Special tool**  
09900-25008

## 1H-9 Ignition System:

- 6) Connect the multi circuit tester with the peak volt adapter (1) as follows:


### NOTE

Do not disconnect the ignition coil lead wire couplers.


**Special tool**  
09900-25009

### Ignition coil – circuit tester connection


	(+) Probe	(-) Probe
Ignition coil #1 coupler (2)	W/BI wire terminal	W/R wire terminal
Ignition coil #2 coupler (3)	B wire terminal	W/R wire terminal

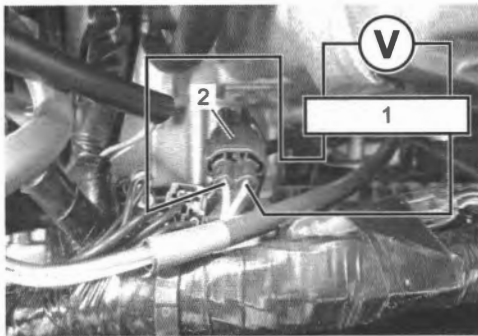

IH28K1180013-01

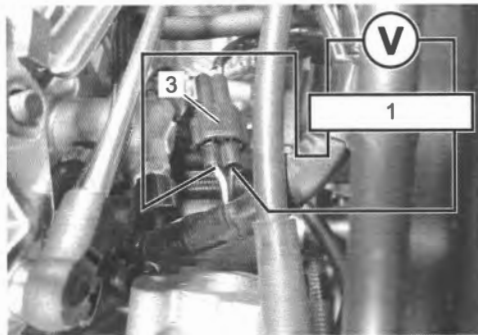

IH28K1180014-01

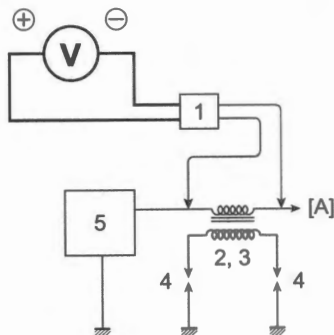

IH18K1180013-01

[A]: For engine stop switch
4. New spark plug
5. ECM

- 7) Measure the ignition coil primary peak voltage in the following procedures:

### ▲ WARNING

Do not touch the tester probes and spark plugs to prevent an electric shock while testing.


- Shift the transmission to the neutral and turn the ignition switch ON.
  - Press the starter switch and allow the engine to crank for a few seconds, and then measure the ignition coil primary peak voltage.
- 8) Repeat the b) procedure several times and measure the highest peak voltage.  
If the voltage is lower than standard range, replace the ignition coil. ⚡(Page 1H-8)

**Ignition coil primary peak voltage**  
[Standard]: 150 V or more

- 9) After measuring the ignition coil primary peak voltage, install the removed parts.


### Ignition Coil Resistance

- Disconnect the spark plug caps. ⚡(Page 1H-6)
- Disconnect the ignition coil #2 lead wire coupler (1).

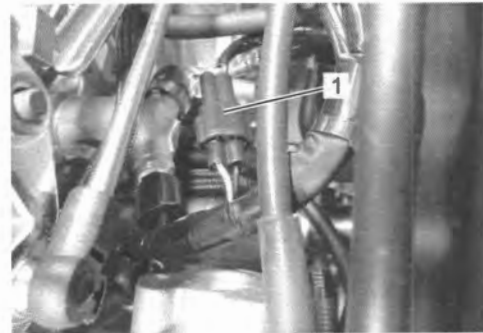

IH28K1180015-01

- 3) Disconnect the ignition coil #1 lead wire coupler (1).

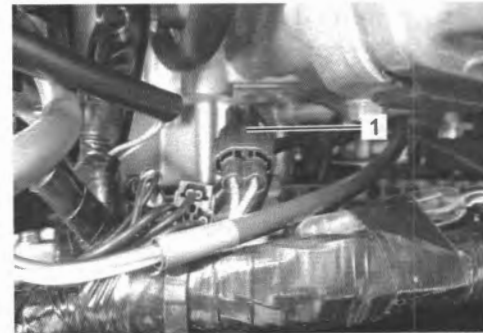

IH28K1180016-01

- 4) Measure the ignition coil for resistance in both primary and secondary coils. If the resistance is not within the standard range, replace the ignition coil with a new one.

**Ignition coil resistance**

**Primary [Standard]: 1.45 – 1.96 Ω ((+) B/W – (-) Brown)**


**Secondary [Standard]: 31730 – 35870 Ω ((+) Plug cap – Plug cap)**

- 5) After measuring the ignition coil resistance, connect the ignition coil #1 and #2 lead wire couplers. Refer to "Wiring Harness Routing Diagram" in Section 9A (Page 9A-7).
- 6) Install the removed parts.

**Engine Stop Switch Inspection**

BENH28K21806006

- 1) Turn the ignition switch OFF.
- 2) Remove the air cleaner box. (Page 1D-6)
- 3) Disconnect the right handle switch coupler (1).

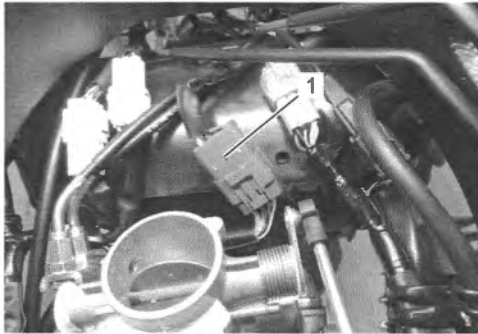

IH28K1180017-01

- 4) Inspect the engine stop switch for continuity with a multi circuit tester. If any abnormality is found, replace the right handle switch assembly with a new one. (Page 6B-3)

Color	O/B	O/W
Position		
OFF (⊗)		
RUN (⊙)	○ — ○	○ — ○


IH28K1180018-01

- 5) Connect the right handle switch coupler. Refer to "Wiring Harness Routing Diagram" in Section 9A (Page 9A-7).
- 6) Install the air cleaner box. (Page 1D-6)

**Ignition Switch Inspection**

BENH28K21806007

- 1) Remove the air cleaner box. (Page 1D-6)
- 2) Disconnect the ignition switch coupler (1).

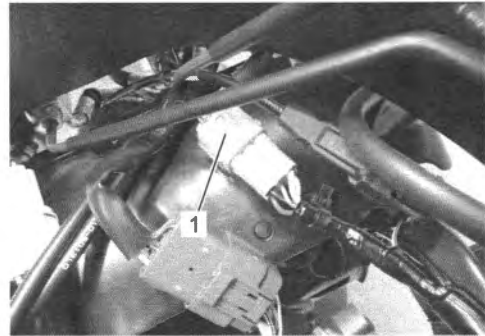

IH28K1180019-01

- 3) Inspect the ignition switch for continuity with a multi circuit tester. If any abnormality is found, replace the ignition switch with a new one.

**For U.S.A. and Canada**

Color	R	O	O/Y	Gr	Br
Position					
ON	○ — ○	○ — ○	○ — ○	○ — ○	○ — ○
OFF					
LOCK					
P	○				○

IH28K1180020-01

**Except for U.S.A. and Canada**

Color	R	O	O/Y	Br
Position				
ON	○ — ○	○ — ○	○ — ○	○ — ○
OFF				
LOCK				
P	○			○

IH28K1180021-01

**For Japan**

Color	R	O	O/Y	Br
Position				
ON	○ — ○	○ — ○		
OFF				
LOCK				

IH28K1180022-01

- 4) After finishing the ignition switch inspection, install the removed parts.


**Ignition Switch Removal and Installation**

BENH28K21806008

**Removal**

**For E.U.**


- 1) Remove the steering stem upper bracket. (Page 6B-8)
- 2) Remove the ignition switch mounting bolts (1) with a chisel.
- 3) Remove the ignition switch (2).

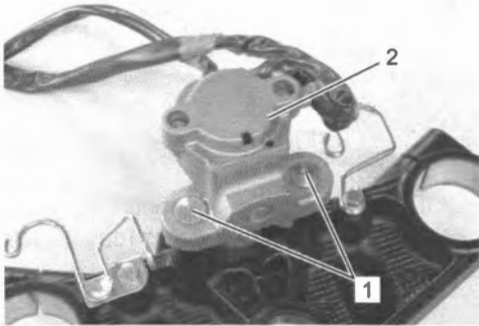

IH28K1180023-01


**Except for E.U.**

- 1) Remove the air cleaner box. (Page 1D-6)
- 2) Disconnect the ignition switch lead wire coupler (1) and immobilizer antenna lead wire coupler (if equipped) (2).

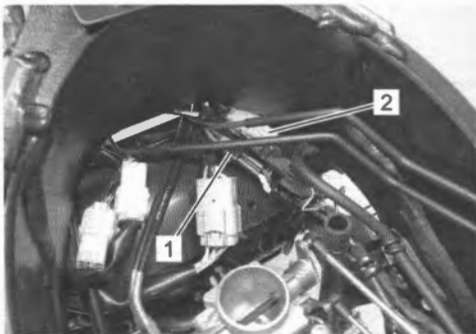

IH28K1180024-01


- 3) Remove the clamps (1).

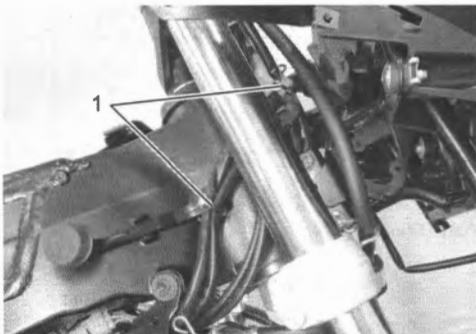

IH28K1180025-01

- 4) Remove the ignition switch (1) with the special tools.

**Special tool**  
09930-11920  
09930-11940

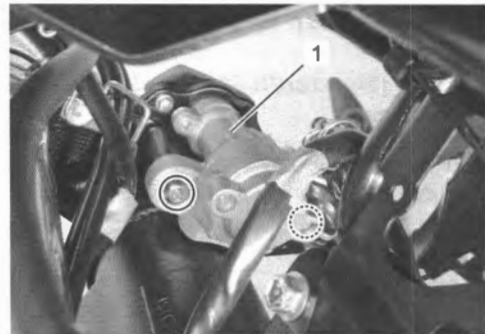

IH28K1180026-01

- 5) Remove the ignition switch cover (if equipped) (1).



IH28K1180027-01


**Installation**

Install the ignition switch in the reverse order of removal. Pay attention to the following points:

**For E.U.**

- Tighten new ignition switch mounting bolts (1) with the special tools until head of each bolt is broken off.

**Special tool**  
09930-11940  
09940-63110

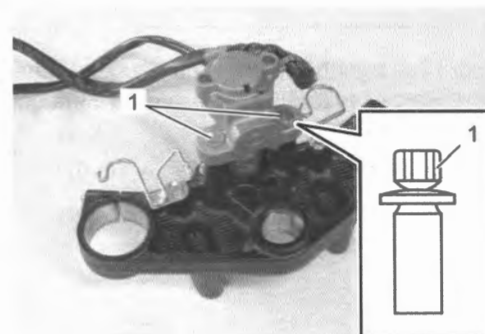


IH28K1180028-01

**Except for E.U.**

- When reusing the ignition switch mounting bolts (1), clean the thread part and apply the thread lock to them.
- “A”**: Thread lock cement 99000–32150 (THREAD LOCK CEMENT 1322D)
- Tighten the ignition switch mounting bolts (1) with the special tools.

**Special tool**  
 09930–11920  
 09930–11940

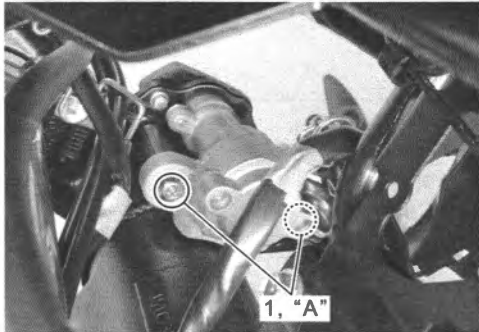


IH28K1180029-01

**Immobilizer Antenna Removal and Installation (If Equipped)**

BENH28K21806009

**Removal**

- 1) Remove the ignition switch. (Page 1H-11)
- 2) Remove the immobilizer antenna (1).

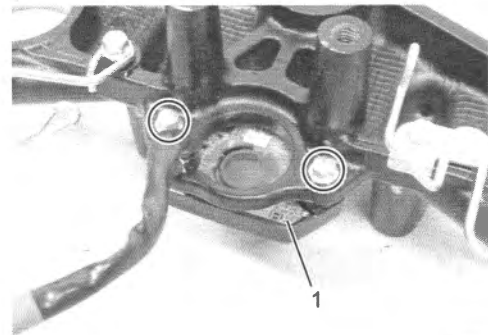

IH28K1180030-01

**Installation**

Install the immobilizer antenna in the reverse order of removal.

**Specifications**

**Tightening Torque Specifications**

BENH28K21807001

Fastening part	Tightening torque			Note
	N·m	kgf·m	lbf·ft	
Spark plug	11	1.1	8.5	(Page 1H-7)

**Reference:**

For the tightening torques of fasteners not specified in this page, refer to: “Fasteners Information” in Section 0C (Page 0C-11)

## Special Tools and Equipment

### Recommended Service Material

BENH28K21808001

Material	SUZUKI recommended product or Specification	Note
Thread lock cement	THREAD LOCK CEMENT 1322D P/No.: 99000-32150	☞(Page 1H-12)

### Special Tool

BENH28K21808002

<p>09900-25008 Multi circuit tester set 1. Multi circuit tester (09900-25004) 2. Revolution sensor (09900-25005) 3. Lead wire (09900-25006) 4. Peak volt adapter (09900-25007) ☞(Page 1H-8)</p>	<p>09900-25009 Needle point probe set ☞(Page 1H-9)</p>
<p>09930-10121 Spark plug socket set ☞(Page 1H-6) / ☞(Page 1H-7) / ☞(Page 1H-7)</p>	<p>09930-11920 Torx® bit (JT40H) Torx® is the registered trademark of Camcar Division of Textron inc. U.S.A. ☞(Page 1H-11) / ☞(Page 1H-12)</p>
<p>09930-11940 Torx® bit holder (3/8 sq.) Torx® is the registered trademark of Camcar Division of Textron inc. U.S.A. ☞(Page 1H-11) / ☞(Page 1H-11) / ☞(Page 1H-12)</p>	<p>09940-63110 Torx® bit (E8) Torx® is the registered trademark of Camcar Division of Textron inc. U.S.A. ☞(Page 1H-11)</p>




# Starting System

## Schematic and Routing Diagram

### Starting System Diagram

BENH28K21902001

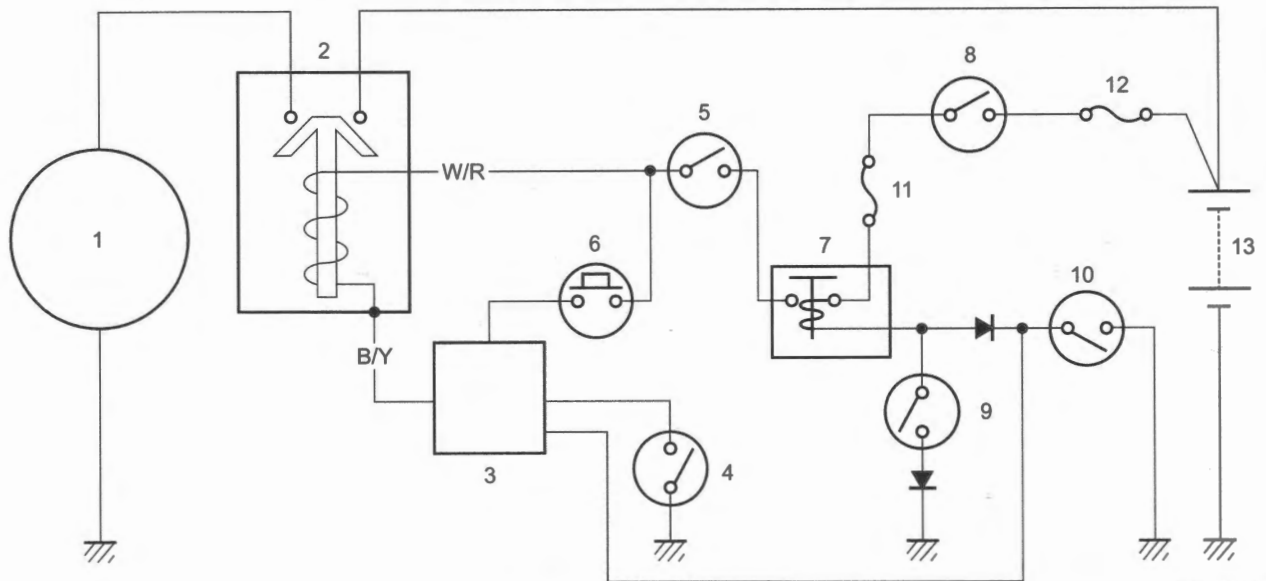

IH18K1190001-06

1. Starter motor	5. Engine stop switch	9. Side-stand switch	13. Battery
2. Starter relay	6. Starter switch	10. GP switch	
3. ECM	7. Side-stand relay	11. Ignition fuse	
4. Clutch lever position switch	8. Ignition switch	12. Main fuse	

## Component Location

### Starting System Components Location

BENH28K21903001

Refer to "Electrical Components Location" in Section 0A (Page 0A-8).

## Diagnostic Information and Procedures

### Starting System Symptom Diagnosis

BENH28K21904001

Condition	Possible cause	Correction / Reference Item
<b>Engine does not turn though the starter motor runs</b>	Faulty starter clutch.	Replace. ☞(Page 11-9)
<b>Starter button is not effective</b>	Run down battery.	Repair or replace. ☞(Page 1J-10)
	Defective switch contacts.	Replace. ☞(Page 6B-3)
	Brushes not seating properly on starter motor commutator.	Repair or replace. ☞(Page 11-5)
	Defective starter relay or starter interlock switch.	Replace. ☞(Page 11-6)
	Defective main fuse.	Replace.

## Starter Motor Will Not Run

BENH28K21904002

### NOTE

**Make sure the fuse is not blown and the battery is fully-charged before diagnosing.**

## Troubleshooting

### Step 1

- 1) Shift the transmission into neutral.
- 2) Turn on the ignition switch with the engine stop switch in the "RUN" position and listen for a click from the starter relay when the starter switch is pushed.

#### Is a click sound heard?

- Yes Go to Step 2.  
No Go to Step 3.

### Step 2

Check if the starter motor runs when its terminal is connected to the battery (+) terminal.

### NOTICE

**Do not use thin "wire" because a large amount of current flows.**

#### Does the starter motor run?

- Yes
- Faulty starter relay.
  - Loose or disconnected starter motor lead wire.
  - Loose or disconnected between starter relay and battery (+) terminal.
- No Faulty starter motor.

### Step 3

Measure the voltage between W/R wire (+) and B/Y wire (-) at the starter relay coupler when the starter switch is pushed. Refer to "Starting System Diagram" (Page 11-1).

#### Is the voltage OK?

- Yes Go to Step 4.
- No
- Faulty ignition switch.
  - Faulty engine stop switch.
  - Faulty clutch lever position switch.
  - Faulty GP switch.
  - Faulty ECM.
  - Faulty side-stand relay.
  - Faulty starter switch.
  - Faulty side-stand switch.
  - Poor contact of connector.
  - Open circuit in wire harness.

### Step 4

Check the starter relay. ↗ (Page 11-7)

#### Is the starter relay OK?

- Yes Poor contact of the starter relay.  
No Faulty starter relay.

## Starter Motor Runs But Does Not Crank the Engine

BENH28K21904003

The starter motor runs when the transmission is in neutral, but does not run when the transmission is in any position other than neutral, with the side-stand up.

### Step 1

Check the side-stand switch. ↗ (Page 11-7)

#### Is the side-stand switch OK?

- Yes Go to Step 2.  
No Faulty side-stand switch.

### Step 2

Check the starter clutch. ↗ (Page 11-11)


#### Is the starter clutch OK?

- Yes
- Open circuit in wire harness.
  - Poor contact of connector.
- No Faulty starter clutch.

# Repair Instructions

## Starter Motor Components

BENH28K21906001

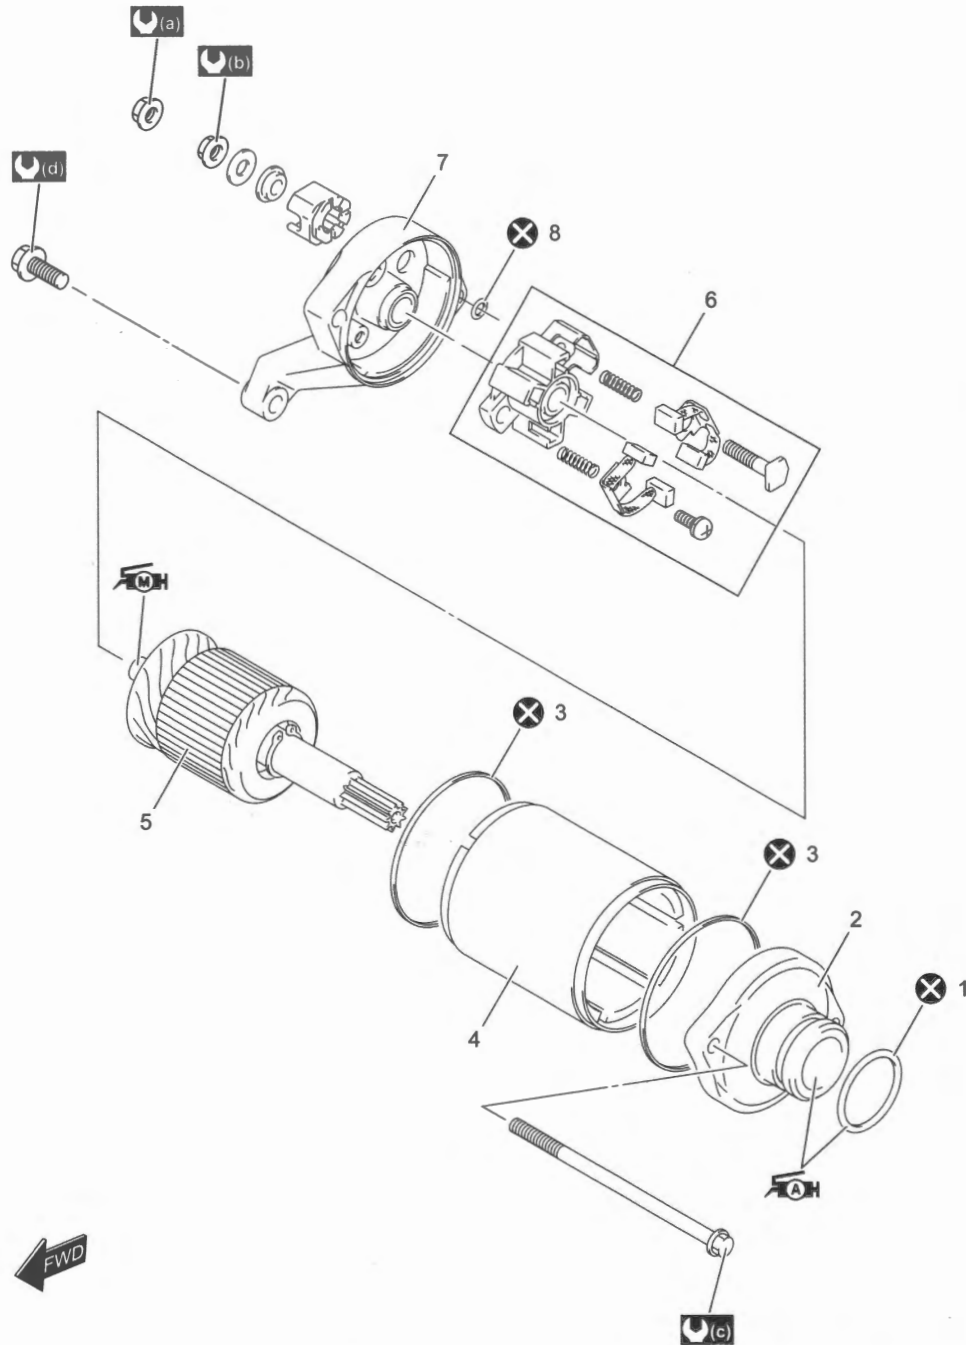

IH18K1190002-02


1. O-ring	6. Brush holder set	(c) : 5.0 N-m (0.51 kgf-m, 3.70 lbf-ft)
2. Front bracket	7. Rear bracket	(d) : 10 N-m (1.0 kgf-m, 7.5 lbf-ft)
3. Square ring	8. O-ring	AH : Apply grease.
4. Starter motor case	(a) : 6.0 N-m (0.61 kgf-m, 4.45 lbf-ft)	MH : Apply moly paste to sliding surface.
5. Armature	(b) : 11 N-m (1.1 kgf-m, 8.5 lbf-ft)	X : Do not reuse.

## Starter Motor Assembly Removal and Installation

BENH28K21906002

### Removal

- 1) Turn the ignition switch OFF and disconnect the battery (-) lead wire. (Page 1J-11)
- 2) Remove the under cowling (if equipped). (Page 9D-30)
- 3) Disconnect the starter motor lead wire (1).

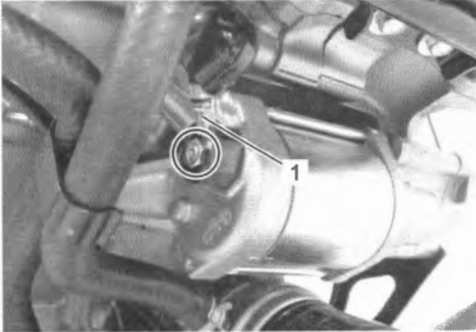

IH28K1190001-01

- 4) Remove the starter motor (1).



IH28K1190002-01

### Installation

Install the starter motor in the reverse order of removal. Pay attention to the following points:

- Apply grease to the new O-ring.

**"A": Grease 99000-25011 (SUZUKI SUPER GREASE A)**



IH18K1190005-01

- Tighten the starter motor lower mounting bolt (1) first, then tighten the starter motor upper mounting bolt (2). Refer to "Wiring Harness Routing Diagram" in Section 9A (Page 9A-7).


### NOTE

**Fit the clamp (3) to the starter motor lower mounting bolt (1).**

### Tightening torque

**Starter motor mounting bolt (a): 10 N·m (1.0 kgf-m, 7.5 lbf-ft)**

- Clamp the oil pressure lead wire and water pump drain hose with the clamp (3).

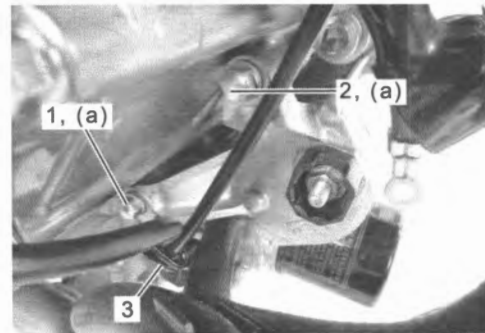


IH28K1190003-01

- Tighten the starter motor lead wire mounting nut (1) to the specified torque.

### Tightening torque

**Starter motor lead wire mounting nut (a): 6.0 N·m (0.61 kgf-m, 4.45 lbf-ft)**

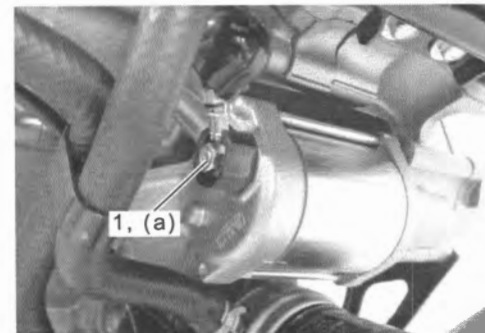

IH28K1190004-01

## Starter Motor Disassembly and Reassembly

BENH28K21906003

Refer to "Starter Motor Assembly Removal and Installation" (Page 11-4).

### Disassembly


Disassemble the starter motor. ⚙️ (Page 11-3)

### Reassembly

Reassemble the starter motor in the reverse order of disassembly. Pay attention to the following points:

- Replace the O-ring and square ring with new ones.
- Apply grease to the lip of the oil seal.


**"A": Grease 99000-25011 (SUZUKI SUPER GREASE A)**

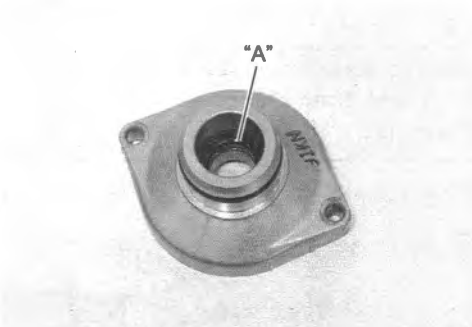

IH18K1190008-01

- Apply a small quantity of moly paste to the armature shaft.

**"A": Assembly lubrication 99000-25140 (SUZUKI MOLY PASTE)**

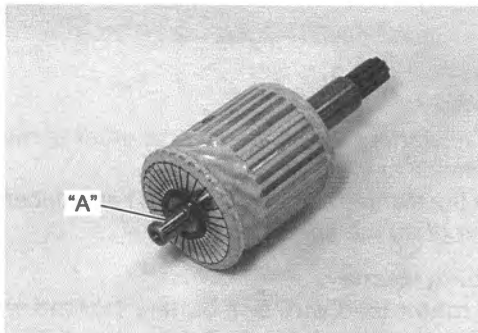

IH18K1190009-03

- Align the match mark on the starter motor case with the match mark on the bracket.


### NOTE

The groove side [A] of starter motor case should face rear bracket.

- Tighten the starter motor set bolts (1) to the specified torque.

### Tightening torque

Starter motor set bolt (a): 5.0 N·m (0.51 kgf-m, 3.70 lbf-ft)

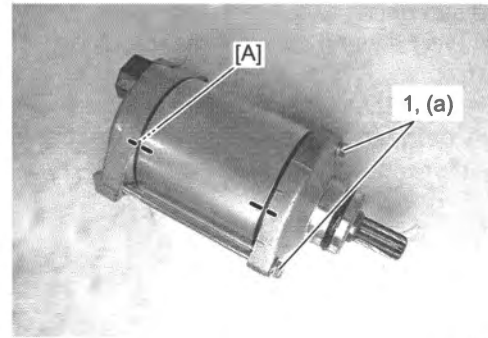

IH18K1190010-02

## Starter Motor Inspection

BENH28K21906004

Refer to "Starter Motor Disassembly and Reassembly" (Page 11-5).

### Carbon Brush

Inspect the carbon brushes for abnormal wear, cracks or smoothness in the brush holder.


If any damages are found, replace the brush holder set with a new one.

Make sure that the length "a" is not less than the service limit. If this length becomes less than the service limit, replace the brush holder set with a new one.

### Starter motor brush length

[Limit]: 6.5 mm (0.26 in)

Special tool  
09900-20102

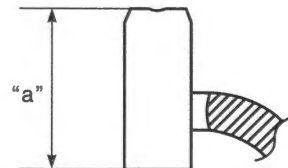

I718H1190013-01


### Commutator

Inspect the commutator for discoloration, abnormal wear or undercut "a".

If the commutator is abnormally worn, replace the armature.

If the commutator surface is discolored, polish it with #400 sandpaper and wipe it using a clean, dry cloth.

If there is no undercut, scrape out the insulator (1) with a saw blade.

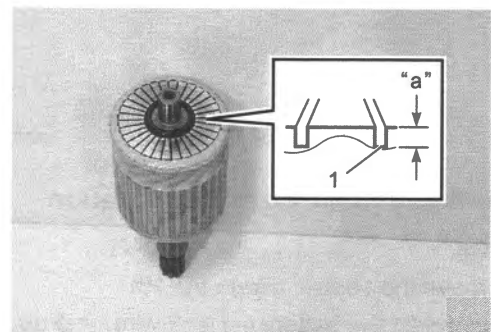


IH18K1190011-01

## 11-6 Starting System:

### Armature Coil

Measure for continuity between each segment. Measure for continuity between each segment and the armature shaft.


If there is no continuity between the segments or there is continuity between the segments and shaft, replace the starter motor with a new one.

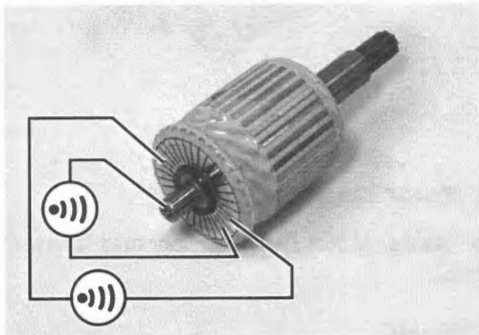

IH18K1190012-02

### Bearing

Check the bearing (1) for abnormal noise and smooth rotation. If any defects are found, replace the starter motor with a new one.

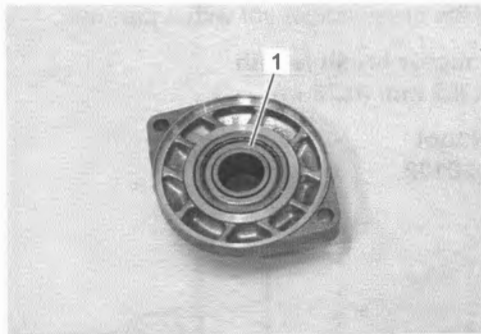

IH18K1190013-01

### Oil Seal

Check the seal lip (1) for damage.

If any damage is found, replace the starter motor with a new one.



IH18K1190014-01


## Starter Relay Removal and Installation

BENH28K21906005

### Removal

- 1) Remove the seat. ⚙ (Page 9D-19)
- 2) Disconnect the battery (-) lead wire. ⚙ (Page 1J-11)

- 3) Disconnect the starter relay coupler (1) and remove the starter relay cover (2).

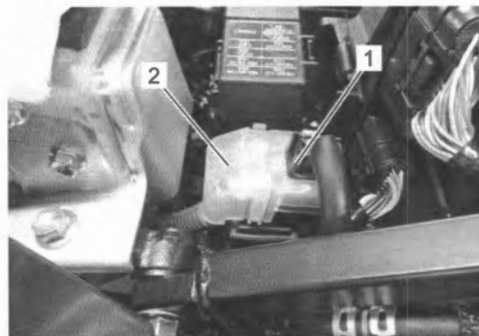


IH28K1190005-01

- 4) Disconnect the starter motor lead wire (1) and battery (+) lead wire (2).

### NOTE

**Be sure to disconnect the starter motor lead wire (1) first, then disconnect the battery (+) lead wire (2).**

- 5) Remove the starter relay (3).

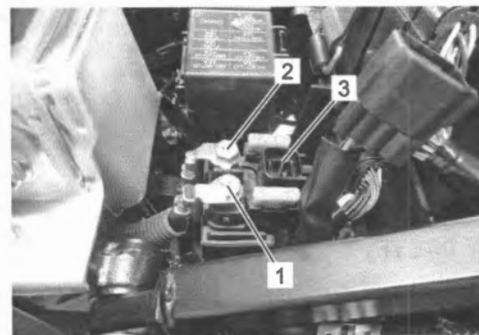

IH28K1190006-01


### Installation

Install the starter relay in the reverse order of removal. Pay attention to the following point.

Tighten the starter motor lead wire (1) and battery (+) lead wire (2) to the specified torque.

### Tightening torque

**Starter motor lead wire and battery (+) lead wire mounting bolt (a): 4.4 N·m (0.45 kgf-m, 3.25 lbf-ft)**

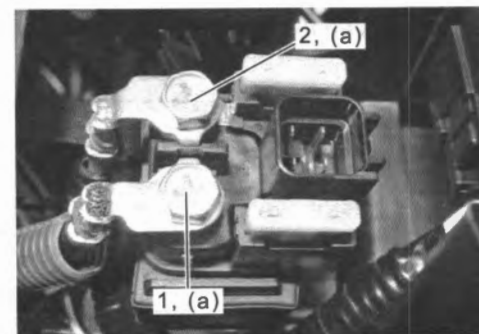

IH28K1190007-02

## Starter Relay Inspection


BENH28K21906006

Refer to "Starter Relay Removal and Installation" (Page 11-6).


- 1) Apply 12 V to (1) and (2) terminals and check for continuity between the positive and negative terminals using the multi circuit tester. If the starter relay clicks and continuity is found, the relay is OK.

### NOTICE

**Do not apply battery voltage to the starter relay for five seconds or more, otherwise the relay coil may overheat and get damaged.**

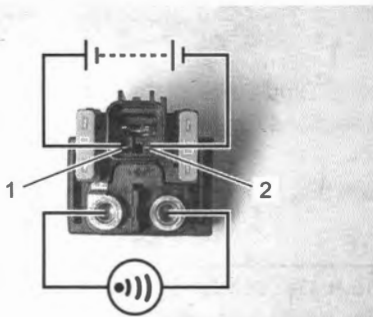

IH18K1190017-01

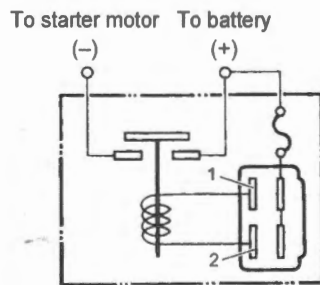


IE31J1190016-02

- 2) Measure the relay coil resistance between the terminals using the multi circuit tester. If the resistance is not within the specified value, replace the starter relay with a new one.

### Starter relay resistance

**[Standard]: 3 – 6 Ω**

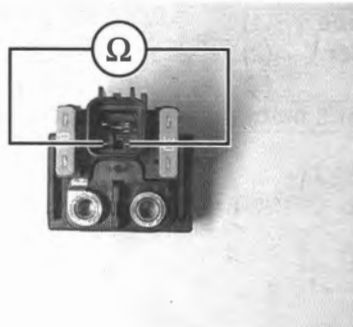

IH18K1190018-01

## Side-stand Relay Removal and Installation

BENH28K21906007

### Removal

- 1) Turn the ignition switch OFF.
- 2) Remove the seat. (Page 9D-19)
- 3) Remove the cap and side-stand relay (1).



IH28K1190008-02

### Installation

Install the side-stand relay in the reverse order of removal.


## Starter Interlock System Parts Inspection

BENH28K21906008

Check the interlock system for proper operation. If the interlock system does not operate properly, check each component for damage or abnormalities. If any abnormality is found, replace the component with a new one.

### Side-stand Switch

- 1) Turn the ignition switch OFF.
- 2) Lift and support the fuel tank. (Page 1G-10)
- 3) Disconnect the side-stand switch coupler (1).

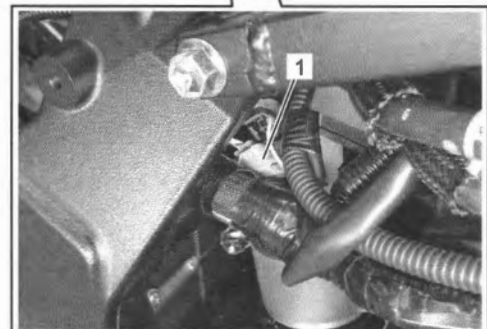

IH28K1190009-01

## 11-8 Starting System:

- 4) Set the "Diode test" of the multi circuit tester. Refer to "Precautions for Circuit Tester" in Section 00 (Page 00-7).
- 5) Check that the tester reads 1.4 V or more.

### NOTE

If the tester reads less than 1.4 V when the tester probes are not connected, replace its battery.

- 6) Measure the voltage between G ((+) probe) and B/W ((-) probe) lead wires of the side-stand switch.

### Side-stand switch voltage

ON (Side-stand retracted) [Standard]: 0.4 – 0.6 V  
 OFF (Side-stand on the ground) [Standard]: 1.4 V or more




IH28K1190010-01

### Side-stand Relay

Refer to "Side-stand Relay Removal and Installation" (Page 11-7).

First, check for insulation with a circuit tester between terminals (3) and (4). Next, check for continuity between (3) and (4) with 12 V voltage applied, positive (+) to terminal (1) and negative (-) to terminal (2). If continuity does not exist, replace the relay with a new one.

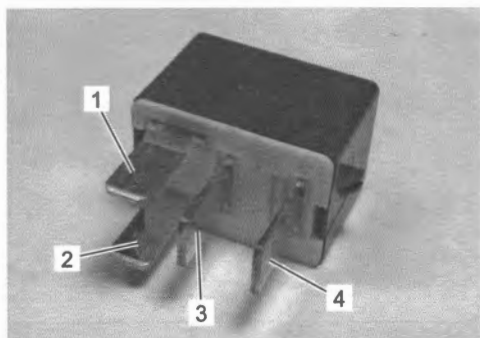

IE31J1190021-01

### Diode

- 1) Turn the ignition switch OFF.
- 2) Remove the seat. (Page 9D-19)
- 3) Remove the fuse box cap and diode (1).



IH28K1190011-01


- 4) Set the "Diode test" of the multi circuit tester. Refer to "Precautions for Circuit Tester" in Section 00 (Page 00-7).
- 5) Check that the tester reads 1.4 V or more.

### NOTE

If the tester reads less than 1.4 V when the tester probes are not connected, replace its battery.

- 6) Measure the voltage between the (1), (2) and (3) terminals.

### Diode voltage

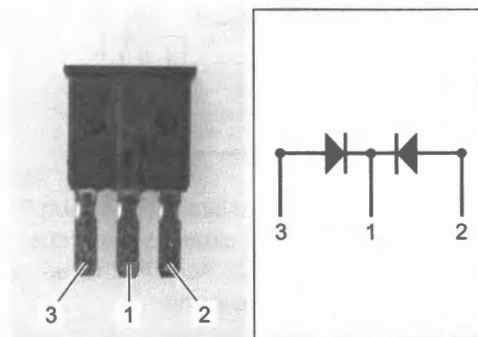

IH18K1190023-02

		(+ ) Probe of tester to:		
		(1)	(2)	(3)
(-) Probe of tester to:	(1)	—	1.5 V (*)	1.5 V (*)
	(2)	0.5 V	—	0.5 V
	(3)	1.5 V (*)	1.5 V (*)	—

\* Tester's battery voltage: 1.4 V or more

### GP Switch

Refer to "GP Switch Inspection" in Section 5B (Page 5B-11).




**Starter Clutch Removal and Installation**

BENH28K21906009


**Removal**

- 1) Drain the engine oil. (Page 1E-4)
- 2) Remove the generator rotor (1). (Page 1J-5)

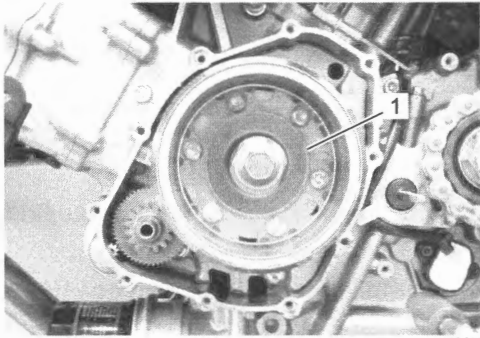


IH28K1190012-01

- 3) Remove the key (1) and starter clutch gear (2).
- 4) Remove the shaft (3) and starter idle gear (4).

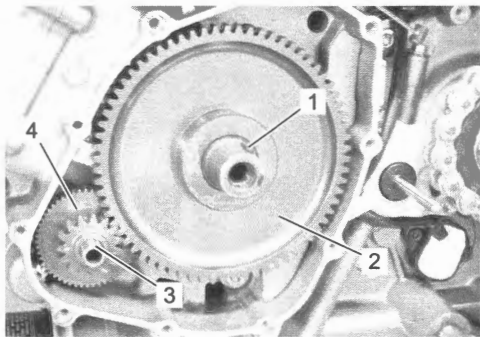


IH28K1190013-01

- 5) Hold the generator rotor with the special tool and remove the starter clutch bolts (1).

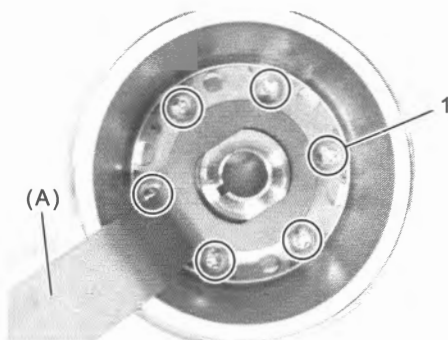**Special tool****(A): 09930-44530**

IH28K1190014-01

- 6) Remove the starter one way clutch (1) from the guide (2).

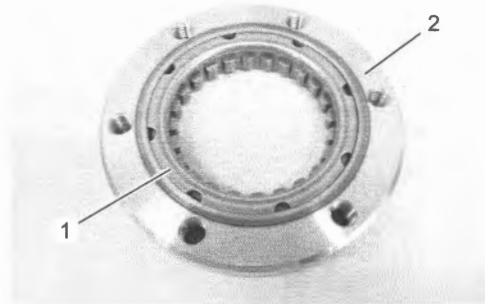


IH28K1190015-01


**Installation**

Install the starter clutch in the reverse order of removal. Pay attention to the following points:

- Clean the thread lock (1) in bolt holes of guide and starter clutch bolts.

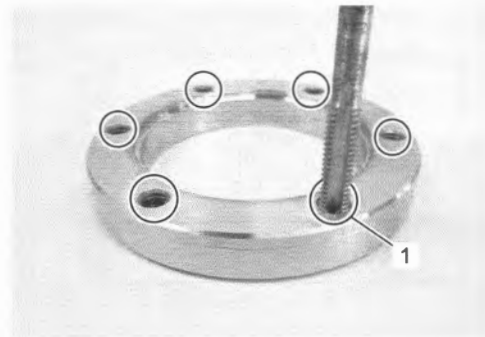

IH28K1190016-01

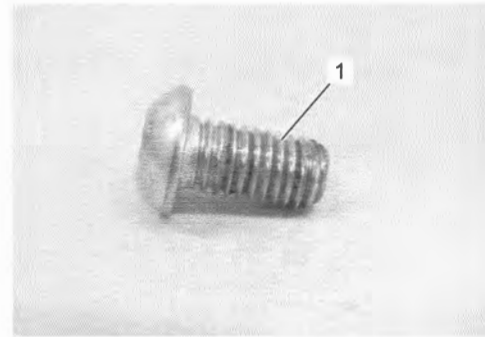


IH28K1190017-01

## 11-10 Starting System:


- Apply engine oil to the starter one way clutch (1).
- When inserting the one way clutch (1) into the guide (2), fit the flange (3) in the step of the guide (2).

### NOTE

**Be sure to seat the flange (3) of the one way clutch (1) to the guide (2).**

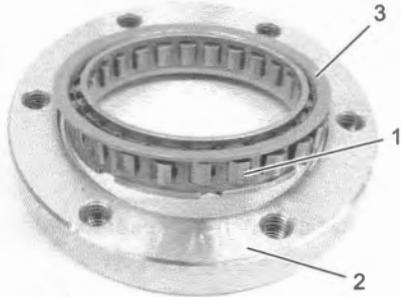


IH28K1190018-01

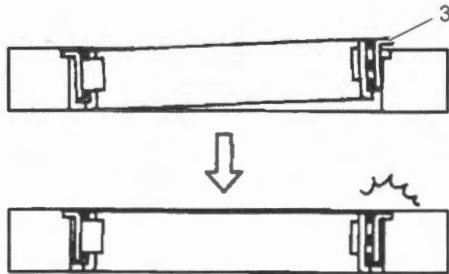

IE31J1190036-01

- Install the guide (1) to the generator rotor with the arrow mark (2) faced upward.

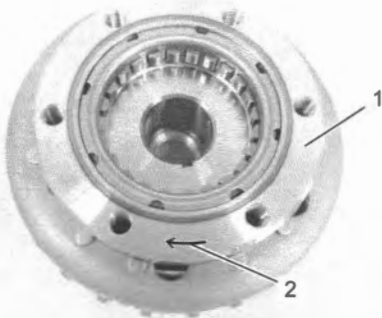

IH28K1190019-01

- Apply thread lock to the bolts (1), and then tighten them to the specified torque with the special tool.


**"A": Thread lock cement 99000-32030 (THREAD LOCK CEMENT 1303B)**

### Special tool

**(A): 09930-44530**

### Tightening torque


**Starter clutch bolt (a): 25 N·m (2.5 kgf-m, 18.5 lbf-ft)**

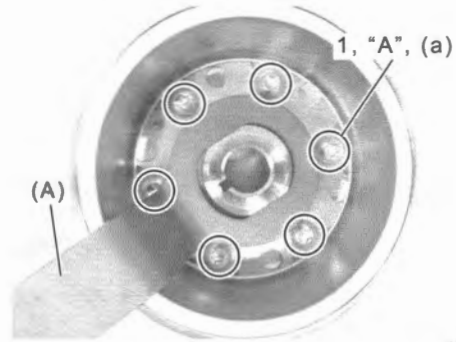


IH28K1190020-01

- Apply molybdenum oil solution to the starter idle gear shaft holes.

**"A": Assembly lubrication (Molybdenum oil solution)**

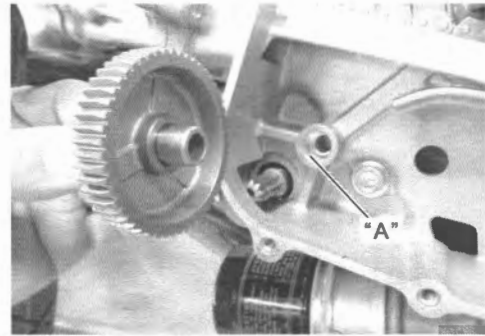


IH28K1190021-01

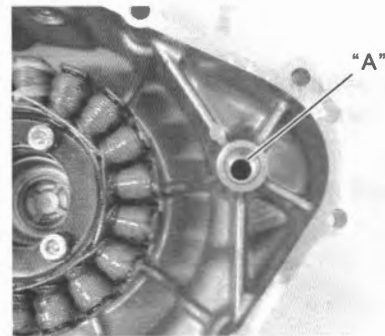


IH28K1190022-01

- Apply engine oil to the bushing (1) of the starter clutch gear.

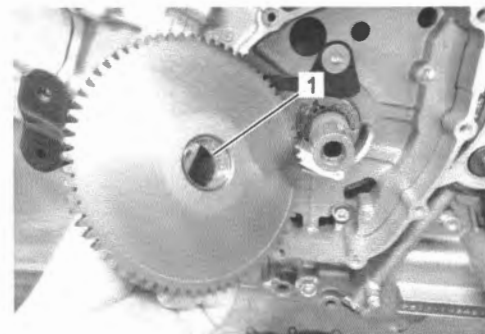

IH28K1190023-01

- Fit the key (1) in the key slot on the crankshaft.

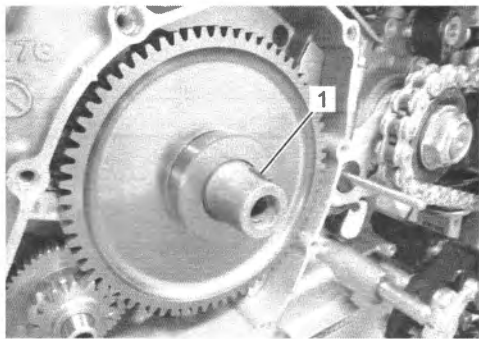

IH28K1190024-01

- Install the generator rotor onto crankshaft. (Page 1J-7)


### Starter Clutch Inspection

BENH28K21906010

Refer to "Starter Clutch Removal and Installation" (Page 11-9).

### Starter Clutch


- 1) Install the starter clutch gear onto the starter clutch.
- 2) Turn the starter clutch gear by hand to inspect the starter clutch for a smooth movement. The gear turns in one direction only. If a large resistance is felt for rotation, inspect the starter clutch or the starter clutch contacting surface on the starter clutch gear for wear or damage. If they are found to be damaged, replace them with new ones.

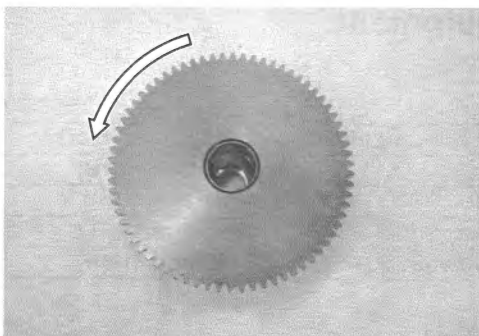

IH18K1190036-01

### Starter Clutch Gear Bushing


Inspect the starter clutch gear bushing (1) for wear or damage. If any defects are found, replace the starter clutch set with a new one.

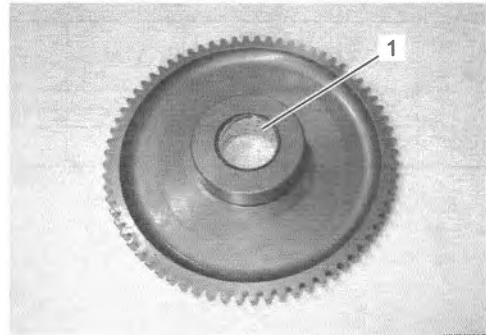

IH18K1190037-01

### Starter Idle Gear

Inspect the starter idle gear for wear or damage. If any defects are found, replace it with a new one.

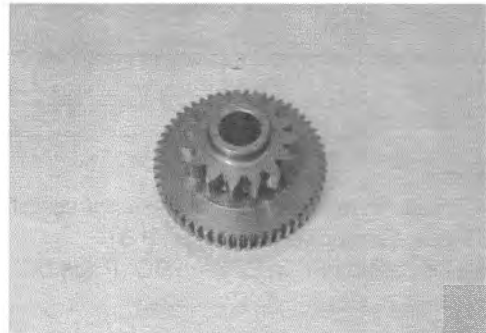

I944H1190037-01

### Starter Switch Inspection

BENH28K21906011

- 1) Turn the ignition switch OFF.
- 2) Remove the air cleaner box. (Page 1D-6)
- 3) Disconnect the right handle switch coupler (1).



IH28K1190025-01

## 11-12 Starting System:

4) Inspect the starter switch for continuity with a multi circuit tester.

If any defect is found, replace the right handle switch assembly with a new one. ☞(Page 6B-3)

**For E.U. and Japan**

Color Position	O/W	Y/G	Y/W	O/R
.			○ — ○	
PUSH	○ — ○			

IH28K1190027-01

**Except for E.U. and Japan**

Color Position	O/W	Y/G	O/R	Y/W
.			○ — ○	
PUSH	○ — ○			

IH28K1190026-01

5) Connect the right handle switch coupler. Refer to "Wiring Harness Routing Diagram" in Section 9A (Page 9A-7).

6) Install the removed parts.

## Specifications

### Tightening Torque Specifications

BENH28K21907001

Fastening part	Tightening torque			Note
	N·m	kgf·m	lbf·ft	
Starter motor mounting bolt	10	1.0	7.5	☞(Page 11-4)
Starter motor lead wire mounting nut	6.0	0.61	4.45	☞(Page 11-4)
Starter motor set bolt	5.0	0.51	3.70	☞(Page 11-5)
Starter motor lead wire and battery (+) lead wire mounting bolt	4.4	0.45	3.25	☞(Page 11-6)
Starter clutch bolt	25	2.5	18.5	☞(Page 11-10)

### Reference:

For the tightening torques of fasteners not specified in this page, refer to:

"Starter Motor Components" (Page 11-3)

"Fasteners Information" in Section 0C (Page 0C-11)

## Special Tools and Equipment

### Recommended Service Material

BENH28K21908001



Material	SUZUKI recommended product or Specification		Note
Assembly lubrication	Molybdenum oil solution	—	☞(Page 11-10)
	SUZUKI MOLY PASTE	P/No.: 99000-25140	☞(Page 11-5)
Grease	SUZUKI SUPER GREASE A	P/No.: 99000-25011	☞(Page 11-4) / ☞(Page 11-5)
Thread lock cement	THREAD LOCK CEMENT 1303B	P/No.: 99000-32030	☞(Page 11-10)

### NOTE

Required service material(s) is also described in:  
"Starter Motor Components" (Page 11-3)

### Special Tool

BENH28K21908002

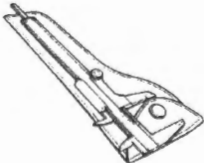
09900-20102 Vernier calipers (200 mm) ☞(Page 11-5)		09930-44530 Rotor holder ☞(Page 11-9) / ☞(Page 11-10)	
--	---	--	---

# Charging System

## Schematic and Routing Diagram

### Charging System Diagram

BENH28K21A02001

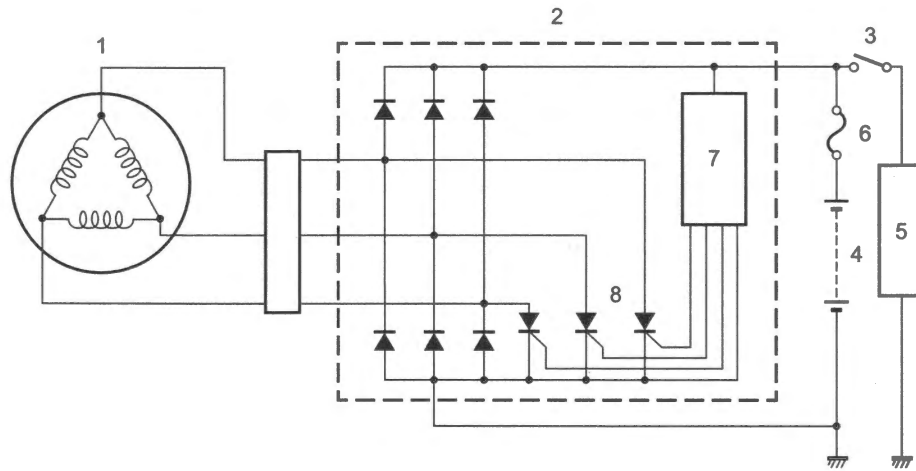

IH18K11A0001-02

1. Generator	4. Battery	7. Integrated circuit
2. Regulator/rectifier	5. Load	8. Silicon controlled rectifier
3. Ignition switch	6. Main fuse	

## Component Location

### Charging System Components Location

BENH28K21A03001

Refer to "Electrical Components Location" in Section 0A (Page 0A-8).

## Diagnostic Information and Procedures

### Charging System Symptom Diagnosis

BENH28K21A04001

Condition	Possible cause	Correction / Reference Item
<b>Generator does not charge</b>	Open- or short-circuited lead wires, or loose lead connections.	<i>Repair, replace or connect properly.</i>
	Short-circuited, grounded or open generator coil.	<i>Replace.</i> • <i>Removal:</i> ⌚(Page 1J-5) • <i>Installation:</i> ⌚(Page 1J-7)
	Short-circuited or punctured regulator/rectifier.	<i>Replace.</i> ⌚(Page 1J-9)
<b>Generator does charge, but charging rate is below the specification</b>	Lead wires tend to get short- or open-circuited or loosely connected at terminals.	<i>Repair or retighten.</i>
	Grounded or open-circuited generator coil.	<i>Replace.</i> • <i>Removal:</i> ⌚(Page 1J-5) • <i>Installation:</i> ⌚(Page 1J-7)
	Defective regulator/rectifier.	<i>Replace.</i> ⌚(Page 1J-9)
	Defective cell plates in the battery.	<i>Replace the battery.</i> ⌚(Page 1J-11)
<b>Generator overcharges</b>	Internal short-circuit in the battery.	<i>Replace the battery.</i> ⌚(Page 1J-11)
	Damaged or defective regulator/rectifier.	<i>Replace.</i> ⌚(Page 1J-9)
	Poorly grounded regulator/rectifier.	<i>Clean and tighten ground connection.</i>
<b>Unstable charging</b>	Lead wire insulation frayed due to vibration, resulting in intermittent short-circuiting.	<i>Repair or replace.</i>
	Internally short-circuited generator.	<i>Replace.</i> • <i>Removal:</i> ⌚(Page 1J-5) • <i>Installation:</i> ⌚(Page 1J-7)
	Defective regulator/rectifier.	<i>Replace.</i> ⌚(Page 1J-9)
<b>Battery overcharges</b>	Faulty regulator/rectifier.	<i>Replace.</i> ⌚(Page 1J-9)
	Faulty battery.	<i>Replace.</i> ⌚(Page 1J-11)
	Poor contact of generator lead wire coupler.	<i>Repair.</i>
<b>Battery runs down quickly</b>	Trouble in charging system.	<i>Check the generator, regulator/rectifier and circuit connections and make necessary adjustments to obtain specified charging operation.</i> ⌚(Page 1J-4)
	Cell plates have lost much of their active materials a result of overcharging.	<i>Replace the battery and correct the charging system.</i> ⌚(Page 1J-11)
	Internal short-circuit in the battery.	<i>Replace the battery.</i> ⌚(Page 1J-11)
	Too low battery voltage.	<i>Recharge the battery fully.</i> ⌚(Page 1J-10)
	Too old battery.	<i>Replace the battery.</i> ⌚(Page 1J-11)
<b>Battery "sulfation"</b>	Incorrect charging rate. (When not in use battery should be checked at least once a month to avoid sulfation.)	<i>Replace the battery.</i> ⌚(Page 1J-11)
	The battery was left unused in a cold climate for too long.	<i>Replace the battery if badly sulfated.</i> ⌚(Page 1J-11)
<b>"Sulfation", acidic white powdery substance or spots on surface of cell plates</b>	Cracked battery case.	<i>Replace the battery.</i> ⌚(Page 1J-11)
	Battery has been left in a run-down condition for a long time.	<i>Replace the battery.</i> ⌚(Page 1J-11)

**Battery Runs Down Quickly**

BENH28K21A04002

**Troubleshooting****Step 1**

Check accessories which use excessive amounts of electricity.

**Are accessories installed?**

- Yes    Remove accessories.
- No     Go to Step 2.

**Step 2**

Check the battery for current leakage. ⌚(Page 1J-4)

**Is the battery for current leakage OK?**

- Yes    Go to Step 3.
- No     • Short circuit of wire harness.  
• Faulty electrical equipment.

**Step 3**

Measure the regulated voltage between the battery terminals. ⌚(Page 1J-4)

**Is the regulated voltage OK?**

- Yes    • Faulty battery.  
• Abnormal driving condition.
- No     Go to Step 4.

**Step 4**

Measure the resistance of the generator coil. ⌚(Page 1J-4)

**Is the resistance of generator coil OK?**

- Yes    Go to Step 5.
- No     • Faulty generator coil.  
• Poor contact of couplers.

**Step 5**

Measure the generator no-load performance. ⌚(Page 1J-4)

**Is the generator no-load performance OK?**

- Yes    Go to Step 6.
- No     Faulty generator.

**Step 6**

Inspect the regulator/rectifier. ⌚(Page 1J-8)

**Is the regulator/rectifier OK?**

- Yes    Go to Step 7.
- No     Faulty regulator/rectifier.

**Step 7**

Inspect wirings.

**Is the wirings OK?**

- Yes    Faulty battery.
- No     • Short circuit of wire harness.  
• Poor contact of couplers.

## Repair Instructions

### Battery Current Leakage Inspection


BENH28K21A06001

- 1) Turn the ignition switch OFF.
- 2) Disconnect the battery (-) lead wire. (Page 1J-11)
- 3) Measure the current between the battery (-) terminal and the battery (-) lead wire using the multi circuit tester. If the reading exceeds the specified value, leakage is evident.

#### NOTICE

- In case of a large current leak, turn the tester to high range first to avoid tester damage.
- Do not turn the ignition switch to ON position when measuring current.

**Battery leakage current**  
[Standard]: 2 mA or less

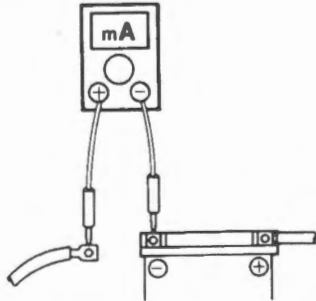

I649G11A0002-02

- 4) Connect the battery (-) terminal. (Page 1J-11)

### Regulated Voltage Inspection

BENH28K21A06002

- 1) Remove the seat. (Page 9D-19)
- 2) Start the engine and keep it running at 5000 r/min with the dimmer switch turned HI position.
- 3) Measure the DC voltage between the battery (+) and (-) terminals using the multi circuit tester. If the voltage is not within the specified value, inspect the generator and regulator/rectifier.
  - Generator: (Page 1J-4)
  - Regulator/rectifier: (Page 1J-8)


#### NOTE

**When making this test, be sure that the battery is in fully charged condition.**

### Regulated voltage

#### Charging output

At 5000 r/min [Standard]: 14 – 15 V

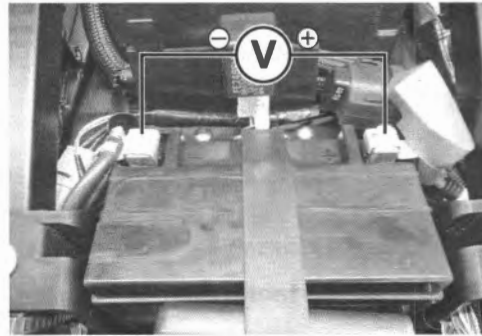

IH28K11A0001-01



- 4) Install the removed parts.

### Generator Inspection

BENH28K21A06003

#### Generator Coil Resistance

- 1) Disconnect the generator coupler (1).

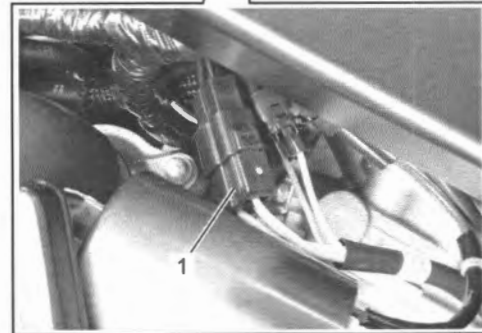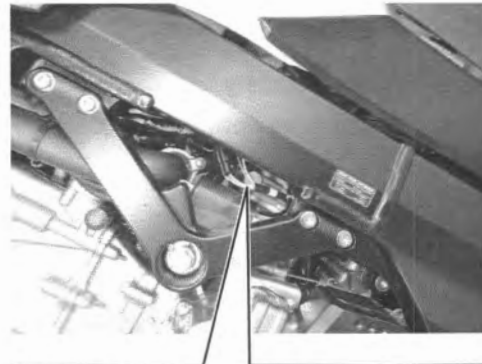

IH28K11A0002-01




- 2) Measure the resistance between the three lead wires.

If the resistance is out of specified value, replace the stator with a new one. Also, check that the generator core is insulated properly.

**Generator coil resistance**

[Standard]: 0.19 – 0.23 Ω (Y – Y)

∞ Ω (Y – Ground)

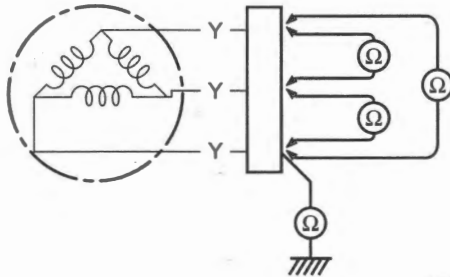


IH28K11A0003-01

- 3) Connect the generator coupler.

**No-load Performance**

- 1) Disconnect the generator coupler (1).

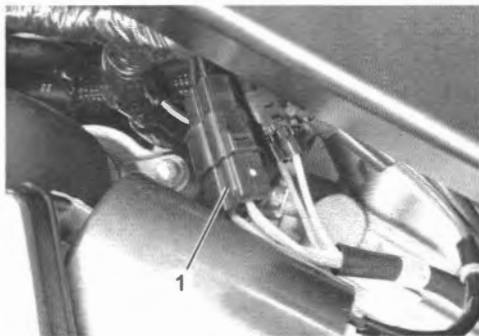


IH28K11A0004-01

- 2) Start the engine and keep it running at 5000 r/min.
- 3) Using the multi circuit tester, measure the voltage between three lead wires.  
If the tester reads under the specified value, replace the generator stator with a new one.

**Generator no-load voltage**

When engine is cold

At 5000 r/min [Standard]: 60 V (AC) or more

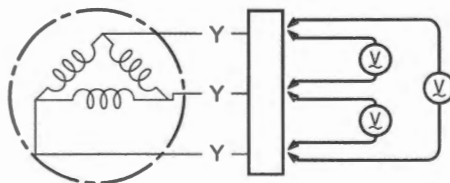


IH28K11A0034-01

- 4) Connect the generator coupler.

**Generator Removal**


BENH28K21A06004

- 1) Drain engine oil. (Page 1E-4)
- 2) Remove the engine sprocket cover (1). Refer to "Engine Sprocket Removal and Installation" in Section 3A (Page 3A-4).

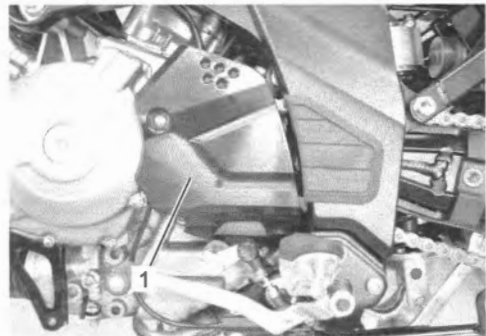

IH28K11A0005-01

- 3) Remove the clutch release arm bolt (1) and nut.
- 4) Remove the clutch release arm (2), spring (3) and washer (4).

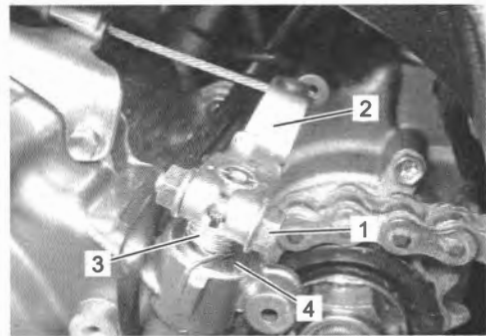

IH28K11A0006-01


- 5) Release the generator lead wires from the clamp (1).



IH28K11A0007-01


## 1J-6 Charging System:

- 6) Disconnect the CKP sensor coupler (1) and generator coupler (2).

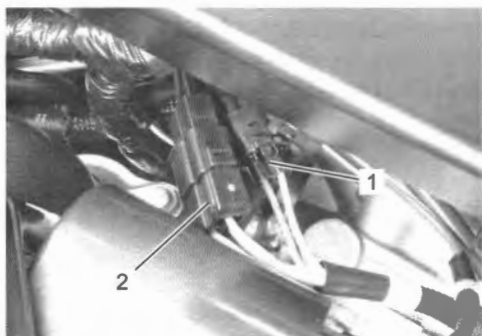


IH28K11A0009-01

- 7) Cut the clamp (1) and release the side-stand switch lead wire (2).

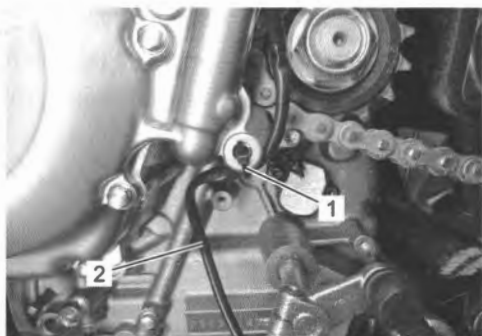


IH28K11A0008-02

- 8) Remove the generator cover (1).

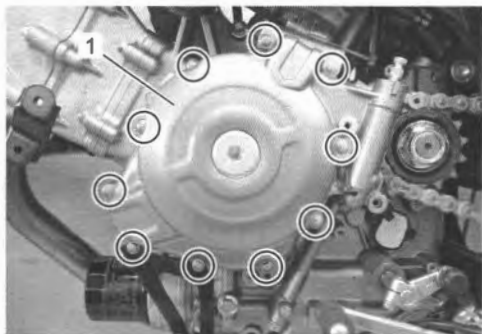

IH28K11A0010-01


- 9) Remove the gasket (1) and dowel pins (2).

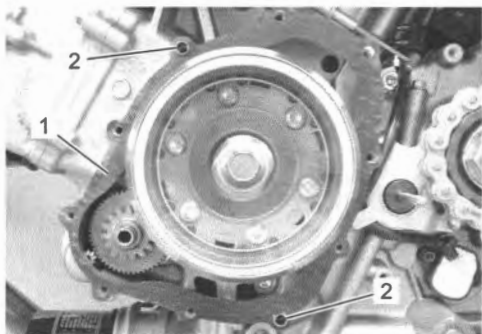

IH28K11A0011-01

- 10) Hold the generator rotor with the special tool and remove the generator rotor bolt (1).


**Special tool**  
**(A): 09930-44530**

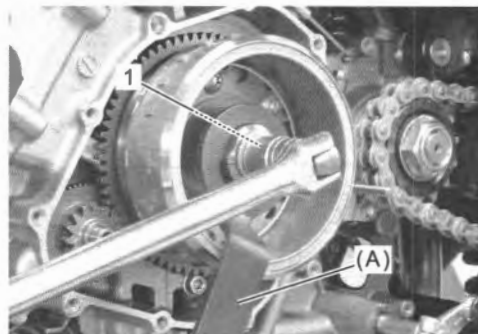

IH28K11A0012-01


- 11) Remove the generator rotor (1) with the special tools.

**Special tool**  
**(A): 09930-44530**  
**(B): 09930-30450**

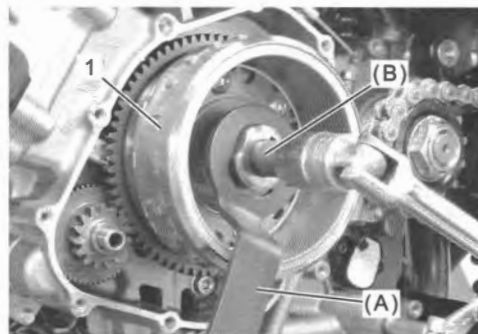

IH28K11A0013-01

- 12) Remove the generator stator (1), CKP sensor (2), lead wire clamp (3) and grommet (4).

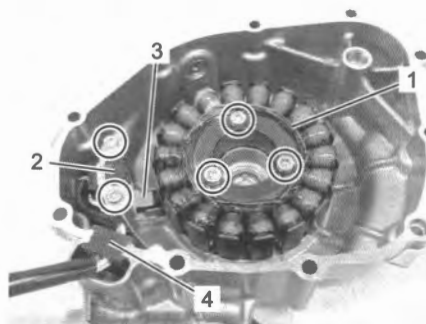


IH28K11A0014-01

## Generator Installation

BENH28K21A06005

- 1) Install the generator stator, lead wire clamp and CKP sensor. Refer to "Wiring Harness Routing Diagram" in Section 9A (Page 9A-7).
- 2) Degrease the tapered portion (1) of crankshaft and also the generator rotor (2). Use nonflammable cleaning solvent to wipe off oily or greasy matter and make these surfaces completely dry.
- 3) Align the key (3) and key slot on the generator rotor.

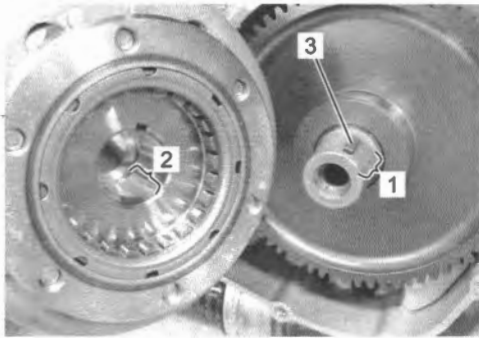


IH28K11A0015-01

- 4) Install the generator rotor (1) on the crankshaft.
- 5) Hold the generator rotor with the special tool and tighten generator rotor bolt (2) to the specified torque.


**Special tool**  
(A): 09930-44530

**Tightening torque**  
Generator rotor bolt (a): 140 N·m (14.3 kgf·m, 103.5 lbf·ft)

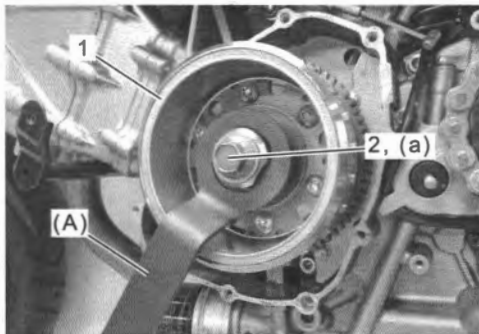

IH28K11A0016-01

- 6) Install the dowel pins (1) and new gasket (2).

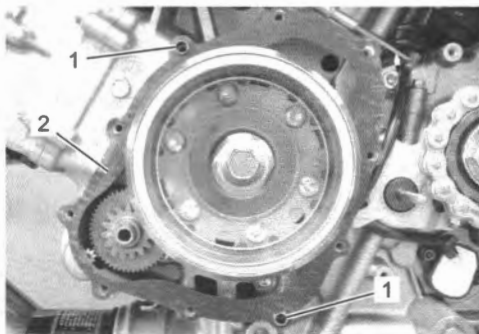

IH28K11A0017-01

- 7) Fit the new gasket washer to the generator cover bolts (1).
- 8) Install the generator cover (2) and tighten the generator cover bolts (1), (3), (4), (5) and (6) to the specified torque.

### ▲ CAUTION


**Be careful not to pinch the finger between the generator cover and the crankcase.**

### NOTE

- Fit the clutch cable stopper (7) to the generator cover bolts (3).
- Fit the side under cover cowling bracket (if equipped) (8) with the generator cover bolts (5).
- Fit the side-stand switch lead wire clamp (9) with the generator cover bolt (6).


### Tightening torque

Generator cover bolt (a): 10 N·m (1.0 kgf·m, 7.5 lbf·ft)

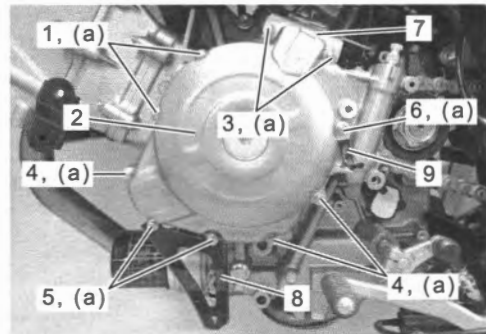

IH28K11A0018-01

- 9) Route the generator lead wire and connect the generator coupler and CKP sensor coupler. Refer to "Wiring Harness Routing Diagram" in Section 9A (Page 9A-7).
- 10) Rout the side-stand switch lead wire. Refer to "Wiring Harness Routing Diagram" in Section 9A (Page 9A-7).
- 11) Install the washer (1) and hook the spring end (2) to the generator cover.

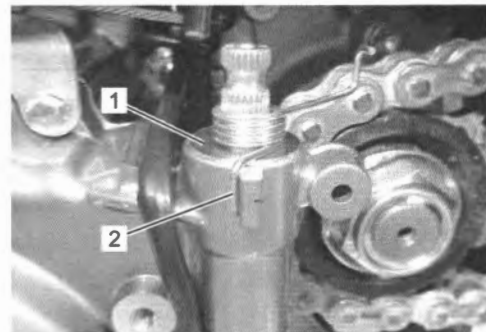


IH28K11A0019-01

## 1J-8 Charging System:

- 12) Connect the clutch cable to the clutch release arm (1).
- 13) When installing the clutch release arm (1), align the punch mark (2) of clutch release arm with slit (3) of clutch release camshaft.
- 14) Hook the spring end (4) to the clutch release arm (1).
- 15) Install the clutch release arm bolt (5) and nut (6) to the specified torque.

### Tightening torque

Clutch release arm bolt (a): 9.0 N·m (0.92 kgf-m, 6.65 lbf-ft)

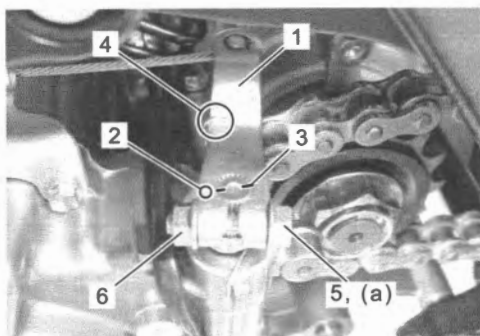


IH28K11A0021-01

- 16) Check the clutch cable play. (Page 5C-2)
- 17) Install the engine sprocket cover. (Page 3A-4)
- 18) Pour engine oil. (Page 1E-4)

## Regulator / Rectifier Inspection

BENH28K21A06006

- 1) Turn the ignition switch to OFF position.
- 2) Remove the air cleaner box. (Page 1D-6)
- 3) Release the regulator/rectifier lead wires from the clamp (1).
- 4) Disconnect the regulator/rectifier couplers (2).

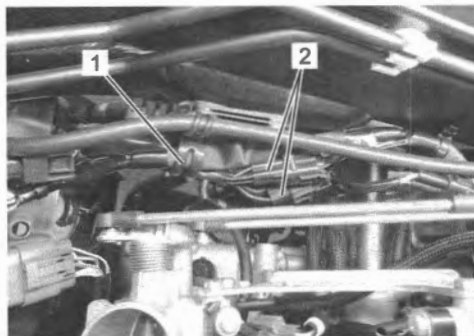


IH28K11A0022-01

- 5) Set the "Diode test" of the multi circuit tester. Refer to "Precautions for Circuit Tester" in Section 00 (Page 00-7).
- 6) Check that the tester reads 1.4 V or more.

### NOTE

**If the tester reads less than 1.4 V when the tester probes are not connected, replace its battery.**

- 7) Measure the voltage between the terminals. If the voltage is not within the specified value, replace the regulator/rectifier with a new one.

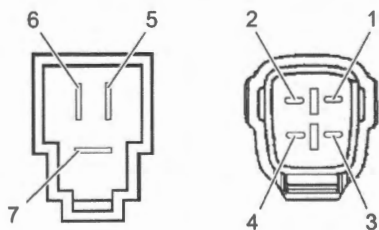

IH18K11A0037-01


		(+ ) probe of tester to:						
		(4)	(3)	(7)	(6)	(5)	(2)	(1)
(-) probe of tester to:	(4)	—	0 V	0.1 – 0.8 V	0.1 – 0.8 V	0.1 – 0.8 V	0.3 – 1.0 V	0.3 – 1.0 V
	(3)	0 V	—	0.1 – 0.8 V	0.1 – 0.8 V	0.1 – 0.8 V	0.3 – 1.0 V	0.3 – 1.0 V
	(7)	*	*	—	*	*	0.1 – 0.8 V	0.1 – 0.8 V
	(6)	*	*	*	—	*	0.1 – 0.8 V	0.1 – 0.8 V
	(5)	*	*	*	*	—	0.1 – 0.8 V	0.1 – 0.8 V
	(2)	*	*	*	*	*	—	0 V
	(1)	*	*	*	*	*	0 V	—

\* 1.4 V and more (tester's battery voltage)

- 8) Connect the regulator/rectifier couplers.
- 9) Clamp the regulator/rectifier lead wires. Refer to "Wiring Harness Routing Diagram" in Section 9A (Page 9A-7).
- 10) Install the air cleaner box. (Page 1D-6)

Regulator / Rectifier Construction

BENH28K21A06007

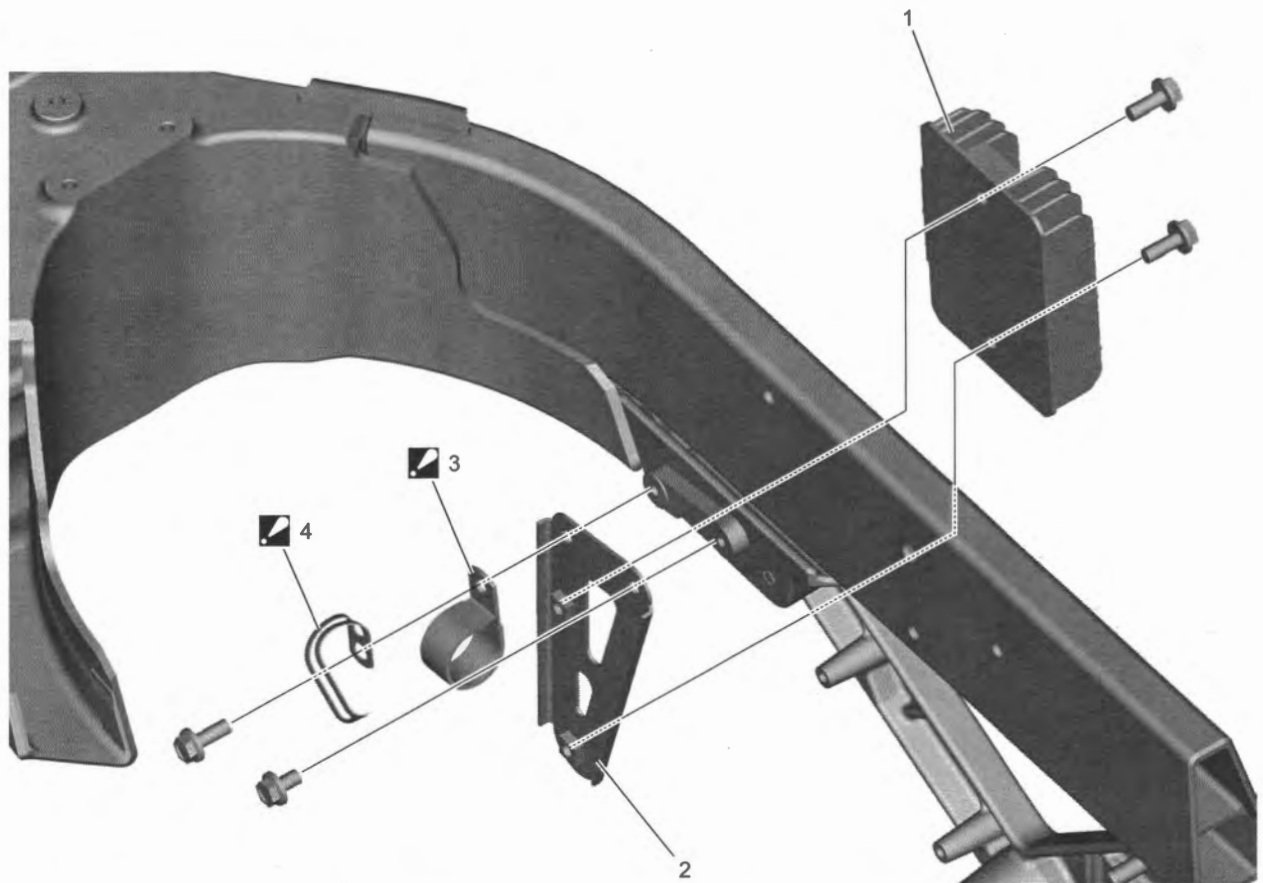

IH28K11A0023-03

<p>1. Regulator/rectifier</p>	<p>3. Wire harness clamp : Position the regulator/rectifier lead wire to the vehicle center side and the main harness to the bracket side, and fix them with the wire harness clamp.</p>
<p>2. Regulator/rectifier bracket</p>	<p>4. Radiator reservoir tank inlet hose clamp : Tighten the radiator reservoir tank inlet hose clamp together with the wire harness clamp.</p>

Regulator / Rectifier Removal and Installation

BENH28K21A06008


Removal

- 1) Remove the air cleaner box. (Page 1D-6)
- 2) Release the radiator reservoir tank inlet hose from the clamp (1).



IH28K11A0024-02


- 3) Remove the bolt and release the regulator/rectifier lead wire from the clamp (1).
- 4) Disconnect the regulator/rectifier couplers (2).

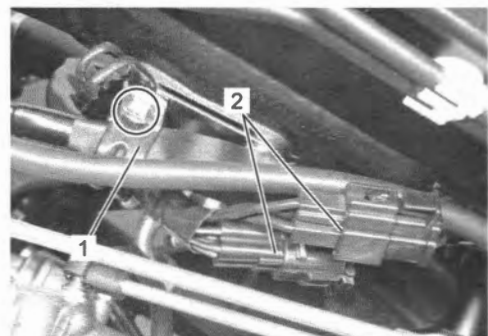

IH28K11A0025-01


## 1J-10 Charging System:

- 5) Remove the regulator/rectifier (1).

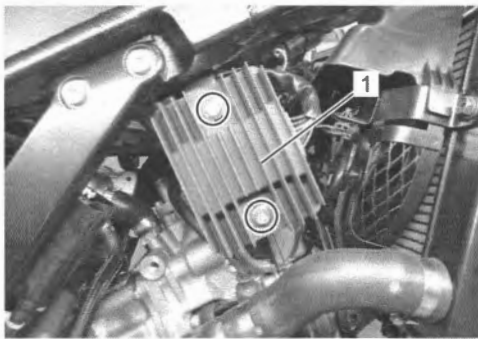

IH28K11A0026-01


- 4) Clamp the radiator reservoir tank inlet hose (1) with the clamp (2).

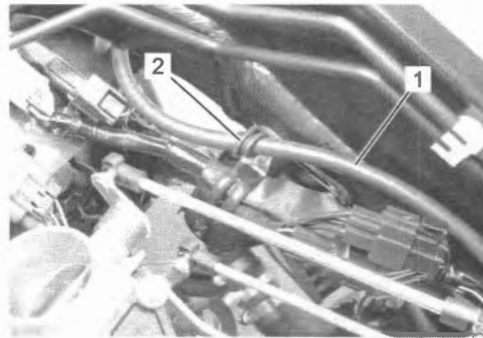

IH28K11A0029-01


### Installation

- 1) Install the regulator/rectifier (1) with the bolts (2).

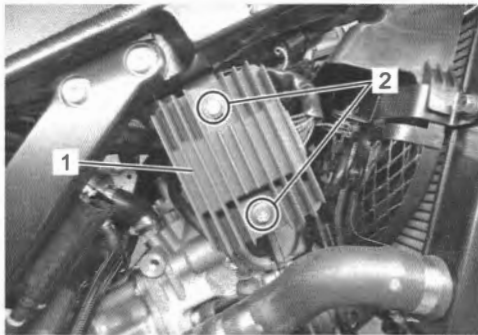

IH28K11A0027-01

- 2) Connect the regulator/rectifier lead wire couplers.  
3) Position the regulator/rectifier lead wire (1) to the vehicle center side and the main harness (2) to the bracket side, and fix them with the clamp (3). Tighten the radiator reservoir tank inlet hose clamp (4) together with the harness clamp (3).

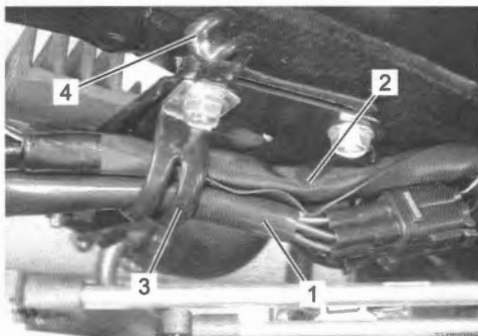

IH28K11A0028-01


### Battery Recharging

BENH28K21A06009

#### NOTICE

- For charging the battery, follow the specified charging current and time. Otherwise, the battery may be overcharged and resulted in shortened service life of the battery.
- Do not remove the cap during charging.
- Position the battery with the cap facing upward during charging.
- It is recommended to recharge the battery periodically with reference to the battery self-discharge rate by ambient temperature, so as not to drop the battery voltage below 12.4 V during the motorcycle storage to avoid shortening of the battery service life.
- If the battery is left discharged to 11.5 V or less, the battery voltage may not recover fully after recharging and the battery may be discharged quickly during use.

#### Self discharge rate by environment

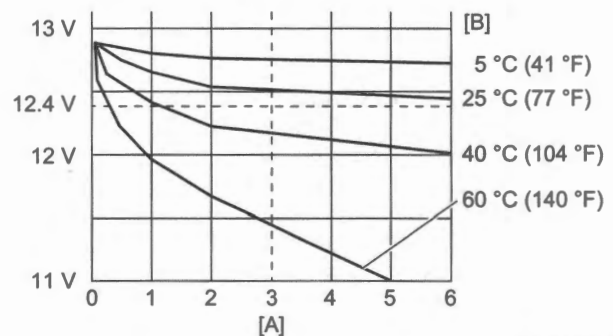

IH28K11A0035-01

[A]: Time (month)

[B]: Ambient temperature

#### NOTE

It is recommended to use the charger specially designed for MF battery.


- 1) Remove the battery from the motorcycle. (Page 1J-11)
- 2) Measure the battery voltage.  
If the voltage reading is 12.4 V or less, recharge the battery.

**Recharging time**

**Standard charging [Standard]: 1.2 A for 5 to 10 hours**

**Fast charging [Standard]: 5 A for 1 hour**

- 3) After recharging, wait at least 30 minutes and then measure the battery voltage using the multi circuit tester.  
If the battery voltage is 12.4 V or less, recharge the battery again.  
If the battery voltage is still 12.4 V or less after recharging, replace the battery with a new one.
- 4) Install the battery to the motorcycle. (Page 1J-11)

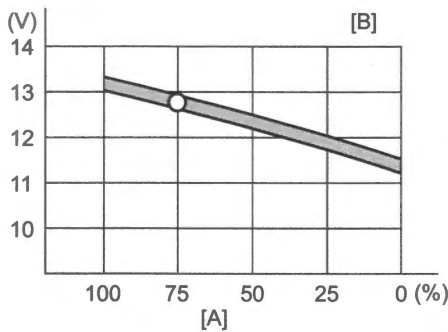

IH28K11A0036-01


[A]: Battery charged condition
[B]: Ambient temperature 0 – 40 °C (32 – 104 °F)

**Battery Removal and Installation**

BENH28K21A06010


**Removal**

- 1) Remove the seat. (Page 9D-19)
- 2) Detach the battery band (1).

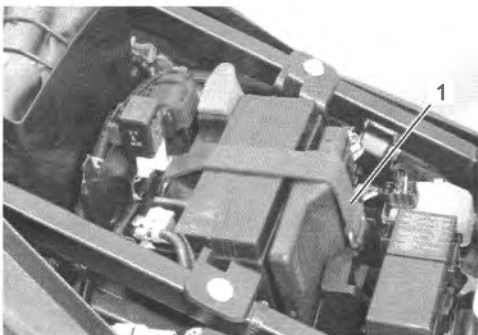

IH28K11A0030-01

- 3) Disconnect the battery (-) lead wire (1) first, then disconnect the battery (+) lead wire (2).
- 4) Remove the battery (3).

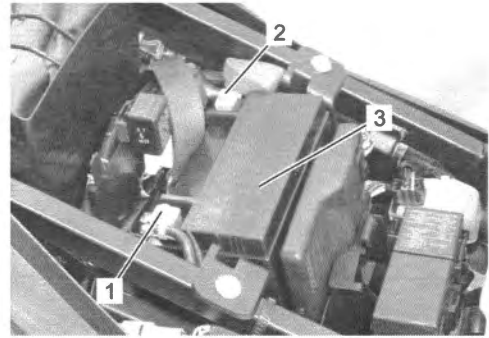

IH28K11A0031-01


**Installation**

Install the battery in the reverse order of removal. Pay attention to the following points:

**NOTICE**


**Never use anything except the specified battery.**

- Connect the battery (+) lead wire (1) first, then connect battery (-) lead wire (2).
- Tighten the battery lead wire mounting bolts securely.

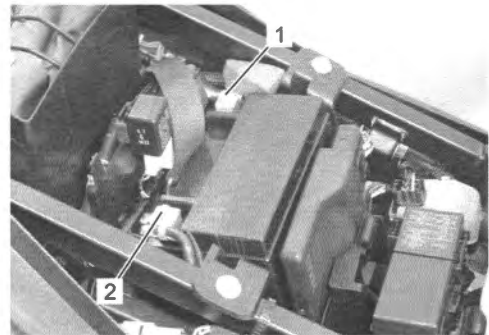

IH28K11A0032-01

- Attach the battery band (1) to the battery holder hook (2).

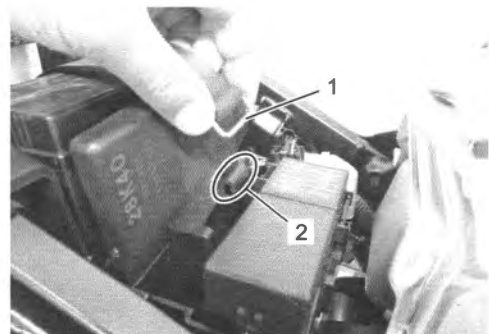

IH28K11A0033-01

## 1J-12 Charging System:

### Battery Visual Inspection

BENH28K21A06011

- 1) Remove the seat. ☞(Page 9D-19)
- 2) Visually inspect the surface of the battery container.  
If any signs of cracking or electrolyte leakage from the sides of the battery have occurred, replace the battery with a new one. ☞(Page 1J-11)

If the battery terminals are found to be coated with rust or an acidic white powdery substance, clean the battery terminals with sandpaper.

- 3) Install the seat. ☞(Page 9D-19)

## Specifications

### Tightening Torque Specifications

BENH28K21A07001

Fastening part	Tightening torque			Note
	N·m	kgf·m	lbf·ft	
Generator rotor bolt	140	14.3	103.5	☞(Page 1J-7)
Generator cover bolt	10	1.0	7.5	☞(Page 1J-7)
Clutch release arm bolt	9.0	0.92	6.65	☞(Page 1J-8)



#### Reference:

For the tightening torques of fasteners not specified in this page, refer to:  
"Fasteners Information" in Section 0C (Page 0C-11)

## Special Tools and Equipment

### Special Tool

BENH28K21A08001

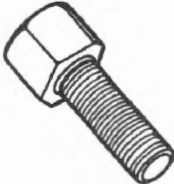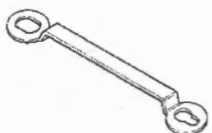09930-30450 Rotor remover bolt ☞(Page 1J-6)		09930-44530 Rotor holder ☞(Page 1J-6) / ☞(Page 1J-6) / ☞(Page 1J-7)	
---	--	---	---



# Exhaust System

## Precautions

### Precautions for Exhaust System

BENH28K21B00001

**▲ WARNING**

To avoid the risk of being burned, do not touch the exhaust system when the system is hot.




**NOTICE**

After installation of the muffler, make sure that there is no leakage of exhaust gas.

# Repair Instructions

## Exhaust System Components

BENH28K21B06001

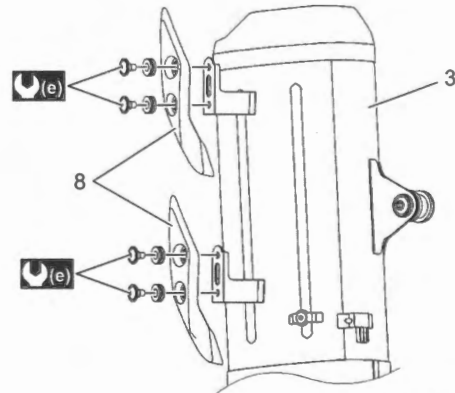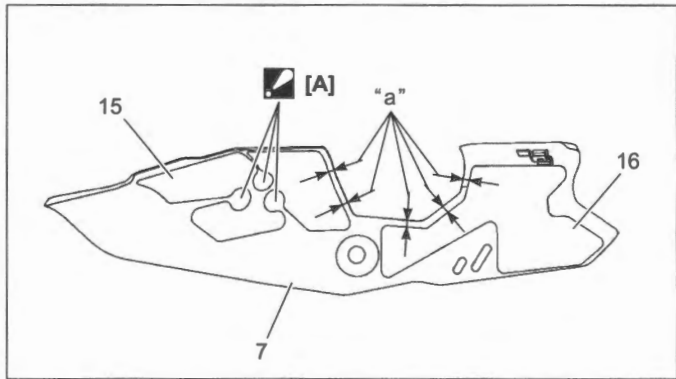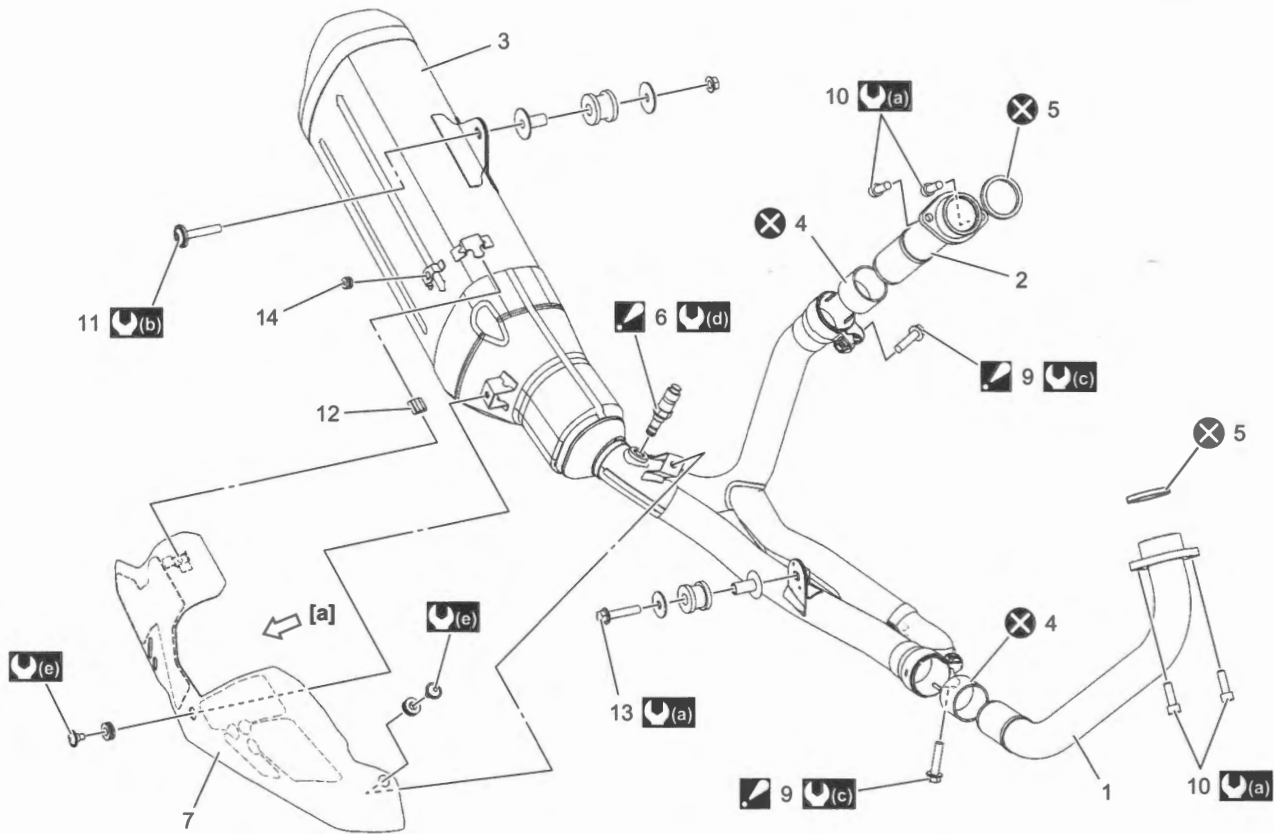

IH28K11B0039-02

<p> [A]: Align the bending position of the muffer cover with the slit of the muffer cover front shield. (if equipped)</p>	8. Rear muffer cover (if equipped)	16. Muffer cover rear shield
1. Exhaust pipe #1	<p> 9. Muffer connector bolt : Apply nickel based anti seize to the thread part.</p>	(a) : 23 N-m (2.3 kgf-m, 17.0 lbf-ft)
2. Exhaust pipe #2	10. Exhaust pipe bolt	(b) : 30 N-m (3.1 kgf-m, 22.5 lbf-ft)
3. Muffer	11. Muffer support bolt	(c) : 18 N-m (1.9 kgf-m, 14.0 lbf-ft)
4. Exhaust pipe connector	12. Muffer cover grommet	(d) : 25 N-m (2.5 kgf-m, 18.5 lbf-ft)
5. Exhaust pipe gasket	13. Exhaust support bolt	(e) : 5.5 N-m (0.56 kgf-m, 4.05 lbf-ft)
<p> 6. HO2 sensor : Apply nickel based anti seize to the thread part.</p>	14. Muffer support cushion	"a": 5 mm (0.2 in)
7. Muffer cover	15. Muffer cover front shield (if equipped)	: Do not reuse.

## Exhaust System Inspection

BENH28K21B06002

Inspect the exhaust pipe connection and muffler connection for exhaust gas leakage and mounting condition. If any defect is found, replace the exhaust pipe or muffler with a new one.

Check the exhaust pipe bolts, muffler connector bolt, exhaust pipe connector bolts, muffler support bolt and exhaust support bolt are tightened to their specified torque.

### Tightening torque


Exhaust pipe bolt #1 and #2 (a): 23 N·m (2.3 kgf-m, 17.0 lbf-ft)

Muffler connector bolt (b): 18 N·m (1.9 kgf-m, 14.0 lbf-ft)


Muffler support bolt (c): 30 N·m (3.1 kgf-m, 22.5 lbf-ft)

Exhaust pipe connector bolt (d): 18 N·m (1.9 kgf-m, 14.0 lbf-ft)


Exhaust support bolt (e): 23 N·m (2.3 kgf-m, 17.0 lbf-ft)

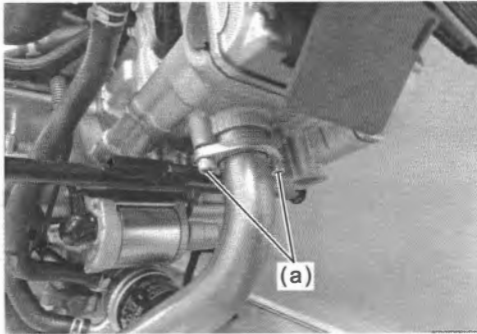


IH28K11B0002-01

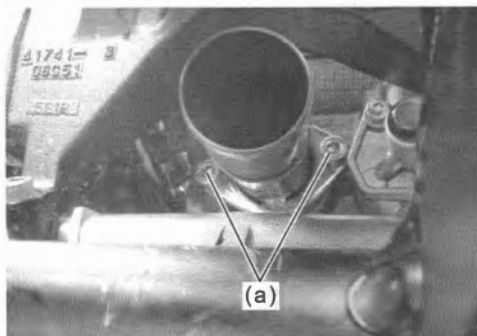


IH28K11B0003-01

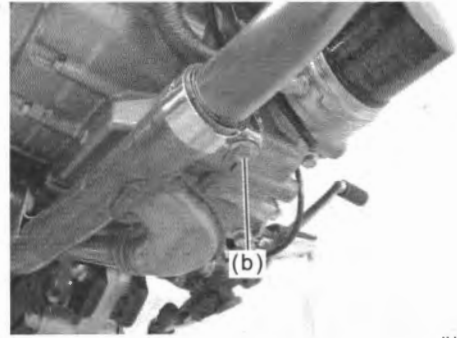


IH28K11B0004-01

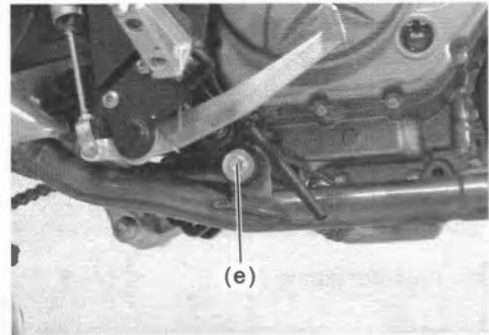

IH28K11B0005-01

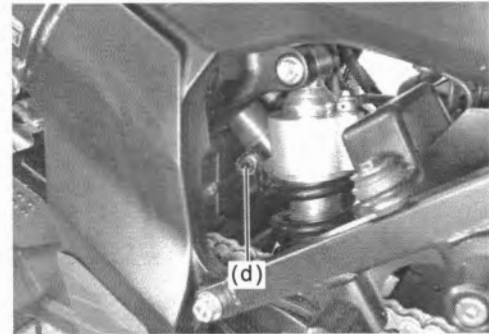

IH28K11B0006-01

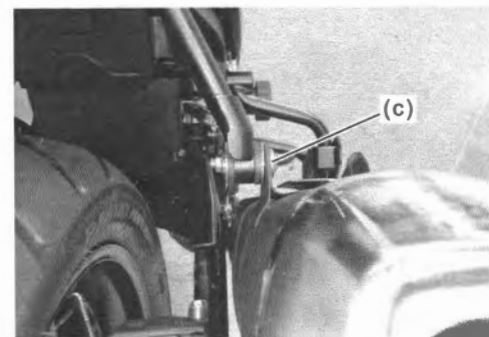

IH28K11B0007-01

## Exhaust Pipe / Muffler Removal and Installation

BENH28K21B06003

### Exhaust Pipe #1 and Muffler Removal

- 1) Remove the under cowling (if equipped). (Page 9D-30)
- 2) Remove the seat. (Page 9D-19)
- 3) Remove the right frame cover. (Page 9D-21)
- 4) Disconnect the HO2 sensor lead wire coupler (1).



IH28K11B0040-01

- 5) Disconnect the clamp (1).




IH28K11B0009-02

- 6) Loosen the muffer connector bolt (1) and exhaust pipe connector bolt (2).




IH28K11B0010-01

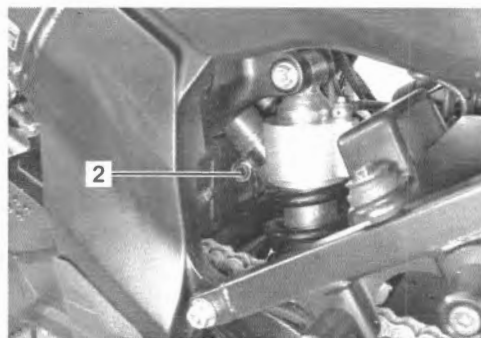


IH28K11B0011-01

- 7) Remove the exhaust support bolt (1).

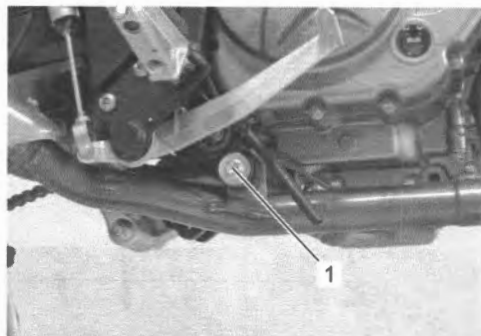


IH28K11B0012-01

- 8) Remove the exhaust pipe bolts #1 (1).

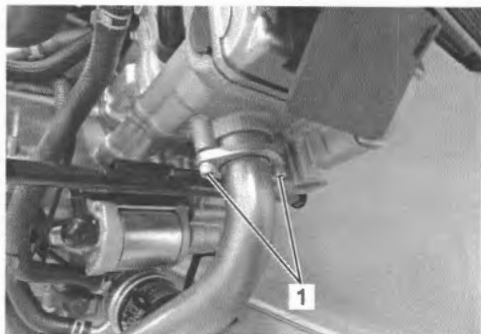

IH28K11B0013-01

- 9) Remove the muffer support bolt (1), nut (2) and washer (3).

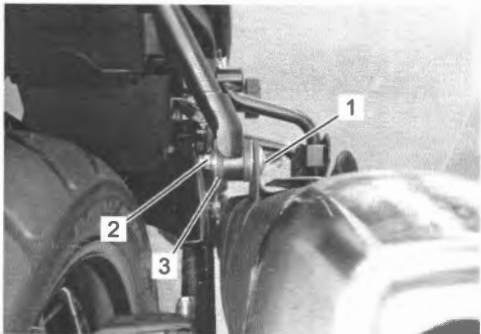


IH28K11B0014-01

10) Remove the muffler with the exhaust pipe #1.

**NOTE**


**Support the muffler with the exhaust pipe #1 to prevent it from falling.**

11) Remove the muffler cover (1).

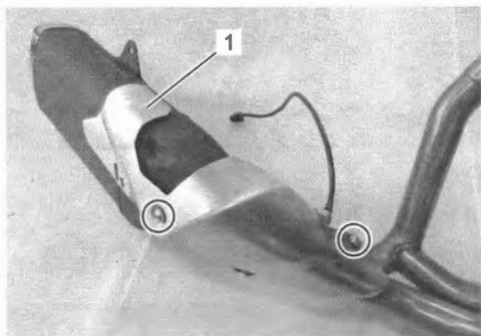

IH28K11B0015-02


[A]

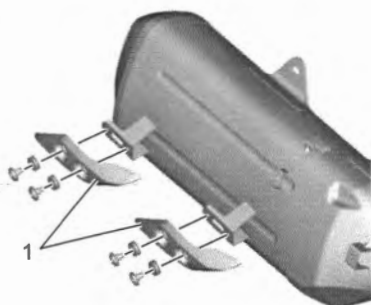

IH28K11B0037-02

[A]: If equipped

12) Remove the muffler cover grommet (1).

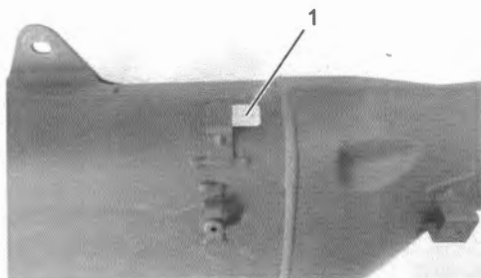

IH28K11B0041-01

13) Remove the muffler cover cushion (1).




IH28K11B0042-01

14) Remove the HO2 sensor (1).


**NOTICE**

- Be careful not to expose the HO2 sensor to an excessive shock.
- Do not use an impact wrench when removing the HO2 sensor.
- Be careful not to twist or damage the HO2 sensor lead wire.

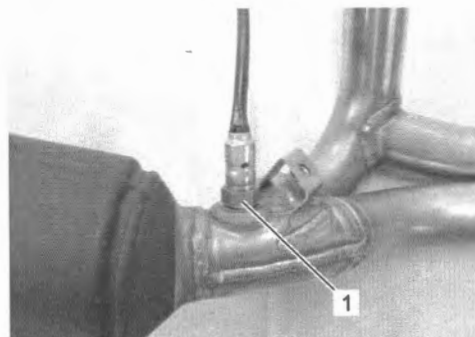

IH28K11B0016-02


15) Remove the exhaust pipe #1 (1).

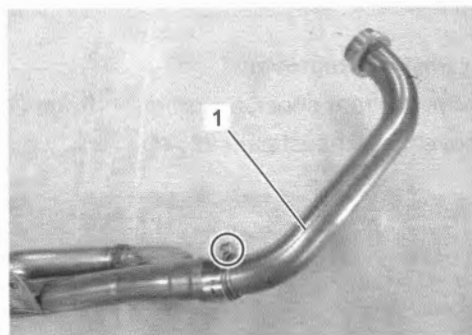


IH28K11B0017-01

## 1K-6 Exhaust System:

16) Remove the exhaust pipe connectors #1 and #2 (1).

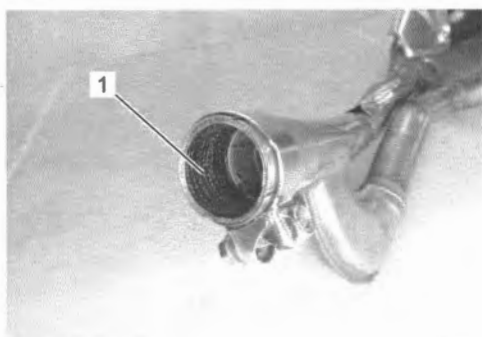


IH28K11B0018-01

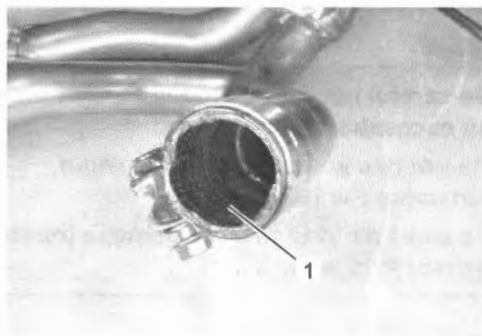

IH28K11B0019-01

17) Remove the exhaust pipe gasket (1).

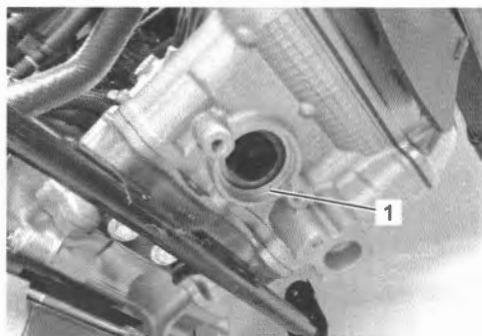

IH28K11B0020-01


### Exhaust Pipe #2 Removal

- 1) Remove the rear shock absorber. (Page 2C-3)
- 2) Remove the exhaust pipe #2 (1).



IH28K11B0021-01


3) Remove the exhaust pipe gasket (1).

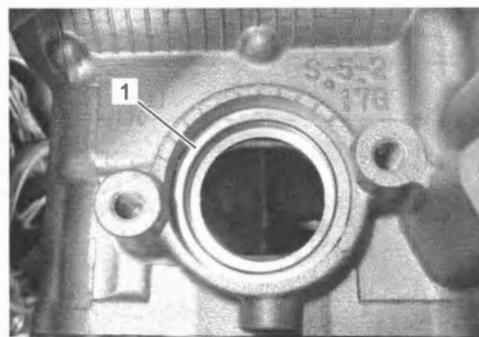

IH28K11B0022-01

### Exhaust Pipe #2 Installation

1) Install the new exhaust pipe gasket (1).

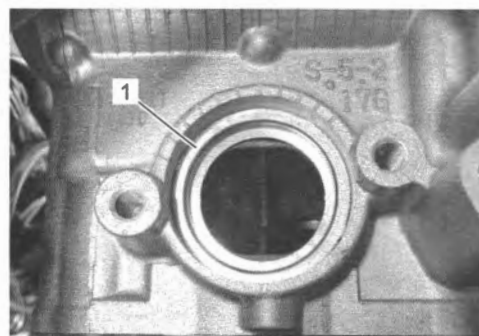


IH28K11B0022-01

2) Install the exhaust pipe #2 (1) and tighten the exhaust pipe bolts #2 (2) to the specified torque.

#### Tightening torque

Exhaust pipe bolt #2 (a): 23 N·m (2.3 kgf-m, 17.0 lbf-ft)

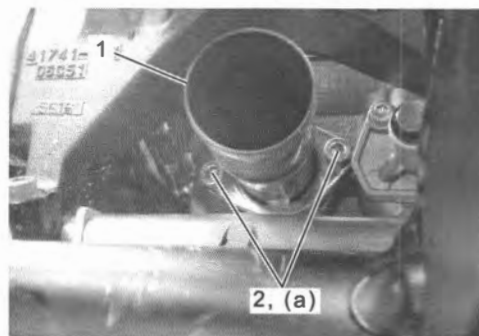

IH28K11B0023-01


3) Install the rear shock absorber. (Page 2C-3)

**Exhaust Pipe #1 and Muffler Installation**

- 1) Apply nicked based anti seize to the thread part of HO2 sensor (1).
- 2) Install the HO2 sensor (1) to the specified torque.


**Tightening torque**

**HO2 sensor bolt (a): 25 N·m (2.5 kgf-m, 18.5 lbf-ft)**

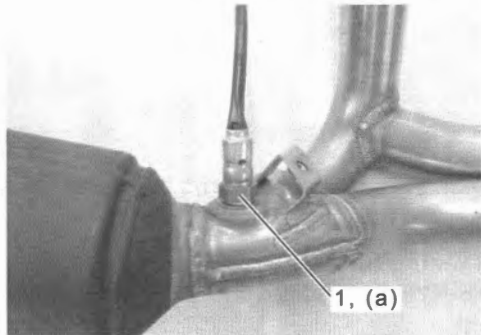


IH28K11B0024-01

- 3) Install the muffler cover cushion (1).

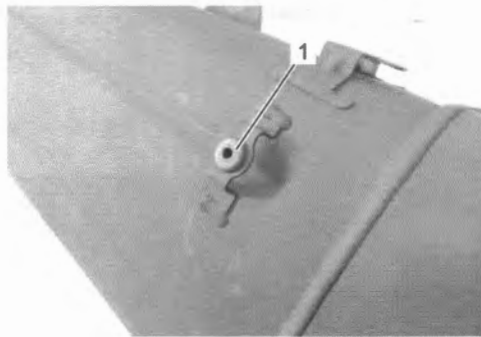

IH28K11B0042-01

- 4) Install the muffler cover grommet (1).

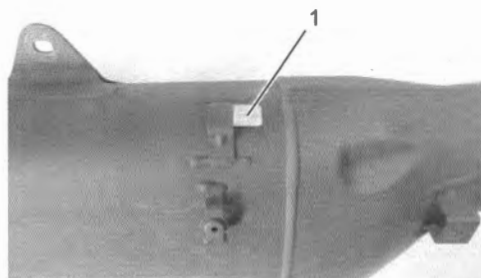


IH28K11B0041-01


- 5) Install the muffler cover (1) and tighten the muffler cover screws (2) to the specified torque.

**Tightening torque**

**Exhaust pipe bolt (a): 5.5 N·m (0.56 kgf-m, 4.05 lbf-ft)**

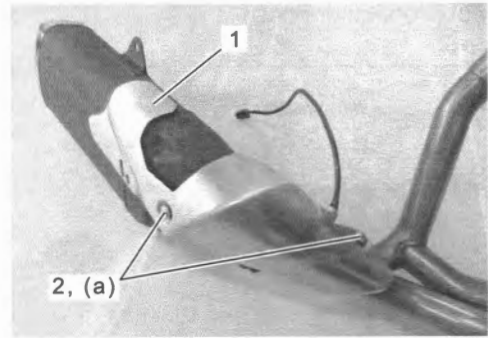


IH28K11B0025-02

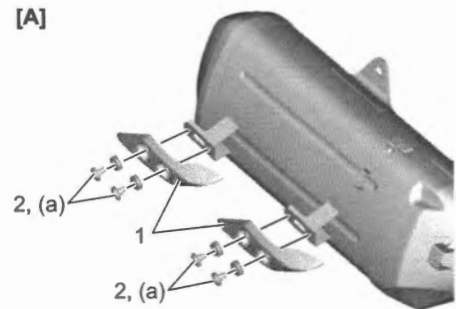

IH28K11B0038-02


[A]: If equipped

- 6) Install the exhaust pipe gasket (1) to the cylinder #1.

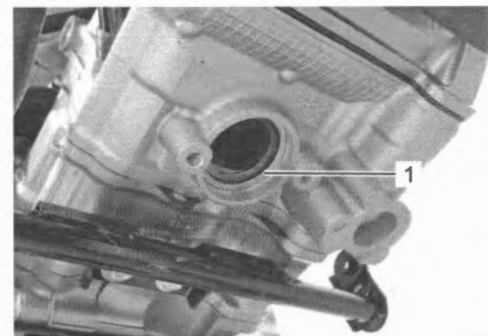

IH28K11B0026-01



- 7) Put the edge (1) of a new exhaust pipe connector #1 and #2 (2) to the exhaust pipe stopper #1 and #2 (3).

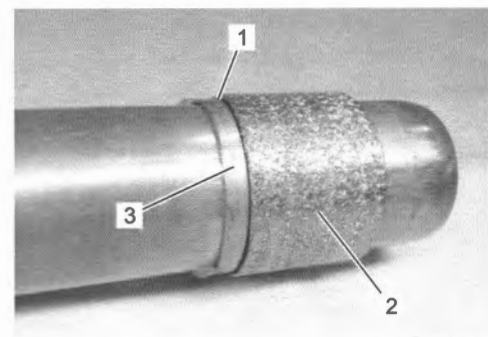

IH28K11B0028-01


## 1K-8 Exhaust System:

- 8) Apply nickel based anti seize to the thread part of exhaust connector bolts (1).

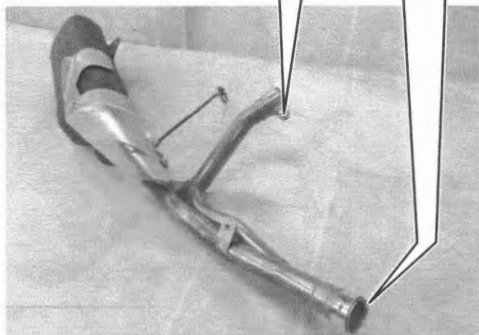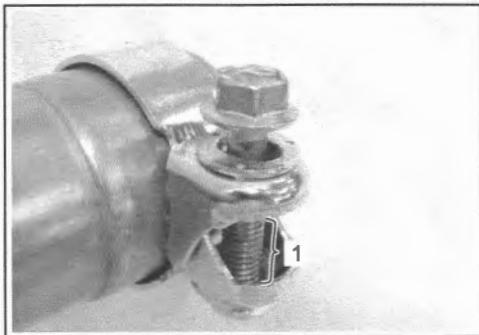

IH28K11B0027-02

- 9) Temporarily install the exhaust pipe #1 (1) to the muffler (2).

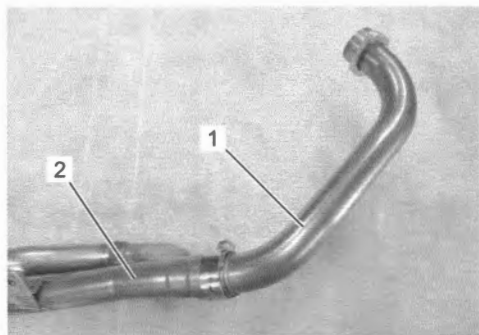

IH28K11B0029-01

- 10) Install the muffler with the exhaust pipe #1.

- 11) Temporarily install the muffler support bolt (1), washer (2) and nut (3).




IH28K11B0030-02

- 12) Tighten the exhaust support bolt (1) and exhaust pipe bolt #1 (2) to the specified torque.


### Tightening torque

Exhaust support bolt (a): 23 N·m (2.3 kgf·m, 17.0 lbf·ft)

Exhaust pipe bolt #1 (b): 23 N·m (2.3 kgf·m, 17.0 lbf·ft)

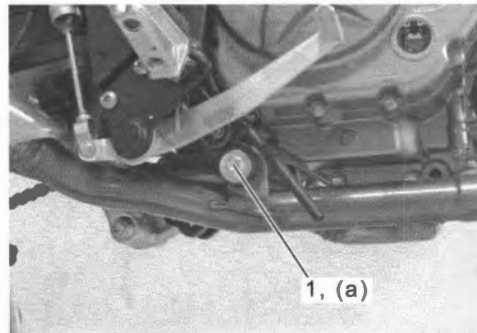

IH28K11B0031-01

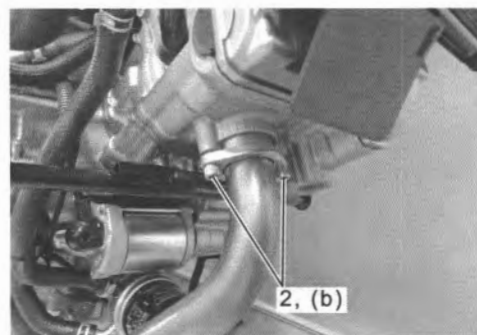

IH28K11B0032-01




- 13) Tighten the muffler connector bolt (1) and exhaust pipe connector bolt (2) to the specified torque.


**Tightening torque**

**Muffler connector bolt (a): 18 N·m (1.9 kgf-m, 14.0 lbf-ft)**

**Exhaust pipe connector bolt (b): 18 N·m (1.9 kgf-m, 14.0 lbf-ft)**

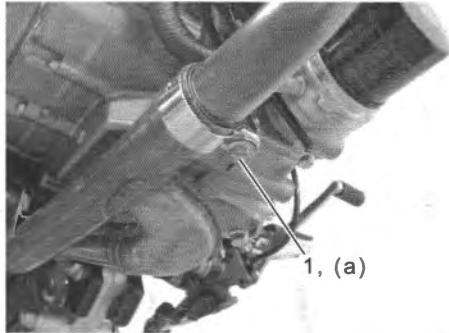

IH28K11B0033-01

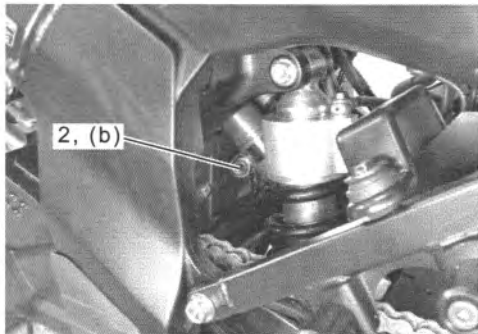


IH28K11B0034-01

- 14) Tighten the muffler support bolt (1) to the specified torque.

**Tightening torque**

**Muffler sport bolt (a): 30 N·m (3.1 kgf-m, 22.5 lbf-ft)**

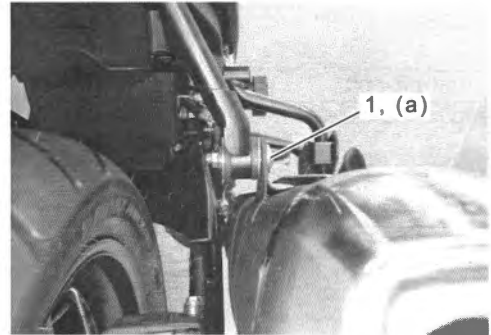

IH28K11B0035-01

- 15) Route the HO2 sensor lead wires. Refer to "HO2 Sensor Lead Wire Routing Diagram" in Section 1C (Page 1C-2) and "Wiring Harness Routing Diagram" in Section 9A (Page 9A-7).

- 16) Connect the HO2 sensor lead wire coupler (1).



IH28K11B0043-01

- 17) Install the right frame cover. ☞(Page 9D-21)

- 18) Install the seat. ☞(Page 9D-19)

- 19) Install the under cowling. ☞(Page 9D-30)

## Specifications

### Tightening Torque Specifications

BENH28K21B07001

Fastening part	Tightening torque			Note
	N·m	kgf·m	lbf·ft	
Exhaust pipe bolt #1 and #2	23	2.3	17.0	☞(Page 1K-3)
Muffler connector bolt	18	1.9	14.0	☞(Page 1K-3) / ☞(Page 1K-9)
Muffler support bolt	30	3.1	22.5	☞(Page 1K-3)
Exhaust pipe connector bolt	18	1.9	14.0	☞(Page 1K-3) / ☞(Page 1K-9)
Exhaust support bolt	23	2.3	17.0	☞(Page 1K-3) / ☞(Page 1K-8)
Exhaust pipe bolt #2	23	2.3	17.0	☞(Page 1K-6)
HO2 sensor bolt	25	2.5	18.5	☞(Page 1K-7)
Exhaust pipe bolt	5.5	0.56	4.05	☞(Page 1K-7)
Exhaust pipe bolt #1	23	2.3	17.0	☞(Page 1K-8)
Muffler sport bolt	30	3.1	22.5	☞(Page 1K-9)

**Reference:**

For the tightening torques of fasteners not specified in this page, refer to:

“Exhaust System Components” (Page 1K-2)

“Fasteners Information” in Section 0C (Page 0C-11)

## Section 2

## Suspension

## CONTENTS

<b>Precautions</b> .....	<b>2-1</b>	Swingarm Bearing Removal and Installation ....	2C-12
<b>Precautions</b> .....	<b>2-1</b>	<b>Specifications</b> .....	<b>2C-13</b>
Precautions for Suspension .....	2-1	Tightening Torque Specifications .....	2C-13
<b>Suspension General Diagnosis</b> .....	<b>2A-1</b>	<b>Special Tools and Equipment</b> .....	<b>2C-14</b>
<b>Diagnostic Information and Procedures</b> .....	<b>2A-1</b>	Recommended Service Material .....	2C-14
Suspension and Wheel Symptom Diagnosis .....	2A-1	Special Tool .....	2C-14
<b>Front Suspension</b> .....	<b>2B-1</b>	<b>Wheels and Tires</b> .....	<b>2D-1</b>
<b>Repair Instructions</b> .....	<b>2B-1</b>	<b>Precautions</b> .....	<b>2D-1</b>
Front Fork Components .....	2B-1	Precautions for Wheel and Tire.....	2D-1
Front Fork On-Vehicle Inspection .....	2B-2	<b>Repair Instructions</b> .....	<b>2D-2</b>
Front Fork Assembly Removal and		Front Wheel Components .....	2D-2
Installation .....	2B-2	Front Wheel Assembly Construction .....	2D-4
Front Fork Disassembly and Reassembly .....	2B-3	Front Wheel Spoke Construction (DL650XA) ....	2D-6
Front Fork Inspection .....	2B-8	Front Wheel Assembly Removal and	
<b>Specifications</b> .....	<b>2B-9</b>	Installation .....	2D-6
Tightening Torque Specifications.....	2B-9	Front Wheel Dust Seal / Front Wheel Bearing	
<b>Special Tools and Equipment</b> .....	<b>2B-9</b>	Removal and Installation.....	2D-7
Recommended Service Material .....	2B-9	Rear Wheel Components .....	2D-10
Special Tool .....	2B-9	Rear Wheel Assembly Construction .....	2D-12
<b>Rear Suspension</b> .....	<b>2C-1</b>	Rear Wheel Spoke Construction (DL650XA) ....	2D-14
<b>Repair Instructions</b> .....	<b>2C-1</b>	Rear Wheel Assembly Removal and	
Rear Suspension Components .....	2C-1	Installation .....	2D-14
Rear Suspension On-Vehicle Inspection .....	2C-2	Rear Wheel Dust Seal / Rear Wheel Bearing	
Rear Shock Absorber Adjustment.....	2C-2	Removal and Installation.....	2D-16
Rear Shock Absorber Removal and		Wheel / Wheel Axle Inspection .....	2D-17
Installation .....	2C-3	Rear Wheel Damper Removal and Installation ..	2D-20
Rear Shock Absorber Inspection .....	2C-4	Rear Wheel Damper Inspection .....	2D-20
Rear Shock Absorber Disposal .....	2C-4	Tire Inspection and Cleaning .....	2D-20
Cushion Lever Removal and Installation.....	2C-5	Tire Removal and Installation.....	2D-21
Cushion Lever Inspection .....	2C-6	Wheel Rim / Air Valve Inspection and	
Cushion Lever Bearing Removal and		Cleaning .....	2D-22
Installation .....	2C-7	Air Valve Removal and Installation .....	2D-23
Cushion Rod Removal and Installation.....	2C-7	Wheel Balance Check and Adjustment.....	2D-23
Cushion Rod Inspection .....	2C-8	<b>Specifications</b> .....	<b>2D-24</b>
Swingarm Removal and Installation.....	2C-8	Tightening Torque Specifications .....	2D-24
Swingarm Inspection.....	2C-11	<b>Special Tools and Equipment</b> .....	<b>2D-25</b>
		Recommended Service Material .....	2D-25
		Special Tool .....	2D-25

# Precautions

## Precautions

### Precautions for Suspension

BENH28K2200001

Refer to "General Precautions" in Section 00 (Page 00-1).

#### **⚠ WARNING**

- 
- **Never attempt to heat, quench or straighten any suspension part. If any damage or deformation is found, replace the part with a new one without correct it.**
  - **When removing or installing the suspension or wheel, place the motorcycle on a level surface and support it securely with a hoist or jack etc.**
  - **Do not support the motorcycle with the exhaust pipe.**
-

# Suspension General Diagnosis

## Diagnostic Information and Procedures

### Suspension and Wheel Symptom Diagnosis

BENH28K22104001


Condition	Possible cause	Correction / Reference Item
<b>Wobbly front wheel</b>	Distorted wheel rim.	Replace. ☞(Page 2D-21)
	Worn front wheel bearings.	Replace. ☞(Page 2D-7)
	Defective or incorrect tire.	Replace. ☞(Page 2D-21)
	Loose front axle.	Tighten. ☞(Page 0B-5)
	Loose front axle pinch bolt.	Tighten. ☞(Page 0B-5)
	Incorrect fork oil level.	Adjust. ☞(Page 2B-3)
	Incorrect front wheel weight balance.	Adjust. ☞(Page 2D-23)
<b>Front suspension too soft</b>	Insufficiently viscous fork oil.	Replace. ☞(Page 2B-3)
	Insufficient fork oil.	Adjust. ☞(Page 2B-3)
	Weak spring.	Replace. ☞(Page 2B-3)
<b>Front suspension too stiff</b>	Excessively viscous fork oil.	Replace. ☞(Page 2B-3)
	Excessive fork oil.	Adjust. ☞(Page 2B-3)
	Bent front axle.	Replace. ☞(Page 2D-6)
<b>Front suspension too noisy</b>	Insufficient fork oil.	Adjust. ☞(Page 2B-3)
	Loose front fork clamp bolt.	Tighten. ☞(Page 0B-5)
<b>Wobbly rear wheel</b>	Distorted wheel rim.	Replace. ☞(Page 2D-21)
	Worn rear wheel bearings.	Replace. ☞(Page 2D-16)
	Defective or incorrect tire.	Replace. ☞(Page 2D-21)
	Worn swingarm bearings.	Replace. ☞(Page 2C-12)
	Loose rear suspension related bolt and nut.	Tighten. ☞(Page 0B-5)
	Loose rear axle nut.	Tighten. ☞(Page 2D-14)
	Worn rear suspension bearings.	Replace. ☞(Page 2C-7)
	Incorrect rear wheel weight balance.	Adjust. ☞(Page 2D-23)
<b>Rear suspension too soft</b>	Weak rear shock absorber spring.	Replace. ☞(Page 2C-3)
	Rear shock absorber leaks oil.	Replace. ☞(Page 2C-3)
	Improperly set rear shock absorber spring adjuster.	Adjust. ☞(Page 2C-2)
	Improperly set rear shock absorber damping force adjuster.	Adjust. ☞(Page 2C-2)
<b>Rear suspension too stiff</b>	Bent rear shock absorber shaft.	Replace. ☞(Page 2C-3)
	Worn swingarm bearings.	Replace. ☞(Page 2C-12)
	Worn rear suspension bearings.	Replace. ☞(Page 2C-7)
	Bent swingarm pivot shaft.	Replace. ☞(Page 2C-8)
	Improperly set rear shock absorber spring adjuster.	Adjust. ☞(Page 2C-2)
	Improperly set rear shock absorber damping force adjuster.	Adjust. ☞(Page 2C-2)
<b>Rear suspension too noisy</b>	Loose rear suspension related bolt and nut.	Tighten. ☞(Page 0B-5)
	Worn swingarm bearings.	Replace. ☞(Page 2C-12)
	Worn rear suspension bearings.	Replace. ☞(Page 2C-7)

# Front Suspension

## Repair Instructions

### Front Fork Components

BENH28K22206001

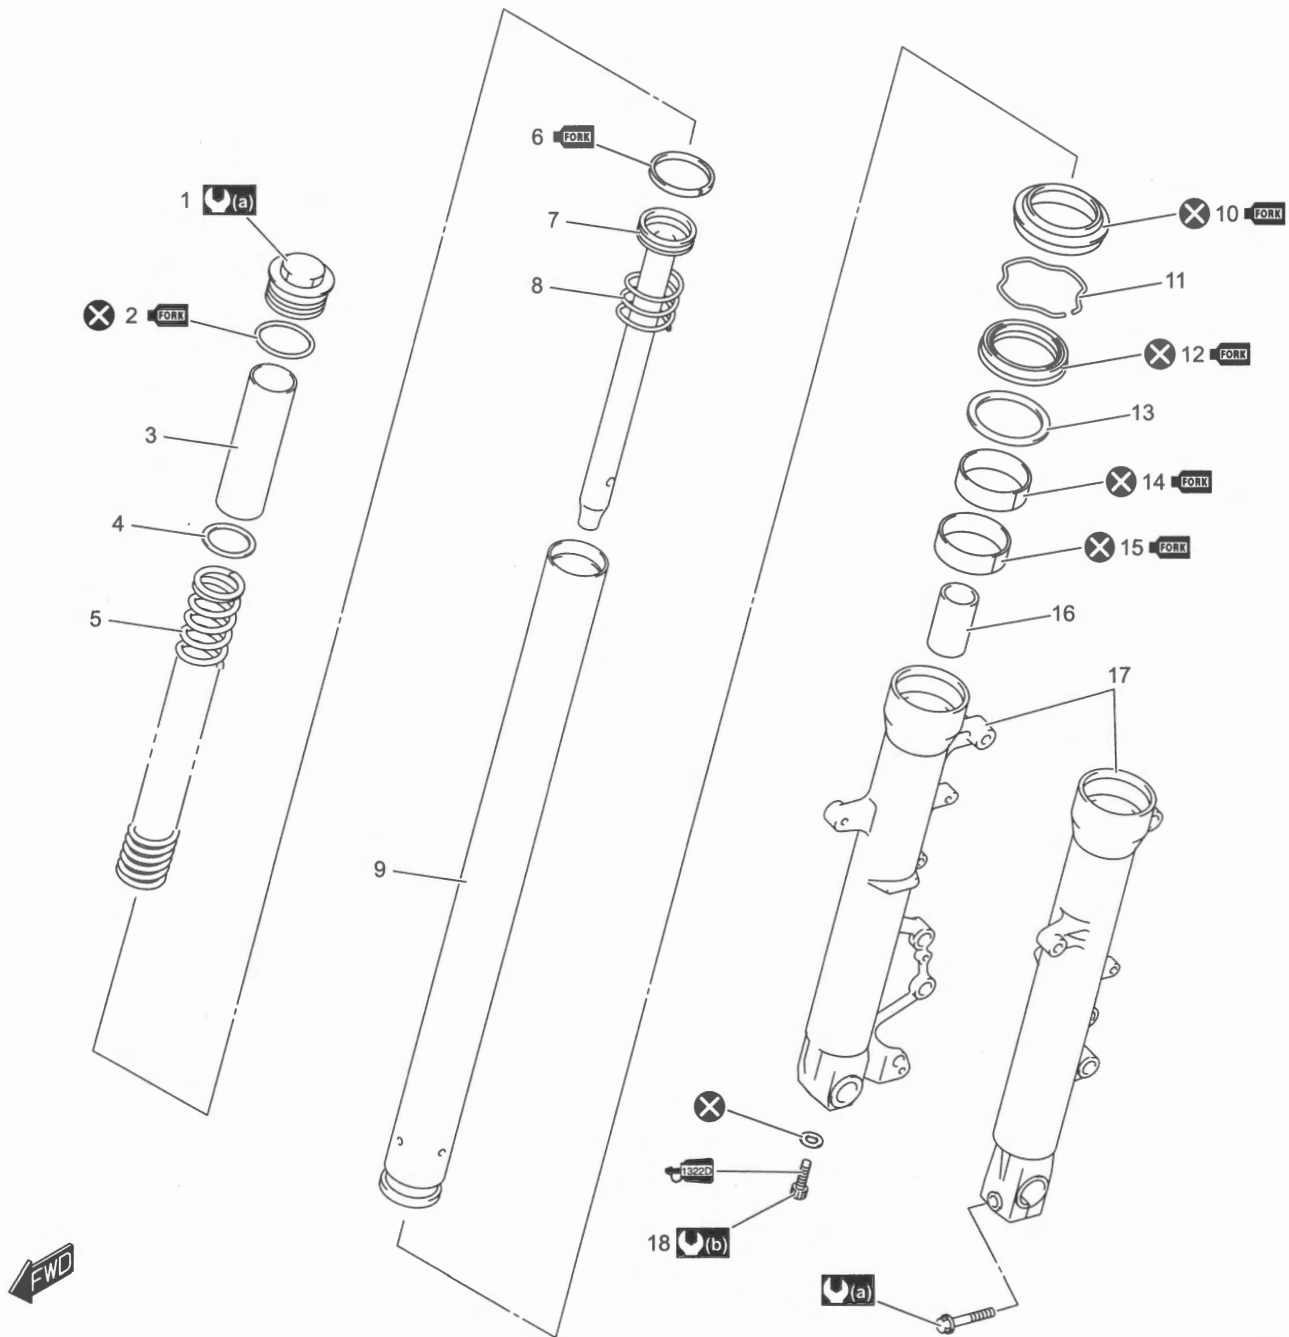

IH28K1220001-01

1. Front fork cap bolt	9. Inner tube	17. Outer tube
2. O-ring	10. Dust seal	18. Cylinder bolt
3. Spring collar	11. Oil seal stopper ring	(a) : 23 N-m (2.3 kgf-m, 17.0 lbf-ft)
4. Washer	12. Oil seal	(b) : 20 N-m (2.0 kgf-m, 15.0 lbf-ft)
5. Spring	13. Oil seal retainer	1322D : Apply thread lock to the thread part.
6. Piston ring	14. Outer tube guide bushing	FORK : Apply fork oil.
7. Cylinder	15. Inner tube slide bushing	X : Do not reuse.
8. Rebound spring	16. Oil lock piece	

### Front Fork On-Vehicle Inspection

BENH28K22206002

Inspect the front forks (1) for oil leakage and damage. If any defect is found, replace any defective parts. (Page 2B-3)



IH28K1220002-01

### Front Fork Assembly Removal and Installation


BENH28K22206003

#### NOTE

The right and left front forks are installed symmetrically and therefore the removal procedure for one side is the same as that for the other side.

#### Removal


- 1) Remove the front wheel. (Page 2D-6)
- 2) Remove the reflex reflectors (if equipped). (Page 9B-11)
- 3) Remove the front wheel speed sensor lead wire (1) from the right front fork leg.

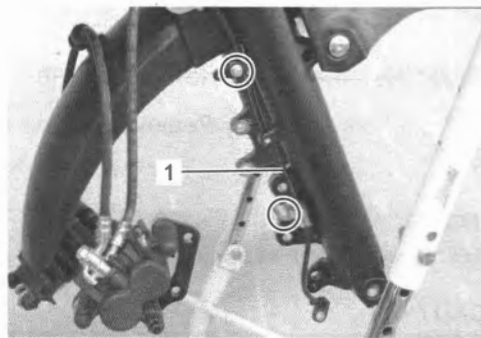

IH28K1220003-01


- 4) Remove the front fender. (Page 9D-28)

- 5) If the front forks are to be disassembled, slightly loosen the front fork cap bolt (1).
- 6) Loosen the front fork upper clamp bolt (2).

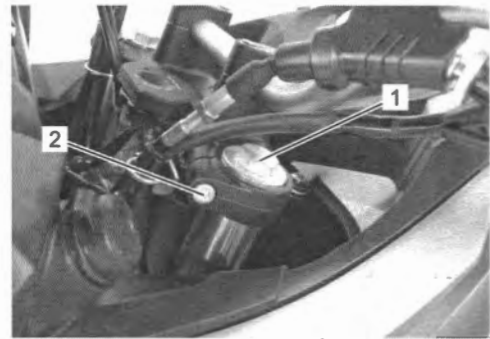

IH28K1220004-01


- 7) Loosen the front fork lower clamp bolts (1), and then remove the front fork (2) by supporting it.

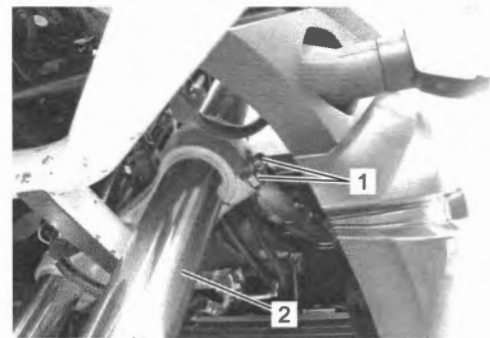

IH28K1220005-01

#### Installation

- 1) If the front forks are reassembled, perform the following procedure.
  - a) Set the front fork (1) to the steering stem lower bracket temporarily by tightening the front fork lower clamp bolts (2).

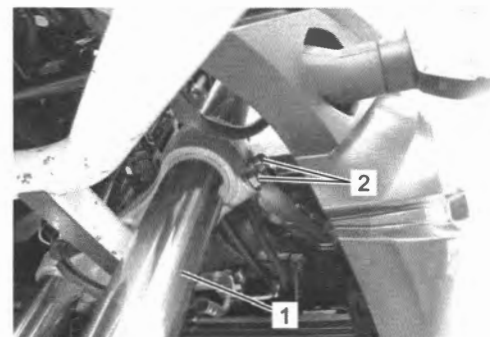


IH28K1220006-01

## 2B-3 Front Suspension:

- b) Tighten the front fork cap bolt (1) to the specified torque.

### Tightening torque

Front fork cap bolt (a): 23 N·m (2.3 kgf-m, 17.0 lbf-ft)

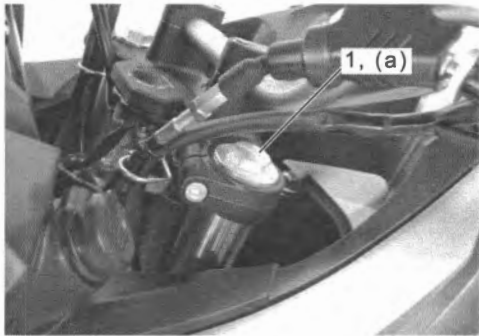


IH28K1220030-01

- 4) Tighten the front fork upper clamp bolt (1) to the specified torque.


### Tightening torque

Front fork upper clamp bolt (a): 23 N·m (2.3 kgf-m, 17.0 lbf-ft)

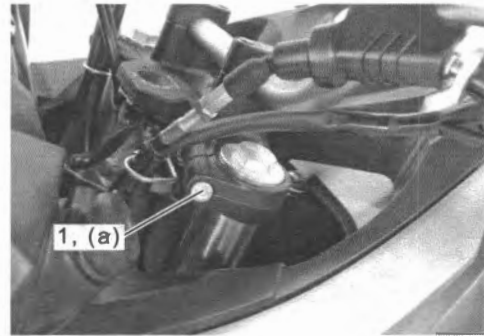


IH28K1220009-01

- c) Loosen the front fork lower clamp bolts.  
2) Set the top end of front fork inner tube (1) to be flush with the upper surface of the steering stem upper bracket (2).

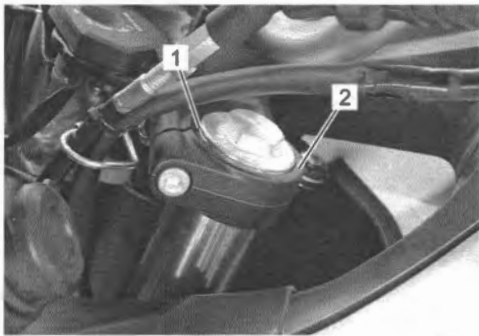

IH28K1220007-01

- 5) Install the front fender. (Page 9D-28)  
6) Install the front wheel speed sensor lead wire (1) to the right front fork leg. (Page 4E-8)

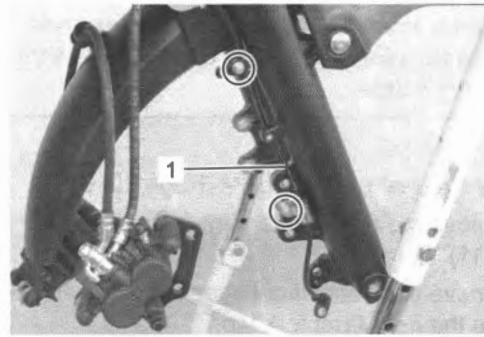


IH28K1220003-01

- 7) Install the removed parts.

- 3) Tighten the front fork lower clamp bolts (1) to the specified torque.

### Tightening torque

Front fork lower clamp bolt (a): 21 N·m (2.1 kgf-m, 15.5 lbf-ft)

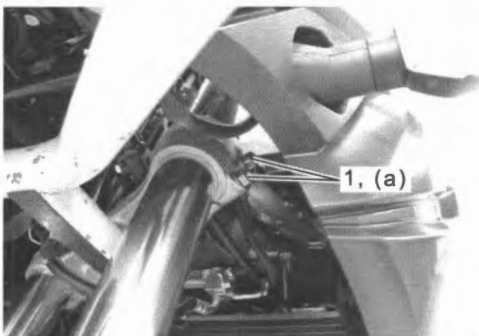

IH28K1220008-01

## Front Fork Disassembly and Reassembly

BENH28K22206004


Refer to "Front Fork Assembly Removal and Installation" (Page 2B-2).

### Disassembly

- 1) Remove the front fork cap bolt (1).

### CAUTION


Hold the front fork cap bolt when removing it, or it will jump out due to the spring pressure.

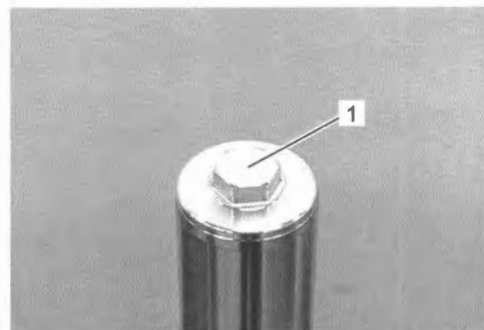

IH18K1220012-01




- 2) Remove the spring collar (1), washer (2) and spring (3).

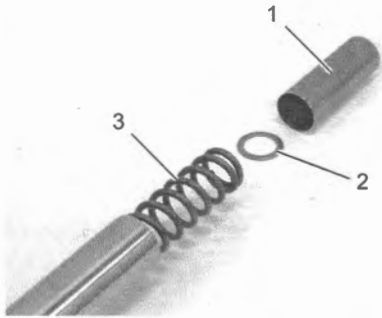

IH18K1220013-01


- 3) Invert the fork and stroke it several times to drain out fork oil.

- 4) Hold the fork inverted for a few minutes to drain oil.

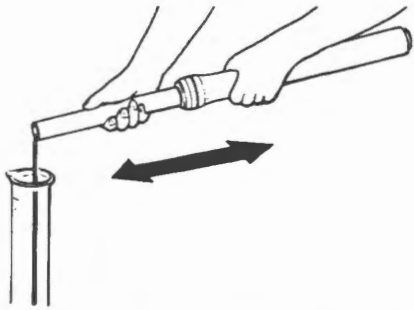

I649G1220012-02

- 5) For right front fork, remove the front axle pinch bolt (1).

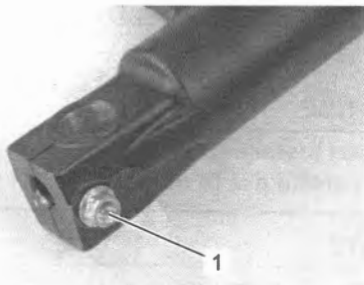


IH28K1220010-01

- 6) Remove the cylinder bolt (1) with the special tools.

**Special tool**


(A): 09940-34520

(B): 09940-34531

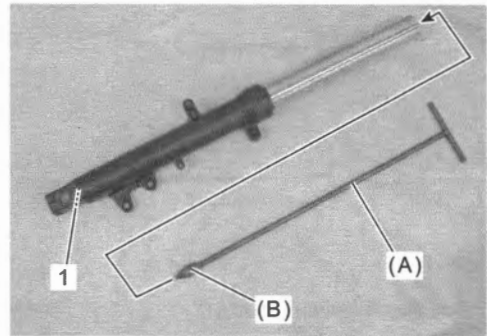

IH28K1220011-02


- 7) Remove the cylinder (1), rebound spring (2) and piston ring (3).

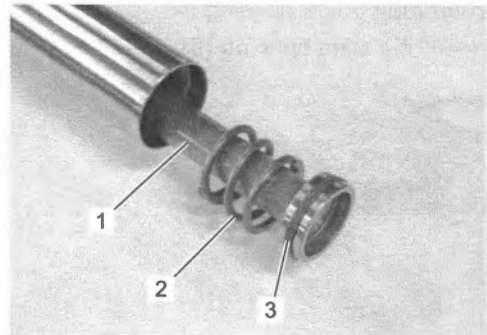

IH28K1220012-01

- 8) Remove the dust seal (1).


- 9) Remove the oil seal stopper ring (2).

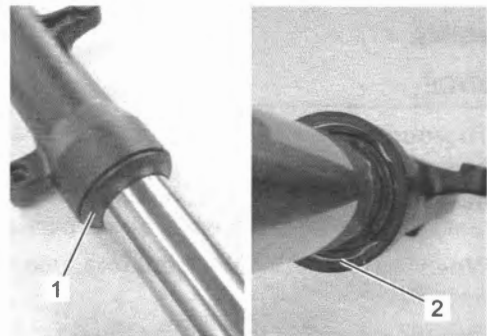

IH28K1220013-02

## 2B-5 Front Suspension:


- 10) Remove the oil seal by slowly pulling out the inner tube (1).

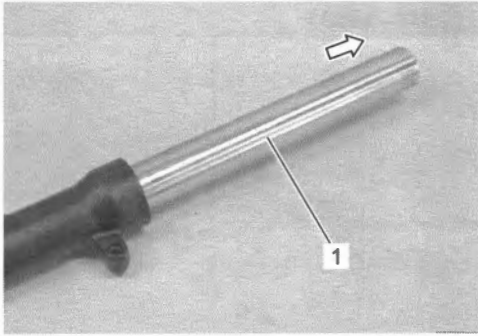

IH28K1220014-01

- 11) Remove the following parts.

- Oil lock piece (1)
- Oil seal (2)
- Oil seal retainer (3)
- Outer tube guide bushing (4)
- Inner tube slide bushing (5)

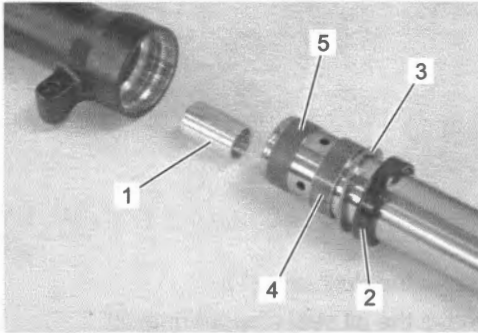

IH28K1220015-01

### Reassembly

#### NOTICE

- Thoroughly wash all the component parts being assembled. Insufficient washing can result in oil leakage or premature wear of the parts.
- When reassembling the front fork, use new fork oil.
- Use the specified fork oil for the front fork.


- 1) Hold the inner tube vertically, clean the metal groove and install the new inner tube slide bushing (1) by hand.

#### NOTICE

Do not damage the Teflon coated surface of the inner tube slide bushing when mounting it.

- 2) Apply fork oil to the inner tube slide bushing.

“A”: Fork oil 99000-99001-SA8 (SUZUKI FORK OIL SS-8)

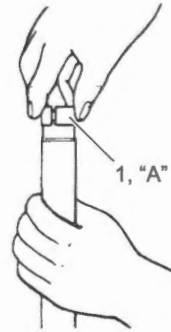

ID26J1220021-01

- 3) Apply fork oil to the new outer tube guide bushing (1) and lip of new oil seal (2).

“A”: Fork oil 99000-99001-SA8 (SUZUKI FORK OIL SS-8)


- 4) Install the following parts onto the inner tube.
- a) Outer tube guide bushing
  - b) Oil seal retainer (3)
  - c) Oil seal

#### NOTICE

When installing the oil seal to the inner tube, be careful not to damage the oil seal lip.

#### NOTE

Face the stamp mark side of the oil seal to the upper side.

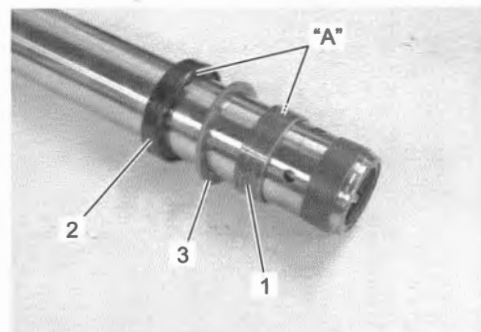


IH28K1220016-02

- 5) Install the oil lock piece (1) into the inner tube.

**NOTE**

Face the tapered end (2) of the oil lock piece (1) into the inner tube.

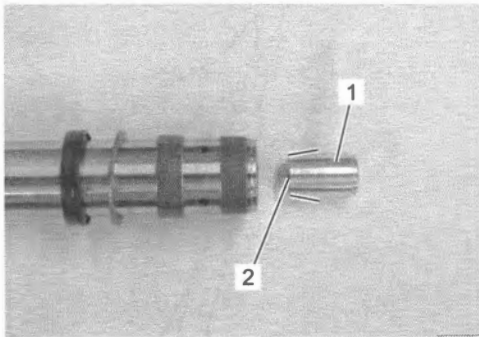

IH28K1220017-02


- 6) Install the inner tube into the outer tube with care not to drop the oil lock piece out.

**NOTE**

After installing the inner tube into the outer tube, keep the oil lock piece into the inner tube by compressing the front fork fully.

- 7) Install the oil seal (1) into the outer tube with the special tool.

**Special tool**  
(A): 09940-52861

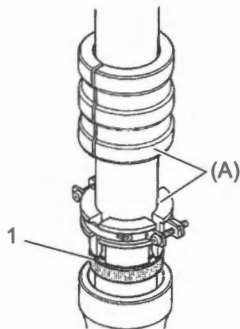


IH28K1220019-01

- 8) When installing the oil seal stopper ring (1), make sure that the oil seal stopper ring is fitted securely into the groove.

- 9) Apply fork oil to the lip of new dust seal (2).


"A": Fork oil 99000-99001-SA8 (SUZUKI FORK OIL SS-8)

- 10) Install the new dust seal (2).

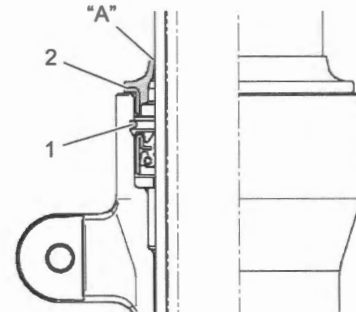

IH28K1220020-01

- 11) Install the piston ring (1) to the cylinder.

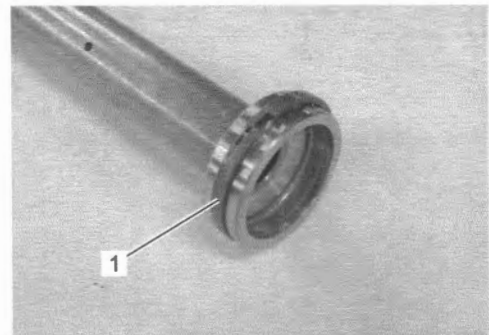


IH28K1220021-01

- 12) Install the rebound spring (1) to the cylinder (2).

- 13) Apply fork oil to the piston ring (3) and insert the cylinder into the inner tube.

"A": Fork oil 99000-99001-SA8 (SUZUKI FORK OIL SS-8)

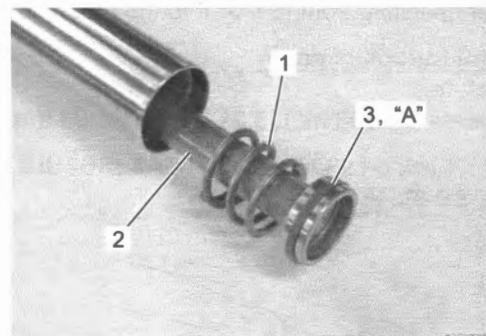

IH28K1220022-01

## 2B-7 Front Suspension:

- 14) Install the new gasket (1) to the cylinder bolt (2).
- 15) Apply thread lock to the cylinder bolt (2), and tighten it to the specified torque with special tools.

### NOTE

Check the front fork for smoothness by stroking it after installing the cylinder.

“A”: Thread lock cement 99000-32150 (THREAD LOCK CEMENT 1322D)


### Special tool

(A): 09940-34520


(B): 09940-34531

### Tightening torque

Cylinder bolt (a): 20 N·m (2.0 kgf-m, 15.0 lbf-ft)

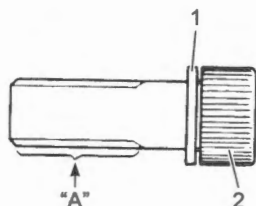

IE12J1220019-01

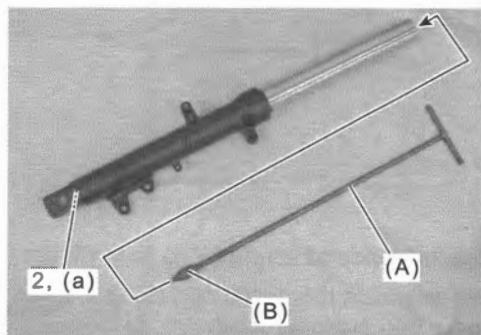

IH28K1220023-02


- 16) Place the front fork vertically without spring.
- 17) Compress the front fork inner tube into fully.
- 18) Pour specified front fork oil into the inner tube.

### Front fork oil capacity

#### Each leg

[Standard]: 568 ml (19.21 US oz, 19.99 Imp oz)

“A”: Fork oil 99000-99001-SA8 (SUZUKI FORK OIL SS-8)

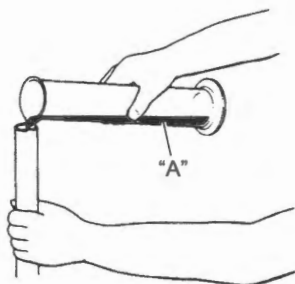

ID26J1220030-01

- 19) Move the inner tube up and down several strokes until bubbles do not come out from the oil.
- 20) Hold the front fork vertically and leave it for 5 – 6 minutes.



I717H1220029-01

- 21) Hold the front fork vertically and adjust fork oil level “a” with the special tool.

### NOTE


When adjusting the fork oil level, remove the fork spring and compress the inner tube fully.

### Front fork oil level

Without spring, inner tube fully compressed  
[Standard]: 105 mm (4.13 in)


### Special tool

(A): 09943-74111

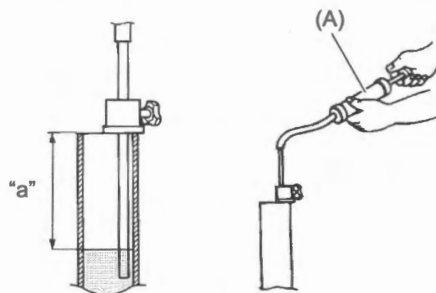


IH28K1220024-02

- 22) Install the fork spring (1) into the inner tube with its smaller diameter "a" facing the bottom side.
- 23) Install the washer (2) and spring collar (3).

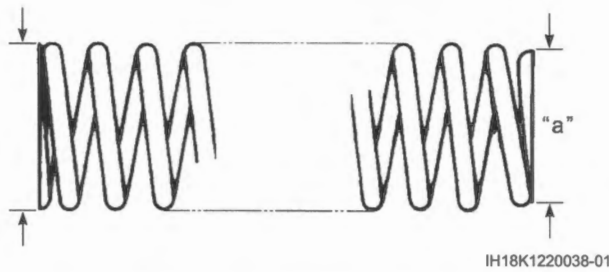


IH18K1220038-01

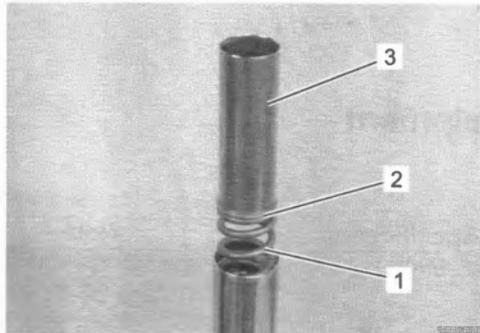

IH28K1220025-01


- 24) Install the new O-ring (1) to the front fork cap bolt and apply fork oil.

**"A": Fork oil 99000-99001-SA8 (SUZUKI FORK OIL SS-8)**

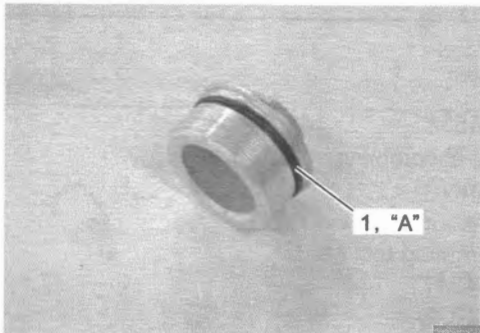

IH28K1220026-01

- 25) Temporarily tighten the front fork cap bolt (1) pushing it down.

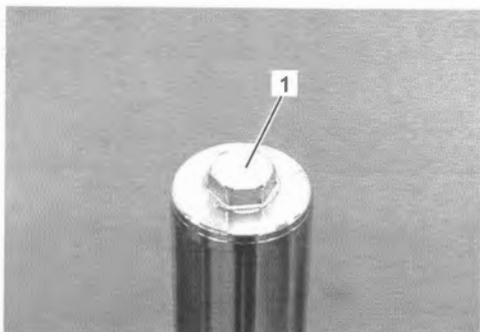

IH18K1220028-01


## Front Fork Inspection

BENH28K22206005

Refer to "Front Fork Disassembly and Reassembly" (Page 2B-3).

### Inner Tube / Outer Tube

Inspect the inner tube sliding surface and outer tube sliding surface for scuffing. If any defect is found, replace the part with a new one.

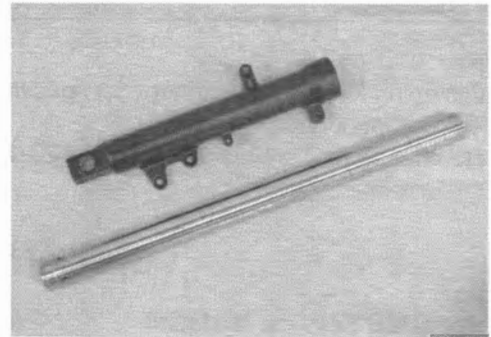


IH28K1220027-01

### Fork Spring

Measure the fork spring free length "a". If it is shorter than the service limit, replace it with a new one.

### Front fork spring free length


**[Limit]: 456 mm (18.0 in)**

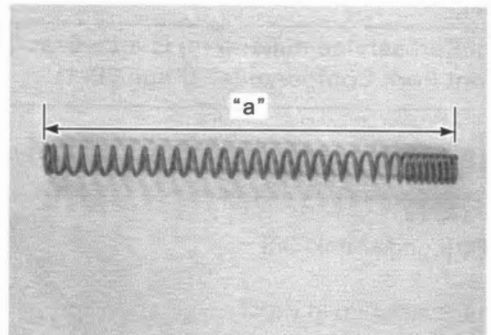

IH28K1220028-01

### Cylinder / Piston Ring

Inspect the cylinder (1) and piston ring (2) for wear or damage. If any defects are found, replace the cylinder or piston ring with a new one.

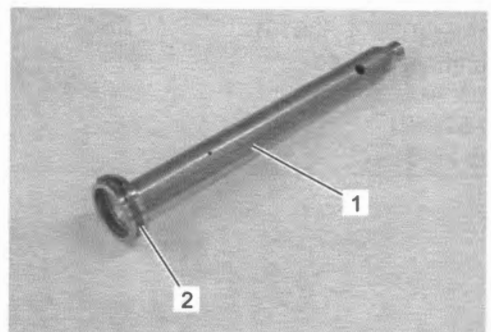

IH28K1220029-01

## Specifications

### Tightening Torque Specifications

BENH28K22207001

Fastening part	Tightening torque			Note
	N·m	kgf·m	lbf·ft	
Front fork cap bolt	23	2.3	17.0	☞(Page 2B-3)
Front fork lower clamp bolt	21	2.1	15.5	☞(Page 2B-3)
Front fork upper clamp bolt	23	2.3	17.0	☞(Page 2B-3)
Cylinder bolt	20	2.0	15.0	☞(Page 2B-7)

#### Reference:

For the tightening torques of fasteners not specified in this page, refer to:

“Front Fork Components” (Page 2B-1)

“Fasteners Information” in Section 0C (Page 0C-11)

## Special Tools and Equipment

### Recommended Service Material

BENH28K22208001

Material	SUZUKI recommended product or Specification		Note
Fork oil	SUZUKI FORK OIL SS-8	P/No.: 99000-99001-SA8	☞(Page 2B-5) / ☞(Page 2B-5) / ☞(Page 2B-6) / ☞(Page 2B-6) / ☞(Page 2B-7) / ☞(Page 2B-8)
Thread lock cement	THREAD LOCK CEMENT 1322D	P/No.: 99000-32150	☞(Page 2B-7)





#### NOTE

Required service material(s) is also described in:

“Front Fork Components” (Page 2B-1)

### Special Tool

BENH28K22208002

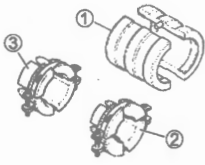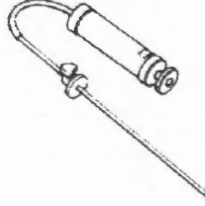
09940-34520 T-handle (Long shank: 3/8 sq.) This tool is included in Front fork assembling tool set (09940-34517). ☞(Page 2B-4) / ☞(Page 2B-7)		09940-34531 Front fork assembling attachment (A) This tool is included in Front fork assembling tool set (09940-34517). ☞(Page 2B-4) / ☞(Page 2B-7)	
09940-52861 Front fork oil seal installer set 1. Hammer (09941-53610) 2. Attachment (09940-52870) 3. Attachment (09940-52880) ☞(Page 2B-6)		09943-74111 Front fork oil level gauge ☞(Page 2B-7)	

# Rear Suspension

## Repair Instructions

### Rear Suspension Components

BENH28K22306001

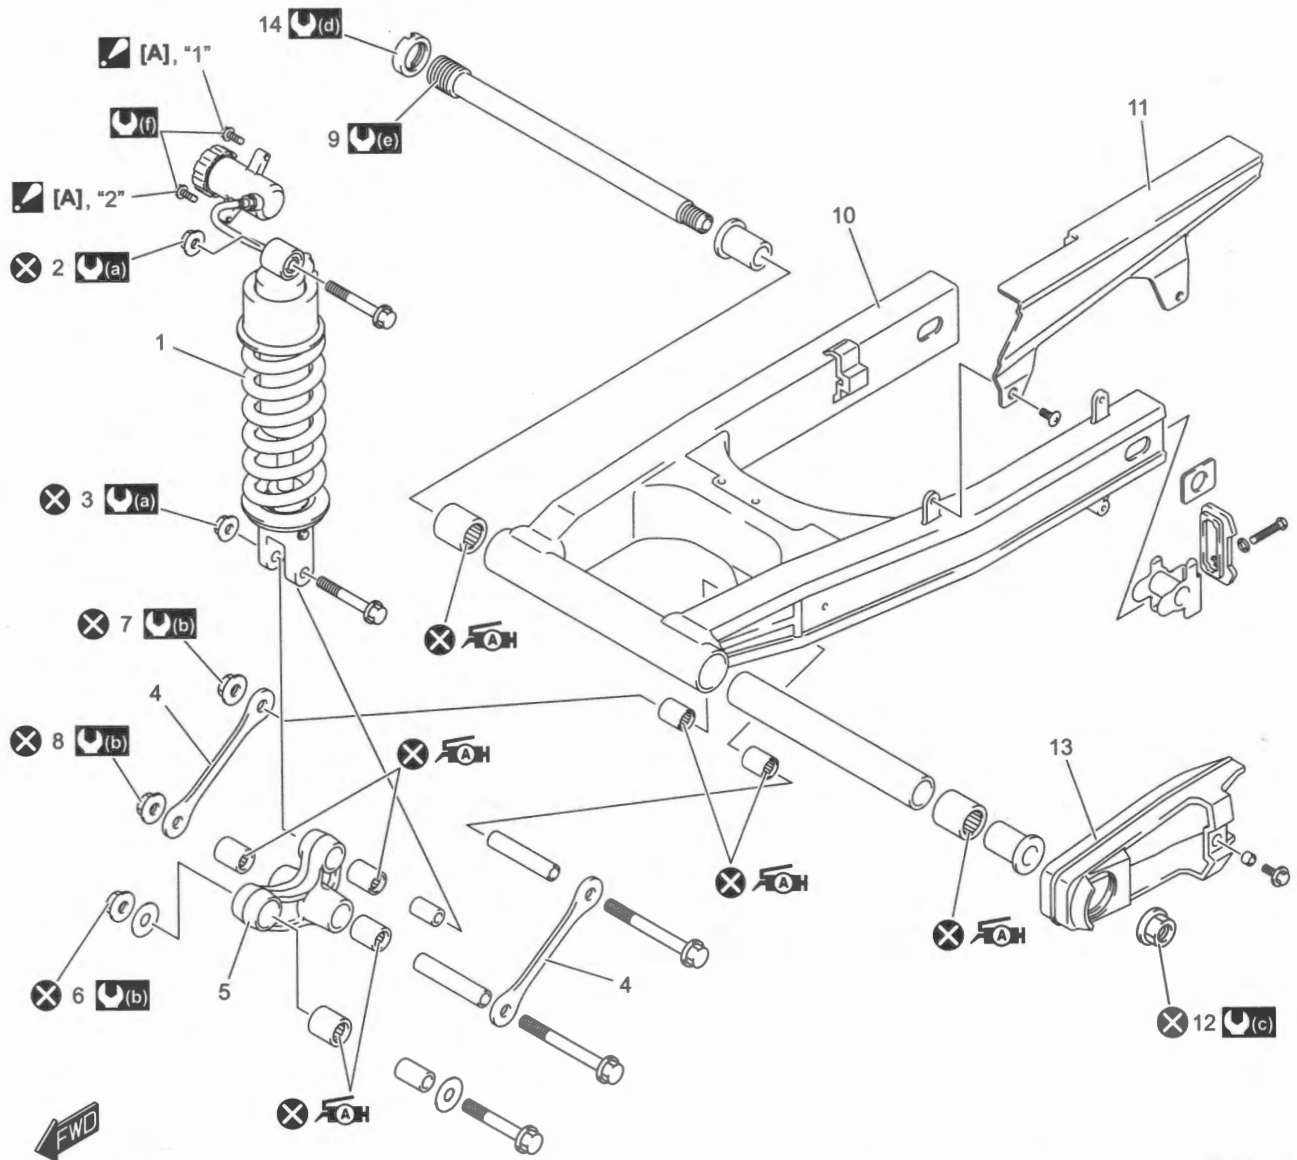

IH28K1230001-02

<p>▲ [A]: Tighten the bolts in order of "1" → "2".</p> <p>1. Rear shock absorber</p>	<p>8. Cushion lever (center) mounting nut</p>	<p>Ⓛ(b) : 78 N-m (8.0 kgf-m, 57.5 lbf-ft)</p>
<p>2. Rear shock absorber upper mounting nut</p>	<p>9. Swingarm pivot shaft</p>	<p>Ⓛ(c) : 100 N-m (10.2 kgf-m, 74.0 lbf-ft)</p>
<p>3. Rear shock absorber lower mounting nut</p>	<p>10. Swingarm</p>	<p>Ⓛ(d) : 90 N-m (9.2 kgf-m, 66.5 lbf-ft)</p>
<p>4. Cushion rod</p>	<p>11. Chain cover</p>	<p>Ⓛ(e) : 15 N-m (1.5 kgf-m, 11.0 lbf-ft)</p>
<p>5. Cushion lever</p>	<p>12. Swingarm pivot nut</p>	<p>Ⓛ(f) : 23 N-m (2.3 kgf-m, 17.0 lbf-ft)</p>
<p>6. Cushion lever (front) mounting nut</p>	<p>13. Chain buffer</p>	<p>Ⓛ(g) : Apply grease to the bearing.</p>
<p>7. Cushion rod mounting nut</p>	<p>14. Swingarm pivot shaft lock-nut</p>	<p>ⓧ : Do not reuse.</p>
	<p>Ⓛ(a) : 50 N-m (5.1 kgf-m, 37.0 lbf-ft)</p>	

## 2C-2 Rear Suspension:

### Rear Suspension On-Vehicle Inspection


BENH28K22306002

Inspect the rear shock absorber (1) for oil leakage and check that there is no play in the swingarm (2). Replace any defective parts, if necessary.

- Rear shock absorber replace: ☞(Page 2C-3)
- Swingarm pivot shaft and bearing inspection: ☞(Page 2C-11)
- Cushion lever inspection: ☞(Page 2C-6)
- Cushion rod inspection: ☞(Page 2C-8)
- Swingarm inspection: ☞(Page 2C-11)



IH28K1230002-01

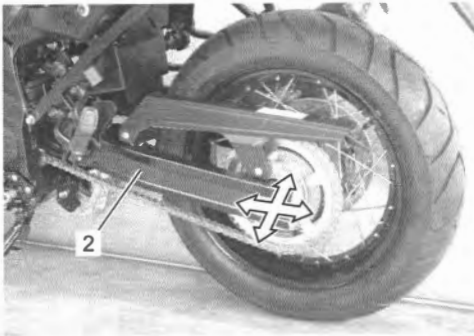

IH28K1230003-01

### Rear Shock Absorber Adjustment

BENH28K22306003

#### Spring Pre-load Adjustment


Turn the pre-load adjuster knob (1) to the desired position.

#### NOTE


**Position 0 provides the softest spring tension and position 5 provides the stiffest.**

#### Rear shock absorber spring adjuster


**[Standard]: 2nd position from softest end**

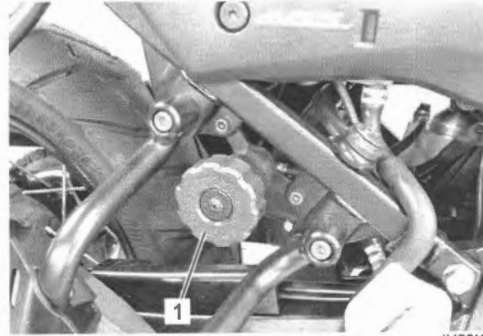

IH28K1230004-02

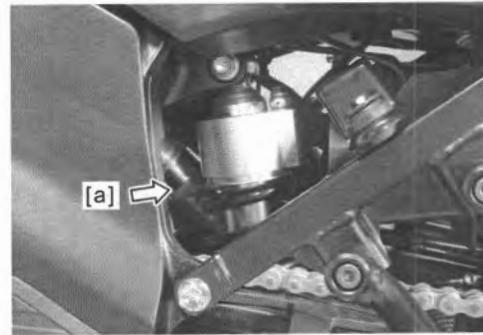

IH28K1230005-02

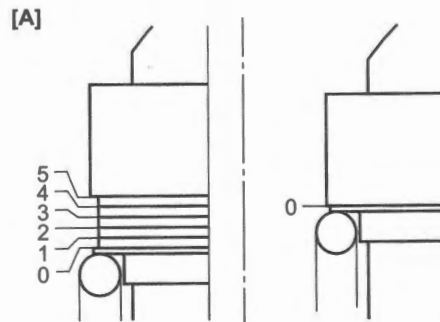

IH28K1230006-01

[A]: View [a]



## Damping Force Adjustment

### NOTE


- Turn the adjuster clockwise to stiffen the damping force and turn it counterclockwise to soften the damping force.
- Fine-tune the adjusters by turning it slightly until punch marks align.

Fully turn the rebound damping force adjuster (1) clockwise. From full hard position, turn it out to standard setting position.

### Rear shock absorber damping force adjuster

#### Rebound side

[Standard]: 2 turns counterclockwise from stiffest position

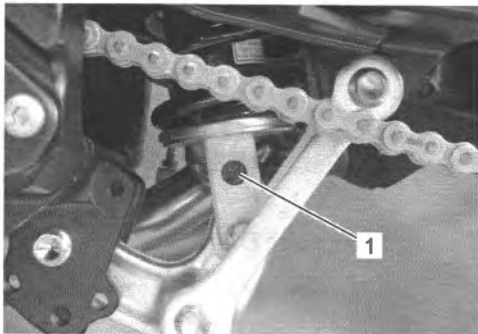


IH28K1230007-01

## Rear Shock Absorber Removal and Installation

BENH28K22306004


### Removal

- 1) Support the motorcycle with a jack to relieve load on the rear shock absorber.
- 2) Remove the pre-load adjuster (1).
- 3) Remove the rear brake hose clamp bolt (2).

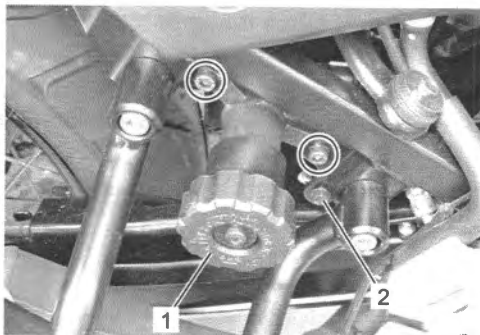


IH28K1230008-02

- 4) Remove the cushion rod mounting bolt and nut (1).
- 5) Remove the rear shock absorber lower mounting bolt and nut (2).

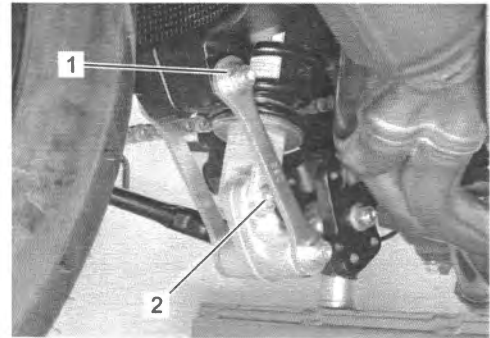


IH28K1230009-01

- 6) Remove the rear shock absorber upper mounting bolt and nut (1).

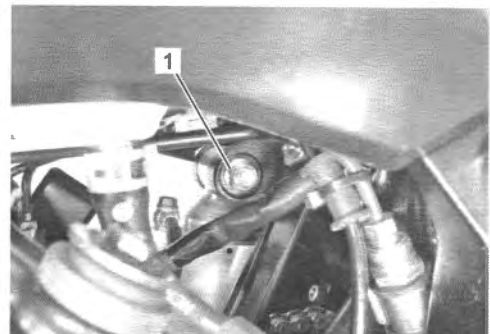

IH28K1230010-02

- 7) Remove the rear shock absorber (1) to the lower side.

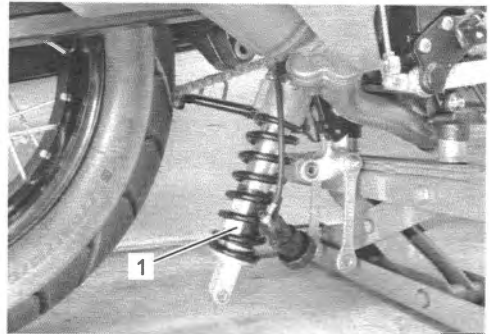

IH28K1230011-01

### Installation

Install the rear shock absorber in the reverse order of removal. Pay attention to the following points:

- Insert the rear shock absorber upper/lower mounting bolts and cushion rod mounting bolt from left side.


## 2C-4 Rear Suspension:

- Tighten the new rear shock absorber lower mounting nut (1) to the specified torque.
- Tighten the new cushion rod mounting nut (2) to the specified torque.

### Tightening torque

Rear shock absorber lower mounting nut (a): 50 N·m (5.1 kgf-m, 37.0 lbf-ft)

Cushion rod mounting nut (b): 78 N·m (8.0 kgf-m, 57.5 lbf-ft)

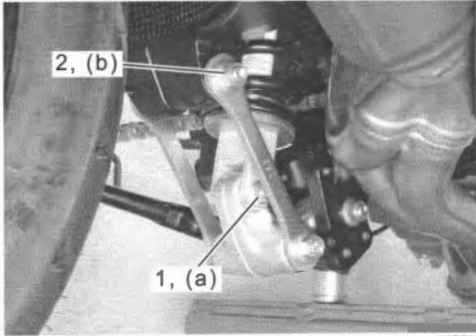


IH28K1230012-02

- Tighten the new rear shock absorber upper mounting nut (1) to the specified torque.

### Tightening torque

Rear shock absorber upper mounting nut (a): 50 N·m (5.1 kgf-m, 37.0 lbf-ft)

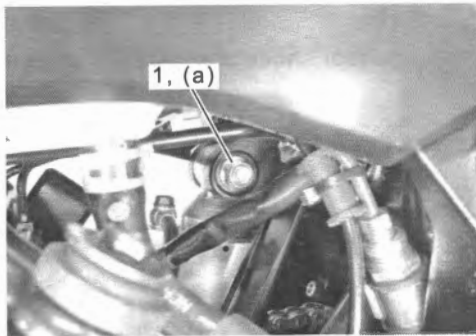


IH28K1230013-01

- Tighten the pre-load adjuster bolts (1) to the specified torque in order of "1" → "2".

### Tightening torque

Pre-load adjuster bolt (a): 23 N·m (2.3 kgf-m, 17.0 lbf-ft)

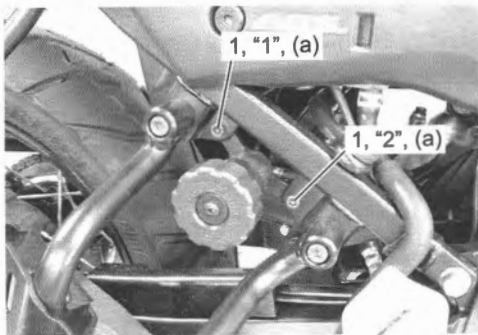

IH28K1230015-03

## Rear Shock Absorber Inspection


BENH28K22306005

Refer to "Rear Shock Absorber Removal and Installation" (Page 2C-3).

Inspect the rear shock absorber for damage and oil leakage, and absorber bushing for wear and damage. If any defect is found, replace the rear shock absorber with a new one.

### NOTICE

Do not attempt to disassemble the rear shock absorber. It is unserviceable.

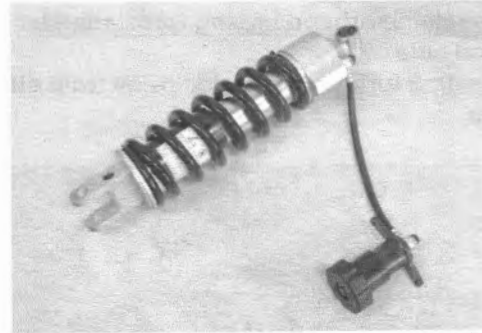

IH28K1230017-01

## Rear Shock Absorber Disposal

BENH28K22306006

Refer to "Rear Shock Absorber Removal and Installation" (Page 2C-3).


The rear shock absorber unit contains high-pressure nitrogen gas.

### ▲ WARNING

- Mishandling the rear shock absorber can cause explosion.
- Keep away from fire and heat. High gas pressure caused by heat can cause an explosion.
- Never apply heat or disassemble the damper unit since it can explode or oil can splash hazardously.
- Release gas pressure before disposing.

**Gas Pressure Release**

- 1) Mark the drill center at the location (1) using a center punch.

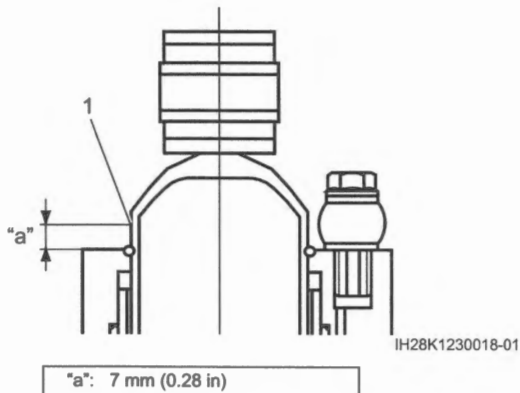

- 2) Wrap rear shock absorber (1) with a plastic bag (2) and fix it on a vise.
- 3) Drill a 2 – 3 mm (0.08 – 0.11 in) hole at the marked drill center using a drilling machine and let out gas while taking care not to get the plastic bag entangled with the drill bit.

**⚠ WARNING**

- Be sure to wear protective glasses since drilling chips and oil may fly off with blowing gas when the drill bit has penetrated through the body.
- Make sure to drill at the specified position. Otherwise, pressurized oil may spout out forcefully.


**Cushion Lever Removal and Installation**

BENH28K22306007


**Removal**

- 1) Remove the cushion rods. (Page 2C-7)


- 2) Remove the rear shock absorber lower mounting bolt and nut (1).

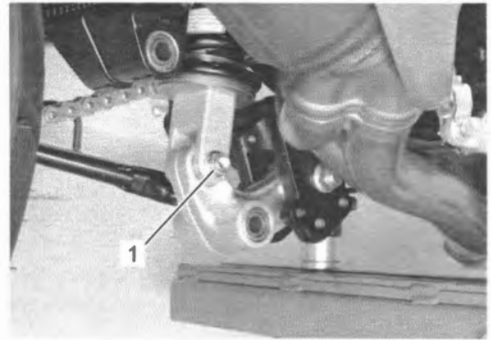


- 3) Remove the cushion lever (1) and washers.

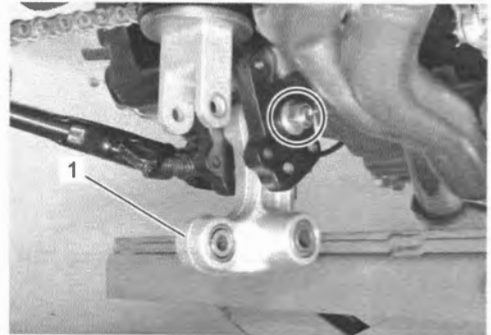

- 4) Remove the spacers (1).

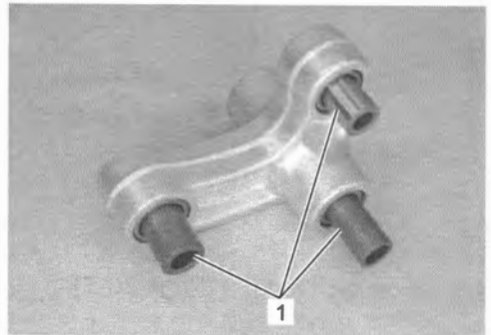
**Installation**

- 1) Install the spacers (1).

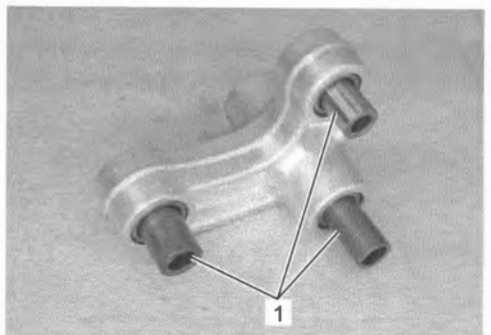

## 2C-6 Rear Suspension:

- 2) Install the cushion lever (1) and washers (2).

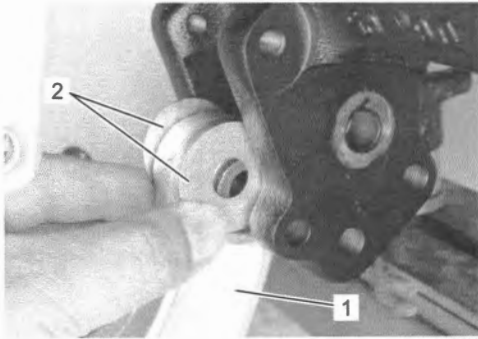

- 3) Insert the cushion lever (front) mounting bolt from left side, and tighten the new nut to the specified torque.


### Tightening torque

**Cushion lever (front) mounting nut (a): 78 N·m (8.0 kgf-m, 57.5 lbf-ft)**

- 4) Insert the rear shock absorber lower mounting bolt from left side, and tighten the new nut to the specified torque.

### Tightening torque

**Rear shock absorber lower mounting nut (b): 50 N·m (5.1 kgf-m, 37.0 lbf-ft)**

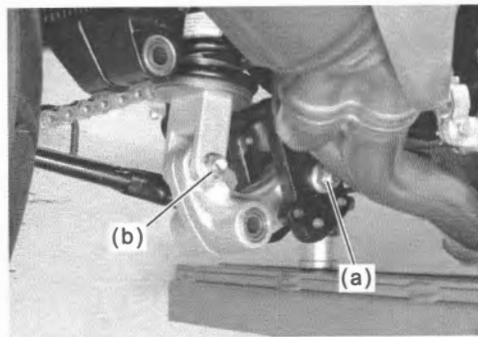

- 5) Install the cushion rods. (Page 2C-7)


### Cushion Lever Inspection

BENH28K22306008

Refer to "Cushion Lever Removal and Installation" (Page 2C-5).


### Spacer

Inspect the spacers for any flaws or other damage. If any defects are found, replace the spacers with new ones.

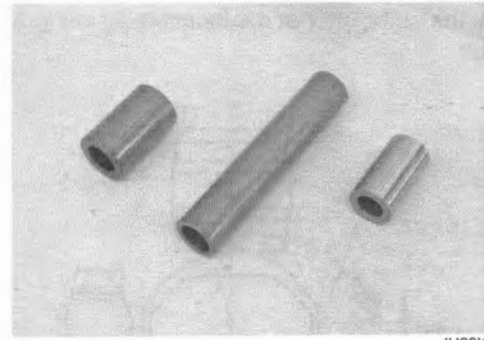

### Cushion Lever Bearing

- 1) Insert the spacers into bearings.
- 2) Check the play by moving the spacers up and down. If excessive play is noted, replace the bearing with a new one. Refer to "Cushion Lever Bearing Removal and Installation" (Page 2C-7).

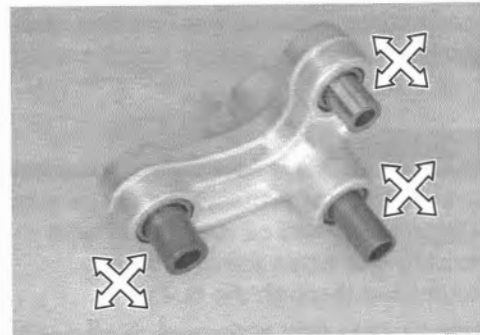

### Cushion Lever

Inspect the cushion lever for damage. If any defect is found, replace the cushion lever with a new one.



## Cushion Lever Bearing Removal and Installation

BENH28K22306009

Refer to "Cushion Lever Removal and Installation" (Page 2C-5).


### Removal

- 1) Remove the cushion lever bearings with the special tools.


#### Special tool

(A): 09921-20240

(B): 09913-70210

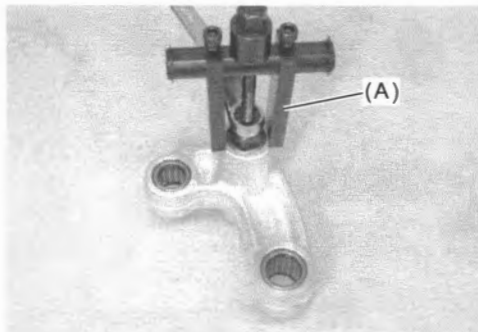

IH28K1230027-01

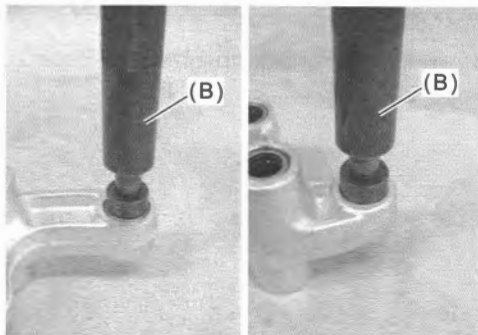

IH28K1230028-01

### Installation


- 1) Press the new bearings (1) into the cushion lever with the special tool.

#### NOTE

The stamped mark side of the cushion lever bearing faces outside.

#### Special tool


(A): 09913-70210

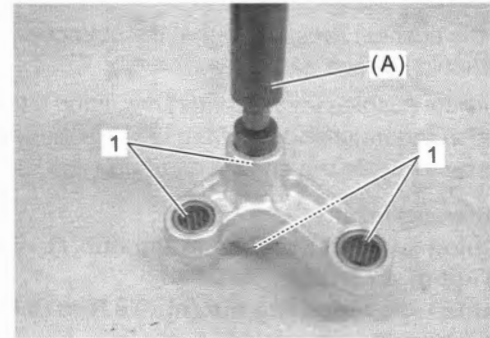

IH28K1230029-01

- 2) Apply grease to the bearings.

"A": Grease 99000-25011 (SUZUKI SUPER GREASE A)

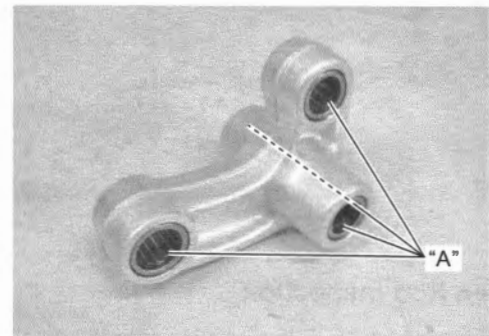


IH28K1230030-03

## Cushion Rod Removal and Installation

BENH28K22306010

### Removal

- 1) Support the motorcycle with a jack to relieve load on the cushion rod.
- 2) Remove the cushion rods (1).

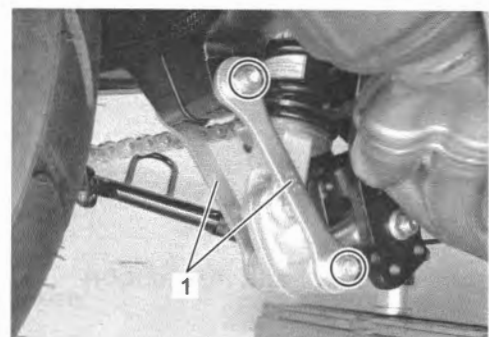

IH28K1230032-01


**Installation**

- 1) Set the cushion rods (1) so that the stamped marks (2) should be face outside.
- 2) Insert the cushion lever (center) mounting bolt and cushion rod mounting bolt from left side, and tighten their new nuts to the specified torque.


**Tightening torque**

**Cushion lever (center) mounting nut (a): 78 N·m (8.0 kgf-m, 57.5 lbf-ft)**


**Cushion rod mounting nut (b): 78 N·m (8.0 kgf-m, 57.5 lbf-ft)**

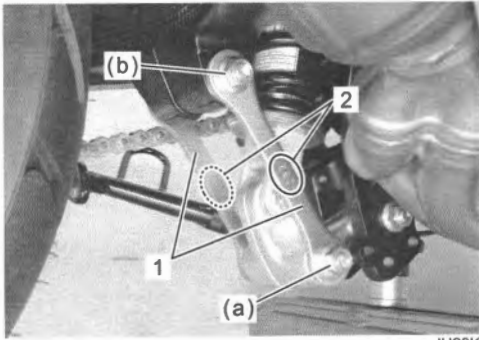

IH28K1230033-02

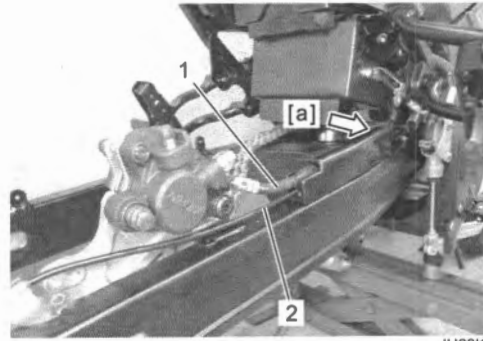

IH28K1230036-01

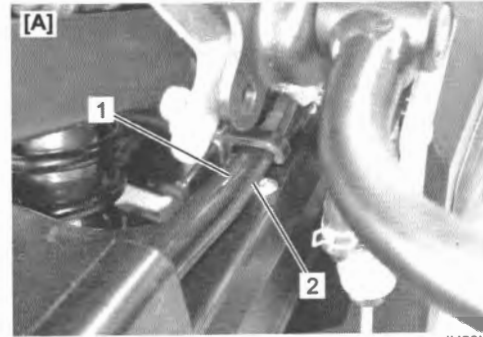

IH28K1230037-01


[A]: View [a]

**Cushion Rod Inspection**

BENH28K22306011


Refer to "Cushion Rod Removal and Installation" (Page 2C-7).

Inspect the cushion rods for damage and bend. If any defects are found, replace the cushion rods with new ones.

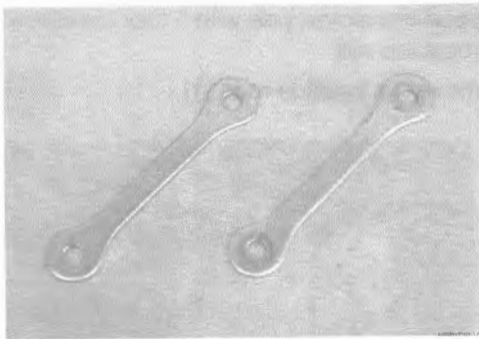

IH28K1230035-01

- 5) Remove the rear shock absorber. (Page 2C-3)
- 6) Remove the pivot covers (1).

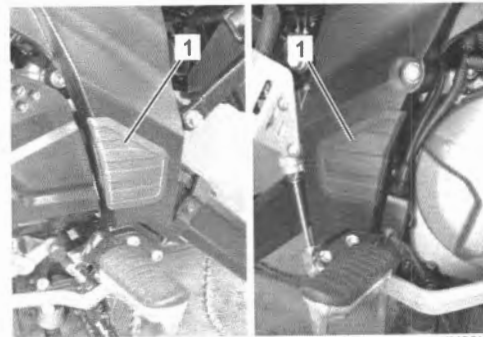


IH28K1230038-01

- 7) Remove the swingarm pivot shaft lock-nut (1) with the special tool.

**Special tool**

**(A): 09940-14940**

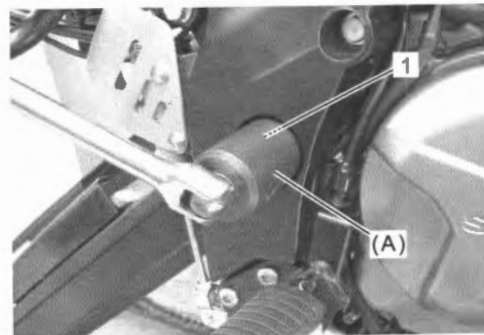

IH28K1230039-01

**Swingarm Removal and Installation**


BENH28K22306012

**Removal**

- 1) Remove the front exhaust pipe and muffler. (Page 1K-4)
- 2) Support the motorcycle with a jack to relieve load on the swingarm.
- 3) Remove the rear wheel assembly. (Page 2D-14)
- 4) Remove the rear brake hose (1) and rear wheel speed sensor lead wire (2) from swingarm.

- 8) Hold the swingarm pivot shaft (1) with the special tool and remove the swingarm pivot nut (2).


**Special tool**  
(A): 09944-28321

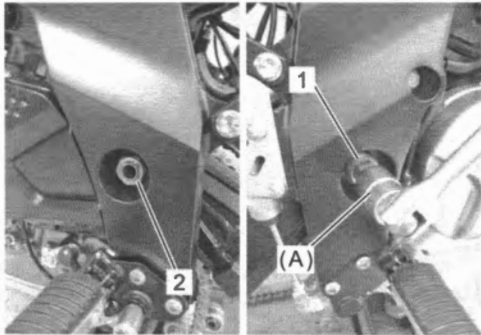

IH28K1230040-01


- 9) Remove the swingarm pivot shaft (1) with the special tool and remove the swingarm (2).

**Special tool**  
(A): 09944-28321

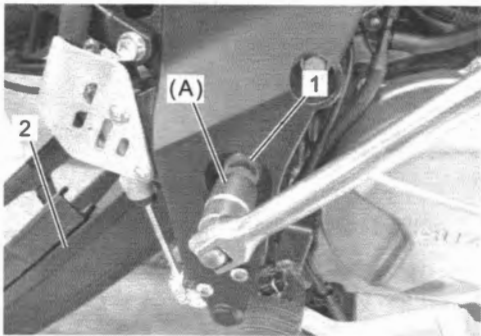


IH28K1230041-01

- 10) Remove the chain cover (1).

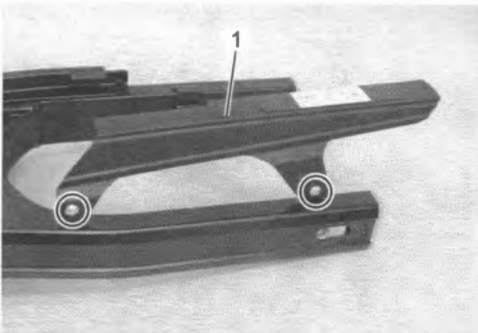


IH28K1230042-01

- 11) Remove the chain adjusters (1).

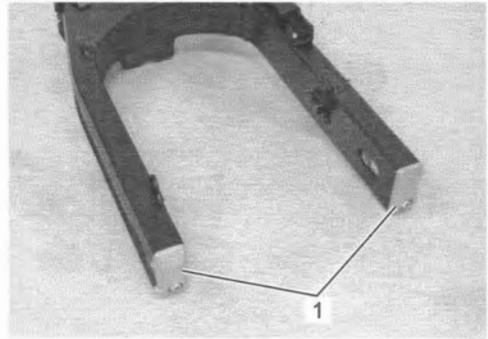


IH28K1230043-01

- 12) Remove the chain buffer (1).

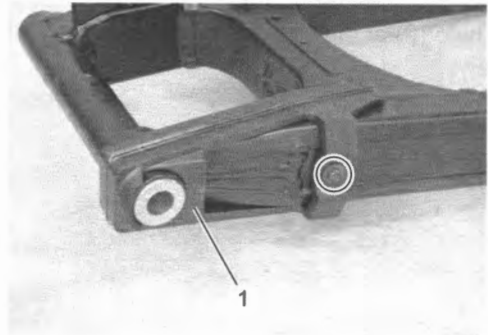


IH28K1230044-01

- 13) Remove the brake hose guides (1).

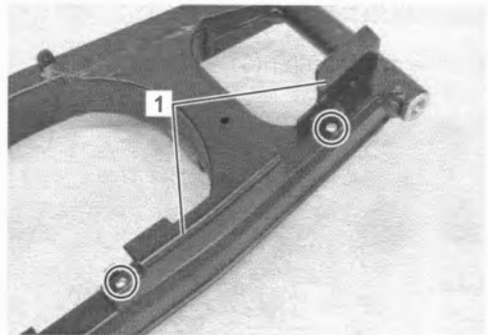

IH28K1230045-01

- 14) Remove the spacers (1).

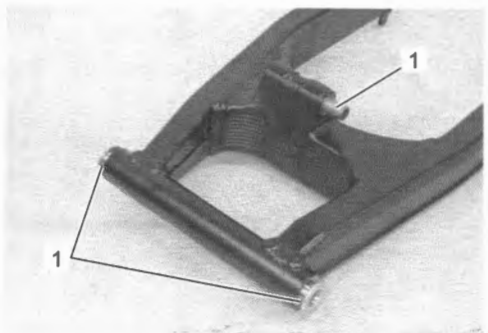


IH28K1230046-01

## 2C-10 Rear Suspension:


### Installation

- 1) Install the spacers (1).

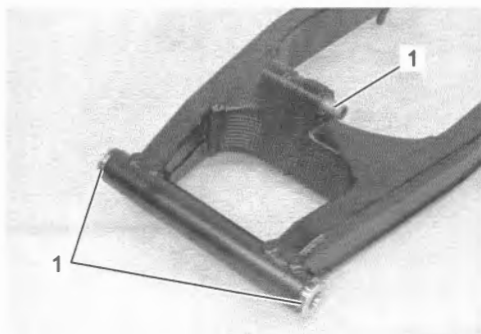


IH28K1230046-01

- 2) Insert the projection (1) of the brake hose guides into the hole (2) of the swingarm, and then tighten the screws.

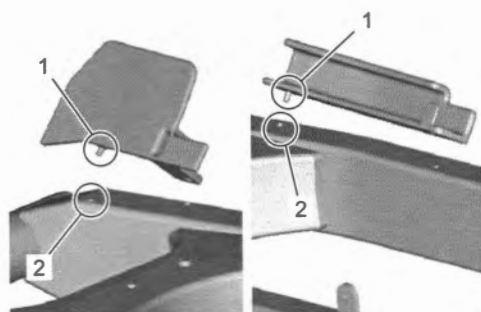


IH28K1230047-02

- 3) Install the chain buffer (1).

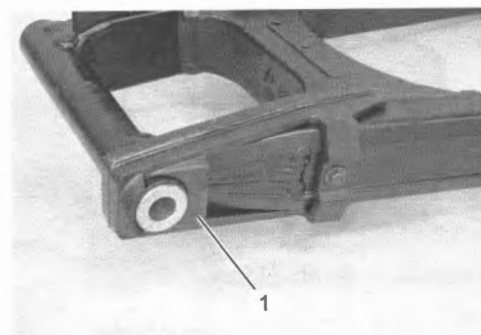


IH28K1230048-01

- 4) Install the chain adjusters (1).

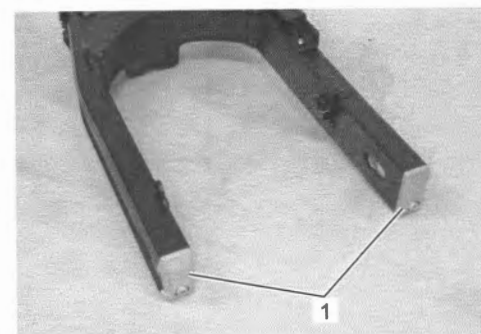


IH28K1230043-01

- 5) Install the chain cover (1).

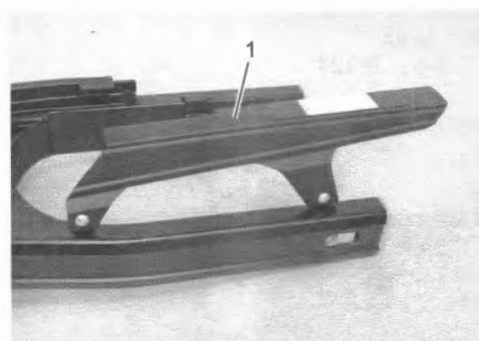

IH28K1230049-01

- 6) When installing the swingarm assembly (1), pass the drive chain (2) to the swingarm.

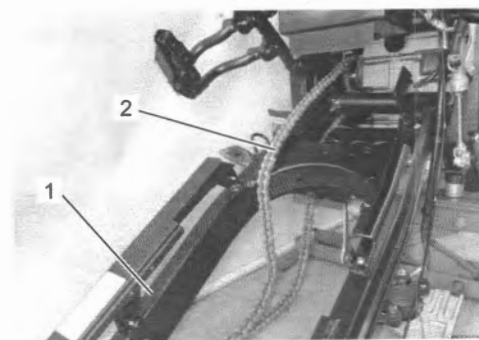

IH28K1230050-01


- 7) Install the swingarm pivot shaft (1) and tighten it to the specified torque with the special tool.

#### Special tool

(A): 09944-28321

#### Tightening torque

Swingarm pivot shaft (a): 15 N·m (1.5 kgf-m, 11.0 lbf-ft)

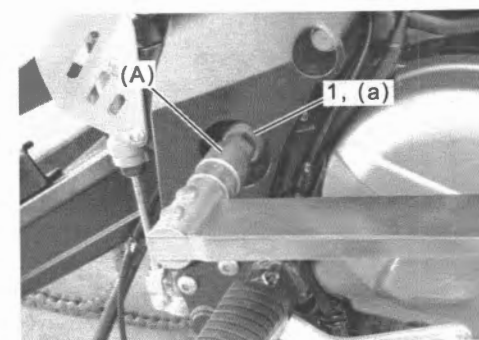


IH28K1230051-01



- 8) Hold the swingarm pivot shaft (1) with the special tool and tighten the new swingarm pivot nut (2) to the specified torque.

**Special tool**  
(A): 09944-28321

**Tightening torque**  
Swingarm pivot nut (a): 100 N·m (10.2 kgf-m, 74.0 lbf-ft)

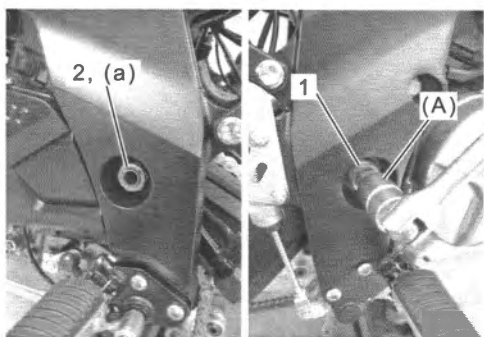


IH28K1230052-02

- 9) Tighten the swingarm pivot shaft lock-nut (1) to the specified torque with the special tool.


**Special tool**  
(A): 09940-14940

**Tightening torque**  
Swingarm pivot shaft lock-nut (a): 90 N·m (9.2 kgf-m, 66.5 lbf-ft)

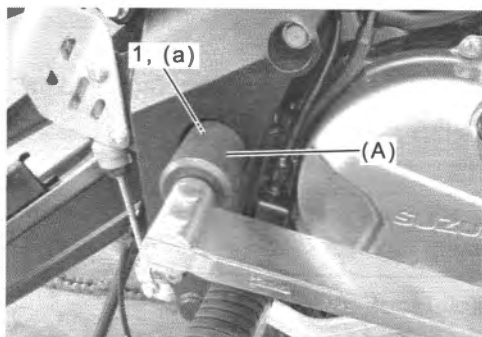

IH28K1230053-01

- 10) Install the pivot covers (1).

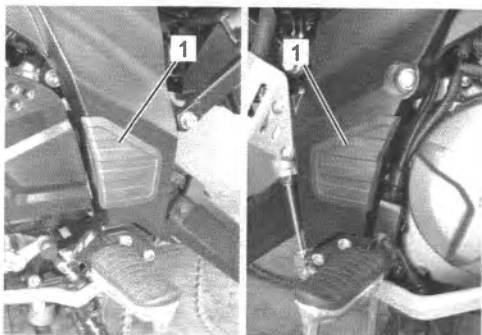

IH28K1230038-01

- 11) Install the rear shock absorber. (Page 2C-3)

- 12) Install the rear brake hose and rear wheel speed sensor lead wire to swingarm. Refer to "Rear Wheel Speed Sensor Routing Diagram" in Section 4E (Page 4E-9).

- 13) Install the rear wheel assembly. (Page 2D-14)

- 14) Install the front exhaust pipe and muffler. (Page 1K-4)


### Swingarm Inspection

BENH28K22306013

Refer to "Swingarm Removal and Installation" (Page 2C-8).

### Spacers

Inspect the spacers for wear and damage. If any defects are found, replace the spacers with new ones.

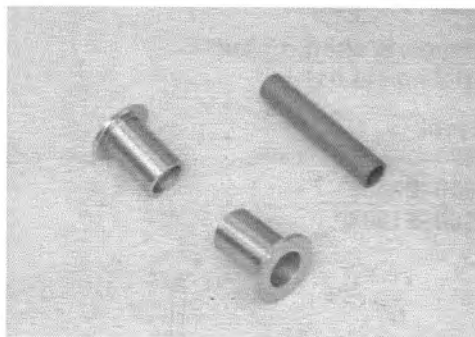


IH28K1230054-01

### Chain Buffer

Refer to "Chain Buffer Inspection" in Section 3A (Page 3A-4).

### Swingarm Bearing

- 1) Insert the spacers into bearings.
- 2) Check the play by moving the spacers up and down. If excessive play is noted, replace the bearings with new ones. (Page 2C-12)

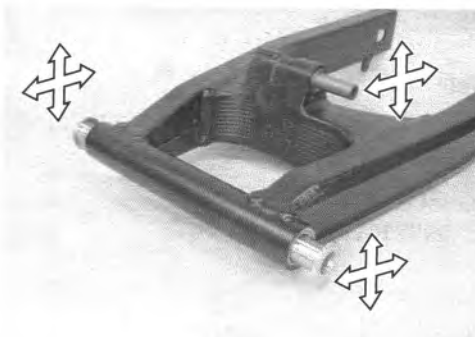

IH28K1230055-01

### Swingarm

Inspect the swingarm for damage. If any defect is found, replace the swingarm with a new one.



IH28K1230056-01

**Swingarm Pivot Shaft**

Using a dial gauge, check the swingarm pivot shaft runout. If the runout exceeds the service limit, replace the pivot shaft.

**Swingarm pivot shaft runout**


[Limit]: 0.3 mm (0.011 in)

**Special tool**

(A): 09900-20607

(B): 09900-20701

(C): 09900-21304

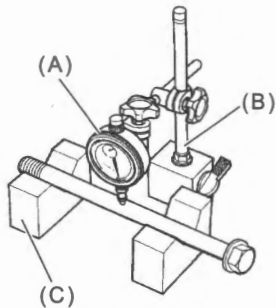

IF34J1230026-01

**Swingarm Bearing Removal and Installation**

BENH28K22306014


Refer to "Swingarm Removal and Installation" (Page 2C-8).

**Removal**

- 1) Remove the swingarm pivot bearings (1) on both sides with the special tool.


**Special tool**

(A): 09921-20240

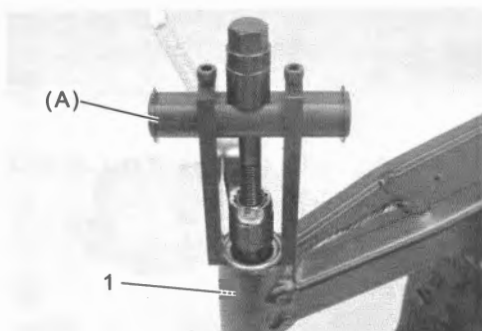

IH28K1230057-03

- 2) Remove the center spacer (1).

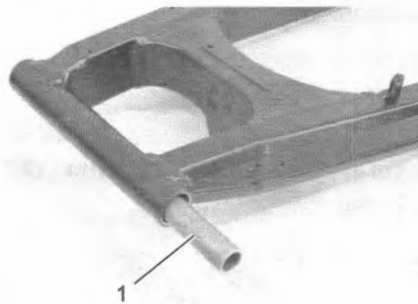


IH28K1230058-01

- 3) Remove the cushion rod bearings (1) on both sides with the special tool.

**Special tool**

(A): 09921-20240

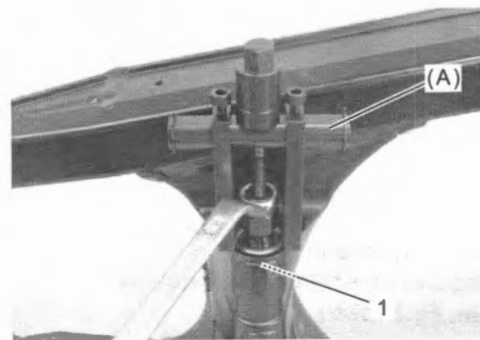

IH28K1230059-03

**Installation**


- 1) Press the new cushion rod bearings into the swingarm with the special tool.

**NOTE**

The stamped mark side of the cushion rod bearing faces outside.

**Special tool**

(A): 09924-84521

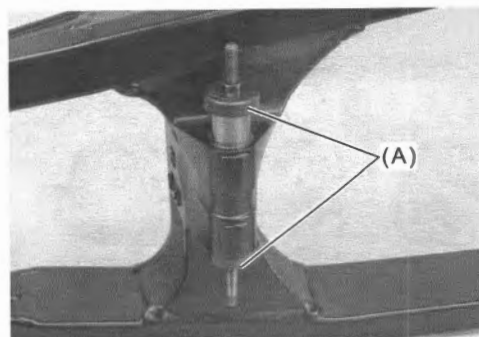

IH28K1230060-01

- 2) Install the center spacer (1).
- 3) Apply a small quantity of the grease to housing, when installing the bearings (2).

**"A": Grease 99000-25011 (SUZUKI SUPER GREASE A)**

- 4) Press the new swingarm pivot bearings into the swingarm with the special tool.

#### NOTE


The stamped mark side of the pivot bearing faces outside.

#### Special tool

(A): 09941-34513




IH28K1230061-01

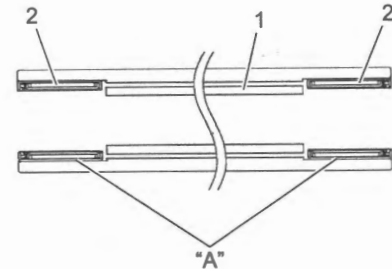

IH28K1230062-01

- 5) Apply grease to the bearings.

**"A": Grease 99000-25011 (SUZUKI SUPER GREASE A)**

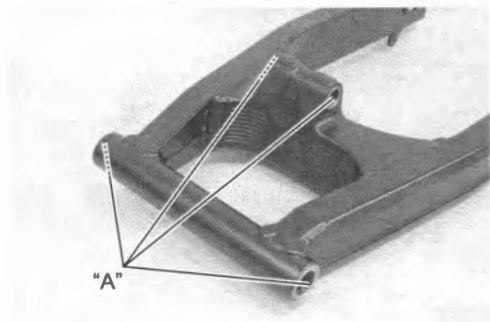

IH28K1230063-02

## Specifications

### Tightening Torque Specifications

BENH28K22307001

Fastening part	Tightening torque			Note
	N·m	kgf·m	lbf·ft	
Rear shock absorber lower mounting nut	50	5.1	37.0	☞ (Page 2C-4) / ☞ (Page 2C-6)
Cushion rod mounting nut	78	8.0	57.5	☞ (Page 2C-4) / ☞ (Page 2C-8)
Rear shock absorber upper mounting nut	50	5.1	37.0	☞ (Page 2C-4)
Pre-load adjuster bolt	23	2.3	17.0	☞ (Page 2C-4)
Cushion lever (front) mounting nut	78	8.0	57.5	☞ (Page 2C-6)
Cushion lever (center) mounting nut	78	8.0	57.5	☞ (Page 2C-8)
Swingarm pivot shaft	15	1.5	11.0	☞ (Page 2C-10)
Swingarm pivot nut	100	10.2	74.0	☞ (Page 2C-11)
Swingarm pivot shaft lock-nut	90	9.2	66.5	☞ (Page 2C-11)

#### Reference:

For the tightening torques of fasteners not specified in this page, refer to:

"Rear Suspension Components" (Page 2C-1)

"Fasteners Information" in Section 0C (Page 0C-11)

## Special Tools and Equipment

### Recommended Service Material

BENH28K22308001










Material	SUZUKI recommended product or Specification		Note
Grease	SUZUKI SUPER GREASE A	P/No.: 99000-25011	☞ (Page 2C-7) / ☞ (Page 2C-13) / ☞ (Page 2C-13)

### NOTE

Required service material(s) is also described in:  
 “Rear Suspension Components” (Page 2C-1)
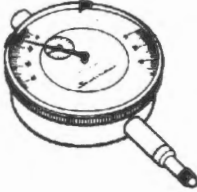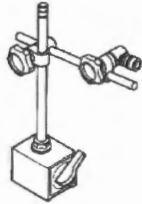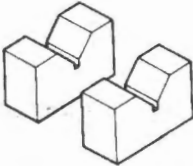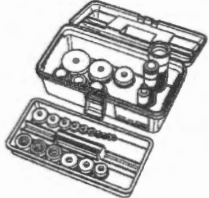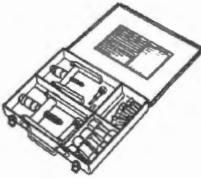
### Special Tool

BENH28K22308002

09900-20607 Dial gauge (10 x 0.01 mm) ☞ (Page 2C-12)		09900-20701 Dial gauge chuck ☞ (Page 2C-12)	
09900-21304 V blocks ☞ (Page 2C-12)		09913-70210 Bearing installer set ☞ (Page 2C-7) / ☞ (Page 2C-7)	
09921-20240 Bearing remover set ☞ (Page 2C-7) / ☞ (Page 2C-12) / ☞ (Page 2C-12)		09924-84521 Bearing installer set ☞ (Page 2C-12)	
09940-14940 Swingarm pivot adjuster wrench ☞ (Page 2C-8) / ☞ (Page 2C-11)		09941-34513 Bearing installer set ☞ (Page 2C-13)	
09944-28321 Hexagon bit socket (19 mm : 1/2 sq.) ☞ (Page 2C-9) / ☞ (Page 2C-9) / ☞ (Page 2C-10) / ☞ (Page 2C-11)			

# Wheels and Tires

## Precautions

### Precautions for Wheel and Tire

BENH28K22400001

Refer to "General Precautions" in Section 00 (Page 00-1).

---

**▲ WARNING**


- Replace the wheel when wheel runout exceed the service limit or if find damage such as distortion, crack, nick or scratch.
  - When tire replacement is necessary, the original equipment type tire should be used.
  - Replacement wheel must be equivalent to the original equivalent wheel.
-

# Repair Instructions

## Front Wheel Components

DL650A


BENH28K22406001

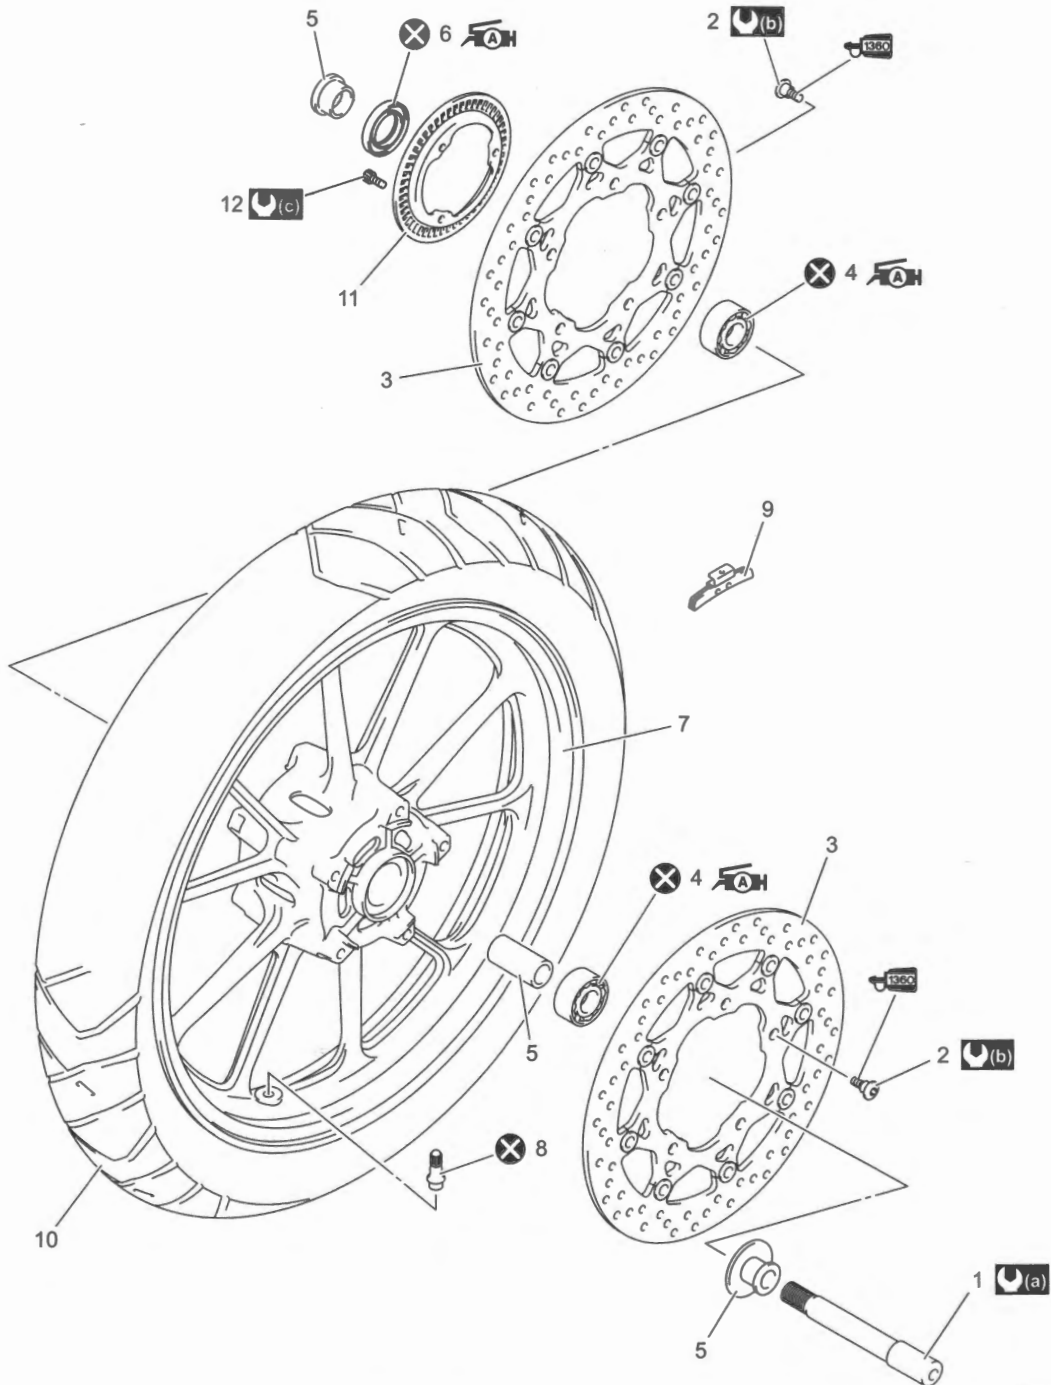

IH28K1240002-01

1. Front axle	6. Dust seal	11. Front wheel speed sensor rotor	: Apply grease.
2. Front brake disc bolt	7. Front wheel	12. Front wheel speed sensor rotor bolt	: Apply thread lock to the thread part.
3. Brake disc	8. Air valve	: 65 N·m (6.6 kgf·m, 48.0 lbf·ft)	: Do not reuse.
4. Bearing	9. Balancer weight	: 23 N·m (2.3 kgf·m, 17.0 lbf·ft)	
5. Spacer	10. Front tire	: 6.3 N·m (0.64 kgf·m, 4.65 lbf·ft)	

DL650XA

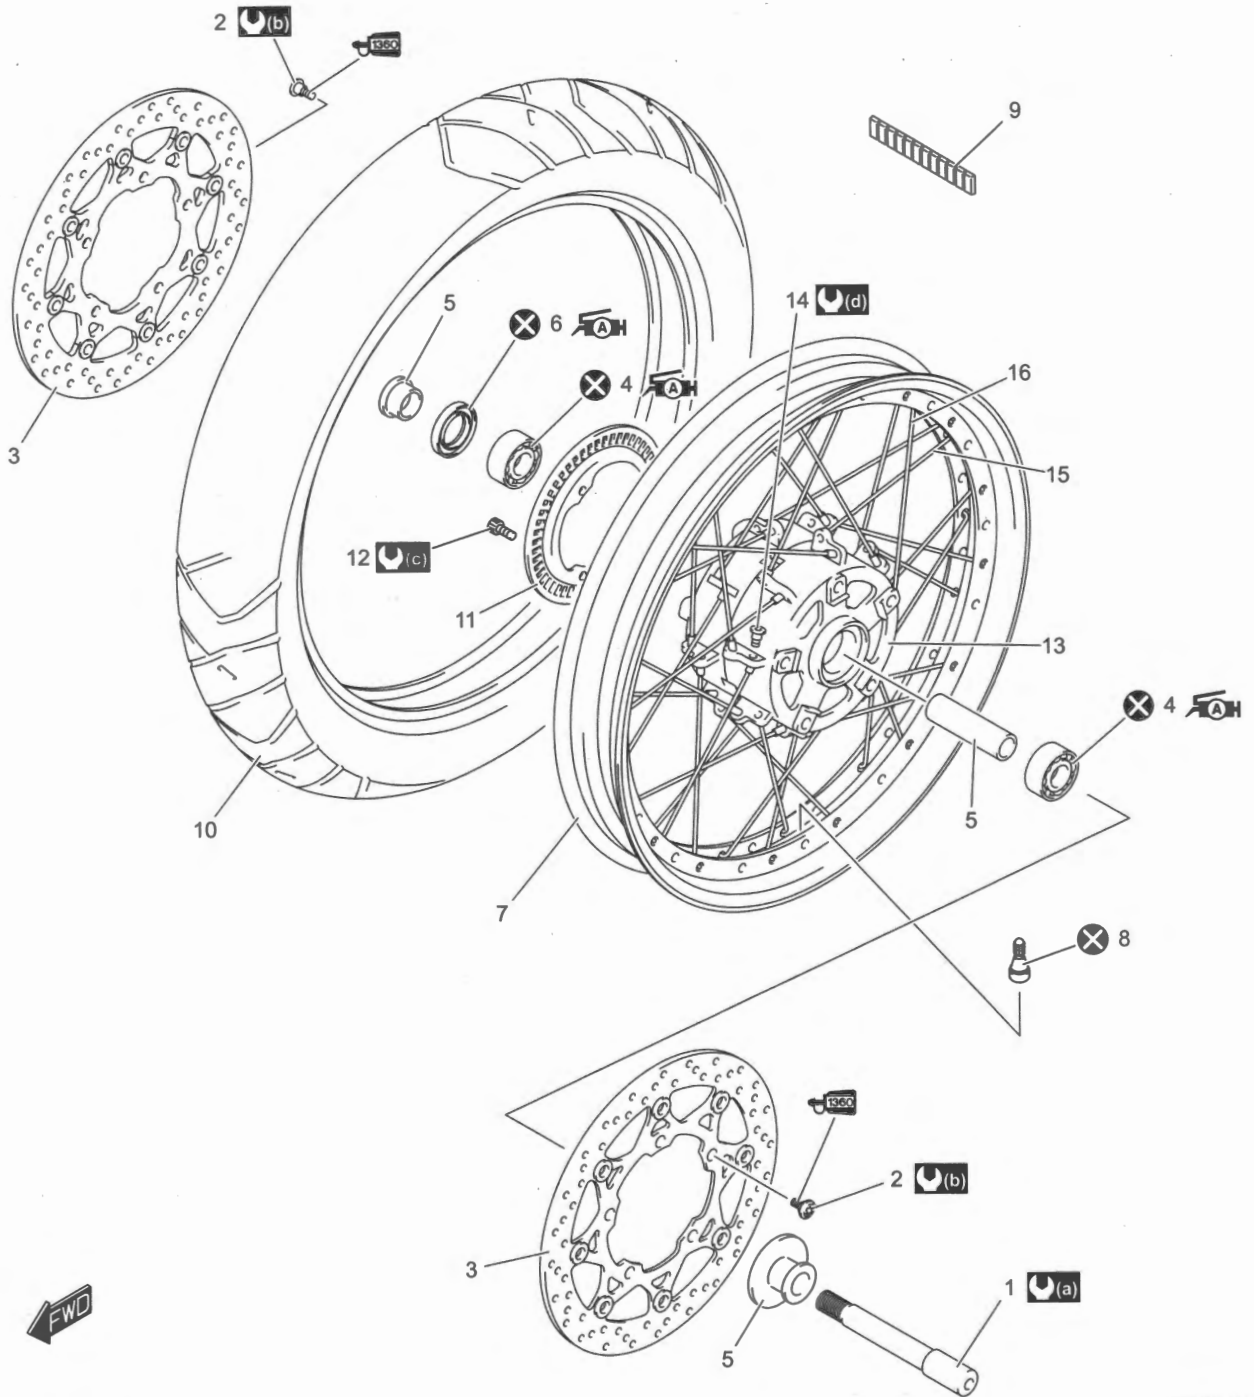


IH28K1240004-01

1. Front axle	7. Front wheel rim	13. Front wheel hub	: 65 N·m (6.6 kgf·m, 48.0 lbf·ft)
2. Front brake disc bolt	8. Air valve	14. Spoke nipple	: 7.5 N·m (0.76 kgf·m, 5.55 lbf·ft)
3. Brake disc	9. Balancer weight	15. Front inner spoke	: Apply grease.
4. Bearing	10. Front tire	16. Front outer spoke	: Apply thread lock to the thread part.
5. Spacer	11. Front wheel speed sensor rotor	: 65 N·m (6.6 kgf·m, 48.0 lbf·ft)	: Do not reuse.
6. Dust seal	12. Front wheel speed sensor rotor bolt	: 23 N·m (2.3 kgf·m, 17.0 lbf·ft)	

Front Wheel Assembly Construction

DL650A

BENH28K22406002

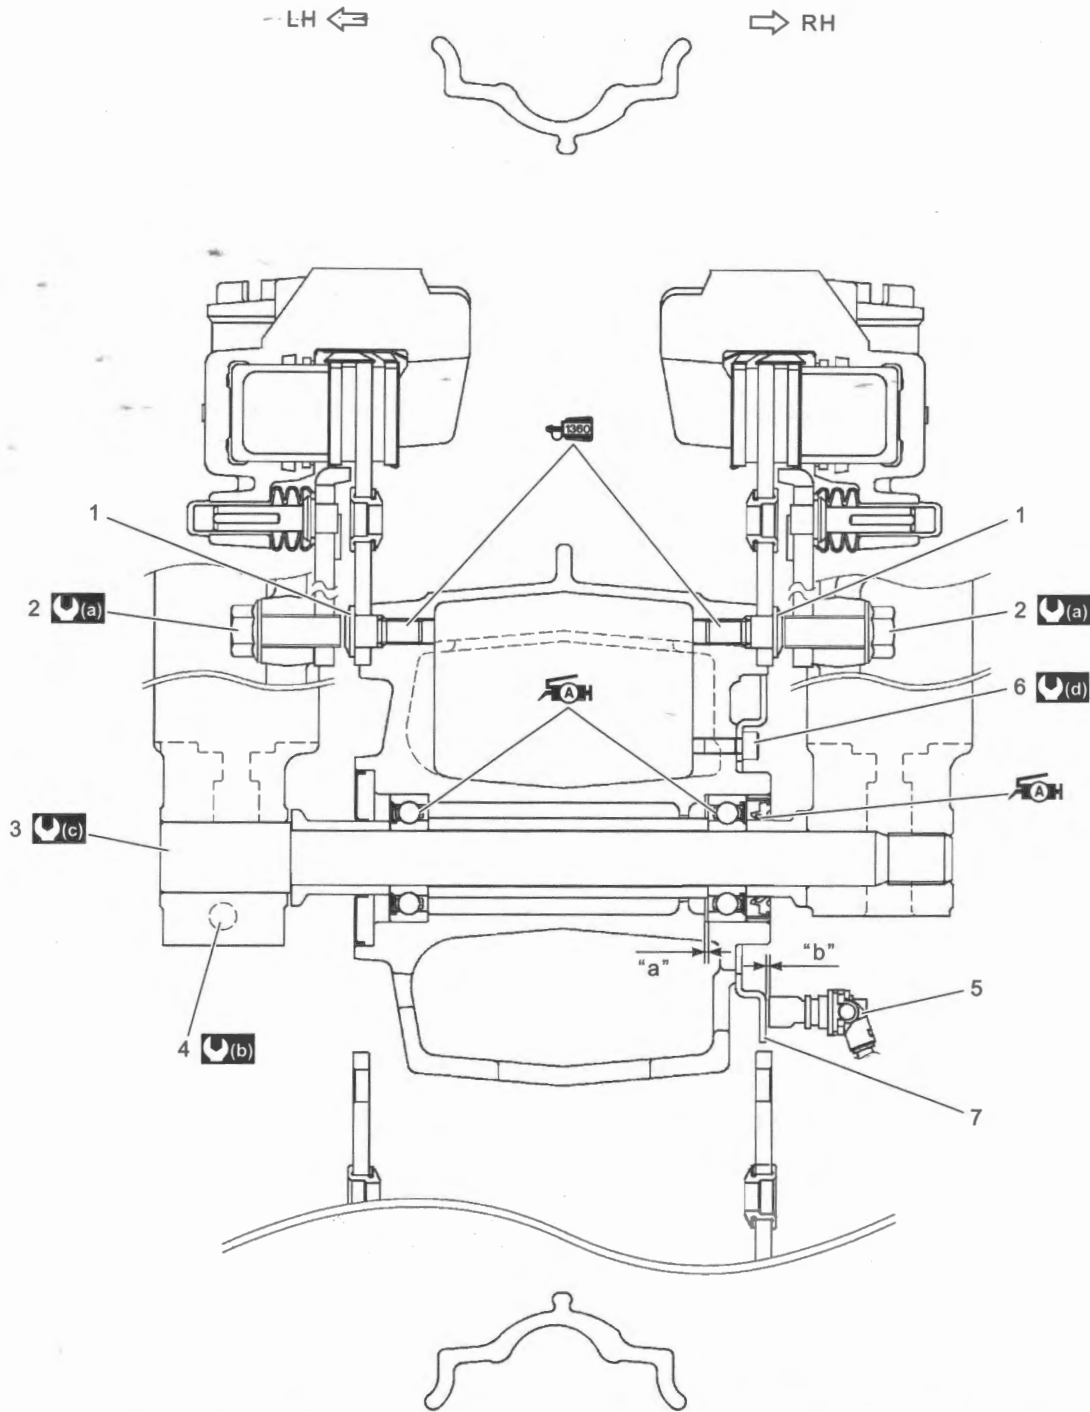

IH28K1240003-03


1. Front brake disc bolt	6. Front wheel speed sensor rotor bolt	(b) : 23 N·m (2.3 kgf-m, 17.0 lbf-ft)
2. Front brake caliper mounting bolt	7. Front wheel speed sensor rotor	(c) : 65 N·m (6.6 kgf-m, 48.0 lbf-ft)
3. Front axle	"a": Clearance	(d) : 6.3 N·m (0.64 kgf-m, 4.65 lbf-ft)
4. Front axle pinch bolt	"b": 0.28 – 1.65 mm (0.0111 – 0.0649 in)	(a) : Apply grease.
5. Front wheel speed sensor	(a) : 39 N·m (4.0 kgf-m, 29.0 lbf-ft)	350 : Apply thread lock to the thread part.



DL650XA

NOTE

DL650XA differs from DL650A in the wheel shape and installation of the balancer weight.

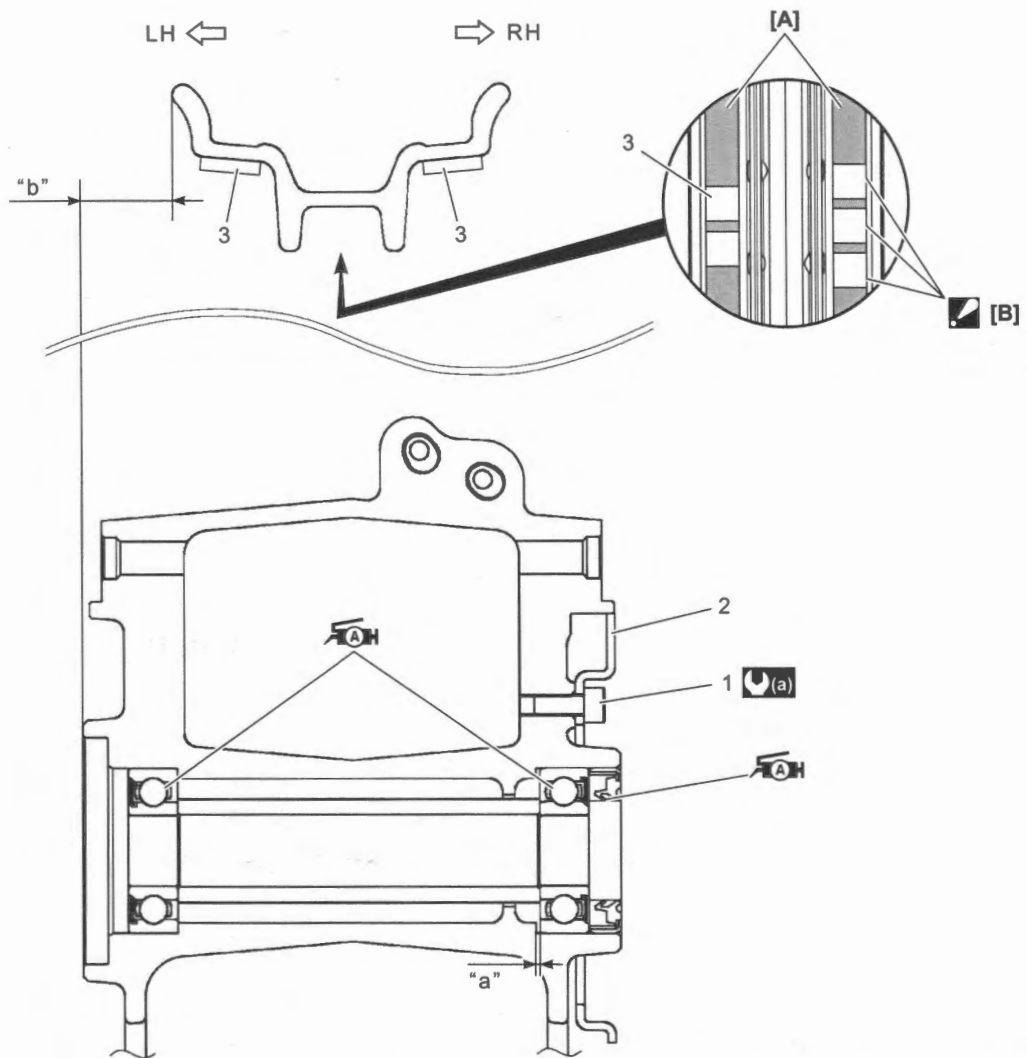


IH28K1240005-04


[A]: Wheel rim flat surface	2. Front wheel speed sensor rotor	"b": 21.95 – 22.95 mm (0.8642 – 0.9035 in)
[B]: When sticking a number of weights, a little opening between the adjoining weights is allowed. However, overlapping is prohibited.	3. Balancer weight	(a): 6.3 N-m (0.64 kgf-m, 4.65 lbf-ft)
1. Front wheel speed sensor rotor bolt	"a": Clearance	AH: Apply grease.

Front Wheel Spoke Construction (DL650XA)

BENH28K22406003

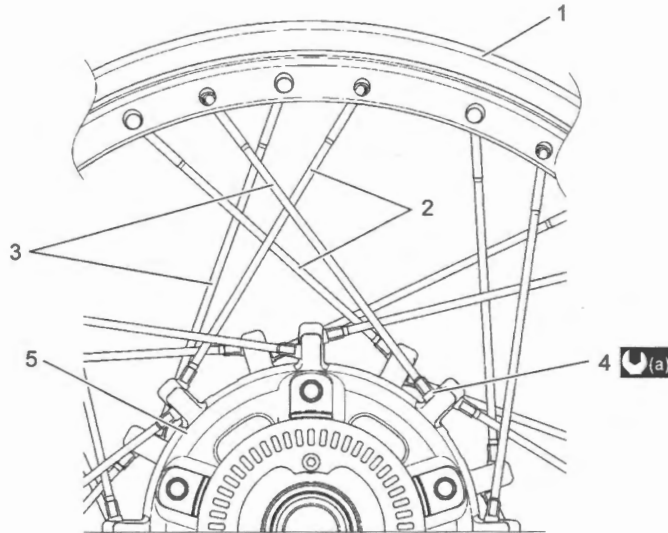

IF11J1240003-01

1. Front wheel rim	3. Front outer spoke	5. Front wheel hub
2. Front inner spoke	4. Spoke nipple	 (a) : 7.5 N-m (0.76 kgf-m, 5.55 lbf-ft)

Front Wheel Assembly Removal and Installation

BENH28K22406004

**NOTICE**


**Do not hit the front wheel speed sensor rotor when dismantling the front wheel.**

**Removal**

- 1) Remove the front wheel speed sensor from the right front fork leg. (Page 4E-32)
- 2) Remove the front brake calipers. (Page 4B-3)
- 3) Loosen axle pinch bolt (1) on the left front fork leg.
- 4) Loosen the front axle (2) with the special tool.


**Special tool**

**(A): 09900-18710**

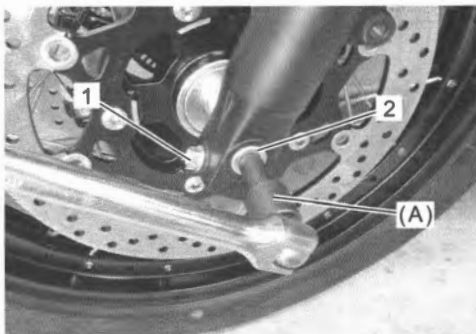


IH28K1240006-01

- 5) Raise the front wheel off the ground and support the motorcycle with a jack.
- 6) Draw out the front axle (1) and remove the front wheel.

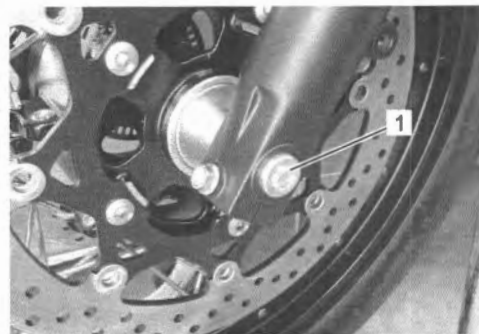

IH28K1240007-01


- 7) Remove the spacers (1).

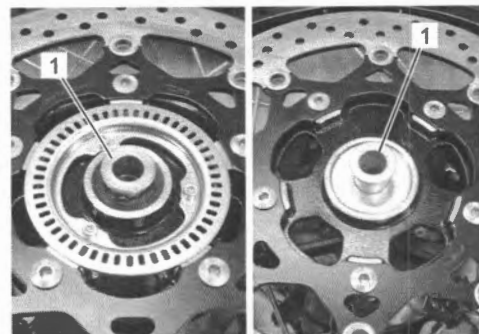

IH28K1240008-01

**Installation**

- 1) Install the spacers (1).

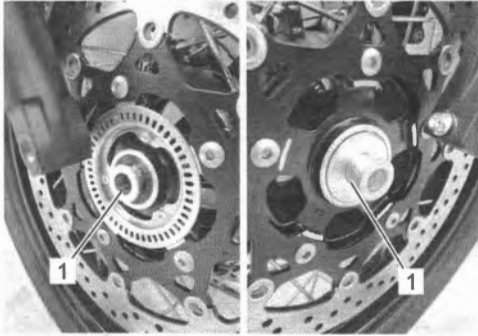

IH28K1240009-01

- 2) Install the front wheel with the front axle and tighten the front axle temporarily.


**▲ WARNING**

The directional arrow on the tire should point to the wheel rotation, when installing the wheel.



IH28K1240010-01

- 3) Remove a jack.
- 4) Install the front brake calipers. (Page 4B-3)
- 5) Tighten the front axle (1) to the specified torque with the special tool.

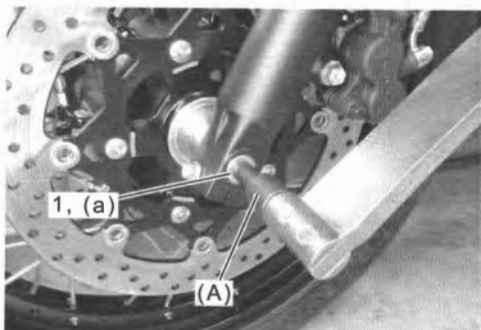**Special tool****(A): 09900-18710****Tightening torque****Front axle (a): 65 N·m (6.6 kgf-m, 48.0 lbf-ft)**

IH28K1240011-01

- 6) Move the front fork up and down 4 or 5 times to stabilize the front axle.




IH28K1240012-01

- 7) Tighten the axle pinch bolt (1) to the specified torque.

**Tightening torque**

Front axle pinch bolt (a): 23 N·m (2.3 kgf-m, 17.0 lbf-ft)

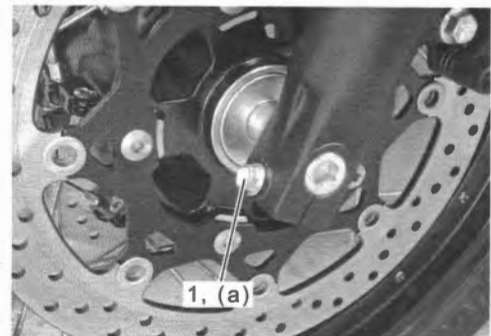

IH28K1240013-01

- 8) Install the front wheel speed sensor. (Page 4E-32)


**Front Wheel Dust Seal / Front Wheel Bearing Removal and Installation**

BENH28K22406005

Refer to "Front Wheel Assembly Removal and Installation" (Page 2D-6).

**Removal**

- 1) Remove the front wheel speed sensor rotor. (Page 4E-33)
- 2) Remove the dust seal (1) with the special tool.

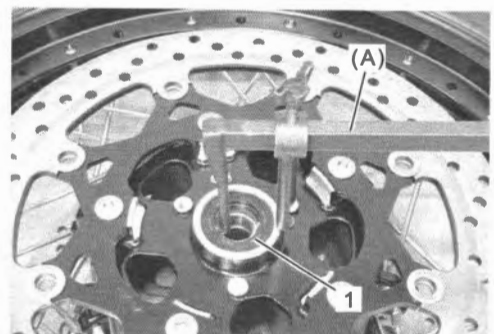**Special tool****(A): 09913-50121**


IH28K1240014-02

## 2D-8 Wheels and Tires:

- 3) Remove the bearings (1) on both sides with the special tool.


### Special tool

(A): 09921-20240

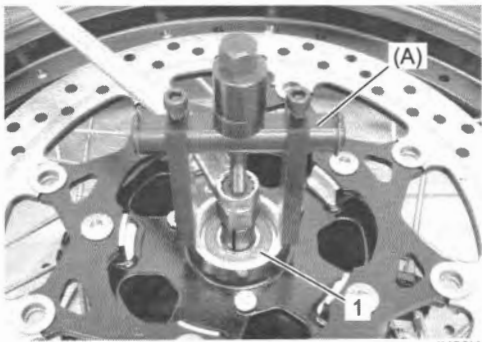

IH28K1240015-01

- 4) Remove the spacer (1).

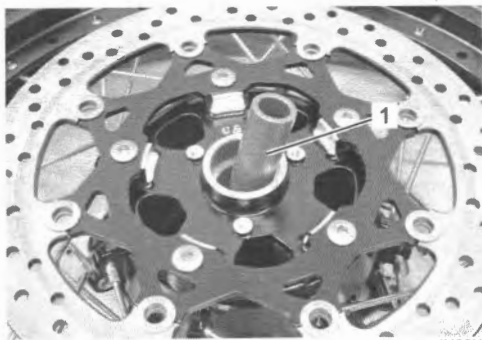

IH28K1240016-01

### Installation

- 1) Apply grease to the new wheel bearings.

Grease 99000-25011 (SUZUKI SUPER GREASE

A)



I649G1240019-02

- 2) First install the left wheel bearing, then install the spacer (1) and right wheel bearing with the special tools.


### NOTICE

The sealed cover of the bearing must face outside.


### Special tool

(A): 09941-34513

(B): 09913-70210

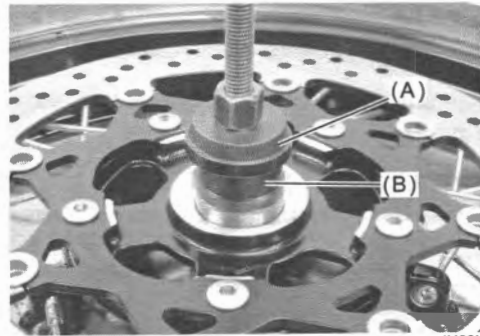

IH28K1240017-01

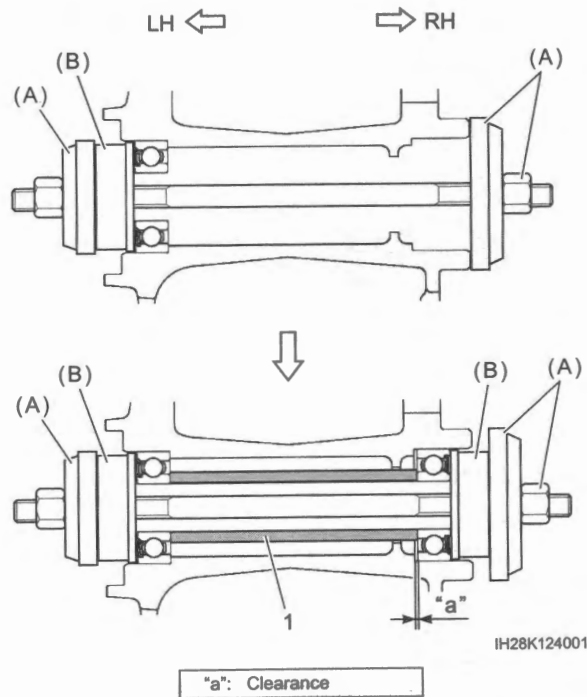


IH28K1240018-01

3) Install the new dust seal (1) with the special tool.

**Special tool**


**(A): 09913-70210**

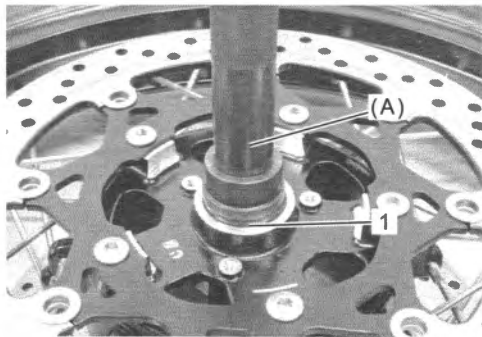

IH28K1240019-01

4) Apply grease to the lip of the dust seal.

**"A": Grease 99000-25011 (SUZUKI SUPER GREASE A)**

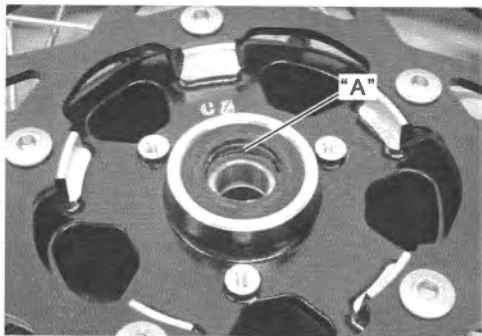


IH28K1240020-01

5) Install the front wheel speed sensor rotor. (Page 4E-33)

Rear Wheel Components

DL650A


BENH28K22406006

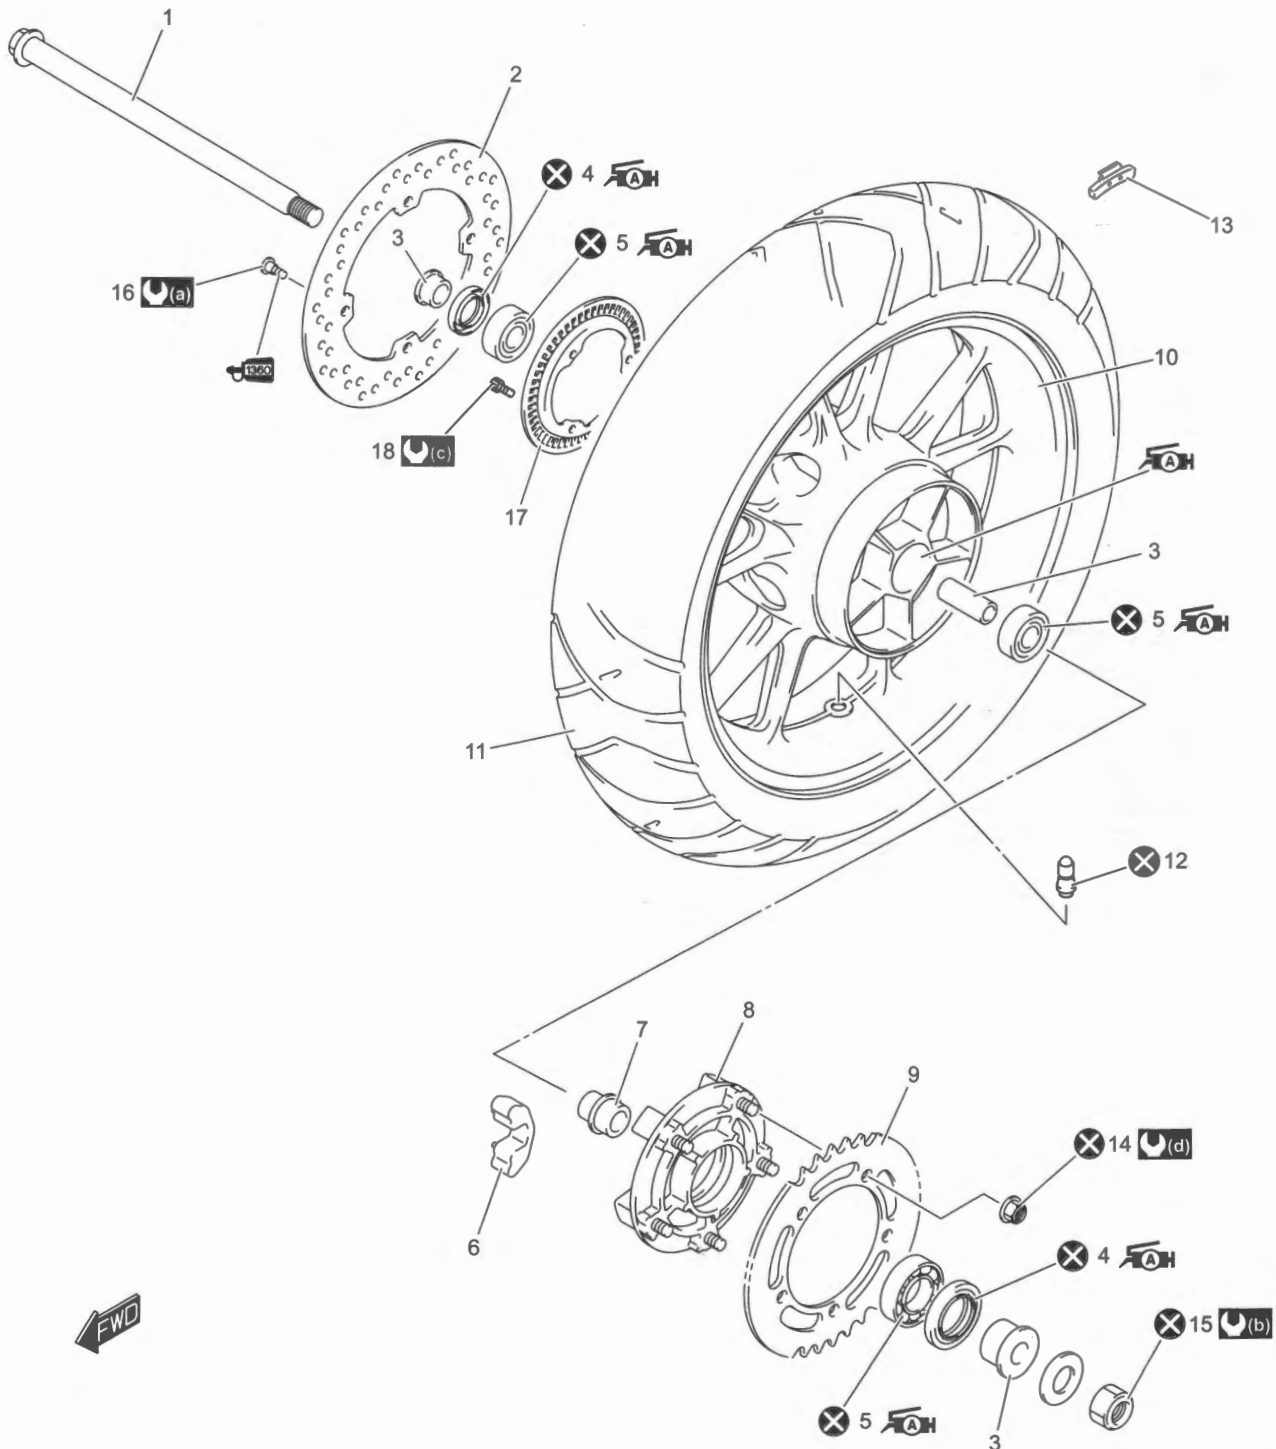

IH28K1240021-01

1. Rear axle	10. Rear wheel	(a) : 23 N-m (2.3 kgf-m, 17.0 lbf-ft)
2. Brake disc	11. Rear tire	(b) : 100 N-m (10.2 kgf-m, 74.0 lbf-ft)
3. Spacer	12. Air valve	(c) : 6.3 N-m (0.64 kgf-m, 4.65 lbf-ft)
4. Dust seal	13. Balancer weight	(d) : 60 N-m (6.1 kgf-m, 44.5 lbf-ft)
5. Bearing	14. Rear sprocket nut	Ⓐ : Apply grease.
6. Rear wheel damper	15. Rear axle nut	Ⓛ : Apply thread lock to the thread part.
7. Retainer	16. Rear brake disc bolt	ⓧ : Do not reuse.
8. Rear sprocket mounting drum	17. Rear wheel speed sensor rotor	
9. Rear sprocket	18. Rear wheel speed sensor rotor bolt	

DL650XA

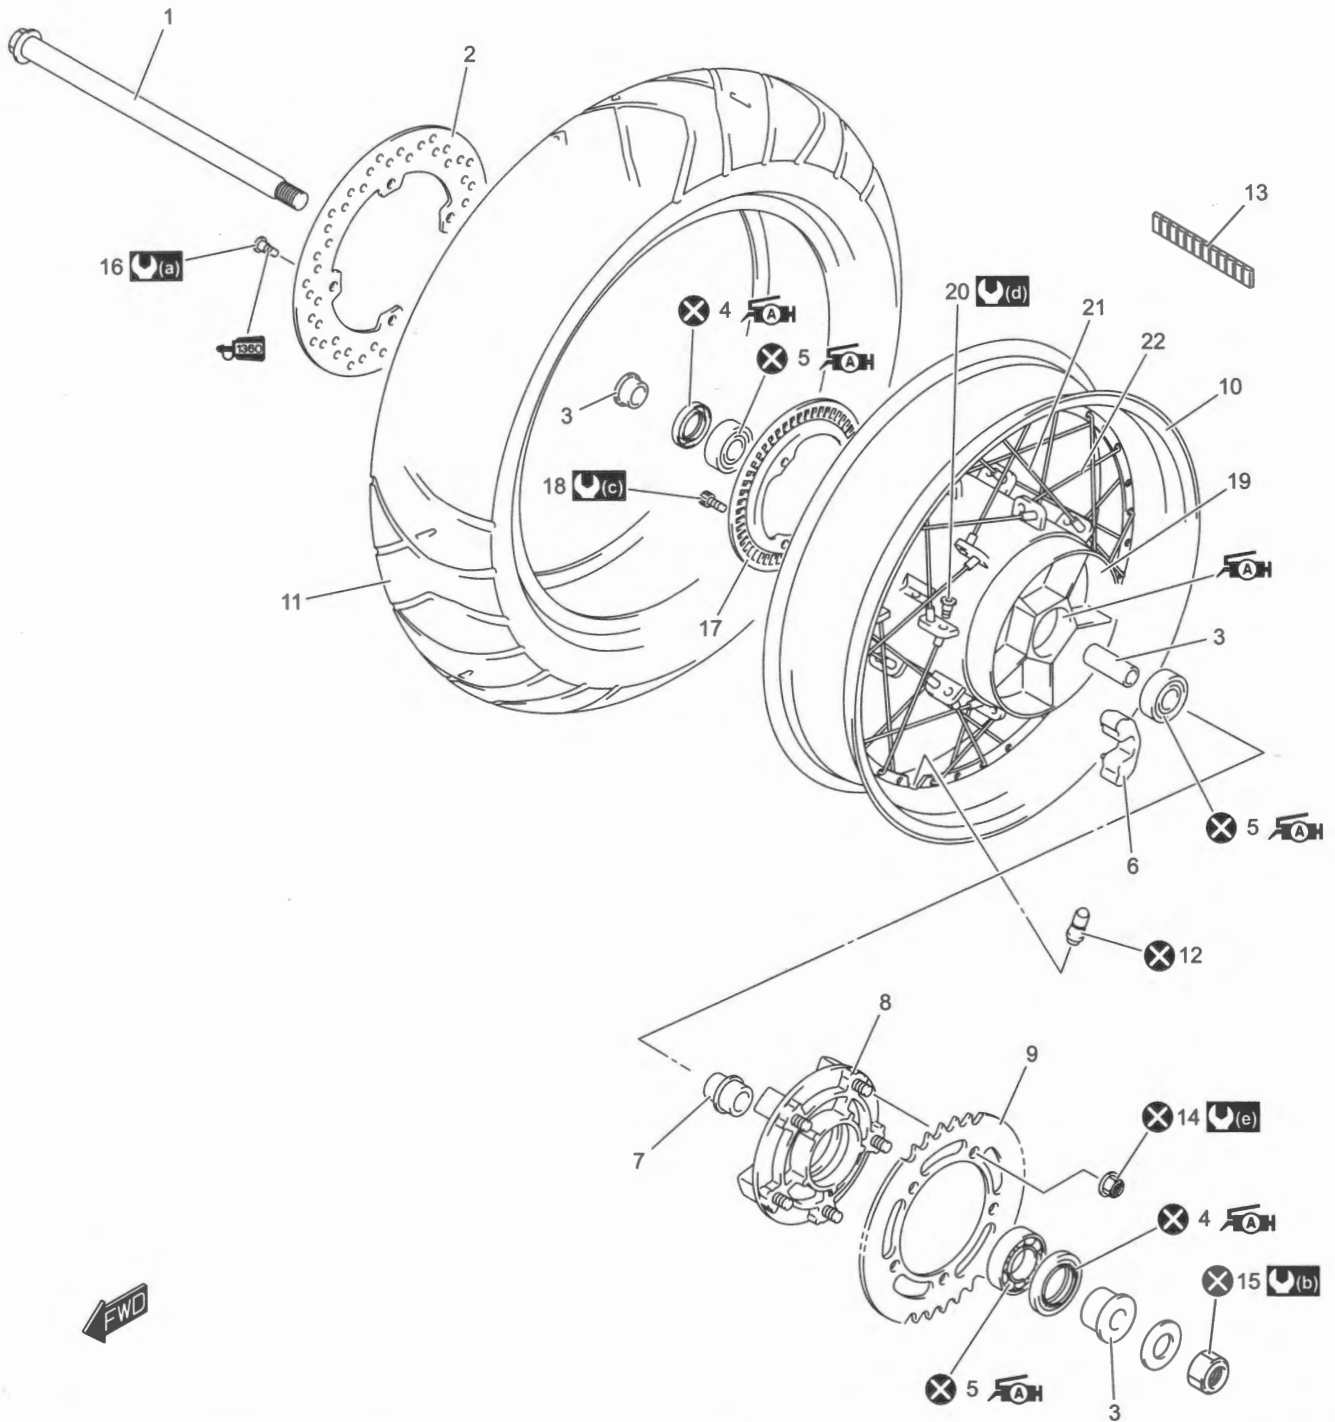

IH28K1240022-01




1. Rear axle	11. Rear tire	21. Rear outer spoke
2. Brake disc	12. Air valve	22. Rear inner spoke
3. Spacer	13. Balancer weight	(a) : 23 N·m (2.3 kgf-m, 17.0 lbf-ft)
4. Dust seal	14. Rear sprocket nut	(b) : 100 N·m (10.2 kgf-m, 74.0 lbf-ft)
5. Bearing	15. Rear axle nut	(c) : 6.3 N·m (0.64 kgf-m, 4.65 lbf-ft)
6. Rear wheel damper	16. Rear brake disc bolt	(d) : 7.0 N·m (0.71 kgf-m, 5.20 lbf-ft)
7. Retainer	17. Rear wheel speed sensor rotor	(e) : 60 N·m (6.1 kgf-m, 44.5 lbf-ft)
8. Rear sprocket mounting drum	18. Rear wheel speed sensor rotor bolt	AH : Apply grease.
9. Rear sprocket	19. Rear wheel hub	TL300 : Apply thread lock to the thread part.
10. Rear wheel rim	20. Spoke nipple	X : Do not reuse.

Rear Wheel Assembly Construction

DL650A

BENH28K22406007

LH ← → RH

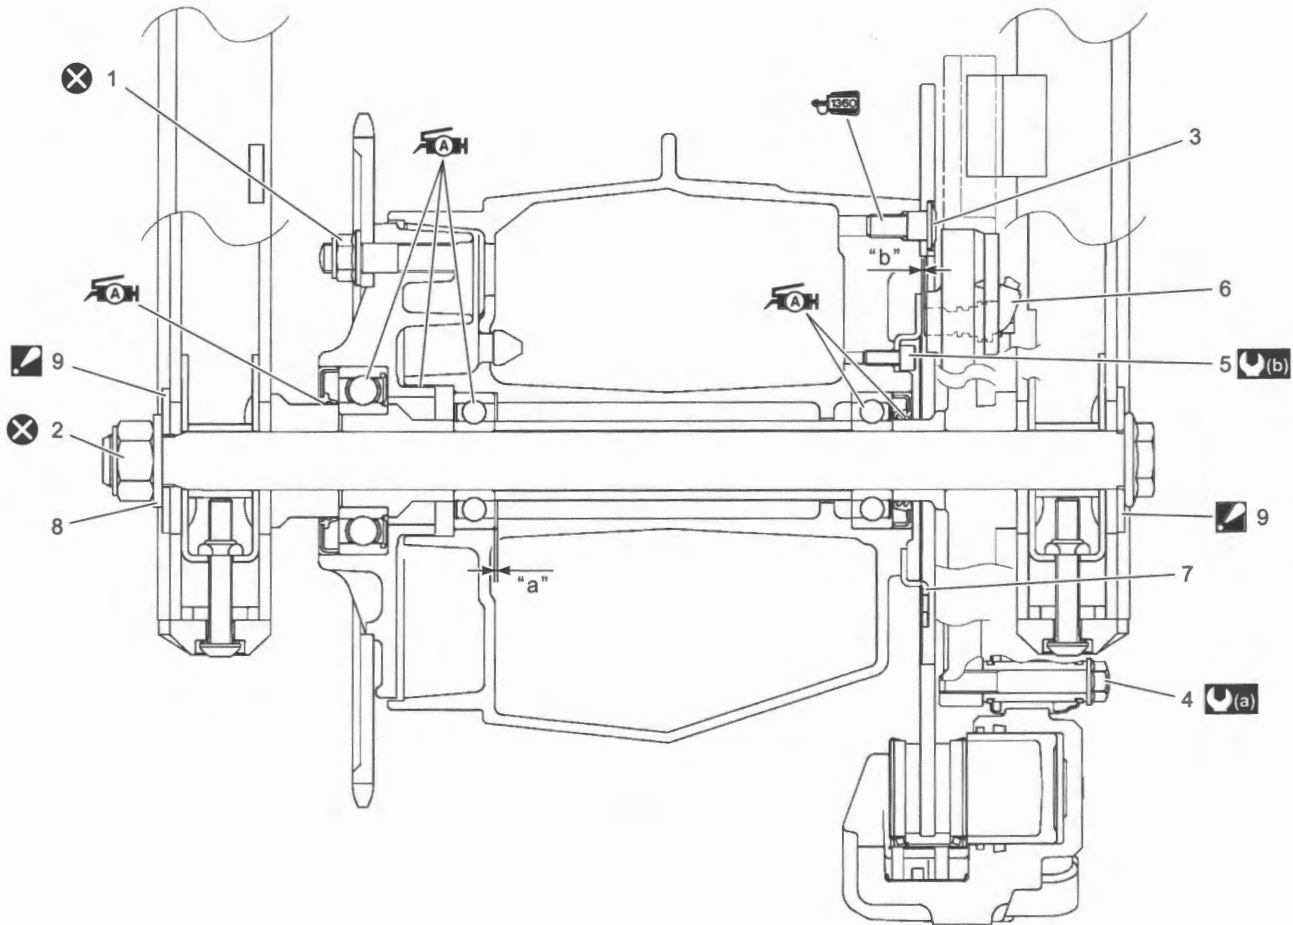

IH28K1240023-03


1. Rear sprocket nut	7. Rear wheel speed sensor rotor	(b) : 6.3 N·m (0.64 kgf-m, 4.65 lbf-ft)
2. Rear axle nut	8. Rear axle washer	AH : Apply grease.
3. Rear brake disc bolt	9. Chain adjuster washer : Install the washer facing the punch mark inward.	1360 : Apply thread lock to the thread part.
4. Rear brake caliper mounting bolt	"a": Clearance	X : Do not reuse.
5. Rear wheel speed sensor rotor bolt	"b": 0.28 – 1.45 mm (0.0111 – 0.0570 in)	
6. Rear wheel speed sensor	(a) : 22 N·m (2.2 kgf-m, 16.5 lbf-ft)	



DL650XA

NOTE

DL650XA differs from DL650A in the wheel shape and installation of the balancer weight.

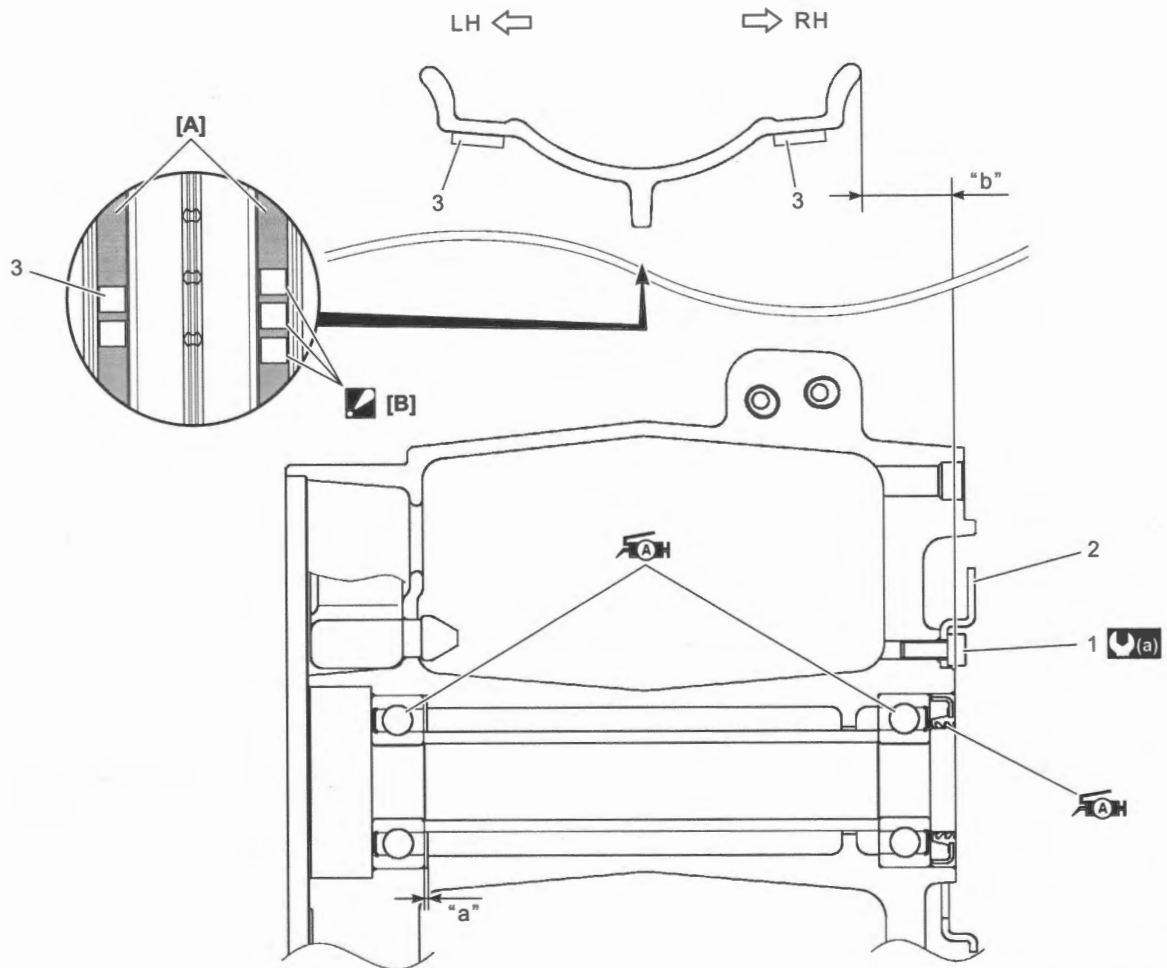


IH28K1240024-03

[A]: Wheel rim flat surface	2. Rear wheel speed sensor rotor	"b": 23.9 – 24.9 mm (0.941 – 0.980 in)
[B]: When sticking a number of weights, a little opening between the adjoining weights is allowed. However, overlapping is prohibited.	3. Balancer weight	(a): 6.3 N·m (0.64 kgf·m, 4.65 lbf·ft)
1. Rear wheel speed sensor rotor bolt	"a": Clearance	AH: Apply grease.

Rear Wheel Spoke Construction (DL650XA)

BENH28K22406008

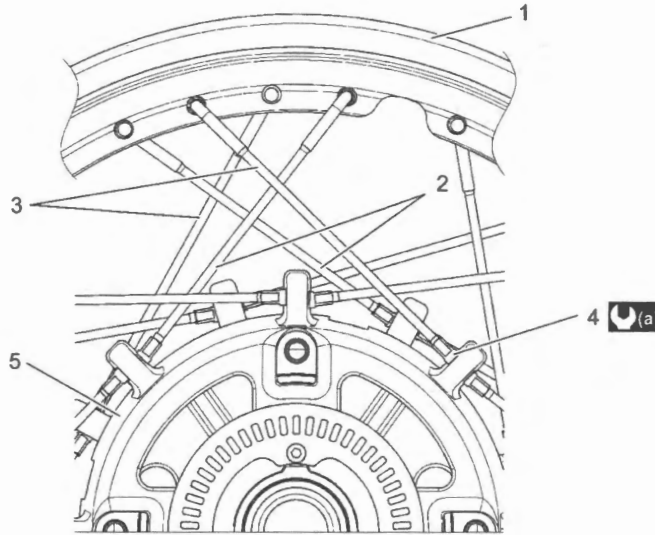

IF11J1240008-01

1. Rear wheel rim	3. Rear outer spoke	5. Rear wheel hub
2. Rear inner spoke	4. Spoke nipple	(a) : 7.0 N·m (0.71 kgf-m, 5.20 lbf-ft)

Rear Wheel Assembly Removal and Installation


BENH28K22406009

**NOTICE**

Do not hit the rear wheel speed sensor rotor when dismantling the rear wheel.

Removal


- 1) Remove the rear wheel speed sensor. (Page 4E-33)
- 2) Loosen the rear axle nut (1).

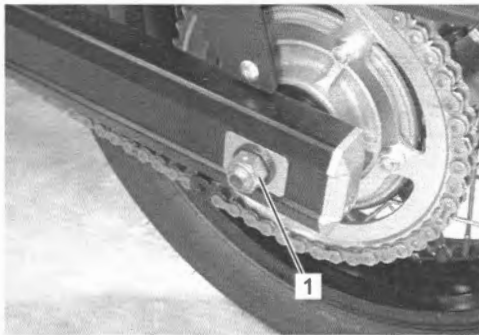

IH28K1240025-02


- 3) Raise the rear wheel off the ground and support the motorcycle with a jack.

- 4) Loosen the left and right chain adjuster bolts (1).
- 5) Remove the rear axle nut (2), washer (3) and left chain adjuster washer (4).
- 6) Draw out the rear axle (5) and right chain adjuster washer (6).

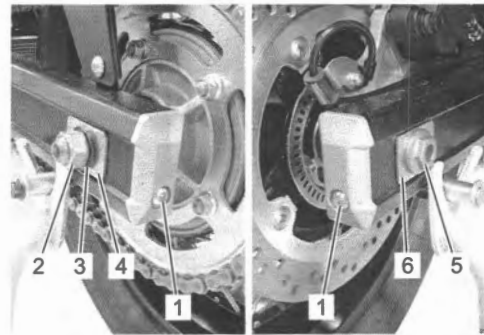

IH28K1240026-02

- 7) Remove the drive chain (1) from the rear sprocket.

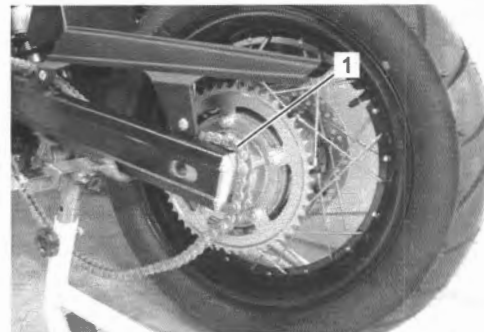


IH28K1240027-01

- 8) Remove the rear brake caliper bracket (1) from the swingarm.
- 9) Remove the rear wheel.



IH28K1240028-01


- 10) Remove the left and right spacers (1).

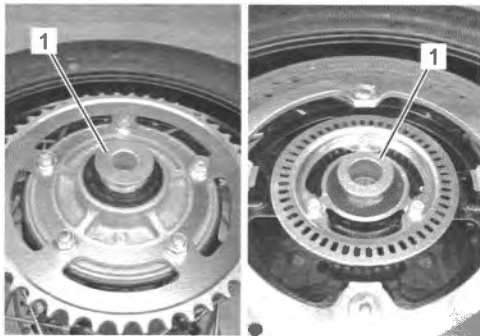

IH28K1240029-01

**Installation**

- 1) Install the left and right spacers (1).

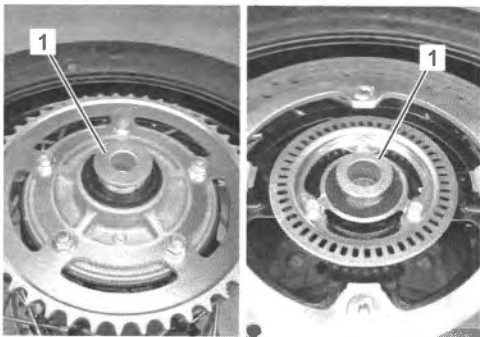


IH28K1240029-01

- 2) Engage the drive chain.

- 3) Install the rear wheel (1) and rear brake caliper (2).
- 4) Install the rear axle (3) and right chain adjuster washer (4).

**NOTE**

Install the chain adjuster washer facing the punch mark inward.

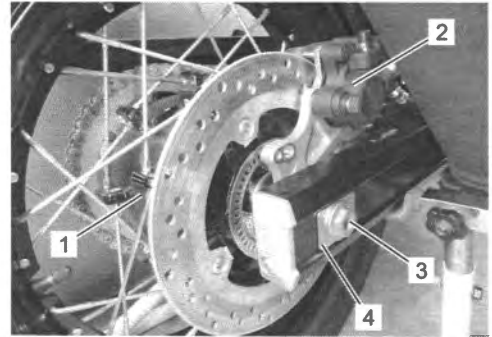


IH28K1240031-01

- 5) Install the left chain adjuster washer (1) and rear axle washer (2) and tighten the new rear axle nut (3) temporarily.

**NOTE**

Install the chain adjuster washer facing the punch mark inward.

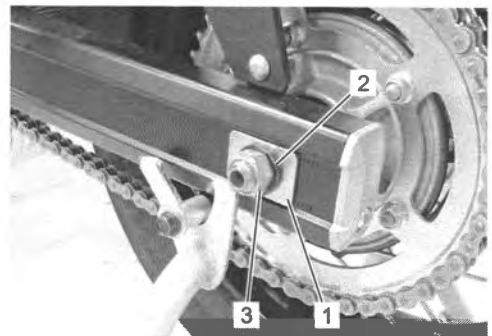

IH28K1240032-02

- 6) Remove the jack.
- 7) Adjust the chain slack. Refer to "Drive Chain Inspection and Adjustment" in Section 3A (Page 3A-3).
- 8) Install the rear wheel speed sensor. (Page 4E-33)

**Rear Wheel Dust Seal / Rear Wheel Bearing Removal and Installation**

BENH28K22406010


Refer to "Rear Sprocket / Rear Sprocket Mounting Drum Removal and Installation" in Section 3A (Page 3A-6).

**Removal**

- 1) Remove the rear wheel speed sensor rotor. (Page 4E-34)
- 2) Remove the dust seal (1) with the special tool.

**Special tool**

(A): 09913-50121

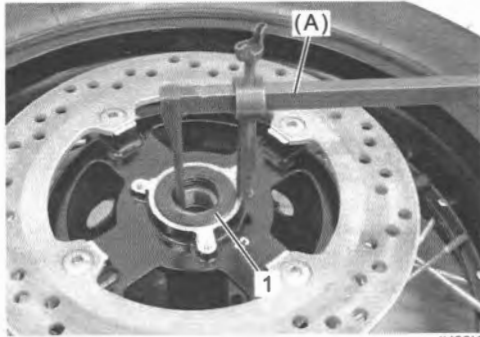


IH28K1240030-01

- 3) Remove the bearings (1) on both sides with the special tool.


**Special tool**

(A): 09921-20240

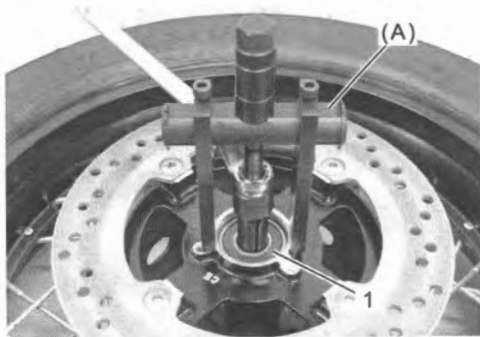

IH28K1240033-01

- 4) Remove the spacer (1).

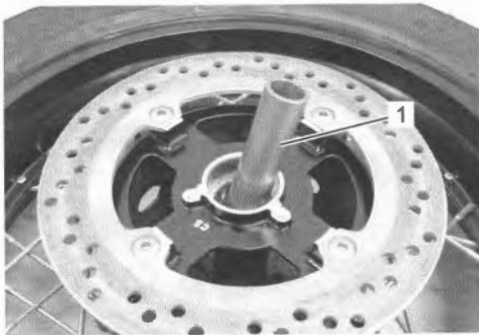

IH28K1240034-01

**Installation**

- 1) Apply grease to the new wheel bearings.

**Grease 99000-25011 (SUZUKI SUPER GREASE A)**



I649G1240019-02

- 2) First install the right wheel bearing, then install the spacer (1) and left wheel bearing with the special tools.


**NOTICE**

The sealed cover of the bearing must face outside.


**Special tool**

(A): 09941-34513

(B): 09913-70210

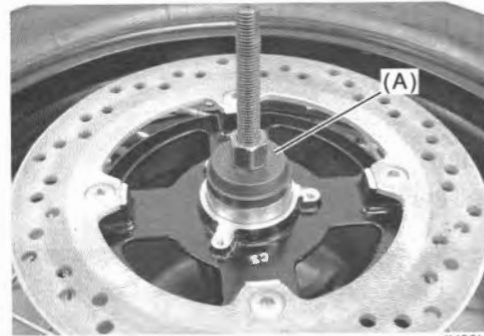

IH28K1240035-01

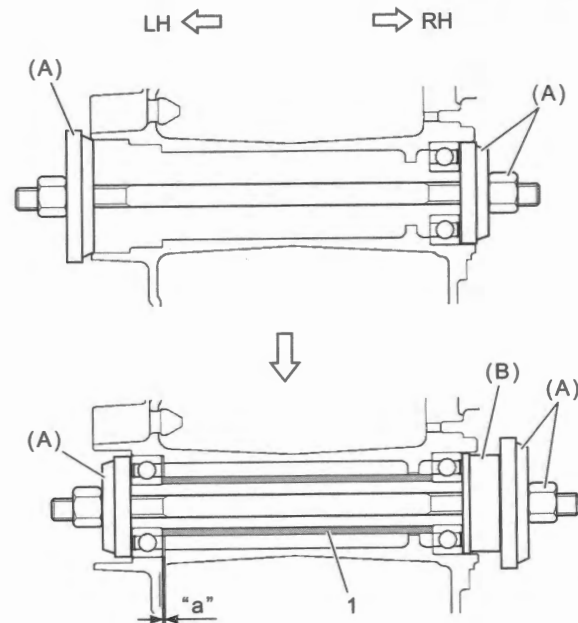


IH28K1240036-01

"a": Clearance

3) Install a new dust seal (1) with the special tool.


**Special tool**  
**(A): 09913-70210**

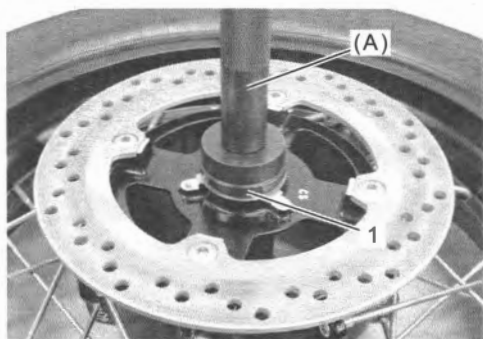

IH28K1240037-02

4) Apply grease to the dust seal lip.

**“A”:** Grease 99000-25011 (SUZUKI SUPER GREASE A)

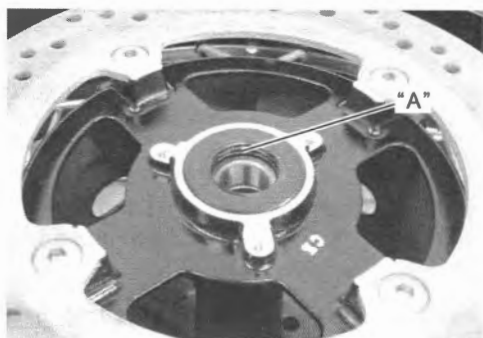

IH28K1240038-01

5) Install the rear wheel speed sensor rotor. (Page 4E-34)

**Wheel / Wheel Axle Inspection**

BENH28K22406011

Refer to “Front Wheel Assembly Removal and Installation” (Page 2D-6).  
 Refer to “Rear Wheel Assembly Removal and Installation” (Page 2D-14).

**Wheel (DL650A)**

**Wheel rim runout**

- 1) Remove the brake pads.
  - Front: (Page 4B-2)
  - Rear: (Page 4C-2)

2) Make sure that the wheel runout checked as shown does not exceed the service limit. An excessive runout is usually due to worn or loosened wheel bearings and can be reduced by replacing the bearings.

- Front: (Page 2D-7)
- Rear: (Page 2D-16)

If bearing replacement fails to reduce the runout, replace the wheel.

**Wheel rim runout (DL650A)**

**Front**


**Axial & Radial [Limit]: 2.0 mm (0.078 in)**

**Rear**

**Axial & Radial [Limit]: 2.0 mm (0.078 in)**

**Special tool**

**(A): 09900-20607**

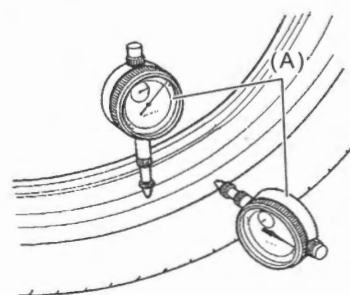

IH28K1240039-01

3) Install the brake pads.

- Front: (Page 4B-2)
- Rear: (Page 4C-2)

**Wheel (DL650XA)**

**Spoke**


Inspect the spokes for damage and deformation. If any defects are found, replace the spokes with new ones.

**Spoke nipple**

- 1) Tap the spokes lightly with screwdriver to check for looseness.

**NOTE**

**A dull sound is heard if the spoke is loose.**

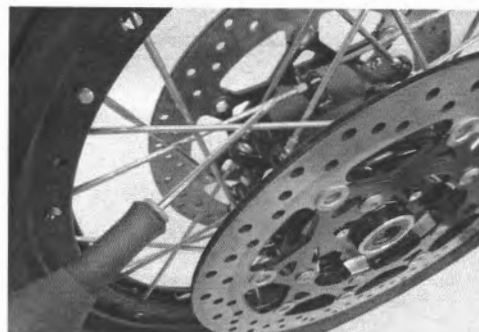

IH28K1240040-01


## 2D-18 Wheels and Tires:

- 2) Tighten the spoke nipples (1) so that all spokes have same tension, if necessary.

### Tightening torque

Spoke nipple (front wheel) (a): 7.5 N·m (0.76 kgf-m, 5.55 lbf-ft)

Spoke nipple (rear wheel): 7.0 N·m (0.71 kgf-m, 5.20 lbf-ft)

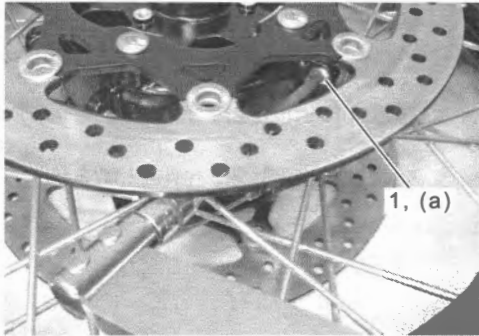


IH28K1240041-01

### Distance between wheel hub and rim

- 1) Remove the rear wheel speed sensor rotor. (Page 4E-34)
- 2) Remove the brake disc.
  - Front: (Page 4B-7)
  - Rear: (Page 4C-7)
- 3) For front spoke wheel, place the front wheel on a level surface, and then measure the left side distance "a" between the hub (1) and rim (2) using a straightedge and vernier caliper. Check that the distance is within the specified range.

### Front wheel hub left end surface to rim distance (DL650XA)

[Standard]: 21.95 – 22.95 mm (0.8642 – 0.9035 in)

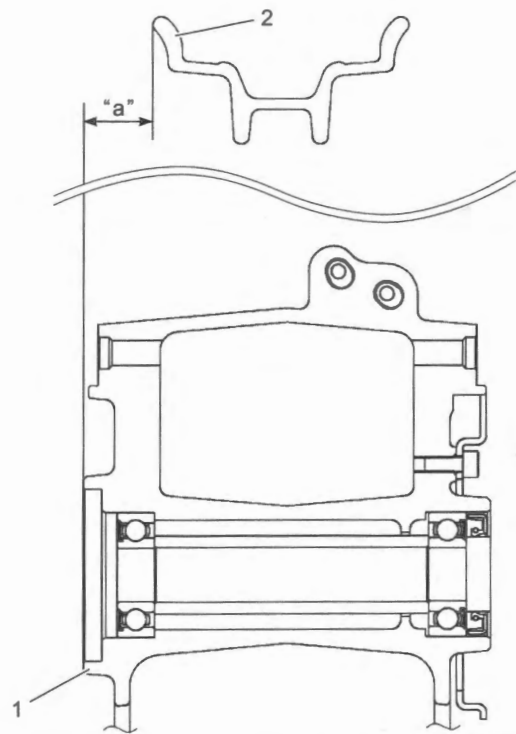


IH28K1240042-01

- 4) For rear spoke wheel, measure the right side distance "a" between the hub (1) and rim (2) in the same manner as in Step 3). Check that the distance is within the specified range.

### Rear wheel hub right end surface to rim distance (DL650XA)

[Standard]: 23.9 – 24.9 mm (0.941 – 0.980 in)

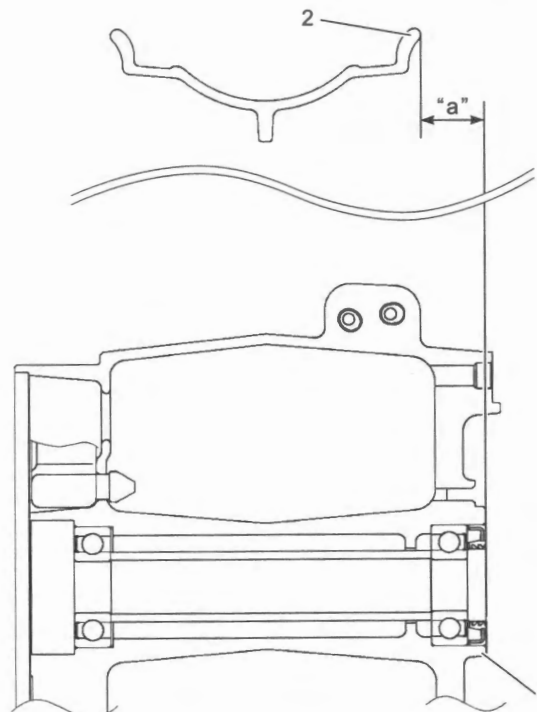

IH28K1240043-01

- 5) Adjust the distance if the measured value is out of the specified range.

**Wheel rim runout**

- 1) Remove the brake pads.
  - Front: ☞ (Page 4B-2)
  - Rear: ☞ (Page 4C-2)
- 2) Make sure that the wheel rim runout does not exceed the service limit. An excessive runout is usually due to worn or loosened wheel bearings and can be reduced by replacing the bearings.
  - Front: ☞ (Page 2D-7)
  - Rear: ☞ (Page 2D-16)
 If bearing replacement fails to reduce the runout, adjust or replace the wheel.

**NOTE**

The welded area of the wheel rim is excluded from the measurement of wheel runout.

**Wheel rim runout (DL650XA)****Front**

**Axial & Radial [Limit]: 0.5 mm (0.019 in)**


**Rear**

**Axial [Limit]: 0.5 mm (0.019 in)**

**Radial [Limit]: 1.0 mm (0.039 in)**

**Special tool**

**(A): 09900-20607**

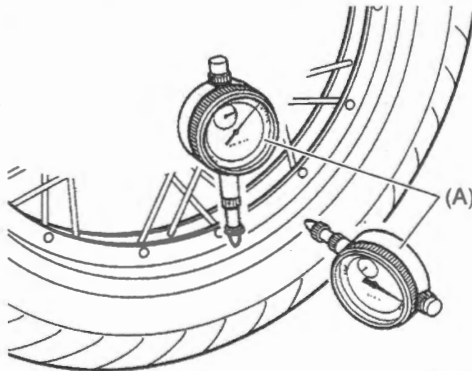

IH28K1240045-01

- 3) Install the brake pads.
  - Front: ☞ (Page 4B-2)
  - Rear: ☞ (Page 4C-2)

**Wheel Rim**

Refer to "Wheel Rim / Air Valve Inspection and Cleaning" (Page 2D-22).

**Wheel Axle**

Using a dial gauge, check the wheel axle for runout. If the runout exceeds the limit, replace the wheel axle.

**Wheel axle runout**


**Front & Rear [Limit]: 0.25 mm (0.010 in)**

**Special tool**

**(A): 09900-20607**

**(B): 09900-20701**

**(C): 09900-21304**

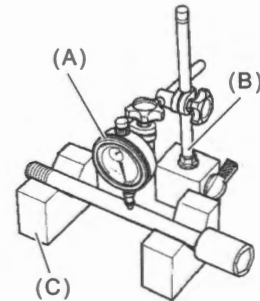


IH28K1240044-02


**Dust Seal**

Inspect the dust seals lip (1) for wear or damage. If any defects are found, replace the dust seals with new ones.

- Front: ☞ (Page 2D-7)
- Rear: ☞ (Page 2D-16)

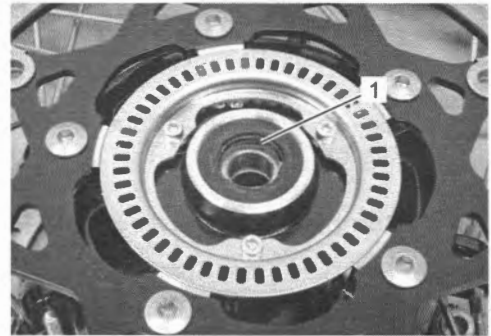


IH28K1240046-01

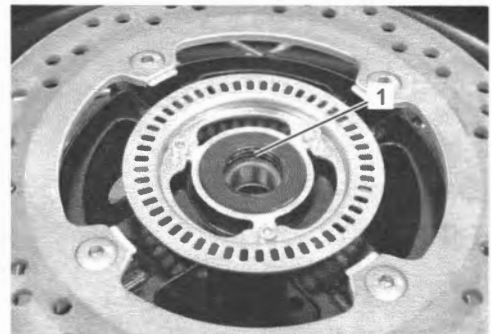

IH28K1240047-01

**Wheel Bearing**

- 1) Remove the rear sprocket mounting drum assembly.  
☞(Page 3A-6)
- 2) Inspect the play of the wheel bearings by hand while they are in the wheel. Rotate the inner race by hand to inspect for abnormal noise and smooth rotation. Replace the bearing if there is anything unusual.
  - Front: ☞(Page 2D-7)
  - Rear: ☞(Page 2D-16)

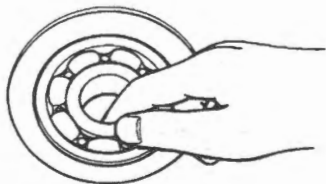

I649G1240015-02

- 3) Install the rear sprocket mounting drum assembly.  
☞(Page 3A-6)

**Brake Disc**

Refer to "Front Brake Disc Inspection" in Section 4B (Page 4B-8).  
Refer to "Rear Brake Disc Inspection" in Section 4C (Page 4C-7).

**Wheel Speed Sensor Rotor**

Refer to "Wheel Speed Sensor and Sensor Rotor Inspection" in Section 4E (Page 4E-34).

**Rear Sprocket**

Refer to "Rear Sprocket Mounting Drum / Sprocket Inspection" in Section 3A (Page 3A-7).


**Rear Wheel Damper Removal and Installation**

BENH28K22406012

Refer to "Rear Sprocket / Rear Sprocket Mounting Drum Removal and Installation" in Section 3A (Page 3A-6).

**Removal**

Remove the rear wheel dampers (1).

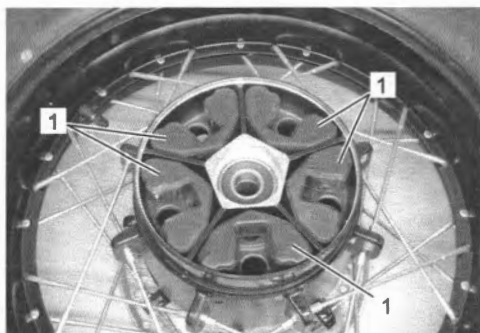

IH28K1240048-01

**Installation**

Install the rear wheel dampers in the reverse order of removal.

**Rear Wheel Damper Inspection**

BENH28K22406013

Inspect the rear wheel dampers for wear and damage. Replace the damper if there is anything unusual.



IH28K1240049-01

**Tire Inspection and Cleaning**

BENH28K22406014

**Tire**

Wipe the tire clean and check for the following points:

- Nick and rupture on side wall
- Tread separation
- Abnormal, uneven wear on tread
- Surface damage on bead
- Localized tread wear due to skidding (flat spot)
- Abnormal condition of inner liner

**Tire size**

**DL650A**

Front [Standard]: 110/80R19M/C 59H

Rear [Standard]: 150/70R17M/C 69H

**DL650XA**

Front [Standard]: 110/80R19M/C 59V

Rear [Standard]: 150/70R17M/C 69V

**Tire type**

**DL650A**

Front [Standard]: BRIDGESTONE/TW101 RADIAL J

Rear [Standard]: BRIDGESTONE/TW152 RADIAL F

**DL650XA**

Front [Standard]: BRIDGESTONE/BATTLAX

ADVENTURE A40F F

Rear [Standard]: BRIDGESTONE/BATTLAX

ADVENTURE A40R F



I649G1240042-02



**Tire tread condition**

Operating the motorcycle with excessively worn tires will decrease riding stability and consequently invite a dangerous situation. It is highly recommended to replace a tire when the remaining depth of tire tread reaches the following specification.


**Tire tread depth****Recommend depth**

Front [Limit]: 1.6 mm (0.063 in)

Rear [Limit]: 2.0 mm (0.079 in)

**Special tool**

09900-20805

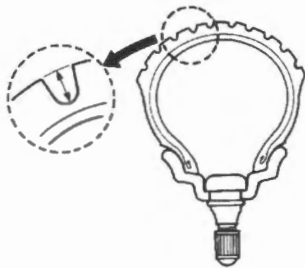

I310G1020068-02

**Tire pressure**

If the tire pressure is too high or too low, steering will be adversely affected and tire wear increased. Therefore, maintain the correct tire pressure for good roadability or shorter tire life will result. Cold inflation tire pressure is as follows.

**Cold inflation tire pressure (DL650A)****Solo riding**

Front [Standard]: 225 kPa (2.25 kgf/cm<sup>2</sup>, 33 psi)

Rear [Standard]: 250 kPa (2.50 kgf/cm<sup>2</sup>, 36 psi)

**Dual riding**

Front [Standard]: 225 kPa (2.25 kgf/cm<sup>2</sup>, 33 psi)

Rear [Standard]: 280 kPa (2.80 kgf/cm<sup>2</sup>, 41 psi)

**Cold inflation tire pressure (DL650XA)****Solo riding**


Front [Standard]: 225 kPa (2.25 kgf/cm<sup>2</sup>, 33 psi)

Rear [Standard]: 250 kPa (2.50 kgf/cm<sup>2</sup>, 36 psi)

**Dual riding**

Front [Standard]: 225 kPa (2.25 kgf/cm<sup>2</sup>, 33 psi)

Rear [Standard]: 290 kPa (2.90 kgf/cm<sup>2</sup>, 42 psi)

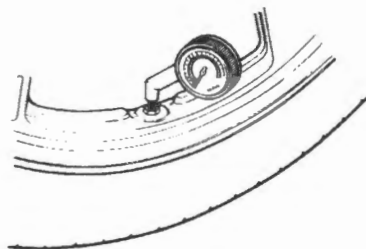

I310G1020069-02

**Tire Removal and Installation**

BENH28K22406015

Refer to "Front Wheel Assembly Removal and Installation" (Page 2D-6).

Refer to "Rear Sprocket / Rear Sprocket Mounting Drum Removal and Installation" in Section 3A (Page 3A-6).

**Removal****▲ CAUTION**


For removal and installation procedure of tire, follow the instructions given by the tire changer manufacturer.

**NOTICE**

When replacing the tire, make sure not to damage the wheel speed sensor rotor.

**NOTE**

When removing the tire in case of repair or inspection, mark the tire with a chalk to indicate the tire position relative to the valve position.

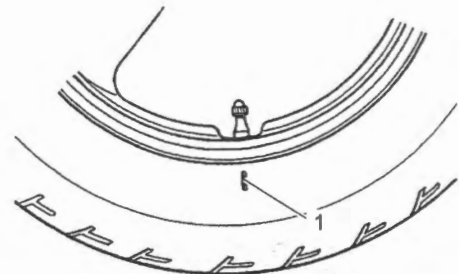

IE31J1240036-01

1. Chalk mark

**Installation**

- 1) Apply tire lubricant to the tire bead.

**NOTICE**

- Do not use oil, grease or gasoline in place of tire bead lubricant.
- Do not reuse the air valve which has been once removed.




I649G1240038-02

## 2D-22 Wheels and Tires:

- 2) Install the tire aligning the arrow (1) on the side wall with the direction of the wheel rotation.

### NOTICE

- When installing a repaired tire, align the chalk mark put on the tire at the time of removal with the valve position.
- When installing a new tire, align the light point mark (2) on the tire side wall with the valve position.

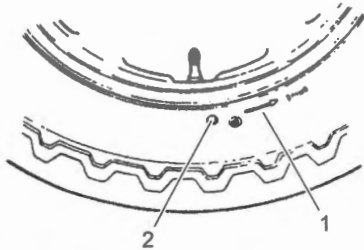


IF04K1240038-01

- 3) Bounce the tire several times while rotating. This makes the tire bead expand outward to contact the wheel, thereby facilitating air inflation.
- 4) Inflate the tire.

### ⚠ WARNING

- Do not stand over a tire being inflated. Tire bead may break when the bead snaps over rim's safety hump and cause serious personal injury.
  - Do not inflate tires exceeding 400 kPa (4.0 kgf/cm<sup>2</sup>, 57 psi). Over-inflation may cause the bead to break, which may cause serious personal injury.
- 5) Check the "rim line" (1) cast on the tire side walls. The line must be equidistant from the wheel rim all around. If the distance between the rim line (1) and wheel rim varies, this indicates that the bead is not properly seated. If this is the case, deflate the tire completely and unseat the bead for both sides. Coat the bead with lubricant and fit the tire again.

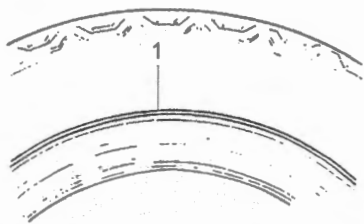

IE31J1240037-01

- 6) When the bead has been fitted properly, install the valve core and adjust the pressure to specification. (Page 2D-20)
- 7) As necessary, adjust the tire balance. (Page 2D-23)

## Wheel Rim / Air Valve Inspection and Cleaning

BENH28K22406016

Refer to "Tire Removal and Installation" (Page 2D-21).

### Wheel Rim

Wipe the wheel clean and check for the following points:

- Distortion and crack.
- Any flaws and scratches at the bead seating area.
- Wheel rim runout. (Page 2D-17)

### Wheel rim size

Front [Standard]: 19 M/C x MT 2.50

Rear [Standard]: 17 M/C x MT 4.00




I649G1240041-02

### Air Valve


Inspect the air valve (1) for peeling and damage. If any defect is found, replace the air valve with a new one.

(Page 2D-23)

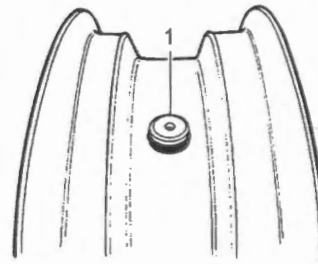

IE31J1240038-01

Inspect the valve core seal (1) for wear and damage. If any defect is found, replace the valve core with a new one.

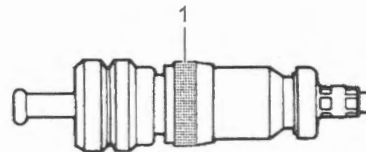

IH28K1240050-01


### Air Valve Removal and Installation

BENH28K22406017

Refer to "Tire Removal and Installation" (Page 2D-21).

#### Removal


- 1) Remove the air valve (1) from the wheel.

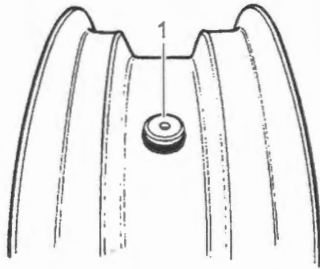

IH28K1240051-01

#### Installation

- 1) Clean off the dirt around the valve hole (1).

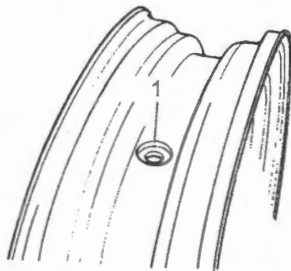


IH28K1240052-01

- 2) Install the new air valve (1) into the air valve hole with a special tire lubricant or neutral soapy liquid applied at the valve lip (2).

#### NOTICE

Be careful not to damage the valve lip of the air valve.

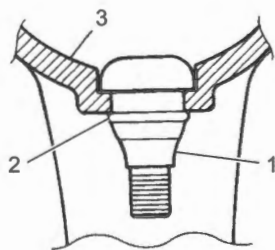

IH28K1240053-01

3. Wheel

### Wheel Balance Check and Adjustment

BENH28K22406018

Refer to "Front Wheel Assembly Removal and Installation" (Page 2D-6).


Refer to "Rear Sprocket / Rear Sprocket Mounting Drum Removal and Installation" in Section 3A (Page 3A-6).

- 1) Check the wheel balance using the balancer and adjust the wheel balance if necessary.

#### NOTICE

For operating procedures, refer to the instructions supplied by the wheel balancer manufacturer.

- 2) For DL650A, when installing the new balancer weight (1) to the wheel (2), set the balancer weight on center rib of wheel.

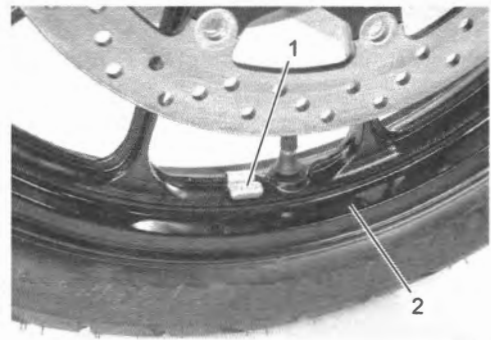


IH28K1240054-01

- 3) For DL650XA, when installing the balancer weight (1) to the wheel (2), install it to the wheel rim. When installing more than one balancer weight, install them so that the balancers on right and left sides are equally balanced. Refer to "Front Wheel Assembly Construction" (Page 2D-4) or "Rear Wheel Assembly Construction" (Page 2D-12).

#### NOTICE

For the adhesive type balancer weight, degrease the wheel rim before placing it.

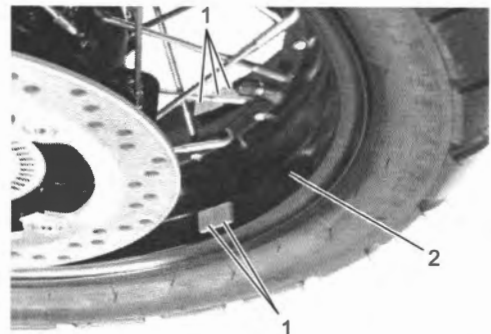

IH28K1240055-02

- 4) Recheck the wheel balance.

## Specifications

### Tightening Torque Specifications

BENH28K22407001

Fastening part	Tightening torque			Note
	N·m	kgf·m	lbf·ft	
Front axle	65	6.6	48.0	☞(Page 2D-7)
Front axle pinch bolt	23	2.3	17.0	☞(Page 2D-7)
Spoke nipple (front wheel)	7.5	0.76	5.55	☞(Page 2D-18)
Spoke nipple (rear wheel)	7.0	0.71	5.20	☞(Page 2D-18)

**Reference:**

For the tightening torques of fasteners not specified in this page, refer to:

“Front Wheel Components” (Page 2D-2)

“Front Wheel Assembly Construction” (Page 2D-4)

“Front Wheel Spoke Construction (DL650XA)” (Page 2D-6)

“Rear Wheel Components” (Page 2D-10)

“Rear Wheel Assembly Construction” (Page 2D-12)

“Rear Wheel Spoke Construction (DL650XA)” (Page 2D-14)

“Fasteners Information” in Section 0C (Page 0C-11)

## Special Tools and Equipment

### Recommended Service Material

BENH28K22408001

Material	SUZUKI recommended product or Specification	Note
Grease	SUZUKI SUPER GREASE A P/No.: 99000-25011	☞ (Page 2D-8) / ☞ (Page 2D-9) / ☞ (Page 2D-16) / ☞ (Page 2D-17)

### NOTE

Required service material(s) is also described in:

“Front Wheel Components” (Page 2D-2)





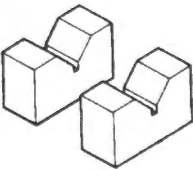
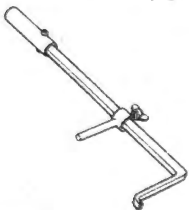
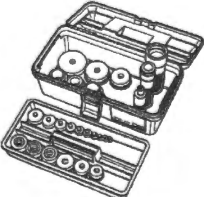
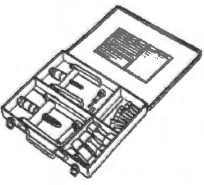
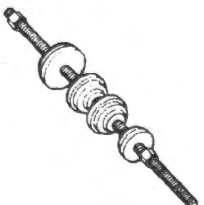
“Front Wheel Assembly Construction” (Page 2D-4)

“Rear Wheel Components” (Page 2D-10)

“Rear Wheel Assembly Construction” (Page 2D-12)

### Special Tool

BENH28K22408002

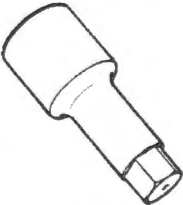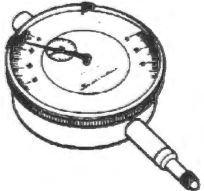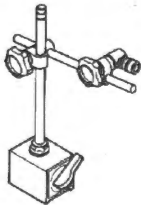09900-18710 Hexagon bit socket (12 mm: 1/2 sq.) ☞ (Page 2D-6) / ☞ (Page 2D-7)		09900-20607 Dial gauge (10 x 0.01 mm) ☞ (Page 2D-17) / ☞ (Page 2D-19) / ☞ (Page 2D-19)	
09900-20701 Dial gauge chuck ☞ (Page 2D-19)		09900-20805 Tire depth gauge ☞ (Page 2D-21)	
09900-21304 V blocks ☞ (Page 2D-19)		09913-50121 Oil seal remover ☞ (Page 2D-7) / ☞ (Page 2D-16)	
09913-70210 Bearing installer set ☞ (Page 2D-8) / ☞ (Page 2D-9) / ☞ (Page 2D-16) / ☞ (Page 2D-17)		09921-20240 Bearing remover set ☞ (Page 2D-8) / ☞ (Page 2D-16)	
09941-34513 Bearing installer set ☞ (Page 2D-8) / ☞ (Page 2D-16)			



## Section 3

## Driveline / Axle

## CONTENTS

<b>Precautions .....</b>	<b>3-1</b>	Engine Sprocket Removal and Installation .....	3A-4
<b>Precautions.....</b>	<b>3-1</b>	Rear Sprocket / Rear Sprocket Mounting	
Precautions for Driveline / Axle .....	3-1	Drum Removal and Installation .....	3A-6
<b>Drive Chain / Drive Train / Drive Shaft... 3A-1</b>		Rear Sprocket Mounting Drum / Sprocket	
<b>Diagnostic Information and Procedures.....</b>	<b>3A-1</b>	Inspection.....	3A-7
Drive Chain and Sprocket Symptom		Rear Sprocket Mounting Drum Dust Seal /	
Diagnosis .....	3A-1	Bearing Removal and Installation .....	3A-7
<b>Repair Instructions .....</b>	<b>3A-2</b>	Drive Chain Replacement .....	3A-9
Drive Chain Related Components.....	3A-2	<b>Specifications .....</b>	<b>3A-12</b>
Drive Chain Inspection and Adjustment.....	3A-3	Tightening Torque Specifications.....	3A-12
Drive Chain Cleaning and Lubricating.....	3A-4	<b>Special Tools and Equipment .....</b>	<b>3A-12</b>
Chain Buffer Inspection.....	3A-4	Recommended Service Material .....	3A-12
		Special Tool .....	3A-12

# Precautions

## Precautions

### Precautions for Driveline / Axle

BENH28K23000001

Refer to "General Precautions" in Section 00 (Page 00-1).

---

**▲ WARNING**

---

**Never inspect or adjust the drive chain while the engine is running.**

---

**NOTICE**

---

- Do not use trichloroethylene, gasoline or any similar solvent. These fluids will damage the O-rings of the drive chain.
  - Clean the drive chain with a spray-type chain cleaner and blow dry with compressed air. If the drive chain cannot be cleaned with a spray cleaner, it may be necessary to use a kerosine. Always follow the chemical manufacturer's instructions on proper use, handling and storage.
  - Lubricate the drive chain with a heavy weight motor oil. Wipe off any excess oil or chain lubricant. Do not use any oil sold commercially as "drive chain oil". Such oil can damage the O-rings.
  - When drive chain replacement is necessary, the original equipment type drive chain should be used.
-



# Drive Chain / Drive Train / Drive Shaft

## Diagnostic Information and Procedures

### Drive Chain and Sprocket Symptom Diagnosis


BENH28K23104001

Condition	Possible cause	Correction / Reference Item
<b>Noisy Drive Chain</b>	Worn sprocket.	Replace. <ul style="list-style-type: none"> <li>• Engine sprocket: ⌚(Page 3A-4)</li> <li>• Rear sprocket: ⌚(Page 3A-6)</li> </ul>
	Worn drive chain.	Replace. ⌚(Page 3A-9)
	Stretched drive chain.	Replace. ⌚(Page 3A-9)
	Too large drive chain slack.	Adjust. ⌚(Page 3A-3)
	Drive chain out of adjustment.	Adjust. ⌚(Page 3A-3)

## Repair Instructions

### Drive Chain Related Components

BENH28K23106001

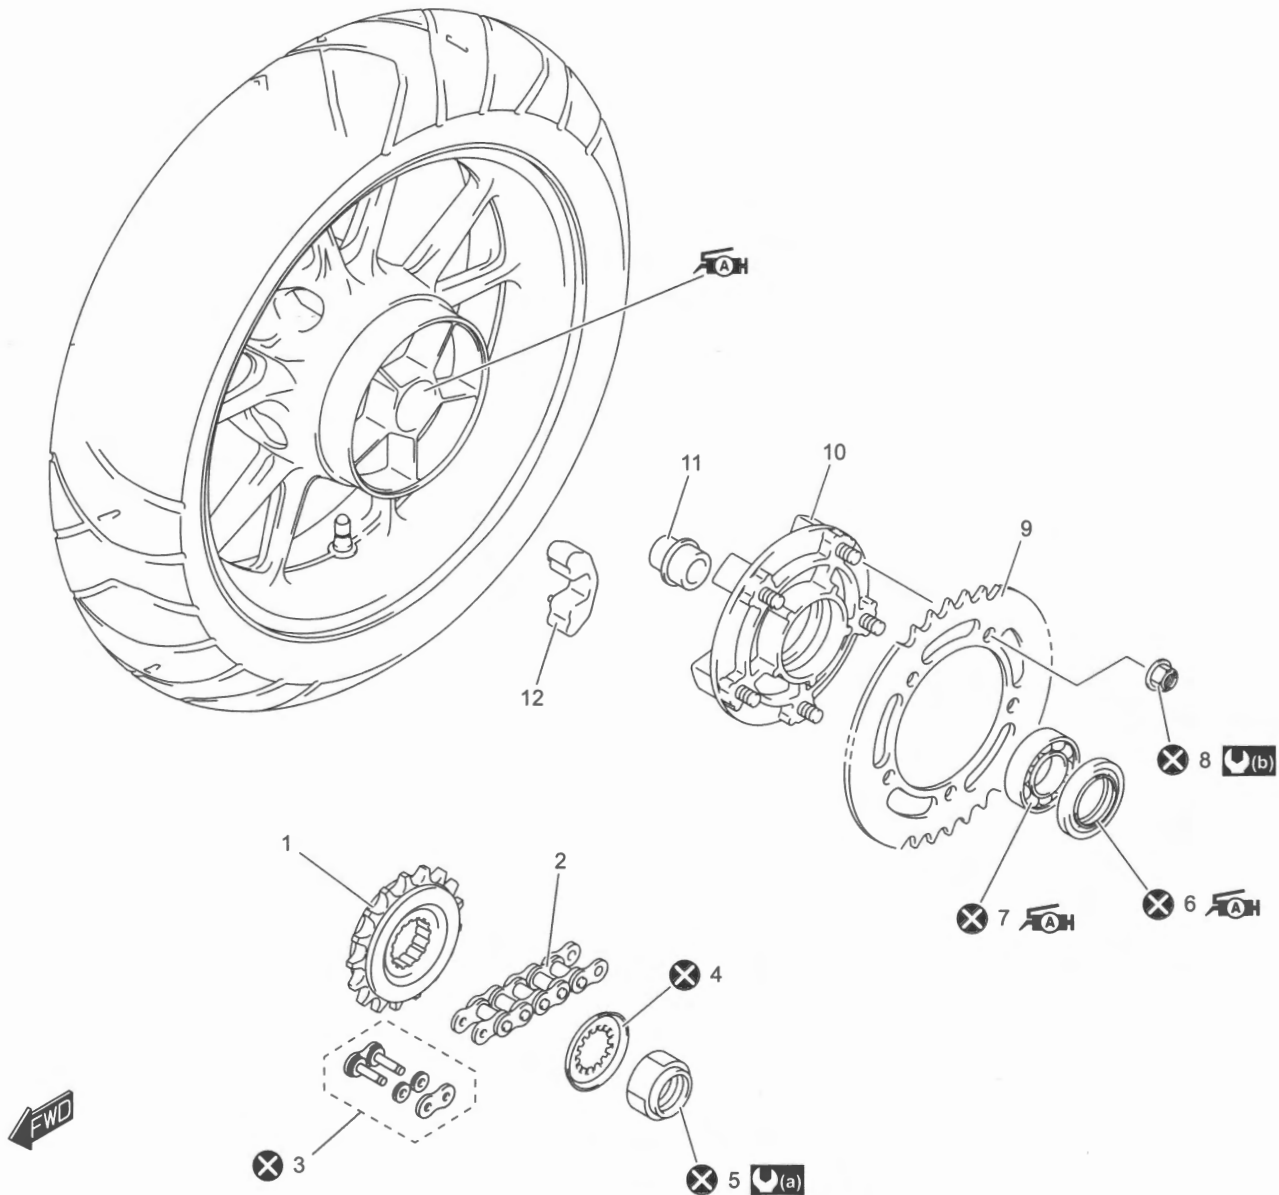

IH28K1310001-01

1. Engine sprocket	7. Bearing	(a) : 145 N-m (14.8 kgf-m, 107.0 lbf-ft)
2. Drive chain	8. Rear sprocket nut	(b) : 60 N-m (6.1 kgf-m, 44.5 lbf-ft)
3. Joint set	9. Rear sprocket	Apply grease.
4. Lock washer	10. Rear sprocket mounting drum	X : Do not reuse.
5. Engine sprocket nut	11. Retainer	
6. Dust seal	12. Rear wheel damper	

## Drive Chain Inspection and Adjustment

BENH28K23106002

### Drive Chain Visual Check

- 1) With the transmission in neutral, support the motorcycle with a jack and turn the rear wheel slowly by hand.
- 2) Visually check the drive chain for the possible defects listed as follows. If any defects are found, the drive chain must be replaced. (Page 3A-9)


#### NOTE

**When replacing the drive chain, replace the drive chain and sprockets as a set.**

- Loose pins
- Damaged rollers
- Dry or rusted links
- Kinked or binding links
- Excessive wear
- Improper chain adjustment
- Missing O-ring seals

### Drive Chain Length Inspection


- 1) Place the motorcycle on the side-stand.
- 2) Loosen the rear axle nut (1).
- 3) Give tension to the drive chain fully by turning both chain adjuster bolts (2).

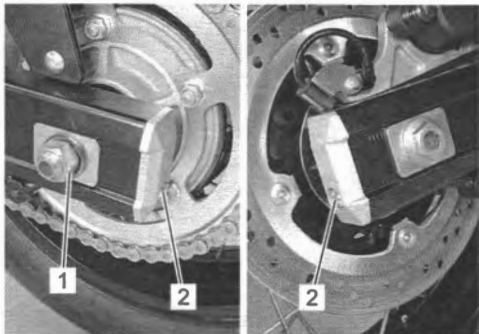

IH28K1310002-02

- 4) Count out 21 pins (20 pitches) on the chain and measure the distance between the two points. If the distance exceeds the service limit, the chain must be replaced. (Page 3A-9)

**Drive chain 20-pitch length**  
**[Limit]: 319.4 mm (12.57 in)**

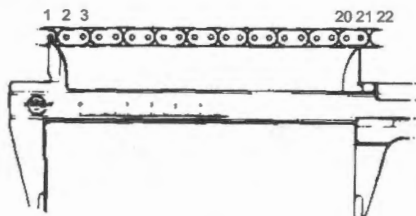

IH18K1310028-01

- 5) After finishing the drive chain length inspection, adjust the drive chain slack.

### Drive Chain Slack Adjustment

- 1) Place the motorcycle on the side-stand.
- 2) Loosen the rear axle nut (1).
- 3) Loosen or tighten both chain adjuster bolts (2) until the slack "a" at the middle of the chain between the engine and rear sprockets becomes within the standard range.


#### NOTICE

The reference marks (3) on both sides of the swingarm and the edge of each chain adjuster washer must be aligned to ensure that the front and rear wheels are correctly aligned.


#### Drive chain slack

On side-stand

[Standard]: 20 – 30 mm (0.79 – 1.18 in)

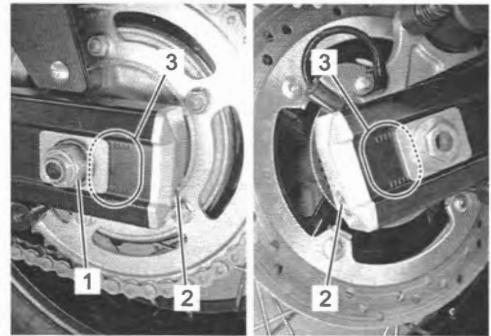

IH28K1310003-02

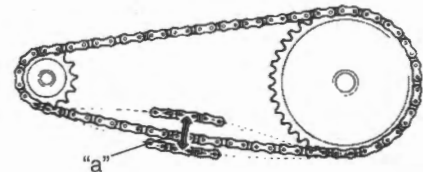

I649G1020036-02

- 4) After adjusting the drive chain, tighten the rear axle nut to the specified torque.

#### Tightening torque

**Rear axle nut: 100 N·m (10.2 kgf-m, 74.0 lbf-ft)**

- 5) Recheck the drive chain slack after tightening the rear axle nut.
- 6) Tighten the both chain adjuster bolts securely.

### Drive Chain Cleaning and Lubricating

BENH28K23106003

- 1) Place the motorcycle on the side-stand.
- 2) Remove dirt and dust from the drive chain (1). Be careful not to damage the seal ring.
- 3) Clean the drive chain (1) with a sealed drive chain cleaner, or water and neutral detergent.

#### NOTICE


Cleaning the drive chain improperly can damage seal rings and ruin the drive chain.

- Do not use a volatile solvent such as paint thinner, kerosene and gasoline.
  - Do not use high pressure cleaner to clean the drive chain.
  - Do not use wire brush to clean the drive chain.
- 4) Use a soft brush to clean the drive chain (1). Be careful not to damage the seal ring even through using a soft brush.
  - 5) Wipe off water and neutral detergent.
  - 6) Lubricate with a motorcycle sealed drive chain (1) lubricant or high viscosity oil.

#### NOTICE

Some drive chain lubricant contains solvents and additives which could damage the seal rings in the drive chain. Use sealed drive chain lubricant which is specifically intended for use with sealed drive chains.

- 7) Lubricate both front and back plates of the drive chain (1).
- 8) Wipe off excess lubricant after lubricating all around of the drive chain (1).

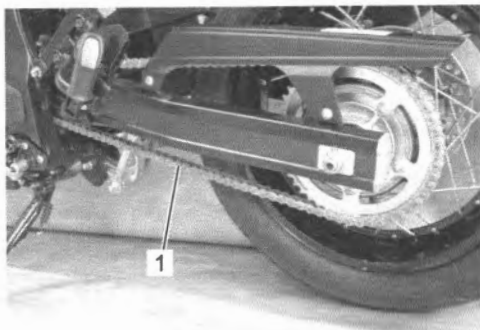

IH28K1310004-01

### Chain Buffer Inspection

BENH28K23106004

Refer to "Swingarm Removal and Installation" in Section 2C (Page 2C-8). Inspect the chain buffer for wear and damage. If any defect is found, replace the chain buffer with a new one.




IH28K1310005-01

### Engine Sprocket Removal and Installation

BENH28K23106005


#### Removal

- 1) Release the side-stand switch lead wire (1) from the clamp (2), and remove the engine sprocket cover (3).

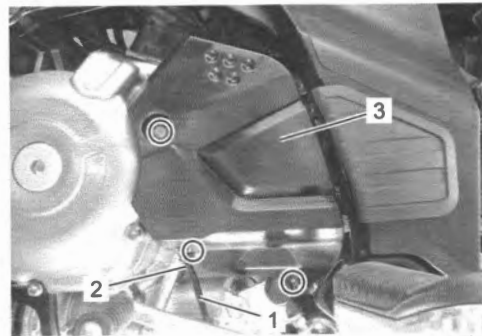


IH28K1310006-03

- 2) Flatten the lock washer (1).
- 3) Remove the engine sprocket nut (2) while depressing the rear brake pedal.
- 4) Remove the lock washer.

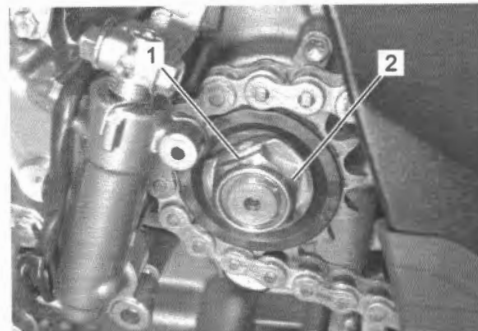


IH28K1310007-01

- 5) Loosen the rear axle nut (1).
- 6) Support the motorcycle with a jack.
- 7) Loosen the left and right chain adjuster bolts (2) to provide additional chain slack.

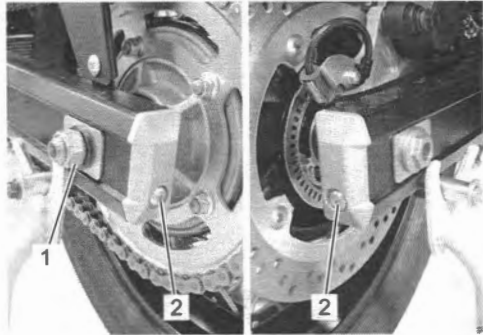

IH28K1310008-02


- 8) Remove the engine sprocket (1).

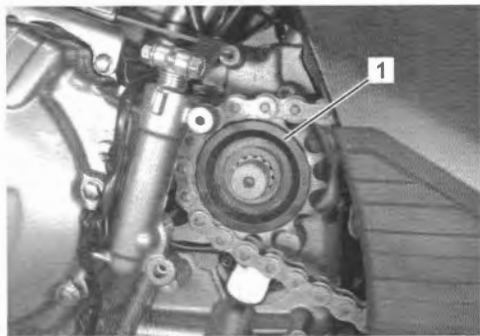

IH28K1310009-01

**Installation**

- 1) Install the engine sprocket (1) and new lock washer (2).

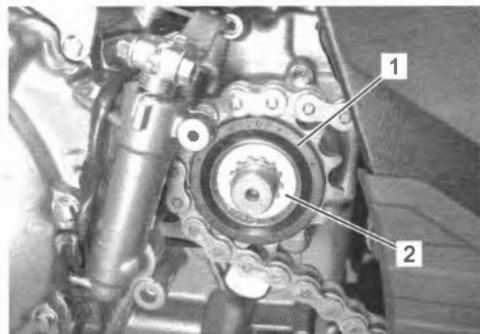


IH28K1310010-01

- 2) Tighten the new engine sprocket nut (1) to the specified torque.

**Tightening torque**

**Engine sprocket nut (a): 145 N·m (14.8 kgf-m, 107.0 lbf-ft)**

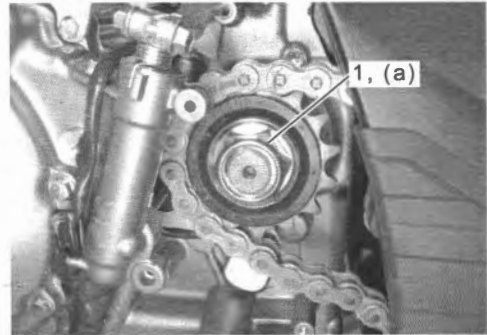

IH28K1310011-01

- 3) Bend the lock washer (1).




IH28K1310012-01

- 4) Tighten the engine sprocket cover bolts (1) to the specified torque.

**Tightening torque**

**Engine sprocket cover bolt (a): 5.5 N·m (0.56 kgf-m, 4.05 lbf-ft)**

- 5) Clamp the side-stand switch lead wire (2) with the clamp (3).

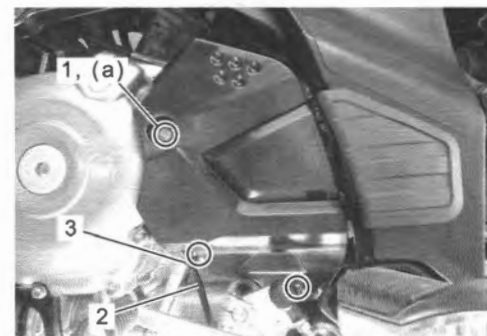

IH28K1310013-03

- 6) Adjust the drive chain slack. Refer to "Drive Chain Inspection and Adjustment" (Page 3A-3).


### Rear Sprocket / Rear Sprocket Mounting Drum Removal and Installation

BENH28K23106006

Refer to "Rear Wheel Assembly Removal and Installation" in Section 2D (Page 2D-14).


#### Removal

- 1) Loosen the rear sprocket nuts (1).
- 2) Remove the rear sprocket mounting drum assembly (2).

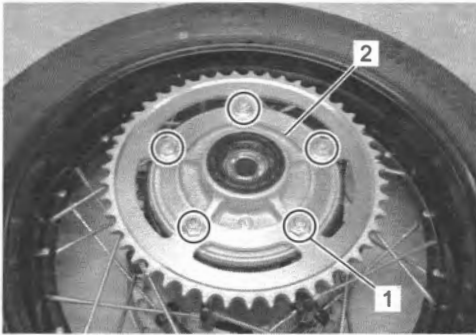


IH28K1310014-01

- 3) Remove the rear sprocket (1).

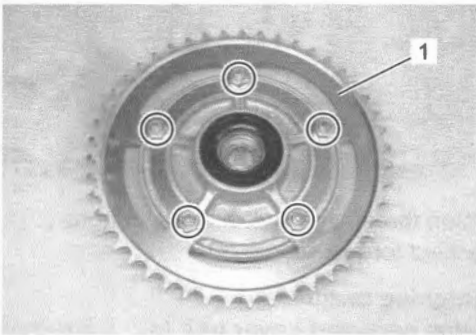

IH28K1310015-01

- 4) Remove the retainer (1).

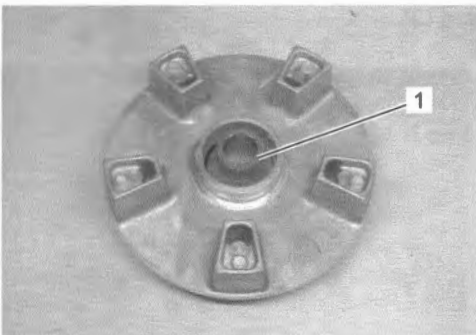


IH28K1310016-01

#### Installation

- 1) Install the rear sprocket (1) and temporarily tighten the new rear sprocket nuts (2).


#### NOTE

The stamped mark (3) on the sprocket should face outside.

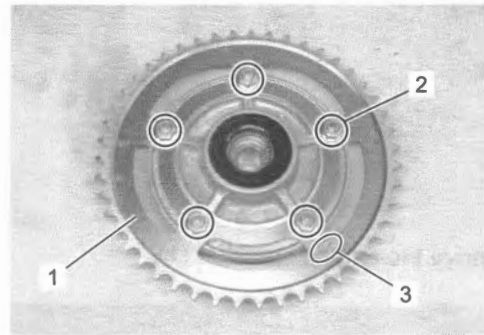

IH28K1310017-01


- 2) Install the retainer (1).

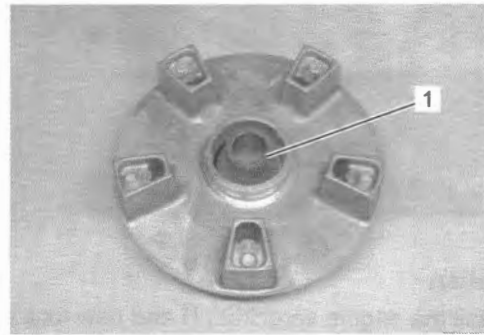

IH28K1310016-01

- 3) Apply grease to the contacting surface between the rear wheel hub and the rear sprocket mounting drum.

"A": Grease 99000-25011 (SUZUKI SUPER GREASE A)

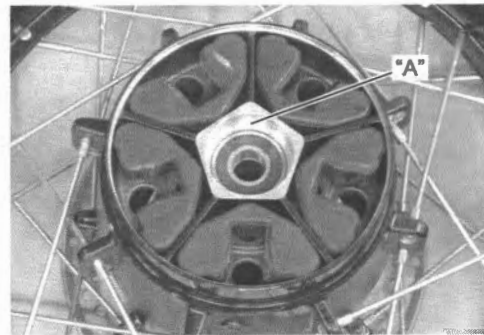


IH28K1310019-01

- 4) Install the rear sprocket mounting drum assembly (1).
- 5) Tighten the rear sprocket nuts (2) to the specified torque.

**Tightening torque**

**Rear sprocket nut (a): 60 N·m (6.1 kgf-m, 44.5 lbf-ft)**

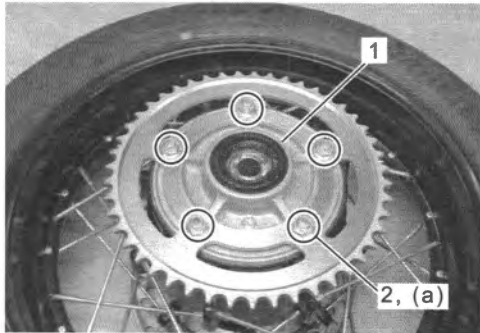

IH28K1310020-02


**Rear Sprocket Mounting Drum / Sprocket Inspection**

BENH28K23106007

Refer to "Rear Wheel Assembly Removal and Installation" in Section 2D (Page 2D-14).

**Dust Seal**


Inspect the sprocket mounting drum dust seal lip (1) for wear or damage. If any damage is found, replace the dust seal with a new one. (Page 3A-7)

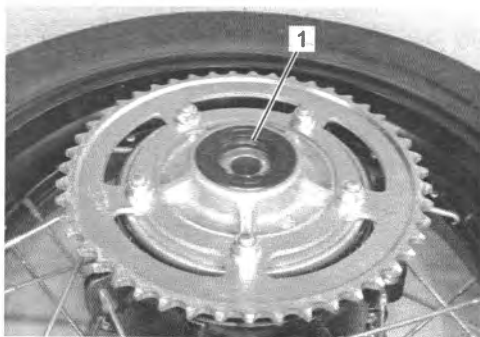

IH28K1310021-01

**Bearing**


Inspect the play of the sprocket mounting drum bearing by hand while they are in the drum. Rotate the inner race by hand to inspect for abnormal noise and smooth rotation. Replace the bearing if there is anything unusual. (Page 3A-7)

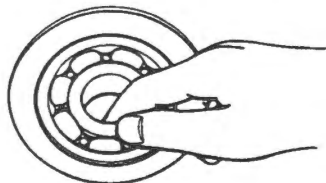

I649G1310015-02

**Sprocket**

- 1) Remove the engine sprocket cover. (Page 3A-4)
- 2) Inspect the sprocket teeth for wear. If they are worn as shown, replace the engine sprocket, rear sprocket and drive chain as a set.
  - Engine sprocket: (Page 3A-4)
  - Rear sprocket: (Page 3A-6)
  - Drive chain: (Page 3A-9)

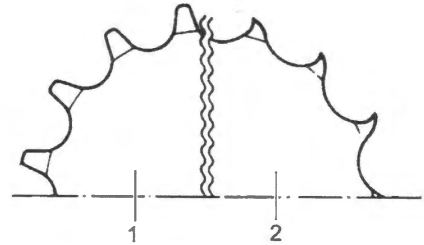

IE31J1310022-01

1. Normal wear	2. Excessive wear
----------------	-------------------

- 3) Install the engine sprocket cover. (Page 3A-4)

**Wheel Damper**

Refer to "Rear Wheel Damper Inspection" in Section 2D (Page 2D-20).

**Drive Chain**

Refer to "Drive Chain Inspection and Adjustment" (Page 3A-3).

**Rear Sprocket Mounting Drum Dust Seal / Bearing Removal and Installation**

BENH28K23106008


Refer to "Rear Sprocket / Rear Sprocket Mounting Drum Removal and Installation" (Page 3A-6).

**Removal**

- 1) Remove the dust seal (1) with the special tool.

**Special tool**

**(A): 09913-50121**

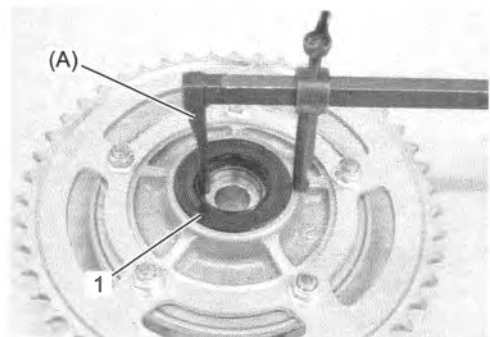


IH28K1310022-01

### 3A-8 Drive Chain / Drive Train / Drive Shaft:

2) Remove the bearing (1) with the special tool.

**Special tool**

**(A): 09921-20240**

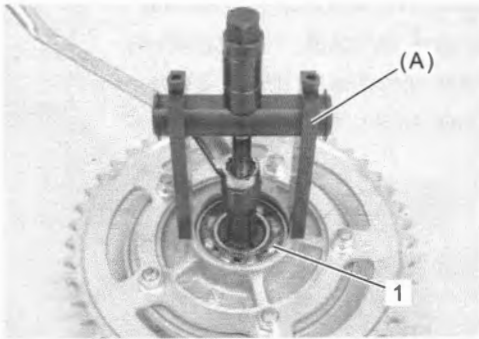

IH28K1310023-01

#### Installation


1) Apply grease to the new bearing.

**Grease 99000-25011 (SUZUKI SUPER GREASE A)**



I649G1310020-02

2) Set the new bearing to the rear sprocket mounting drum facing the sealed cover (1) inward.

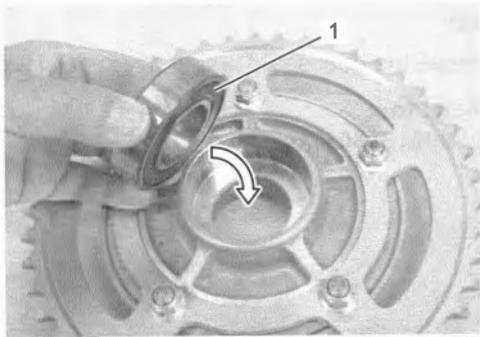


IH28K1310024-01

3) Press the bearing (1) with the special tool.

**Special tool**

**(A): 09913-70210**

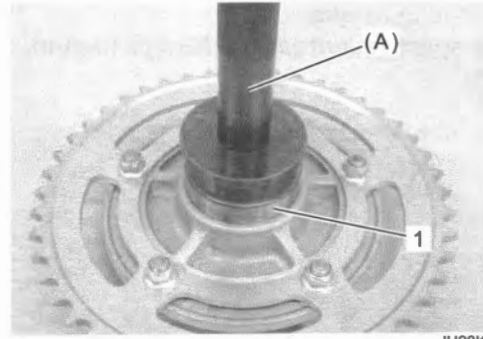


IH28K1310025-01

4) Install a new dust seal (1) with the special tool.

**Special tool**


**(A): 09913-70210**

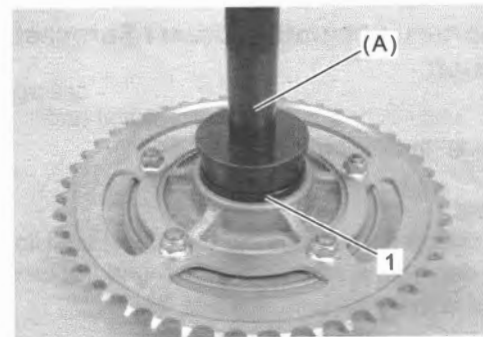

IH28K1310026-01

5) Apply grease to the dust seal lip.

**"A": Grease 99000-25011 (SUZUKI SUPER GREASE A)**

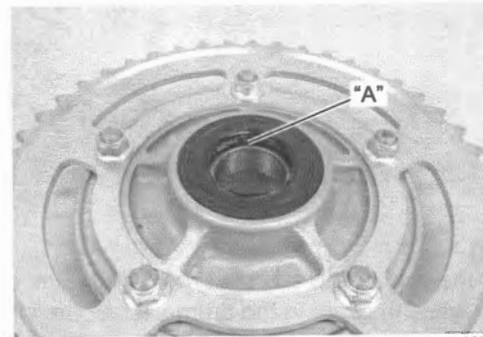

IH28K1310027-01



### Drive Chain Replacement


BENH28K23106009

Use the special tool in the following procedure, to cut and rejoin the drive chain.

#### NOTE

When using the special tool, apply a small quantity of grease to the threaded parts of the special tool.


Special tool  
09922-22712

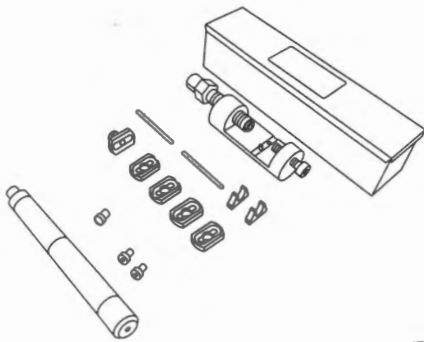

IF04K1310024-02

### Drive Chain Cutting

1) Set up the special tool.

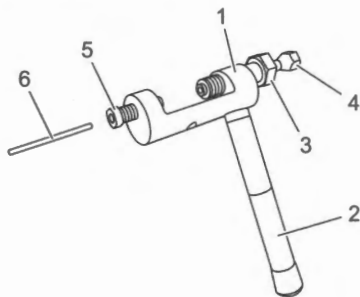


IF04K1310025-03

1. Tool body	4. Pressure bolt B
2. Grip handle	5. Adjuster bolt
3. Pressure bolt A	6. Cutting pin


2) Select the correct guide plate (1) from table below, and mount it to the tool body.

Drive chain size	Guide plate
520, 525, 530 (50)	500
532	532

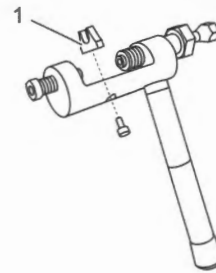

IF04K1310033-02

3) The tip of cutting pin (1) should be positioned inside "a" approximately 5 mm (0.2 in) from the end face of pressure bolt A (2).

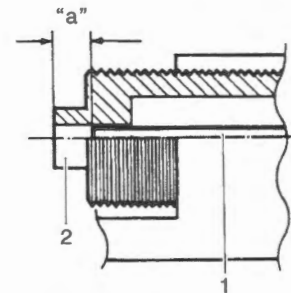


IE31J1310029-01

4) Place the drive chain link being disjointed on the guide plate (1) of the tool.

5) Turn in both the adjuster bolt (2) and pressure bolt A (3) so that each of their end hole fits over the joint pin properly.

6) Tighten the pressure bolt A (3).

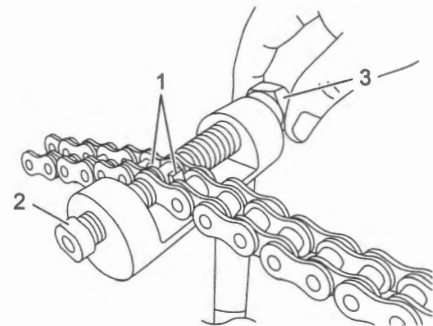

IF04K1310026-04


### 3A-10 Drive Chain / Drive Train / Drive Shaft:

- 7) Turn in the pressure bolt B (1) with the wrench (2) and force out the joint pin (3).


#### NOTE

**Continue turning in the pressure bolt B (1) until the joint pin should be completely pushed out of the drive chain.**

- 8) After the joint pin (3) is removed, loosen the pressure bolt B (1) and then pressure bolt A (4).

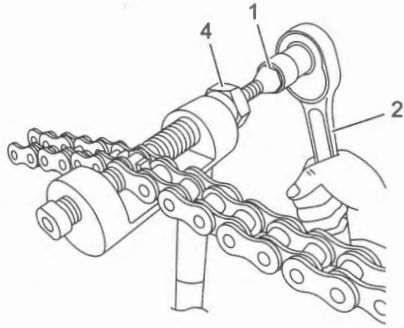

IF04K1310027-06

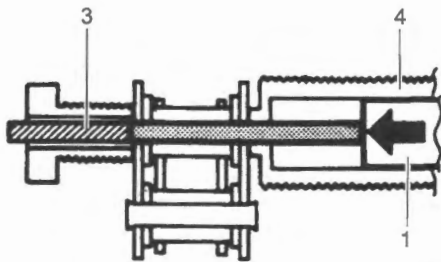

IE31J1310032-01


#### Drive Chain Connecting

#### ⚠ WARNING

**Do not use joint clip type of drive chain. The joint clip may have a chance to drop which may cause severe damage to motorcycle and severe injury.**

#### Joint plate installation

- 1) Set up the special tool.

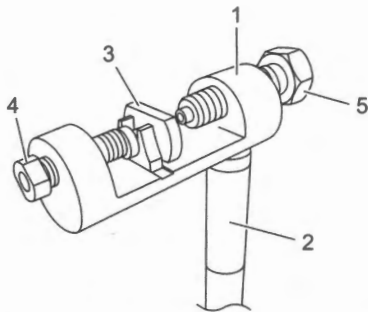


IF04K1310028-05

- 2) Select the correct pressure holder (1) from table below, and set it to pressure bolt A (2).

Drive chain size / Type	Pressure holder
530 (50), 532 / Riveting type	F-50
520, 525 / Riveting type	F-520
530 (50), 532 / Clip type	C-50
520, 525 / Clip type	C-520

#### NOTE

**In case joint plate is too large to fit on "520 pressure holder". Please select "50 pressure holder".**

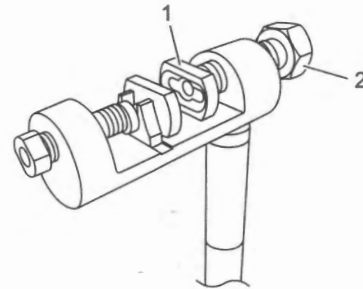


IF04K1310034-02

- 3) Connect both ends of the drive chain with the joint pins (1) inserted from the wheel side [a] as installed on the motorcycle.

#### Joint set part number

27620 - 06G40

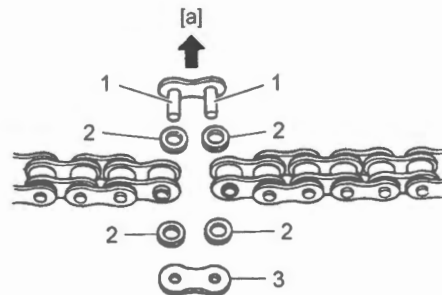

IF04K1310035-01

2. Seal ring


3. Joint plate

1. Tool body	4. Adjuster bolt
2. Grip handle	5. Pressure bolt A
3. Wedge holder	

- 4) Apply grease on the recessed portion of the pressure holder (1). Then install the joint plate (2) on the tool, its stamp mark must face the pressure holder (1) side.


**"A": Grease 99000-25011 (SUZUKI SUPER GREASE A)**

- 5) Set the drive chain on the tool as illustrated and turn in the adjuster bolt (3) to secure the wedge holder (4) with joint pin.

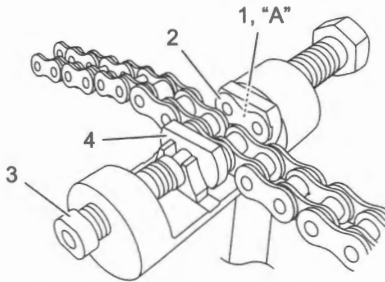

IF04K1310029-04

- 6) Turn in the pressure bolt A (1) and align two joint pins (2) properly with the respective holes of the joint plate (3).
- 7) Turn in the pressure bolt A (1) further using the wrench (4) to press the joint plate over the joint pins.

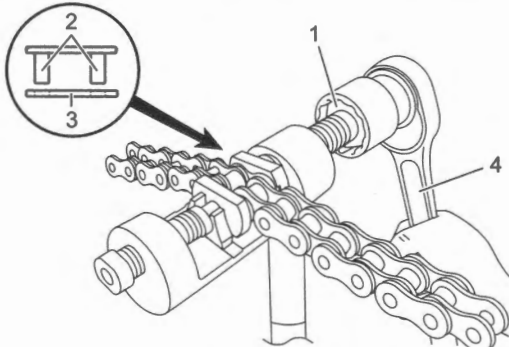


IF04K1310030-04

- 8) Continue pressing the joint plate until the distance "a" between the two joint plates come to the specification.

**Joint plate distance specification**  
**[Standard]: 18.6 – 18.9 mm (0.733 – 0.744 in)**

**NOTICE**


**If pressing of the joint plate makes the dimension out of specification excessively, the work must be carried out again by using new joint parts.**

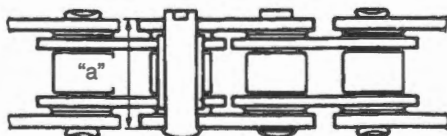

I649G1310033-03

**Joint pin staking**

- 1) Set up the special tool.

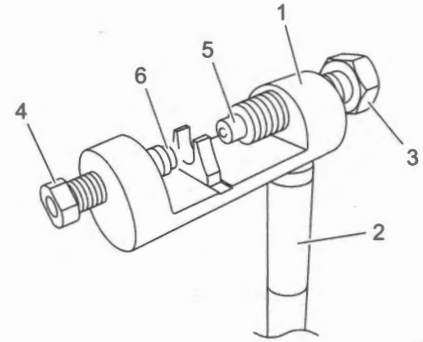

IF04K1310031-03


1. Tool body	4. Adjuster bolt
2. Grip handle	5. Flare pin
3. Pressure bolt A	6. Back-up pin

- 2) Apply grease to the flare pin (1).


**"A": Grease 99000-25011 (SUZUKI SUPER GREASE A)**

- 3) Stake the joint pin by turning (approximately 7/8 turn) the pressure bolt A (2) until the pin end diameter "a" becomes the specified dimension.
- 4) After joining of the drive chain has been completed, check to make sure that the link is smooth and no abnormal condition (no cracked joint pin, etc) is found.

**Pin end diameter specification**  
**[Standard]: 5.45 – 5.85 mm (0.215 – 0.230 in)**

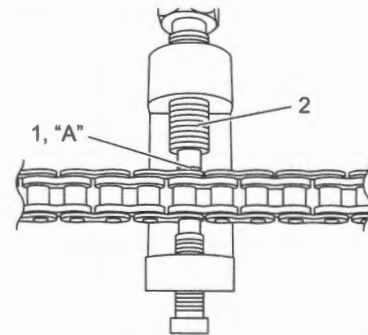

IF04K1310032-03

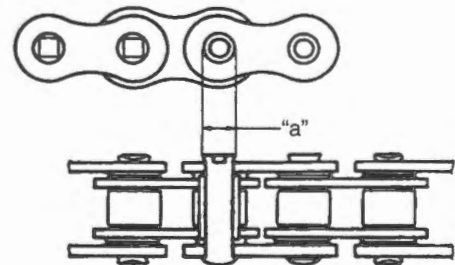

I649G1310036-03

- 5) Adjust the drive chain slack, after connecting it. Refer to "Drive Chain Inspection and Adjustment" (Page 3A-3).

## Specifications

### Tightening Torque Specifications

BENH28K23107001

Fastening part	Tightening torque			Note
	N·m	kgf·m	lbf·ft	
Rear axle nut	100	10.2	74.0	☞ (Page 3A-3)
Engine sprocket nut	145	14.8	107.0	☞ (Page 3A-5)
Engine sprocket cover bolt	5.5	0.56	4.05	☞ (Page 3A-5)
Rear sprocket nut	60	6.1	44.5	☞ (Page 3A-7)

**Reference:**

For the tightening torques of fasteners not specified in this page, refer to:

“Drive Chain Related Components” (Page 3A-2)

“Fasteners Information” in Section 0C (Page 0C-11)

## Special Tools and Equipment

### Recommended Service Material

BENH28K23108001

Material	SUZUKI recommended product or Specification	Note
Grease	SUZUKI SUPER GREASE A P/No.: 99000-25011	☞ (Page 3A-6) / ☞ (Page 3A-8) / ☞ (Page 3A-8) / ☞ (Page 3A-11) / ☞ (Page 3A-11)



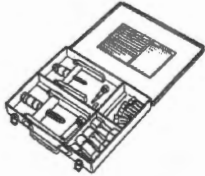
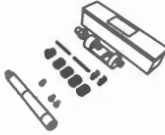
**NOTE**

Required service material(s) is also described in:

“Drive Chain Related Components” (Page 3A-2)

### Special Tool

BENH28K23108002
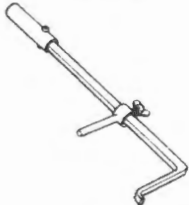
<p>09913-50121 Oil seal remover ☞ (Page 3A-7)</p> 	<p>09913-70210 Bearing installer set ☞ (Page 3A-8) / ☞ (Page 3A-8)</p> 
<p>09921-20240 Bearing remover set ☞ (Page 3A-8)</p> 	<p>09922-22712 Drive chain cut / rivet tool set ☞ (Page 3A-9)</p> 

## Section 4

## Brakes

## CONTENTS

<b>Precautions</b> .....	<b>4-1</b>	Recommended Service Material .....	4A-25
<b>Precautions</b> .....	<b>4-1</b>	Special Tool .....	4A-25
Precautions for Brake System .....	4-1	<b>Front Brakes</b> .....	<b>4B-1</b>
Brake Fluid Information.....	4-1	<b>Repair Instructions</b> .....	<b>4B-1</b>
<b>Brake Control System and Diagnosis</b> ...	<b>4A-1</b>	Front Brake Components .....	4B-1
<b>Schematic and Routing Diagram</b> .....	<b>4A-1</b>	Front Brake Pad Inspection.....	4B-2
Front Brake Hose Routing Diagram.....	4A-1	Front Brake Pad Replacement.....	4B-2
Rear Brake Hose Routing Diagram.....	4A-4	Front Brake Caliper Removal and Installation.....	4B-3
<b>Diagnostic Information and Procedures</b> .....	<b>4A-5</b>	Front Brake Caliper Disassembly and	
Brake Symptom Diagnosis.....	4A-5	Reassembly .....	4B-4
<b>Repair Instructions</b> .....	<b>4A-6</b>	Front Brake Caliper Parts Inspection .....	4B-6
Front Brake Light Switch Inspection .....	4A-6	Front Brake Disc Removal and Installation .....	4B-7
Rear Brake Light Switch Inspection .....	4A-6	Front Brake Disc Inspection .....	4B-8
Rear Brake Light Switch Inspection and		<b>Specifications</b> .....	<b>4B-8</b>
Adjustment .....	4A-7	Tightening Torque Specifications .....	4B-8
Brake Fluid Level Check .....	4A-7	<b>Special Tools and Equipment</b> .....	<b>4B-9</b>
Brake Hose Inspection .....	4A-7	Recommended Service Material .....	4B-9
Brake Pedal Height Inspection and		Special Tool .....	4B-9
Adjustment .....	4A-8	<b>Rear Brakes</b> .....	<b>4C-1</b>
Air Bleeding from Brake Line .....	4A-8	<b>Repair Instructions</b> .....	<b>4C-1</b>
Brake Fluid Replacement.....	4A-11	Rear Brake Components.....	4C-1
Front Brake Hose Removal and Installation.....	4A-12	Rear Brake Pad Inspection .....	4C-2
Rear Brake Hose Removal and Installation .....	4A-12	Rear Brake Pad Replacement .....	4C-2
Front Brake Master Cylinder Assembly /		Rear Brake Caliper Removal and Installation .....	4C-3
Brake Lever Components .....	4A-13	Rear Brake Caliper Disassembly and	
Front Brake Master Cylinder Assembly		Reassembly .....	4C-4
Removal and Installation.....	4A-13	Rear Brake Caliper Parts Inspection .....	4C-6
Front Brake Master Cylinder Assembly /		Rear Brake Disc Removal and Installation.....	4C-7
Brake Lever Disassembly and Reassembly ...	4A-14	Rear Brake Disc Inspection.....	4C-7
Front Brake Master Cylinder Parts Inspection ..	4A-16	<b>Specifications</b> .....	<b>4C-8</b>
Rear Brake Master Cylinder Assembly		Tightening Torque Specifications .....	4C-8
Components.....	4A-17	<b>Special Tools and Equipment</b> .....	<b>4C-9</b>
Rear Brake Master Cylinder Assembly		Recommended Service Material .....	4C-9
Removal and Installation.....	4A-18	Special Tool .....	4C-9
Rear Brake Master Cylinder Disassembly and		<b>ABS</b> .....	<b>4E-1</b>
Reassembly .....	4A-19	<b>Precautions</b> .....	<b>4E-1</b>
Rear Brake Master Cylinder Parts Inspection ..	4A-21	Precautions for ABS Service.....	4E-1
Rear Brake Pedal Components .....	4A-21	Precautions for Diagnosing Troubles .....	4E-1
Rear Brake Pedal Removal and Installation .....	4A-22	Precautions for ABS.....	4E-1
Rear Brake Pedal Inspection .....	4A-23	<b>General Description</b> .....	<b>4E-1</b>
<b>Specifications</b> .....	<b>4A-24</b>	Wheel Speed Sensor Description .....	4E-1
Tightening Torque Specifications.....	4A-24	ABS Control Unit Description .....	4E-2
<b>Special Tools and Equipment</b> .....	<b>4A-25</b>		

Hydraulic Unit (HU) Description .....	4E-3	DTC C1645 (45).....	4E-27
Self-diagnosis Function and ABS Indicator		DTC C1647 (47) / C1648 (48).....	4E-29
Light Description .....	4E-4	DTC C1655 (55).....	4E-30
Fail-safe Function Description.....	4E-5	DTC C1661 (61).....	4E-31
<b>Schematic and Routing Diagram .....</b>	<b>4E-6</b>	<b>Repair Instructions .....</b>	<b>4E-32</b>
ABS Wiring Diagram .....	4E-6	ABS Control Unit Coupler Disconnect and	
ABS Control Unit / HU Diagram .....	4E-7	Connect.....	4E-32
Front Wheel Speed Sensor Routing Diagram.....	4E-8	Front Wheel Speed Sensor Removal and	
Rear Wheel Speed Sensor Routing Diagram .....	4E-9	Installation .....	4E-32
<b>Component Location .....</b>	<b>4E-10</b>	Rear Wheel Speed Sensor Removal and	
ABS Components Location .....	4E-10	Installation .....	4E-33
<b>Diagnostic Information and Procedures .....</b>	<b>4E-11</b>	Front Wheel Speed Sensor Rotor Removal	
ABS Check.....	4E-11	and Installation .....	4E-33
Visual Inspection .....	4E-13	Rear Wheel Speed Sensor Rotor Removal	
ABS Symptom Diagnosis .....	4E-14	and Installation .....	4E-34
ABS Indicator Light Inspection .....	4E-14	Wheel Speed Sensor and Sensor Rotor	
DTC (Diagnostic Trouble Code) Output .....	4E-16	Inspection.....	4E-34
DTC (Diagnostic Trouble Code) Deleting.....	4E-18	ABS Control Unit / HU Removal and	
DTC Table.....	4E-20	Installation .....	4E-35
DTC C1625 (25).....	4E-21	<b>Specifications .....</b>	<b>4E-38</b>
DTC C1635 (35).....	4E-22	Tightening Torque Specifications.....	4E-38
DTC C1641 (41).....	4E-23	<b>Special Tools and Equipment .....</b>	<b>4E-38</b>
DTC C1642 (42).....	4E-24	Special Tool .....	4E-38
DTC C1644 (44).....	4E-26		

# Precautions

## Precautions

### Precautions for Brake System

BENH28K2400001

Refer to "General Precautions" in Section 00 (Page 00-1), "Precautions for Electrical Circuit Service" in Section 00 (Page 00-2) and "Precautions for Circuit Tester" in Section 00 (Page 00-7).

### Brake Fluid Information

BENH28K2400002

**▲ WARNING**

- This brake system is filled with an ethylene glycol-based DOT 4 brake fluid. Do not use or mix different types of fluid, such as silicone-based or petroleum-based.
- Do not use any brake fluid taken from old, used or unsealed containers. Never reuse brake fluid left over from the last servicing or which has been stored for a long period of time.
- When storing brake fluid, seal the container completely and keep it away from children.
- When replenishing brake fluid, take care not to get dust into the fluid.
- When washing brake components, use new brake fluid. Never use cleaning solvent.
- A contaminated brake disc or brake pad reduces braking performance. Discard contaminated pads and clean the disc with high quality brake cleaner or neutral detergent.
- After removal and installation of the brake caliper, master cylinder, brake hose and ABS control unit/HU (if equipped), be sure to carry out the air bleeding operation.
- Brake hose seal washers should be replaced with the new ones to prevent fluid leakage.

**NOTICE**


The brake fluid is damaging to painted surfaces, plastics and rubber materials, and do not allow the fluid to spill on the surrounding parts.  
If the fluid is spilled, flush it with water immediately.

# Brake Control System and Diagnosis

## Schematic and Routing Diagram


### Front Brake Hose Routing Diagram

BENH28K24102001

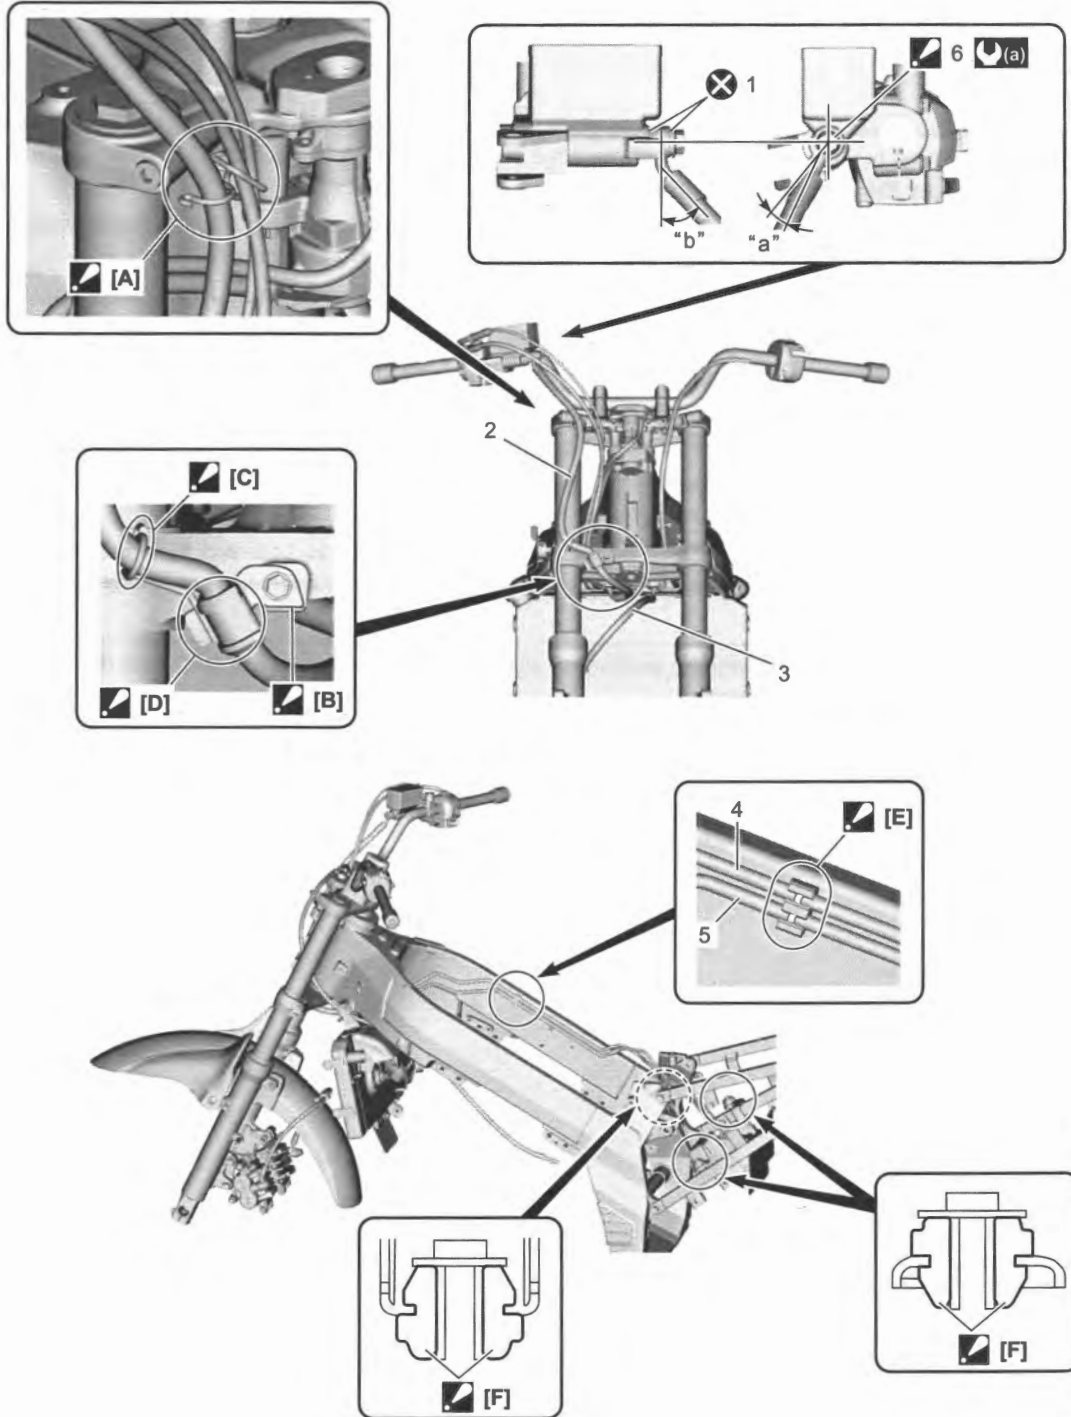



<p>☑ [A]: Pass the brake hose as shown in the figure.</p>	<p>1. Seal washer</p>	<p>"a": 10°</p>
<p>☑ [B]: After positioning the clamp with the stopper of steering stem lower bracket, tighten the clamp bolt.</p>	<p>2. Front brake hose (master cylinder to brake joint (RH))</p>	<p>"b": 40°</p>
<p>☑ [C]: Fix the brake hose to the guide.</p>	<p>3. Front brake hose (brake joint (LH) to brake caliper)</p>	<p>⤵(a) : 23 N·m (2.3 kgf-m, 17.0 lbf-ft)</p>
<p>☑ [D]: Fix the hose sleeve to the clamp.</p>	<p>4. Brake pipe (brake joint (RH) to ABS control unit/HU)</p>	<p>⊗ : Do not reuse.</p>
<p>☑ [E]: Clamp the brake pipe at the marking portion.</p>	<p>5. Brake pipe (ABS control unit/HU to brake joint (LH))</p>	
<p>☑ [F]: Install the ABS control unit/HU mounting rubber as shown in the figure.</p>	<p>☑ 6. Brake hose union bolt : After the brake hose union has contacted the stopper, tighten the union bolt to the specified torque.</p>	

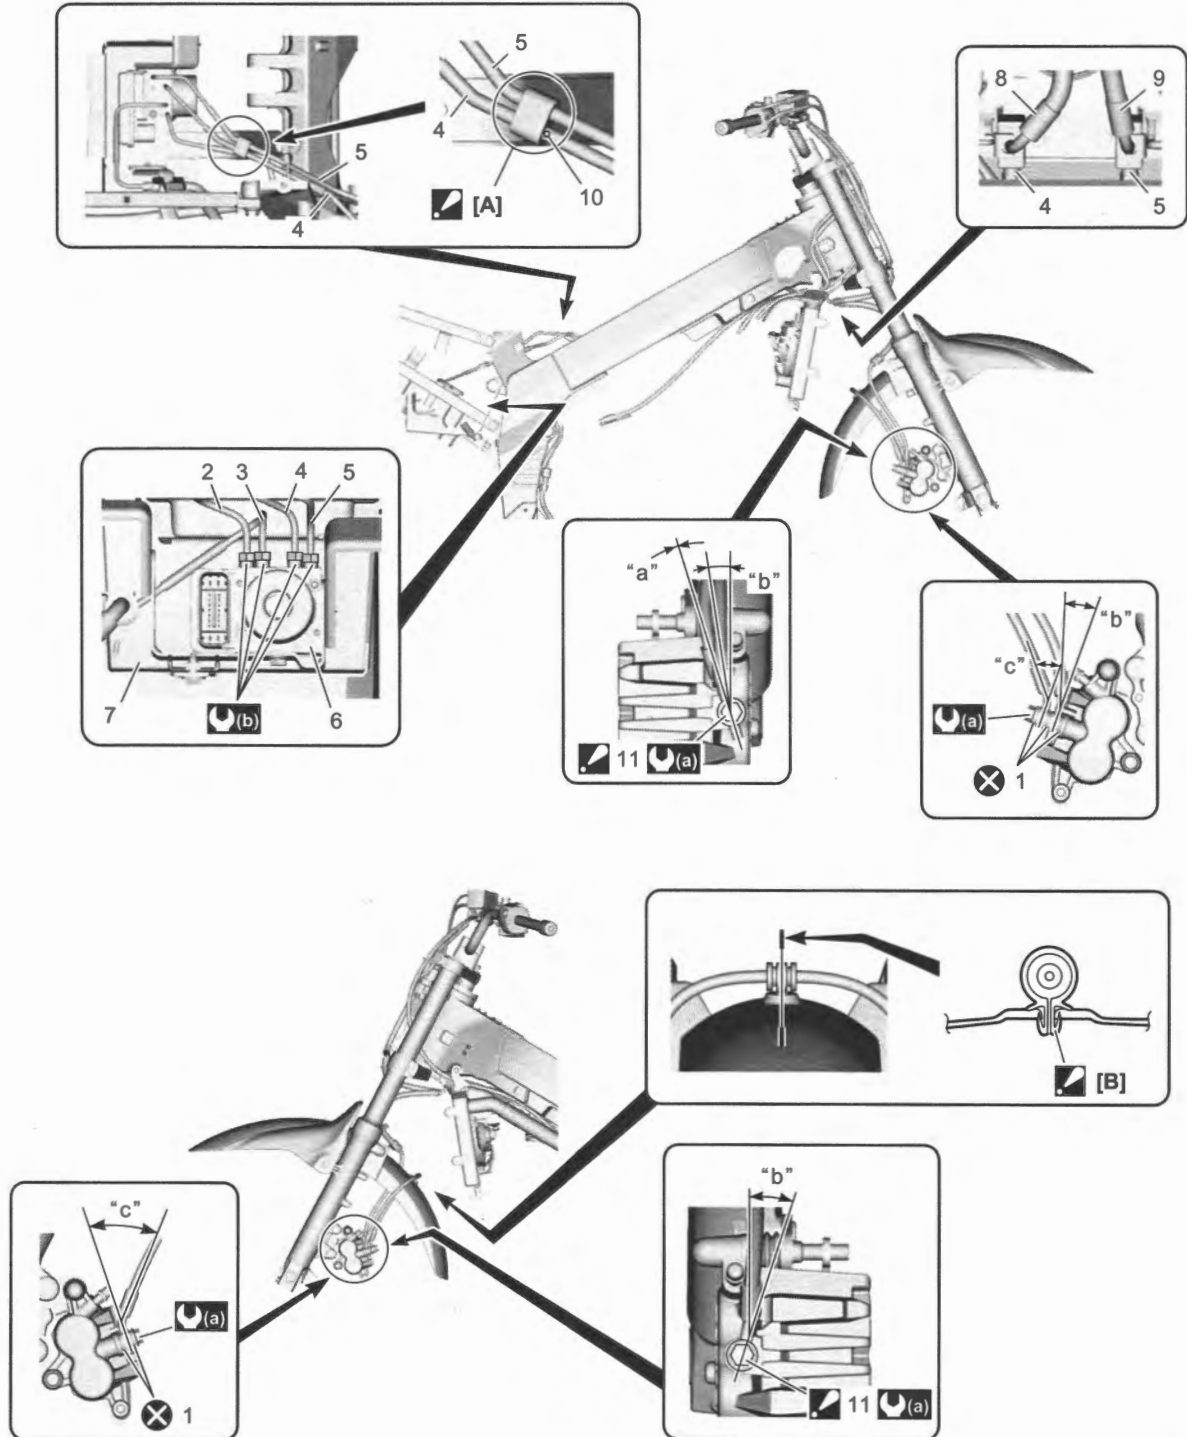


### 4A-3 Brake Control System and Diagnosis:

<input checked="" type="checkbox"/> [A]: Clamp the brake pipes aligning the clamp end with the white mark.	6. ABS control unit/HU	"b": 15°
<input checked="" type="checkbox"/> [B]: Hold the brake hose sleeve with the clamp and fit the clamp into the hole in the front fender securely.	7. ABS control unit/HU cover	"c": 40°
1. Seal washer	8. Front brake hose (master cylinder to brake joint (RH))	<input checked="" type="checkbox"/> (a) : 23 N·m (2.3 kgf-m, 17.0 lbf-ft)
2. Rear brake hose (ABS control unit/HU to brake caliper)	9. Front brake hose (brake joint (LH) to brake caliper)	<input checked="" type="checkbox"/> (b) : 16 N·m (1.6 kgf-m, 12.0 lbf-ft)
3. Rear brake hose (master cylinder to ABS control unit/HU)	10. White mark	<input checked="" type="checkbox"/> : Do not reuse.
4. Brake pipe (brake joint (RH) to ABS control unit/HU)	<input checked="" type="checkbox"/> 11. Brake hose union bolt : After the brake hose union has contacted the stopper, tighten the union bolt to the specified torque.	
5. Brake pipe (ABS control unit/HU to brake joint (LH))	"a": 0°	

Rear Brake Hose Routing Diagram

BENH28K24102002

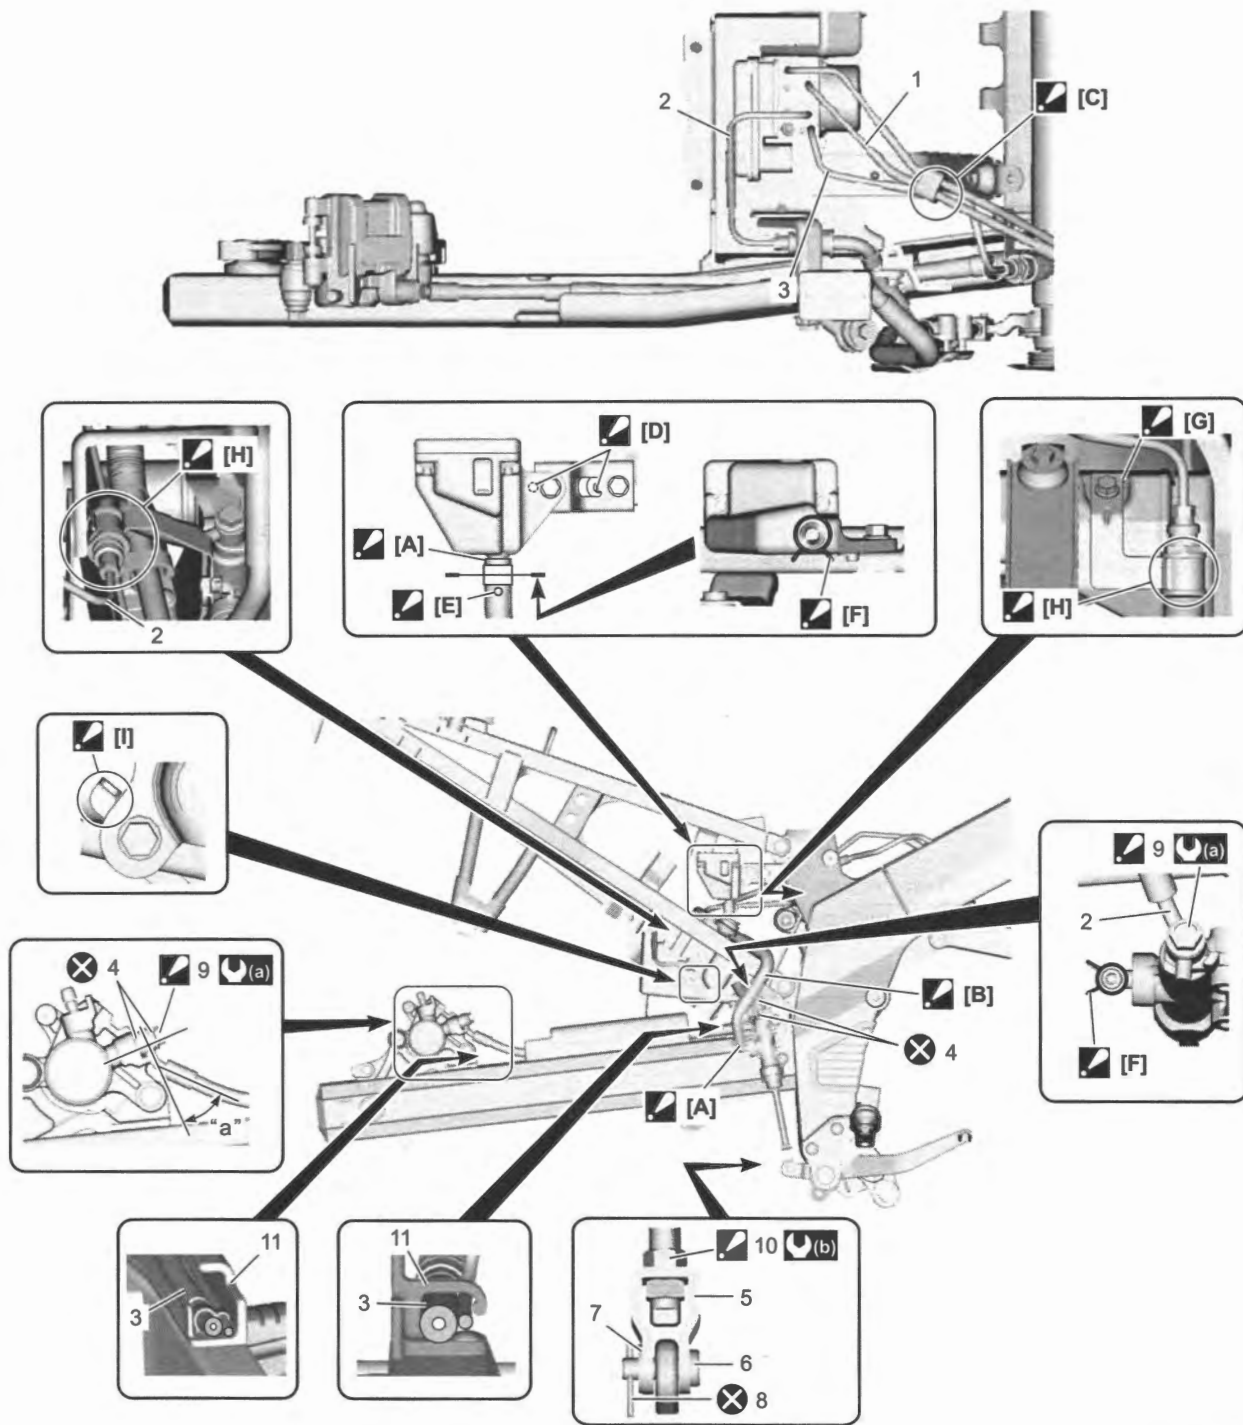

## 4A-5 Brake Control System and Diagnosis:

☑ [A]: Insert the reservoir tank hose firmly.	☑ [I]: After positioning the clamp with the seat rail, tighten the clamp bolt.	8. Cotter pin
☑ [B]: Pass the reservoir tank hose outside of the seat rail.	1. Brake pipe (brake joint (RH) to ABS control unit/HU)	☑ 9. Brake hose union bolt : After the brake hose union has contacted the stopper, tighten the union bolt to the specified torque.
☑ [C]: Pass the rear brake hose (ABS control unit/HU to brake caliper) under the brake pipe (brake joint (RH) to ABS control unit/HU).	2. Rear brake hose (master cylinder to ABS control unit/HU)	☑ 10. Rear brake master cylinder rod lock-nut : While holding the yoke, tighten the lock-nut to the specified torque.
☑ [D]: Fit each stopper securely and tighten the bolts.	3. Rear brake hose (ABS control unit/HU to brake caliper)	11. Brake hose guide
☑ [E]: Face the white mark outside.	4. Seal washer	"a": 42°
☑ [F]: Clamp ends should face as shown in the figure.	5. Rear brake master cylinder yoke	Ⓜ(a) : 23 N·m (2.3 kgf·m, 17.0 lbf·ft)
☑ [G]: After positioning the clamp with the stopper, tighten the clamp bolt.	6. Pin	Ⓜ(b) : 18 N·m (1.8 kgf·m, 13.5 lbf·ft)
☑ [H]: Fix the hose sleeve to the clamp.	7. Washer	⊗ : Do not reuse.

## Diagnostic Information and Procedures

### Brake Symptom Diagnosis

BENH28K24104001

Condition	Possible cause	Correction / Reference Item
<b>Insufficient brake power</b>	Leakage of brake fluid from hydraulic system.	Repair or replace.
	Worn pads and/or disc.	Replace. <ul style="list-style-type: none"> <li>• Pad <ul style="list-style-type: none"> <li>– Front: ☞(Page 4B-2)</li> <li>– Rear: ☞(Page 4C-2)</li> </ul> </li> <li>• Disc <ul style="list-style-type: none"> <li>– Front: ☞(Page 4B-7)</li> <li>– Rear: ☞(Page 4C-7)</li> </ul> </li> </ul>
	Oil adhesion on friction surface of pads.	Clean disc and pads.
	Air in hydraulic system.	Bleed air. ☞(Page 4A-8)
	Not enough brake fluid in the reservoir.	Replenish. ☞(Page 4A-7)
<b>Brake squeaking</b>	Carbon adhesion on pad surface.	Repair surface with sandpaper.
	Tilted pad.	Correct pad fitting or replace. <ul style="list-style-type: none"> <li>• Front: ☞(Page 4B-2)</li> <li>• Rear: ☞(Page 4C-2)</li> </ul>
	Damaged wheel bearing.	Replace. <ul style="list-style-type: none"> <li>• Front: ☞(Page 2D-7)</li> <li>• Rear: ☞(Page 2D-16)</li> </ul>
	Loose front wheel axle or rear wheel axle.	Tighten to specified torque. ☞(Page 0B-5)
	Worn pads and/or disc.	Replace. <ul style="list-style-type: none"> <li>• Pad <ul style="list-style-type: none"> <li>– Front: ☞(Page 4B-2)</li> <li>– Rear: ☞(Page 4C-2)</li> </ul> </li> <li>• Disc <ul style="list-style-type: none"> <li>– Front: ☞(Page 4B-7)</li> <li>– Rear: ☞(Page 4C-7)</li> </ul> </li> </ul>
	Foreign material in brake fluid.	Replace brake fluid. ☞(Page 4A-11)
	Clogged return port of master cylinder.	Disassemble and clean master cylinder. <ul style="list-style-type: none"> <li>• Front: ☞(Page 4A-14)</li> <li>• Rear: ☞(Page 4A-19)</li> </ul>


Condition	Possible cause	Correction / Reference Item
<b>Excessive brake lever stroke</b>	Air in hydraulic system.	Bleed air. (Page 4A-8)
	Insufficient brake fluid.	Replenish fluid to specified level. (Page 4A-7)
	Improper quality of brake fluid.	Replace with correct fluid. (Page 4A-11)
<b>Leakage of brake fluid</b>	Insufficient tightening of connection joints.	Tighten to specified torque. (Page 0B-5)
	Cracked hose.	Replace. • Front: (Page 4A-12) • Rear: (Page 4A-12)
	Worn master cylinder piston and/or cup.	Replace master cylinder piston and/or cup. • Front: (Page 4A-14) • Rear: (Page 4A-19)
	Worn brake caliper piston seal and dust seal.	Replace brake caliper piston seal and dust seal. • Front: (Page 4B-4) • Rear: (Page 4C-4)
<b>Brake drags</b>	Rusty part.	Clean and lubricate. (Page 0B-7)
	Insufficient front brake lever or rear brake pedal pivot lubrication.	Lubricate. (Page 0B-7)

## Repair Instructions

### Front Brake Light Switch Inspection

BENH28K24106001

- 1) Disconnect the front brake light switch coupler (1).

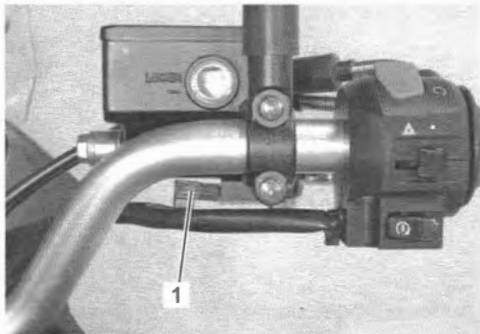

IH28K1410001-01

- 2) Inspect the switch for continuity with a circuit tester. If any abnormality is found, replace the front brake light switch with a new one.

Color Position	Terminal (B/Bl)	Terminal (B/R)
OFF		
ON	○	○


IH28K1410002-01

- 3) Connect the front brake light switch coupler.

### Rear Brake Light Switch Inspection

BENH28K24106002

- 1) Remove the seat. (Page 9D-19)
- 2) Disconnect the rear brake light switch coupler (1).

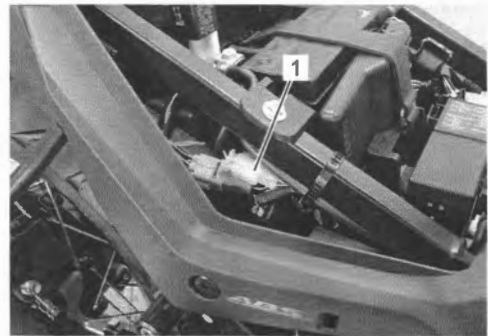

IH28K1410003-03

- 3) Inspect the switch for continuity with a circuit tester. If any abnormality is found, replace the rear brake light switch with a new one.

Color Position	Terminal (O)	Terminal (W/B)
OFF		
ON	○	○


IF04K1410008-01

- 4) Connect the rear brake light switch lead wire coupler.
- 5) Install the seat. (Page 9D-19)

### Rear Brake Light Switch Inspection and Adjustment

BENH28K24106003

Check the rear brake light switch so that the brake light will come on just before pressure is felt when the brake pedal is depressed. If the brake light switch adjustment is necessary, turn the adjuster nut (1) in or out while holding the brake pedal.

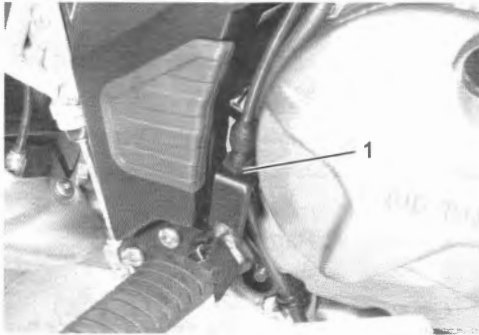


IH28K1410004-01

### Brake Fluid Level Check

BENH28K24106004

- 1) Keep the motorcycle upright and place the handlebars straight.
- 2) Check the brake fluid level by observing the lower limit lines (1) on the front and rear brake fluid reservoirs. When the brake fluid level is below the lower limit line, inspect for brake pad wear and leaks and replenish with brake fluid that meets the following specification.

#### Brake fluid (DOT 4)

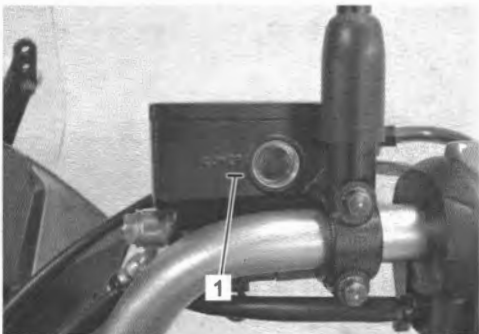

IH28K1410005-01




IH28K1410006-03


### Brake Hose Inspection

BENH28K24106005


- 1) Remove the following parts.
  - Air cleaner box: ☞ (Page 1D-6)
  - Battery holder: ☞ (Page 9D-22)
- 2) Inspect the brake hoses and hose joints for crack, damage or brake fluid leakage. If any defects are found, replace the brake hose with a new one.
  - Front: ☞ (Page 4A-12)
  - Rear: ☞ (Page 4A-12)

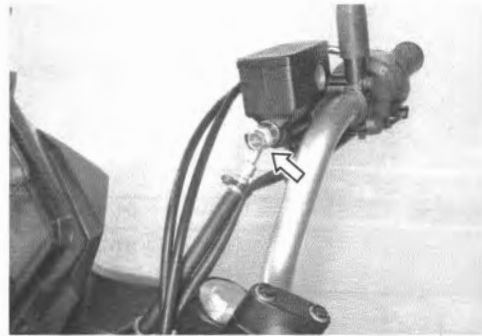


IH28K1410007-01

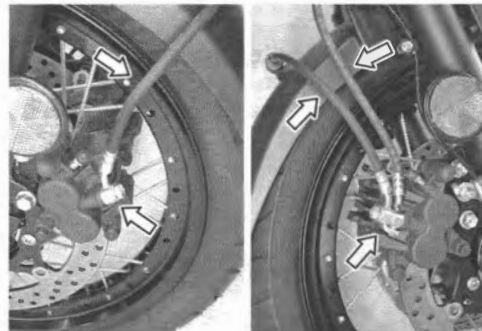


IH28K1410008-01

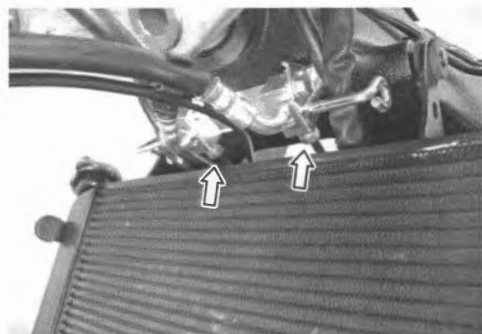


IH28K1410009-01

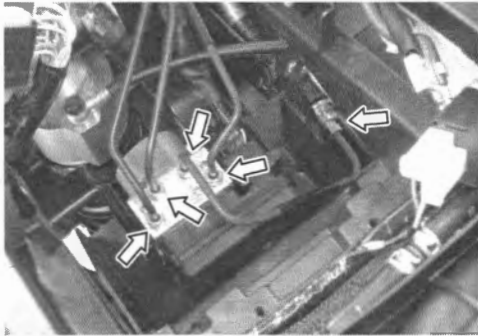

IH28K1410010-01

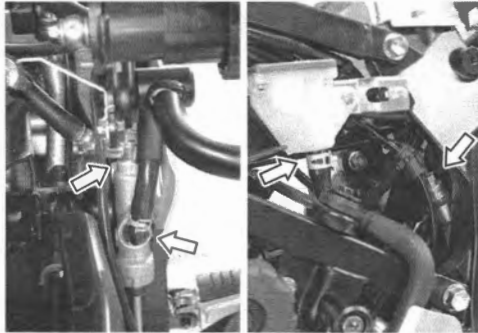

IH28K1410011-01

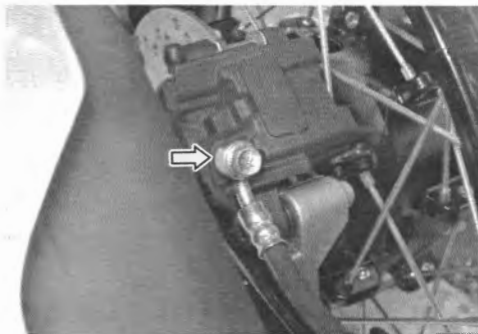

IH28K1410012-01

3) Install the removed parts.


### Brake Pedal Height Inspection and Adjustment

BENH28K24106006

- 1) Inspect the brake pedal height "a" between the pedal top face and footrest.  
Adjust the brake pedal height if necessary.

#### Rear brake pedal height

[Standard]: 19.5 – 20.5 mm (0.768 – 0.807 in)

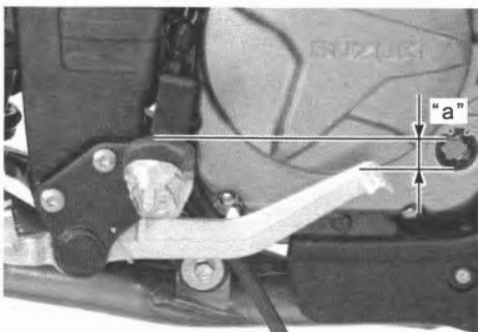


IH28K1410013-01

- 2) Loosen the lock-nut (1).
- 3) Turn the push rod (2) in or out until the brake pedal height is within the specification.
- 4) While holding the yoke (3), tighten the lock-nut to the specified torque.

#### Tightening torque

Rear brake master cylinder rod lock-nut (a): 18 N·m (1.8 kgf-m, 13.5 lbf-ft)

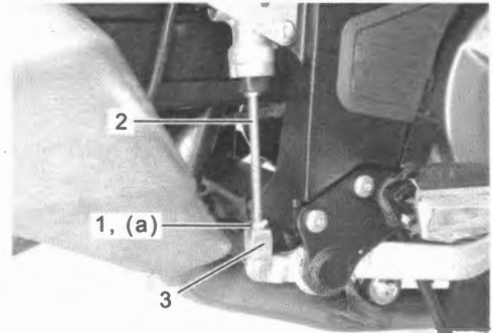

IH28K1410014-01

- 5) After finishing the brake pedal height inspection and adjustment, check the rear brake light switch.  
☞ (Page 4A-7)

### Air Bleeding from Brake Line

BENH28K24106007

Air trapped in the brake lines acts like a cushion to absorb a large proportion of the pressure developed by the master cylinder and thus greatly reduces the braking force. The presence of air bubbles is indicated by a "spongy" feel in the brake lever and low braking force. This condition is extremely dangerous, and therefore the air must be bled every time after replacing any parts in the brake lines in the following manner.

#### NOTE


**It is essential to purge air from the fluid circuit before inspecting the function of the brake fluid pressure-decreasing mode. Without air bleeding, trapped air in the circuit will enter the HU.**

## 4A-9 Brake Control System and Diagnosis:

### Front Brake


- 1) Place the motorcycle on a level surface and keep the handlebars straight.
- 2) Remove the reservoir cap (1), plate and diaphragm.
- 3) Fill the master cylinder reservoir with new brake fluid to the top of the inspection window (2). Place the reservoir cap to prevent dirt from entering.

#### Brake fluid (DOT 4)

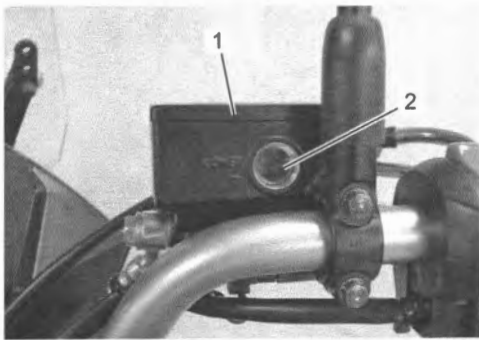


IH28K1410015-01

- 4) Attach a clear hose to the air bleeder valve (1), and insert the free end of the hose into a receptacle.
- 5) Operate the brake lever several times, and while holding the lever gripped, loosen the air bleeder valve (1) and drain the brake fluid into a receptacle.

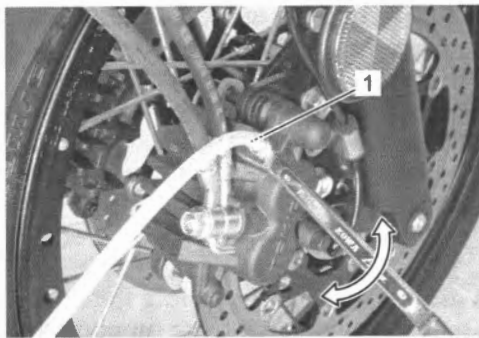

IH28K1410016-01

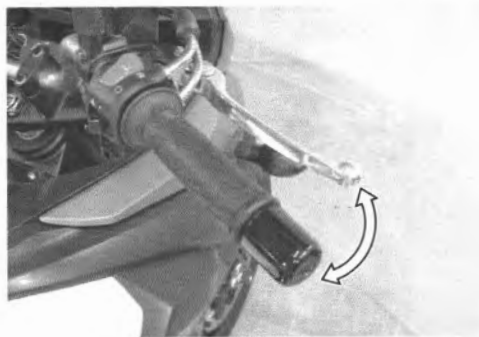

IH28K1410017-01

- 6) Tighten the air bleeder valve and release the brake lever slowly.
- 7) Repeat the steps 5) and 6) until the fluid is flowing out without bubbles.

#### NOTE

**While bleeding the brake system, replenish the reservoir with the brake fluid as necessary to keep the fluid above the lower level.**

- 8) Tighten the air bleeder valve to the specified torque.

#### Tightening torque

**Front brake air bleeder valve: 7.5 N·m (0.76 kgf-m, 5.55 lbf-ft)**

- 9) Fill the reservoir with new brake fluid up to the top of the projection (1).




IH28K1410018-01

- 10) Install the diaphragm, plate and reservoir cap (1).
- 11) Tighten the reservoir cap screws (2) to the specified torque.

#### Tightening torque

**Front reservoir cap screw (a): 1.5 N·m (0.15 kgf-m, 1.10 lbf-ft)**

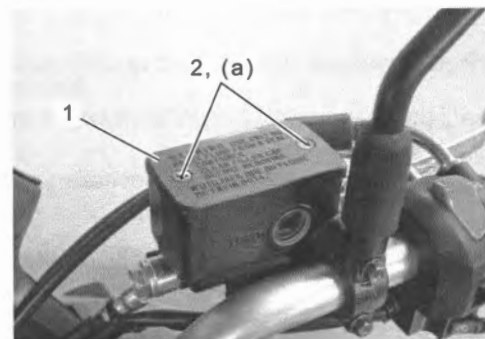


IH28K1410019-01




**Rear Brake**

- 1) Remove the right frame cover. (Page 9D-21)
- 2) Place the motorcycle on a level surface.
- 3) Remove the reservoir cap (1) and diaphragm.
- 4) Fill the reservoir with new brake fluid up to the upper level (2) of the reservoir. Place the reservoir cap to prevent dirt from entering.

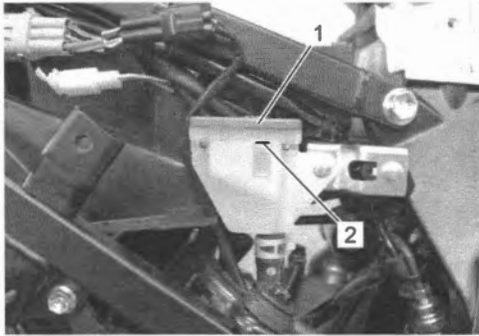


IH28K1410020-01

- 5) Attach a clear hose to the air bleeder valve (1), and insert the free end of the hose into a receptacle.
- 6) Operate the brake pedal several times, and while pushing the pedal, loosen the air bleeder valve (1) and drain the brake fluid into a receptacle.

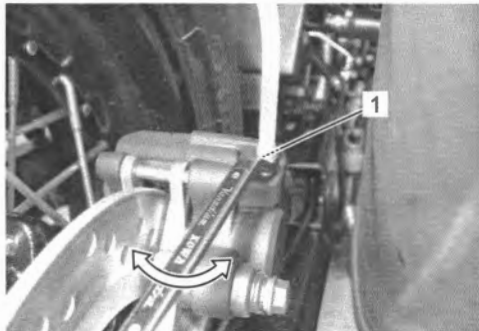

IH28K1410021-01

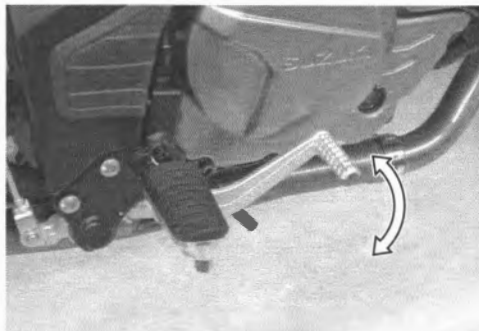

IH28K1410022-01

- 7) Tighten the air bleeder valve and release the brake pedal slowly.
- 8) Repeat the steps 6) and 7) until the fluid is flowing out without bubbles.

**NOTE**


**While bleeding the brake system, replenish the reservoir with the brake fluid as necessary to keep the fluid above the lower level.**

- 9) Tighten the air bleeder valve to the specified torque.

**Tightening torque**

**Rear brake air bleeder valve: 6.0 N·m (0.61 kgf-m, 4.45 lbf-ft)**

- 10) Fill the reservoir with new brake fluid to the upper level (1) of the reservoir.

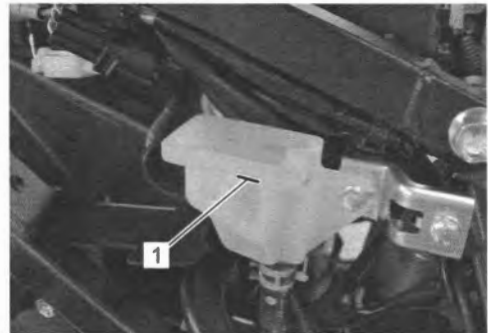


IH28K1410023-01

- 11) Install the diaphragm and reservoir cap (1).
- 12) Tighten the reservoir cap screws (2) to the specified torque.

**Tightening torque**

**Rear reservoir cap screw (a): 1.2 N·m (0.12 kgf-m, 0.90 lbf-ft)**

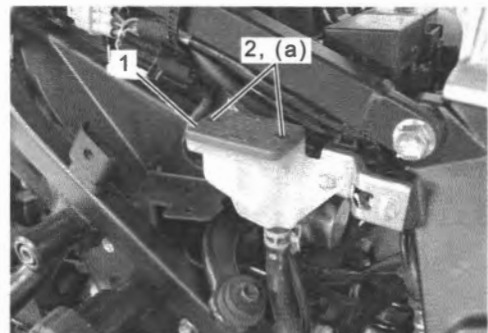

IH28K1410024-01

- 13) Install the right frame cover. (Page 9D-21)

## Brake Fluid Replacement

BENH28K24106008

### Front Brake

- 1) Place the motorcycle on a level surface and keep the handlebars straight.
- 2) Remove the brake fluid reservoir cap, plate and diaphragm.
- 3) Suck up the old brake fluid as much as possible.



IH28K1410025-01


- 4) Fill the reservoir with new brake fluid.

#### Brake fluid (DOT 4)


- 5) Attach a clear hose to the air bleeder valve (1) and insert the free end of the hose into a receptacle.
- 6) Loosen the air bleeder valve (1), squeeze and release the brake lever and drain the old brake fluid out of the brake system.

#### NOTE

While replacement the brake system, replenish the reservoir with the brake fluid as necessary to keep the fluid above the lower level.

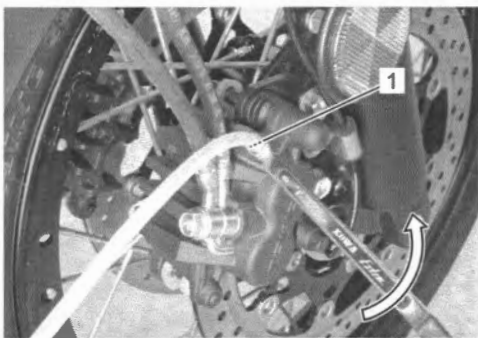

IH28K1410026-01

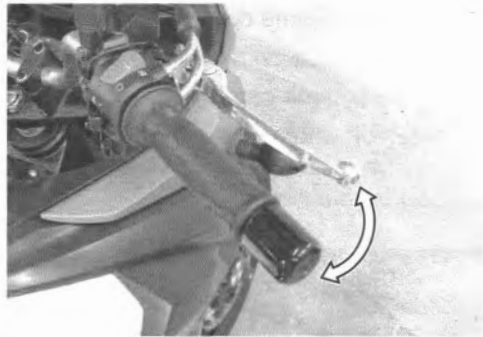


IH28K1410017-01

- 7) Bleed the air from the front brake system. (Page 4A-8)

### Rear Brake

- 1) Remove the right frame cover. (Page 9D-21)
- 2) Place the motorcycle on a level surface.
- 3) Remove the reservoir cap and diaphragm.
- 4) Suck up the old brake fluid as much as possible.

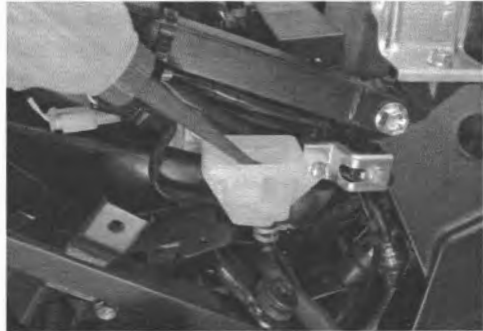

IH28K1410027-01


- 5) Fill the reservoir with new brake fluid.

**Brake fluid (DOT 4)**


- 6) Attach a clear hose to the air bleeder valve (1) and insert the free end of the hose into a receptacle.
- 7) Loosen the air bleeder valve (1) and pump the brake pedal until the old brake fluid flows out of the brake system.

**NOTE**

**While replacement the brake system, replenish the reservoir with the brake fluid as necessary to keep the fluid above the lower level.**

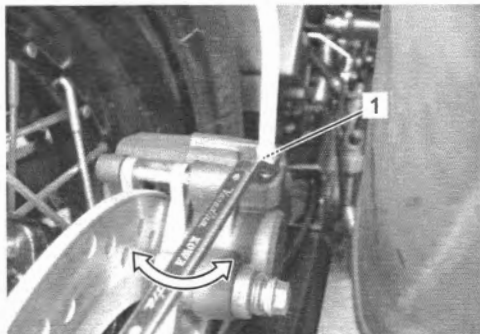

IH28K1410021-01

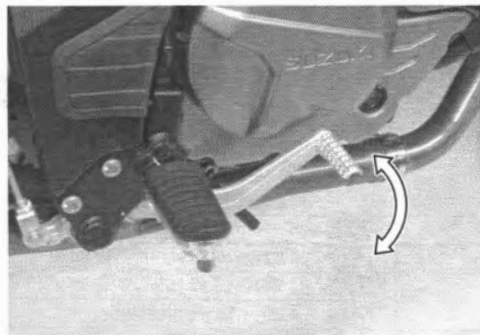

IH28K1410022-01

- 8) Bleed the air from the rear brake system. (Page 4A-8)

**Front Brake Hose Removal and Installation**

BENH28K24106009

Refer to "Front Brake Hose Routing Diagram" (Page 4A-1).

**Removal**

- 1) Drain brake fluid. (Page 4A-11)
- 2) Remove the fuel tank. (Page 1G-10)
- 3) Remove the air cleaner box. (Page 1D-6)
- 4) Remove the battery holder. (Page 9D-22)
- 5) Remove the front brake hoses.

**Installation**

- 1) Install the front brake hoses.
- 2) Bleed air from the front brake system. (Page 4A-8)
- 3) Install the battery holder. (Page 9D-22)
- 4) Install the air cleaner box. (Page 1D-6)
- 5) Install the fuel tank. (Page 1G-10)

**Rear Brake Hose Removal and Installation**

BENH28K24106010

Refer to "Rear Brake Hose Routing Diagram" (Page 4A-4).

**Removal**


- 1) Drain brake fluid. (Page 4A-11)
- 2) Remove the battery holder. Refer to "Battery Holder Removal and Installation" in Section 9D (Page 9D-22).
- 3) Remove the rear brake master cylinder. (Page 4A-18)
- 4) Remove the rear brake hoses.

**Installation**

- 1) Install the rear brake hoses.
- 2) Install the rear brake master cylinder. (Page 4A-18)
- 3) Bleed air from the rear brake system. (Page 4A-8)
- 4) Install the battery holder. (Page 9D-22)

Front Brake Master Cylinder Assembly / Brake Lever Components

BENH28K24106011

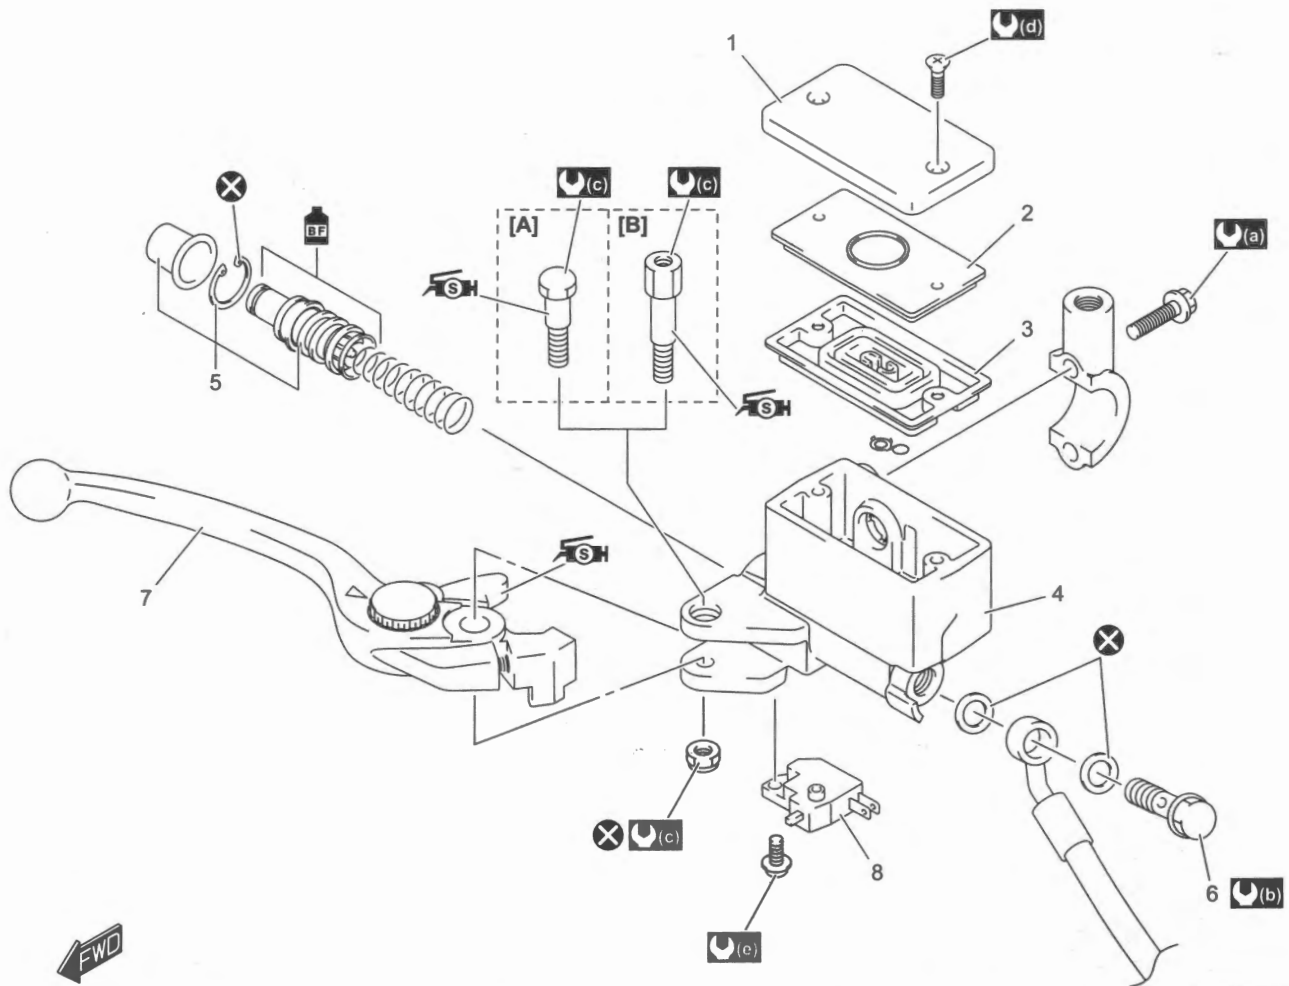

IH28K1410028-01


[A]: Without knuckle cover	5. Piston/cup set	⌚(c) : 5.9 N·m (0.60 kgf-m, 4.35 lbf-ft)
[B]: With knuckle cover	6. Brake hose union bolt	⌚(d) : 1.5 N·m (0.15 kgf-m, 1.10 lbf-ft)
1. Reservoir cap	7. Brake lever	⌚(e) : 1.2 N·m (0.12 kgf-m, 0.90 lbf-ft)
2. Plate	8. Brake light switch	SH : Apply silicone grease.
3. Diaphragm	⌚(a) : 10 N·m (1.0 kgf-m, 7.5 lbf-ft)	BF : Apply brake fluid.
4. Master cylinder	⌚(b) : 23 N·m (2.3 kgf-m, 17.0 lbf-ft)	⊗ : Do not reuse.

Front Brake Master Cylinder Assembly Removal and Installation

BENH28K24106012


Removal

- 1) Remove the right rear view mirror (1).
- 2) Disconnect the front brake light switch coupler (2).

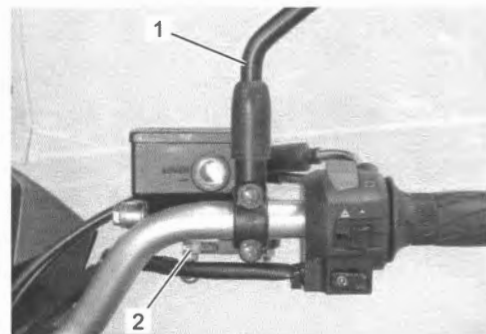

IH28K1410029-01

- 3) Drain brake fluid. ☞(Page 4A-11)
- 4) Place a clean rag underneath the brake hose union bolt (1) on the master cylinder to catch any spilt brake fluid.
- 5) Remove the brake hose union bolt (1) and disconnect the brake hose.
- 6) Remove the master cylinder assembly (2).

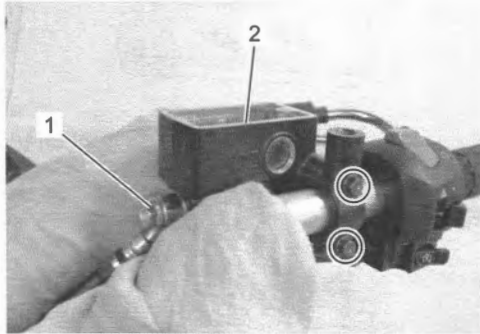

IH28K1410030-01

**Installation**

Install the front brake master cylinder in the reverse order of removal. Pay attention to the following points:


- When installing the master cylinder assembly (1) onto the handlebars (2), align the edge (3) of master cylinder with the punch mark (4) on the handlebars (2) and tighten the upper bolt (5) first.

**NOTE**


Face the up mark (6) upward.

**Tightening torque**

Front brake master cylinder holder bolt (a): 10 N·m (1.0 kgf·m, 7.5 lbf·ft)

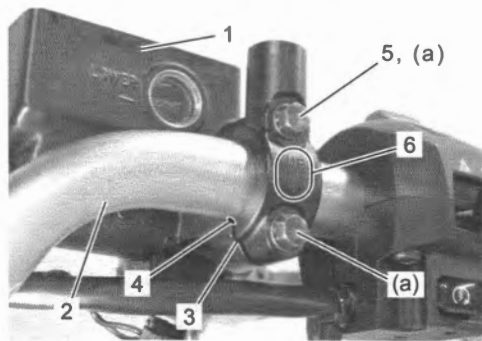

IH28K1410031-01

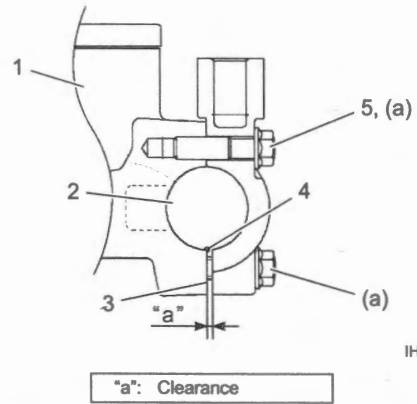


IH28K1410032-01

- Install the brake hose union bolt and new seal washers to brake hose.
- After the brake hose union has contacted the stopper (1), tighten the union bolt (2) to the specified torque.

**Tightening torque**

Brake hose union bolt (a): 23 N·m (2.3 kgf·m, 17.0 lbf·ft)

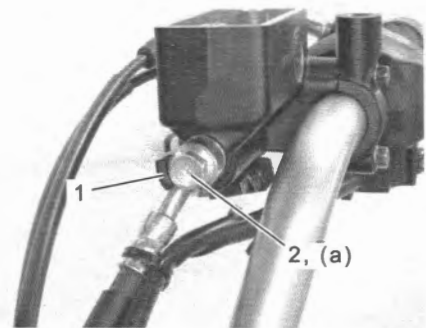

IH28K1410033-01

- Bleed air from the brake system. ☞(Page 4A-8)


**Front Brake Master Cylinder Assembly / Brake Lever Disassembly and Reassembly**

BENH28K24106013

Refer to "Front Brake Master Cylinder Assembly Removal and Installation" (Page 4A-13).

**Disassembly**

- 1) Remove the brake lever (1) and brake light switch (2).

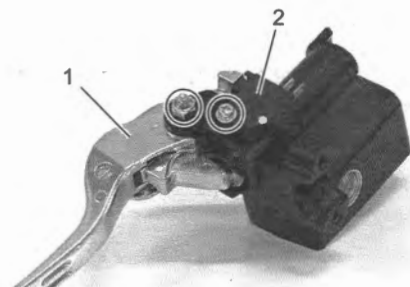


IH28K1410034-02

## 4A-15 Brake Control System and Diagnosis:


- 2) Remove the dust boot (1).
- 3) Remove the snap ring (2) with the special tool.

**Special tool**  
09900-06108

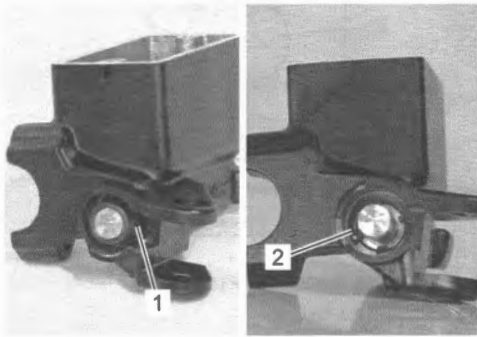

IH28K1410035-01

- 4) Remove the following parts from the master cylinder.
  - Piston/cup set (1)
  - Return spring (2)

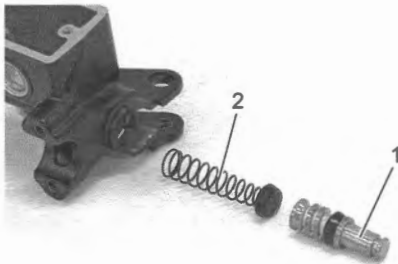

IH28K1410036-01

### Reassembly

Reassemble the front brake master cylinder and brake lever in the reverse order of disassembly. Pay attention to the following points:

#### **NOTICE**

- Wash the master cylinder components with new brake fluid before reassembly.
- Do not wipe the brake fluid off after washing the components.
- When washing the components, use the specified brake fluid. Never use different types of fluid or cleaning solvents such as gasoline, kerosine, etc.
- Apply brake fluid to the master cylinder bore and all of the master cylinder component to be inserted into the bore.


### Brake fluid (DOT 4)



I649G1410024-02

- Install the new snap ring (1) with the special tool.

**Special tool**  
09900-06108

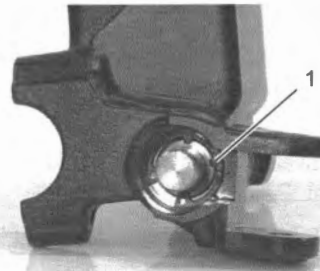


IH28K1410037-02

- When installing the brake light switch, align the projection (1) on the switch with the hole (2) in the master cylinder.
- Tighten the brake light switch screw (3) to the specified torque.

### Tightening torque


**Brake light switch screw (a): 1.2 N·m (0.12 kgf·m, 0.90 lbf·ft)**

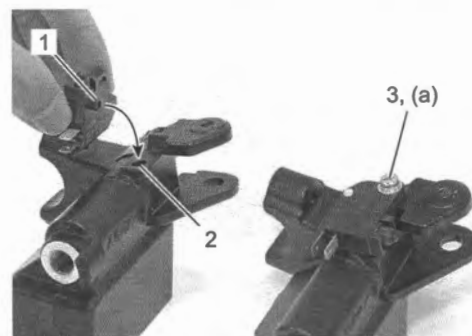

IH28K1410038-02

- Apply grease to the contact point between push rod and brake lever.
- Apply grease to the brake lever pivot bolt and brake lever sliding surfaces.

**"A": Grease 99000-25100 (SUZUKI SILICONE GREASE)**

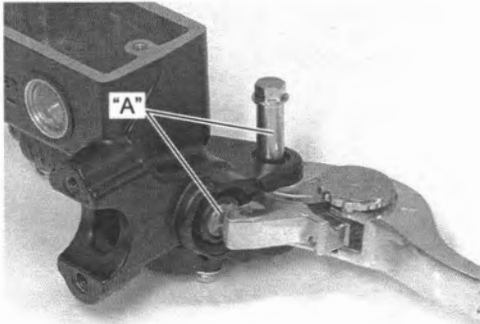


IH28K1410039-01

- Tighten the pivot bolt (1) and new lock-nut (2) to the specified torque.

**Tightening torque**

**Brake lever pivot bolt (a): 5.9 N·m (0.60 kgf-m, 4.35 lbf-ft)**

**Brake lever pivot bolt lock-nut (b): 5.9 N·m (0.60 kgf-m, 4.35 lbf-ft)**

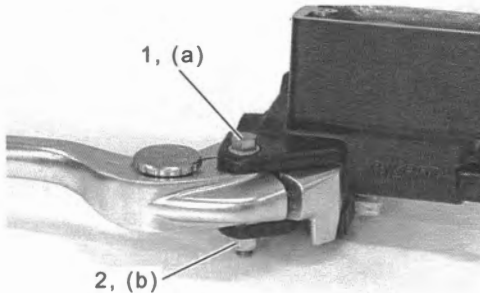

IH28K1410040-01


**Front Brake Master Cylinder Parts Inspection**

BENH28K24106014

Refer to "Front Brake Master Cylinder Assembly / Brake Lever Disassembly and Reassembly" (Page 4A-14).

**Master Cylinder**


Inspect the master cylinder bore (1) for any scratches corrosion or other damage. If any damage is found, replace it with a new one.

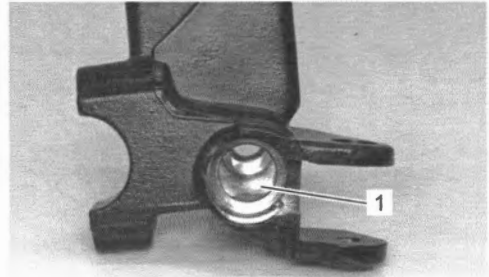

IH28K1410041-01

**Piston / Cup Set**


Inspect the piston/cup set surface for any scratches or other damage. Inspect the primary cup (1) and secondary cup (2) for wear or damage. If any damage is found, replace the piston/cup with new one.

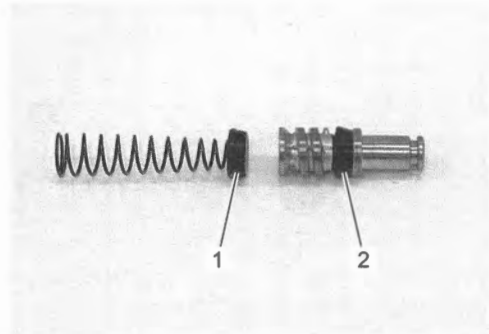

IH28K1410042-01

**Dust Boot**


Inspect the dust boot for wear or damage. If any defects are found, replace it with a new one.

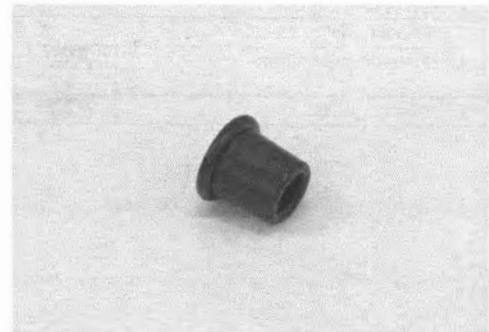

IH28K1410043-01

Rear Brake Master Cylinder Assembly Components

BENH28K24106015

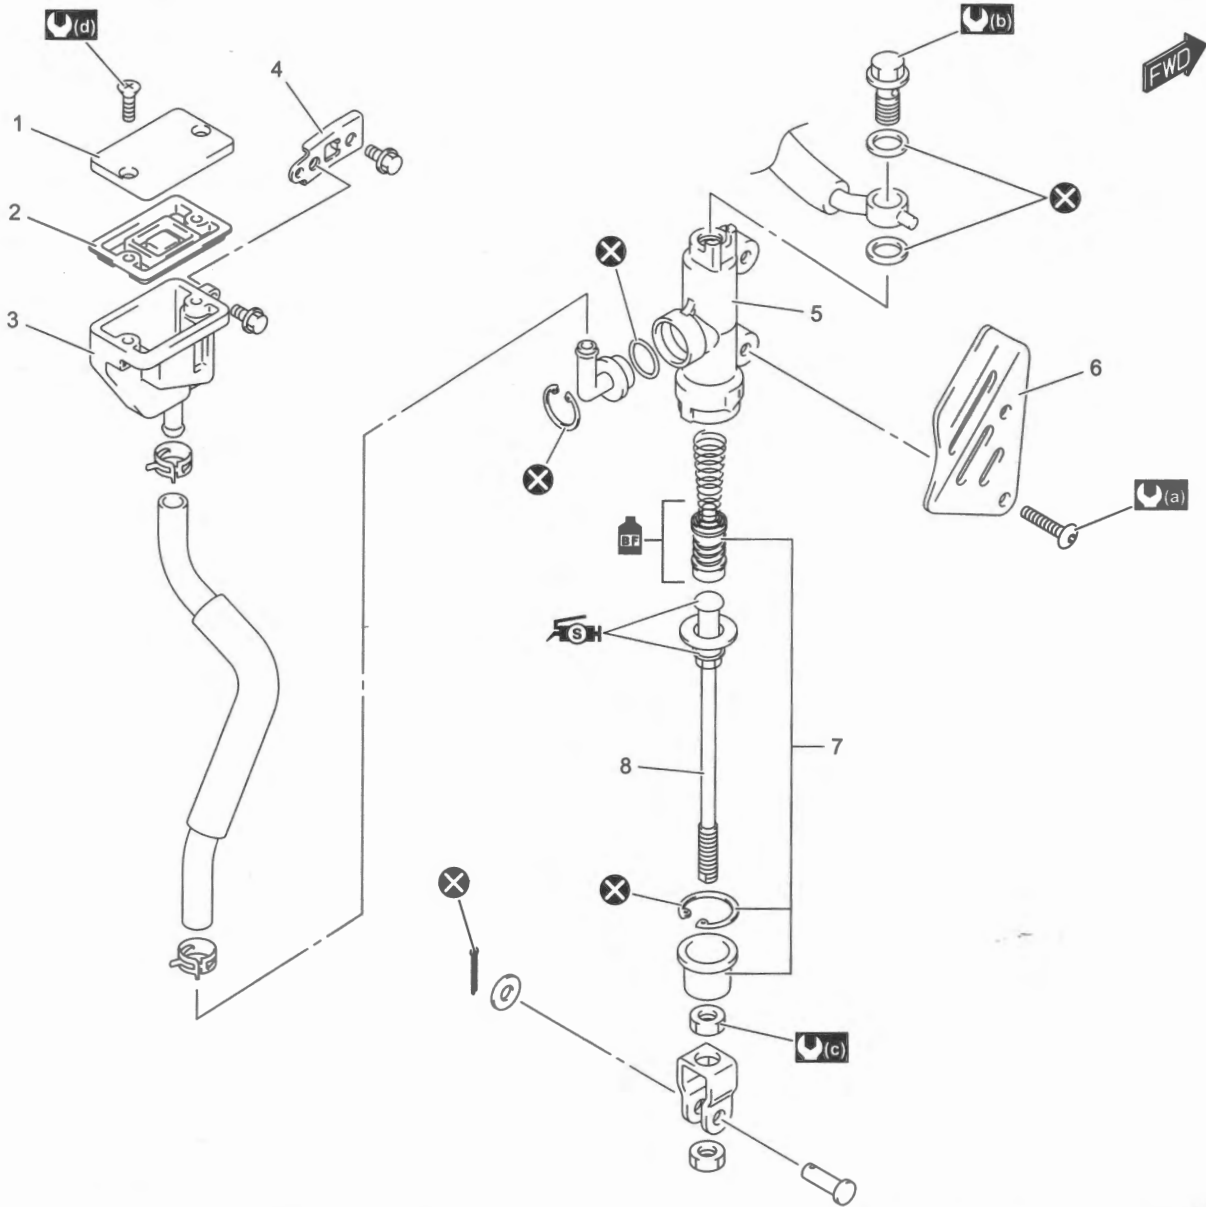

IH28K1410044-01

1. Reservoir cap	6. Master cylinder cover	: 18 N·m (1.8 kgf-m, 13.5 lbf-ft)
2. Diaphragm	7. Piston/cup set	: 1.2 N·m (0.12 kgf-m, 0.90 lbf-ft)
3. Reservoir tank	8. Push rod	: Apply silicone grease.
4. Reservoir tank bracket	: 10 N·m (1.0 kgf-m, 7.5 lbf-ft)	: Apply brake fluid.
5. Master cylinder	: 23 N·m (2.3 kgf-m, 17.0 lbf-ft)	: Do not reuse.




## Rear Brake Master Cylinder Assembly Removal and Installation

BENH28K24106016

### Removal

- 1) Remove the right frame cover. (Page 9D-21)
- 2) Drain brake fluid. (Page 4A-11)
- 3) Remove the reservoir tank bolt (1).

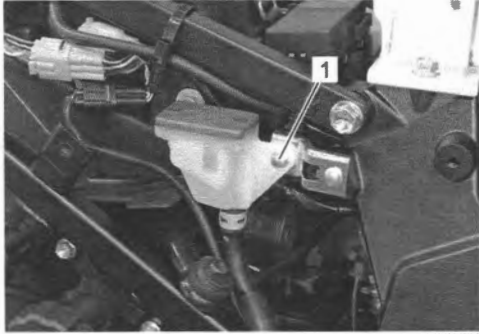


IH28K1410045-02

- 4) Place a clean rag underneath the brake hose union bolt (1) on the master cylinder to catch any spilt brake fluid.
- 5) Remove the brake hose union bolt (1) and disconnect the brake hose.



IH28K1410046-01

- 6) Loosen the lock-nut (1).
- 7) Remove the master cylinder mounting bolts (2).
- 8) Remove the master cylinder with the reservoir by turning the push rod (3).

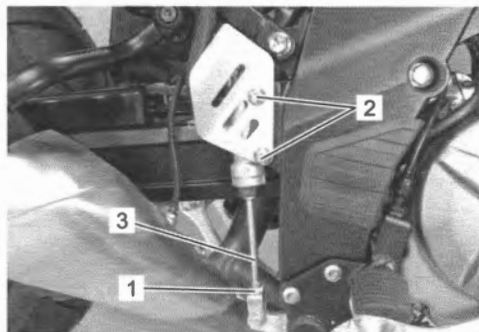


IH28K1410047-01

### Installation

- 1) Install the master cylinder (1) to the frame temporarily.
- 2) Install the brake hose union bolt and new seal washers to brake hose.
- 3) After setting the brake hose union to the stopper, tighten the union bolt (2) to the specified torque.

#### Tightening torque

Brake hose union bolt (a): 23 N·m (2.3 kgf-m, 17.0 lbf-ft)

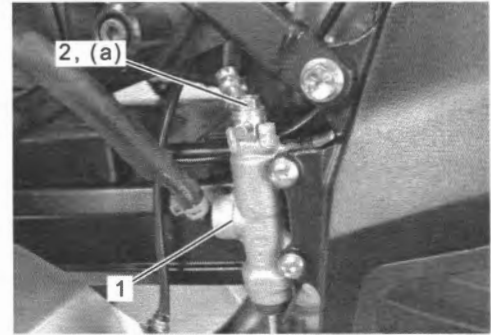

IH28K1410048-01

- 4) Remove the master cylinder (1) and then install it together with the cover (2).
- 5) Tighten the master cylinder mounting bolts (3) to the specified torque.


#### Tightening torque

Rear brake master cylinder mounting bolt (a): 10 N·m (1.0 kgf-m, 7.5 lbf-ft)

- 6) While holding the yoke (4), tighten the lock-nut (5) to the specified torque.

#### Tightening torque


Rear brake master cylinder rod lock-nut (b): 18 N·m (1.8 kgf-m, 13.5 lbf-ft)

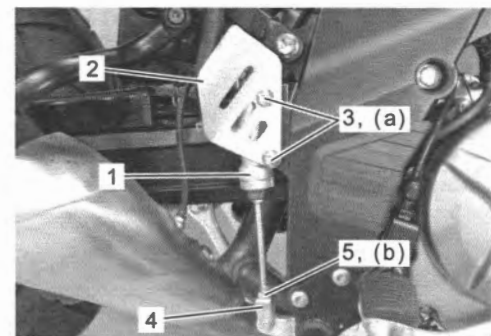

IH28K1410049-01

## 4A-19 Brake Control System and Diagnosis:

- 7) Set the reservoir tank aligning the projection (1) with the hole (2) of the bracket and tighten the bolt.

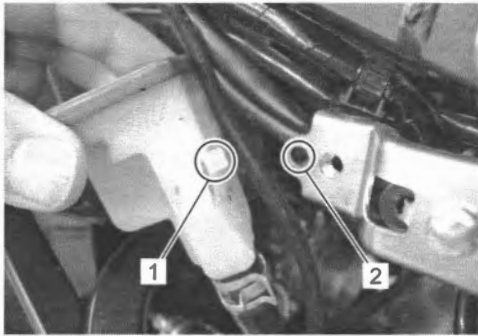

IH28K1410050-01

- 8) Bleed air from the system after installing the master cylinder. (Page 4A-8)  
9) Adjust the brake pedal height. (Page 4A-8)  
10) Install the right frame cover. (Page 9D-21)


### Rear Brake Master Cylinder Disassembly and Reassembly

BENH28K24106017

Refer to "Rear Brake Master Cylinder Assembly Removal and Installation" (Page 4A-18).

#### Disassembly


- 1) Disconnect the reservoir hose (1).  
2) Remove the lock-nut (2).

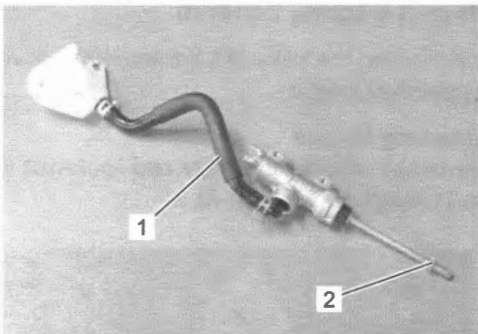

IH28K1410051-01


- 3) Remove the snap ring (1) with the special tool.

**Special tool**  
**09900-06108**

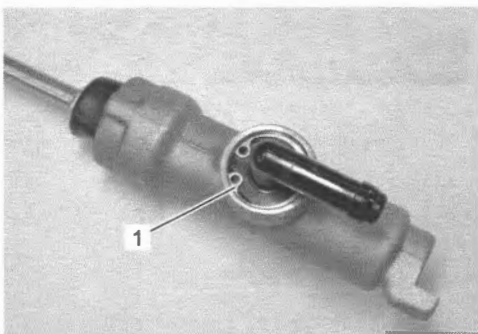


IH28K1410052-01

- 4) Remove the brake hose connector (1) and O-ring (2).

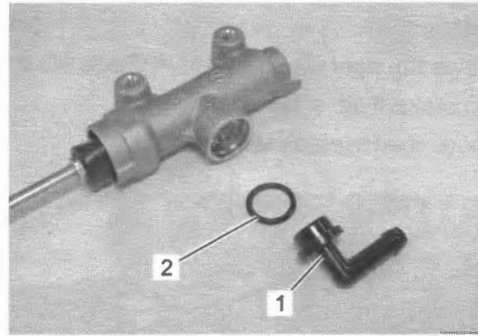

IH28K1410053-02


- 5) Remove the dust boot (1).

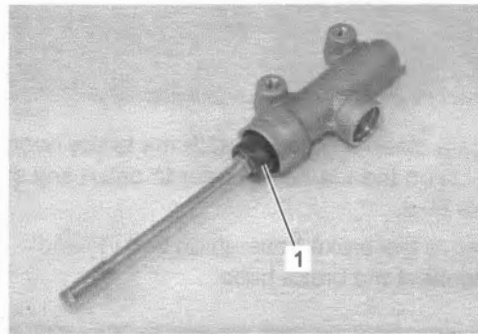

IH28K1410054-01

- 6) Remove the snap ring (1) with the special tool.


**Special tool**  
**09900-06108**

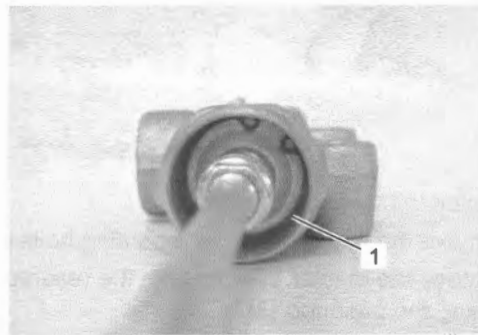

IH28K1410055-01

- 7) Remove the following parts from the master cylinder.

- Push rod (1)
- Piston/cup set (2)

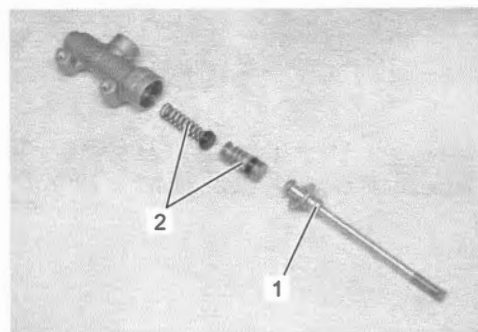

IH28K1410056-01

**Reassembly**

Reassemble the rear brake master cylinder in the reverse order of disassembly. Pay attention to the following points:

**NOTICE**

- Wash the master cylinder components with new brake fluid before reassembly.
- Do not wipe the brake fluid off after washing the components.
- When washing the components, use the specified brake fluid. Never use different types of fluid or cleaning solvents such as gasoline, kerosine, etc.
- Apply brake fluid to the master cylinder bore and all of the master cylinder component to be inserted into the bore.


**Brake fluid (DOT 4)**



IH14J1410051-02

- Apply grease to the push rod.


**"A": Grease 99000-25100 (SUZUKI SILICONE GREASE)**

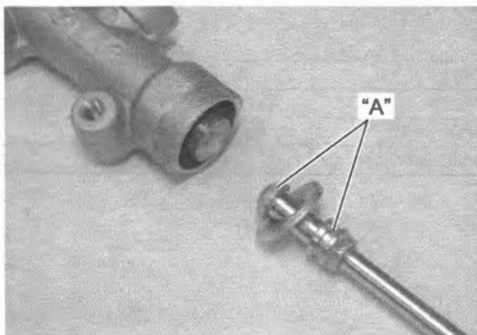

IH28K1410057-01


- Install the new snap ring (1) with the special tool.

**Special tool  
09900-06108**

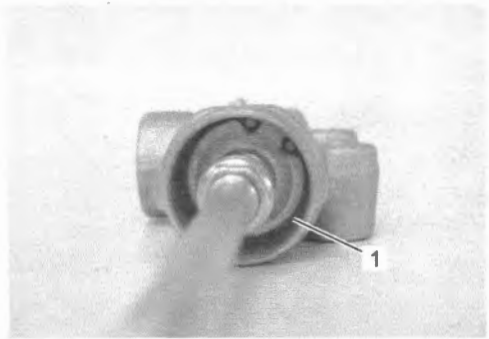


IH28K1410055-01

- Set the dust boot (1) to the master cylinder securely.

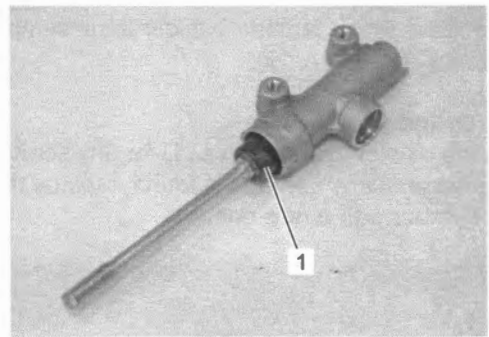

IH28K1410054-01


- Install the new O-ring (1) to the brake hose connector (2).

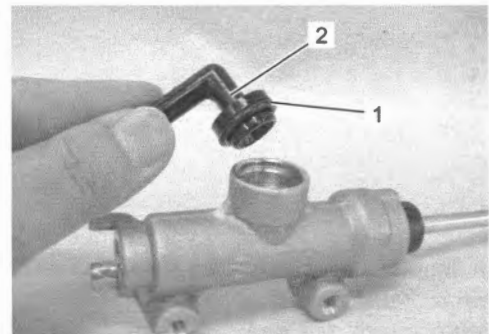

IH28K1410058-01

- Install the new snap ring (1) with the special tool.


**Special tool  
09900-06108**

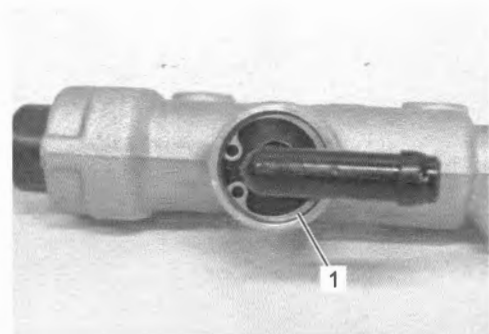

IH28K1410059-01

## 4A-21 Brake Control System and Diagnosis:

- Connect the reservoir hose (1) and set the clamps (2). Refer to "Rear Brake Hose Routing Diagram" (Page 4A-4).

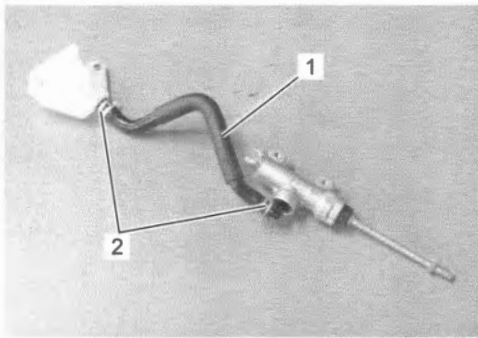

IH28K1410060-01


### Rear Brake Master Cylinder Parts Inspection

BENH28K24106018

Refer to "Rear Brake Master Cylinder Disassembly and Reassembly" (Page 4A-19).

#### Master Cylinder


Inspect the master cylinder bore (1) for any scratches or other damage. If any damage is found, replace the master cylinder with a new one.

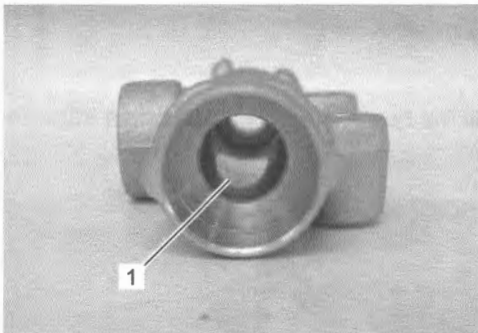

IH28K1410061-01

#### Piston / Cup Set


Inspect the piston surface for any scratches or other damage. Inspect the primary cup (1) and secondary cup (2) for wear or damage. If any damage is found, replace the piston/cup with new ones.

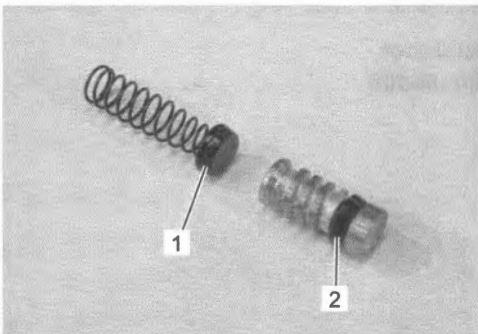

IH28K1410062-01

#### Dust Boot


Inspect the dust boot for wear or damage. If any defects are found, replace it with a new one.

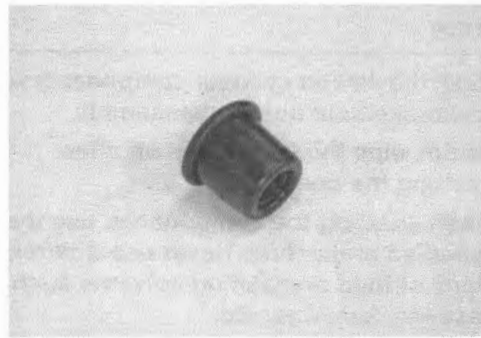

IH28K1410063-01

### Rear Brake Pedal Components

BENH28K24106019

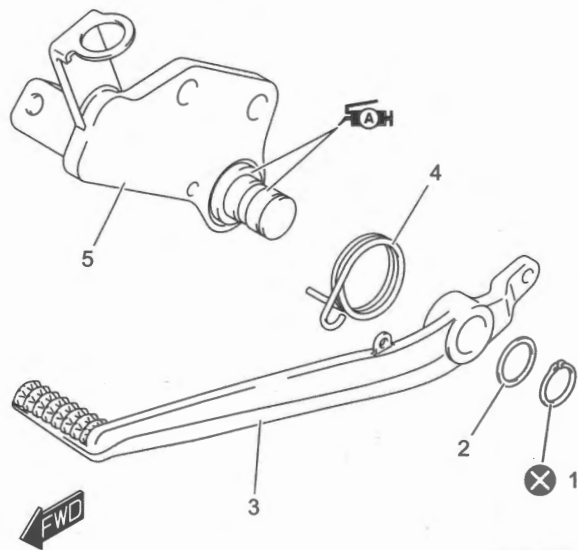

IH28K1410067-01


1. Circlip	5. Front footrest bracket (RH)
2. Washer	: Apply grease to the sliding surface.
3. Brake pedal	: Do not reuse.
4. Brake pedal spring	

## Rear Brake Pedal Removal and Installation

BENH28K24106020


### Removal

- 1) Remove the right frame cover. (Page 9D-21)
- 2) Disconnect the rear brake light switch lead wire coupler (1).

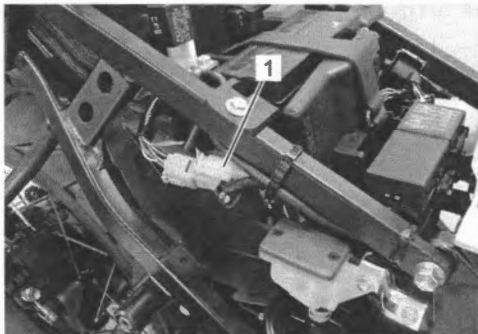


IH28K1410068-02

- 3) Loosen the lock-nut (1) and turning the push rod (2), separate the rod from the rear brake master cylinder yoke.
- 4) Remove the right front footrest assembly (3).

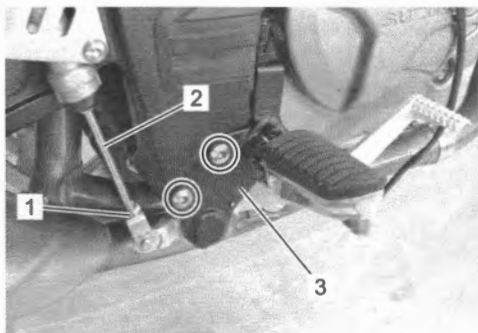

IH28K1410069-01


- 5) Remove the cotter pin (1) and rear brake master cylinder yoke (2).

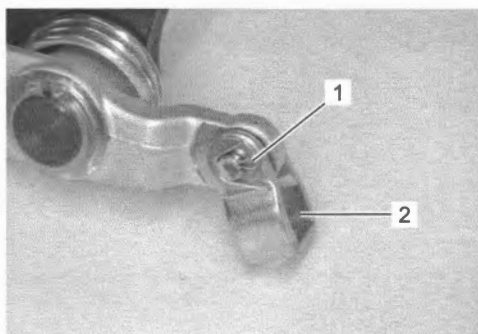

IH28K1410070-01


- 6) Remove the circlip (1), washer, brake pedal (2) and brake pedal spring (3).

**Special tool**  
09900-06107

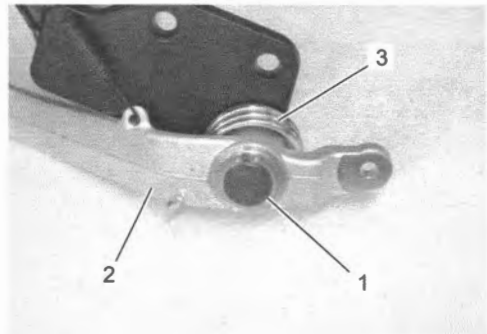

IH28K1410071-01

- 7) Remove the rear brake light switch (1), if necessary.

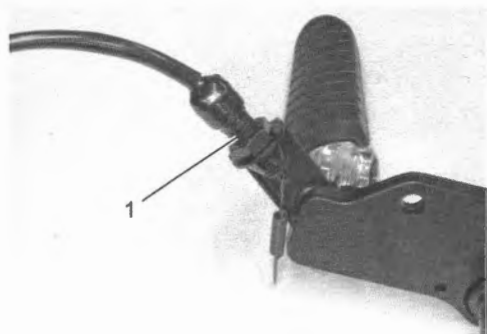


IH28K1410072-01

### Installation

Install the rear brake pedal in the reverse order of removal. Pay attention to the following points:

- Apply grease to the sliding surfaces of the front footrest and rear brake pedal.


**"A": Grease 99000-25011 (SUZUKI SUPER GREASE A)**

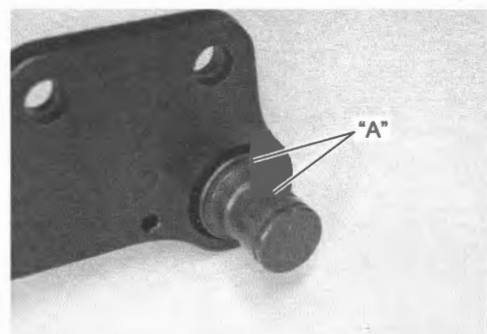

IH28K1410073-01


## 4A-23 Brake Control System and Diagnosis:

- Install the rear brake light switch spring (1) directing the hooks correctly. Refer to "Front Footrest Construction" in Section 9E (Page 9E-2).
- Hook the brake pedal spring ends (2) to the footrest bracket and brake pedal.

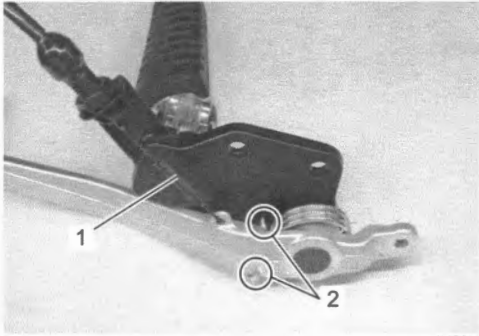


IH28K1410074-01

- Fit the new circlip (1) facing the sharp edge inward.

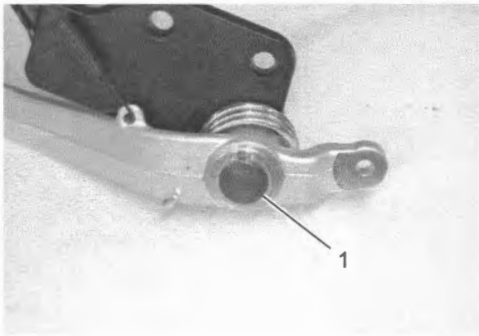

IH28K1410075-01

- Use new cotter pin (1).

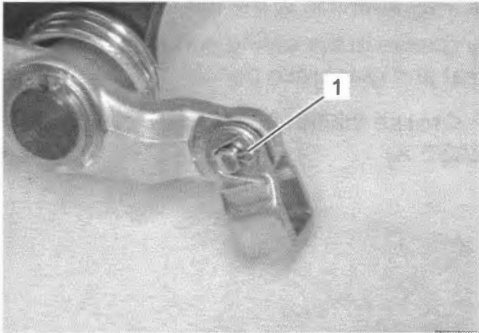


IH28K1410076-01

- Tighten the front footrest bracket bolts (1) and lock-nut (2) to the specified torque.

### Tightening torque

Front footrest bracket bolt (a): 26 N·m (2.7 kgf-m, 19.5 lbf-ft)

Rear brake master cylinder rod lock-nut (b): 18 N·m (1.8 kgf-m, 13.5 lbf-ft)

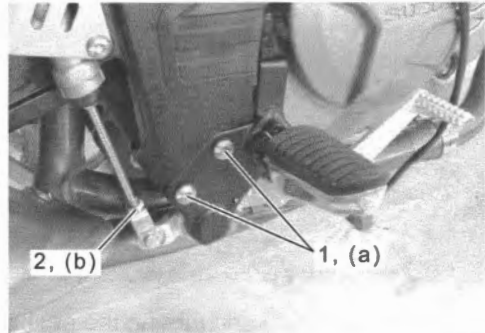

IH28K1410077-01


- Adjust the brake pedal height. ⚙️ (Page 4A-8)

### Rear Brake Pedal Inspection

BENH28K24106021

Refer to "Rear Brake Pedal Removal and Installation" (Page 4A-22).

Inspect the brake pedal for wear and damage. If any defect is found, replace rear brake pedal with new ones.

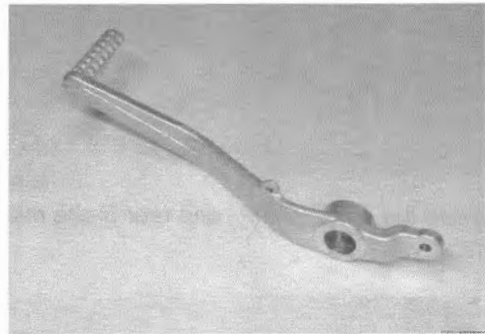

IH28K1410078-01

## Specifications

### Tightening Torque Specifications

BENH28K24107001

Fastening part	Tightening torque			Note
	N-m	kgf-m	lbf-ft	
Rear brake master cylinder rod lock-nut	18	1.8	13.5	☞(Page 4A-8) / ☞(Page 4A-18) / ☞(Page 4A-23)
Front brake air bleeder valve	7.5	0.76	5.55	☞(Page 4A-9)
Front reservoir cap screw	1.5	0.15	1.10	☞(Page 4A-9)
Rear brake air bleeder valve	6.0	0.61	4.45	☞(Page 4A-10)
Rear reservoir cap screw	1.2	0.12	0.90	☞(Page 4A-10)
Front brake master cylinder holder bolt	10	1.0	7.5	☞(Page 4A-14)
Brake hose union bolt	23	2.3	17.0	☞(Page 4A-14) / ☞(Page 4A-18)
Brake light switch screw	1.2	0.12	0.90	☞(Page 4A-15)
Brake lever pivot bolt	5.9	0.60	4.35	☞(Page 4A-16)
Brake lever pivot bolt lock-nut	5.9	0.60	4.35	☞(Page 4A-16)
Rear brake master cylinder mounting bolt	10	1.0	7.5	☞(Page 4A-18)
Front footrest bracket bolt	26	2.7	19.5	☞(Page 4A-23)

#### Reference:

For the tightening torques of fasteners not specified in this page, refer to:

"Front Brake Hose Routing Diagram" (Page 4A-1)

"Rear Brake Hose Routing Diagram" (Page 4A-4)

"Front Brake Master Cylinder Assembly / Brake Lever Components" (Page 4A-13)

"Rear Brake Master Cylinder Assembly Components" (Page 4A-17)

"Fasteners Information" in Section 0C (Page 0C-11)

## Special Tools and Equipment

### Recommended Service Material

BENH28K24108001

Material	SUZUKI recommended product or Specification		Note
Brake fluid	DOT 4	—	☞(Page 4A-7) / ☞(Page 4A-9) / ☞(Page 4A-11) / ☞(Page 4A-12) / ☞(Page 4A-15) / ☞(Page 4A-20)
Grease	SUZUKI SUPER GREASE A	P/No.: 99000-25011	☞(Page 4A-22)
	SUZUKI SILICONE GREASE	P/No.: 99000-25100	☞(Page 4A-16) / ☞(Page 4A-20)

#### NOTE

Required service material(s) is also described in:

“Front Brake Master Cylinder Assembly / Brake Lever Components” (Page 4A-13)



“Rear Brake Master Cylinder Assembly Components” (Page 4A-17)

“Rear Brake Pedal Components” (Page 4A-21)

### Special Tool

BENH28K24108002

<p>09900-06107 Snap ring pliers (External) ☞(Page 4A-22)</p>	<p>09900-06108 Snap ring pliers (Internal) ☞(Page 4A-15) / ☞(Page 4A-15) / ☞(Page 4A-19) / ☞(Page 4A-19) / ☞(Page 4A-20) / ☞(Page 4A-20)</p>
--	--

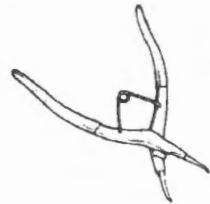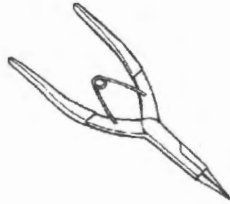




# Front Brakes

## Repair Instructions

### Front Brake Components

BENH28K24206001

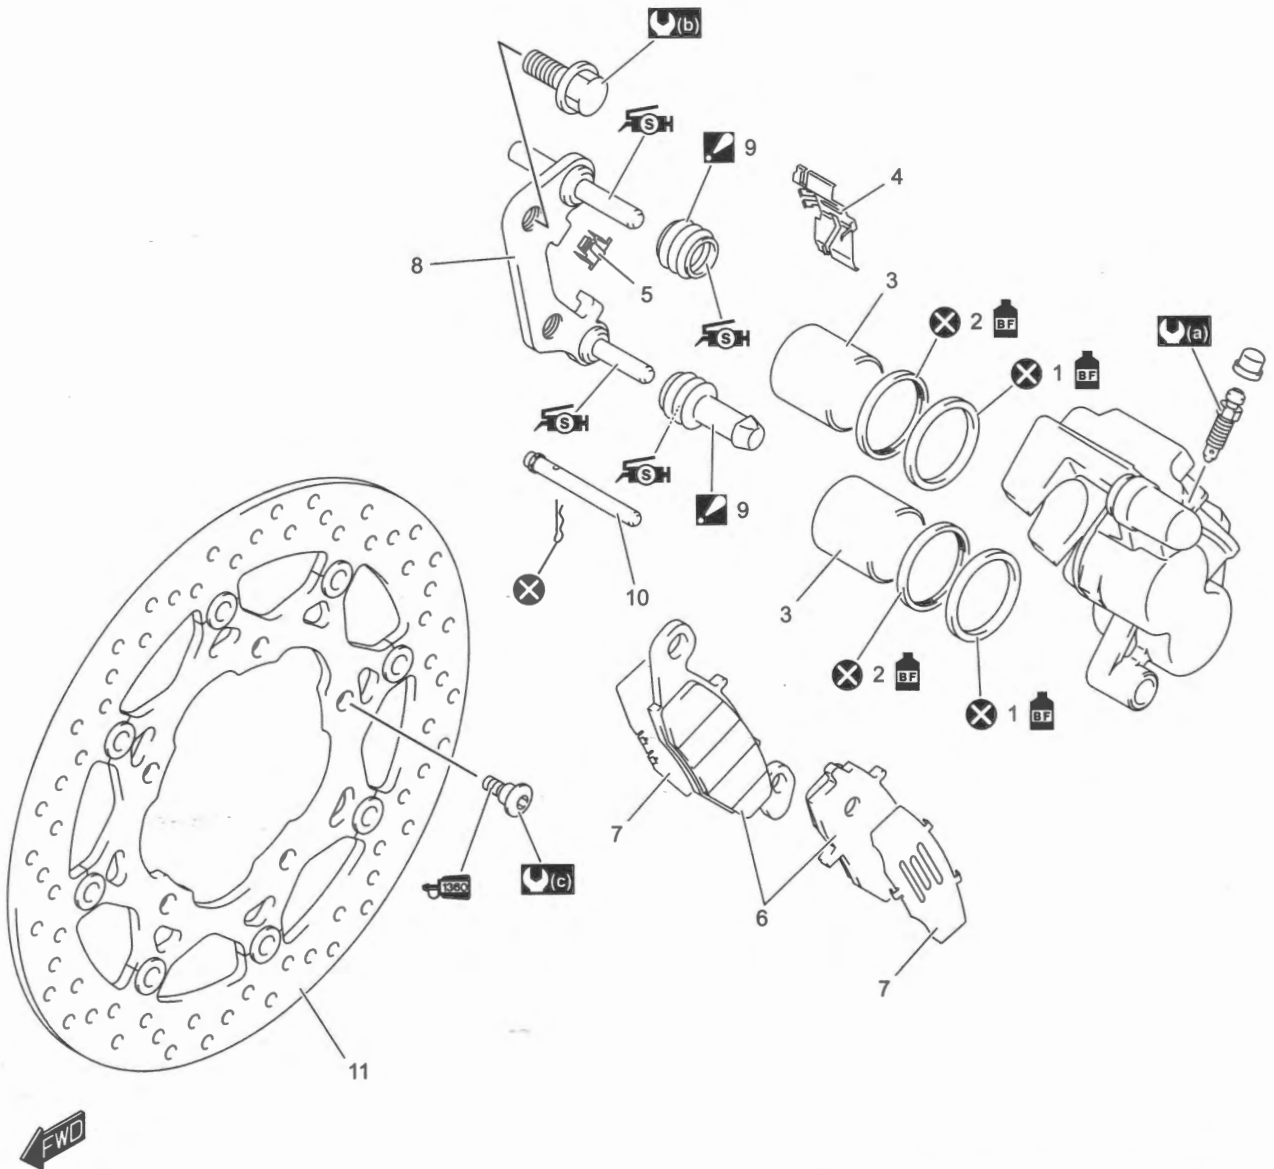


IH28K1420001-02

1. Piston seal	7. Shim	<b>U(b)</b> : 39 N-m (4.0 kgf-m, 29.0 lbf-ft)
2. Dust seal	8. Caliper holder	<b>U(c)</b> : 23 N-m (2.3 kgf-m, 17.0 lbf-ft)
3. Piston	<b>SH</b> 9. Rubber boot : Apply silicone grease to the rubber boot inside.	<b>SH</b> : Apply grease.
4. Brake pad spring	10. Pad mounting pin	<b>L&amp;L</b> : Apply thread lock to the thread part.
5. Pad guide	11. Front brake disc	<b>BF</b> : Apply brake fluid.
6. Brake pad set	<b>U(a)</b> : 7.5 N-m (0.76 kgf-m, 5.55 lbf-ft)	<b>X</b> : Do not reuse.

### Front Brake Pad Inspection

BENH28K24206002

The extent of brake pads (1) wear can be checked by observing the grooved limit line "a" on the pads. When the wear exceeds the grooved limit line, replace the pads with new ones. (Page 4B-2)

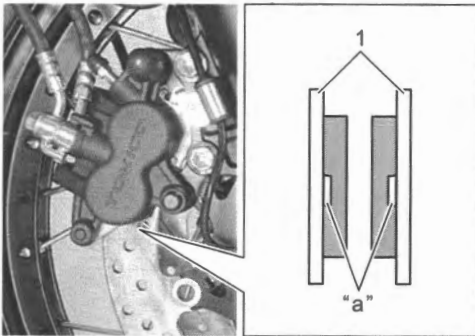

IH28K1420002-01

### Front Brake Pad Replacement

BENH28K24206003

#### NOTICE

The right and left brake pads are installed symmetrically and therefore the removal procedure for one side is the same as that for the other side.

#### NOTE

After replacing the brake pads, pump the brake lever several times to check for proper brake operation and then check the brake fluid level.

- 1) Remove the brake caliper (1).




IH28K1420003-01

- 2) Remove the clip (1).
- 3) Remove the pad mounting pin (2) and brake pads (3).

#### NOTE

Do not operate the brake lever while removing the brake pads.

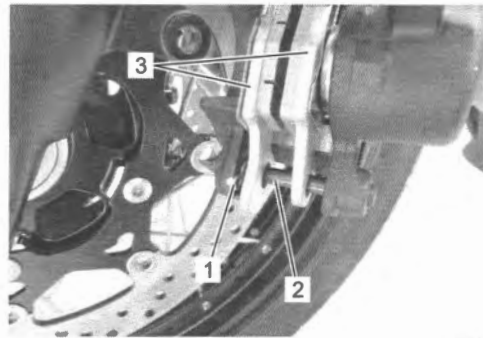


IH28K1420004-01

- 4) Clean up the caliper especially around the caliper pistons.
- 5) Assemble the new brake pads (1) and shims (2).

#### NOTE

Replace the brake pads as a set.

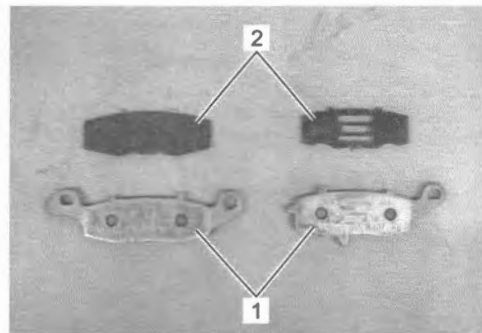


IH28K1420005-01

- 6) Install the new brake pads in the following procedures.

#### NOTE


Pushing back the caliper pistons into the caliper will facilitate installation of the brake pads. At the time, observe the reservoir level not to exceed the upper level.

- a) Install the outer pad with the detentes (1) of pad fitted to the detentes (2) on the caliper holder.

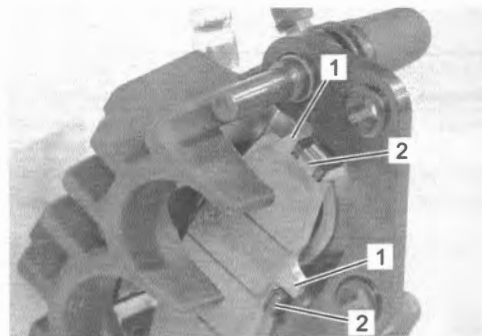


IH28K1420006-01

- b) Install the inner pad by aligning the projection (1) of the inner pad with plate (2) of the pad spring.

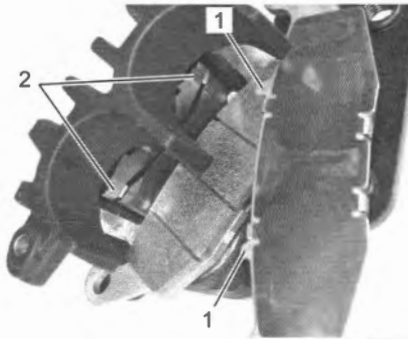

IH28K1420007-01

- c) Install the pad mounting pin (1).  
 d) Install the new clip (2) securely.

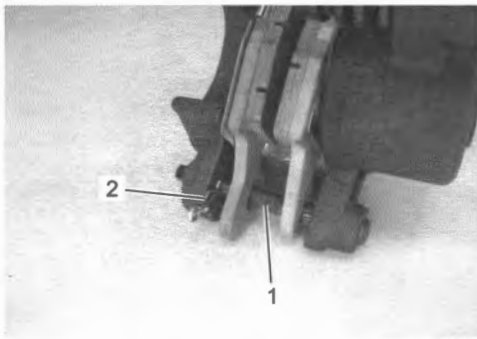


IH28K1420008-01

- 7) Install the brake caliper (1).  
 8) Tighten the brake caliper mounting bolts (2) to the specified torque.

**Tightening torque**

**Front brake caliper mounting bolt (a): 39 N·m (4.0 kgf-m, 29.0 lbf-ft)**

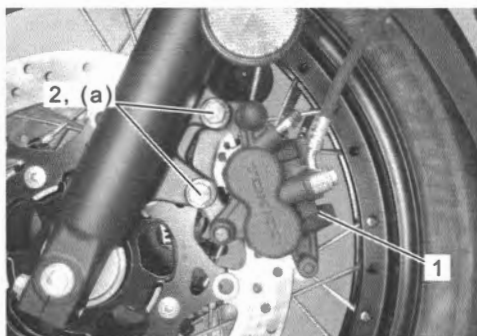

IH28K1420009-01

**Front Brake Caliper Removal and Installation**


BENH28K24206004

**NOTE**

The right and left calipers are installed symmetrically and therefore the removal procedure for one side is the same as that for the other side.

**Removal**

- 1) Drain brake fluid. (Page 4A-11)
- 2) Place a clean rag underneath the union bolt (1) on the brake caliper to catch any spilt brake fluid.
- 3) Remove the brake hose from the caliper by removing the union bolt (1) and catch the brake fluid in a suitable receptacle.

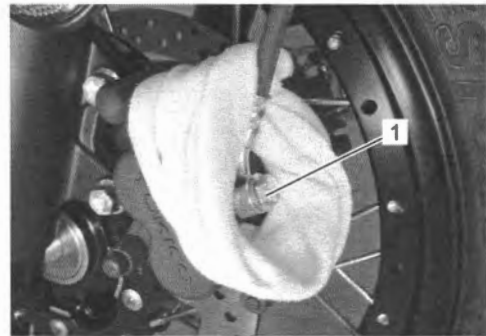

IH28K1420010-01

- 4) Remove the brake caliper (1).



IH28K1420011-01

## 4B-4 Front Brakes:

### Installation

- 1) Install the brake caliper (1).
- 2) Tighten caliper mounting bolts (2) to the specified torque.


#### Tightening torque

**Front brake caliper mounting bolt (a): 39 N·m (4.0 kgf-m, 29.0 lbf-ft)**

- 3) Install the brake hose union bolt (3) and new seal washers to brake hose.
- 4) After the brake hose union has contacted the stopper, tighten the union bolt (3) to the specified torque.

#### Tightening torque

**Brake hose union bolt (b): 23 N·m (2.3 kgf-m, 17.0 lbf-ft)**

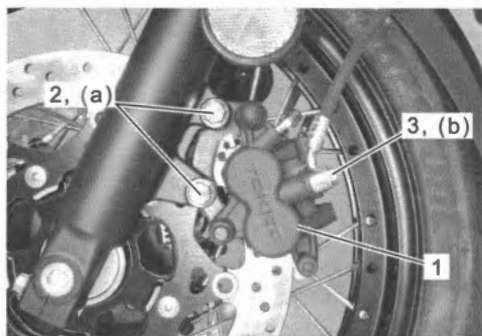

IH28K1420012-02

- 5) Bleed air from the brake system after installing the caliper. (Page 4A-8)
- 6) Check the brake fluid leakage referring to "Brake Hose Inspection" in Section 4A (Page 4A-7) and brake operation.

### Front Brake Caliper Disassembly and Reassembly

BENH28K24206005

Refer to "Front Brake Caliper Removal and Installation" (Page 4B-3).

#### ▲ CAUTION


Take care not to damage piston and caliper cylinder of front brake caliper.

#### NOTE

The right and left calipers are installed symmetrically and therefore the disassembly procedure for one side is the same as that for the other side.


### Disassembly

- 1) Remove the brake pads (1). (Page 4B-2)

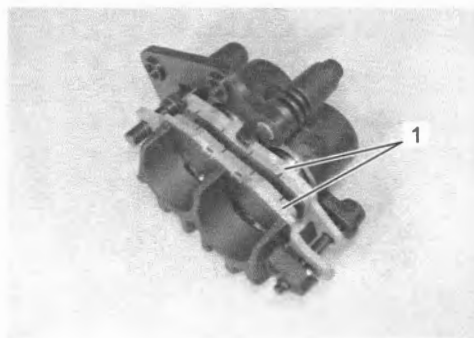


IH28K1420013-01

- 2) Remove the caliper holder (1).

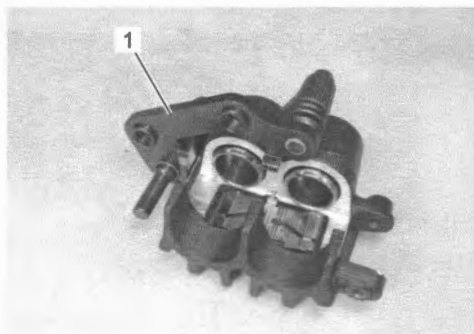

IH28K1420014-01

- 3) Remove the rubber boots (1) and pad spring (2).

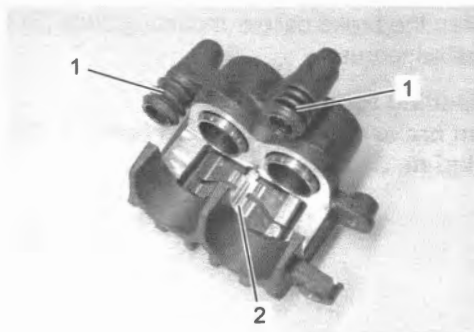


IH28K1420015-01

- 4) Remove the caliper pistons applying compressed air gradually from the hole for the brake hose.


**▲ WARNING**

Do not apply highly compressed air to the piston as it is. Place a cloth to prevent brake piston from jumping-out. Gradually apply compressed air. Do not place your fingers in front of brake piston while applying compressed air.

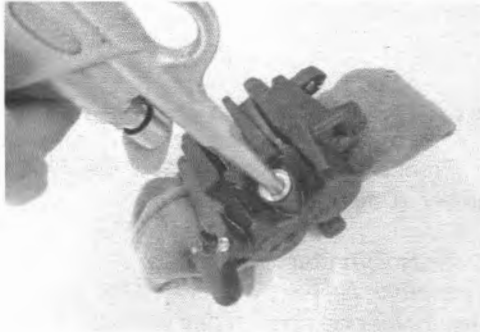


IH28K1420016-01

- 5) Remove the brake air bleeder valve (1).

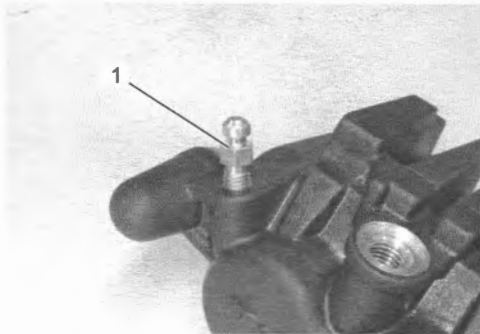


IH28K1420017-01

- 6) Remove the dust seals (1) and piston seals (2).

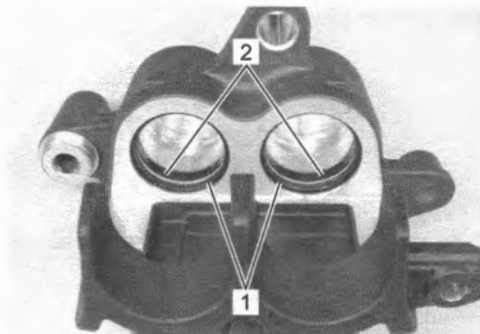

IH28K1420018-01

- 7) Remove the pad guide (1).

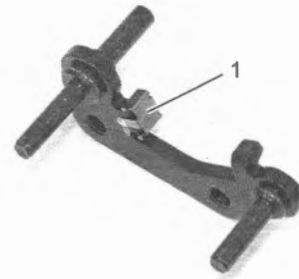

IH18K1420017-01

**Reassembly**

Reassemble the brake caliper in the reverse order of disassembly. Pay attention to the following points:

- Wash the caliper bores and pistons with specified brake fluid. Particularly wash the dust seal grooves and piston seal grooves.

**NOTICE**

- Wash the caliper components with fresh brake fluid before reassembly. Never use cleaning solvent or gasoline to wash them.
- Do not wipe the brake fluid off after washing the components.
- When washing the components, use the specified brake fluid. Never use different types of fluid or cleaning solvent such as gasoline, kerosine or the others.

**Brake fluid (DOT 4)**




I649G1420012-02

## 4B-6 Front Brakes:

- Apply the brake fluid to new piston seals (1) and new dust seals (2).

### Brake fluid (DOT 4)

- Install the piston seals (1) and dust seals (2).

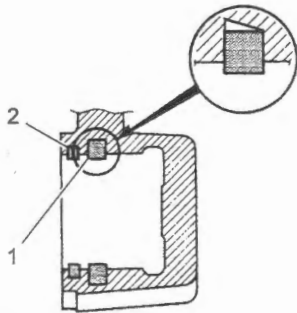


IH28K1420019-01

- Install the brake air bleeder valve (1) and tighten it to the specified torque.

### Tightening torque


Front brake air bleeder valve (a): 7.5 N·m (0.76 kgf-m, 5.55 lbf-ft)

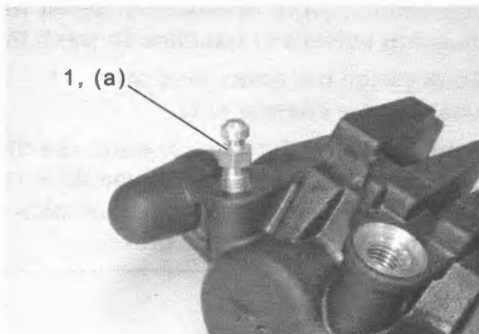

IH28K1420021-01


- Apply grease to the rubber boots inside (1) and caliper holder sliding pins (2).

“A”: Grease 99000–25100 (SUZUKI SILICONE GREASE)

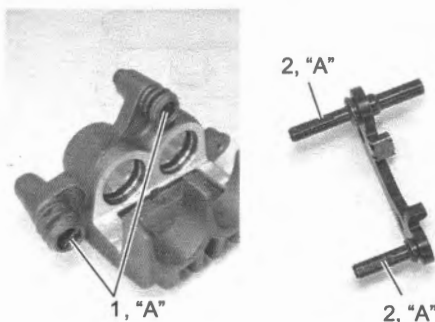

IH28K1420022-04

- Set the rubber boots (1) onto the sliding pins securely.

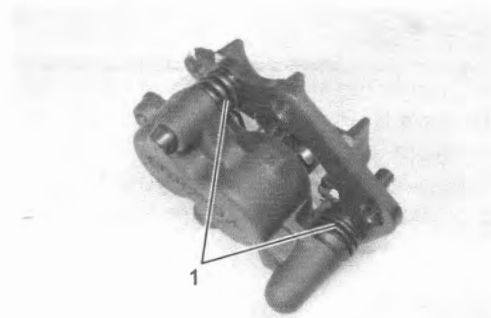

IH28K1420023-01


### Front Brake Caliper Parts Inspection

BENH28K24206006

Refer to “Front Brake Caliper Disassembly and Reassembly” (Page 4B-4).

### Brake Caliper Cylinder


Inspect the brake caliper cylinder wall for nicks, scratches or other damage. If any damage is found, replace the caliper with a new one.

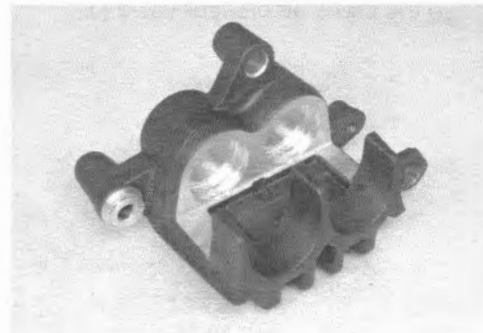

IH28K1420024-01

### Brake Caliper Piston


Inspect the brake caliper pistons surface for any scratches or other damage. If any damage is found, replace them with new ones.

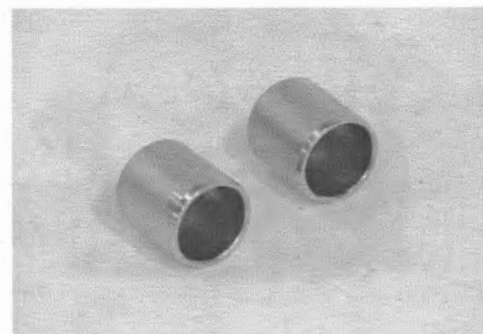

I944H1420020-01

**Brake Caliper Holder Sliding Pin**

Inspect the brake caliper holder sliding pins for wear and other damage. If any damage is found, replace the brake caliper holder with a new one.

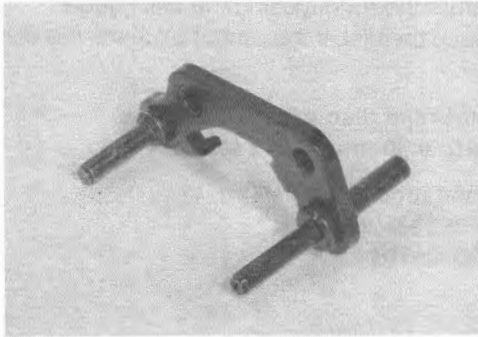

I944H1420021-01

**Brake Pad Spring and Pad Guide**

Inspect the brake pad spring and pad guide for damage and excessive bend. If any defects are found, replace them with new ones.



IH28K1420025-01

**Rubber Boot**

Inspect the rubber boots for damage. If any damages are found, replace them with the new ones.



I944H1420023-01

**Front Brake Disc Removal and Installation**

BENH28K24206007

Refer to "Front Wheel Assembly Removal and Installation" in Section 2D (Page 2D-6).

**Removal**

- 1) Remove the front brake disc (1).



IH28K1420026-01

**Installation**

- 1) Make sure that the brake disc is clean and free of any grease.
- 2) Install the front brake disc.

**NOTE**


The stamped mark (1) on the brake disc should face to the outside.

- 3) Apply thread lock to the front brake disc bolts and tighten them to the specified torque.

**"A": Thread lock cement 99000-32130 (THREAD LOCK CEMENT 1360)**

**Tightening torque**

Front brake disc bolt (a): 23 N·m (2.3 kgf-m, 17.0 lbf-ft)

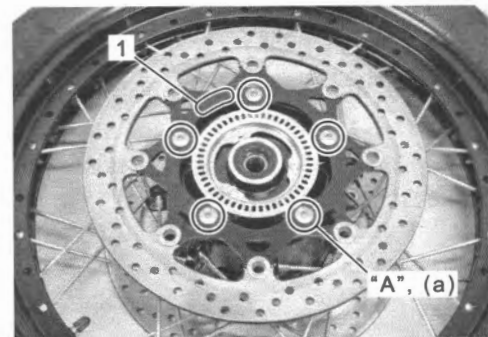

IH28K1420027-01

## 4B-8 Front Brakes:

### Front Brake Disc Inspection

BENH28K24206008

#### Brake Disc Thickness

Check the brake disc for damage or cracks and measure the thickness using the micrometer.


Replace the brake disc if the thickness is less than the service limit or if defect is found.

#### Front brake disc thickness

[Limit]: 4.5 mm (0.18 in)

#### Special tool

(A): 09912-66310

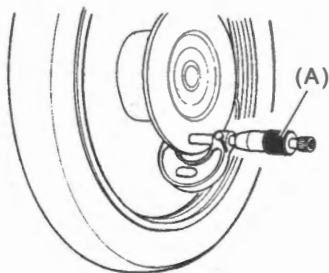

IH28K1420028-01

### Brake Disc Runout

- 1) Dismount the front brake pads.  
Refer to "Front Brake Pad Replacement" (Page 4B-2).
- 2) Measure the runout using the dial gauge.  
Replace the disc if the runout exceeds the service limit.


#### Front brake disc runout

[Limit]: 0.30 mm (0.012 in)

#### Special tool

(A): 09900-20607

09900-20701

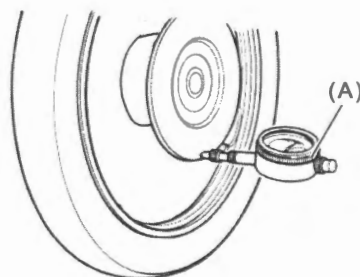

IH28K1420029-01

- 3) Remount the front brake pads.  
Refer to "Front Brake Pad Replacement" (Page 4B-2).

## Specifications

### Tightening Torque Specifications

BENH28K24207001

Fastening part	Tightening torque			Note
	N·m	kgf·m	lbf·ft	
Front brake caliper mounting bolt	39	4.0	29.0	☞(Page 4B-3) / ☞(Page 4B-4)
Brake hose union bolt	23	2.3	17.0	☞(Page 4B-4)
Front brake air bleeder valve	7.5	0.76	5.55	☞(Page 4B-6)
Front brake disc bolt	23	2.3	17.0	☞(Page 4B-7)

#### Reference:

For the tightening torques of fasteners not specified in this page, refer to:

"Front Brake Components" (Page 4B-1)

"Fasteners Information" in Section 0C (Page 0C-11)



## Special Tools and Equipment

### Recommended Service Material

BENH28K24208001



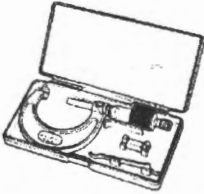
Material	SUZUKI recommended product or Specification		Note
Brake fluid	DOT 4	—	☞ (Page 4B-5) / ☞ (Page 4B-6)
Grease	SUZUKI SILICONE GREASE	P/No.: 99000-25100	☞ (Page 4B-6)
Thread lock cement	THREAD LOCK CEMENT 1360	P/No.: 99000-32130	☞ (Page 4B-7)

#### NOTE

Required service material(s) is also described in:  
 "Front Brake Components" (Page 4B-1)

### Special Tool

BENH28K24208002

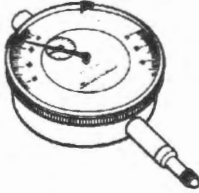
09900-20607 Dial gauge (10 x 0.01 mm) ☞ (Page 4B-8)	09900-20701 Dial gauge chuck ☞ (Page 4B-8)
	
09912-66310 Micrometer (0 - 25 mm) ☞ (Page 4B-8)	
	

# Rear Brakes

## Repair Instructions

### Rear Brake Components

BENH28K24306001

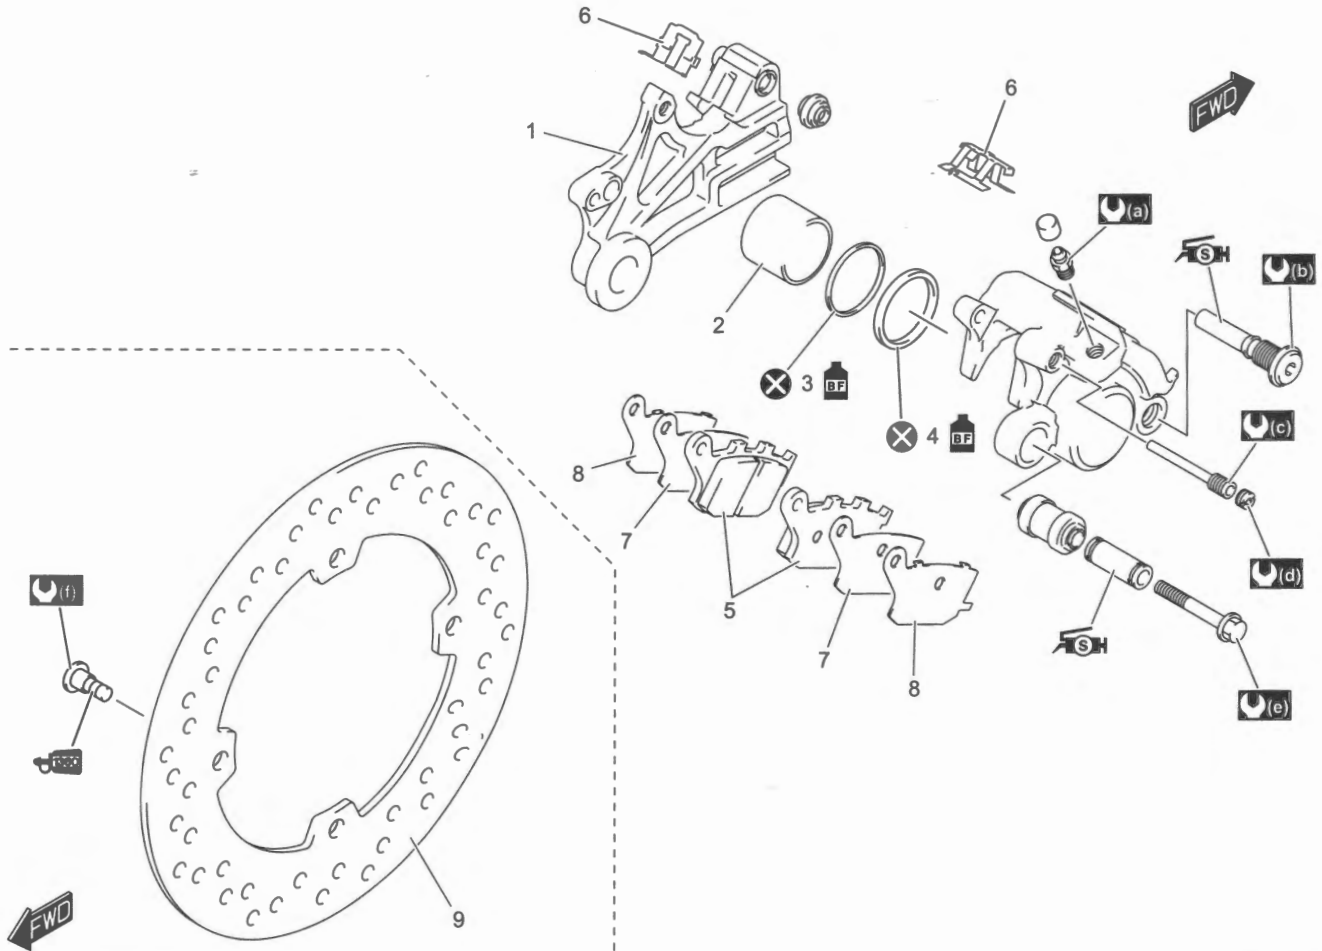


IH28K1430002-02

1. Caliper bracket	8. Shim	(f) : 23 N-m (2.3 kgf-m, 17.0 lbf-ft)
2. Piston	9. Rear brake disc	SH : Apply silicone grease to the sliding surface.
3. Dust seal	(a) : 6.0 N-m (0.61 kgf-m, 4.45 lbf-ft)	1350 : Apply thread lock to the thread part.
4. Piston seal	(b) : 27 N-m (2.8 kgf-m, 20.0 lbf-ft)	BF : Apply brake fluid.
5. Brake pad set	(c) : 17 N-m (1.7 kgf-m, 12.5 lbf-ft)	X : Do not reuse.
6. Brake pad spring	(d) : 2.5 N-m (0.25 kgf-m, 1.85 lbf-ft)	
7. Insulator	(e) : 22 N-m (2.2 kgf-m, 16.5 lbf-ft)	

## Rear Brake Pad Inspection

BENH28K24306002

The extent of brake pads (1) wear can be checked by observing the grooved limit line "a" on the pads. When the wear exceeds the grooved limit line, replace the pads with new ones. (Page 4C-2)

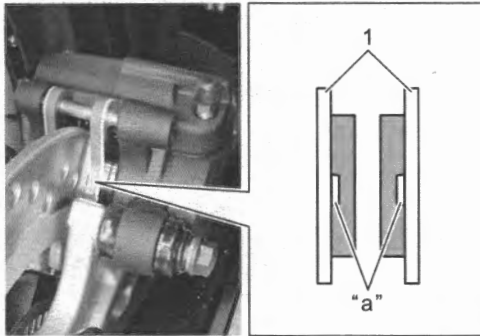

IH28K1430003-01

## Rear Brake Pad Replacement

BENH28K24306003

### NOTE


After replacing the brake pads, pump the brake pedal several times to check for proper brake operation and then check the brake fluid level.

- 1) Remove the pin plug (1).



IH28K1430004-01

- 2) Remove the pad mounting pin (1).
- 3) Remove the caliper mounting bolt (2).

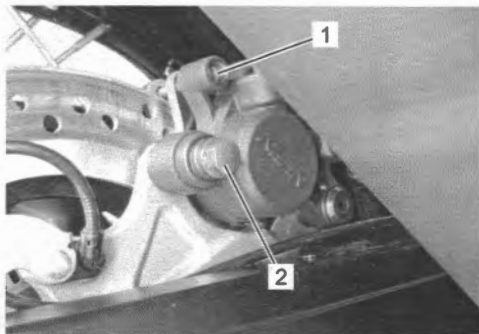


IH28K1430005-01

- 4) Remove the brake pads (1) with the rear caliper pivoted up.

### NOTE

Do not operate the brake pedal while removing the brake pads.

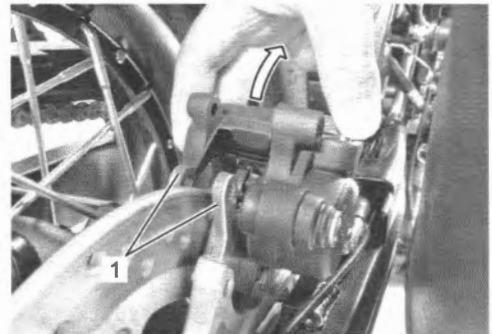


IH28K1430006-01

- 5) Clean up the caliper especially around the caliper piston.
- 6) Assemble the new brake pads (1), insulators (2) and shims (3).

### NOTE

Replace the brake pads as a set.

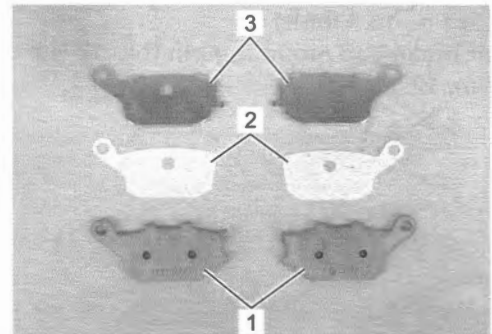


IH28K1430007-01

7) Install the new brake pads.

**NOTE**

- Pushing back the caliper piston into the caliper will facilitate installation of the brake pads. At the time, observe the reservoir level not to exceed the upper level.
- Check the pads end (1) for proper fit to the brake pad spring.

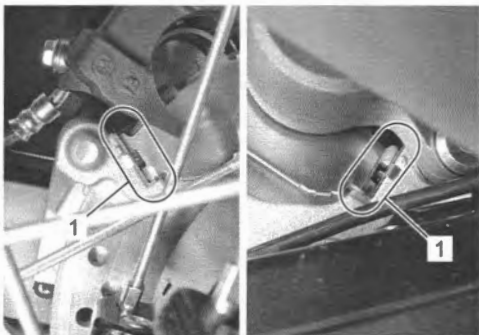


IH28K1430008-01

8) Tighten the caliper mounting bolt (1) and pad mounting pin (2) to the specified torque.

**Tightening torque**

Rear brake caliper mounting bolt (a): 22 N·m (2.2 kgf-m, 16.5 lbf-ft)

Rear brake pad mounting pin (b): 17 N·m (1.7 kgf-m, 12.5 lbf-ft)

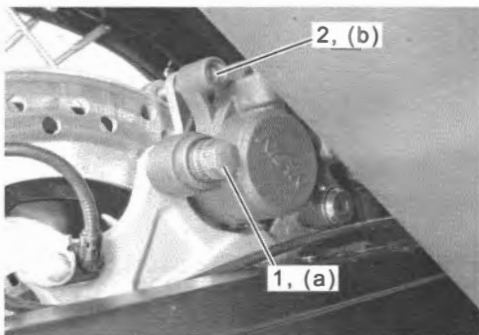


IH28K1430009-01

9) Tighten the pin plug (1) to the specified torque.

**Tightening torque**

Rear brake pad pin plug (a): 2.5 N·m (0.25 kgf-m, 1.85 lbf-ft)

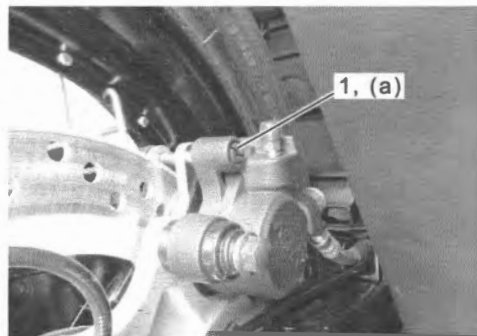


IH28K1430010-01

**Rear Brake Caliper Removal and Installation**

BENH28K24306004

**Removal**

- 1) Drain brake fluid. ☞(Page 4A-11)
- 2) Remove the brake pads. ☞(Page 4C-2)
- 3) Place a rag underneath the union bolt on the brake caliper to catch any spilt brake fluid.
- 4) Remove the brake hose from the caliper by removing the union bolt (1) and catch the brake fluid in a suitable receptacle.

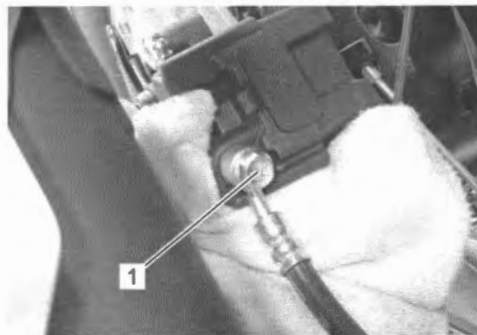

IH28K1430011-01

5) Pivot the caliper up and remove the caliper (1) from the caliper bracket.




IH28K1430012-01

**Installation**


- 1) Apply grease to the sliding pin (1) and sleeve (2).

**"A": Grease 99000-25100 (SUZUKI SILICONE GREASE)**

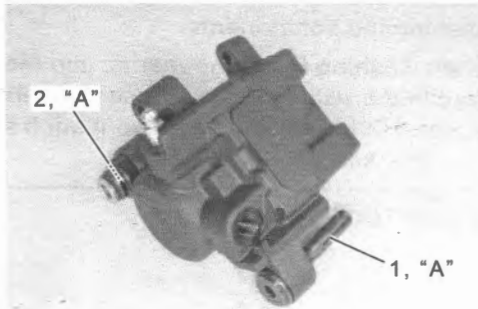

IH28K1430013-01

- 2) Install the caliper to the caliper bracket.
- 3) Set the boot (1) onto the sliding pin securely.

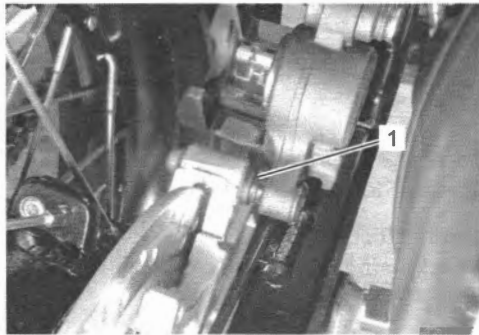


IH28K1430014-01

- 4) Install the brake pads. ☞ (Page 4C-2)
- 5) Install the brake hose union bolt (1) and new seal washers to brake hose.
- 6) After the brake hose union has contacted the stopper, tighten the union bolt (1) to the specified torque.

**Tightening torque**

**Brake hose union bolt (a): 23 N·m (2.3 kgf-m, 17.0 lbf-ft)**

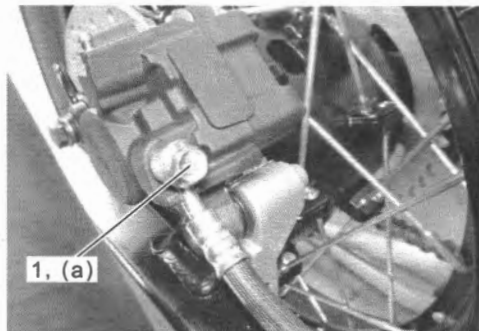

IH28K1430015-01

- 7) Bleed air from the brake system after installing the caliper. ☞ (Page 4A-8)
- 8) Check the brake fluid leakage referring to "Brake Hose Inspection" in Section 4A (Page 4A-7) and brake operation.

**Rear Brake Caliper Disassembly and Reassembly**

BENH28K24306005


Refer to "Rear Brake Caliper Removal and Installation" (Page 4C-3).

**▲ CAUTION**

**Take care not to damage piston and caliper cylinder of rear brake caliper.**


**Disassembly**

- 1) Remove the pad spring (1) and boot (2).

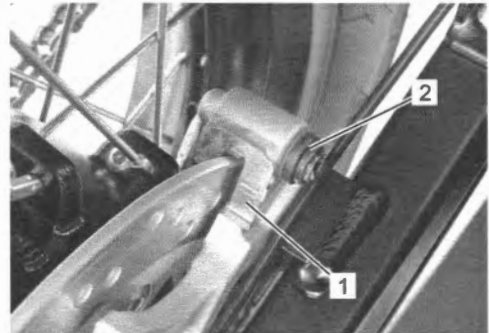

IH28K1430016-01

- 2) Remove the pad spring (1).
- 3) Remove the sleeve (2) and boot (3).
- 4) Remove the sliding pin (4).

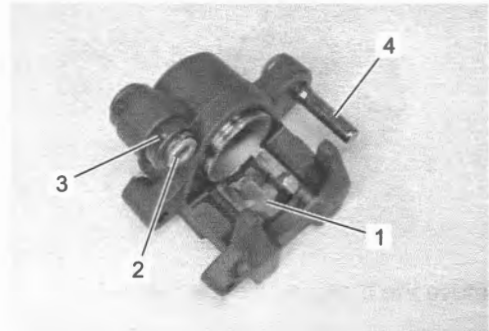


IH28K1430017-01

## 4C-5 Rear Brakes:

- 5) Remove the caliper piston applying compressed air gradually from the hole for the brake hose.


### ▲ WARNING

Do not apply highly compressed air to the piston as it is. Place a cloth to prevent brake piston from jumping-out. Gradually apply compressed air. Do not place your fingers in front of brake piston while applying compressed air.

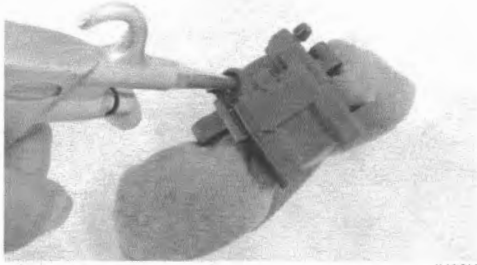


IH28K1430018-01

- 6) Remove the dust seal (1) and piston seal (2).

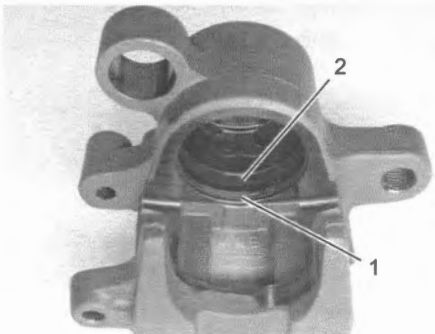

IH28K1430019-01

- 7) Remove the brake air bleeder valve (1).

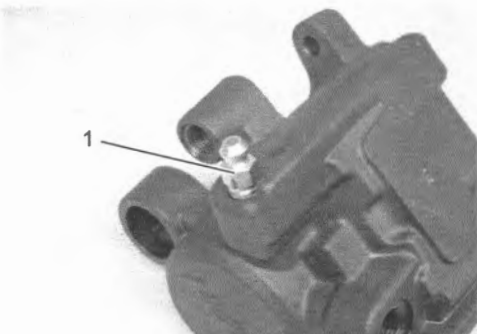

IH28K1430020-01

### Reassembly


Reassemble the caliper in the reverse order of disassembly. Pay attention to the following points:

- Wash the caliper bore and piston with specified brake fluid. Particularly wash the dust seal groove and piston seal groove.

### NOTICE

- Wash the caliper components with fresh brake fluid before reassembly. Never use cleaning solvent or gasoline to wash them.
- Do not wipe the brake fluid off after washing the components.
- When washing the components, use the specified brake fluid. Never use different types of fluid or cleaning solvent such as gasoline, kerosine or the others.

### Brake fluid (DOT 4)

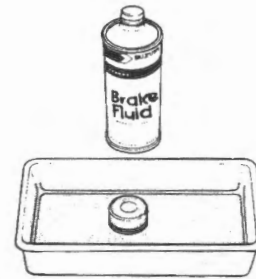


I649G1430018-02

- Install the brake air bleeder valve (1) and tighten it to the specified torque.

### Tightening torque

Rear brake air bleeder valve (a): 6.0 N·m (0.61 kgf-m, 4.45 lbf-ft)

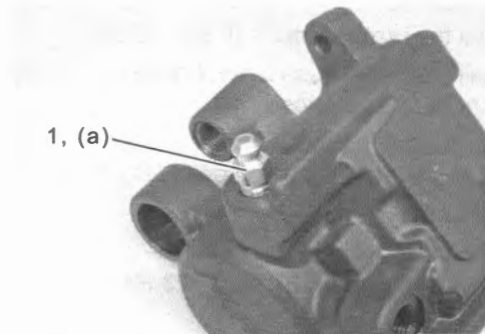


IH28K1430021-01

- Apply the brake fluid to new piston seal (1) and new dust seal (2).

### Brake fluid (DOT 4)

- Install the piston seal (1) and dust seal (2).

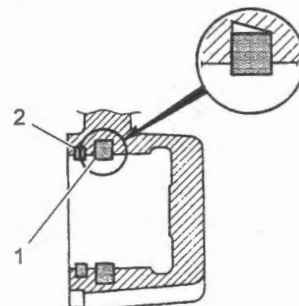


IH28K1430022-01

- Tighten the sliding pin (1) to the specified torque.


#### Tightening torque

Rear brake caliper sliding pin (a): 27 N·m (2.8 kgf·m, 20.0 lbf·ft)

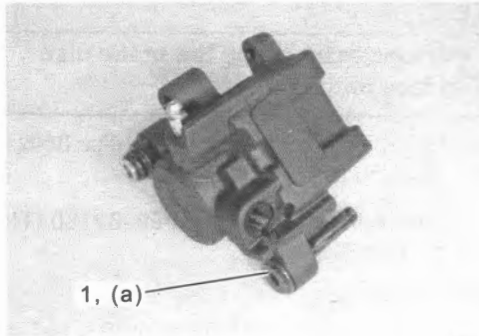

IH28K1430024-01

- Apply grease to the sleeve (1) and sliding pin (2).  
**"A": Grease 99000-25100 (SUZUKI SILICONE GREASE)**
- Install the sleeve (1) into the boot.
- Set the boot to the sleeve securely.

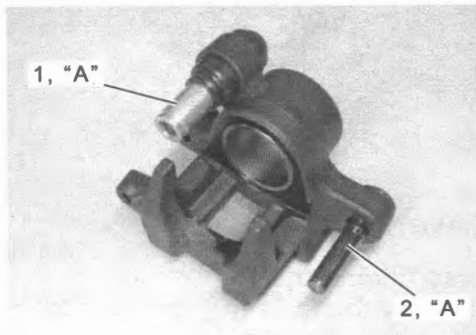

IH28K1430025-01


#### Rear Brake Caliper Parts Inspection

BENH28K24306006

Refer to "Rear Brake Caliper Disassembly and Reassembly" (Page 4C-4).

#### Brake Caliper Cylinder


Inspect the brake caliper cylinder wall for nicks, scratches or other damage. If any damage is found, replace the caliper with a new one.

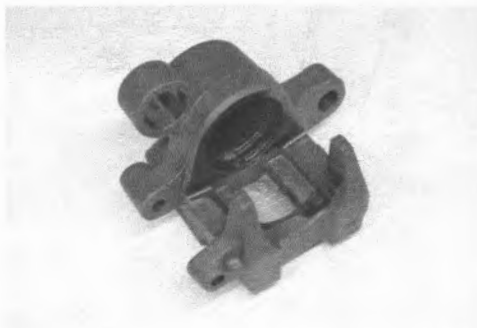

IH28K1430026-01

#### Brake Caliper Piston


Inspect the brake caliper piston surface for any scratches or other damage. If any defects are found, replace the piston with a new one.

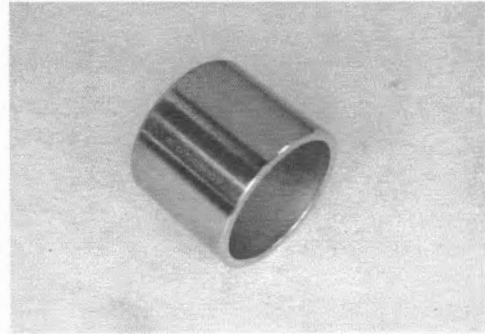

IH28K1430027-01

#### Brake Pad Mounting Pin

Inspect the brake pad mounting pin for wear and other damage. If any damage is found, replace the brake pad mounting pin with a new one.

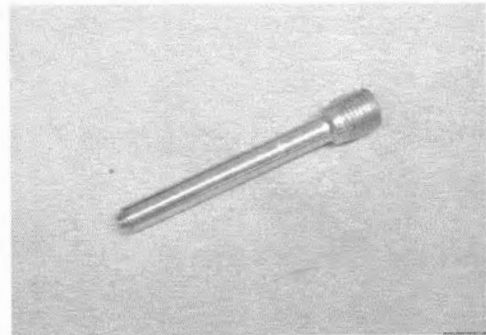

IH28K1430028-01

#### Boot and Sleeve

Inspect the boots and sleeve for damage and wear. If any defects are found, replace them with new ones.




IH28K1430029-01

## 4C-7 Rear Brakes:

### Brake Pad Spring

Inspect the brake pad springs for damage and excessive bend. If any defects are found, replace them with new ones.

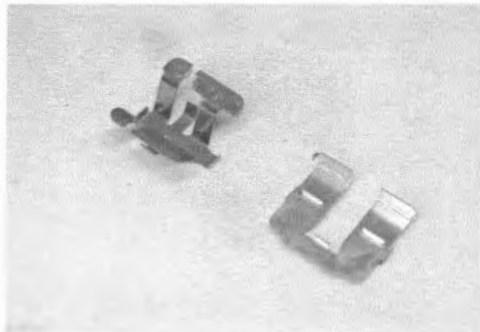

IH28K1430030-01

### Brake Caliper Sliding Pin

Inspect the brake caliper sliding pin for wear and other damage. If any damage is found, replace the brake caliper sliding pin with a new one.



IH28K1430031-01


### Rear Brake Disc Removal and Installation

BENH28K24306007

Refer to "Rear Wheel Assembly Removal and Installation" in Section 2D (Page 2D-14).

#### Removal

- 1) Remove the rear brake disc (1).

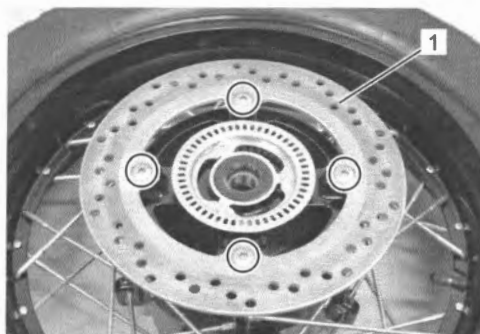

IH28K1430032-01

#### Installation

- 1) Make sure that the brake disc (1) is clean and free of any grease.
- 2) Install the rear brake disc (1).

#### NOTE


The stamped mark (2) on the brake disc should face to the outside.

- 3) Apply thread lock to the rear brake disc bolts and tighten them to the specified torque.

"A": Thread lock cement 99000-32130 (THREAD LOCK CEMENT 1360)

#### Tightening torque

Rear brake disc bolt (a): 23 N·m (2.3 kgf-m, 17.0 lbf-ft)

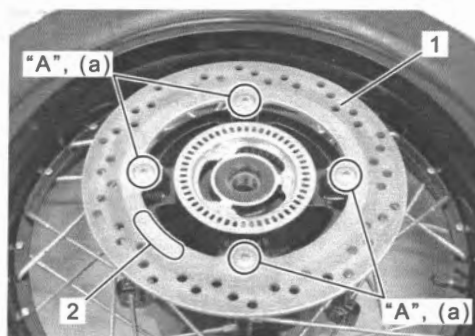

IH28K1430033-01

### Rear Brake Disc Inspection

BENH28K24306008

#### Brake Disc Thickness

Check the brake disc for damage or cracks and measure the thickness using the micrometer.


Replace the brake disc if the thickness is less than the service limit or if defect is found.

#### Rear brake disc thickness

[Limit]: 4.5 mm (0.18 in)

#### Special tool

(A): 09912-66310

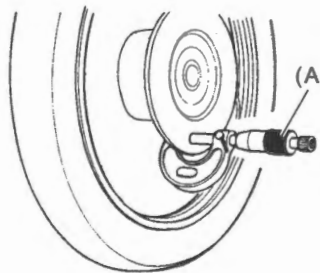


IH28K1430034-01



**Brake Disc Runout**

- 1) Dismount the rear brake pads.  
Refer to "Rear Brake Pad Replacement" (Page 4C-2).
- 2) Measure the runout using the dial gauge.  
Replace the disc if the runout exceeds the service limit.

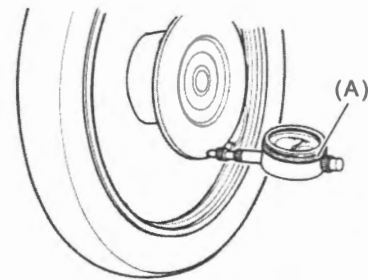**Rear brake disc runout****[Limit]: 0.30 mm (0.012 in)****Special tool****(A): 09900-20607****09900-20701**

IH28K1430035-01

- 3) Remount the rear brake pads.  
Refer to "Rear Brake Pad Replacement" (Page 4C-2).

**Specifications****Tightening Torque Specifications**

BENH28K24307001

Fastening part	Tightening torque			Note
	N·m	kgf·m	lbf·ft	
Rear brake caliper mounting bolt	22	2.2	16.5	☞ (Page 4C-3)
Rear brake pad mounting pin	17	1.7	12.5	☞ (Page 4C-3)
Rear brake pad pin plug	2.5	0.25	1.85	☞ (Page 4C-3)
Brake hose union bolt	23	2.3	17.0	☞ (Page 4C-4)
Rear brake air bleeder valve	6.0	0.61	4.45	☞ (Page 4C-5)
Rear brake caliper sliding pin	27	2.8	20.0	☞ (Page 4C-6)
Rear brake disc bolt	23	2.3	17.0	☞ (Page 4C-7)

**Reference:**

For the tightening torques of fasteners not specified in this page, refer to:

"Rear Brake Components" (Page 4C-1)

"Fasteners Information" in Section 0C (Page 0C-11)

## Special Tools and Equipment

### Recommended Service Material

BENH28K24308001




Material	SUZUKI recommended product or Specification		Note
Brake fluid	DOT 4	—	☞ (Page 4C-5) / ☞ (Page 4C-5)
Grease	SUZUKI SILICONE GREASE	P/No.: 99000-25100	☞ (Page 4C-4) / ☞ (Page 4C-6)
Thread lock cement	THREAD LOCK CEMENT 1360	P/No.: 99000-32130	☞ (Page 4C-7)

#### NOTE

**Required service material(s) is also described in:  
"Rear Brake Components" (Page 4C-1)**

### Special Tool

BENH28K24308002
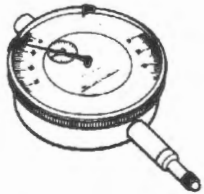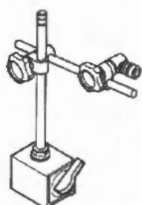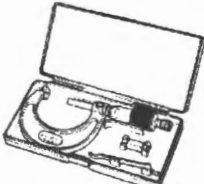
<p>09900-20607 Dial gauge (10 x 0.01 mm) ☞ (Page 4C-8)</p>		<p>09900-20701 Dial gauge chuck ☞ (Page 4C-8)</p> 
<p>09912-66310 Micrometer (0 - 25 mm) ☞ (Page 4C-7)</p>		

# ABS

## Precautions

### Precautions for ABS Service

BENH28K24500001

- Battery voltage is always applied to the ABS control unit. Therefore, disconnect the battery (-) lead wire before disconnecting the ABS control unit coupler.
- When the ABS control unit coupler is connected, do not disconnect the sensor coupler(s) with the ignition switch turned ON. If the sensor coupler is disconnected with the ignition ON, DTC will be stored in the ABS control unit.

### Precautions for Diagnosing Troubles

BENH28K24500002

To ensure that the trouble diagnosis is done accurately and smoothly, observe the following and follow "ABS Check" (Page 4E-11).

- The information on the DTCs detected by the ABS control unit can be checked and cleared with the special tool.

### NOTE

**After repairing the trouble, clear the DTC with the special tool. ↻ (Page 4E-18)**

- If the motorcycle was operated in any of the following conditions, ABS indicator light may light but this does not indicate any fault in ABS.
  - The motorcycle is stuck in mud, sand, etc.
  - Wheel spins while driving.
  - Wheels are rotated while the motorcycle is jacked up.
- Be sure to follow the trouble diagnosis procedure described in "ABS Check" (Page 4E-11). If the trouble diagnosis procedure is not followed properly, incorrect diagnosis may result. (If the incorrect procedure is performed, other DTC may be stored in the ABS control unit.)

### Precautions for ABS

BENH28K24500003

Refer to "Precautions for Electrical Circuit Service" in Section 00 (Page 00-2), "Precautions for Circuit Tester" in Section 00 (Page 00-7), "Precautions for SDS-II" in Section 00 (Page 00-7) and "Precautions for ABS Service" (Page 4E-1).


## General Description

### Wheel Speed Sensor Description

BENH28K24501001


Wheel speed sensor consists of wheel speed sensor (1) and sensor rotor (2).

Front

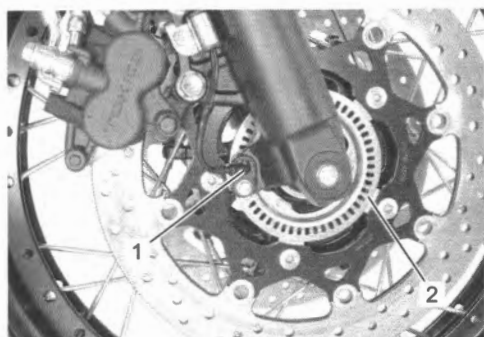

IH28K1450001-01

Rear

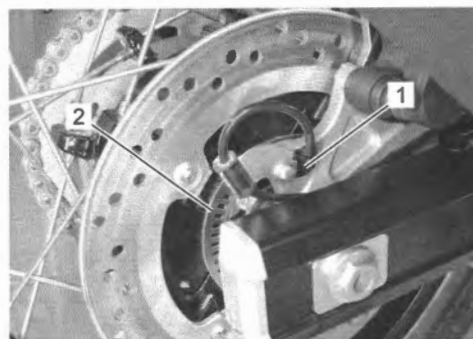

IH28K1450002-01

**ABS Control Unit Description**

BENH28K24501002


ABS control unit (1) calculates signals input from each one of front and rear wheel speed sensors, monitors the slipping conditions of the wheels and, at the same time, sends control signal to Hydraulic Unit (HU) (2). This ABS control unit/HU can not be disassembled.



IH28K1450003-01

**ABS Control Unit Calculating Process**

The ABS controls and its calculations, in addition to the self-diagnosing and the fail-safe processes, occur during the ABS control unit calculating process. In addition, if a malfunction is detected by the self-diagnosis function, the brake stops being controlled by the ABS and a diagnostic trouble code is stored.

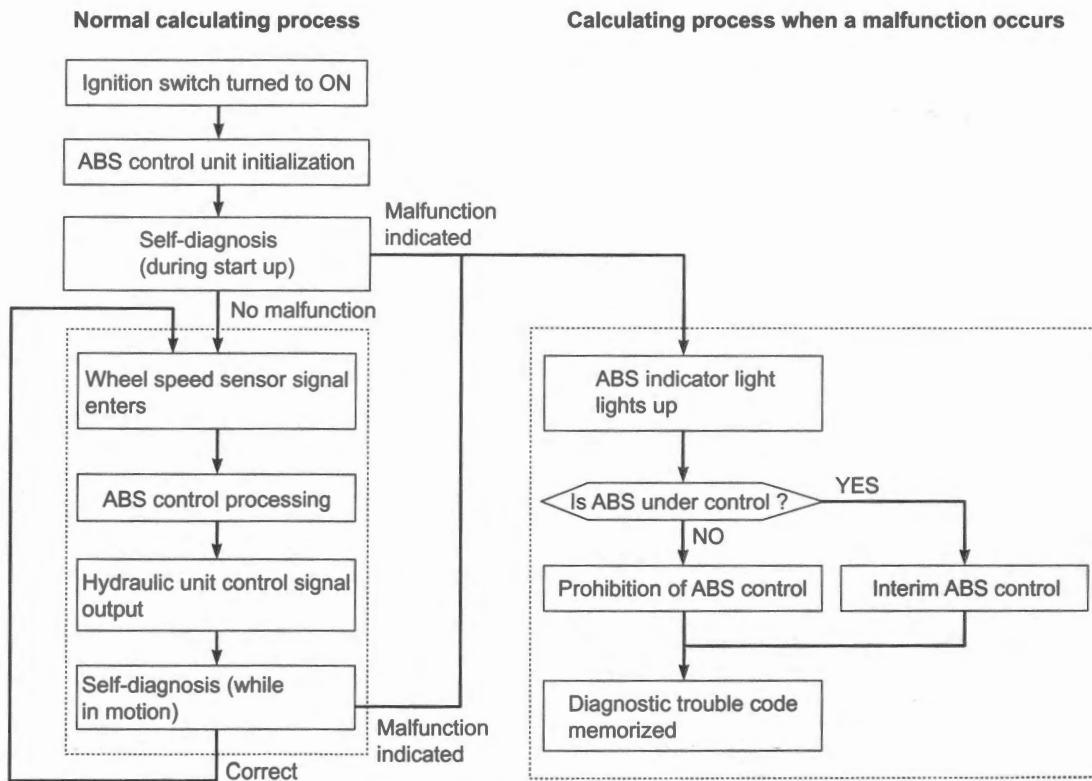


IH28K1450073-01

### Hydraulic Unit (HU) Description

BENH28K24501003

The hydraulic unit operates the solenoid valves based upon the signal which is output from the ABS control unit. The brake fluid pressure is then adjusted accordingly. The hydraulic unit controls the front and rear brake systems individually by operating separate components for the front and the rear, except for the pump drive motor, which is shared by both systems.

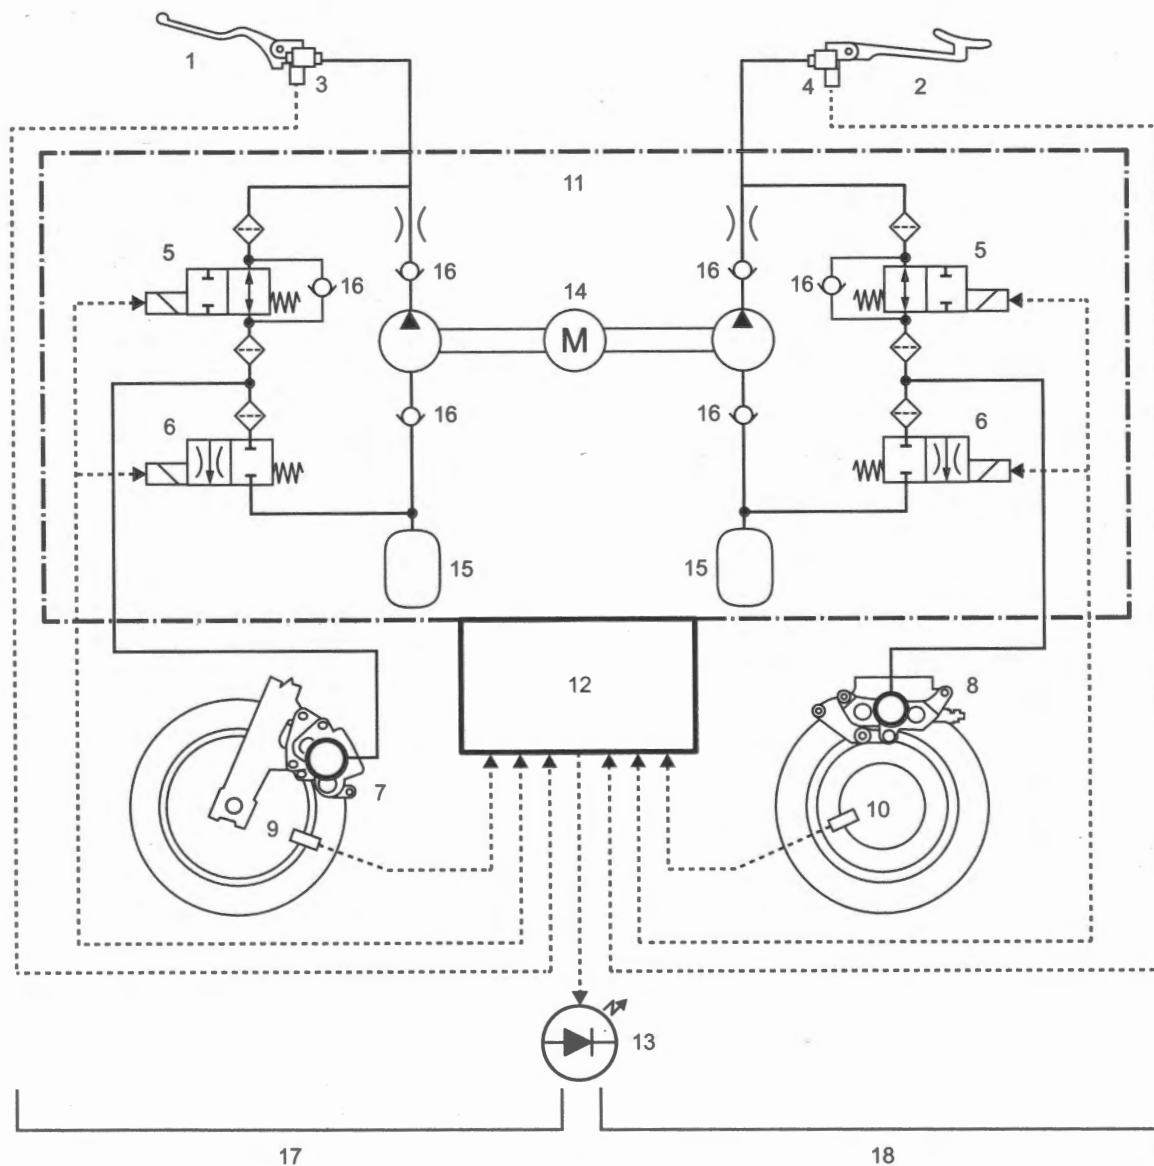

1. Front brake lever/master cylinder	10. Rear wheel speed sensor
2. Rear brake pedal/master cylinder	11. HU
3. Front brake light switch	12. ABS control unit
4. Rear brake light switch	13. ABS indicator light
5. Solenoid inlet valve	14. Motor
6. Solenoid outlet valve	15. Reservoir
7. Front brake caliper	16. One-way valve
8. Rear brake caliper	17. Front system
9. Front wheel speed sensor	18. Rear system

IH28K1450004-01

**Self-diagnosis Function and ABS Indicator Light Description**


BENH28K24501004

The ABS control unit performs the self-diagnosis and can store any electronically detected malfunctions as diagnostic trouble codes. If a malfunction has occurred, the indicator light lights up to inform the rider of the malfunction. The special tool, when connected to the mode select coupler (2P), enables the ABS indicator light to display the diagnostic trouble codes.

**ABS Indicator Light**

The ABS indicator light (1) informs the rider of any ABS malfunctions. If a malfunction occurred, the ABS indicator light flashes, during the self-diagnosis, to indicate the diagnostic trouble code so that the correct part can be repaired.

- When the ignition switch is turned to ON, the ABS indicator light lights up even if no malfunction has occurred, to indicate that the LED is not burnt out. It will go off after the motorcycle is ridden at more than 5 km/h (3 mile/h).
- If an ABS malfunction has occurred, the ABS indicator light keeps lighting up.

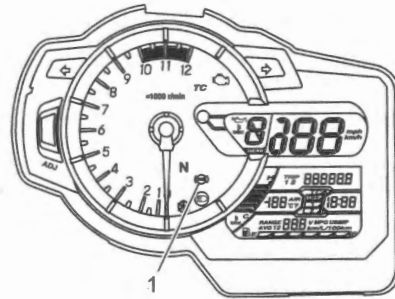


IH28K1450005-02

**NOTE**

**When a malfunction has occurred in the ABS, connect the special tool to the mode select coupler (2P) to display the diagnostic trouble code on the ABS indicator light. (Page 4E-16)**

**Special tool**

**(A): 09930-82760**

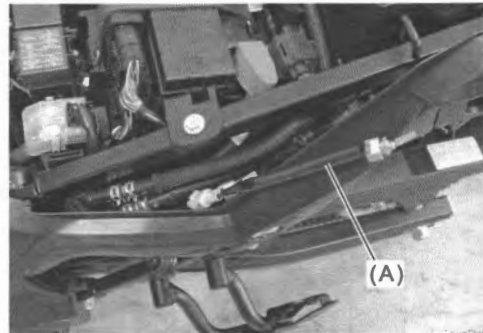


IH28K1450006-01

**ABS Operation and ABS Indicator Light**

The ABS indicator light (1) shows the ABS operating condition. During normal operation, the ABS indicator light lights up when the ignition switch is turned to ON and goes off after the motorcycle is ridden at more than 5 km/h (3 mile/h). If a malfunction has occurred, the ABS indicator light keeps lighting up.

The ABS indicator light goes off when the motorcycle is ridden at more than 5 km/h (3 mile/h).	The ABS is normally activated.
The ABS indicator light keeps lighting up even though the motorcycle is ridden at more than 5 km/h (3 mile/h).	One or more malfunction has been found and ABS activation been hanged up.
The ABS indicator light does not light up when turning the ignition switch ON.	Check the wire harness and combination meter. (Page 4E-14)

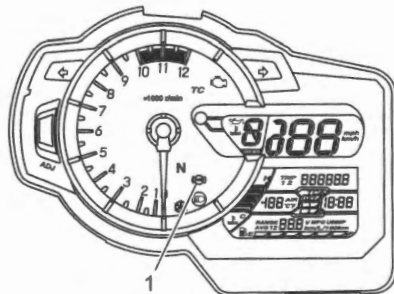

IH28K1450005-02

### Stored DTCs (Diagnostic Trouble Codes)


The maximum of six DTCs can be recorded. In these records, duplication of the same DTC will not occur. If the system detects the 7th DTC, it overwrites the record of the oldest DTC.

Check and see if any diagnostic trouble code remains, by actually running the motorcycle to activate ABS and by carrying out the self-diagnosis after deleting the diagnostic trouble code once the malfunctioned part is repaired.

### Fail-safe Function Description

BENH28K24501005

If malfunction occurs in the ABS electric system, this sets valve relay OFF. Consequently, motor relay will be set OFF and the indicator light is turned ON, and no current will be applied to solenoid valve inactivating ABS and turning ABS indicator light ON. In this case, it functions as the normal brake. However, if malfunction occurs while ABS is being activated, when ABS control unit diagnoses that the operation can continue, it will effectuate ABS provisional control (turning the ABS indicator light ON). Upon the moment when ABS provisional control is over, the valve relay will be set OFF.

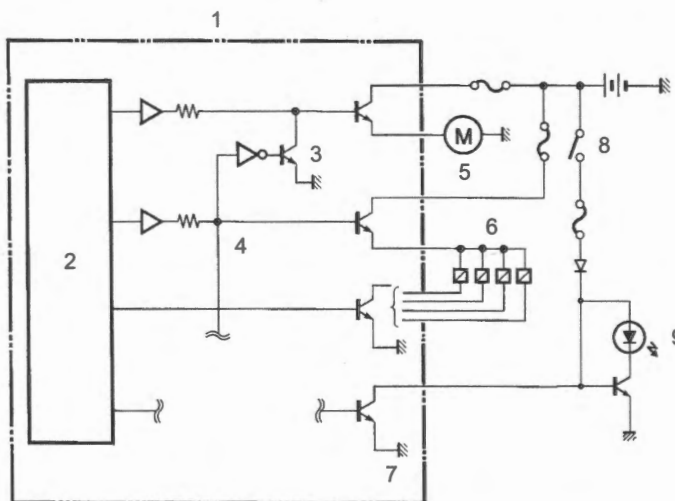


IH28K1450007-01

1. ABS control unit	4. Valve relay	7. Indicator relay
2. CPU	5. Motor	8. Ignition switch
3. Motor relay	6. Solenoid valves	9. ABS indicator light

# Schematic and Routing Diagram

## ABS Wiring Diagram

BENH28K24502001

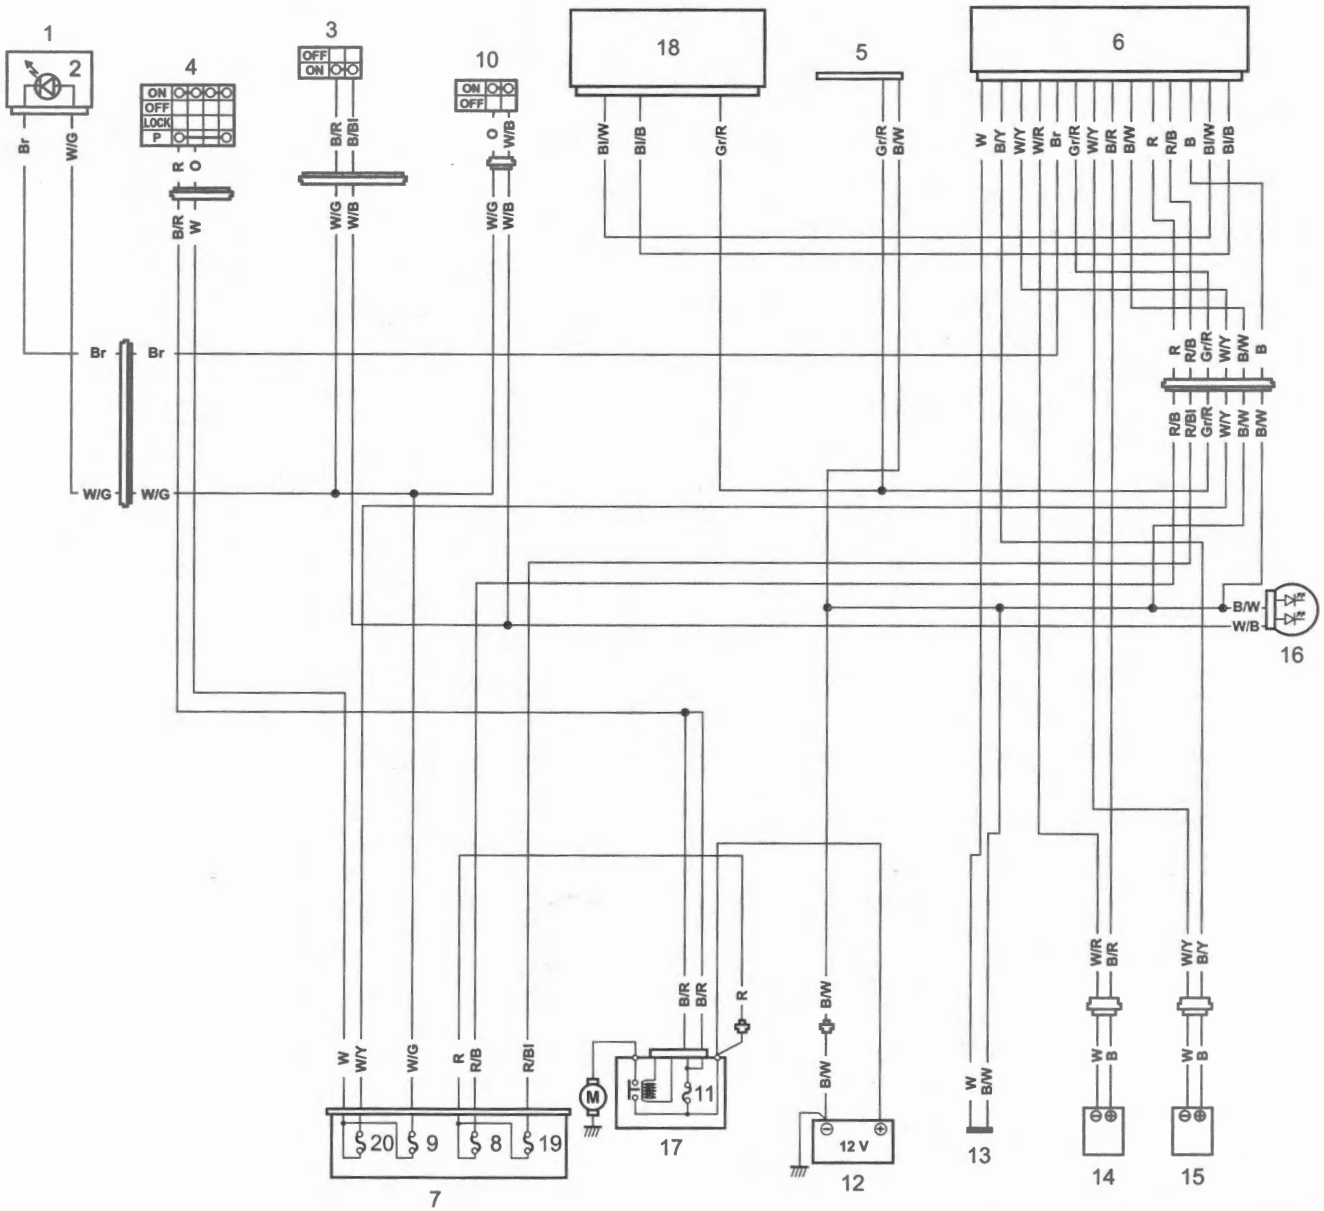




IH28K1450008-01

1. Combination meter	8. ABS valve fuse (15 A)	15. Rear wheel speed sensor
2. ABS indicator light	9. Signal fuse (15 A)	16. Rear combination light
3. Front brake light switch	10. Rear brake light switch	17. Starter relay
4. Ignition switch	11. Main fuse (30 A)	18. ECM
5. Mode select coupler (6P)	12. Battery	19. ABS motor fuse (25 A)
6. ABS control unit	13. Mode select coupler (2P)	20. Ignition fuse (10 A)
7. Fuse box	14. Front wheel speed sensor	



ABS Control Unit / HU Diagram

BENH28K24502002

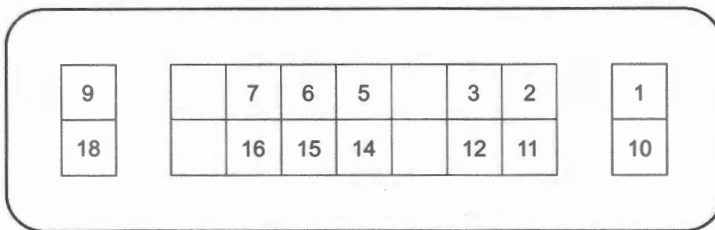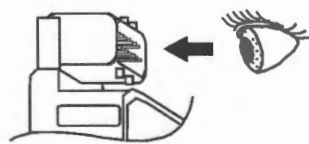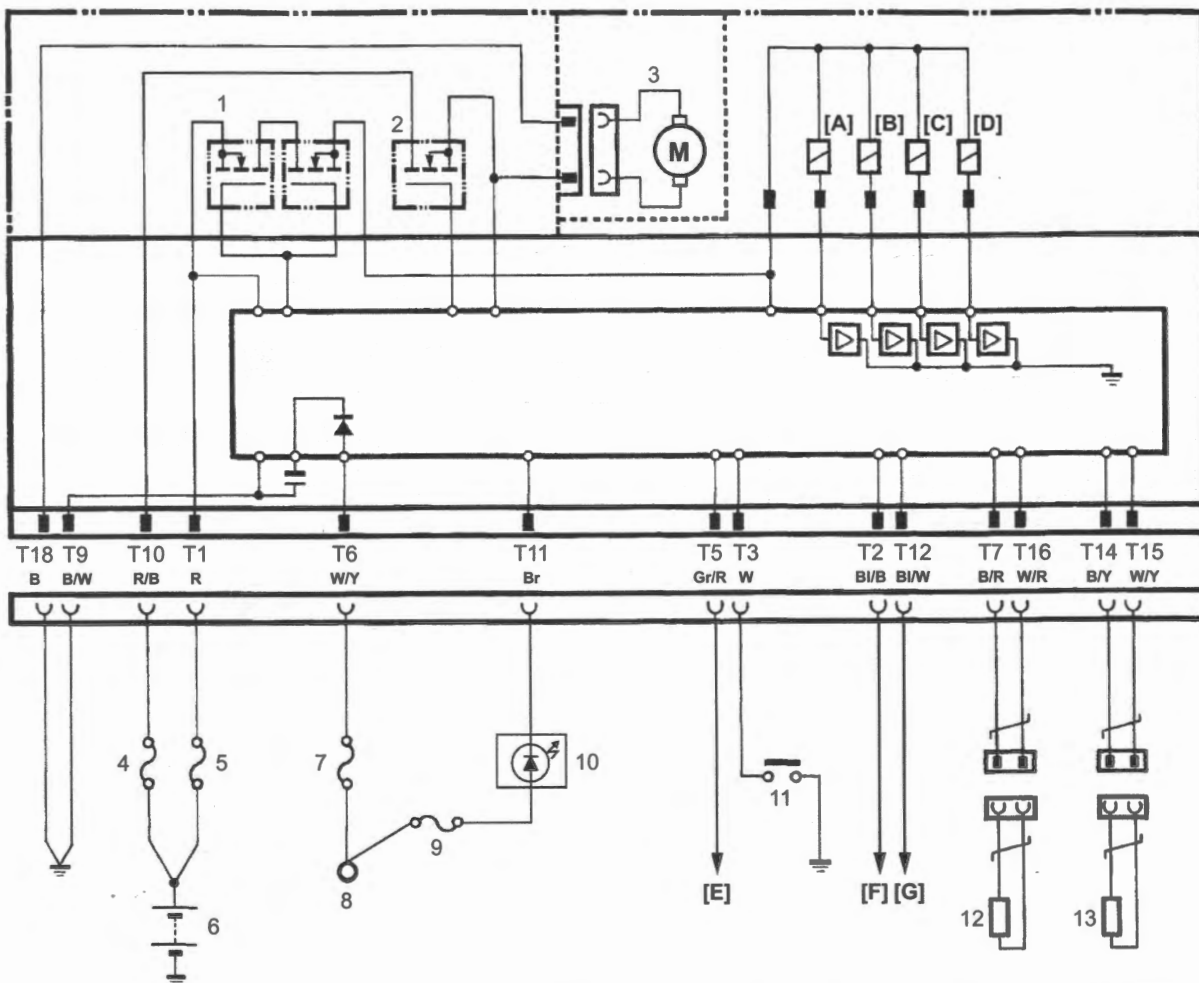


IH28K1450009-01

[A]: Front brake solenoid inlet valve	1. ABS valve relay	8. Ignition switch
[B]: Front brake solenoid outlet valve	2. ABS motor relay	9. Signal fuse (15 A)
[C]: Rear brake solenoid inlet valve	3. ABS motor	10. ABS indicator light
[D]: Rear brake solenoid outlet valve	4. ABS motor fuse (25 A)	11. Mode select coupler (2P)
[E]: To mode select coupler (6P)	5. ABS valve fuse (15 A)	12. Front wheel speed sensor
[F]: To ECM (front wheel speed sensor signal)	6. Battery	13. Rear wheel speed sensor
[G]: To ECM (rear wheel speed sensor signal)	7. Ignition fuse (10 A)	

Front Wheel Speed Sensor Routing Diagram

BENH28K24502003

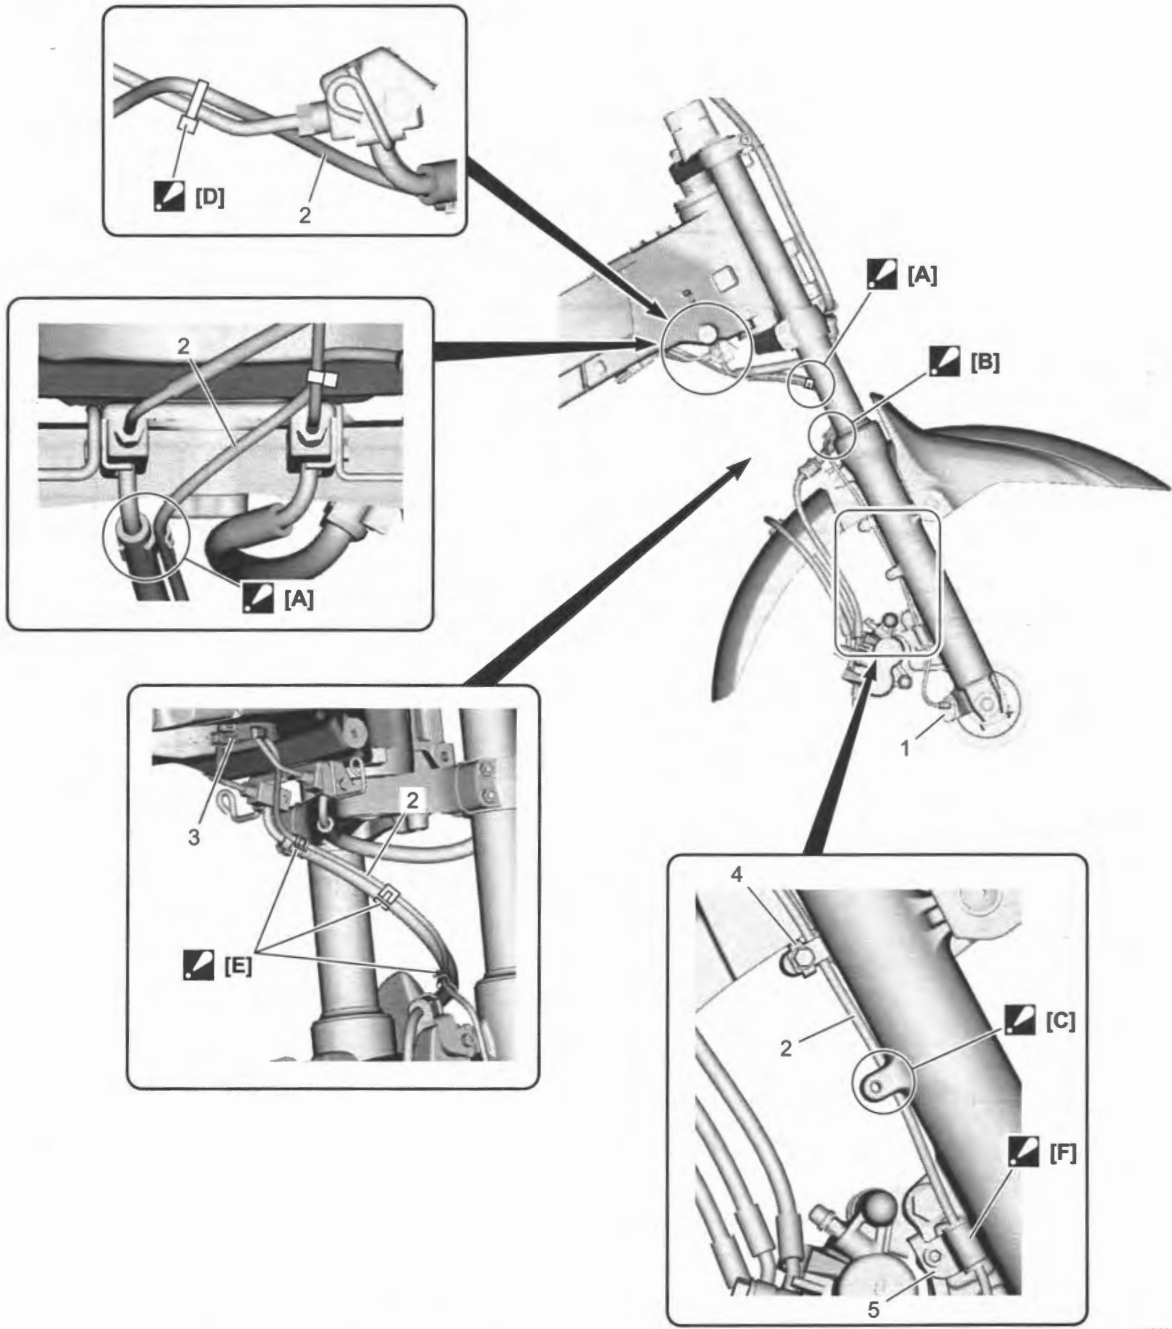


IH28K1450010-01

<p>☑ [A]: Clamp the front wheel speed sensor lead wire on the right of the brake hose.</p>	<p>☑ [E]: Clamp the front wheel speed sensor lead wire at the markings.</p>	<p>3. Front wheel speed sensor lead wire coupler</p>
<p>☑ [B]: Clamp the front wheel speed sensor lead wire in the rear of the brake hose.</p>	<p>☑ [F]: Fix the hose sleeve to the clamp.</p>	<p>4. Front wheel speed sensor guide</p>
<p>☑ [C]: Pass the front wheel speed sensor lead wire inside of the boss on the front fork outer tube.</p>	<p>1. Front wheel speed sensor</p>	<p>5. Front wheel speed sensor clamp</p>
<p>☑ [D]: Clamp the front wheel speed sensor lead wire upside of the brake pipe. : Cut off the excess tip of the clamp.</p>	<p>2. Front wheel speed sensor lead wire</p>	

Rear Wheel Speed Sensor Routing Diagram

BENH28K24502004

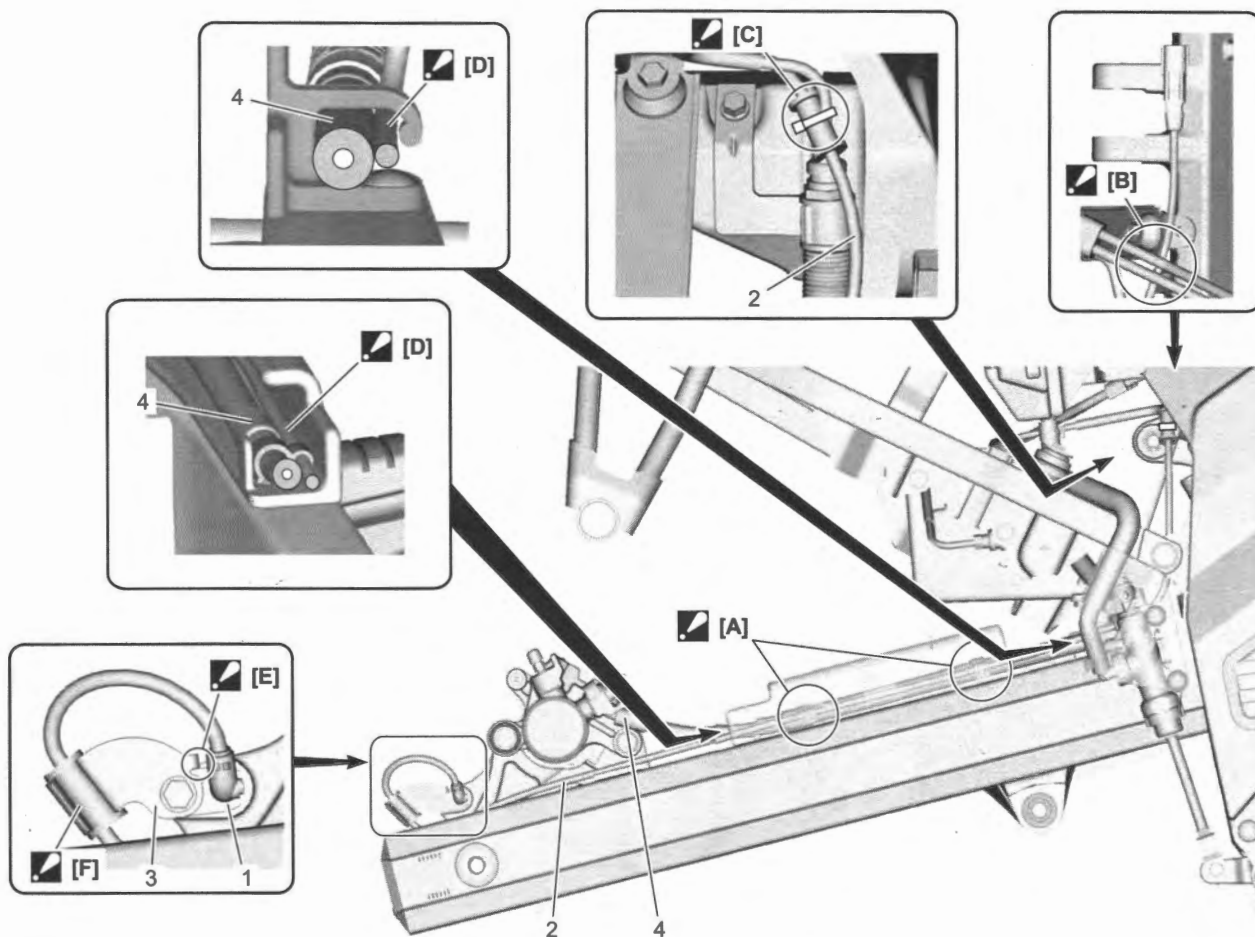



IH28K1450011-01

<p>☑ [A]: Route the rear wheel speed sensor lead wire through outside of the brake hose and clamp it at the marks.</p>	<p>☑ [E]: After positioning the clamp with the stopper, tighten the bolt.</p>	<p>3. Rear wheel speed sensor clamp</p>
<p>☑ [B]: Pass the rear wheel speed sensor lead wire under the brake pipe.</p>	<p>☑ [F]: Fix the rear wheel speed sensor lead wire sleeve into the clamp firmly.</p>	<p>4. Rear brake hose</p>
<p>☑ [C]: Pass the rear wheel speed sensor lead wire through inside of the brake hose assembly and clamp it with the brake pipe. : Cut off the excess tip of the clamp.</p>	<p>1. Rear wheel speed sensor</p>	
<p>☑ [D]: Pass the rear wheel speed sensor lead wire through inside of the guide.</p>	<p>2. Rear wheel speed sensor lead wire</p>	

# Component Location

## ABS Components Location

BENH28K24503001

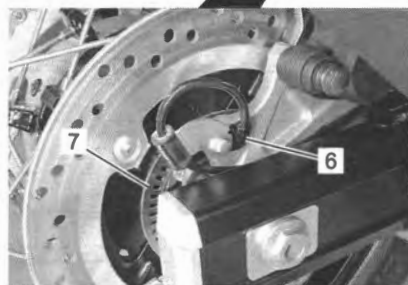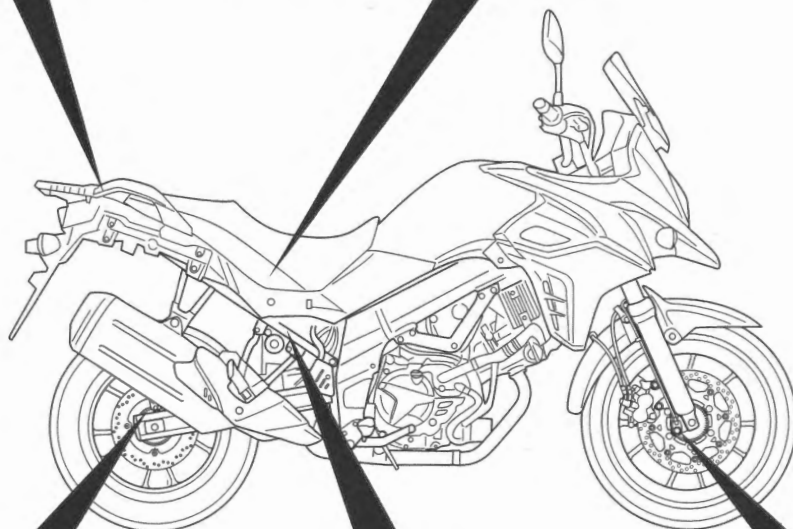

IH28K1450012-02

1. ABS control unit/HU	3. Mode select coupler (6P)	5. Front wheel speed sensor rotor	7. Rear wheel speed sensor rotor
2. Mode select coupler (2P)	4. Front wheel speed sensor	6. Rear wheel speed sensor	

## Diagnostic Information and Procedures

### ABS Check

BENH28K24504001

Refer to the description after the following general flow for details of each step.

#### Step 1

##### Malfuction analysis

- 1) Perform "Customer Complaint Analysis" (Page 4E-12).
- 2) Perform "Problem Symptom Confirmation" (Page 4E-13).
- 3) Perform "DTC Check, Record and Clearance" (Page 4E-13) and recheck DTC.

##### Is the same DTC detected again after performing the DTC clearance?

- |     |  |
|-----|--|
| Yes | Inspect and repair referring to the applicable DTC troubleshooting, and then go to Step 6. |
| No  | Go to Step 2.  |

#### Step 2

##### Visual inspection

- 1) Perform "Visual Inspection" (Page 4E-13).

##### Is there any faulty condition?

- |     |  |
|-----|--|
| Yes | Repair or replace the malfunction part, and then go to Step 6. |
| No  | Go to Step 3.  |

#### Step 3

##### Riding test

- 1) Perform "Riding Test" (Page 4E-13).

##### Is the malfunction detected?

- |     |  |
|-----|--|
| Yes | Repair or replace the malfunction part, and then go to Step 6. |
| No  | Go to Step 4.  |

#### Step 4

##### Brakes diagnosis

- 1) Inspect and repair the ABS. (Page 4E-14)

##### Is the malfunction detected?

- |     |  |
|-----|--|
| Yes | Repair or replace the malfunction part, and then go to Step 6. |
| No  | Go to Step 5.  |

#### Step 5

##### Intermittent problem check

- 1) Check for intermittent troubles. (Page 00-2)

##### Is the malfunction detected?

- |     |  |
|-----|--|
| Yes | Repair or replace the malfunction part, then go to Step 6. |
| No  | Go to Step 6.  |

#### Step 6

##### Final confirmation test

- 1) Perform "Final Confirmation Test" (Page 4E-13).

##### Does the trouble recur?

- |     |               |
|-----|---------------|
| Yes | Go to Step 4. |
| No  | End.          |

**Customer Complaint Analysis**

Record details of the problem (failure, complaint) and how it occurred as described by the customer.

For this purpose, use of such a questionnaire form as shown in the following table will facilitate collecting the information to the point required for the proper analysis and diagnosis.

**Example: Customer problem inspection form**

<b>User name:</b>	<b>Model:</b>	<b>VIN:</b>	<b>Date of issue:</b>
<b>Date Reg.</b>	<b>Date of problem:</b>	<b>Mileage:</b>	

**PROBLEM SYMPTOMS**

<b>ABS operation</b>	<b>Past malfunctions and repairs</b>
ABS does not work	
ABS works so often with	
Too long stopping distance	
Other	

**CONDITION WHEN MALFUNCTION OCCURRED**

<b>ABS indicator light</b>	<b>Riding conditions</b>
Does not light up	While stopping
Lights up	Over 5 km/h (3 mile/h)
Goes off after running over 5 km/h (3 mile/h): Yes / No	When turning
Flashes	Others
<b>Tires</b>	<b>Brake operating conditions</b>
Abnormal air pressure	Usual braking
Less thread depth	Quick/hard braking
No specified tires installed	
	<b>Interface</b>
<b>Road surface</b>	Too big pulsations at brake lever and pedal
Paved road:	Too large brake lever and pedal strokes
Dry / Wet / Others	Others
Unpaved road:	
Gravel / Muddy / Uneven / Others	Others
	Abnormal noise from the ABS control unit/HU
	Skid noise from the calipers
	Vibration at the brake lever and pedal

**NOTE:****NOTE**

This form is a standard sample. The form should be modified according to conditions and characteristic of each market.

**Problem Symptom Confirmation**

If a symptom in "Customer Questionnaire" is found or reproduced in the vehicle, confirm the symptom is problem or not. (This step should be done with the customer if possible.) Check the ABS indicator light. (Page 4E-14)

**DTC Check, Record and Clearance**

Perform "DTC (Diagnostic Trouble Code) Output" (Page 4E-16) procedure, record it and then clear it. (Page 4E-18)

Recheck DTC. (Page 4E-16)

**NOTE**

**After deleting the DTC, perform "Riding Test" (Page 4E-13) and then recheck the DTC.**

**Riding Test**

Ride the motorcycle at more than 30 km/h (19 mile/h) and quickly apply the brakes to check that the ABS activates correctly.

**Final Confirmation Test**

Confirm that the problem symptom is not observed any more and ABS is free from any abnormal conditions. If what has been repaired is related to the malfunction DTC, clear the DTC referring to "DTC (Diagnostic Trouble Code) Deleting" (Page 4E-18) and perform test riding and confirm that the DTC is not indicated.

**Visual Inspection**

Check the following parts and systems visually.

BENH28K24504002

Inspection item		Referring section
Connectors of electric wire harness	Disconnection, friction	"Precautions for Electrical Circuit Service" in Section 00 (Page 00-2)
Fuses	Burning	"Precautions for Electrical Circuit Service" in Section 00 (Page 00-2)
Brake pad	Worn	"Front Brake Pad Inspection" in Section 4B (Page 4B-2) and "Rear Brake Pad Inspection" in Section 4C (Page 4C-2)
Brake fluid	Level, leakage	"Brake Fluid Level Check" in Section 4A (Page 4A-7)
ABS indicator light	Operation	"ABS Indicator Light Inspection" (Page 4E-14)
Tire	Pressure	"Tire Inspection and Cleaning" in Section 2D (Page 2D-20)
	Type, size	"Tire Inspection and Cleaning" in Section 2D (Page 2D-20)
	Damage, wear	"Tire Inspection and Cleaning" in Section 2D (Page 2D-20)
Wheel	Runout, play	"Wheel / Wheel Axle Inspection" in Section 2D (Page 2D-17)
Other parts that can be checked visually		—

**NOTICE**

- The standard tire fitted on this motorcycle is 110/80R19M/C (59H) for front and 150/70R17M/C (69H) for rear (DL650A), or 110/80R19M/C (59V) for front and 150/70R17M/C (69V) for rear (DL650XA). The use of tires other than those specified may cause instability. It is highly recommended to use a SUZUKI Genuine Tire.
- Replace the tire as a set, otherwise the DTC C1625 (25) may be stored.

## ABS Symptom Diagnosis

BENH28K24504003

Condition	Possible cause	Correction / Reference Item
<b>The ABS indicator light keeps lighting up even though the motorcycle is ridden at more than 5 km/h (3 mile/h).</b>	Malfunctioning the ABS function.	Perform the ABS check. (Page 4E-11)
	Malfunctioning the ABS indicator light circuit.	Check the ABS indicator light circuit. (Page 4E-14)
<b>The ABS indicator light does not light up when turning the ignition switch to ON.</b>	Malfunctioning the ABS function.	Perform the ABS check. (Page 4E-11)
	Malfunctioning the ABS indicator light circuit.	Check the ABS indicator light circuit. (Page 4E-14)
	Malfunctioning the combination meter.	Check the combination meter. (Page 9C-4)

## ABS Indicator Light Inspection

BENH28K24504004


## Wiring Diagram

Refer to "ABS Control Unit / HU Diagram" (Page 4E-7).

## Troubleshooting

## Step 1

- 1) Check if the ABS indicator light (1) lights up when turning the ignition switch ON.

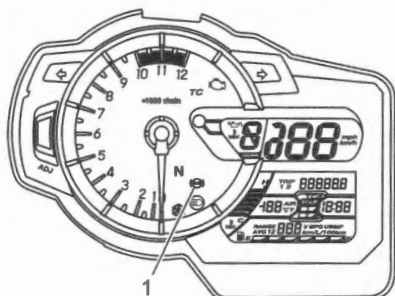

IH28K1450005-02

## Does the ABS indicator light lights up?

- Yes Go to Step 2.  
No Go to Step 3.

## Step 2

## (The ABS indicator light lights up)

- 1) Ride the motorcycle at more than 5 km/h (3 mile/h).

## Does the ABS indicator light go off?

- Yes Normal (No DTC exists)  
No
- DTC output. (Page 4E-16)
  - If DTC can not be output (the ABS indicator light does not flash), go to Step 6.


## Step 3

## (The ABS indicator light does not light up)

- 1) Turn the ignition switch OFF.
- 2) Remove the seat. (Page 9D-19)
- 3) Open the fuse box and inspect the signal fuse (15 A) (1).

## NOTE

If a fuse is blown, find the cause of the problem and correct it before replacing the fuse.

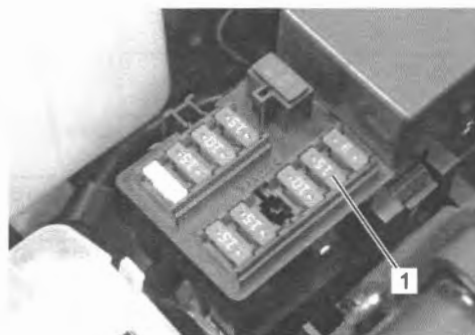

IH28K1450013-01


## Is the signal fuse OK?

- Yes Go to Step 4.  
No Replace the signal fuse.



**Step 4**

- 1) Disconnect the ABS control unit coupler. (Page 4E-32)
- 2) Turn the ignition switch ON with the ABS control unit coupler disconnected, measure the voltage between "T11" (Br) and "T9" (B/W) at the coupler.

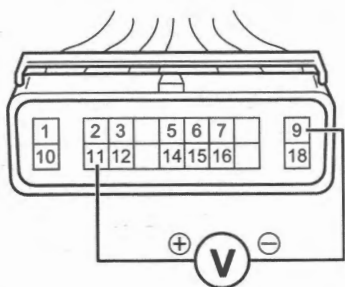


IH28K1450014-01

**Is the voltage 7.5 – 9.5 V?**

- Yes Go to Step 5.
- No
- Inspect the wire harness. (Faulty indicator light wire or ground wire)
  - Faulty combination meter.

**Step 5**

- 1) Turn the ignition switch OFF.
- 2) Check for continuity between "T9" (B/W) at the coupler and body ground.

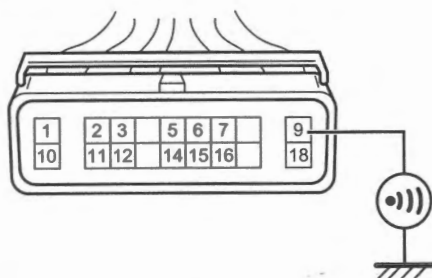

IH28K1450015-01

**Is continuity indicated?**


- Yes Replace the ABS control unit/HU. (Page 4E-35)
- No Inspect the wire harness. (Faulty ground wire)

**Step 6****(The ABS indicator light does not go off)**

- 1) Turn the ignition switch OFF.
- 2) Remove the seat. (Page 9D-19)
- 3) Open the fuse box and inspect the ignition fuse (10 A) (1).

**NOTE**

**If a fuse is blown, find the cause of the problem and correct it before replacing the fuse.**

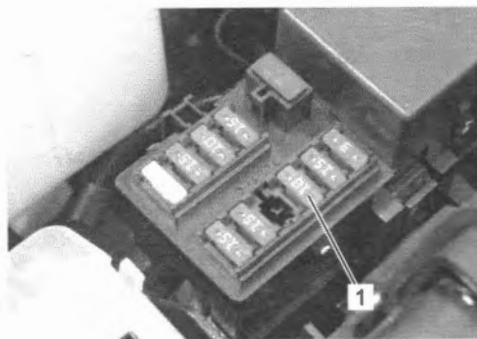


IH28K1450016-01

**Is the ignition fuse OK?**

- Yes Go to Step 7.
- No Replace the ignition fuse.

**Step 7**

- 1) Disconnect the ABS control unit coupler. (Page 4E-32)
- 2) Turn the ignition switch ON with the ABS control unit coupler disconnected, measure the voltage between "T6" (W/Y) and "T9" (B/W) at the coupler.

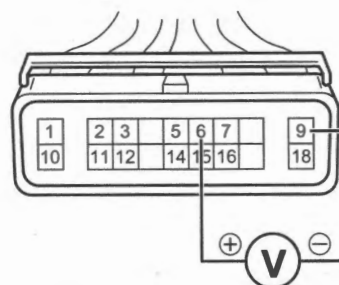


IH28K1450017-01

**Is the voltage 12 V or more?**

- Yes Go to Step 8.
- No Inspect the wire harness. (Faulty ignition wire or ground wire)

**Step 8**

- 1) Measure the voltage between "T11" (Br) and "T9" (B/W) at the coupler.

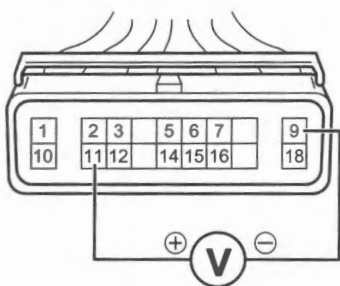

IH28K1450014-01

**Is the voltage 7.5 – 9.5 V?**


- Yes Go to Step 9.
- No Inspect the wire harness. (Faulty indicator light wire)

**Step 9**

- 1) Turn the ignition switch OFF.
- 2) Short the mode select coupler (2P) terminals using the special tool.


**Special tool**

(A): 09930-82760

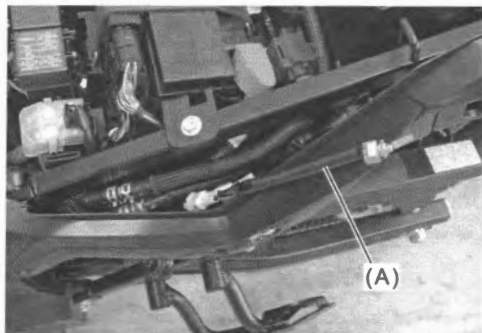

IH28K1450006-01

- 3) Check for continuity between "T3" (W) and "T9" (B/W) at the coupler.

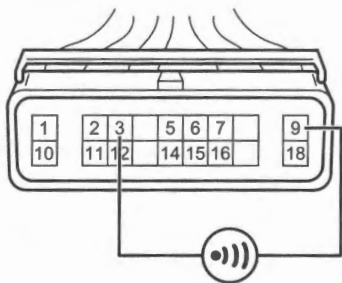

IH28K1450018-01

**Is continuity indicated?**

- Yes Replace the ABS control unit/HU. ↗ (Page 4E-35)
- No Inspect the wire harness. (Faulty mode select coupler wire)

**DTC (Diagnostic Trouble Code) Output**


BENH28K24504005

**NOTE**


- If there is a DTC recorded, the ABS indicator light repeatedly flashes in a cyclic manner. (However, when five minutes have elapsed from the start of self-diagnosis mode, the output of the DTC will be interrupted.)
- If no DTC is recorded, the light repeats flashing for 3.6 seconds in a cyclic manner.
- In the case that the mode select switch is turned OFF or the vehicle speed (both wheels) exceeds 10 km/h (6 mile/h), the output of DTC will be interrupted.
- Don't disconnect couplers from ABS HU, the battery cable from the battery, ABS HU ground wire harness from the engine or main fuse before confirming the malfunction code (self-diagnostic trouble code) stored in memory. Such disconnection will erase the memorized information in ABS HU memory.
- Be sure to read "Precautions for Electrical Circuit Service" in Section 00 (Page 00-2) and "Precautions for ABS Service" (Page 4E-1) before inspection and observe what is written there.
- After carrying out DTC deleting and ABS operation check, explain to the customer that the ABS is operating correctly. ↗ (Page 4E-18)
- DTC can be checked by using the SDS. Refer to the SDS operation manual for further details.

- 1) Turn the ignition switch OFF.
- 2) Remove the seat. (Page 9D-19)
- 3) Connect the special tool to the mode select coupler (2P) (1).

**Special tool**  
**(A): 09930-82760**

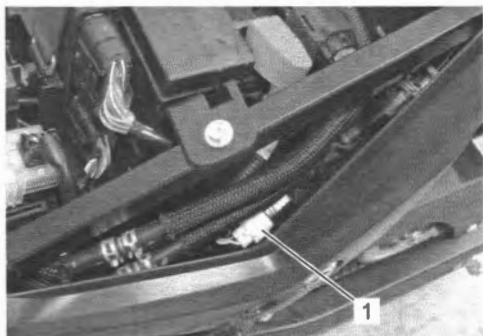

IH28K1450019-01

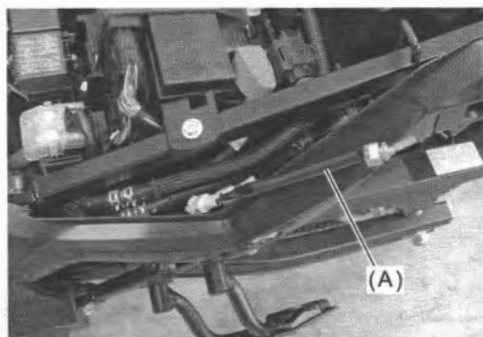

IH28K1450006-01

- 4) Switch the special tool to ON.




I718H1450040-02

- 5) Turn the ignition switch ON.  
 The ABS indicator light (1) starts flashing to indicate the DTC. (Page 4E-20)

#### NOTE

If the DTCs are to be output for a long time, remove the HEAD-LO fuse in order to prevent the battery from discharging.

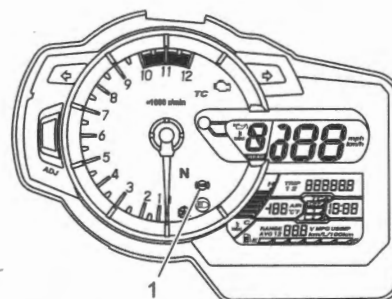


IH28K1450005-02

- 6) Turn the ignition switch OFF and disconnect the special tool.
- 7) Install the seat. (Page 9D-19)

#### Understanding the DTC (Diagnostic Trouble Code)

A two-digit DTC is shown through the flashing pattern of the ABS indicator light. A number between 1 and 9 is represented by the number of times that the ABS indicator light lights up in interval of 0.4 seconds and the separation between the tens and ones are indicated by the light staying off for 1.6 seconds. In addition, the separation between the start code and the DTC is indicated by the light being off for 3.6 seconds. After the start code is displayed, DTCs appear from the smallest number code.

If no DTCs are memorized, the ABS indicator light repeats flashing for 3.6 seconds in a cyclic manner.

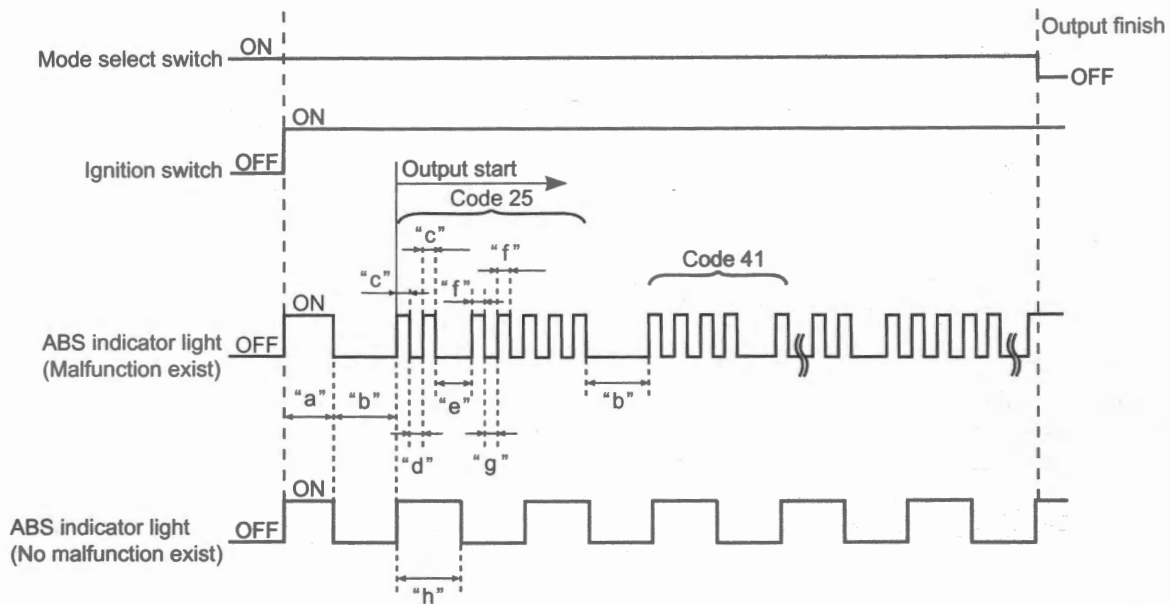

IE31J1450023-02

"a": Initial minimum light ON time (about 2 seconds)	"e": Main-sub code interval (1.6 seconds)
"b": Error code interval (about 3.6 seconds)	"f": Sub code light ON time (0.4 seconds)
"c": Main code light ON time (0.4 seconds)	"g": Sub code light OFF time (0.4 seconds)
"d": Main code light OFF time (0.4 seconds)	"h": About 3.6 seconds

### DTC (Diagnostic Trouble Code) Deleting

BENH28K24504006


#### NOTE

- The previous malfunction history code (past DTC) still remains stored in the ABS HU. Therefore, erase the history code memorized in the ABS HU using special tool.
- The DTC is memorized in the ABS HU also when the wire coupler of any sensor is disconnected. Therefore, when a wire coupler has been disconnected at the time of diagnosis, erase the stored malfunction history code.
- DTC can be checked by using the SDS. Refer to the SDS operation manual for further details.

- 1) Connect the special tool to the mode select coupler (2P). (Page 4E-16)

#### Special tool

(A): 09930-82760

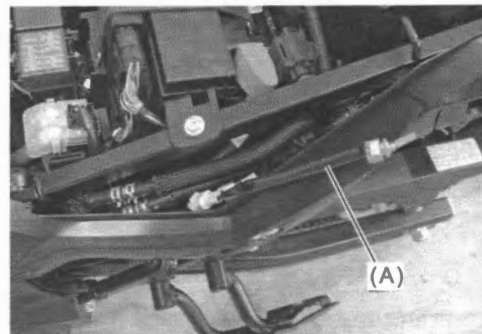

IH28K1450006-01

- 2) Switch the special tool to ON and turn the ignition switch ON.
- 3) While the DTCs are being output, set the special tool to OFF. The DTC deletion mode is started after the switch is set to OFF.



I718H1450050-01

- 4) In the DTC deletion mode, switch the special tool from OFF to ON three times within 12.5 seconds, each time leaving it at ON for more than 1 second.


#### NOTE

After deleting DTC with the mode select switch in ON position, the system resumes the self-diagnosis mode again and outputs the DTC.



I718H1450051-01

#### DTC Deleting Diagram

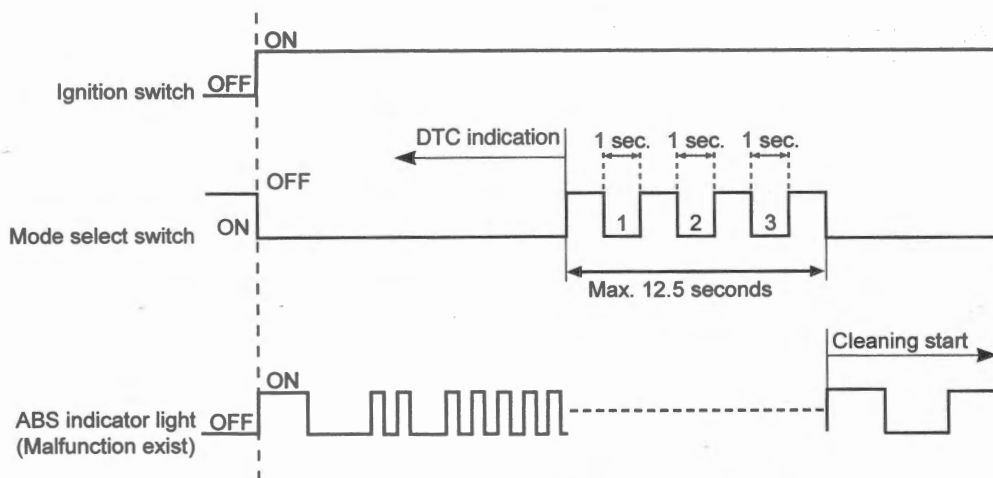

I823H3450030-01

- 5) After deleting the DTCs, repeat the code output procedure and make sure that no DTCs remain (the ABS indicator light no longer flashes).

#### NOTE

If any DTCs remain, perform the appropriate procedures, then delete the codes. If DTCs are left stored, confusion may occur and unnecessary repairs may be made.

- 6) Turn the ignition switch OFF and disconnect the special tool.  
 7) Install the removed parts.  
 8) Afterwards, ride the motorcycle at more than 30 km/h (19 mile/h) and quickly apply the brakes to check that the ABS activates correctly.

## DTC Table

DTC	Malfunction cause	Indicator status	Reference
None	Normal	ON *1	—
C1625 (25)	Wheel speed sensor related malfunction	ON	☞(Page 4E-21)
C1635 (35)	ABS motor malfunction	ON	☞(Page 4E-22)
C1641 (41)	Wheel speed sensor signal malfunction (F) *2	ON	☞(Page 4E-23)
C1642 (42)	Wheel speed sensor circuit open (F) *2	ON	☞(Page 4E-24)
C1644 (44)	Wheel speed sensor signal malfunction (R) *2	ON	☞(Page 4E-26)
C1645 (45)	Wheel speed sensor circuit open (R) *2	ON	☞(Page 4E-27)
C1647 (47)	Supply voltage (Increased)	ON *3	☞(Page 4E-29)
C1648 (48)	Supply voltage (Decreased)	ON *3	☞(Page 4E-29)
C1655 (55)	ABS control unit malfunction	ON *4	☞(Page 4E-30)
C1661 (61)	ABS solenoid malfunction	ON	☞(Page 4E-31)

\*1: It goes off after running at more than 5 km/h (3 mile/h).

\*2: The wheel speed sensor lead wire is connected to the ABS control unit, but a short-circuit or faulty continuity inside the ABS control unit caused this DTC to appear, therefore, the ABS control unit/HU assembly must be replaced. An insufficient wheel speed sensor output voltage is the cause of a malfunction in which the ABS is activated even if the brakes are not suddenly applied. If this occurs frequently even though the wheel speed sensor is operating correctly, the ABS control unit/HU assembly should be replaced.

\*3: When the voltage resumes the normal level, the ABS indicator light will go off.

\*4: These are times that the ABS indicator light does not light up.

**NOTE**

**When disconnecting couplers and turning the ignition switch ON, disconnect the ABS control unit coupler in order to prevent a DTC from being stored. Each time a resistance is measured, the ignition switch should be set to OFF.**

## DTC C1625 (25)

BENH28K24504008

## Possible cause

**C1625 (25): Wheel Speed Sensor Related Malfunction**

Incorrect tire size, poor tire pressure, deformed wheel, wheel spinning, incorrect tooth count, interference at one or more wheels, permanent bad signal, etc.

## Troubleshooting

**Step 1**

- 1) Check that the specified tires are installed.  
☞(Page 2D-20)

**Are the tires OK?**

- Yes    Go to Step 2.
- No     Use the specified tires.

**Step 2**

- 1) Make sure the tire pressure for each tire. ☞(Page 2D-20)

**Is the tire pressure for each tire correct?**

- Yes    Go to Step 3.
- No     Adjust the tire pressure.

**Step 3**

- 1) Inspect both wheel speed sensor rotors for damage and check that no foreign objects are caught in the rotor openings. ☞(Page 4E-34)

**Are the rotors OK?**

- Yes    Go to Step 4.
- No     Clean or replace the rotor.
- Front wheel speed sensor rotor:  
☞(Page 4E-33)
  - Rear wheel speed sensor rotor:  
☞(Page 4E-34)

**Step 4**

- 1) Inspect the clearances of the front and rear wheel speed sensor – sensor rotor using the thickness gauge. ☞(Page 4E-34)

**Are the clearances OK?**

- Yes    Replace the ABS control unit/HU. ☞(Page 4E-35)
- No     Adjust the clearance.

## DTC C1635 (35)

BENH28K24504009

## Possible cause

**C1635 (35): ABS Motor Malfunction**

ABS motor relay circuit open or short, broken fuse for motor relay, ABS motor circuit open or short, faulty ABS motor relay, faulty ABS motor, faulty ABS control unit, etc.

**Wiring Diagram**

Refer to "ABS Control Unit / HU Diagram" (Page 4E-7).

**Troubleshooting****Step 1**

- 1) Turn the ignition switch ON and check that the operation sound is heard from the ABS control unit. (Page 4E-10)

**Does the ABS motor make any turning noise?**


- Yes Faulty HU motor, replace the ABS control unit/HU. (Page 4E-35)
- No Go to Step 2.

**Step 2**

- 1) Turn the ignition switch OFF.
- 2) Remove the seat. (Page 9D-19)
- 3) Open the fuse box inspect the ABS motor fuse (25 A) (1).

**NOTE**

If a fuse is blown, find the cause of the problem and correct it before replacing the fuse.

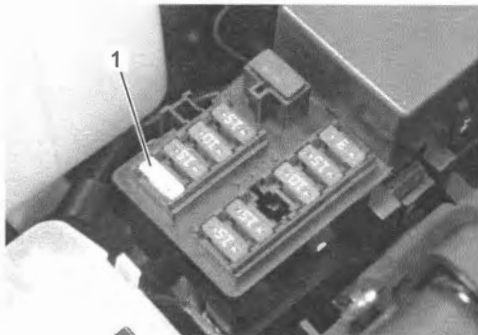

IH28K1450021-01

**Is the ABS motor fuse OK?**

- Yes Go to Step 3.
- No Replace the ABS motor fuse.


**Step 3**

- 1) Check the ABS control unit coupler (1) for loose or poor contacts. If OK, then disconnect the ABS control unit coupler. (Page 4E-32)



IH28K1450022-01

- 2) Measure the voltage between "T10" (R/B) and "T18" (B) at the coupler.

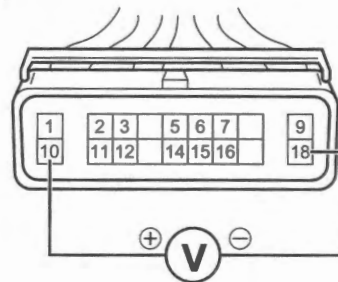

IH28K1450023-01

**Is voltage 12.0 V or more?**

- Yes Replace the ABS control unit/HU. (Page 4E-35)
- No Inspect the wire harness. (Faulty motor power supply or ground wire)



## DTC C1641 (41)

BENH28K24504010

## Possible cause

**C1641 (41): Wheel Speed Sensor Signal Malfunction (F)**

Too great air gap, worn or missing teeth, noise, loose contact in wheel speed sensor coupler, wheel speed sensor not securely fastened, input amplifier in ABS control unit failure, etc.

## Troubleshooting

**Step 1**

- 1) Inspect the clearance between the front wheel speed sensor and sensor rotor using the thickness gauge. (Page 4E-34)

**Is the clearance OK?**

- Yes    Go to Step 2.  
No     Adjust the clearance.

**Step 2**


- 1) Inspect the front wheel speed sensor rotor for damage and check that no foreign objects are caught in the rotor openings. (Page 4E-34)

**Is the sensor rotor OK?**

- Yes    Go to Step 3.  
No     Clean or replace the sensor rotor. (Page 4E-33)

**Step 3**

- 1) Check that the front wheel speed sensor (1) is mounted securely.

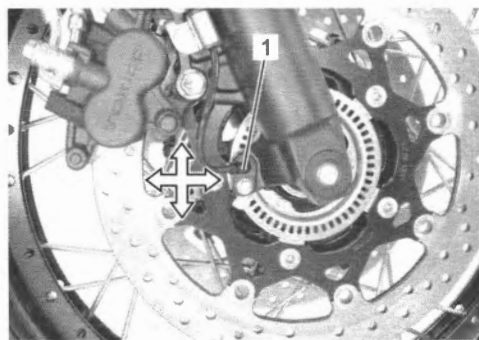

IH28K1450024-01

**Is the sensor mounted securely?**

- Yes    Go to DTC C1642 (42). (Page 4E-24)  
No     Tighten the mounting bolt.

## DTC C1642 (42)

BENH28K24504011

## Possible cause

**C1642 (42): Wheel Speed Sensor Circuit Open (F)**

Wheel speed sensor circuit open or short, poor contact in the wheel speed sensor coupler, input amplifier in ABS control unit failure, etc.


## Wiring Diagram

Refer to "ABS Control Unit / HU Diagram" (Page 4E-7).

## Troubleshooting


## Step 1

- 1) Turn ignition switch OFF.
- 2) Remove the air cleaner box. (Page 1D-6)
- 3) Check the ABS control unit coupler (1) and front wheel speed sensor coupler (2) for loose or poor contacts. If OK, then disconnect the ABS control unit coupler. (Page 4E-32)

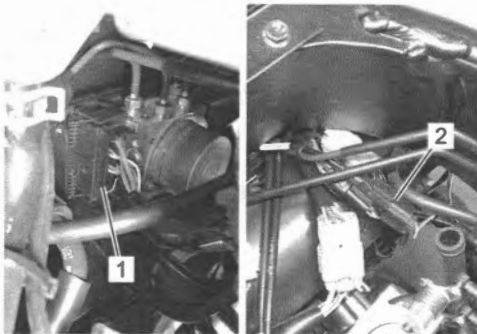

IH28K1450025-01

- 4) Check for continuity between "T16" (W/R) and "T7 (B/R)" at the ABS control unit coupler.

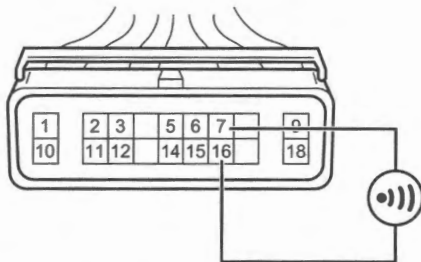


IH28K1450026-01

## Is no continuity indicated?

- Yes Go to Step 2.
- No
- Inspect the wire harness. (Faulty sensor wire)
  - Faulty front wheel speed sensor. (Page 4E-32)

## Step 2

- 1) Check for continuity between "T16" (W/R) and ground at the ABS control unit coupler.

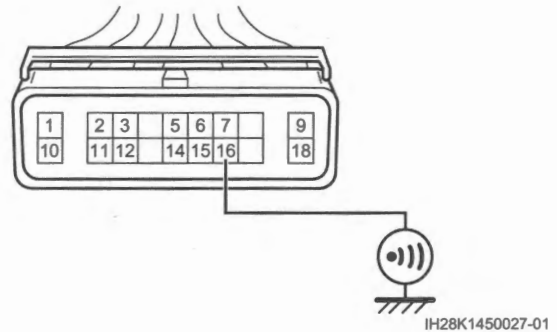


IH28K1450027-01

## Is no continuity indicated?

- Yes Go to Step 4.
- No Go to Step 3.

## Step 3

- 1) Disconnect the front wheel speed sensor coupler.
- 2) Check for continuity between White wire and ground at the front wheel speed sensor coupler.

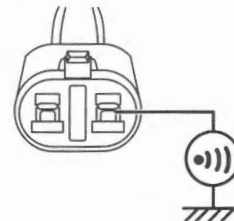


IH18K1450061-01

## Is no continuity indicated?

- Yes Inspect the wire harness. (Faulty W/R wire)
- No Faulty front wheel speed sensor. (Page 4E-32)

**Step 4**


- 1) Check for continuity between "T7" (B/R) and ground at the ABS control unit coupler.

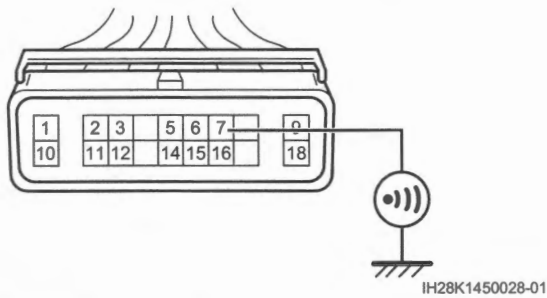**Is no continuity indicated?**

- Yes Go to Step 6.  
No Go to Step 5.

**Step 5**


- 1) Disconnect the front wheel speed sensor coupler.
- 2) Check for continuity between Black wire and ground at the front wheel speed sensor coupler.

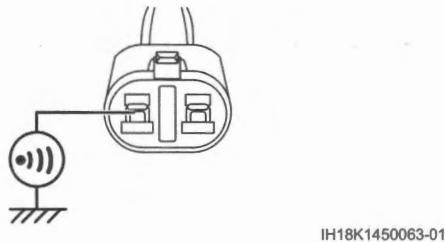**Is no continuity indicated?**

- Yes Inspect the wire harness. (Faulty B/R wire)  
No Faulty front wheel speed sensor. ☞ (Page 4E-32)

**Step 6**


- 1) Disconnect the front wheel speed sensor coupler.
- 2) Check for continuity between "T16" (W/R) on the ABS control unit coupler and W/R on the front wheel speed sensor coupler.

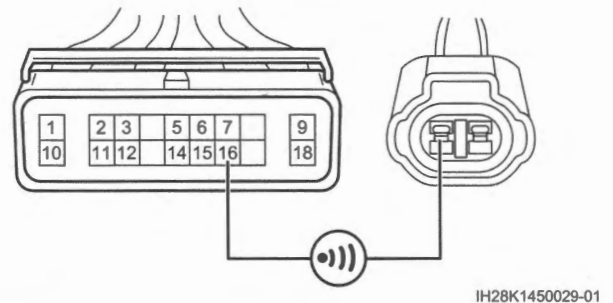**Is continuity indicated?**

- Yes Go to Step 7.  
No Inspect the wire harness. (W/R wire open)

**Step 7**

- 1) Check for continuity between "T7" (B/R) on the ABS control unit coupler and B/R on the front wheel speed sensor coupler.

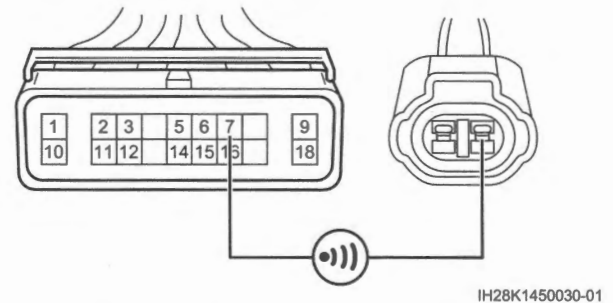**Is continuity indicated?**

- Yes Go to Step 8.  
No Inspect the wire harness. (B/R wire open)

**Step 8**

- 1) Measure the front wheel speed sensor current. Refer to "Wheel Speed Sensor Current" under "Wheel Speed Sensor and Sensor Rotor Inspection" (Page 4E-34).

**Is check result OK?**

- Yes Replace the ABS control unit/HU. ☞ (Page 4E-35)  
No Faulty front wheel speed sensor. ☞ (Page 4E-32)

## DTC C1644 (44)

BENH28K24504012

## Possible cause

**C1644 (44): Wheel Speed Sensor Signal Malfunction (R)**

Too great air gap, worn or missing teeth, noise, loose contact in wheel speed sensor coupler, wheel speed sensor not securely fastened, input amplifier in ABS control unit failure, etc.

## Troubleshooting

**Step 1**

- 1) Inspect the clearance between the rear wheel speed sensor and sensor rotor using the thickness gauge. (Page 4E-34)

**Is the clearance OK?**

Yes Go to Step 2.

No Adjust the clearance.

**Step 2**

- 1) Inspect the rear wheel speed sensor rotor for damage and check that no foreign objects are caught in the rotor openings. (Page 4E-34)


**Is the sensor rotor OK?**

Yes Go to Step 3.

No Clean or replace the sensor rotor. (Page 4E-34)

**Step 3**

- 1) Check that the rear wheel speed sensor (1) is mounted securely.

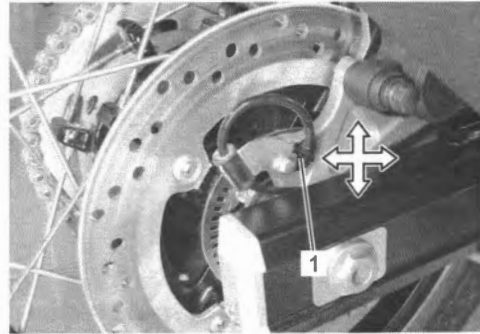

IH28K1450031-01

**Is the sensor mounted securely?**

Yes Go to DTC C1645 (45). (Page 4E-27)

No Tighten the mounting bolt.

## DTC C1645 (45)

BENH28K24504013

## Possible cause

**C1645 (45): Wheel Speed Sensor Circuit Open (R)**

Wheel speed sensor circuit open or short, poor contact in the wheel speed sensor coupler, input amplifier in ABS control unit failure, etc.


## Wiring Diagram

Refer to "ABS Control Unit / HU Diagram" (Page 4E-7).

## Troubleshooting


## Step 1

- 1) Turn ignition switch OFF.
- 2) Remove the left frame cover. (Page 9D-21)
- 3) Check the ABS control unit coupler (1) and rear wheel speed sensor coupler (2) for loose or poor contacts. If OK, then disconnect the ABS control unit coupler. (Page 4E-32)

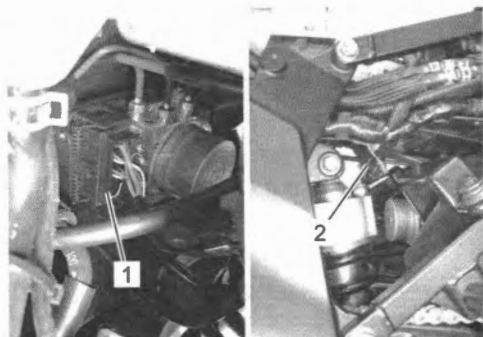

IH28K1450032-01

- 4) Check for continuity between "T15" (W/Y) and "T14" (B/Y) at the ABS control unit coupler.

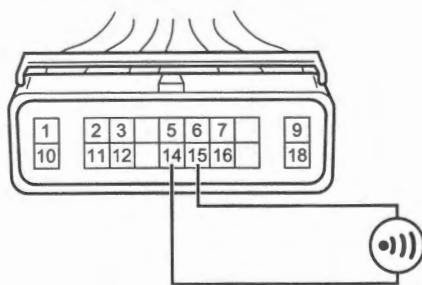


IH28K1450033-01

## Is no continuity indicated?

- Yes Go to Step 2.
- No
- Inspect the wire harness. (Faulty sensor wire)
  - Faulty rear wheel speed sensor. (Page 4E-33)

## Step 2

- 1) Check for continuity between "T15" (W/Y) and ground at the ABS control unit coupler.

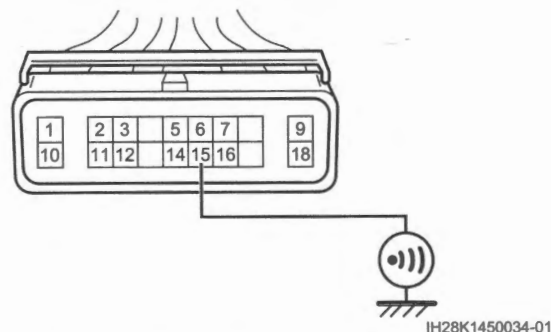


IH28K1450034-01

## Is no continuity indicated?

- Yes Go to Step 4.
- No Go to Step 3.

## Step 3

- 1) Disconnect the rear wheel speed sensor coupler.
- 2) Check for continuity between White wire and ground at the rear wheel speed sensor coupler.

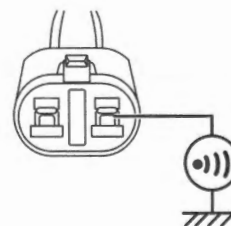


IH18K1450070-01

## Is no continuity indicated?

- Yes Inspect the wire harness. (Faulty W/Y wire)
- No Replace the rear wheel speed sensor. (Page 4E-33)

**Step 4**

- 1) Check for continuity between "T14" (B/Y) and ground at the ABS control unit coupler.

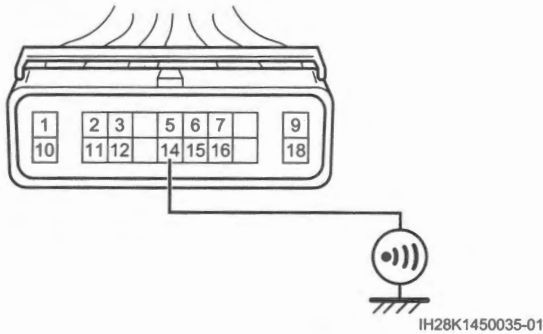


**Is no continuity indicated?**

- Yes Go to Step 6.
- No Go to Step 5.

**Step 5**

- 1) Disconnect the rear wheel speed sensor coupler.
- 2) Check for continuity between Black wire and ground at the rear wheel speed sensor coupler.

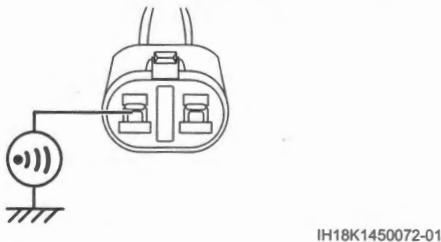


**Is no continuity indicated?**

- Yes Inspect the wire harness. (Faulty B/Y wire)
- No Replace the rear wheel speed sensor. (Page 4E-33)

**Step 6**

- 1) Disconnect the rear wheel speed sensor coupler.
- 2) Check for continuity between "T15" (W/Y) on the ABS control unit coupler and W/Y on the rear wheel speed sensor coupler.

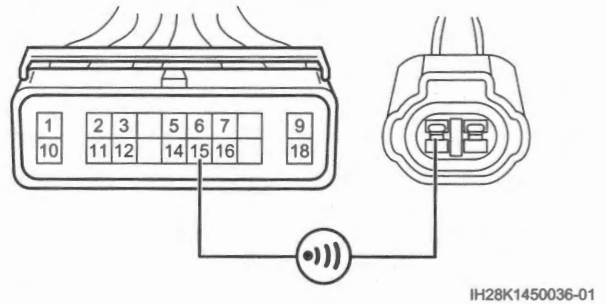


**Is continuity indicated?**

- Yes Go to Step 7.
- No Inspect the wire harness. (W/Y wire open)

**Step 7**

- 1) Check for continuity between "T14" (B/Y) on the ABS control unit coupler and B/Y on the rear wheel speed sensor coupler.

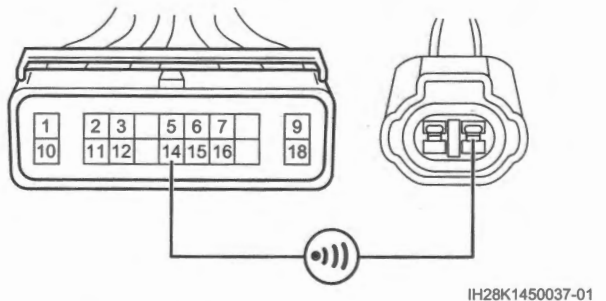

**Is continuity indicated?**

- Yes Go to Step 8.
- No Inspect the wire harness. (B/Y wire open)

**Step 8**

- 1) Measure the rear wheel speed sensor current. Refer to "Wheel Speed Sensor Current" under "Wheel Speed Sensor and Sensor Rotor Inspection" (Page 4E-34).

**Is check result OK?**

- Yes Replace the ABS control unit/HU. (Page 4E-35)
- No Replace the rear wheel speed sensor. (Page 4E-33)

## DTC C1647 (47) / C1648 (48)

BENH28K24504014

## Possible cause

- C1647 (47): Supply Voltage (Increased)**  
**C1648 (48): Supply Voltage (Decreased)**
- Faulty generator or regulator/rectifier
  - Faulty battery
  - Faulty ABS control unit
  - Faulty wire harness, etc.


## Wiring Diagram

Refer to "ABS Control Unit / HU Diagram" (Page 4E-7).

## Troubleshooting

## Step 1

- 1) Turn the ignition switch OFF.
- 2) Remove the seat. (Page 9D-19)
- 3) Measure the voltage between the (+) and (-) battery terminals.

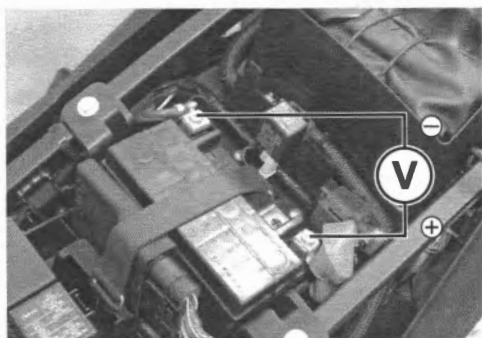

IH28K1450038-01

## Is the voltage 12 V or more?

- Yes Go to Step 2.
- No Charge or replace the battery. (Page 1J-11)

## Step 2


- 1) Start the engine at 5000 r/min with the dimmer / passing light switch set to HI.
- 2) Measure the voltage between the (+) and (-) battery terminals.

## Is the voltage 14.0 – 15.5 V?

- Yes Go to Step 3.
- No Inspect the generator and regulator/rectifier.
- Generator: (Page 1J-4)
  - Regulator/rectifier: (Page 1J-8)

## Step 3

- 1) Turn the ignition switch OFF.
- 2) Check the ABS control unit coupler for loose or poor contacts. If OK, then disconnect the ABS control unit coupler. (Page 4E-32)
- 3) Start the engine at 5000 r/min with the dimmer / passing light switch set to HI.
- 4) Measure the voltage between "T6" (W/Y) and "T9" (B/W) at the coupler.

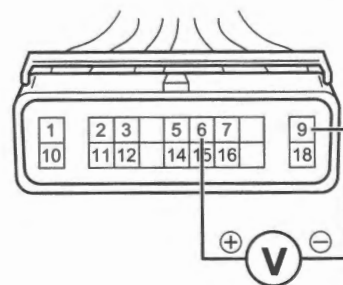

IH28K1450039-01

## Is the voltage same as Step 2?

- Yes Replace the ABS control unit/HU. (Page 4E-35)
- No Inspect the wire harness. (Faulty ignition or ground wire)

## DTC C1655 (55)

BENH28K24504015

## Possible cause

C1655 (55): ABS Control Unit Malfunction  
 Faulty ABS control unit

## Troubleshooting

## Step 1

- 1) Inspect the clearances of the front and rear wheel speed sensor – sensor rotor using the thickness gauge. (Page 4E-34)

## Are the clearances OK?

Yes Go to Step 2.

No Adjust the clearance.

## Step 2

- 1) Inspect both of the wheel speed sensor rotors for damage and check that no foreign objects are caught in the rotor openings. (Page 4E-34)

## Are the rotors OK?


Yes Go to Step 3.

No Clean or replace the rotor.

- Front wheel speed sensor rotor: (Page 4E-33)
- Rear wheel speed sensor rotor: (Page 4E-34)

## Step 3

- 1) Check that the front and rear wheel speed sensors (1) are mounted securely.

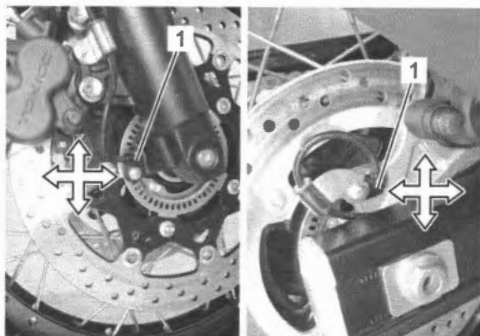

IH28K1450040-01

## Are the sensors mounted securely?

Yes Go to Step 4.

No Tighten the mounting bolts.

## Step 4

- 1) Delete DTCs (Page 4E-18) and repeat the code output procedure. (Page 4E-16)



IH28K1450041-02

## Is the DTC C1655 (55) output again?

Yes Replace the ABS control unit/HU. (Page 4E-35)

No Intermittent trouble.



## DTC C1661 (61)

BENH28K24504016

## Possible cause

**C1661 (61): ABS Solenoid Malfunction**

ABS valve relay circuit open or short, broken fuse for valve relay, faulty ABS valve relay, interruption of valve, failure output from ABS control unit, etc.

**Wiring Diagram**


Refer to "ABS Control Unit / HU Diagram" (Page 4E-7).

**Troubleshooting****Step 1**

- 1) Turn the ignition switch OFF.
- 2) Remove the seat. (Page 9D-19)
- 3) Open the fuse box and inspect the ABS valve fuse (15 A) (1).

**NOTE**

If a fuse is blown, find the cause of the problem and correct it before replacing the fuse.

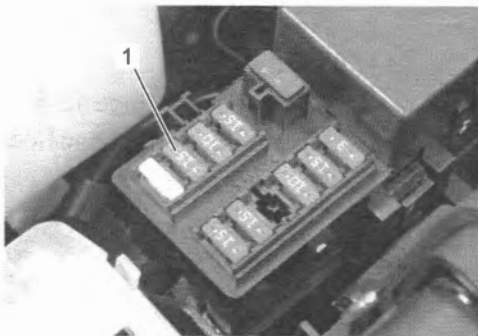

IH28K1450042-01

**Is the ABS valve fuse OK?**

- Yes    Go to Step 2.
- No     Replace the ABS valve fuse.


**Step 2**

- 1) Check the ABS control unit coupler (1) for loose or poor contacts. If OK, then disconnect the ABS control unit coupler. (Page 4E-32)



IH28K1450022-01

- 2) Measure the voltage between "T1" (R) and "T9" (B/W) at the coupler.

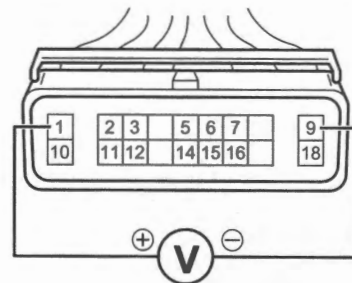

IH28K1450044-01

**Is the voltage 12 V or more?**

- Yes    Replace the ABS control unit/HU. (Page 4E-35)
- No     Inspect the wire harness. (Faulty solenoid or ground wire)


## Repair Instructions

### ABS Control Unit Coupler Disconnect and Connect

BENH28K24506001


#### Disconnect

- 1) Turn the ignition switch OFF.
- 2) Remove the pre-load adjuster (1).

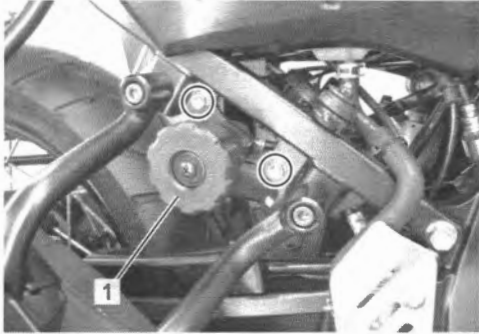

IH28K1450045-01


- 3) Disconnect the ABS control unit coupler (1) as follows:
  - a) Push the lock (2) to release locking of the lock lever (3).
  - b) Turn the lock lever in direction of arrow until it stops.

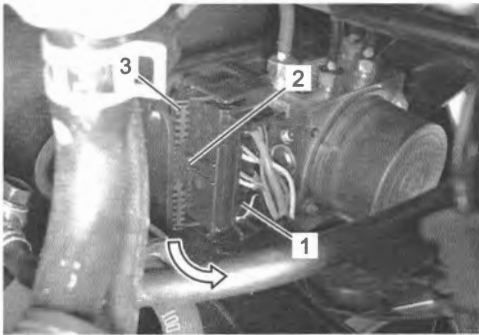

IH28K1450046-01

#### Connect

- 1) Connect the ABS control unit coupler (1) as follows:
  - a) Make sure that lock lever (2) is in unlock position.
  - b) Insert the coupler to ABS control unit it stop with lock lever in unlocked position.
  - c) Turn the lock lever in direction of arrow to lock the coupler securely.

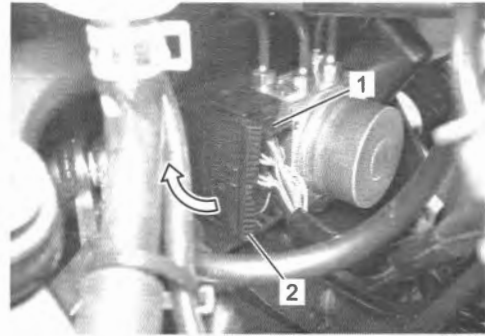

IH28K1450047-01

- 2) Install the pre-load adjuster. Refer to "Rear Shock Absorber Removal and Installation" in Section 2C (Page 2C-3).


### Front Wheel Speed Sensor Removal and Installation

BENH28K24506002

Refer to "Front Wheel Speed Sensor Routing Diagram" (Page 4E-8).


#### Removal

- 1) Turn the ignition switch OFF.
- 2) Remove the air cleaner box. (Page 1D-6)
- 3) Disconnect the front wheel speed sensor lead wire coupler (1) and clamp (2).

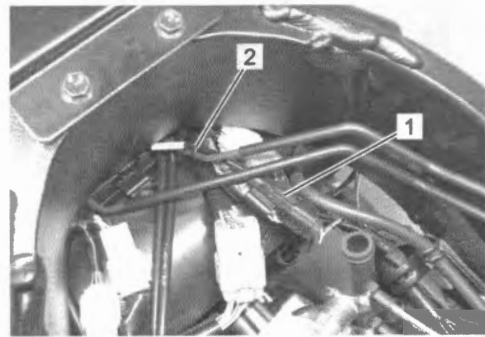

IH28K1450048-01

- 4) Disconnect the front wheel speed sensor lead wire (1) from the clamps (2).

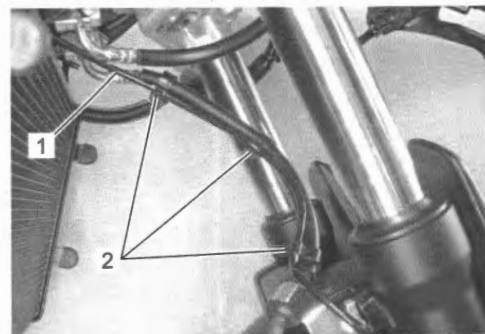

IH28K1450049-01

- 5) Remove the front wheel speed sensor (1).



IH28K1450050-01

### Installation

Install the front wheel speed sensor in the reverse order of removal. Pay attention to the following point:

- After installing the front wheel speed sensor, check the clearance between the front wheel speed sensor and sensor rotor. Refer to "Wheel Speed Sensor and Sensor Rotor Inspection" (Page 4E-34).


### Rear Wheel Speed Sensor Removal and Installation

BENH28K24506003

Refer to "Rear Wheel Speed Sensor Routing Diagram" (Page 4E-9).


### Removal

- 1) Remove the frame covers. ☞(Page 9D-21)
- 2) Turn the ignition switch OFF.
- 3) Disconnect the rear wheel speed sensor lead wire coupler (1) and clamp (2).

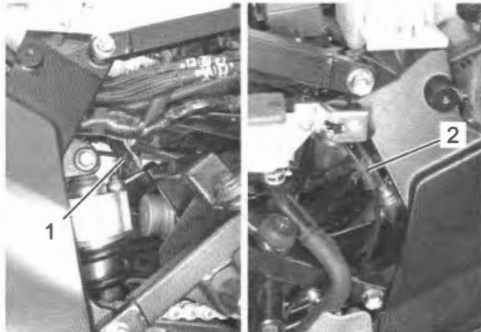

IH28K1450051-01

- 4) Disconnect the rear wheel speed sensor lead wire (1) from the clamp (2) and remove the rear wheel speed sensor (3).

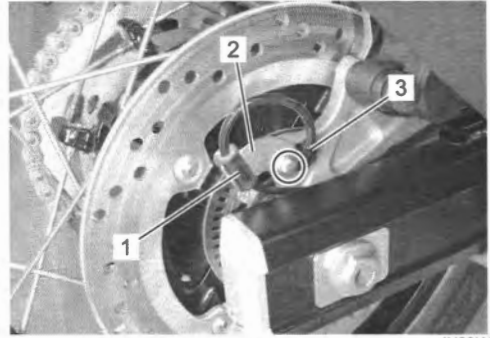

IH28K1450052-01

### Installation

Install the rear wheel speed sensor in the reverse order of removal. Pay attention to the following point:

- After installing the rear wheel speed sensor, check the clearance between the rear wheel speed sensor and sensor rotor. Refer to "Wheel Speed Sensor and Sensor Rotor Inspection" (Page 4E-34).

### Front Wheel Speed Sensor Rotor Removal and Installation

BENH28K24506004

### Removal

- 1) Remove the front wheel. ☞(Page 2D-6)
- 2) Remove the front wheel speed sensor rotor (1).




IH28K1450053-01

**Installation**

- 1) Install the wheel speed sensor rotor as the letters "50T" face outside.
- 2) Tighten the front wheel speed sensor rotor bolts (1) to the specified torque.

**Tightening torque**

**Front wheel speed sensor rotor bolt (a): 6.3 N·m (0.64 kgf-m, 4.65 lbf-ft)**

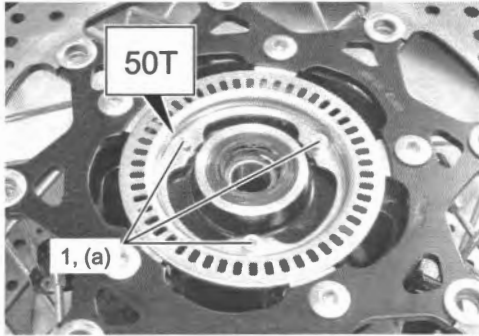


- 3) Install the front wheel assembly. (Page 2D-6)
- 4) Check the clearance between the front wheel speed sensor and sensor rotor. Refer to "Wheel Speed Sensor and Sensor Rotor Inspection" (Page 4E-34).

**Rear Wheel Speed Sensor Rotor Removal and Installation**

BENH28K24506005

**Removal**

- 1) Remove the rear wheel. (Page 2D-14)
- 2) Remove the rear wheel speed sensor rotor (1).

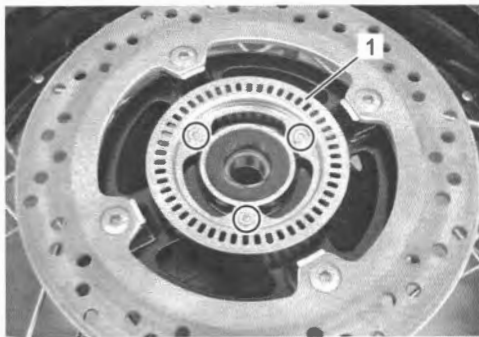


**Installation**

- 1) Install the wheel speed sensor rotor as the letters "50T" face outside.
- 2) Tighten the rear wheel speed sensor rotor bolts (1) to the specified torque.

**Tightening torque**

**Rear wheel speed sensor rotor bolt (a): 6.3 N·m (0.64 kgf-m, 4.65 lbf-ft)**

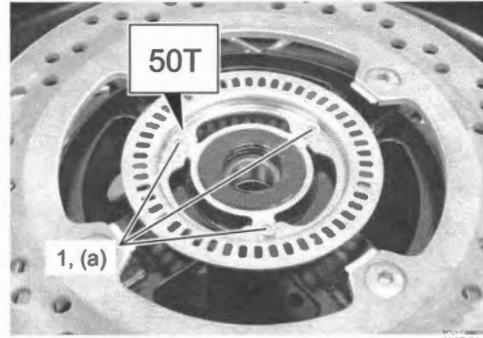

IH28K1450056-01

- 3) Install the rear wheel assembly. (Page 2D-14)
- 4) Check the clearance between the rear wheel speed sensor and sensor rotor. Refer to "Wheel Speed Sensor and Sensor Rotor Inspection" (Page 4E-34).

**Wheel Speed Sensor and Sensor Rotor Inspection**

BENH28K24506006

**Wheel Speed Sensor – Sensor Rotor Clearance**

Check the clearance between the wheel speed sensor (1) and sensor rotor (2) using the thickness gauge.


**Wheel speed sensor – Sensor rotor clearance**

**Front [Standard]: 0.28 – 1.65 mm (0.0111 – 0.0649 in)**


**Rear [Standard]: 0.28 – 1.45 mm (0.0111 – 0.0570 in)**

**Special tool**

- (A): 09900-20803  
 (B): 09900-20806

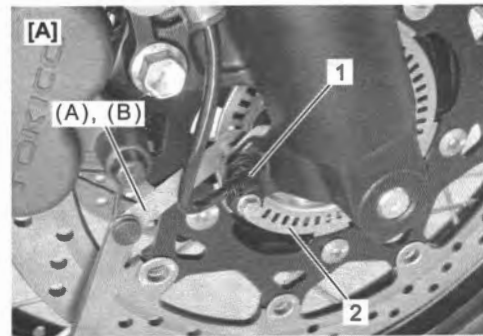

IH28K1450057-01

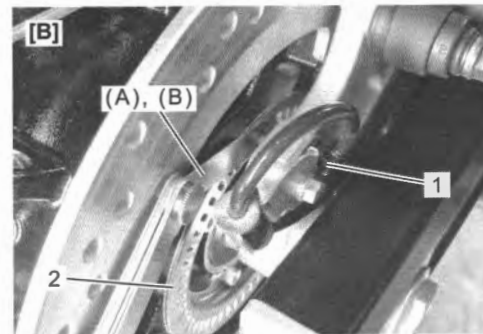



IH28K1450058-01

[A]: Front



[B]: Rear

### Wheel Speed Sensor



- 1) Remove the wheel speed sensor.
  - Front:  (Page 4E-32)
  - Rear:  (Page 4E-33)
- 2) Inspect the wheel speed sensor for damage. Clean the sensor if any metal particle or foreign material stuck on it.




IH28K1450059-01

- 3) After finishing the speed sensor inspection, install the wheel speed sensor.
  - Front:  (Page 4E-32)
  - Rear:  (Page 4E-33)

### Wheel Speed Sensor Current

- 1) Disconnect the wheel speed sensor coupler.
  - Front:  (Page 4E-32)
  - Rear:  (Page 4E-33)
- 2) Connect three 1.5 V dry cells (1) in series as shown and make sure that their total voltage is more than 4.5 V. Measure the current between (+) dry cells terminal and White wire on the wheel speed sensor coupler.

**Normal value**  
5.9 – 16.8 mA

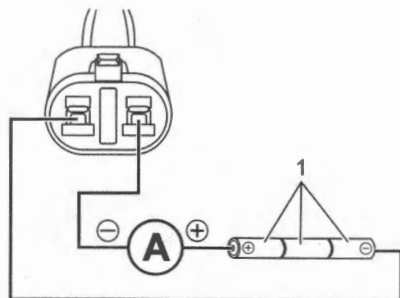




IH18K1450081-01

- 3) Install the removed parts.

### Wheel Speed Sensor Rotor

- 1) Raise the wheel off the ground and support the motorcycle with a jack.
- 2) Check that no wheel speed sensor rotor teeth are broken and that no foreign objects are caught in the wheel speed sensor. If any defects are found, replace the wheel speed sensor rotor with a new one.

- Front:  (Page 4E-33)
- Rear:  (Page 4E-34)

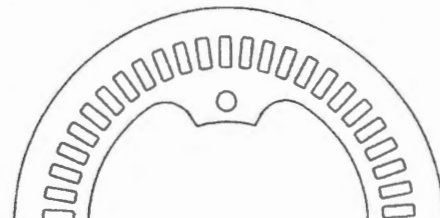

I718H1450064-01

### ABS Control Unit / HU Removal and Installation

BENH28K24506007

Refer to "Front Brake Hose Routing Diagram" in Section 4A (Page 4A-1).



#### Removal

#### **▲ WARNING**

When storing the brake fluid, seal the container completely and keep away from children.

#### **NOTICE**

- This brake system is filled with an ethylene glycol-based DOT 4 brake fluid. Do not mix different types of fluid such as silicone-based or petroleum-based.
- Do not use any brake fluid taken from old, used or unsealed containers. Never reuse brake fluid left over from the last servicing or stored for long periods.
- Handle brake fluid with care: the fluid reacts chemically with paint, plastics, rubber materials etc. and will damage them severely.
- The ABS control unit/HU cannot be disassembled.


- 1) Turn the ignition switch OFF.
- 2) Drain the brake fluid.  (Page 4A-11)
- 3) Remove the battery holder.  (Page 9D-22)
- 4) Remove the ABS control unit/HU cover (1).



IH28K1450060-01


5) Disconnect the ABS control unit coupler. (Page 4E-32)

6) Disconnect the wiring harness clamp (1).

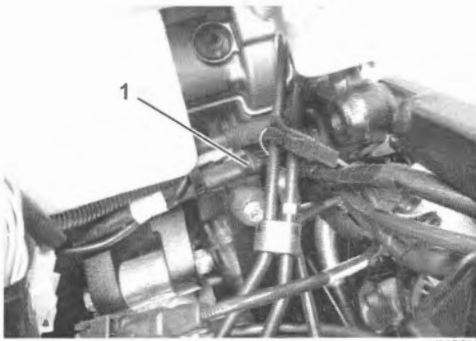


IH28K1450061-01

7) Remove the flare nuts (1) and rear brake hose clamp bolts (2).

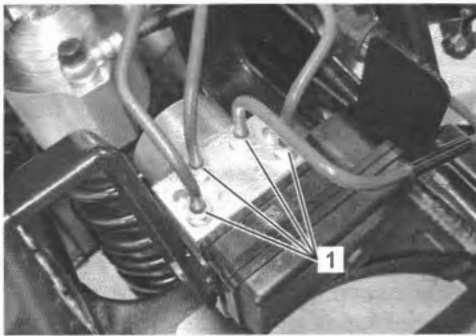


IH28K1450062-02

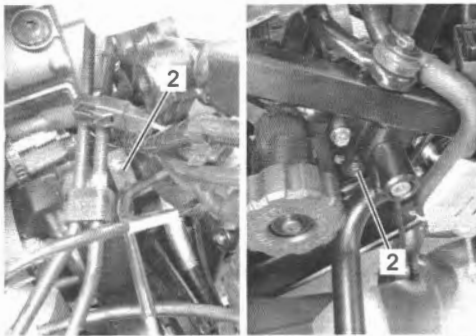


IH28K1450063-02

8) Remove the holder mounting bolts (1).

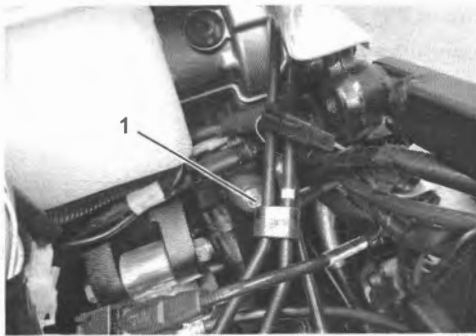


IH28K1450064-01

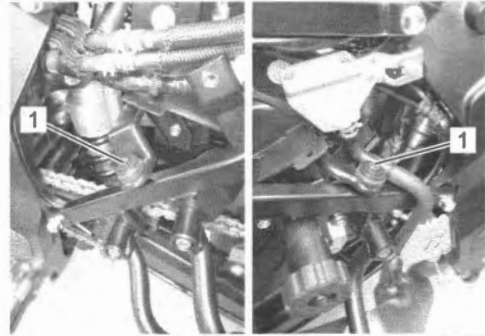

IH28K1450065-01

9) Disconnect the brake pipes and remove the ABS control unit/HU assembly.

10) Remove the ABS control unit/HU (1) from the holder (2).

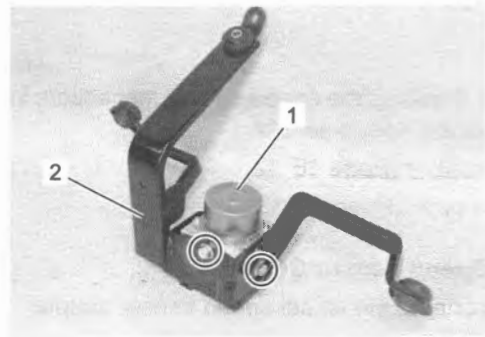


IH28K1450066-01

### Installation

#### NOTE


Make sure to hold the brake pipe when tightening the flare nut, or it may be misaligned.

1) Install the ABS control unit/HU holder (1).

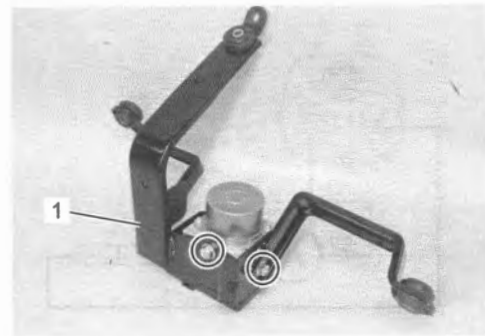


IH28K1450067-01

- 2) Install the ABS control unit/HU assembly (1) and connect the brake pipes (2).

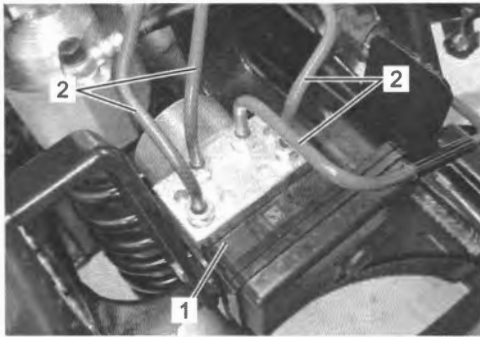


IH28K1450068-01


- 3) Temporarily tighten the holder mounting bolts (1) and rear brake hose clamp bolts (2).

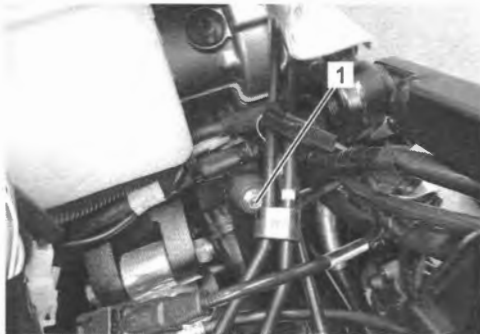

IH28K1450069-01

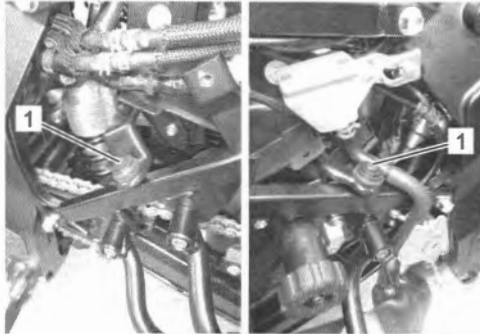

IH28K1450065-01

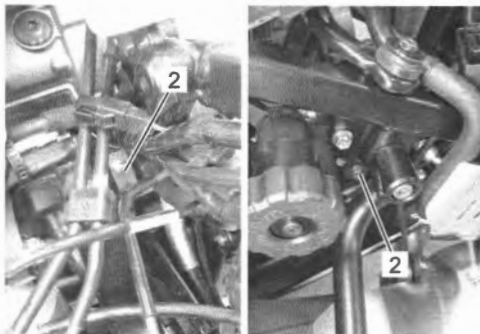


IH28K1450071-01

- 4) Tighten the brake pipe flare nuts (1) to the specified torque.

#### Tightening torque

Brake pipe flare nut (a): 16 N·m (1.6 kgf-m, 12.0 lbf-ft)

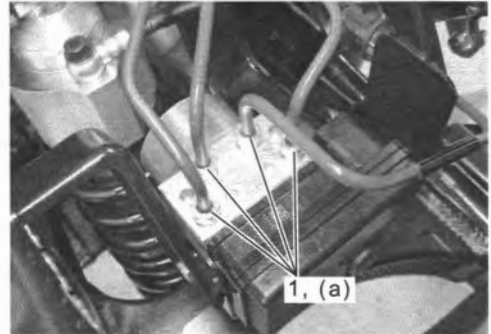


IH28K1450072-01

- 5) Tighten the holder mounting bolts and rear brake hose clamp bolts.  
6) Connect the wiring harness clamp (1).



IH28K1450061-01

- 7) Connect the ABS control unit coupler. (Page 4E-32)  
8) Install the ABS control unit/HU cover (1).

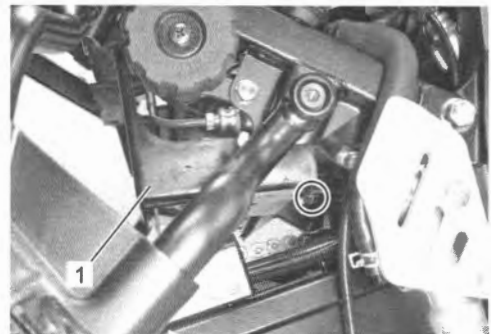

IH28K1450060-01

- 9) Install the battery holder. (Page 9D-22)  
10) Bleed air from the brake fluid circuit. (Page 4A-8)

## Specifications

### Tightening Torque Specifications

BENH28K24507001

Fastening part	Tightening torque			Note
	N·m	kgf·m	lbf·ft	
Front wheel speed sensor rotor bolt	6.3	0.64	4.65	☞ (Page 4E-34)
Rear wheel speed sensor rotor bolt	6.3	0.64	4.65	☞ (Page 4E-34)
Brake pipe flare nut	16	1.6	12.0	☞ (Page 4E-37)




#### Reference:

For the tightening torques of fasteners not specified in this page, refer to:  
 “Fasteners Information” in Section 0C (Page 0C-11)

## Special Tools and Equipment

### Special Tool

BENH28K24508001

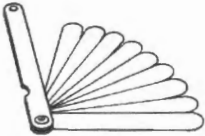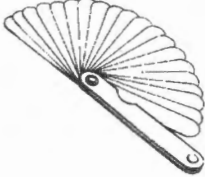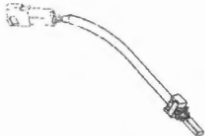09900-20803 Thickness gauge ☞ (Page 4E-34) 	09900-20806 Thickness gauge ☞ (Page 4E-34) 
09930-82760 Mode selection switch ☞ (Page 4E-4) / ☞ (Page 4E-16) / ☞ (Page 4E-17) / ☞ (Page 4E-18) 	



## Section 5

## Transmission / Transaxle

## CONTENTS

<b>Precautions</b> .....	<b>5-1</b>	<b>Special Tools and Equipment</b> .....	<b>5B-19</b>
<b>Precautions</b> .....	<b>5-1</b>	Recommended Service Material .....	5B-19
Precautions for Transmission / Transaxle.....	5-1	Special Tool .....	5B-19
<b>Manual Transmission</b> .....	<b>5B-1</b>	<b>Clutch</b> .....	<b>5C-1</b>
<b>Diagnostic Information and Procedures</b> .....	<b>5B-1</b>	<b>Precautions</b> .....	<b>5C-1</b>
Manual Transmission Symptom Diagnosis .....	5B-1	Precautions for Clutch System.....	5C-1
<b>Repair Instructions</b> .....	<b>5B-2</b>	<b>Schematic and Routing Diagram</b> .....	<b>5C-1</b>
Transmission Components .....	5B-2	Clutch Cable Routing Diagram.....	5C-1
Transmission Removal and Installation .....	5B-3	<b>Diagnostic Information and Procedures</b> .....	<b>5C-1</b>
Transmission Construction.....	5B-4	Clutch System Symptom Diagnosis .....	5C-1
Countershaft Assembly / Driveshaft		<b>Repair Instructions</b> .....	<b>5C-2</b>
Assembly Disassembly and Reassembly .....	5B-5	Clutch Lever Position Switch Inspection .....	5C-2
Gearshift Fork / Gearshift Cam Inspection.....	5B-8	Clutch Cable Play On-Vehicle Inspection and	
Left Crankcase Bearing / Oil Seal Removal		Adjustment .....	5C-2
and Installation.....	5B-9	Clutch Control System Components .....	5C-4
Right Crankcase Bearing Removal and		Clutch Cable Removal and Installation .....	5C-4
Installation.....	5B-10	Clutch Lever Removal and Installation.....	5C-5
Transmission Bearing / Oil Seal Inspection .....	5B-11	Clutch Push Rod (Left) / Clutch Release	
GP Switch Inspection .....	5B-11	Camshaft Removal and Installation .....	5C-7
GP Switch Removal and Installation.....	5B-12	Clutch Push Rod (Left) Inspection .....	5C-8
Gearshift Lever Removal and Installation .....	5B-12	Clutch Components.....	5C-9
Gearshift Lever Height Inspection and		Clutch Removal.....	5C-10
Adjustment .....	5B-13	Clutch Installation.....	5C-12
Gearshift Lever Construction .....	5B-13	Clutch Parts Inspection .....	5C-16
Gearshift Shaft / Gearshift Cam Plate		Primary Drive Gear Removal and Installation ...	5C-17
Components.....	5B-14	Primary Drive Gear Inspection .....	5C-18
Gearshift Shaft / Gearshift Cam Plate		Primary Drive Gear Disassembly and	
Removal and Installation.....	5B-14	Assembly.....	5C-18
Gearshift Linkage Inspection .....	5B-17	<b>Specifications</b> .....	<b>5C-20</b>
Gearshift Shaft Oil Seal Removal and		Tightening Torque Specifications .....	5C-20
Installation.....	5B-17	<b>Special Tools and Equipment</b> .....	<b>5C-21</b>
<b>Specifications</b> .....	<b>5B-18</b>	Recommended Service Material .....	5C-21
Tightening Torque Specifications.....	5B-18	Special Tool .....	5C-21

# Precautions

## Precautions

### Precautions for Transmission / Transaxle

Refer to "General Precautions" in Section 00 (Page 00-1).

BENH28K25000001

# Manual Transmission

## Diagnostic Information and Procedures

### Manual Transmission Symptom Diagnosis


BENH28K25204001

Condition	Possible cause	Correction / Reference Item
<b>Noisy engine (noise seems to come from the transmission)</b>	Worn or rubbing gear.	Replace. ⌚(Page 5B-5)
	Worn countershaft spline.	Replace countershaft. ⌚(Page 5B-5)
	Worn driveshaft spline.	Replace driveshaft. ⌚(Page 5B-5)
	Worn bearing.	Replace. <ul style="list-style-type: none"> <li>• Left side: ⌚(Page 5B-9)</li> <li>• Right side: ⌚(Page 5B-10)</li> <li>• Drive shaft side: ⌚(Page 5B-5)</li> </ul>
<b>Transmission will not shift</b>	Broken gearshift cam.	Replace. ⌚(Page 5B-3)
	Distorted gearshift fork.	Replace. ⌚(Page 5B-3)
	Worn gearshift pawl.	Replace. ⌚(Page 5B-14)
<b>Transmission will not shift back</b>	Broken gearshift shaft return spring.	Replace. ⌚(Page 5B-14)
	Rubbing or stuck gearshift shaft.	Repair or replace. ⌚(Page 5B-14)
	Worn or distorted gearshift fork.	Replace. ⌚(Page 5B-3)
<b>Transmission jumps out of gear</b>	Worn shifting gears on driveshaft or countershaft.	Replace. ⌚(Page 5B-5)
	Worn or distorted gearshift fork.	Replace. ⌚(Page 5B-3)
	Weakened gearshift cam stopper spring.	Replace. ⌚(Page 5B-14)
	Worn gearshift cam plate.	Replace. ⌚(Page 5B-14)

# Repair Instructions

## Transmission Components

BENH28K25206001

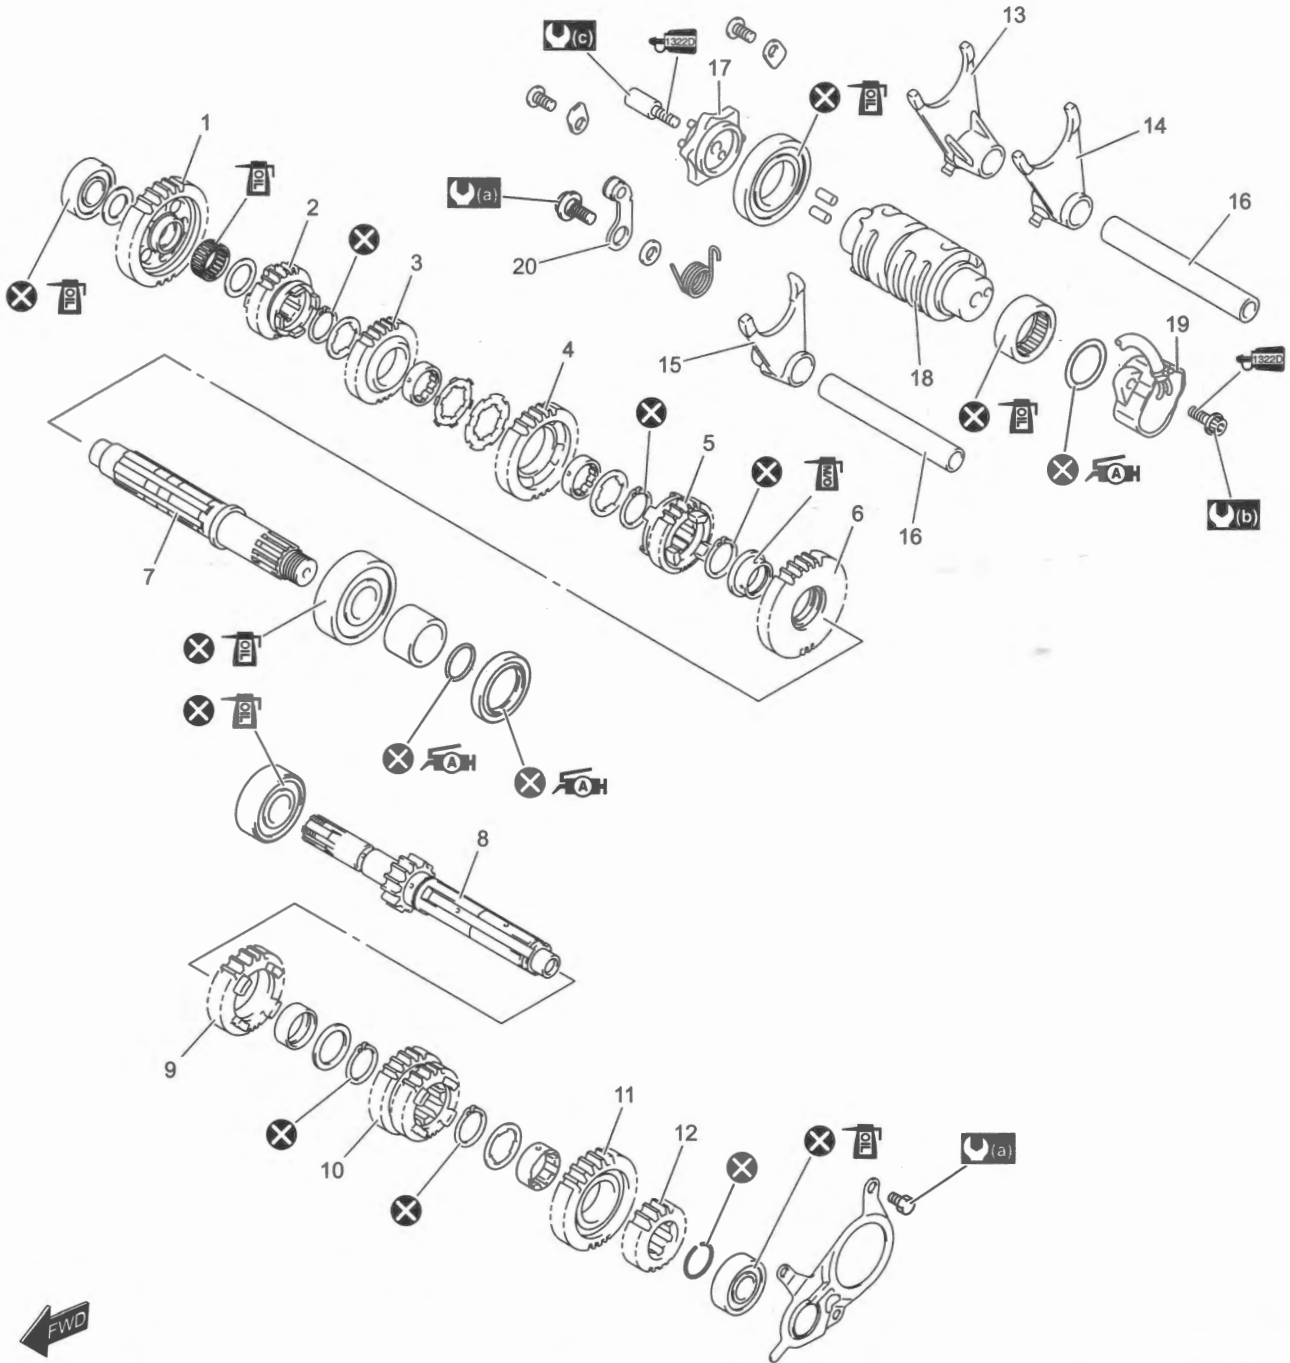

IH28K1520022-02

1. 1st driven gear	11. 6th drive gear	: 10 N-m (1.0 kgf-m, 7.5 lbf-ft)
2. 5th driven gear	12. 2nd drive gear	: 6.0 N-m (0.61 kgf-m, 4.45 lbf-ft)
3. 4th driven gear	13. Gearshift fork No. 1	: 13 N-m (1.3 kgf-m, 9.5 lbf-ft)
4. 3rd driven gear	14. Gearshift fork No. 2	: Apply oil.
5. 6th driven gear	15. Gearshift fork No. 3	: Apply molybdenum oil solution.
6. 2nd driven gear	16. Gearshift fork	: Apply grease to oil seal lip.
7. Driveshaft	17. Gearshift cam plate	: Apply thread lock to thread part.
8. Countershaft/1st drive gear	18. Gearshift cam	: Do not reuse.
9. 5th drive gear	19. Gear position switch	
10. 3rd/4th drive gear	20. Gearshift cam stopper plate	


## Transmission Removal and Installation

BENH28K25206002

Refer to "Crankcase Assembly Disassembly" in Section 1D (Page 1D-66) and "Crankcase Assembly Reassembly" in Section 1D (Page 1D-69).


### Removal

- 1) Remove the gearshift fork shafts (1), gearshift forks (2) and gearshift cam (3).

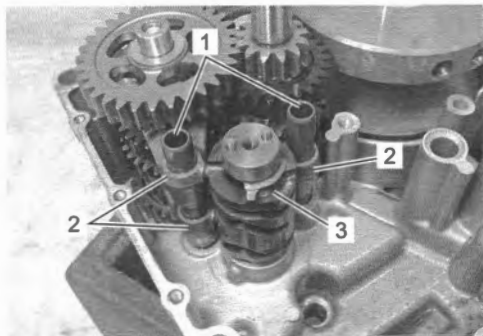

IH18K1520001-02


- 2) Remove the driveshaft assembly (1) with the countershaft assembly (2).

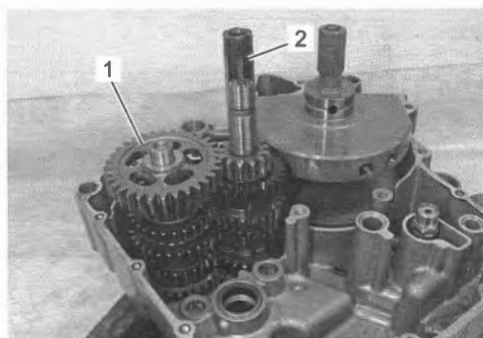

IH18K1520002-01

### Installation

- 1) Install the driveshaft assembly (1) with the countershaft assembly (2).

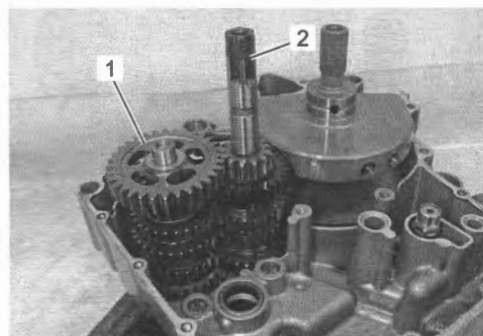


IH18K1520062-01

- 2) Install the gearshift forks No. 1 (1), No. 2 (2) and No. 3 (3).

### NOTE

The shape of gearshift forks No. 1, No. 2 and No. 3 is different.

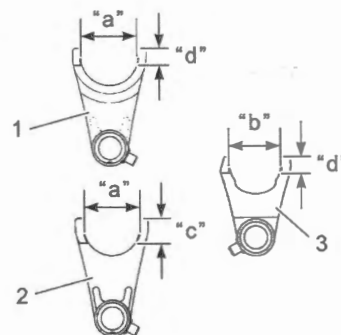

IH18K1520064-01

"a": 35 mm (1.4 in)	"c": 15 mm (0.59 in)
"b": 31 mm (1.2 in)	"d": 10 mm (0.39 in)




IH18K1520004-01


- 3) Install the gearshift cam (1) so that the pins (2) face upward.
- 4) Install the gearshift fork shafts (3).

### NOTE

- After the gearshift fork shafts and gearshift forks have been fitted, make sure that the gears engage normally.
- Set the transmission gears to the neutral position.

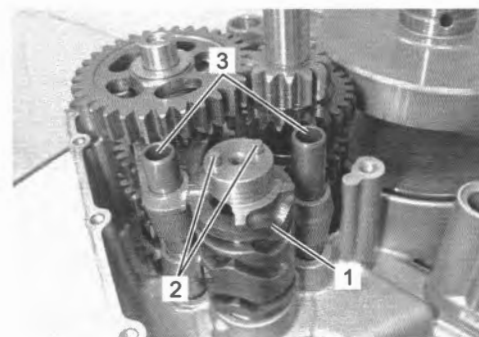

IH18K1520005-01

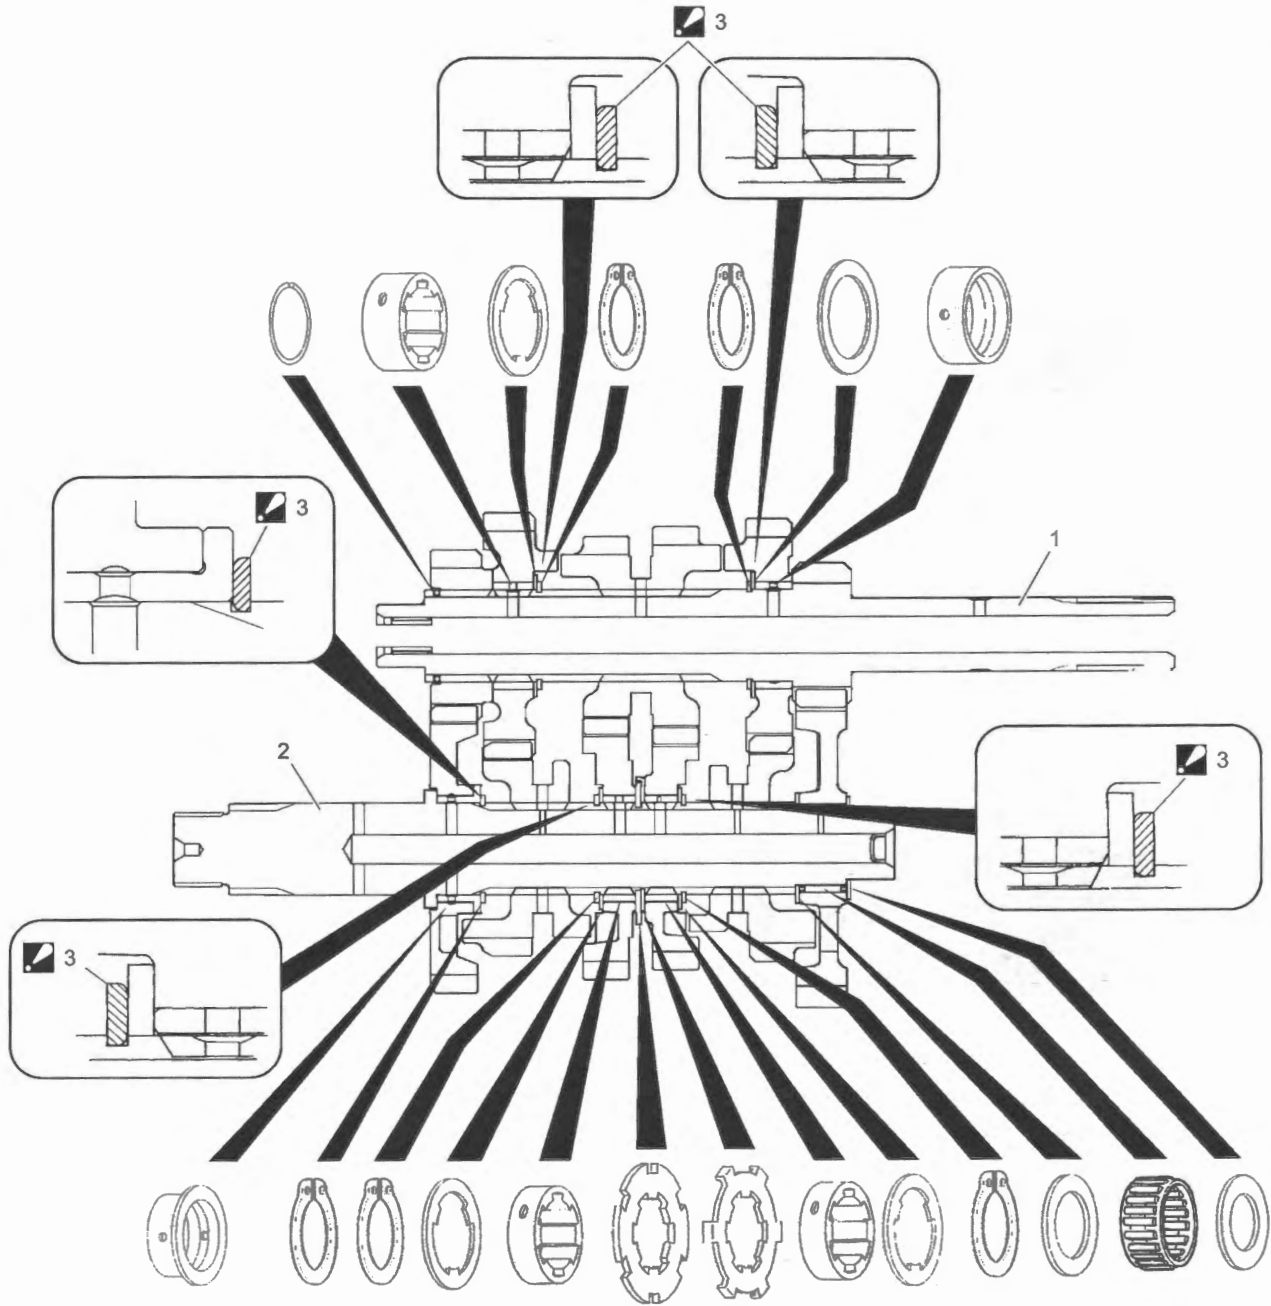

IH28K1520023-01

1. Countershaft	2. Driveshaft	 3. Snap ring : Face the sharp edge outside.
-----------------	---------------	--

## Countershaft Assembly / Driveshaft Assembly Disassembly and Reassembly

BENH28K25206004

Refer to "Transmission Removal and Installation" (Page 5B-3).

### Disassembly


#### NOTE

Identify the position of each removed part.  
Organize the parts in their respective groups  
(i.e., drive or driven) so that they can be  
reinstalled in their original positions.

### Countershaft


- 1) Remove the 6th drive gear snap ring (1) from its groove and slide it towards the 3rd/4th drive gears (2).

**Special tool**  
09900-06104

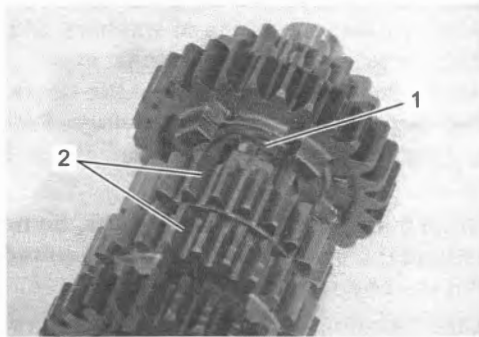

IH18K1520007-02


- 2) Slide the 6th drive gear (1) and 2nd drive gear (2) toward the 3rd/4th drive gears (3), then remove the 2nd drive gear circlip (4).
- 3) Remove the 2nd drive gear (2), 6th drive gear (1), 6th drive gear bushing and washer.

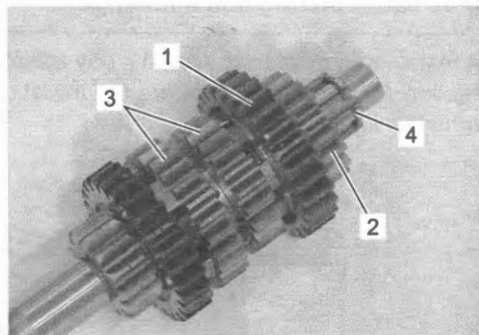

IH18K1520008-01

- 4) Remove the 6th drive gear snap ring (1) and 3rd/4th drive gears (2).


**Special tool**  
09900-06107

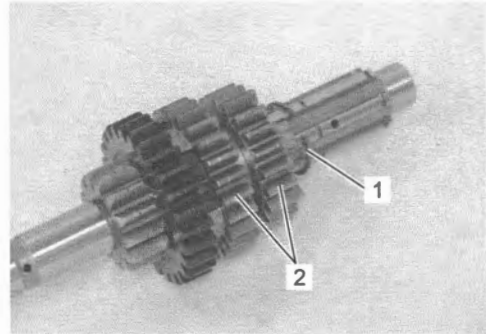

IH18K1520009-01


- 5) Remove the 5th drive gear snap ring (1), washer (2) and 5th drive gear (3).

**Special tool**  
09900-06107

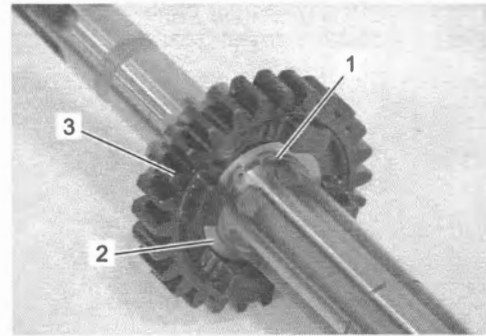

IH18K1520010-01


- 6) Remove the 5th drive gear bushing (1).

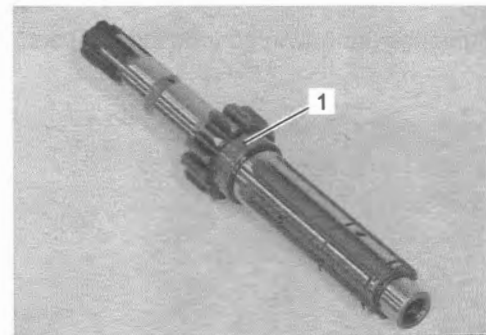


IH18K1520011-01

**Driveshaft**

- 1) Remove the washer (1) and 1st driven gear (2).
- 2) Remove the 1st driven gear bearing (3), washer (4) and 5th driven gear (5).

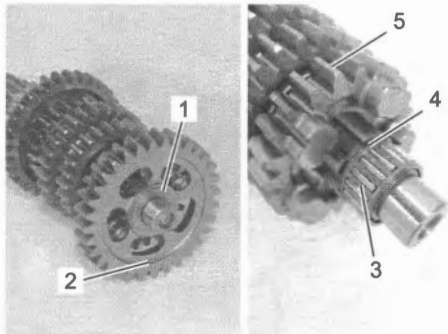

IH28K1520024-01

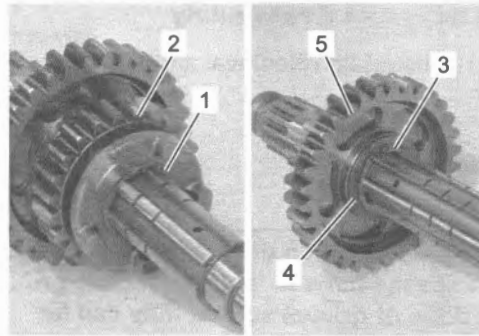


IH18K1520015-01

- 3) Remove the snap ring (1), washer (2) and 4th driven gear (3).


**Special tool**  
**09900-06107**

- 4) Remove the 4th driven gear bushing (4), lock washers (5) and 3rd driven gear (6).

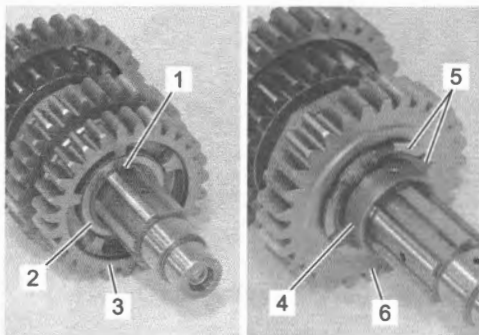

IH18K1520013-01

- 5) Remove the 3rd driven gear bushing (1) and washer (2).

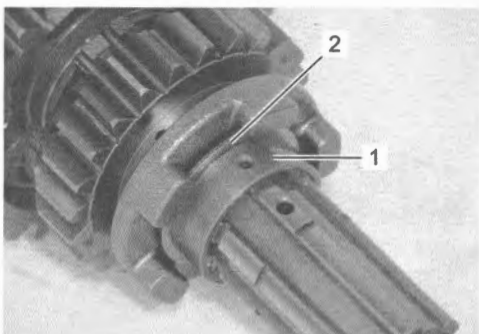

IH18K1520014-01

- 6) Remove the snap ring (1) and 6th driven gear (2).
- 7) Remove the snap ring (3) and 2nd driven gear bushing (4).

**Special tool**  
**09900-06107**


- 8) Remove the 2nd driven gear (5).

**Reassembly**

Reassemble the countershaft and driveshaft in the reverse order of disassembly. Pay attention to the following points:

**NOTE**

- When reassembling the transmission gears, attention must be given to the locations and positions of washers and snap rings. The cross sectional view shows the correct position of the gears, bushings, washers and snap rings. Refer to "Transmission Construction" (Page 5B-4).
  - When installing a new snap rings, do not expand the end gap larger than required to slip the snap rings over the shaft.
  - After installing a snap rings, make sure that it is completely seated in its groove and securely fitted.
  - Rotate the bearing to inspect for abnormal noises and smooth rotation. Replace the bearing if there is anything unusual.
  - Before installing the gears, apply engine oil to each rotating and sliding part.
- 
- When installing a new snap ring (1), pay attention to its direction. Fit it to the side where the thrust (2) is as shown in the figure.

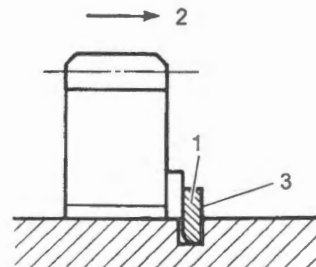

3. Sharp edge


IE31J1520022-01



### Driveshaft


- Apply molybdenum oil solution to the 2nd driven gear bushing.

**"A": Assembly lubrication (Molybdenum oil solution)**

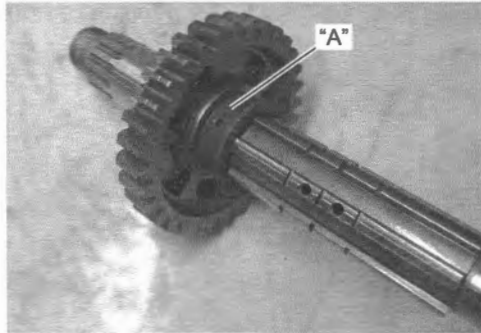


IH18K1520016-01

- When installing the 3rd driven gear bushing (1) onto the driveshaft, align the shaft oil hole (2) with the bushing oil hole (3).

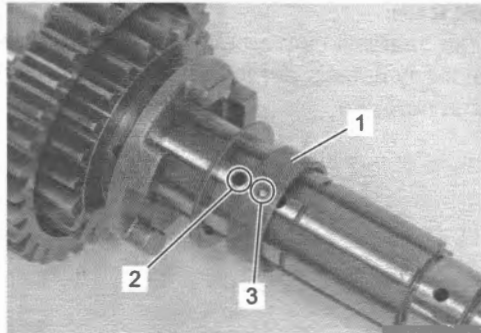


IH18K1520017-01

- After installing the 3rd driven gear (1) onto the driveshaft, install lock washer (2) onto the driveshaft, and turn it so it fits into the grooves (3).

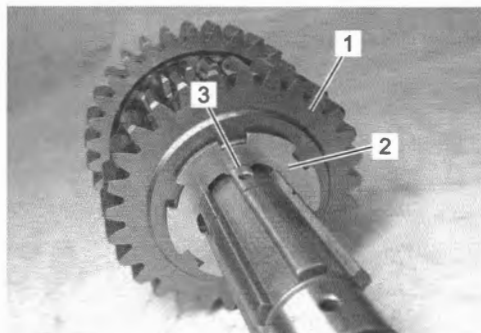


IH18K1520018-01

- Fit the grooves (1) of lock washer (2) into the claws (3) of lock washer (4).

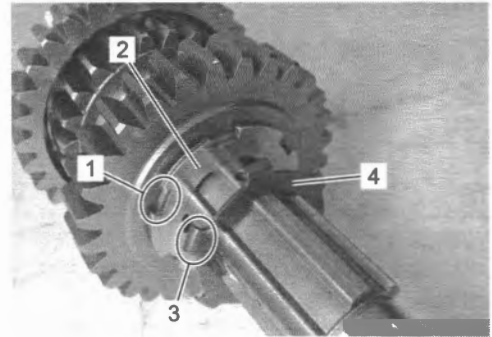


IH18K1520019-02

- When install the 4th driven gear bushing (1) onto the driveshaft, align the shaft oil hole (2) with the bushing oil hole (3).

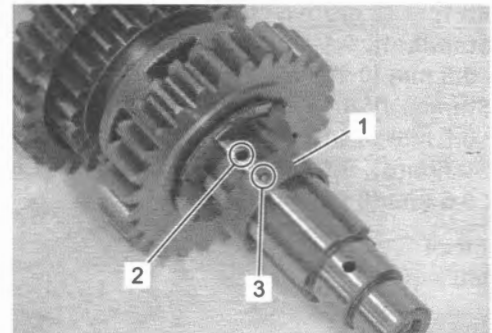

IH18K1520020-01


- Apply engine oil to the 1st driven gear bearing.

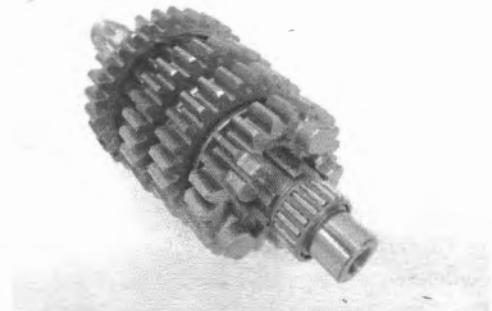

IH28K1520025-01

### Countershaft

When installing the 6th drive gear bushing (1) onto the countershaft, align the shaft oil hole (2) with the bushing hole (3).

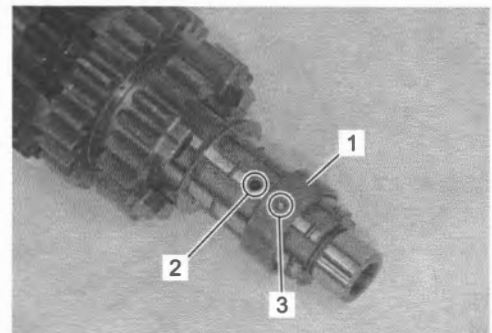

IH18K1520022-01

**Gearshift Fork / Gearshift Cam Inspection**

BENH28K25206005

Refer to "Transmission Removal and Installation" (Page 5B-3).

**Gearshift Fork to Groove Clearance**

**NOTE**


The clearance for each gearshift fork plays an important role in the smoothness and positiveness of the shifting action.

Using a thickness gauge, check the gearshift fork clearance in the groove of its gear. If the clearance checked is noted to exceed the limit specified, replace the fork or its gear, or both.

**Gearshift fork to groove clearance**

- No. 1 [Standard]: 0.1 – 0.3 mm (0.004 – 0.011 in)  
[Limit]: 0.5 mm (0.019 in)
- No. 2 [Standard]: 0.1 – 0.3 mm (0.004 – 0.011 in)  
[Limit]: 0.5 mm (0.019 in)
- No. 3 [Standard]: 0.1 – 0.3 mm (0.004 – 0.011 in)  
[Limit]: 0.5 mm (0.019 in)

**Special tool**  
(A): 09900–20803

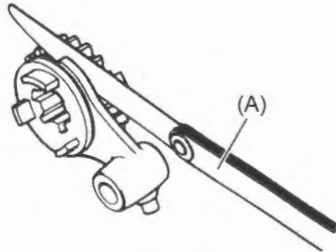

IE31J1520026-01


**Gearshift Fork Groove Width**

Measure the gearshift fork groove width using the vernier calipers.

**Gearshift fork groove width**

- No. 1 [Standard]: 5.5 – 5.6 mm (0.217 – 0.220 in)
- No. 2 [Standard]: 5.5 – 5.6 mm (0.217 – 0.220 in)
- No. 3 [Standard]: 5.5 – 5.6 mm (0.217 – 0.220 in)

**Special tool**  
(A): 09900–20102

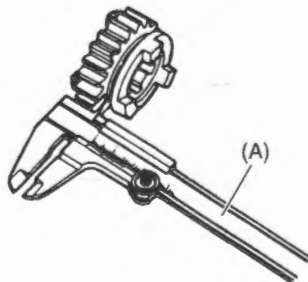

IE31J1520027-01


**Gearshift Fork Thickness**

Measure the gearshift fork thickness using the vernier calipers.

**Gearshift fork thickness**

- No. 1 [Standard]: 5.3 – 5.4 mm (0.209 – 0.212 in)
- No. 2 [Standard]: 5.3 – 5.4 mm (0.209 – 0.212 in)
- No. 3 [Standard]: 5.3 – 5.4 mm (0.209 – 0.212 in)

**Special tool**  
(A): 09900–20102

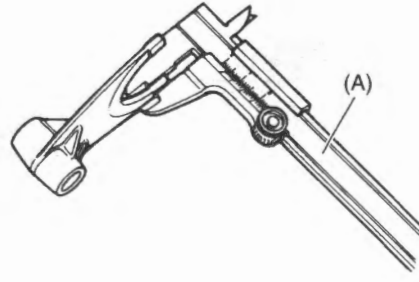

IE31J1520028-01

**Gearshift Cam**

Inspect the gearshift cam groove for abnormal wear and damage. If any defects are found, replace the gearshift cam with a new one.



I944H1520027-01


## Left Crankcase Bearing / Oil Seal Removal and Installation

BENH28K25206006

Refer to "Crankshaft Assembly Removal and Installation" in Section 1D (Page 1D-71) and "Transmission Removal and Installation" (Page 5B-3).

### Removal

- 1) Remove the oil seal retainer (1).

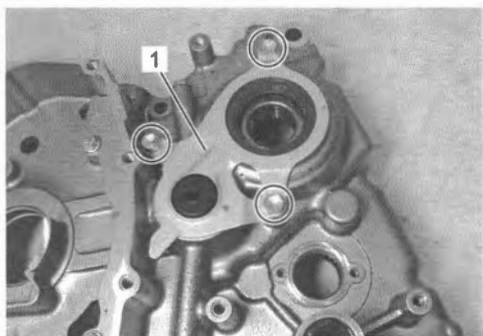


IH18K1520023-01

- 2) Remove the clutch push rod oil seal (1).
- 3) Remove the driveshaft oil seal (2) using the special tool.

#### Special tool

(A): 09913-50121

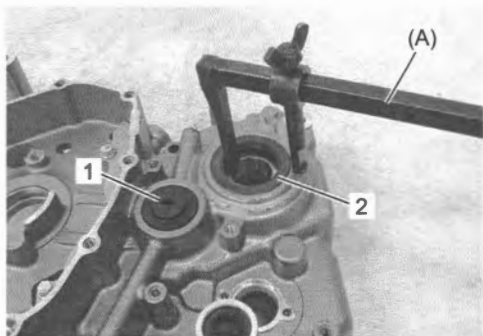


IH18K1520024-01


- 4) Remove the gearshift cam bearing (1), driveshaft bearing (2) and countershaft bearing (3) using the special tool.

#### Special tool

(A): 09921-20240

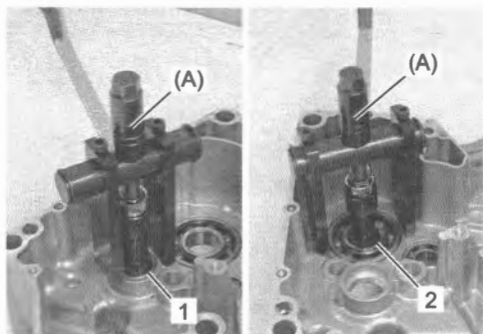

IH18K1520025-01

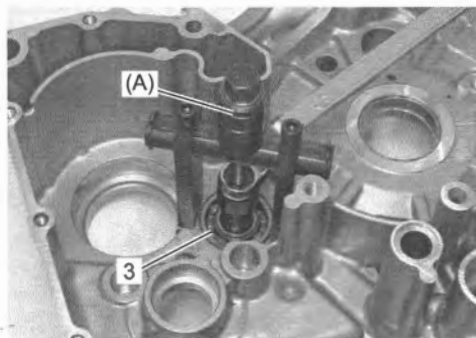

IH18K1520026-01

### Installation


- 1) Install the new countershaft bearing (1) and new driveshaft bearing (2) using the special tool.

#### NOTE

The sealed side of the bearings faces outside.

#### Special tool

(A): 09913-70210

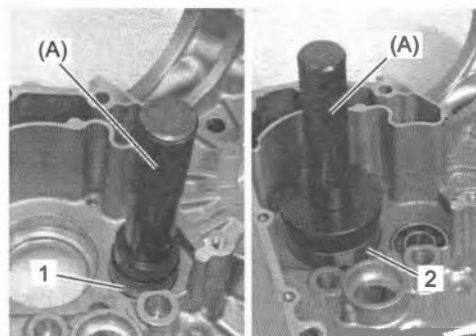

IH18K1520027-01


- 2) Install the new gearshift cam bearing (1).

#### NOTE

The stamped mark side of the bearing faces inside.

#### Special tool

(A): 09913-70210

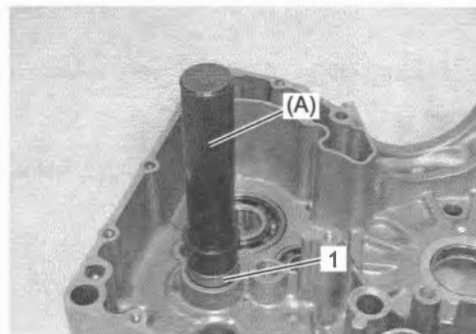


IH18K1520028-01

- 3) Install the new driveshaft oil seal (1) and new clutch push rod oil seal (2) using the special tool.


**Special tool**

**(A): 09913-70210**

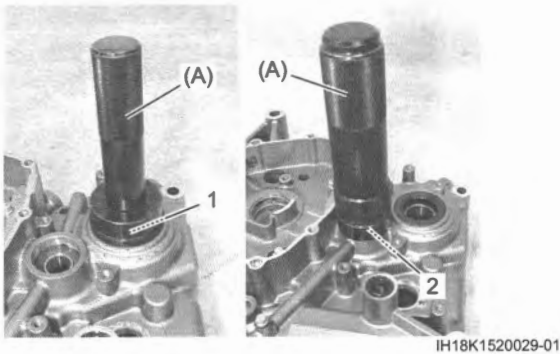

- 4) Apply grease to the oil seal lips.


**"A": Grease 99000-25011 (SUZUKI SUPER GREASE A)**

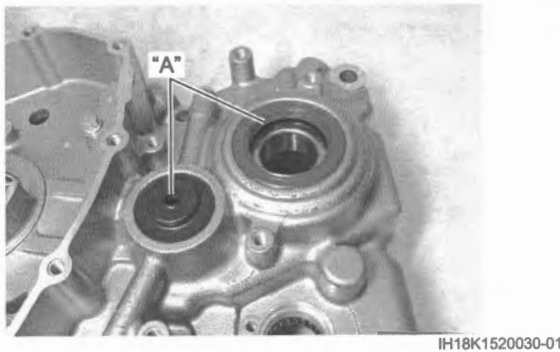

- 5) Install the oil seal retainer (1) and tighten its bolts (2) to the specified torque.

**Tightening torque**

**Driveshaft oil seal retainer bolt (a): 10 N·m (1.0 kgf-m, 7.5 lbf-ft)**

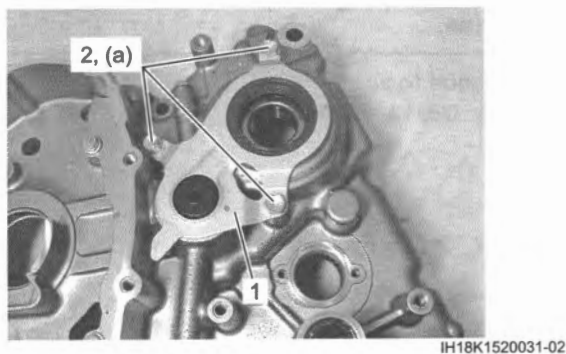


## Right Crankcase Bearing Removal and Installation

BENH28K25206007

Refer to "Crankcase Assembly Disassembly" in Section 1D (Page 1D-66) and "Crankcase Assembly Reassembly" in Section 1D (Page 1D-69).

### Removal

- 1) Remove the bearing retainers (1).


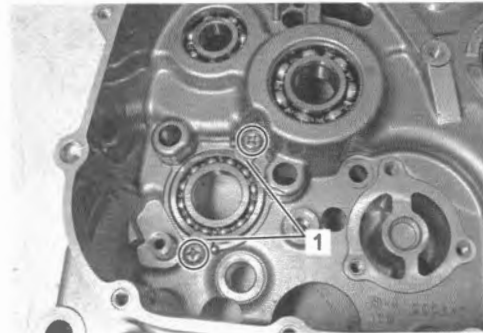


- 2) Remove the gearshift cam bearing (1), countershaft bearing (2) and driveshaft bearing (3) using the special tools.

**Special tool**

**(A): 09913-70210**

**(B): 09921-20240**

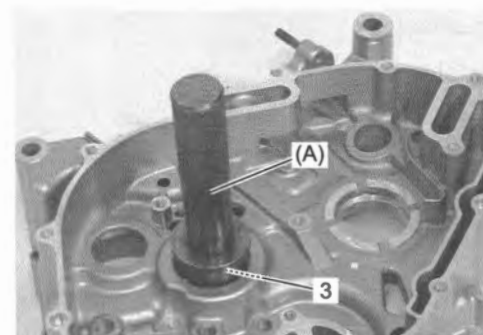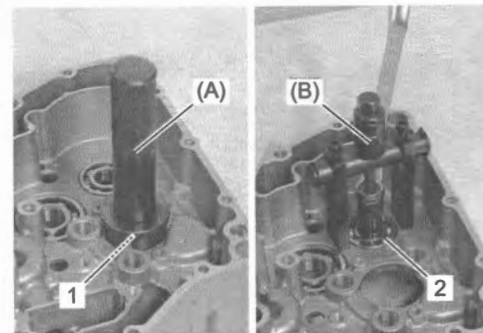


## Installation


- 1) Install the new driveshaft bearing (1), new countershaft bearing (2) and new gearshift cam bearing (3) using the special tool.

### Special tool

(A): 09913-70210

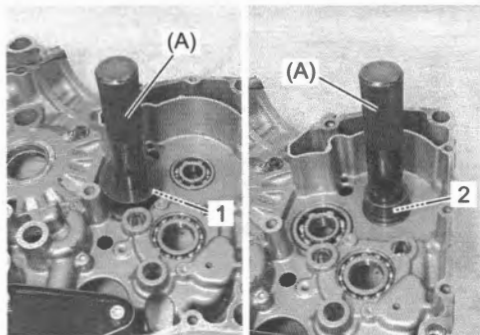

IH18K1520035-01

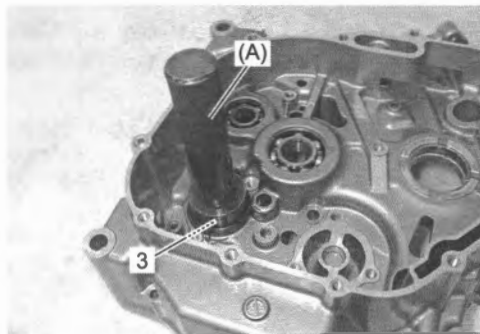

IH18K1520036-01

## Transmission Bearing / Oil Seal Inspection

BENH28K25206008

Refer to "Crankcase Bearing / Oil Seal Inspection" in Section 1D (Page 1D-76).


## GP Switch Inspection

BENH28K25206009

- 1) Turn the ignition switch OFF.
- 2) Lift and support the fuel tank. (Page 1G-10)
- 3) Disconnect the gear position switch lead wire coupler (1).

### NOTICE

**When disconnecting and connecting the gear position switch lead wire coupler, make sure to turn off the ignition switch, or electronic parts may get damaged.**

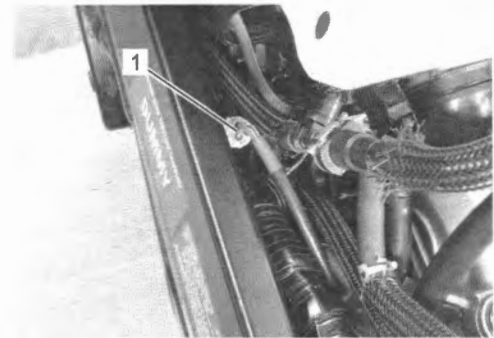

IH28K1520001-01

- 4) Check the continuity between BI and B/W lead wires with the transmission in "NEUTRAL".

	BI	B/W
ON (neutral)	○	○
OFF (except neutral)		

IH28K1520026-01


- 5) Connect the gear position switch lead wire coupler to the wiring harness.
- 6) Support the motorcycle with a jack or wooden block.
- 7) Insert the needle point probes to the lead wire coupler.

### Special tool 09900-25008

- 8) Turn the ignition switch ON and side-stand to upright position.
- 9) Measure the voltage between P ((+) probe) and B/W ((-) probe) lead wires when shifting the gearshift lever from low to top.

### GP switch voltage

- 1st [Standard]: Approx. 1.3 V
- Neutral [Standard]: Approx. 5.0 V
- 2nd [Standard]: Approx. 1.8 V
- 3rd [Standard]: Approx. 2.5 V
- 4th [Standard]: Approx. 3.2 V
- 5th [Standard]: Approx. 4.1 V
- 6th [Standard]: Approx. 4.6 V

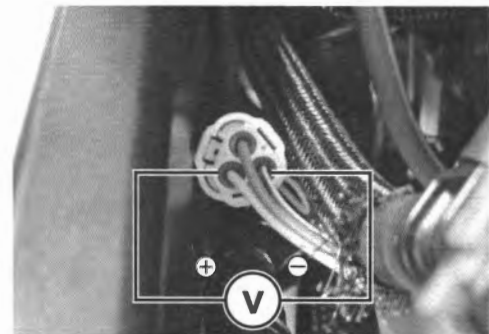

IH28K1520002-01


- 10) Turn the ignition switch OFF.
- 11) Install the removed parts.

**GP Switch Removal and Installation**

BENH28K25206010


**Removal**

- 1) Turn the ignition switch OFF.
- 2) Lift and support the fuel tank. (Page 1G-10)
- 3) Remove the under cowling (if equipped). (Page 9D-30)
- 4) Disconnect the GP switch coupler (1).

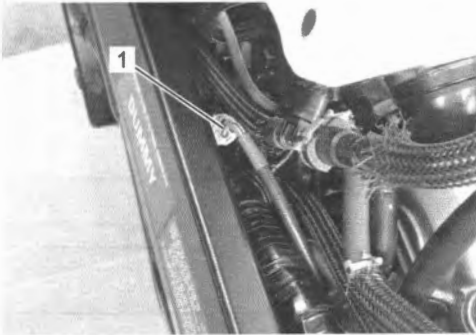

IH28K1520001-01

- 5) Remove the generator cover. (Page 1J-5)
- 6) Remove the GP switch (1).

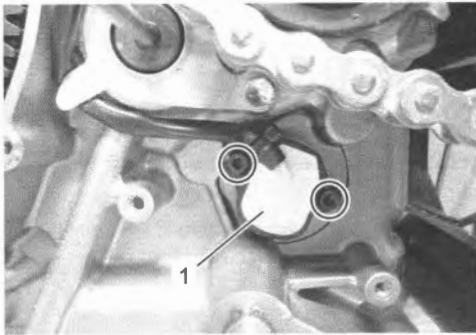


IH28K1520003-01

**Installation**

Install the GP switch in the reverse order of removal. Pay attention to the following points:

- Apply grease to the new O-ring (1).  
**“A”:** Grease 99000–25011 (SUZUKI SUPER GREASE A)
- Align the GP switch pin (2) with the gearshift cam hole (3).

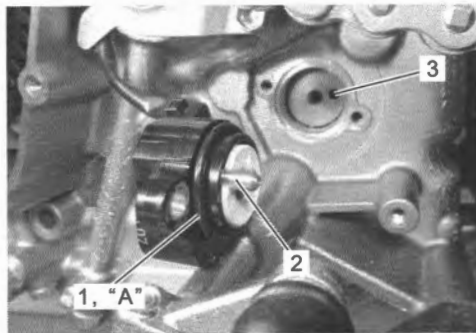


IH28K1520004-01

- Apply thread lock to the GP switch mounting bolts (1) and tighten them to the specified torque.

**“A”:** Thread lock cement 99000–32150 (THREAD LOCK CEMENT 1322D)

**Tightening torque**

**GP switch mounting bolt (a): 6.0 N·m (0.61 kgf-m, 4.45 lbf-ft)**

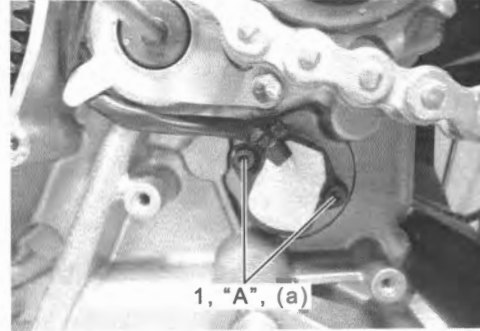

IH28K1520005-01

- Route the GP switch lead wire. Refer to “Wiring Harness Routing Diagram” in Section 9A (Page 9A-7).

**Gearshift Lever Removal and Installation**

BENH28K25206011


Refer to “Gearshift Lever Construction” (Page 5B-13).

**Removal**

- 1) Remove the gearshift link arm (1).

**NOTE**

**Mark the position of the gearshift link arm on the gearshift shaft (2) before removing the link arm.**

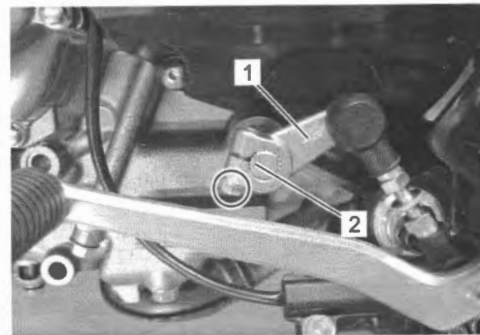

IH28K1520010-01

- 2) Remove the gearshift lever. Refer to “Gearshift Lever Construction” (Page 5B-13).

**Installation**

- 1) Install the gearshift lever.
- 2) Install the gearshift link arm.
- 3) Check the gearshift lever height. (Page 5B-13)

### Gearshift Lever Height Inspection and Adjustment


BENH28K25206012

#### Inspection

Inspect the gearshift lever height "a" between the pedal top face and footrest.  
Adjust the gearshift lever height if necessary.

#### Gearshift lever height


[Standard]: 20 – 30 mm (0.79 – 1.18 in)

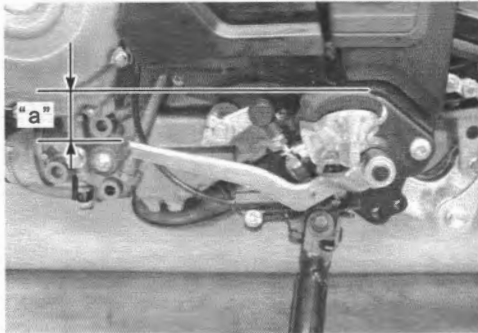

IH28K1520006-01

#### Adjustment


- 1) Loosen the lock-nuts (1).
- 2) Turn the gearshift link rod (2) in or out until the gearshift lever height is within the specification. (Page 5B-13)
- 3) Tighten the lock-nuts (1) securely.

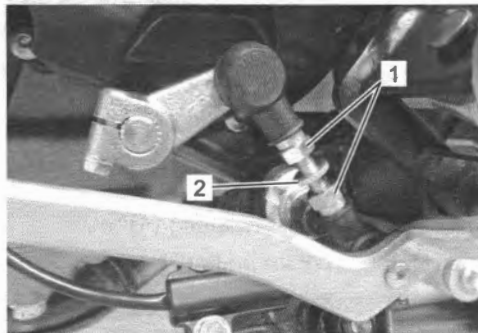

IH28K1520007-02

### Gearshift Lever Construction

BENH28K25206013

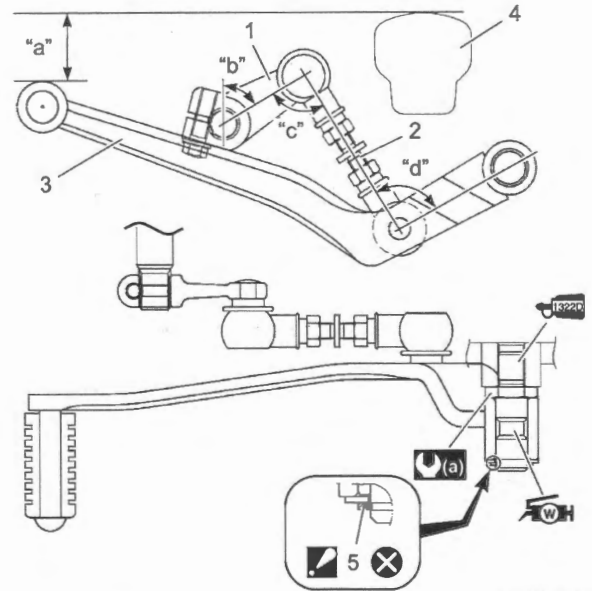


IH28K1520009-01

1. Gearshift link arm	"c": 91.87°
2. Gearshift link rod	"d": 93.78°
3. Gearshift lever	(a) : 40 N·m (4.1 kgf·m, 29.5 lbf·ft)
4. Footrest	1322B : Apply thread lock to the thread part.
5. Snap ring : Face the sharp edge outside.	WH : Apply grease.
"a": 20 – 30 mm (0.79 – 1.18 in)	⊗ : Do not reuse.
"b": 59.6°	

**Gearshift Shaft / Gearshift Cam Plate Components**

BENH28K25206014

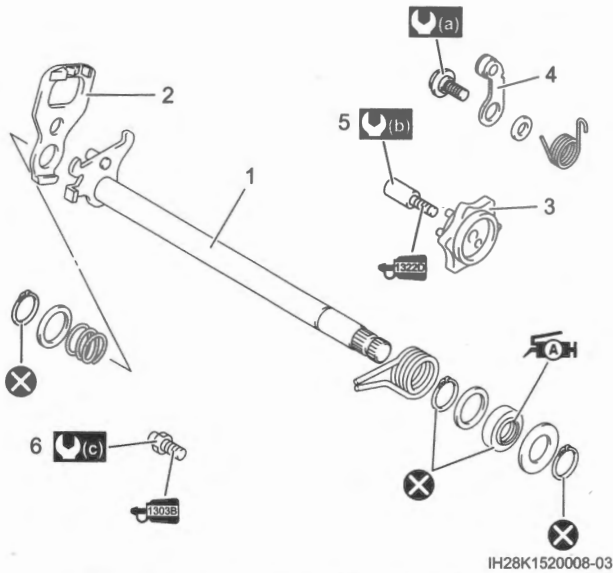

IH28K1520008-03

1.	Gearshift shaft
2.	Gearshift cam drive plate
3.	Gearshift cam plate
4.	Gearshift cam stopper
5.	Shift cam drive plate stopper
6.	Gearshift arm stopper
(a)	: 10 N·m (1.0 kgf·m, 7.5 lbf·ft)
(b)	: 13 N·m (1.3 kgf·m, 9.5 lbf·ft)
(c)	: 19 N·m (1.9 kgf·m, 14.0 lbf·ft)
180315	: Apply thread lock to the thread part.
182215	: Apply thread lock to the thread part.
AH	: Apply grease to the oil seal lip.
X	: Do not reuse.

**Gearshift Shaft / Gearshift Cam Plate Removal and Installation**


BENH28K25206015

**Removal**

1) Remove the gearshift link arm (1).

**NOTE**


Mark the position of the gearshift link arm on the gearshift shaft (2) before removing the link arm.

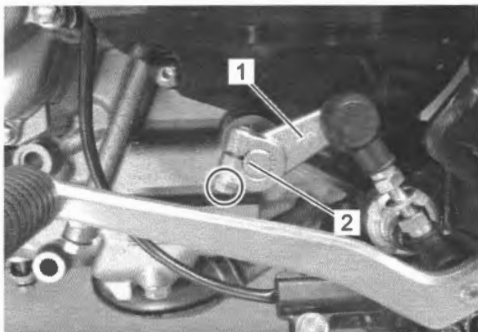

IH28K1520010-01

- 2) Remove the engine sprocket cover. (Page 3A-4)
- 3) Remove the clutch components. (Page 5C-10)
- 4) Remove the snap ring (1) and washer (2).

**Special tool**  
09900-06107

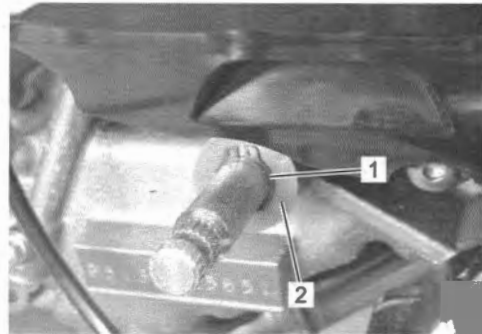

IH28K1520011-02

5) Remove the gearshift shaft assembly (1).




IH28K1520012-01

6) Remove the following parts from the gearshift shaft (1).

- Washer (2)
- Snap ring (3)
- Gearshift plate return spring (4)
- Gearshift cam drive plate (5)
- Gearshift shaft return spring (6)


**Special tool**  
09900-06107

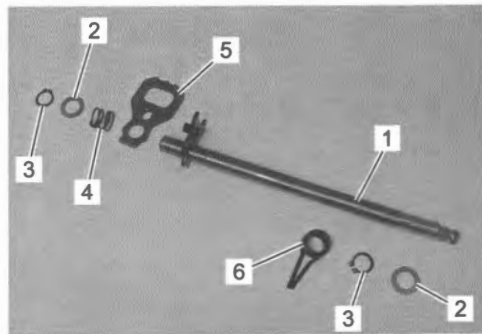

IH18K1520047-02



- 7) Remove the gearshift cam plate bolt (1) and gearshift cam plate (2).
- 8) Remove the gearshift cam stopper (3).
- 9) Remove the gearshift arm stopper (4).

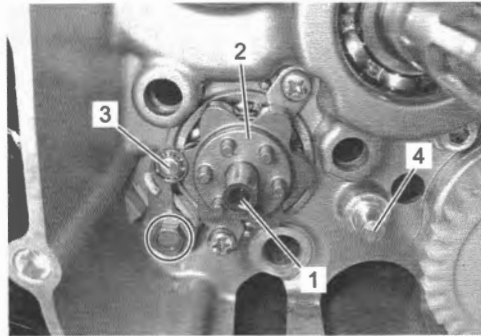

IH18K1520048-01


### Installation

- 1) Apply a small quantity of thread lock to the gearshift arm stopper (1) and tighten it to the specified torque.

**"A": Thread lock cement 99000-32030 (THREAD LOCK CEMENT 1303B)**

#### Tightening torque

**Gearshift arm stopper (a): 19 N·m (1.9 kgf·m, 14.0 lbf·ft)**

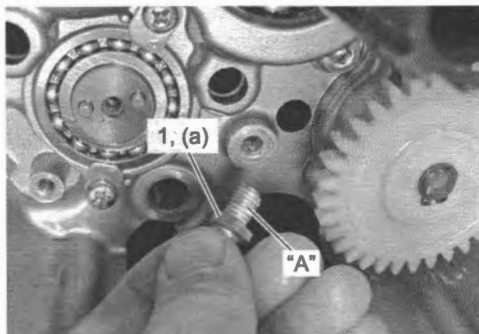

IH18K1520049-01


- 2) Install the gearshift cam stopper (1), bolt (2), washer (3) and spring (4).
- 3) Tighten the gearshift cam stopper bolt (2) to the specified torque.

#### NOTE


**Hook the return spring end (5) to the gearshift cam stopper (1).**

#### Tightening torque

**Gearshift cam stopper bolt (a): 10 N·m (1.0 kgf·m, 7.5 lbf·ft)**

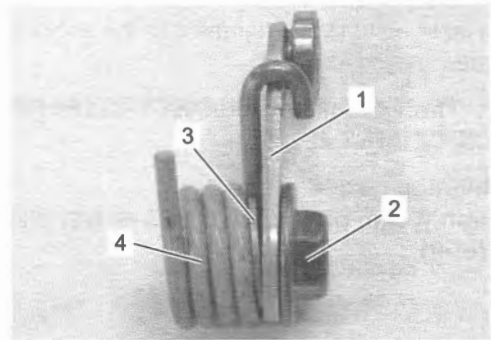

IH18K1520050-03

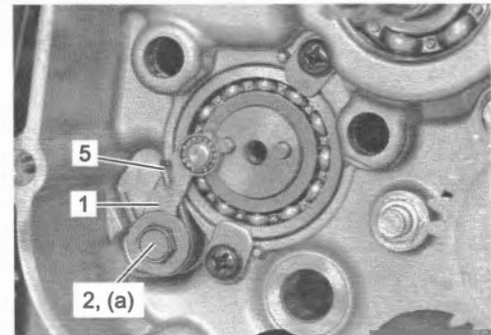


IH18K1520051-01

- 4) Check the gearshift cam stopper moves smoothly.
- 5) Locate the gearshift cam in the neutral position.
- 6) Install the gearshift cam plate (1).

#### NOTE

**Align the gearshift cam pins (2) with the gearshift cam plate holes (3).**

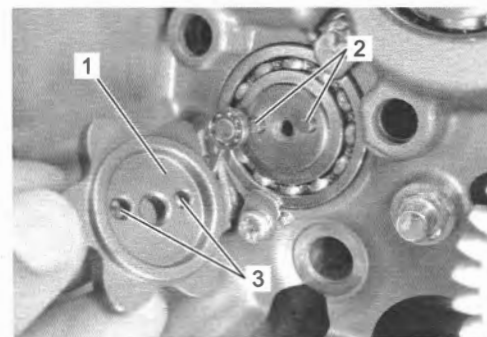


IH28K1520013-02

- 7) Apply a small quantity of thread lock to the gearshift cam plate bolt (1) and tighten it to the specified torque.

**"A": Thread lock cement 99000-32150 (THREAD LOCK CEMENT 1322D)**

**Tightening torque**

**Gearshift cam plate bolt (a): 13 N·m (1.3 kgf-m, 9.5 lbf-ft)**

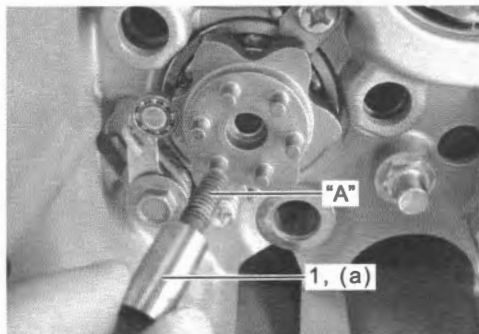


IH28K1520014-01

- 8) Install the gearshift shaft return spring (1).

**NOTE**


**Position the stopper (2) of gearshift arm between the gearshift shaft return spring ends (3).**

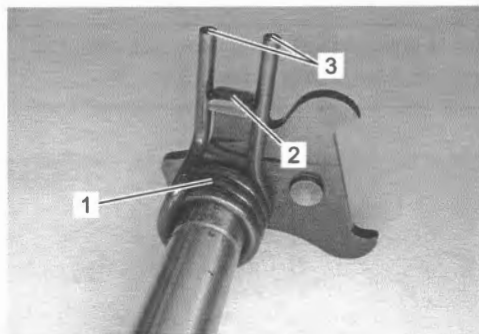

IH18K1520054-01

- 9) Install the following parts.

- New snap ring (1)
- Gearshift cam drive plate (2)
- Gearshift plate return spring (3)
- Washer (4)

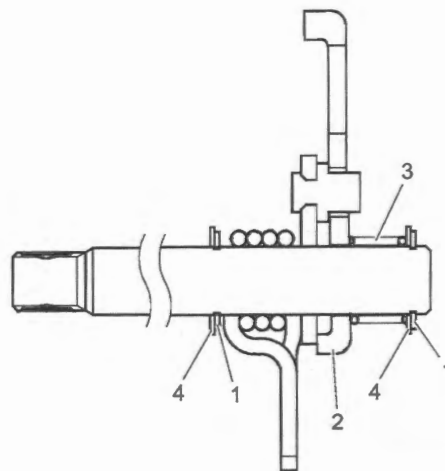


IH18K1520067-01

- 10) Install the gearshift shaft assembly (1).

**NOTE**


**Pinch the gearshift arm stopper (2) with gearshift shaft return spring ends (3).**

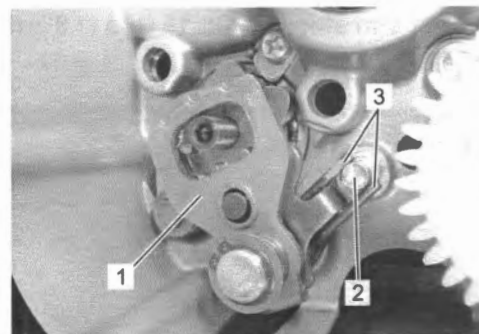

IH28K1520015-01

- 11) Install the washer (1) and new snap ring (2).

**Special tool  
09900-06107**

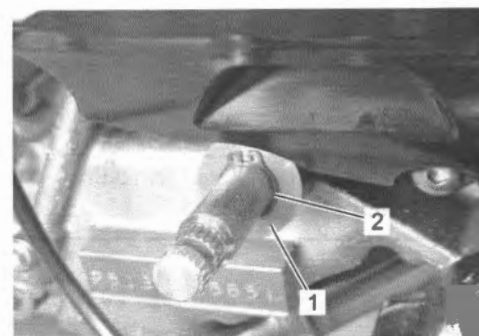

IH28K1520016-01

- 12) Install the clutch components. ☞(Page 5C-12)  
 13) Install the engine sprocket cover. ☞(Page 3A-4)  
 14) Install the gearshift lever link arm and check the gearshift lever height. ☞(Page 5B-12)


### Gearshift Linkage Inspection

BENH28K25206016

Refer to "Gearshift Shaft / Gearshift Cam Plate Removal and Installation" (Page 5B-14).

#### Gearshift Shaft


Check the gearshift shaft (1) for bend or wear.  
Check the return spring (2) for damage or fatigue.  
If any defects are found, replace the defective part(-s).

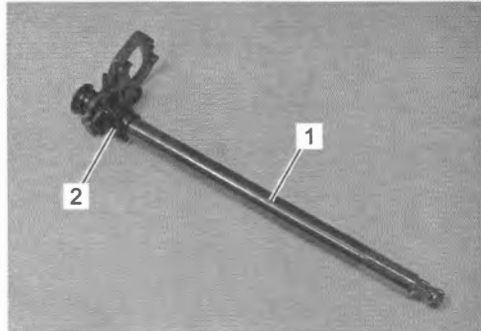

IH28K1520058-01

#### Gearshift Shaft Oil Seal

Inspect the gearshift shaft oil seal lip (1) for damage or wear. If any defect is found, replace the oil seal with a new one.

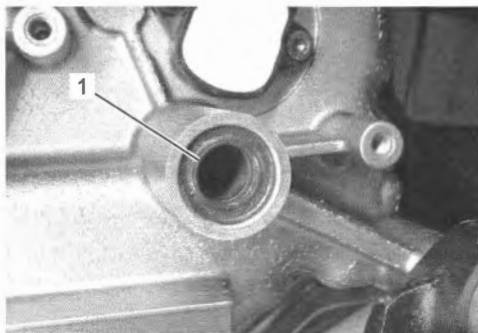

IH28K1520017-01


#### Gearshift Shaft Oil Seal Removal and Installation

BENH28K25206017

Refer to "Gearshift Shaft / Gearshift Cam Plate Removal and Installation" (Page 5B-14).

#### Removal

Remove the gearshift shaft oil seal (1).

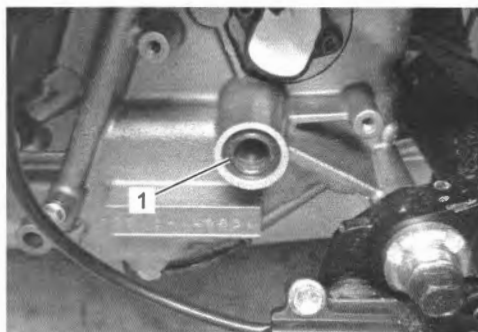


IH28K1520018-01

#### Installation


1) Install the new oil seal (1) with the special tool.

#### Special tool

(A): 09913-70210

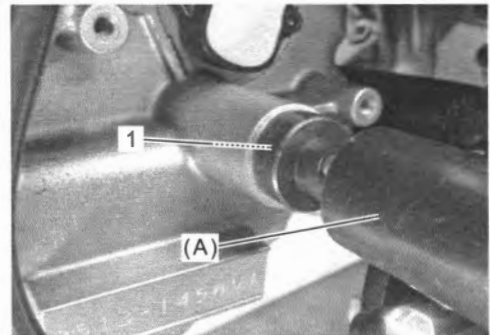

IH28K1520019-02

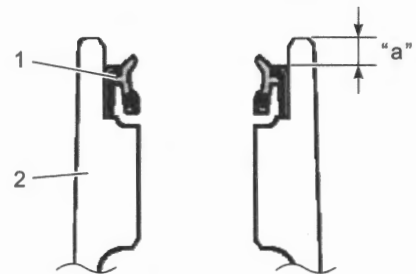


IH28K1520020-01

2. Crankcase	"a": 1.5 - 2.5 mm (0.059 - 0.098 in)
--------------	--------------------------------------

2) Apply grease to the oil seal lip (1).

**"A": Grease 99000-25011 (SUZUKI SUPER GREASE A)**

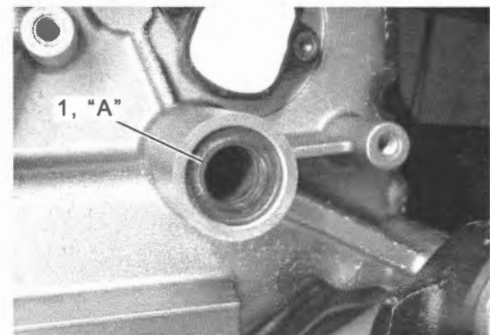

IH28K1520021-01

## Specifications

### Tightening Torque Specifications

BENH28K25207001

Fastening part	Tightening torque			Note
	N·m	kgf-m	lbf-ft	
Driveshaft oil seal retainer bolt	10	1.0	7.5	☞ (Page 5B-10)
GP switch mounting bolt	6.0	0.61	4.45	☞ (Page 5B-12)
Gearshift arm stopper	19	1.9	14.0	☞ (Page 5B-15)
Gearshift cam stopper bolt	10	1.0	7.5	☞ (Page 5B-15)
Gearshift cam plate bolt	13	1.3	9.5	☞ (Page 5B-16)

#### Reference:

For the tightening torques of fasteners not specified in this page, refer to:

“Transmission Components” (Page 5B-2)

“Gearshift Lever Construction” (Page 5B-13)

“Gearshift Shaft / Gearshift Cam Plate Components” (Page 5B-14)

“Fasteners Information” in Section 0C (Page 0C-11)

## Special Tools and Equipment

### Recommended Service Material

BENH28K25208001

Material	SUZUKI recommended product or Specification		Note
Assembly lubrication	Molybdenum oil solution	—	☞(Page 5B-7)
Grease	SUZUKI SUPER GREASE A	P/No.: 99000-25011	☞(Page 5B-10) / ☞(Page 5B-12) / ☞(Page 5B-17)
Thread lock cement	THREAD LOCK CEMENT 1303B	P/No.: 99000-32030	☞(Page 5B-15)
	THREAD LOCK CEMENT 1322D	P/No.: 99000-32150	☞(Page 5B-12) / ☞(Page 5B-16)

### NOTE

Required service material(s) is also described in:








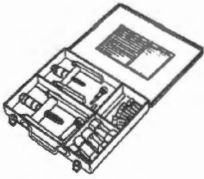
“Transmission Components” (Page 5B-2)

“Gearshift Lever Construction” (Page 5B-13)

“Gearshift Shaft / Gearshift Cam Plate Components” (Page 5B-14)

### Special Tool

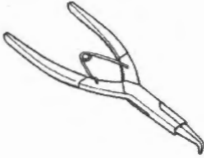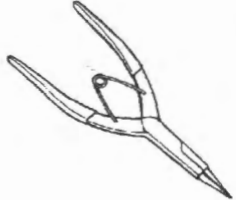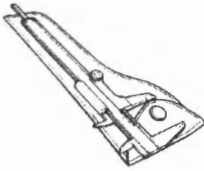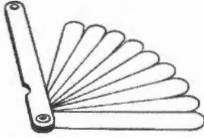BENH28K25208002

09900-06104 Snap ring pliers (External: Bent nose) ☞(Page 5B-5)		09900-06107 Snap ring pliers (External)  ☞(Page 5B-5) / ☞(Page 5B-5) / ☞(Page 5B-6) / ☞(Page 5B-6) / ☞(Page 5B-14) / ☞(Page 5B-14) / ☞(Page 5B-16)	
09900-20102 Vernier calipers (200 mm) ☞(Page 5B-8) / ☞(Page 5B-8)		09900-20803 Thickness gauge ☞(Page 5B-8)	
09900-25008 Multi circuit tester set 1. Multi circuit tester (09900-25004) 2. Revolution sensor (09900-25005) 3. Lead wire (09900-25006) 4. Peak volt adapter (09900-25007) ☞(Page 5B-11)		09913-50121 Oil seal remover ☞(Page 5B-9)	
09913-70210 Bearing installer set ☞(Page 5B-9) / ☞(Page 5B-9) / ☞(Page 5B-10) / ☞(Page 5B-10) / ☞(Page 5B-11) / ☞(Page 5B-17)		09921-20240 Bearing remover set ☞(Page 5B-9) / ☞(Page 5B-10)	

# Clutch

## Precautions

### Precautions for Clutch System

BENH28K25300001

Refer to "General Precautions" in Section 00 (Page 00-1).

## Schematic and Routing Diagram

### Clutch Cable Routing Diagram

BENH28K25302001

Refer to "Throttle Cable Routing Diagram" in Section 1D (Page 1D-2).

## Diagnostic Information and Procedures

### Clutch System Symptom Diagnosis

BENH28K25304001

Condition	Possible cause	Correction / Reference Item
<b>Noisy engine (noise seems to come from the clutch)</b>	Worn countershaft spline.	Replace countershaft. ⌚(Page 5B-5)
	Worn clutch sleeve hub spline.	Replace clutch sleeve hub. • Removal: ⌚(Page 5C-10) • Installation: ⌚(Page 5C-12)
	Worn clutch plate teeth.	Replace clutch plate. • Removal: ⌚(Page 5C-10) • Installation: ⌚(Page 5C-12)
	Distorted clutch plates, driven and drive.	Replace. • Removal: ⌚(Page 5C-10) • Installation: ⌚(Page 5C-12)
	Worn clutch release bearing.	Replace. • Removal: ⌚(Page 5C-10) • Installation: ⌚(Page 5C-12)
	Weakened clutch damper springs.	Replace primary driven gear. • Removal: ⌚(Page 5C-10) • Installation: ⌚(Page 5C-12)
<b>Clutch slips</b>	Clutch cable play out of adjustment.	Adjust. ⌚(Page 5C-2)
	Weakened clutch springs.	Replace. • Removal: ⌚(Page 5C-10) • Installation: ⌚(Page 5C-12)
	Worn or distorted clutch pressure plate.	Replace. • Removal: ⌚(Page 5C-10) • Installation: ⌚(Page 5C-12)
	Distorted clutch plates, driven and drive.	Replace. • Removal: ⌚(Page 5C-10) • Installation: ⌚(Page 5C-12)


Condition	Possible cause	Correction / Reference Item
<b>Clutch drags</b>	Clutch cable play out of adjustment.	Adjust. (Page 5C-2)
	Some clutch springs are weak, while others are not.	Replace. • Removal: (Page 5C-10) • Installation: (Page 5C-12)
	Worn or distorted clutch pressure plate.	Replace. • Removal: (Page 5C-10) • Installation: (Page 5C-12)
	Distorted clutch plates, driven and drive.	Replace. • Removal: (Page 5C-10) • Installation: (Page 5C-12)

## Repair Instructions

### Clutch Lever Position Switch Inspection

BENH28K25306001

- 1) Disconnect the clutch lever position switch coupler (1).

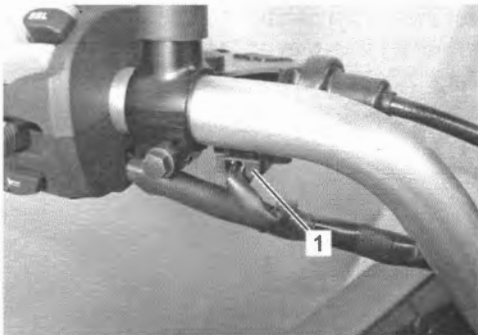

IH28K1530001-01

- 2) Inspect the clutch lever position switch for continuity with the circuit tester.  
If any abnormality is found, replace the clutch lever position switch with a new one. Refer to "Clutch Lever Removal and Installation" (Page 5C-5).

Color Position	Terminal (B/W)	Terminal (B/Y)
FREE		
•	○	○

IH28K1530002-01

- 3) Connect the clutch lever position switch coupler.

### Clutch Cable Play On-Vehicle Inspection and Adjustment


BENH28K25306002

#### Inspection

Inspect the clutch cable play "a". Adjust the clutch cable play if necessary.

#### Clutch cable play


[Standard]: 10 – 15 mm (0.39 – 0.59 in)

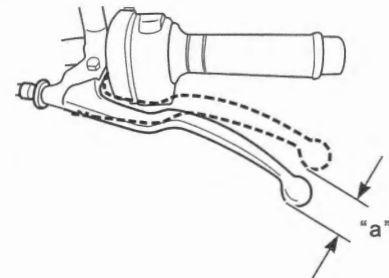

IH18K1530068-01

#### Adjustment


- 1) Remove the clutch lever cover (1).
- 2) Loosen the lock-nut (2), and adjust the clutch cable by turning the adjuster (3) to obtain free play at the clutch lever end. (Page 5C-2)

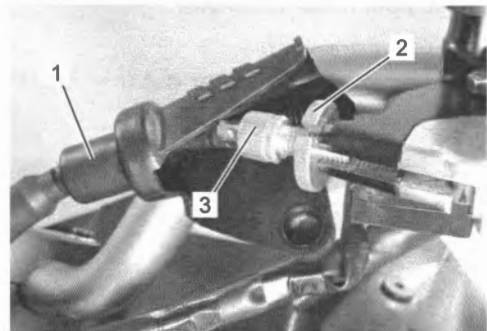

IH28K1530003-01


## 5C-3 Clutch:

- 3) If the clutch cable play is not within the standard, adjust the clutch push rod screw as follows.
- Loosen the lock-nut (1) and turn in the adjuster (2) all the way into the clutch lever.

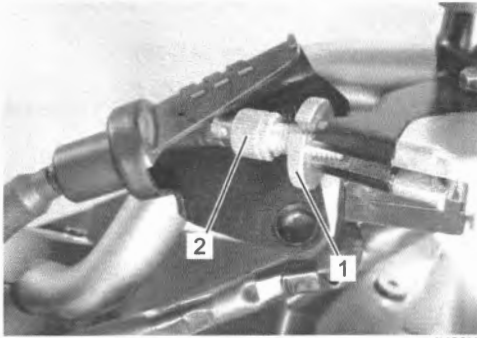

IH28K1530004-01

- Loosen the lock-nut (1) and turn the adjuster (2) clockwise as far as it will go.

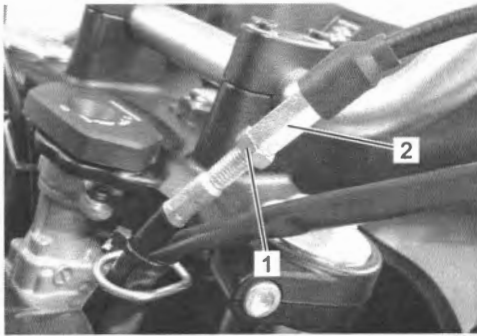


IH28K1530005-01

- Drain the engine oil. (Page 1E-4)
- Remove the clutch cover. (Page 5C-10)
- Loosen the clutch release adjuster nut (1) and turn out the clutch push rod screw (2) two or three rotations.
- From that position, slowly turn in the clutch push rod adjuster screw (2) until resistance is felt.
- From that position, turn out the clutch push rod adjuster screw (2) 1 rotation, and tighten the clutch release adjuster nut (1) while holding the clutch push rod screw (2).


### Tightening torque

**Clutch release adjuster nut (a): 5.0 N·m (0.51 kgf-m, 3.70 lbf-ft)**

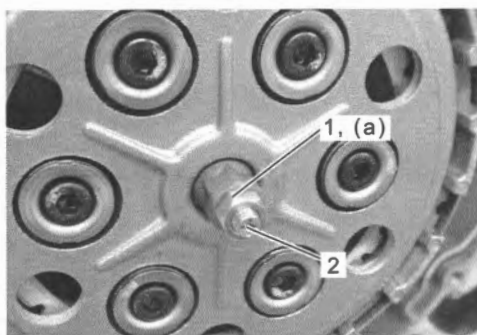

IH28K1530006-01


- Install the clutch cover. (Page 5C-12)
  - Pour engine oil. (Page 1E-4)
- Turn out the adjuster (1) to obtain "a" at the threads of adjuster.
  - Tighten the lock-nut (2).
  - Install the clutch lever cover (3).

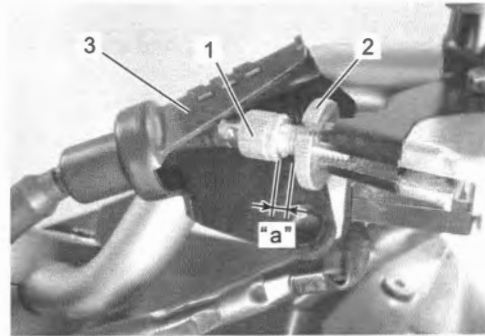

IH28K1530007-01

"a": 3.0 – 5.0 mm (0.12 – 0.19 in)

- Adjust the clutch cable play by turning the adjuster (2) to obtain free play at the clutch lever end. (Page 5C-2)
- Tighten the lock-nut (1) while holding the adjuster (2).

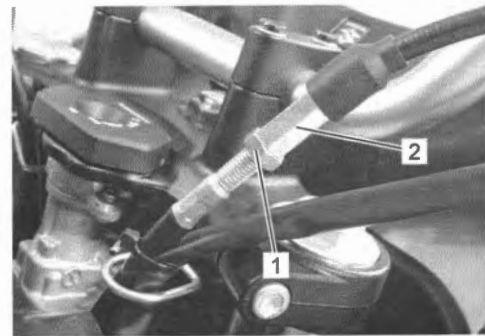


IH28K1530005-01



## Clutch Control System Components

BENH28K25306003

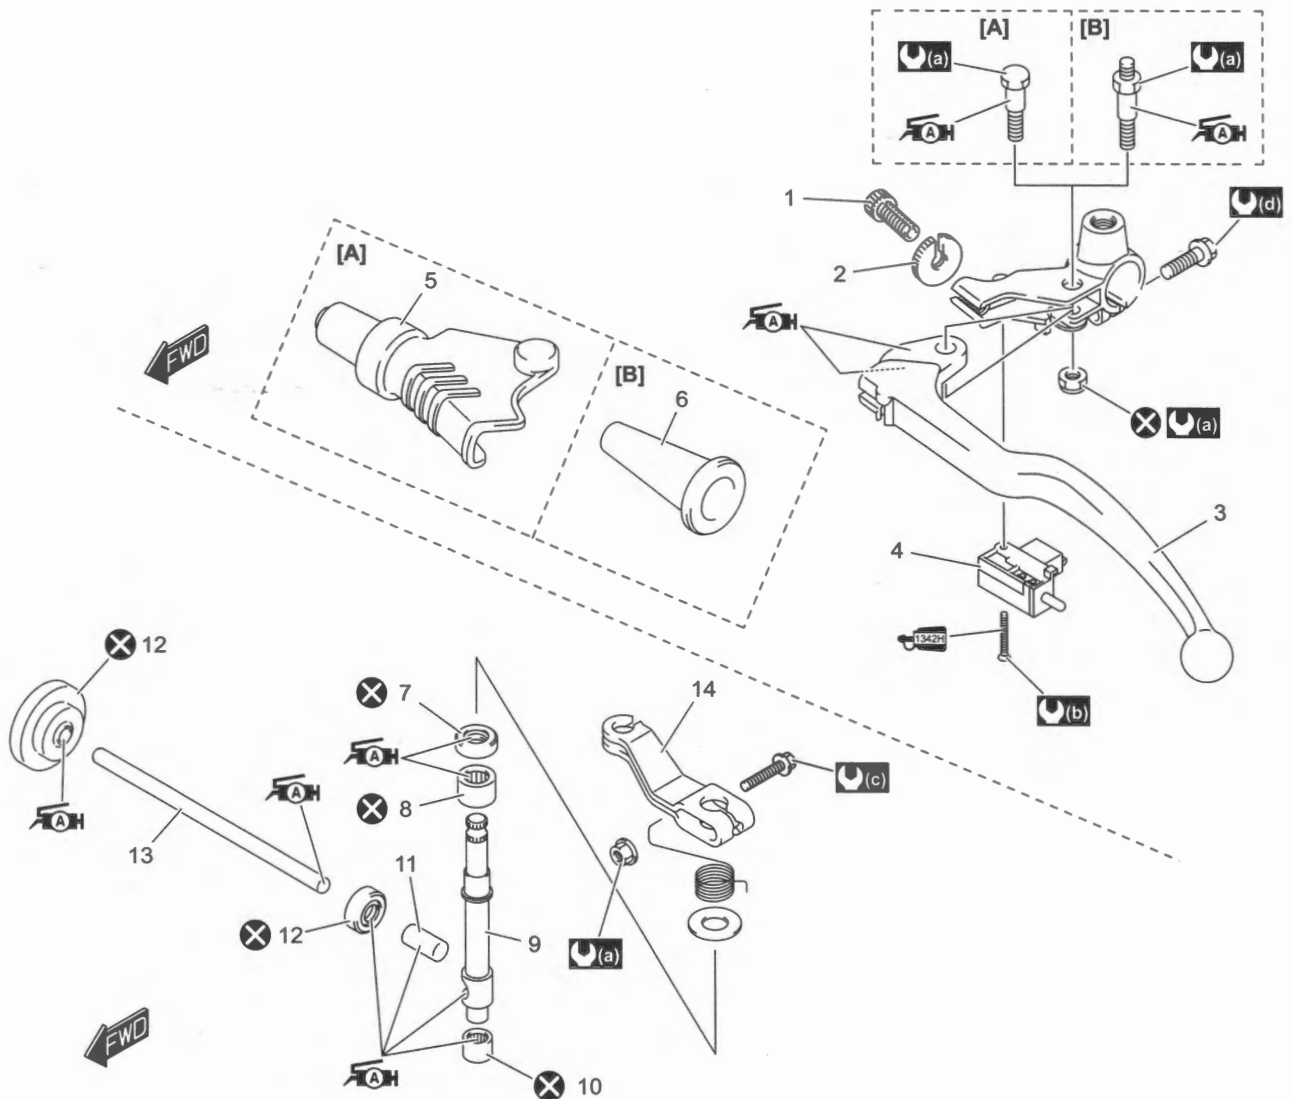

IH28K1530054-03

[A]: Without knuckle cover	7. Clutch release camshaft oil seal	⌚(a) : 6.5 N·m (0.66 kgf-m, 4.80 lbf-ft)
[B]: With knuckle cover	8. Clutch release camshaft upper bearing	⌚(b) : 0.6 N·m (0.06 kgf-m, 0.45 lbf-ft)
1. Adjuster	9. Clutch release camshaft	⌚(c) : 9.0 N·m (0.92 kgf-m, 6.65 lbf-ft)
2. Lock-nut	10. Clutch release camshaft lower bearing	⌚(d) : 10 N·m (1.0 kgf-m, 7.5 lbf-ft)
3. Clutch lever	11. Clutch push rod cap	⌚AH : Apply grease.
4. Clutch lever position switch	12. Clutch push rod oil seal	⌚IK421 : Apply thread lock to the thread part.
5. Clutch cable cover	13. Clutch push rod (left)	⊗ : Do not reuse.
6. Clutch cable boot	14. Clutch release arm	

## Clutch Cable Removal and Installation

BENH28K25306004

## Removal


- 1) Remove the left side cowling. (Page 9D-25)
- 2) Remove the engine sprocket cover (1). Refer to "Engine Sprocket Removal and Installation" in Section 3A (Page 3A-4).



IH28K1530009-02


## 5C-5 Clutch:

- 3) Full loosen the lock-nut (1) and adjuster (2).
- 4) Disconnect the clamp (3).

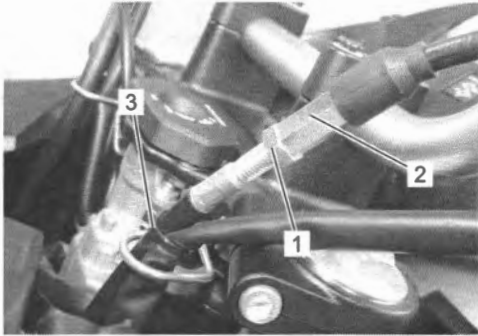


IH28K1530010-01

- 5) Disconnect the clamp (1).

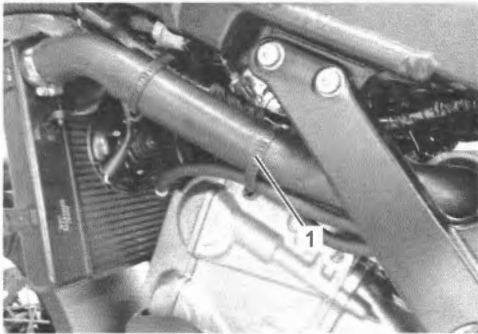


IH28K1530011-01

- 6) Remove the clutch cable cover (1) and loosen the lock-nut (2).
- 7) Align the lock-nut (2) and adjuster (3) with the cutaway.
- 8) Disconnect the clutch cable (4) from the clutch lever side.

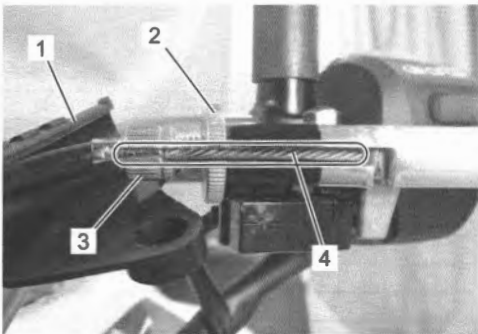

IH28K1530012-02

- 9) Disconnect the clutch cable (1) from the clutch cable stopper (2).
- 10) Disconnect the clutch cable end (3) from the clutch release arm (4).

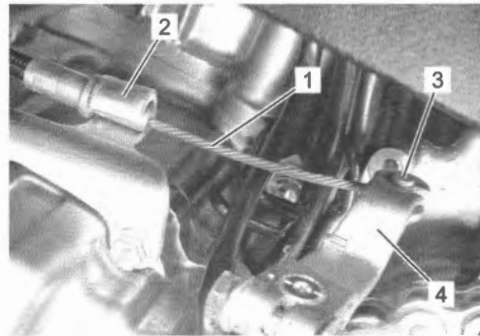

IH28K1530013-01

- 11) Remove the clutch cable.

### Installation

Install the clutch cable in the reverse order of removal. Pay attention to the following points:


- Install the clutch cable. Refer to "Clutch Cable Routing Diagram" (Page 5C-1).
- After install the removed parts, adjust the clutch cable play. ☞ (Page 5C-2)

### Clutch Lever Removal and Installation

BENH28K25306005


#### Removal

- 1) Disconnect the clutch cable from the clutch lever side. ☞ (Page 5C-4)
- 2) Remove the following parts from the left side of the handlebar.
  - a) Rear view mirror (1)
  - b) Clutch lever position switch coupler (2)
  - c) Left handle switch (3)
  - d) Handlebar balancer assembly (4)
  - e) Left handlebar grip (5)
  - f) Clutch lever assembly (6)

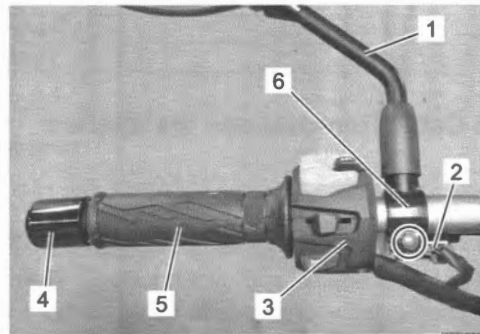

IH28K1530014-01

- 3) Remove the clutch lever position switch (1) and clutch lever (2).
- 4) Remove the adjuster (3) and lock-nut (4).

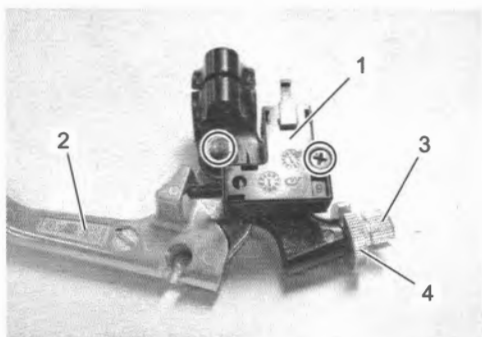


IH28K1530015-02

### Installation


Install the clutch lever in the reverse order of removal. Pay attention to the following points:

- Apply grease to the clutch lever sliding surfaces (1) and clutch lever pivot bolt (2).

**"A": Grease 99000-25011 (SUZUKI SUPER GREASE A)**

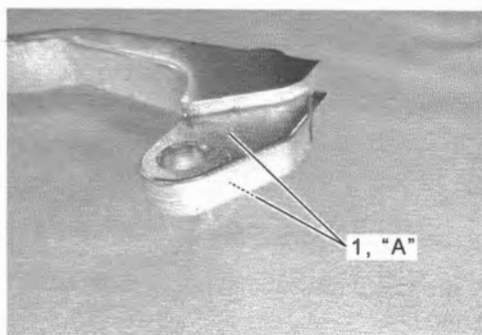

IH28K1530016-01

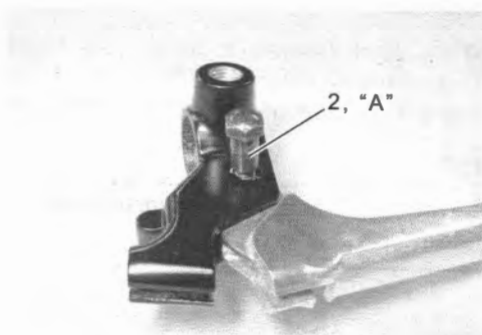


IH28K1530017-01

- Tighten the clutch lever pivot bolt (1) and new pivot nut (2) to the specified torque.

### Tightening torque


**Clutch lever pivot bolt (a): 6.5 N·m (0.66 kgf-m, 4.80 lbf-ft)**

**Clutch lever pivot nut (b): 6.5 N·m (0.66 kgf-m, 4.80 lbf-ft)**

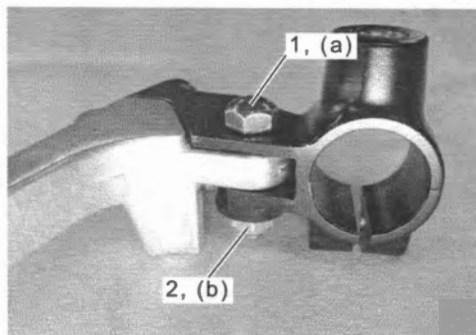

IH28K1530018-01

- When installing the clutch lever position switch (1), align the projection (2) on the clutch lever position switch with the groove (3) in the clutch lever holder.

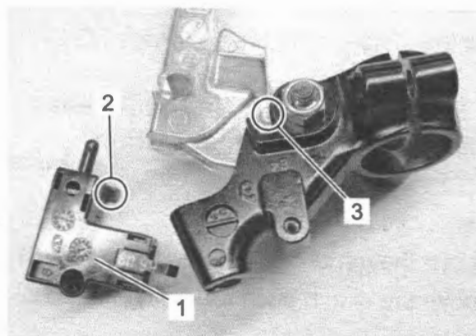


IH28K1530019-01

- Apply a small quantity of thread lock to the clutch switch screw (1) and tighten it to the specified torque.

**"A": Thread lock cement 99000-32160 (THREAD LOCK CEMENT 1342H)**

### Tightening torque

**Clutch switch screw (a): 0.6 N·m (0.06 kgf-m, 0.45 lbf-ft)**

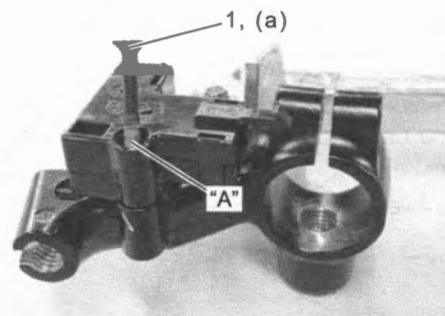


IH28K1530020-01

## 5C-7 Clutch:

- When installing the clutch lever assembly (1) onto the left side handlebar (2), align the slit of clutch lever holder's with the punch mark (3) on the left side handlebar and tighten the clutch lever holder bolt (4) to the specified torque.

### Tightening torque

Clutch lever holder bolt (a): 10 N·m (1.0 kgf·m, 7.5 lbf·ft)

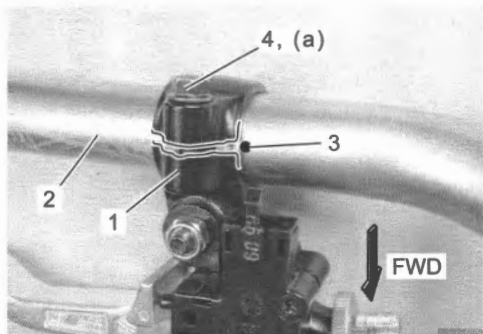


- Install the removed parts to the left side of the handlebar. Refer to "Handlebar Removal and Installation" in Section 6B (Page 6B-3).
- Adjust the clutch cable play. (Page 5C-2)

## Clutch Push Rod (Left) / Clutch Release Camshaft Removal and Installation


BENH28K25306006

### Removal

- Remove the generator cover. (Page 1J-5)
- Remove the clutch push rod (left) (1).

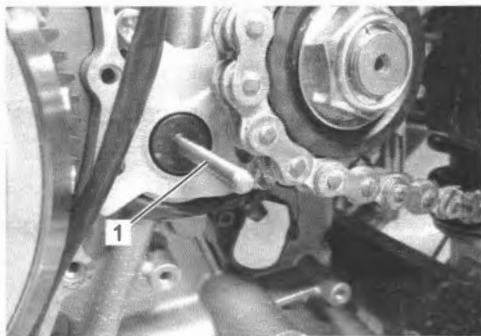

- Remove the clutch push rod cap (1) and oil seal (2).
- Remove the clutch release camshaft oil seal (3) and upper bearing (4) together with clutch release camshaft (5).
- Remove the clutch release camshaft lower bearing (6).

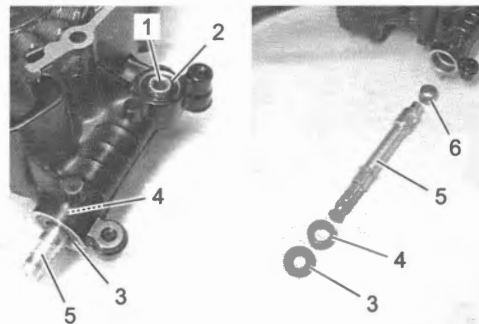


IH18K1530067-01

### Installation

Install the clutch push rod (left) and clutch release camshaft in the reverse order of removal. Pay attention to the following points:

- Apply grease to the new bearings.

"A": Grease 99000-25011 (SUZUKI SUPER GREASE A)

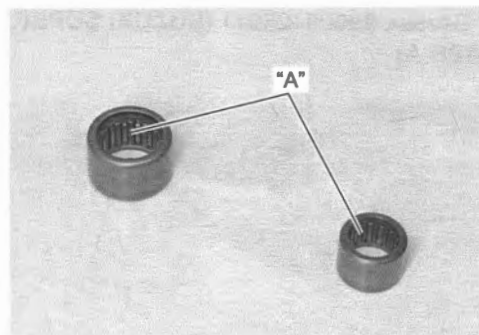

IH18K1530018-01


- Apply grease to the contact position of clutch release camshaft (1).

"A": Grease 99000-25011 (SUZUKI SUPER GREASE A)

- Install the clutch release camshaft lower bearing (2) and upper bearing (3) together with the clutch release camshaft (1) into the generator cover (4).

### NOTE


The stamped mark side of bearings faces outside.

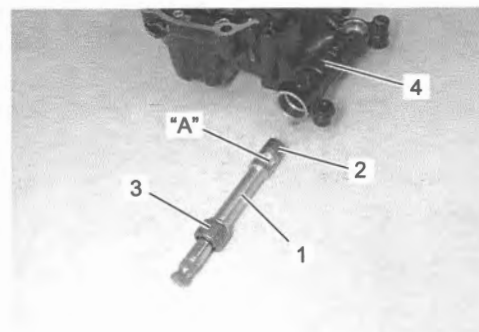

IH18K1530019-02

- Apply grease to the new clutch release camshaft oil seal lip.

**"A": Grease 99000-25011 (SUZUKI SUPER GREASE A)**

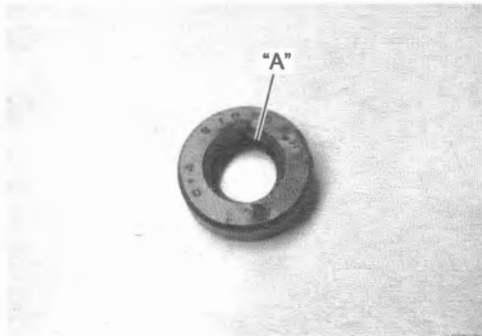


IH18K1530020-01

- Install the new clutch push rod cap oil seal (1) with the special tool.

**Special tool  
09913-70210**

- Apply grease to the lip of the oil seal.

**"A": Grease 99000-25011 (SUZUKI SUPER GREASE A)**

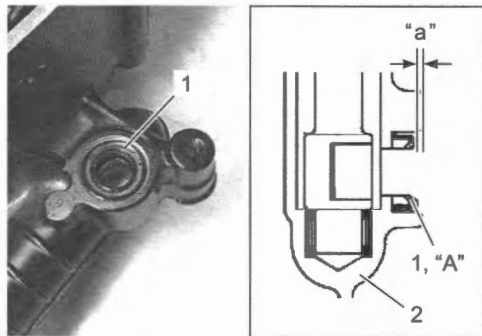


IH18K1530021-01

2. Generator cover	"a": 1.0 - 1.5 mm (0.04 - 0.059 in)
--------------------	-------------------------------------

- Apply grease to the clutch push rod cap inner surface.


**"A": Grease 99000-25011 (SUZUKI SUPER GREASE A)**

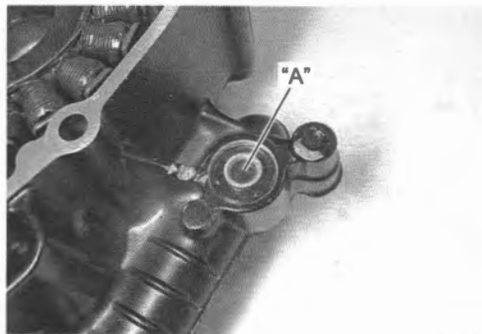

IH18K1530022-01

- Apply a small quantity of grease to clutch push rod oil seal lip (1) and the clutch push rod end (2).

**"A": Grease 99000-25011 (SUZUKI SUPER GREASE A)**

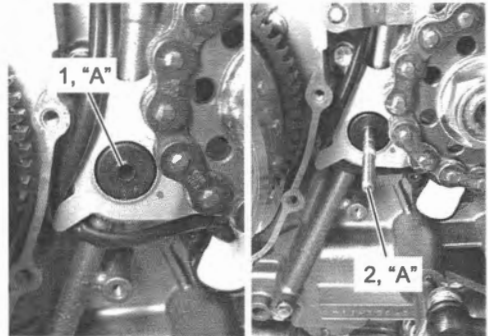


IH18K1530023-02

### Clutch Push Rod (Left) Inspection

BENH28K25306007


Refer to "Clutch Push Rod (Left) / Clutch Release Camshaft Removal and Installation" (Page 5C-7). Inspect the push rod for wear or bend. If any defects are found, replace it with a new one.

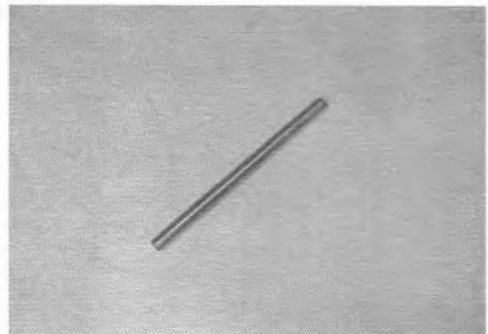

I944H1530016-01

Clutch Components

BENH28K25306008

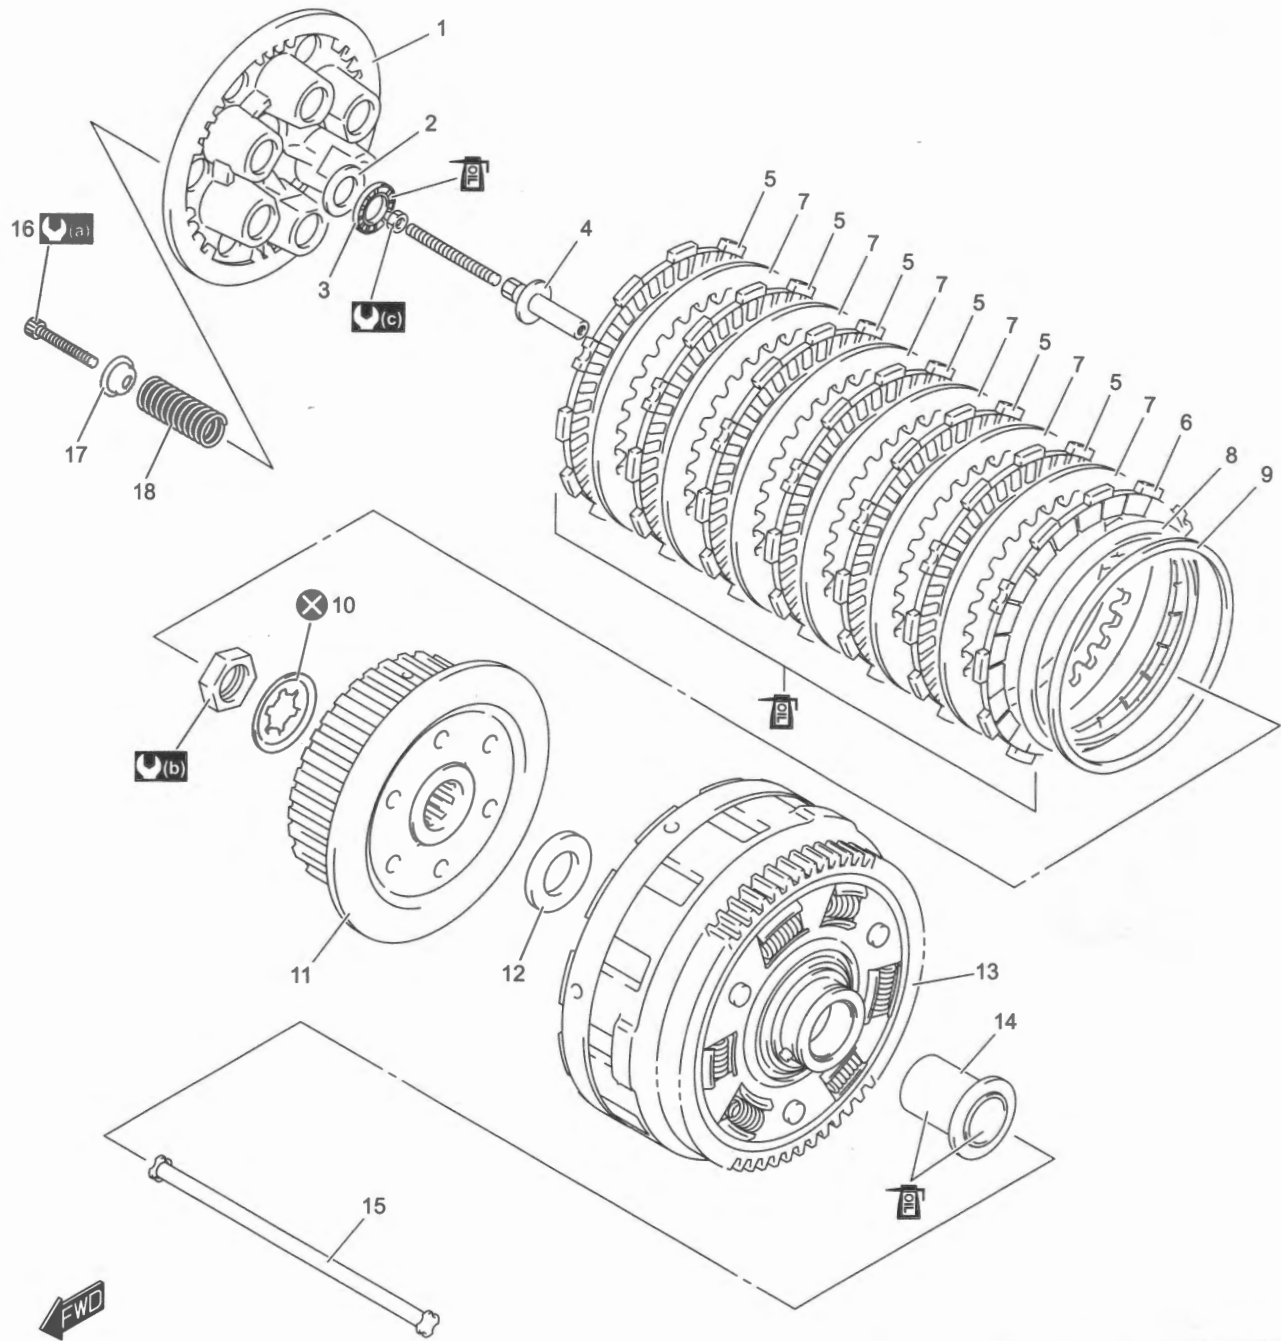


IH28K1530055-02

1. Clutch pressure plate	9. Wave washer seat	17. Clutch spring washer
2. Thrust washer	10. Clutch sleeve hub lock washer	18. Clutch spring
3. Bearing	11. Clutch sleeve hub	(a) : 10 N·m (1.0 kgf-m, 7.5 lbf-ft)
4. Clutch push piece	12. Clutch sleeve hub thrust washer	(b) : 50 N·m (5.1 kgf-m, 37.0 lbf-ft)
5. Drive plate No. 1	13. Primary driven gear assembly	(c) : 5.0 N·m (0.51 kgf-m, 3.70 lbf-ft)
6. Drive plate No. 2	14. Primary driven gear spacer	Apply engine oil.
7. Driven plate	15. Clutch push rod (right)	X : Do not reuse.
8. Wave washer	16. Clutch spring bolt	

## Clutch Removal


BENH28K25306009

- 1) Drain engine oil. (Page 1E-4)
- 2) Drain engine coolant. (Page 1F-5)
- 3) Disconnect the radiator outlet hose (1), water bypass hose (2), oil cooler outlet hose (3) and PCV hose (4).

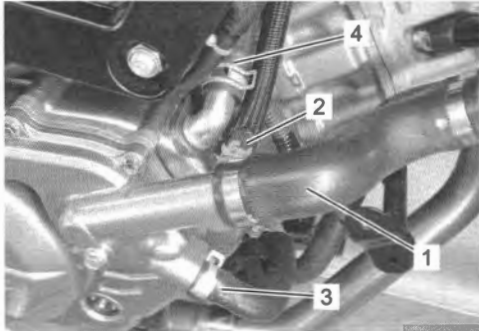

IH28K1530023-01

- 4) Release the water pump drain hose (1) from the clamp (2).

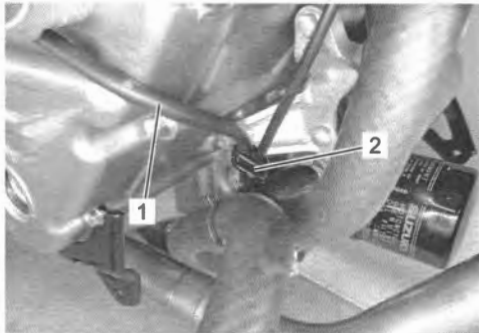


IH28K1530024-01

- 5) Remove the bolts and move the right front footrest bracket (1).




IH28K1530026-01

- 6) Release the fuel tank water drain hose No. 2 (1) from the clamp (2).

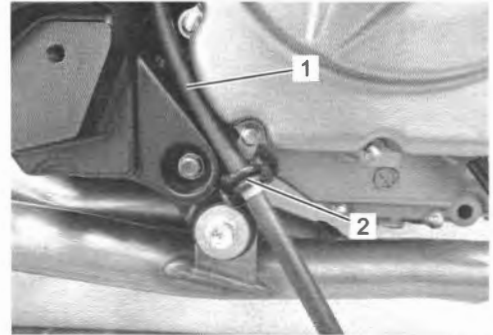


IH28K1530025-01

- 7) Remove the clutch cover (1).

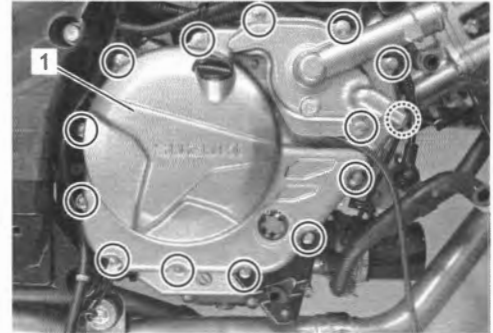

IH28K1530027-01

- 8) Remove the gasket (1) and dowel pins (2).

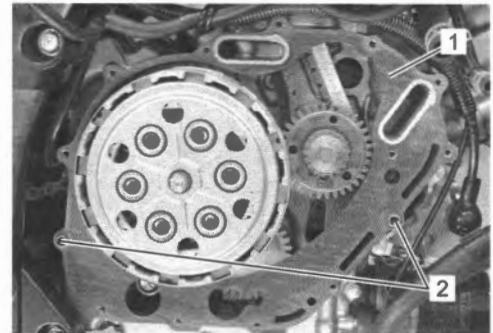


IH28K1530028-01

- 9) Remove the clutch spring bolts (1), clutch spring washer, clutch springs and clutch pressure plate (2).

### NOTE


**Loosen the clutch spring set bolts little by little and diagonally.**

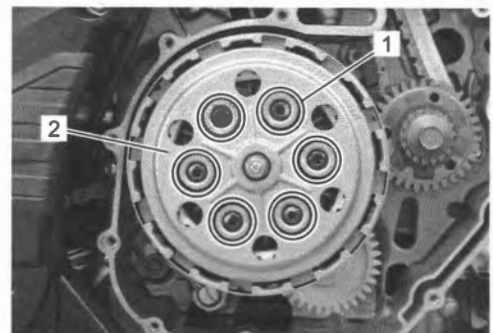

IH28K1530029-01

## 5C-11 Clutch:

- 10) Remove the clutch drive plates (1) and driven plates (2).

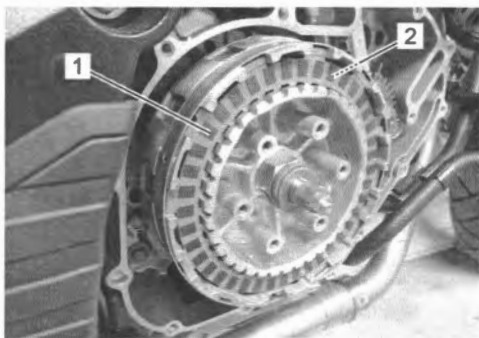


IH28K1530030-01

- 11) Remove the clutch plate wave washer (1) and wave washer seat (2).



IH28K1530031-02

- 12) Remove the thrust washer (1), bearing (2) and clutch push piece (3).

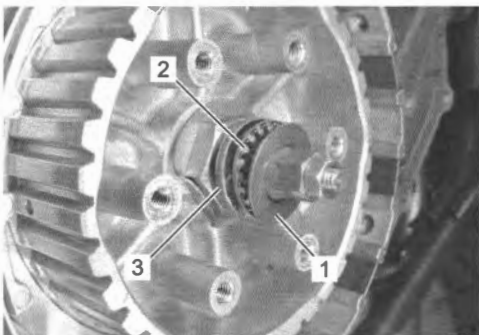


IH28K1530032-01

- 13) Remove the clutch push rod (right) (1).


### NOTE

If it is difficult to pull out the clutch push rod (right) (1), use a magnetic hand or wire.

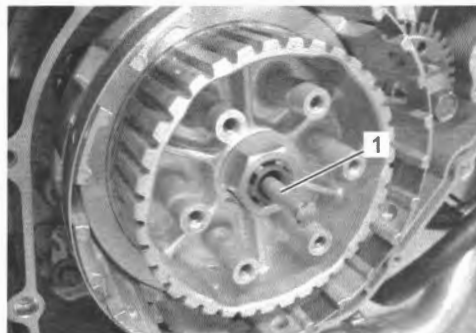

IH28K1530033-01

- 14) Flatten the clutch sleeve hub lock washer (1).

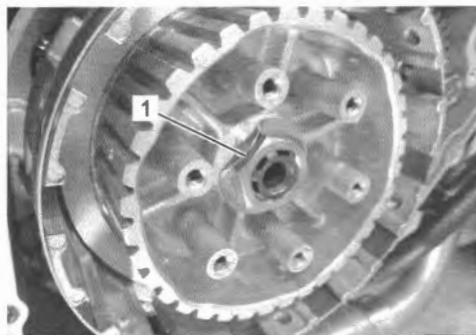


IH28K1530034-01

- 15) Hold the clutch sleeve hub with the special tools and remove the clutch sleeve hub nut (1).

### Special tool

(A): 09920-53740


(B): 09920-31020

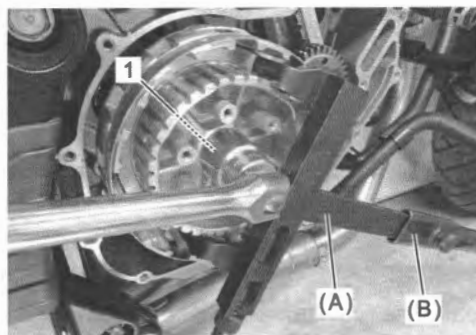

IH28K1530035-01




- 16) Remove the clutch sleeve hub lock washer (1) and clutch sleeve hub (2).

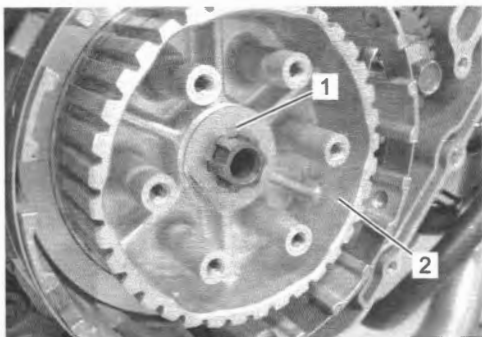


IH28K1530036-01

- 17) Remove the clutch sleeve hub thrust washer (1) and primary driven gear assembly (2).

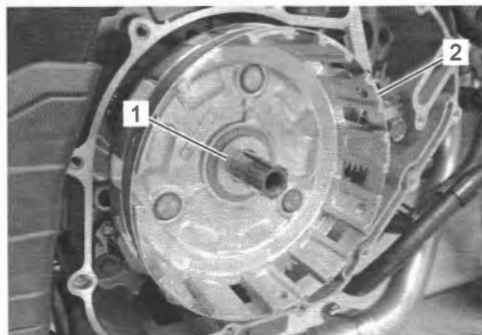

IH28K1530037-02


- 18) Remove the primary driven gear spacer (1).

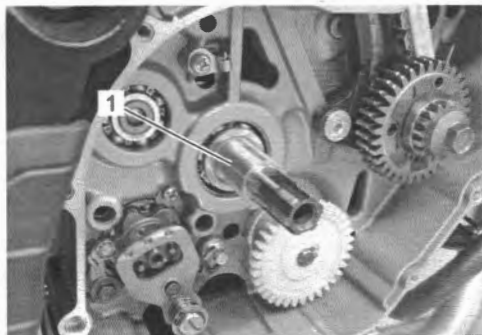

IH28K1530038-01

- 19) Remove the snap ring (1), oil pump drive gear (2) and pin (3).

**Special tool**  
09900-06107

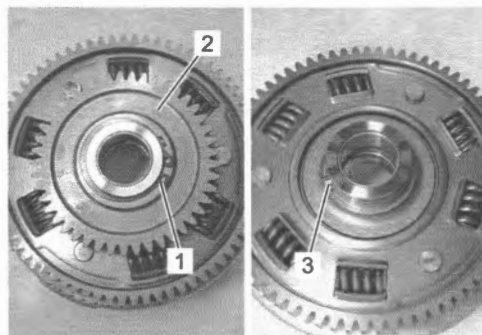

IH18K1530037-01


## Clutch Installation

BENH28K25306010

- 1) Install the pin (1).
- 2) Install the oil pump drive gear (2) with the flange side (3) facing the primary driven gear assembly.

### NOTE


When installing the oil pump drive gear (2), align the pin (1) with the slot (4).

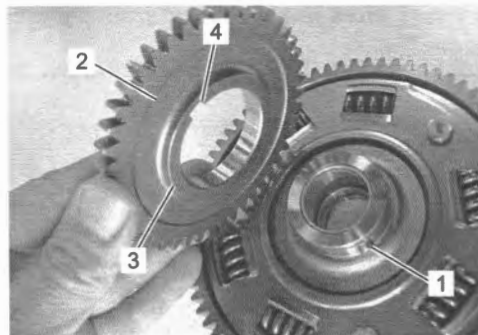

IH18K1530038-02

- 3) Install the new snap ring (1).

**Special tool**  
09900-06107

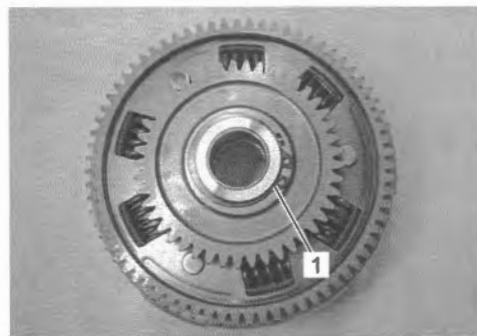

IH18K1530039-01

- 4) Apply engine oil to the primary driven gear spacer (1) inside and outside.
- 5) Install the primary driven gear spacer (1).




IH28K1530038-01

6) Install the primary driven gear assembly (1).


**NOTE**

- When installing the primary driven gear assembly, align the teeth of the primary drive gears (2) and primary drive scissors gears (3) by turning the primary drive gears (2) clockwise.
- Be sure to engage the oil pump driven gears (4) and oil pump drive gears (5), primary drive gears (2) and primary driven gears (6).

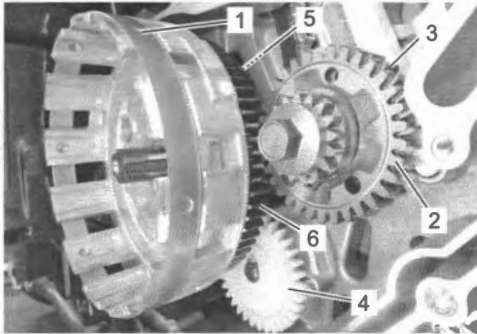

IH28K1530039-02

7) Install the clutch sleeve hub thrust washer (1).

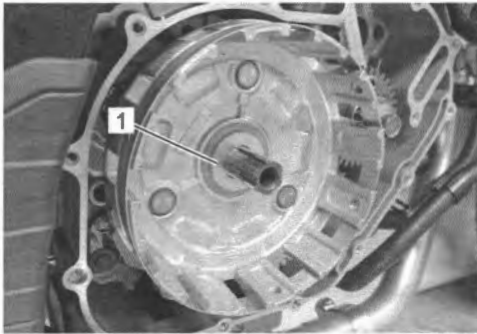


IH28K1530040-01

8) Install the clutch sleeve hub (1), new clutch sleeve hub lock washer (2) and clutch sleeve hub nut (3).

**NOTE**

The conical curve side of clutch sleeve hub nut (3) faces outside.

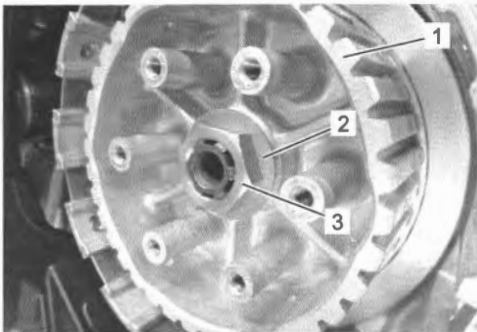

IH28K1530041-01

9) Hold the clutch sleeve hub with the special tools and tighten the clutch sleeve hub nut (1) to the specified torque.


**Special tool**

(A): 09920-53740

(B): 09920-31020


**Tightening torque**

Clutch sleeve hub nut (a): 50 N·m (5.1 kgf-m, 37.0 lbf-ft)

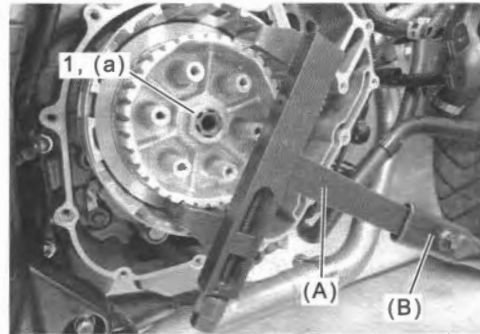


IH28K1530042-01

10) Bend the clutch sleeve hub lock washer (1).

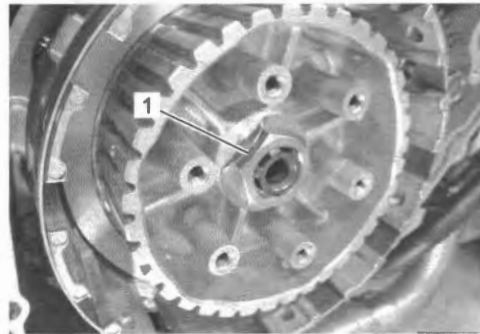

IH28K1530034-01

11) Install the clutch push rod (right) (1) into the countershaft.

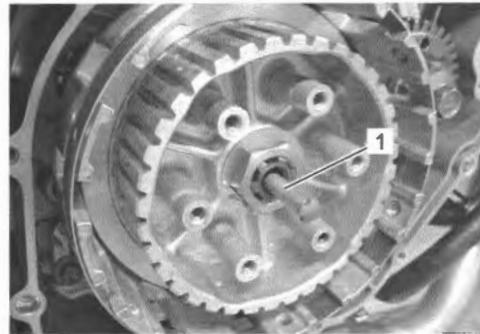


IH28K1530033-01

- 12) Apply engine oil to the bearing (1).
- 13) Install the clutch push piece (2), bearing (1) and thrust washer (3) to the countershaft.


**NOTE**

**Thrust washer (3) is located between the clutch pressure plate and bearing (1).**

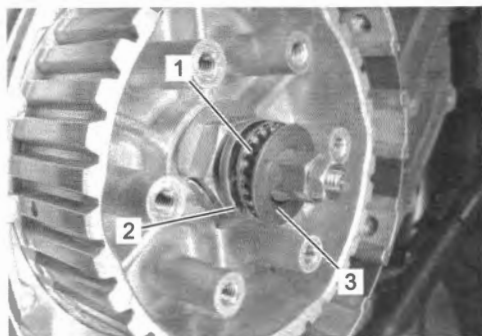


IH28K1530043-01

- 14) Install the wave washer seat (1) and wave washer (2) onto the clutch sleeve hub correctly.

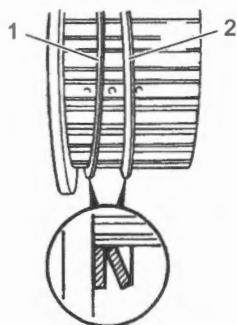


IF04K1530056-01

- 15) Apply engine oil to the clutch drive plates and driven plates.
- 16) Insert the clutch drive plates and driven plates one by one into the clutch sleeve hub in the prescribed order.

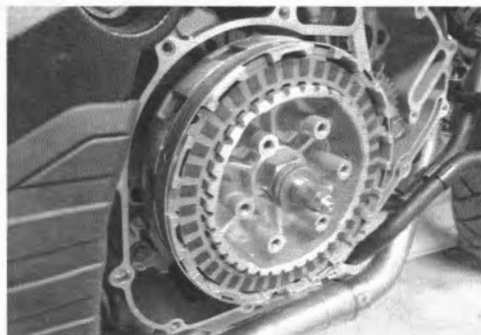

IH28K1530044-01

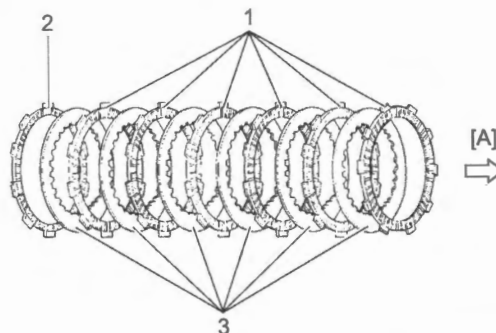


IH18K1530076-01

[A]: Direction of outside (clutch pressure plate side)
1. Drive plate No. 1
2. Drive plate No. 2
3. Driven plate

**NOTE**

**The clutch system is equipped with two kinds of the drive plate. They can be distinguished by the inside diameter.**

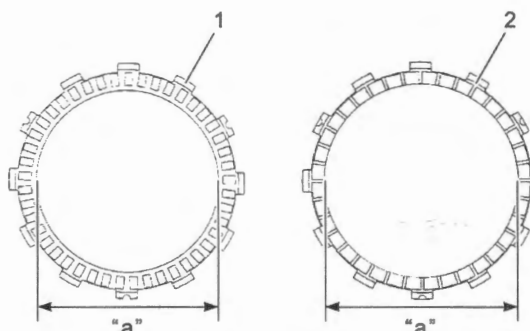

IH18K1530077-04

	Inside diameter "a"
Drive plate No. 1 (1)	116 mm (4.57 in)
Drive plate No. 2 (2)	122.5 mm (4.823 in)

## 5C-15 Clutch:


- 17) Install the clutch pressure plate (1), clutch springs, clutch spring washer and bolts (2).
- 18) Tighten the clutch spring bolts (2) to the specified torque.

### NOTE

**Tighten the clutch spring bolts little by little and diagonally.**

### Tightening torque

**Clutch spring bolt (a): 10 N·m (1.0 kgf-m, 7.5 lbf-ft)**

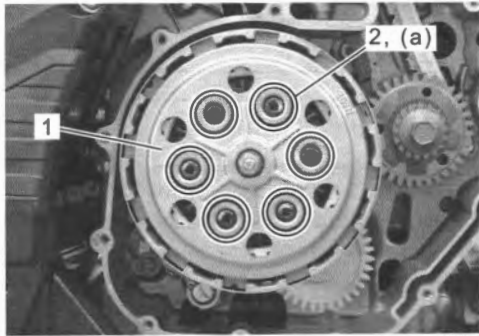


IH28K1530045-01

- 19) Loosen the clutch release adjuster nut (1) and turn out the clutch push rod screw (2) two or three rotations.
- 20) From that position, slowly turn in the clutch push rod adjuster screw (2) until resistance is felt.
- 21) From that position, turn out the clutch push rod adjuster screw (2) 1 rotation, and tighten the clutch release adjuster nut (1) while holding the clutch push rod screw (2).


### Tightening torque

**Clutch release adjuster nut (a): 5.0 N·m (0.51 kgf-m, 3.70 lbf-ft)**

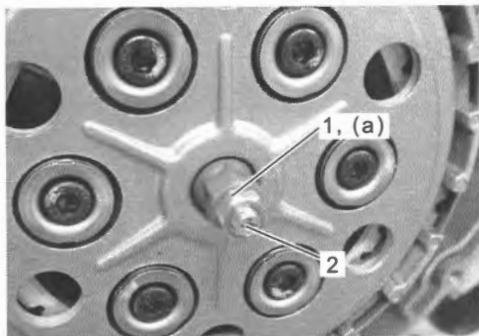

IH28K1530006-01

- 22) Install the dowel pins (1) and new gasket (2).

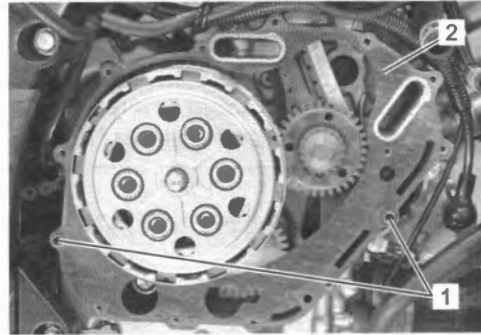


IH28K1530047-01

- 23) Install the clutch cover (1) and tighten the clutch cover bolts (2) to the specified torque.

### Tightening torque

**Clutch cover bolt (a): 10 N·m (1.0 kgf-m, 7.5 lbf-ft)**

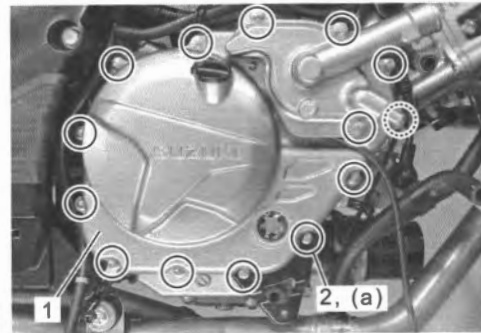


IH28K1530048-01

- 24) Route the water pump drain hose (1). Refer to "Water Hose Routing Diagram" in Section 1F (Page 1F-2).




IH28K1530049-01

- 25) Route the fuel tank water drain hose (1). Refer to "Water Hose Routing Diagram" in Section 1F (Page 1F-2).

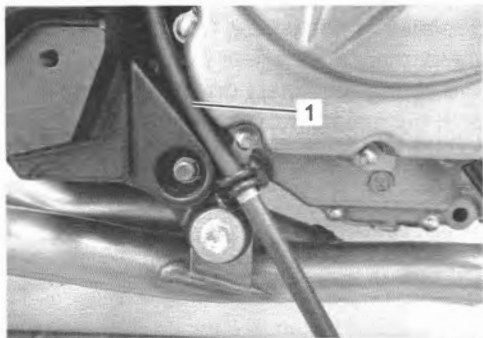

IH28K1530050-01

- 26) Connect the PCV hose (1), oil cooler outlet hose (2), water bypass hose (3) and radiator outlet hose (4) securely. Refer to "PCV Hose Routing Diagram" in Section 1B (Page 1B-7) and "Water Hose Routing Diagram" in Section 1F (Page 1F-2).

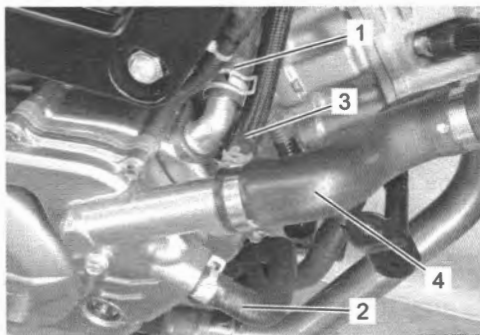

IH28K1530046-01

- 27) Install the right front footrest bracket. ☞ (Page 4A-22)  
 28) Pour engine oil. ☞ (Page 1E-4)  
 29) Pour engine coolant and bleed air from the cooling system. ☞ (Page 1F-5)  
 30) Adjust the clutch cable play. ☞ (Page 5C-2)

### Clutch Parts Inspection

BENH28K25306011

Refer to "Clutch Removal" (Page 5C-10) and "Clutch Installation" (Page 5C-12).

### Clutch Drive and Driven Plate

#### NOTE

**Wipe off the engine oil from the drive and driven plates with a clean rag.**


Measure the thickness of drive plates with a vernier calipers. If the drive plate thickness is found to have reached the limit, replace it with a new one.

### Drive plate thickness

[Limit]: 2.62 mm (0.104 in)

#### Special tool

(A): 09900-20102

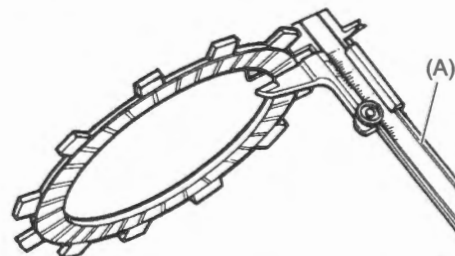

IF04K1530064-01


Measure the claw width of drive plates with a vernier calipers. Replace the drive plates found to have worn down to the limit.

### Drive plate claw width

[Limit]: 13.2 mm (0.520 in)

#### Special tool

(A): 09900-20102

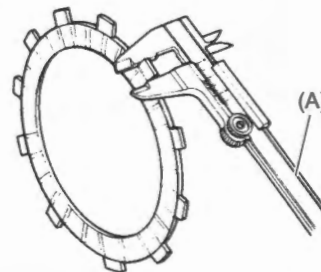

IF04K1530065-01


Measure each driven plate for distortion with a thickness gauge and surface plate. Replace driven plates which exceed the limit.

### Driven plate distortion

[Limit]: 0.10 mm (0.0039 in)

#### Special tool

(A): 09900-20803

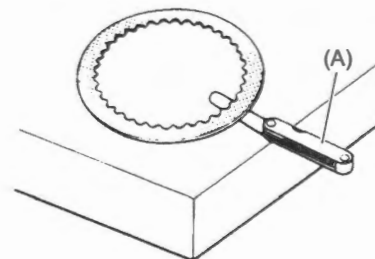

IF04K1530066-01

## 5C-17 Clutch:

### Clutch Spring


Measure the free length of each coil spring with a vernier calipers, and compare the length with the specified limit. Replace all the springs if any spring is not within the limit.

#### Clutch spring free length

[Limit]: 57.6 mm (2.27 in)

#### Special tool

(A): 09900-20102

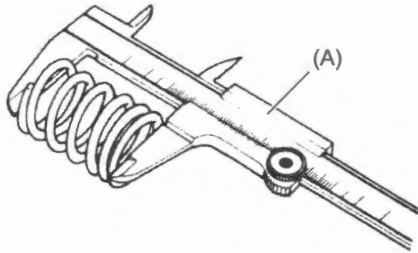


IF04K1530067-01

### Clutch Release Bearing

Inspect the clutch release bearing (1) for any abnormality, especially cracks. When removing the bearing from the clutch, decide whether it can be reused or if it should be replaced.


Smooth engagement and disengagement of the clutch depends on the condition of this bearing.

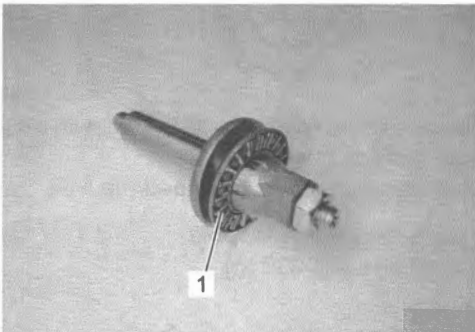

IH18K1530056-01

### Clutch Push Rod (Right)


Inspect the push rod for wear and damage. If any defects are found, replace the push rod with a new one.

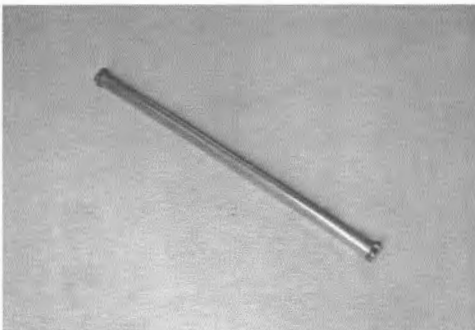

I944H1530050-01

### Clutch Sleeve Hub and Primary Driven Gear Assembly

Inspect the slot of the clutch sleeve hub (1) and primary driven gear assembly (2) for damage or wear caused by the clutch plates. If necessary, replace it with a new one. Inspect the primary driven gear bushing for any damage. Inspect the spring of primary driven gear for any damages. If necessary, replace primary driven gear assembly with a new one.

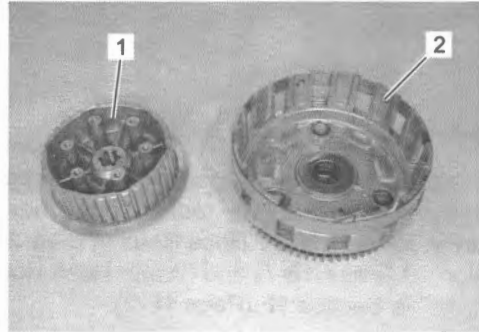

IH18K1530057-01

### Primary Drive Gear Removal and Installation

BENH28K25306012

#### Removal


- 1) Remove the clutch cover. (Page 5C-10)
- 2) Hold the clutch pressure plate with the special tool and loosen the primary drive gear bolt (1).

#### NOTE

This primary drive gear bolt has left-hand threads.


#### Special tool

(A): 09930-40113

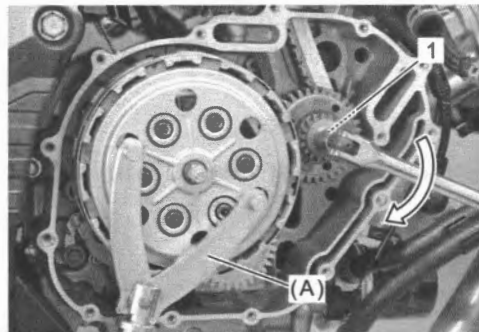


IH28K1530051-01

3) Remove the clutch components (1). (Page 5C-10)

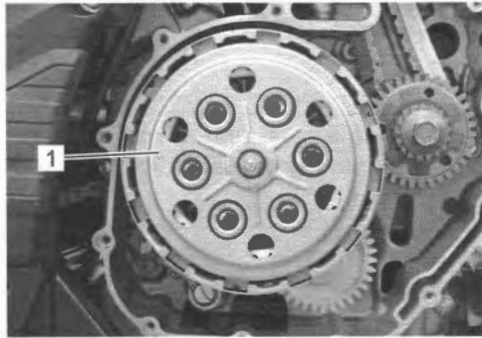

IH28K1530052-01

4) Remove the primary drive gear bolt (1), water pump drive gear (2) and primary drive gear assembly (3).

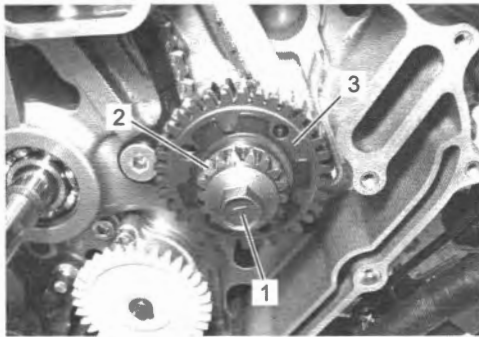

IH18K1530060-01

### Installation

Install the primary drive gear in the reverse order of removal. Pay attention to the following point:


- Hold the clutch pressure plate with the special tool and tighten the primary drive gear bolt (1) to the specified torque.

### Special tool

(A): 09930-40113

### Tightening torque

Primary drive gear bolt (a): 70 N·m (7.1 kgf-m, 52.0 lbf-ft)

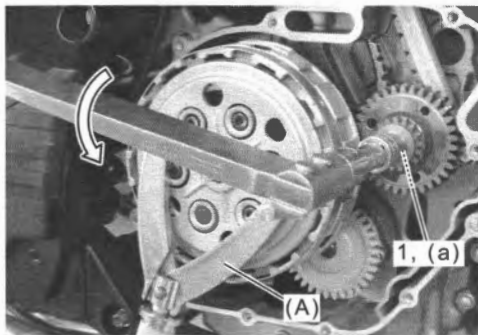


IH28K1530053-01

### Primary Drive Gear Inspection

Refer to "Primary Drive Gear Removal and Installation" (Page 5C-17).

BENH28K25306013

Visually inspect the gear teeth for wear and damage. If they are worn, replace the gear with a new one. Refer to "Primary Drive Gear Disassembly and Assembly" (Page 5C-18).

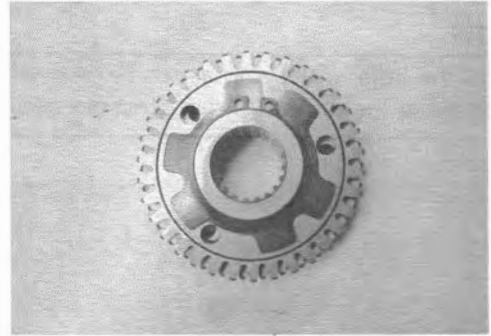

I944H1530059-01

### Primary Drive Gear Disassembly and Assembly

BENH28K25306014

Refer to "Primary Drive Gear Removal and Installation" (Page 5C-17).


### Disassembly

Remove the following parts from the primary drive gear.


- Snap ring (1)
- Wave washer (2)
- Primary drive scissors gear (3)
- Springs (4)
- Primary drive gear (5)

### Special tool

09900-06107

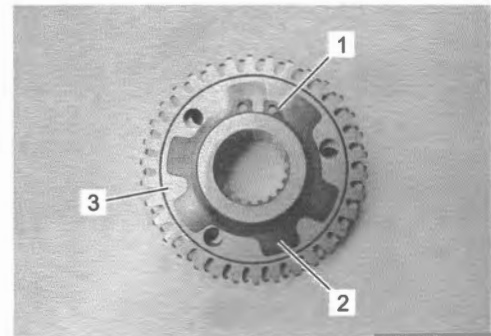

IH18K1530062-01

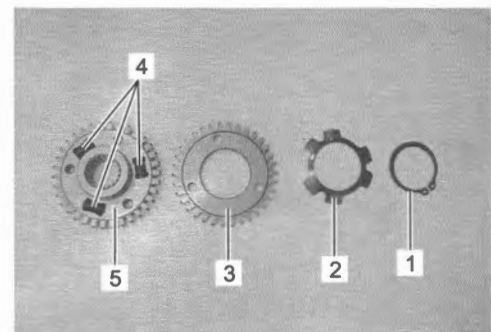


IH18K1530063-01

**Reassembly**

- 1) Set the springs (1) into the grooves of the primary drive gear.
- 2) Install the primary drive scissors gear (2).

**NOTE**

**Align the hole of the primary drive gear with the hole of the primary drive scissors gear.**

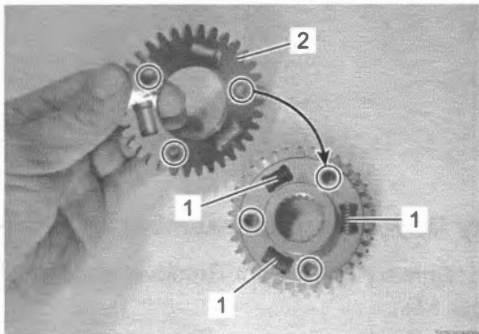


IH18K1530064-01

- 3) Install the wave washer (1) not to cover the holes (2) of the primary drive gear.

**NOTE**

**The convex side of wave washer faces upward.**

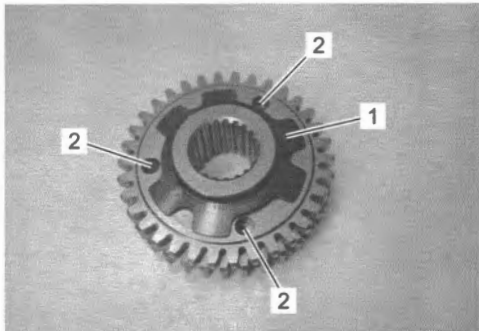


IH18K1530065-01

- 4) Install the new snap ring (1).

**Special tool  
09900-06107**

**NOTE**

**After installing a snap ring, always insure that it is completely seated in its groove and securely fitted.**

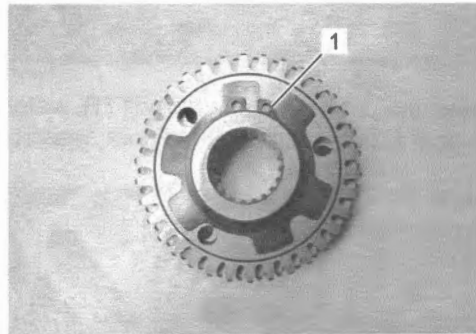

IH18K1530066-01



## Specifications

### Tightening Torque Specifications

BENH28K25307001

Fastening part	Tightening torque			Note
	N-m	kgf-m	lbf-ft	
Clutch release adjuster nut	5.0	0.51	3.70	☞(Page 5C-3) / ☞(Page 5C-15)
Clutch lever pivot bolt	6.5	0.66	4.80	☞(Page 5C-6)
Clutch lever pivot nut	6.5	0.66	4.80	☞(Page 5C-6)
Clutch switch screw	0.6	0.06	0.45	☞(Page 5C-6)
Clutch lever holder bolt	10	1.0	7.5	☞(Page 5C-7)
Clutch sleeve hub nut	50	5.1	37.0	☞(Page 5C-13)
Clutch spring bolt	10	1.0	7.5	☞(Page 5C-15)
Clutch cover bolt	10	1.0	7.5	☞(Page 5C-15)
Primary drive gear bolt	70	7.1	52.0	☞(Page 5C-18)

**Reference:**

For the tightening torques of fasteners not specified in this page, refer to:

"Clutch Control System Components" (Page 5C-4)

"Clutch Components" (Page 5C-9)

"Fasteners Information" in Section 0C (Page 0C-11)

## Special Tools and Equipment

### Recommended Service Material

BENH28K25308001








Material	SUZUKI recommended product or Specification		Note
Grease	SUZUKI SUPER GREASE A	P/No.: 99000-25011	☞(Page 5C-6) / ☞(Page 5C-7) / ☞(Page 5C-7) / ☞(Page 5C-8) / ☞(Page 5C-8) / ☞(Page 5C-8) / ☞(Page 5C-8)
Thread lock cement	THREAD LOCK CEMENT 1342H	P/No.: 99000-32160	☞(Page 5C-6)

#### NOTE

Required service material(s) is also described in:  
 “Clutch Control System Components” (Page 5C-4)  
 “Clutch Components” (Page 5C-9)

### Special Tool

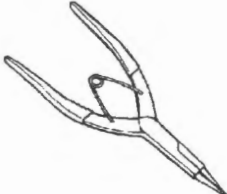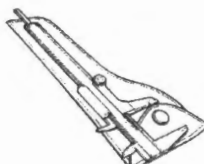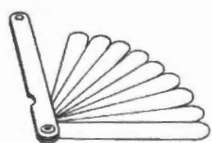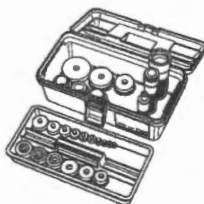BENH28K25308002

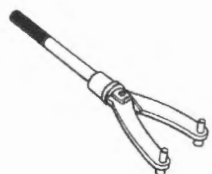09900-06107 Snap ring pliers (External) ☞(Page 5C-12) / ☞(Page 5C-12) / ☞(Page 5C-18) / ☞(Page 5C-19)		09900-20102 Vernier calipers (200 mm) ☞(Page 5C-16) / ☞(Page 5C-16) / ☞(Page 5C-17)	
09900-20803 Thickness gauge ☞(Page 5C-16)		09913-70210 Bearing installer set ☞(Page 5C-8)	
09920-31020 Extension handle ☞(Page 5C-11) / ☞(Page 5C-13)		09920-53740 Clutch sleeve hub holder ☞(Page 5C-11) / ☞(Page 5C-13)	
09930-40113 Rotor holder ☞(Page 5C-17) / ☞(Page 5C-18)			

## Section 6

## Steering

## CONTENTS

<b>Precautions</b> .....	<b>6-1</b>	Steering Stem Components .....	6B-6
<b>Precautions</b> .....	<b>6-1</b>	Steering On-Vehicle Inspection.....	6B-7
Precautions for Steering .....	6-1	Steering Tension Inspection and Adjustment.....	6B-7
<b>Steering General Diagnosis</b> .....	<b>6A-1</b>	Steering Stem Upper Bracket Removal and Installation .....	6B-8
<b>Diagnostic Information and Procedures</b> .....	<b>6A-1</b>	Steering Stem Removal and Installation .....	6B-10
Steering Symptom Diagnosis.....	6A-1	Steering Stem Inspection .....	6B-13
<b>Steering / Handlebar</b> .....	<b>6B-1</b>	Steering Stem Bearing Removal and Installation .....	6B-13
<b>Repair Instructions</b> .....	<b>6B-1</b>	<b>Specifications</b> .....	<b>6B-14</b>
Handlebar Components .....	6B-1	Tightening Torque Specifications.....	6B-14
Handlebar Construction .....	6B-2	<b>Special Tools and Equipment</b> .....	<b>6B-15</b>
Handlebar Removal and Installation .....	6B-3	Recommended Service Material .....	6B-15
Handlebar Inspection .....	6B-5	Special Tool .....	6B-15

# Precautions

## Precautions

### Precautions for Steering

BENH28K26000001

Refer to "General Precautions" in Section 00 (Page 00-1) and "Precautions for Electrical Circuit Service" in Section 00 (Page 00-2).

# Steering General Diagnosis

## Diagnostic Information and Procedures

### Steering Symptom Diagnosis

BENH28K26104001


Condition	Possible cause	Correction / Reference Item
<b>Heavy steering</b>	Over tightened steering stem nut.	Adjust. (Page 6B-7)
	Broken bearing in steering stem.	Replace. (Page 6B-13)
	Distorted steering stem.	Replace. (Page 6B-10)
	Not enough pressure in tires.	Adjust. (Page 2D-20)
<b>Wobbly handlebar</b>	Loss of balance between right and left front forks.	Replace fork, adjust fork oil level or replace fork spring. <ul style="list-style-type: none"> <li>• Replace fork: (Page 2B-2)</li> <li>• Adjust fork oil level or replace fork spring: (Page 2B-3)</li> </ul>
	Distorted front fork.	Repair or replace. (Page 2B-2)
	Distorted front axle or crooked tire.	Replace. <ul style="list-style-type: none"> <li>• Front axle: (Page 2D-6)</li> <li>• Tire: (Page 2D-21)</li> </ul>
	Loose steering stem nut.	Adjust. (Page 6B-7)
	Worn or incorrect tire.	Replace. (Page 2D-21)
	Incorrect tire pressure.	Adjust. (Page 2D-20)
	Worn bearing/race in steering stem.	Replace. (Page 6B-13)

# Steering / Handlebar

## Repair Instructions

### Handlebar Components

BENH28K26206001

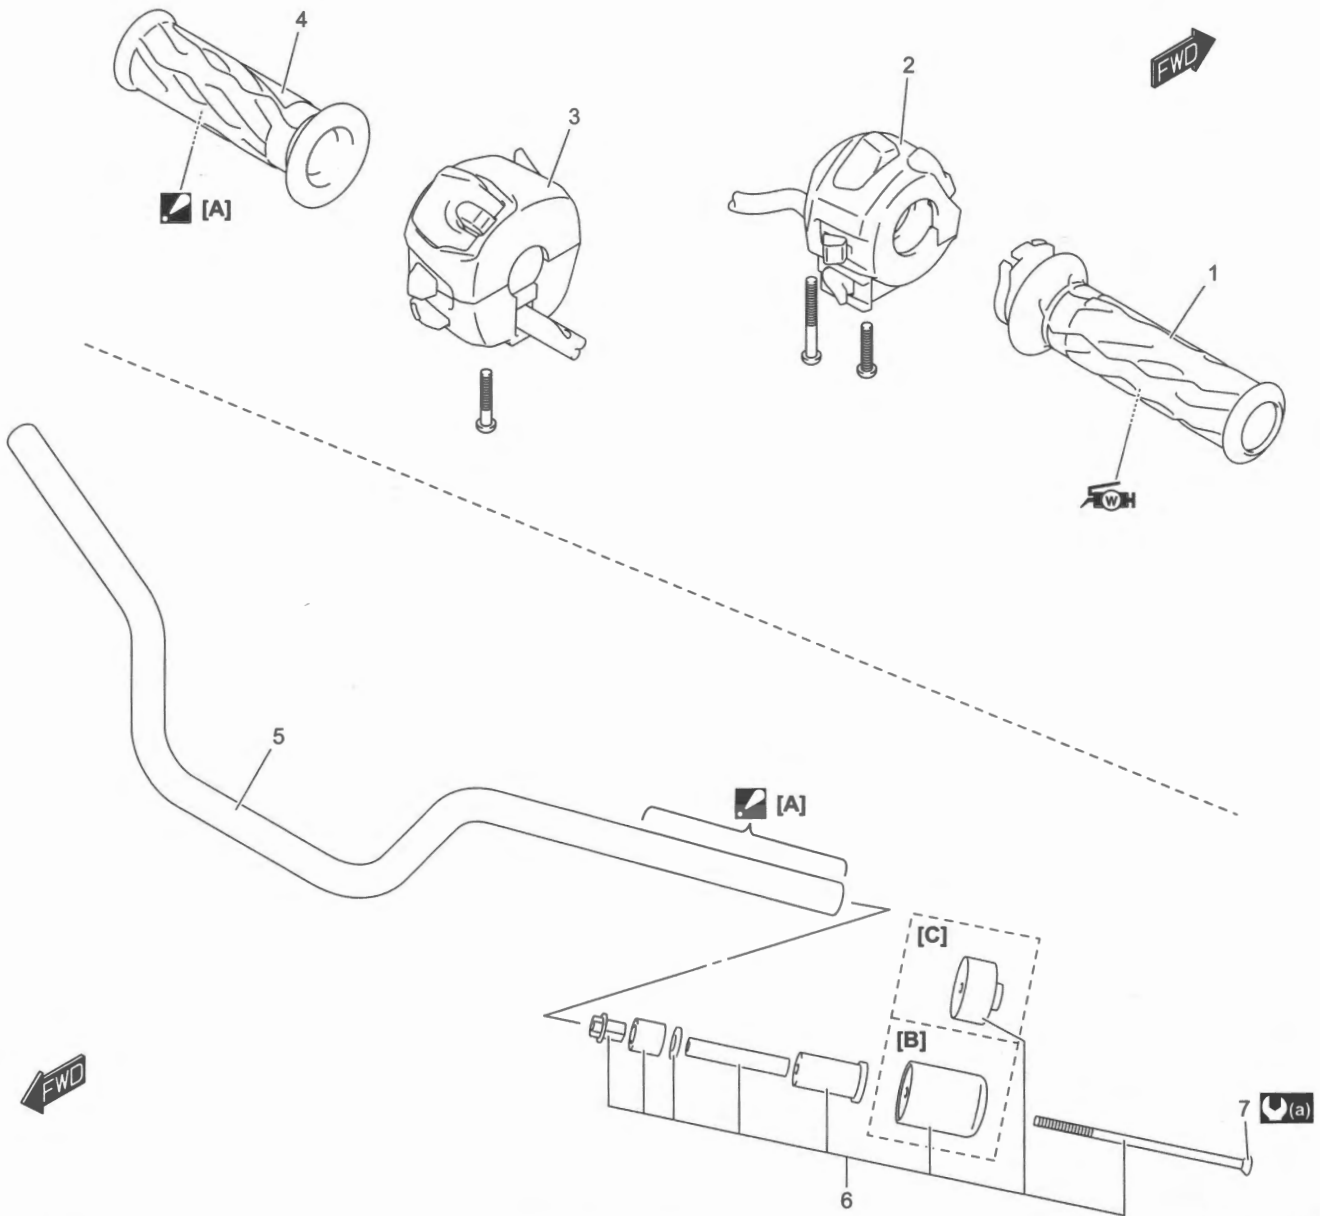


IH28K1620001-01

<p>[A]: Apply handle grip glue.</p>	<p>2. Right handle switch</p>	<p>6. Handlebar balancer set</p>
<p>[B]: Without knuckle cover</p>	<p>3. Left handle switch</p>	<p>7. Handlebar balancer screw</p>
<p>[C]: With knuckle cover</p>	<p>4. Left handlebar grip</p>	<p>(a) : 5.5 N·m (0.56 kgf·m, 4.05 lbf·ft)</p>
<p>1. Throttle grip</p>	<p>5. Handlebars</p>	<p>W : Apply a small quantity grease into the throttle grip.</p>

Handlebar Construction

BENH28K26206002

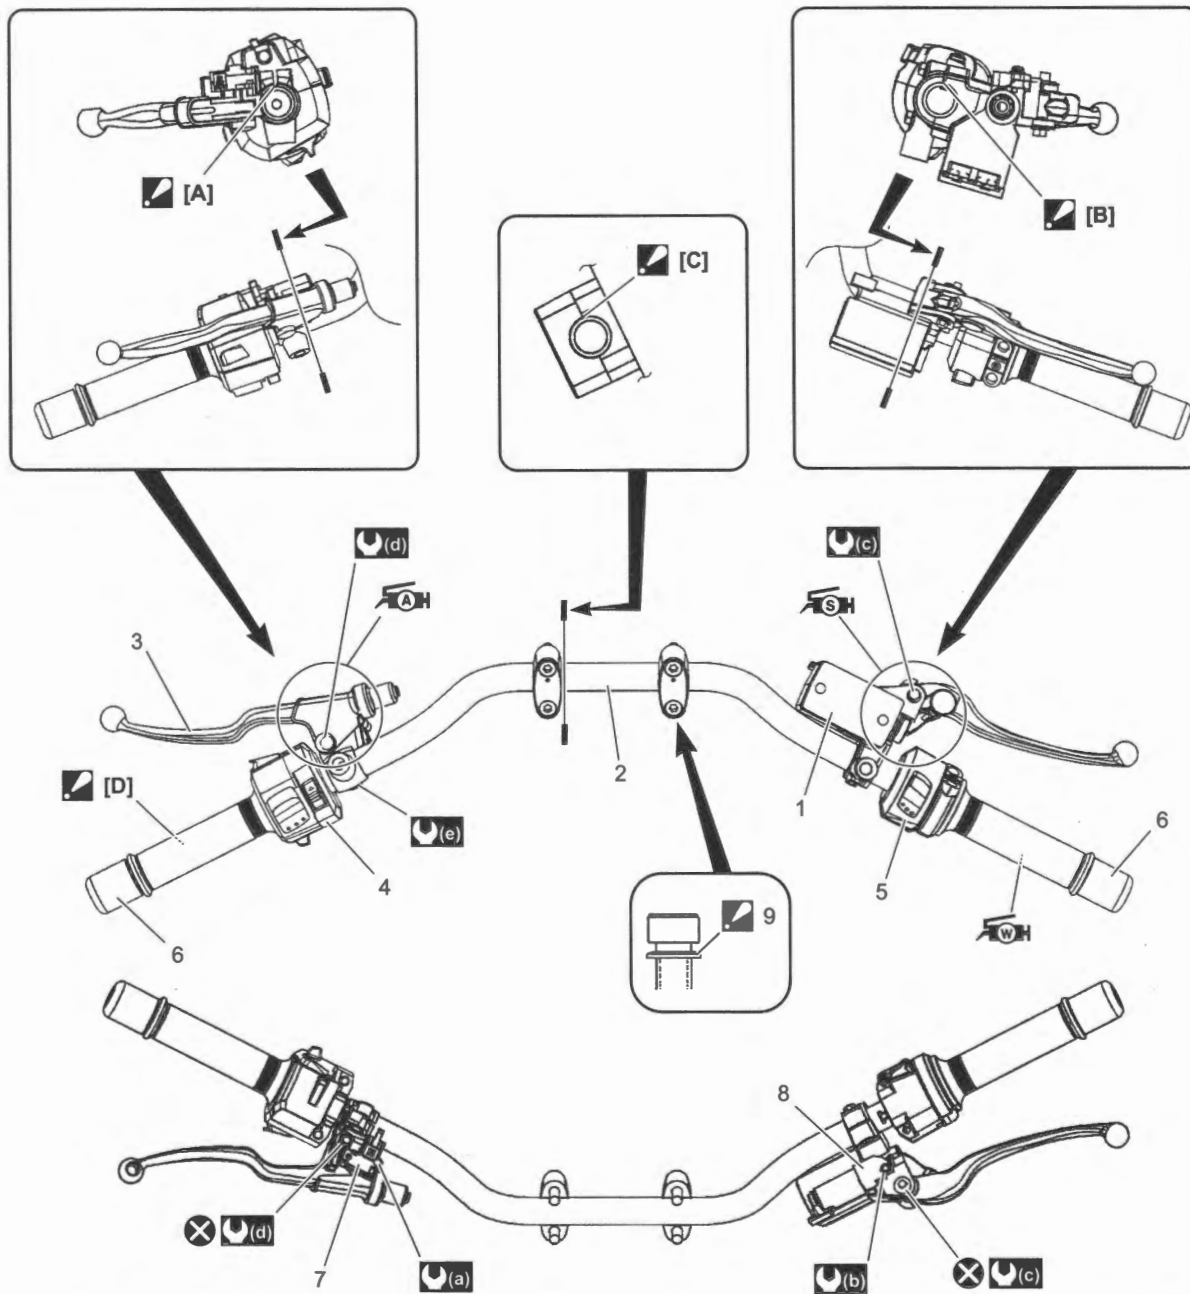

IH28K1620043-02

<p>☑ [A]: Align the slit center of the lever holder with the punch mark on the handlebars.</p>	5. Right handle switch	⌚(d) : 6.5 N-m (0.66 kgf-m, 4.80 lbf-ft)
<p>☑ [B]: Align the punch mark of handlebars with the edge of master cylinder.</p>	6. Handlebar balancer	⌚(e) : 10 N-m (1.0 kgf-m, 7.5 lbf-ft)
<p>☑ [C]: Align the matching surface of handlebar holder with the punch mark of handlebars.</p>	7. Clutch lever position switch	ⒶH : Apply grease to the sliding surface of the clutch lever.
<p>☑ [D]: Apply handle grip glue.</p>	8. Front brake light switch	ⒶSH : Apply silicone grease to the sliding surface of the brake lever.
1. Front brake master cylinder	<p>☑ 9. Washer : Face the convex side upward.</p>	ⒶWH : Apply water resistant grease EP2 into the throttle grip.
2. Handlebars	⌚(a) : 0.6 N-m (0.06 kgf-m, 0.45 lbf-ft)	⊗ : Do not reuse.
3. Clutch lever	⌚(b) : 1.2 N-m (0.12 kgf-m, 0.90 lbf-ft)	
4. Left handle switch	⌚(c) : 5.9 N-m (0.60 kgf-m, 4.35 lbf-ft)	

## Handlebar Removal and Installation


BENH28K26206003

### Removal

#### NOTE


**Do not turn the master cylinder upside down.**

- 1) For DL650XA, remove the knuckle covers. (Page 9D-29)
- 2) Disconnect the clutch cable from the clutch lever. (Page 5C-4)
- 3) Remove the following parts from the left side of the handlebar.
  - a) Rear view mirror (1)
  - b) Left handle switch (2)
  - c) Handlebar balancer assembly (3)
  - d) Left handlebar grip (4)
- 4) Disconnect the clutch lever position switch coupler (5).
- 5) Loosen the clutch lever holder bolt (6) and remove the clutch lever assembly.

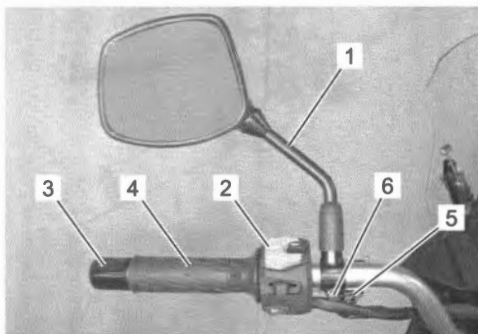


IH28K1620002-02

- 6) Remove the following parts from the right side of the handlebar.
  - a) Rear view mirror (1)
  - b) Front brake master cylinder assembly (2)
  - c) Right handle switch (3)
  - d) Handlebar balancer assembly (4)
  - e) Throttle grip (5)

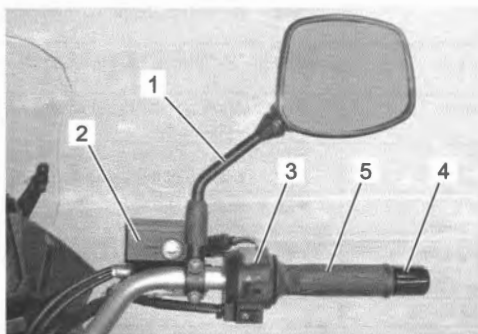


IH28K1620003-01

- 7) Remove the caps (1).

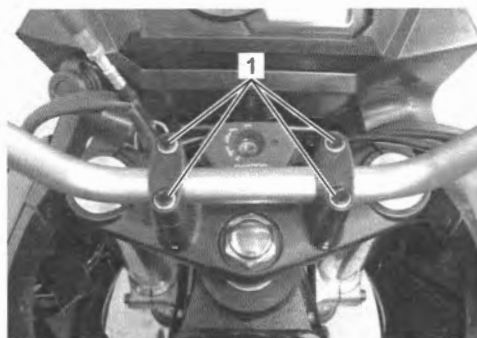

IH28K1620004-01

- 8) Remove the handlebar holders (1).

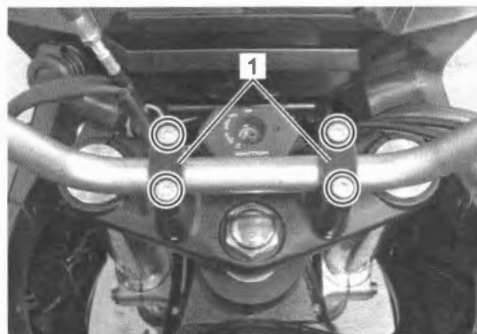


IH28K1620005-01

- 9) Remove the handlebars.

### Installation

- 1) Install the handlebars.
- 2) Set the handlebar holders with their punch marks (1) forward.
- 3) Install the bolts (3) with the spring washers (2) so that conical side of each washer faces upward.

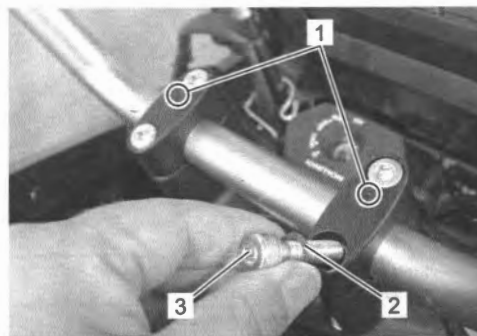


IH28K1620006-01




- 4) Set the handlebars so that its punch mark (1) aligns with the mating surface (2) of the left handlebar holder and tighten the front side of the handlebar clamp bolts (3) first.

#### Tightening torque

Handlebar clamp bolt (a): 23 N·m (2.3 kgf·m, 17.0 lbf·ft)

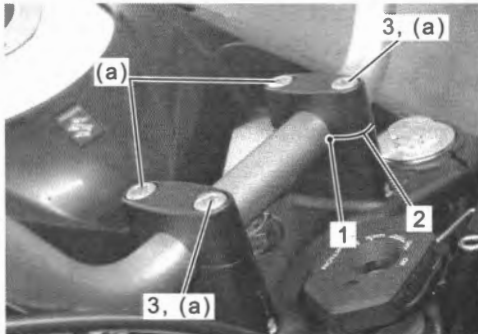


IH28K1620007-01

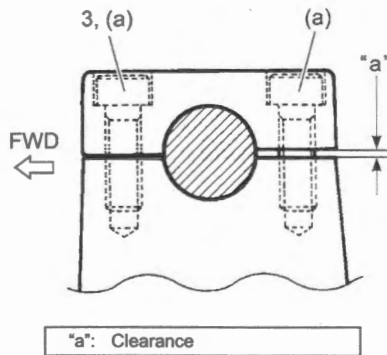

IH28K1620008-01

- 5) Install the caps.  
 6) Install the front brake master cylinder assembly. (Page 4A-13)  
 7) Apply a small quantity grease into the throttle grip (1) before installing the throttle grip to the handlebars (2).

**"A": Grease 99000-25350 (SUZUKI WATER RESISTANT GREASE EP2)**

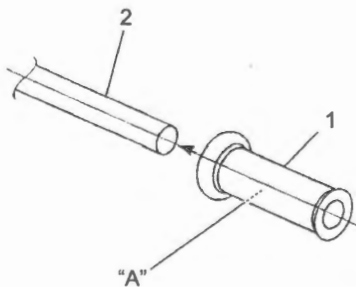


IH28K1620009-01

- 8) Install the right handlebar balancer assembly (1) and tighten the handlebar balancer screw (2) to the specified torque.


#### Tightening torque

Handlebar balancer screw (a): 5.5 N·m (0.56 kgf·m, 4.05 lbf·ft)

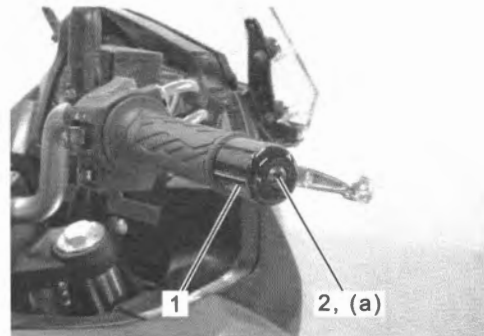

IH28K1620010-01


- 9) Insert the projection (1) of the right handle switch into the hole (2) of the handlebars.

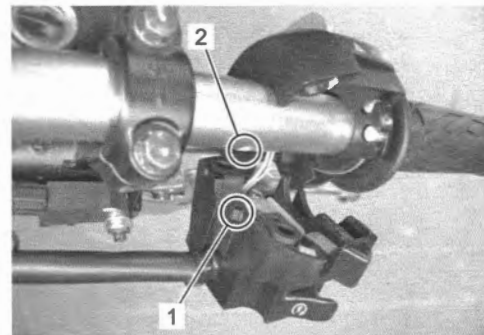

IH28K1620011-01

- 10) Install the right rear view mirror.  
 11) Install the clutch lever assembly. (Page 5C-5)  
 12) Clean, decrease and dry both the left handlebar outer surface (1) on which the grip is being fitted and internal surface of the left handlebar grip (2).  
 13) Apply handle grip glue to both the left handlebar outer surface (1) on which the grip is being fitted and internal surface of the left handlebar grip (2) evenly.

**"A": Adhesive (Handle grip glue)**

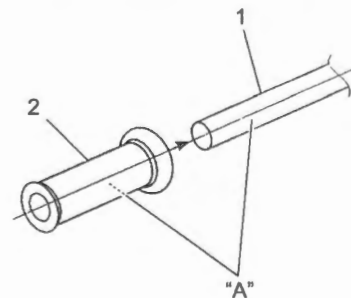


IH28K1620012-01

## 6B-5 Steering / Handlebar:

- 14) Install the left handlebar balancer assembly (1) and tighten the handlebar balancer screw (2) to the specified torque.


### Tightening torque

Handlebar balancer screw (a): 5.5 N·m (0.56 kgf·m, 4.05 lbf·ft)

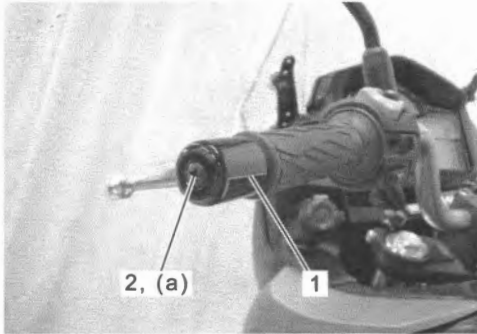

IH28K1620013-01

- 15) Insert the projection (1) of the left handle switch into the hole (2) of the handlebars.

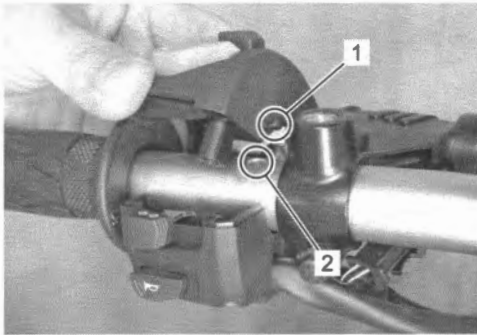

IH28K1620014-01

- 16) Connect the clutch lever position switch coupler.  
17) Install the left rear view mirror.  
18) Connect the clutch cable to the clutch lever. (Page 5C-4)  
19) For DL650XA, install the knuckle covers. (Page 9D-29)

- 20) Check to make sure that the wire harnesses, cables and hose are properly routed.

- Wire harness: (Page 9A-7)
- Throttle cable: (Page 1D-2)
- Clutch cable: (Page 5C-1)
- Hose: (Page 4A-1)

- 21) Check the throttle cable for the play and smooth operation. (Page 1D-9)


### Handlebar Inspection

BENH28K26206004

Refer to "Handlebar Removal and Installation" (Page 6B-3).

Inspect the handlebars for distortion and damage.


If any defect is found, replace the handlebars with a new one.

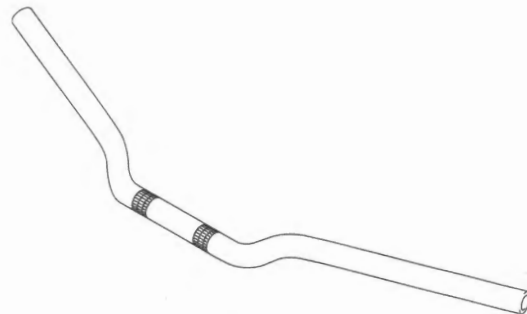

I649G1620010-03

## Steering Stem Components

BENH28K26206005

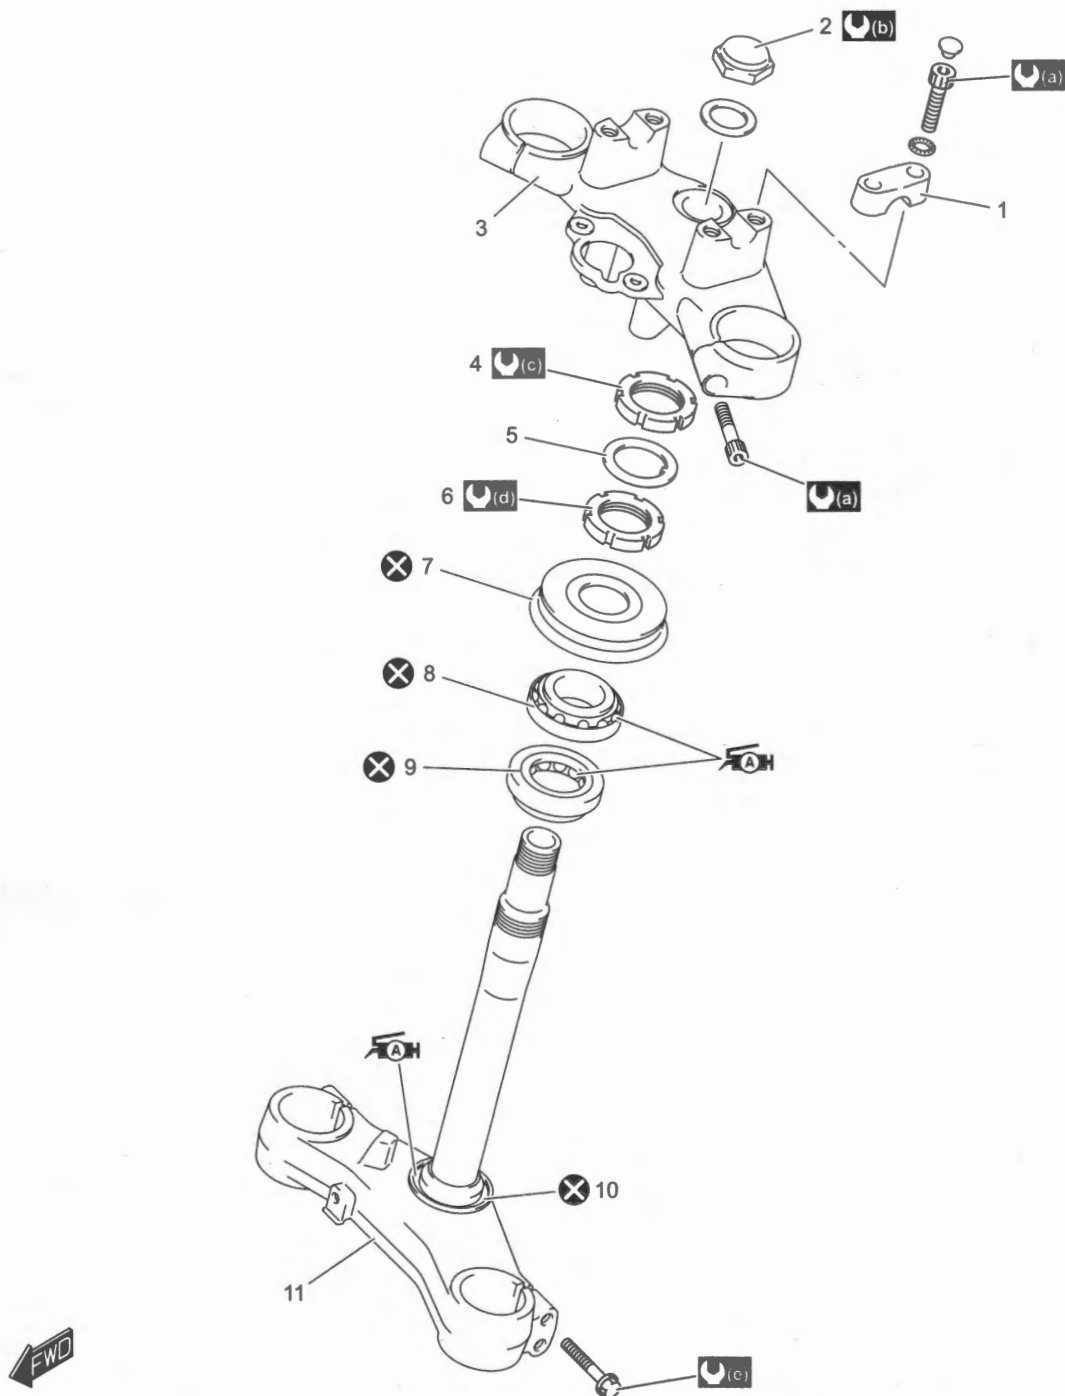

IH28K1620015-02

1. Handlebar holder	7. Dust seal	(b) : 90 N-m (9.2 kgf-m, 66.5 lbf-ft)
2. Steering stem head nut	8. Steering stem upper bearing	(c) : 80 N-m (8.2 kgf-m, 59.0 lbf-ft)
3. Steering stem upper bracket	9. Steering stem lower bearing	(d) : 45 N-m (4.6 kgf-m, 33.5 lbf-ft) → turn counterclockwise 1/4 - 1/2
4. Steering stem lock-nut	10. Lower seal	(e) : 21 N-m (2.1 kgf-m, 15.5 lbf-ft)
5. Washer	11. Steering stem lower bracket	AH : Apply grease.
6. Steering stem nut	(a) : 23 N-m (2.3 kgf-m, 17.0 lbf-ft)	X : Do not reuse.

### Steering On-Vehicle Inspection

BENH28K26206006

Steering should be adjusted properly for smooth turning of handlebars and safe running. Overtighten steering prevents smooth turning of the handlebars and too loose steering will cause poor stability.

- 1) Check that there is no play in the front fork.
  - a) Support the motorcycle with its front wheel off the ground, grasp the bottoms of the front forks and move the forks back-and-forth to check there is no play in the stem bearings.



IH28K1620016-01

- b) With the front wheel on the ground and applying the front brake(s), move the handlebar back-and-forth and up-and-down to check there is no play in the stem bearings.



IH28K1620017-01

- 2) If play is found, readjust the steering. (Page 6B-7)

### Steering Tension Inspection and Adjustment


BENH28K26206007

- 1) Remove the side cowlings. (Page 9D-25)
- 2) By supporting the motorcycle with a jack, lift the front wheel until it is off the floor 20 – 30 mm (0.79 – 1.18 in).
- 3) Check to make sure that the cables and wire harnesses are properly routed.

- 4) With the front wheel in the straight ahead state, hitch the spring scale on one handlebar grip end as shown in the figure and read the graduation when the handlebars start moving.

#### Steering tension initial force

[Standard]: 2 – 5 N (0.20 – 0.51 kgf, 0.45 – 1.12 lbf)

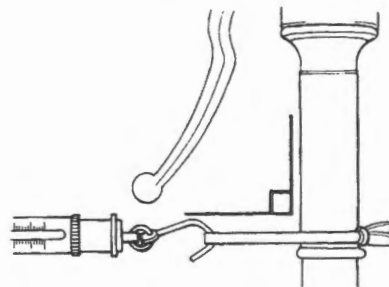


IF04K1620033-01

- 5) Do the same on the other grip end.
- 6) If the initial force reading on the scale when the handlebars start turning is either too heavy or too light, adjust the tension until it satisfies the specification as follows.

- a) First, loosen the front fork upper clamp bolts, steering stem head nut and steering stem lock-nut, and then adjust the steering stem nut by loosening or tightening it.

#### Special tool

(A): 09910-60620

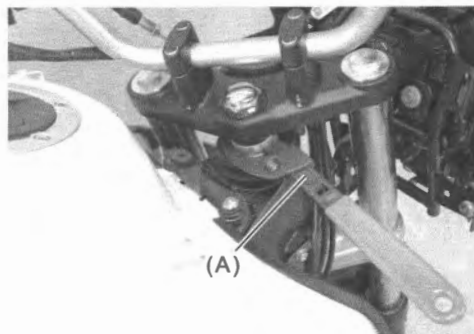

IH28K1620018-01

- b) Tighten the steering stem lock-nut, steering stem head nut and front fork upper clamp bolts to the specified torque, and recheck the initial force with the spring scale according to the previously described procedure.

#### Tightening torque

Steering stem lock-nut: 80 N·m (8.2 kgf·m, 59.0 lbf·ft)

Steering stem head nut: 90 N·m (9.2 kgf·m, 66.5 lbf·ft)

Front fork upper clamp bolt: 23 N·m (2.3 kgf·m, 17.0 lbf·ft)

- c) Make sure that the initial force is within the specified range and the steering is not loose.




IH28K1620016-01

## Steering Stem Upper Bracket Removal and Installation

BENH28K26206008


### Removal

- 1) Support the motorcycle with a jack.
- 2) Remove the air cleaner box. (Page 1D-6)
- 3) Disconnect the ignition switch lead wire coupler (1) and immobilizer antenna lead wire coupler (if equipped) (2).

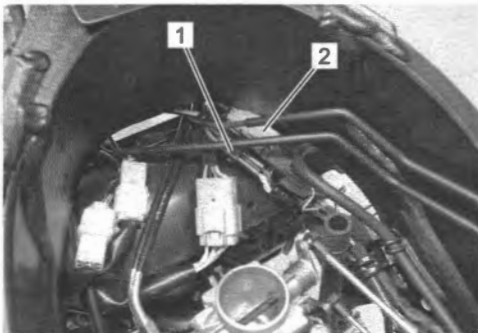


IH28K1620019-01

- 4) Remove the clamps (1).

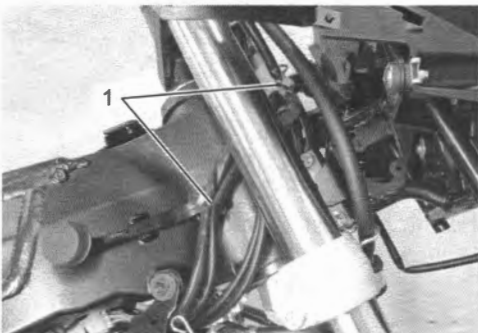


IH28K1620020-01

- 5) Remove the caps and handlebar holders (1).

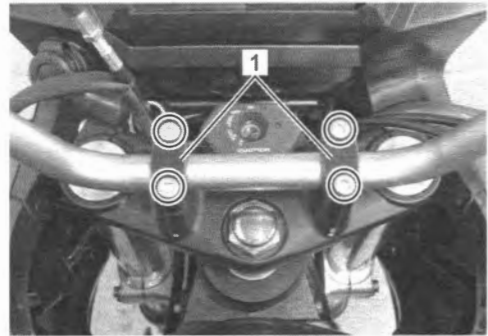


IH28K1620005-01

- 6) Place a rag on the combination meter to prevent the handlebars scratched.
- 7) Release the front brake hose, throttle cables, clutch cable and wiring harnesses from the guides (1).

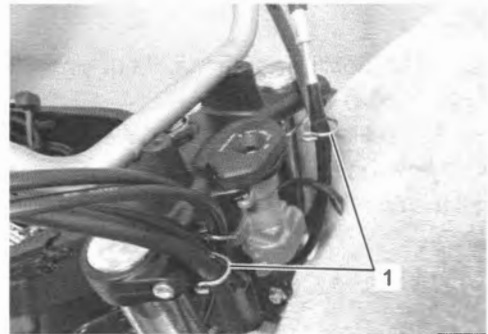

IH28K1620022-01


- 8) Remove the handlebars forward.
- 9) Loosen the front fork upper clamp bolts (1).
- 10) Remove the steering stem head nut (2), washer (3) and steering stem upper bracket assembly (4).

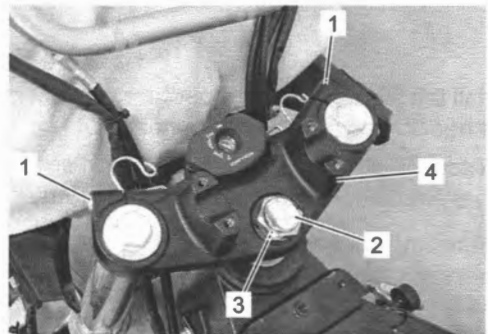

IH28K1620023-01

## 6B-9 Steering / Handlebar:


- 1) Remove the cable guides (1).
- 12) Remove the ignition switch (2) and ignition switch cover (if equipped). (Page 1H-11)
- 13) Remove the immobilizer antenna (if equipped). (Page 1H-12)

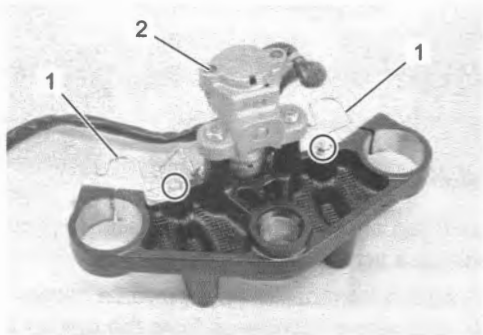

IH28K1620024-01

### Installation

- 1) Install the immobilizer antenna (if equipped). (Page 1H-12)
- 2) Install the ignition switch cover (if equipped) and ignition switch (1). (Page 1H-11)
- 3) Install the cable guides (2).

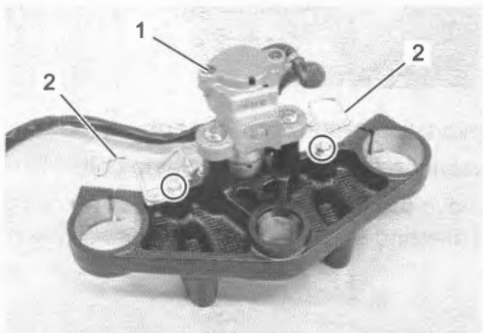


IH28K1620021-01

- 4) Install the steering stem upper bracket assembly (1), washer (2) and steering stem head nut (3).
- 5) Tighten the steering stem head nut (3) and front fork upper clamp bolts (4) to the specified torque.

### Tightening torque


Steering stem head nut (a): 90 N·m (9.2 kgf·m, 66.5 lbf·ft)

Front fork upper clamp bolt (b): 23 N·m (2.3 kgf·m, 17.0 lbf·ft)

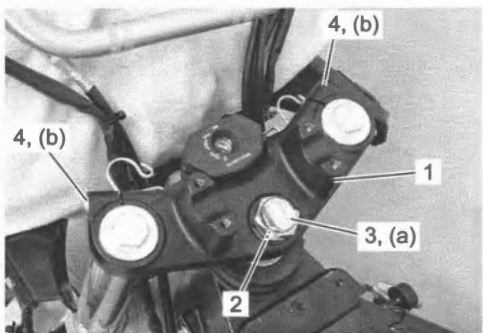


IH28K1620025-01

- 6) Install the handlebars. (Page 6B-3)
- 7) Pass the front brake hose, throttle cables, clutch cable and wiring harnesses through the guides (1). Refer to "Throttle Cable Routing Diagram" in Section 1D (Page 1D-2) and "Clutch Cable Routing Diagram" in Section 5C (Page 5C-1).

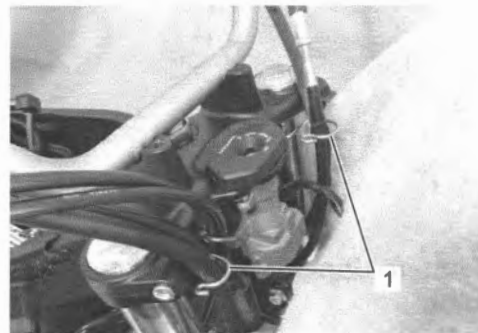


IH28K1620022-01

- 8) Connect the ignition switch lead wire coupler (1), immobilizer antenna lead wire coupler (if equipped) (2) and install the clamps (3). (Page 9A-7)

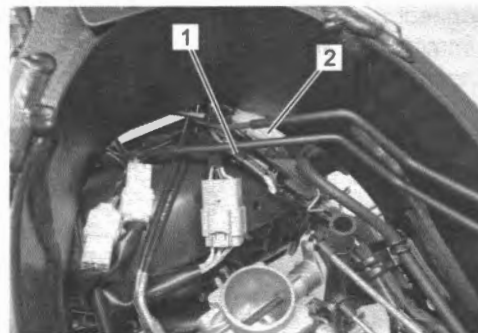

IH28K1620019-01

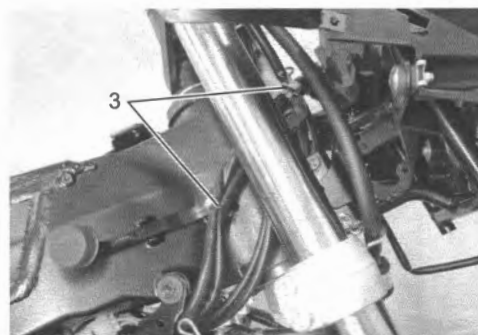

IH28K1620026-01

- 9) Install the air cleaner box. (Page 1D-6)

**Steering Stem Removal and Installation**


BENH28K26206009

**Removal**

- 1) Remove the air cleaner box. (Page 1D-6)
- 2) Remove the front forks. (Page 2B-2)


**NOTE**

**Slightly loosen the steering stem head nut (1) to facilitate later removing.**

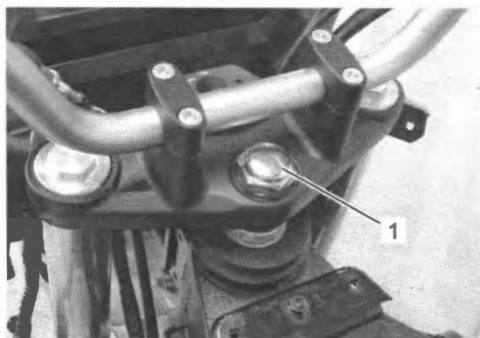

IH28K1620027-01

- 3) Remove the steering stem upper bracket assembly. (Page 6B-8)
- 4) Remove the front brake hose clamp (1) from the steering stem lower bracket.

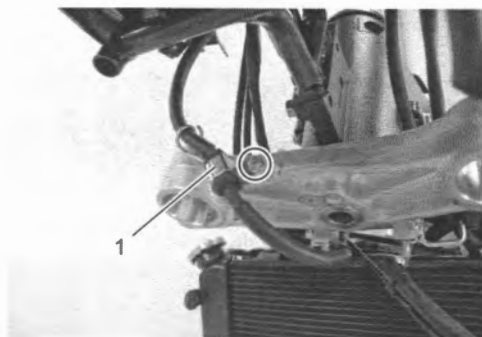


IH28K1620028-01

- 5) While holding the steering stem lower bracket, remove the steering stem lock-nut (1), washer (2) and steering stem nut (3) with the special tools.


**Special tool****(A): 09940-14911****(B): 09940-14960**

- 6) Remove the steering stem lower bracket.

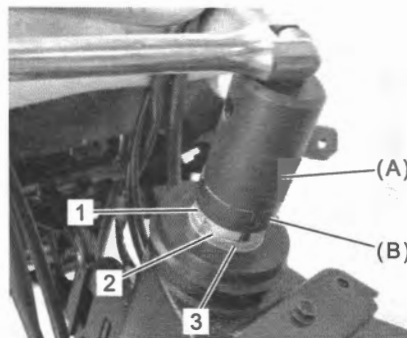


IH28K1620029-02

- 7) Remove the dust seal (1), steering stem upper bearing outer race (2) and steering stem upper bearing (3).

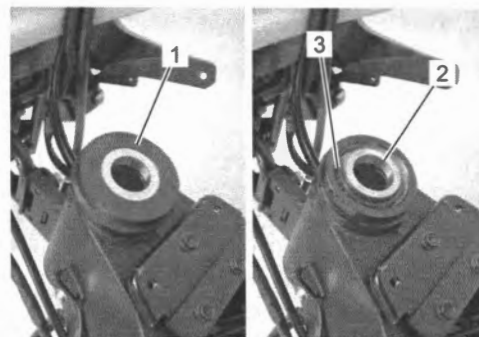

IH28K1620030-01

- 8) Remove the steering stem lower bearing (1), and remove the steering stem lower bearing outer race and lower seal, if necessary. (Page 6B-13)

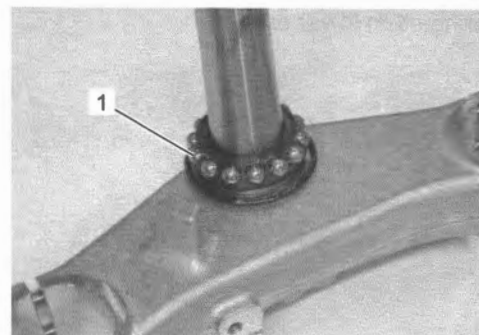

IH28K1620031-01


## 6B-11 Steering / Handlebar:

### Installation

1) Apply grease to the following parts.

- Lip of new lower seal (Page 6B-13)
- Lip of new dust seal
- Upper and lower bearings and races


**"A": Grease 99000-25011 (SUZUKI SUPER GREASE A)**

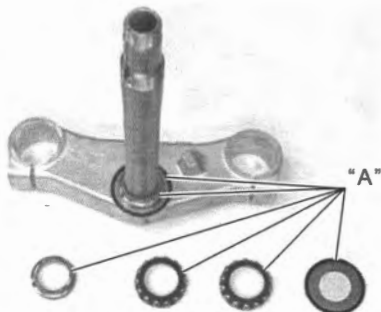

IH28K1620032-01


2) Install the new lower seal and new steering stem lower bearing outer race, if removed. (Page 6B-13)

3) Install the steering stem lower bearing (1).

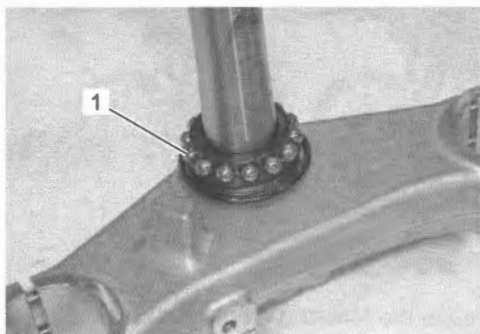

IH28K1620044-01

4) Install the steering stem upper bearing (1), steering stem upper bearing outer race (2), dust seal (3) and steering stem lower bracket.

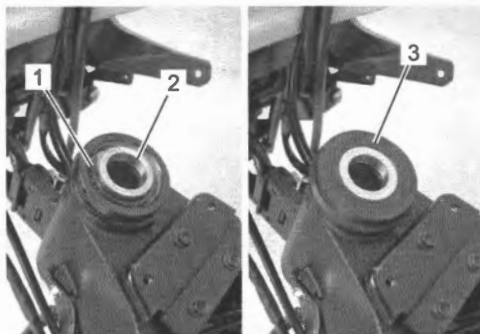

IH28K1620033-01

5) Install the steering stem nut (1) and temporarily tighten it to the specified torque (45 N·m (4.6 kgf-m, 33.5 lbf-ft)) with the special tool.

#### Special tool

(A): 09940-14911

(B): 09940-14960


6) Turn the steering stem lower bracket to the left and right about five or six times so that the ball bearings seat properly.

7) Loosen the steering stem nut 1/4 – 1/2 turn "a".


#### Tightening torque

**Steering stem nut: 45 N·m (4.6 kgf-m, 33.5 lbf-ft)**

→ turn counterclockwise 1/4 – 1/2

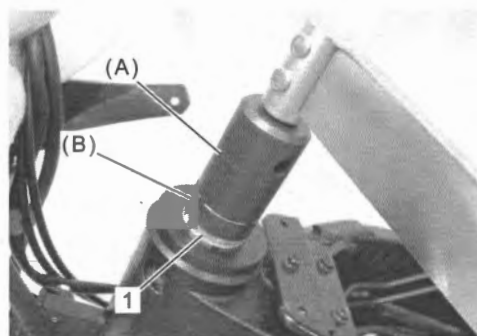

IH28K1620034-01

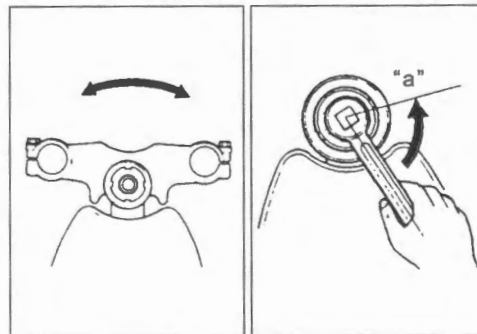

IH18K1620030-02




- 8) In this condition, check that the steering stem can turn smoothly without rattle and stiffness. If there is a rattle or heavy movement, readjust the tightness by the stem nut.

**NOTE**

**This adjustment may vary depending on the motorcycle individually.**

- 9) When installing the washer (1), align the lug (2) of the washer with the groove of the steering stem.

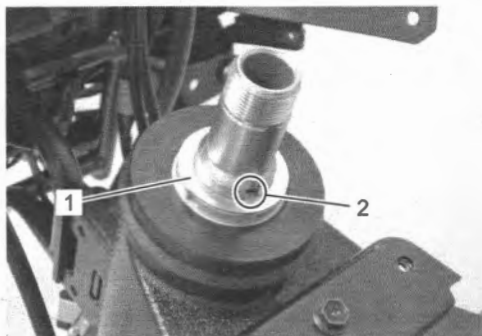

IH28K1620035-01

- 10) Install the steering stem lock-nut (1) and tighten it to the specified torque with the special tools.


**Special tool**

(A): 09940-14911

(B): 09940-14960

**Tightening torque**

**Steering stem lock-nut (a): 80 N·m (8.2 kgf-m, 59.0 lbf-ft)**

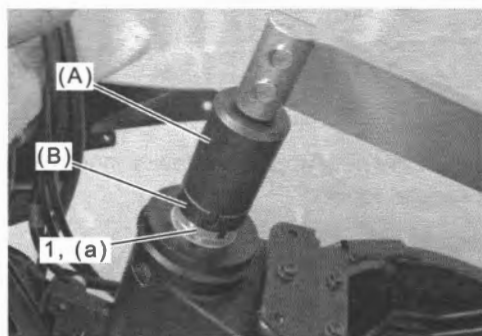


IH28K1620036-01

- 11) Install the steering stem upper bracket assembly (1), washer (2) and steering stem head nut (3) temporarily.
- 12) Install the front forks (4) temporarily.
- 13) Tighten the steering stem head nut (3) to the specified torque.


**Tightening torque**

**Steering stem head nut (a): 90 N·m (9.2 kgf-m, 66.5 lbf-ft)**

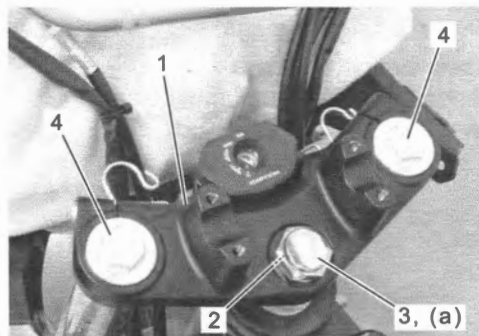

IH28K1620037-01

- 14) Install the steering stem upper bracket assembly. ☞(Page 6B-8)
- 15) Put the front brake hose clamp to touch the stopper (1) on the steering stem and then tighten the bolt.

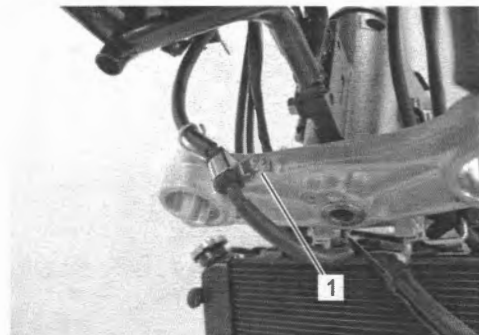

IH28K1620038-01

- 16) Install the front forks. ☞(Page 2B-2)
- 17) Install the air cleaner box. ☞(Page 1D-6)
- 18) Check the steering tension. ☞(Page 6B-7)

### Steering Stem Inspection


BENH28K26206010

Refer to "Steering Stem Removal and Installation" (Page 6B-10).


Inspect the removed parts for the following abnormalities:

- Distortion of the steering stem
- Bearing wear or damage
- Abnormal bearing noise
- Race wear or damage
- Bearing lower seal damage
- Dust seal wear or damage

If any abnormal points are found, replace defective parts with new ones.

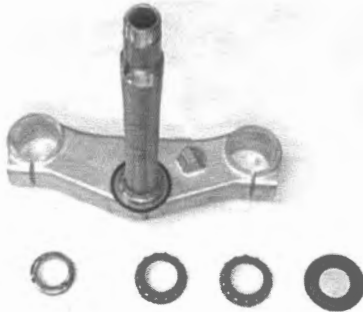

IH28K1620039-01

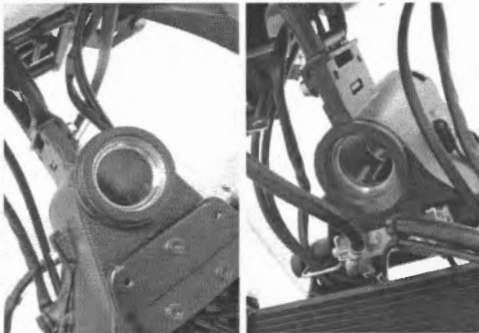


IH28K1620040-01

### Steering Stem Bearing Removal and Installation

BENH28K26206011


#### Removal

- 1) Remove the steering stem upper bearing and steering stem lower bearing. Refer to "Steering Stem Removal and Installation" (Page 6B-10).
- 2) Remove the steering stem lower bearing outer race and lower seal with a chisel.

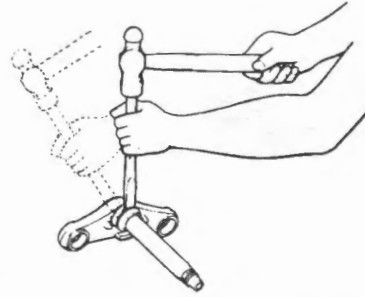

I649G1620033-02

- 3) Drive out the steering stem upper and lower bearing inner races with the steel rod.

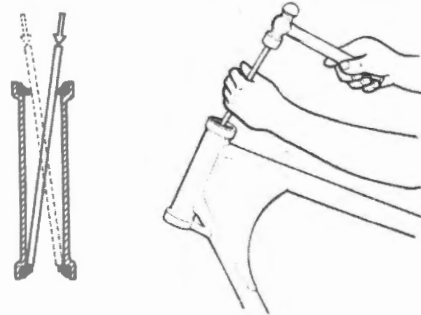

IE29J1620050-01


#### Installation

- 1) Press in the new upper and lower inner races with the special tools.

#### Special tool

(A): 09941-34513


(B): 09913-70210

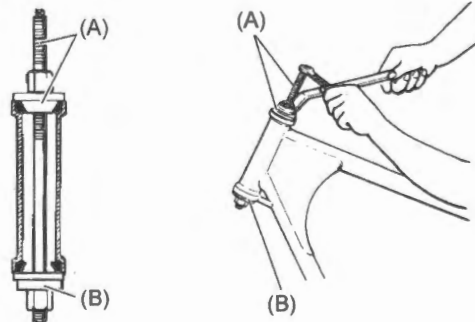

IH28K1620041-01

- 2) Apply a small quantity of grease to the lip of new lower seal (1) and install the lower seal.

**"A": Grease 99000-25011 (SUZUKI SUPER GREASE A)**

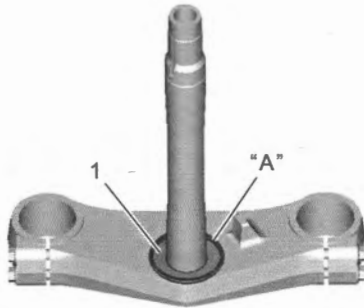


IH28K1620042-01

- 3) Press in the new steering stem lower bearing outer race with the special tool.

**Special tool**

**(A): 09925-18011**

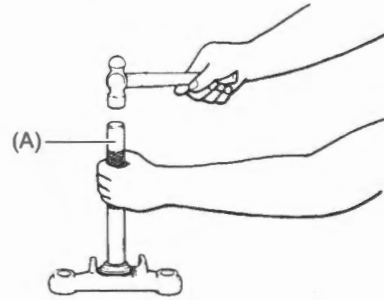

IH18K1620047-01

- 4) Install the steering stem lower bracket to the frame.  
☞ (Page 6B-10)

## Specifications

### Tightening Torque Specifications

BENH28K26207001

Fastening part	Tightening torque			Note
	N-m	kgf-m	lbf-ft	
Handlebar clamp bolt	23	2.3	17.0	☞ (Page 6B-4)
Handlebar balancer screw	5.5	0.56	4.05	☞ (Page 6B-4) / ☞ (Page 6B-5)
Steering stem lock-nut	80	8.2	59.0	☞ (Page 6B-7) / ☞ (Page 6B-12)
Steering stem head nut	90	9.2	66.5	☞ (Page 6B-7) / ☞ (Page 6B-9) / ☞ (Page 6B-12)
Front fork upper clamp bolt	23	2.3	17.0	☞ (Page 6B-7) / ☞ (Page 6B-9)
Steering stem nut	45 N-m (4.6 kgf-m, 33.5 lbf-ft) → turn counterclockwise 1/4 – 1/2			☞ (Page 6B-11)

### Reference:

For the tightening torques of fasteners not specified in this page, refer to:

"Handlebar Components" (Page 6B-1)

"Handlebar Construction" (Page 6B-2)

"Steering Stem Components" (Page 6B-6)

"Fasteners Information" in Section 0C (Page 0C-11)

## Special Tools and Equipment

### Recommended Service Material

BENH28K26208001

Material	SUZUKI recommended product or Specification		Note
Adhesive	Handle grip glue	—	☞ (Page 6B-4)
Grease	SUZUKI SUPER GREASE A	P/No.: 99000-25011	☞ (Page 6B-11) / ☞ (Page 6B-14)
	SUZUKI WATER RESISTANT GREASE EP2	P/No.: 99000-25350	☞ (Page 6B-4)

### NOTE

Required service material(s) is also described in:




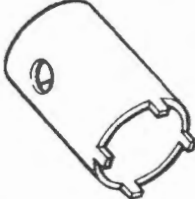


“Handlebar Components” (Page 6B-1)

“Handlebar Construction” (Page 6B-2)

“Steering Stem Components” (Page 6B-6)

### Special Tool

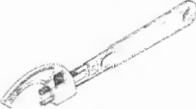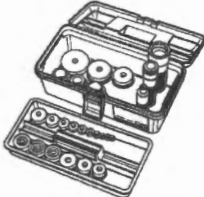BENH28K26208002

09910-60620 Adjustable wrench ☞ (Page 6B-7) 	09913-70210 Bearing installer set ☞ (Page 6B-13) 
09925-18011 Bearing installer ☞ (Page 6B-14) 	09940-14911 Steering stem nut socket ☞ (Page 6B-10) / ☞ (Page 6B-11) / ☞ (Page 6B-12) 
09940-14960 Steering stem nut socket wrench ☞ (Page 6B-10) / ☞ (Page 6B-11) / ☞ (Page 6B-12) 	09941-34513 Bearing installer set ☞ (Page 6B-13) 

## Section 9

## Body and Accessories

## CONTENTS

<b>Precautions</b> .....	<b>9-1</b>	Front Side Reflex Reflector Construction (If Equipped).....	9B-11
<b>Precautions</b> .....	<b>9-1</b>	Front Side Reflex Reflector Removal and Installation (If Equipped) .....	9B-11
Precautions for Electrical System .....	9-1	Rear Reflex Reflector Construction.....	9B-12
<b>Component Location</b> .....	<b>9-1</b>	Rear Reflex Reflector Removal and Installation .....	9B-12
Electrical Components Location .....	9-1	Rear Side Reflex Reflector Removal and Installation (If Equipped) .....	9B-12
<b>Wiring Systems</b> .....	<b>9A-1</b>	Front Turn Signal Light Construction .....	9B-13
<b>General Description</b> .....	<b>9A-1</b>	Turn Signal Light Components.....	9B-14
Abbreviations .....	9A-1	Front Turn Signal Light Removal and Installation .....	9B-14
Wire / Connector Color Symbols.....	9A-1	Rear Turn Signal Light Removal and Installation .....	9B-15
How to Read Terminal Nos.....	9A-1	Turn Signal Light Bulb Replacement.....	9B-15
Glossary .....	9A-2	Turn Signal Relay Inspection .....	9B-16
<b>Schematic and Routing Diagram</b> .....	<b>9A-4</b>	Turn Signal Relay Removal and Installation .....	9B-16
Wiring Diagram .....	9A-5	Turn Signal Switch Inspection.....	9B-16
Wiring Harness Routing Diagram.....	9A-7	Hazard Switch Inspection (If Equipped).....	9B-16
<b>Component Location</b> .....	<b>9A-16</b>	Dimmer / Passing Light Switch Inspection .....	9B-17
Electrical Components Location .....	9A-16	<b>Specifications</b> .....	<b>9B-17</b>
<b>Specifications</b> .....	<b>9A-16</b>	Tightening Torque Specifications.....	9B-17
Tightening Torque Specifications.....	9A-16	<b>Combination Meter / Fuel Meter / Horn..</b>	<b>9C-1</b>
<b>Lighting Systems</b> .....	<b>9B-1</b>	<b>General Description</b> .....	<b>9C-1</b>
<b>Precautions</b> .....	<b>9B-1</b>	Combination Meter System Description.....	9C-1
Precautions for Lighting Systems .....	9B-1	<b>Diagnostic Information and Procedures</b> .....	<b>9C-2</b>
<b>Diagnostic Information and Procedures</b> .....	<b>9B-1</b>	Combination Meter Symptom Diagnosis.....	9C-2
Headlight Symptom Diagnosis.....	9B-1	Horn Symptom Diagnosis .....	9C-2
Turn Signal Light and Hazard Light (If Equipped) Symptom Diagnosis.....	9B-1	<b>Repair Instructions</b> .....	<b>9C-3</b>
Rear Combination Light Symptom Diagnosis .....	9B-2	Combination Meter Construction.....	9C-3
<b>Repair Instructions</b> .....	<b>9B-2</b>	Combination Meter Components .....	9C-4
Headlight Construction.....	9B-2	Combination Meter On-Vehicle Inspection.....	9C-4
Headlight / Position Light Components .....	9B-3	Combination Meter Removal and Installation .....	9C-4
Headlight Removal and Installation .....	9B-4	Combination Meter Disassembly and Reassembly .....	9C-6
Position Light Removal and Installation .....	9B-4	TC Indicator Light / TC Mode Indicator Inspection.....	9C-6
Headlight Bulb / Position Light Bulb Replacement.....	9B-4	Engine Coolant Temperature Indicator / Engine Coolant Temperature Indicator Light Inspection.....	9C-6
Headlight Beam Adjustment .....	9B-6	ECT Sensor Removal and Installation .....	9C-8
Rear Lighting System Construction.....	9B-7	Fuel Level Indicator Inspection .....	9C-8
Rear Combination Light Removal and Installation .....	9B-8	Fuel Level Gauge Inspection .....	9C-9
Rear Combination Light LED Replacement .....	9B-8		
License Plate Light Components .....	9B-9		
License Plate Light Removal and Installation .....	9B-10		
License Plate Light Bulb Replacement .....	9B-10		

Speedometer On-Vehicle Inspection .....	9C-9	Seat Lock Cable / Seat Lock Assembly	
Speed Sensor Removal and Installation .....	9C-9	Removal and Installation .....	9D-20
Speed Sensor Rotor Removal and Installation ....	9C-9	Sport Carrier Removal and Installation .....	9D-20
Speed Sensor and Sensor Rotor Inspection .....	9C-9	Rear Frame Cover / Frame Cover Removal	
Oil Pressure Indicator / Oil Pressure Indicator		and Installation .....	9D-21
Light Inspection .....	9C-9	Battery Holder Removal and Installation .....	9D-22
Freeze Indicator Light / Ambient Air		Rear Fender (Rear) Removal and Installation ..	9D-23
Temperature Indicator Inspection .....	9C-9	Rear Fender (Front) Removal and Installation ..	9D-23
Ambient Air Temperature Sensor Removal		Front Side Cover Removal and Installation .....	9D-24
and Installation .....	9C-10	Fuel Tank Front Cover Removal and	
Ambient Air Temperature Sensor Inspection ....	9C-10	Installation .....	9D-25
Horn Inspection .....	9C-11	Side Cowling / Side Cowling Inner Cover	
Horn Removal and Installation .....	9C-11	Removal and Installation .....	9D-25
<b>Exterior Parts .....</b>	<b>9D-1</b>	Windscreen Removal and Installation .....	9D-26
<b>Schematic and Routing Diagram .....</b>	<b>9D-1</b>	Body Cowling Assembly Removal and	
Seat Lock Cable Routing Diagram .....	9D-1	Installation .....	9D-27
<b>Repair Instructions .....</b>	<b>9D-2</b>	Body Cowling Disassembly and Reassembly ...	9D-27
Body Cowling Construction .....	9D-2	Front Fender Removal and Installation .....	9D-28
Frame Cover / Rear Fender (Rear)		Knuckle Cover Removal and Installation .....	9D-29
Construction .....	9D-4	Center Under Cowling / Side Under Cowling	
Rear Fender (Front) / Battery Holder		Removal and Installation (If Equipped) .....	9D-30
Construction .....	9D-5	<b>Specifications .....</b>	<b>9D-31</b>
Front Fender Construction .....	9D-6	Tightening Torque Specifications .....	9D-31
Knuckle Cover Construction (If Equipped) .....	9D-7	<b>Special Tools and Equipment .....</b>	<b>9D-31</b>
Under Cowling Construction (If Equipped) .....	9D-8	Recommended Service Material .....	9D-31
Fuel Tank Cushion Construction .....	9D-9	<b>Body Structure .....</b>	<b>9E-1</b>
Fuel Tank Front Cover Cushion Construction ...	9D-10	<b>Repair Instructions .....</b>	<b>9E-1</b>
Lower Body Cowling Cushion Construction ....	9D-11	Body Frame Construction .....	9E-1
Side Cowling Cushion Construction .....	9D-12	Front Footrest Construction .....	9E-2
Frame Cover Cushion Construction .....	9D-13	Front Footrest Removal and Installation .....	9E-3
Rear Fender (Front) Cushion Construction .....	9D-14	Pillion Footrest Construction .....	9E-3
Rear Fender (Rear) Cushion Construction .....	9D-15	Pillion Footrest Removal and Installation .....	9E-4
Center Under Cowling Cushion Construction		Side-stand Construction .....	9E-4
(If Equipped) .....	9D-16	Side-stand Removal and Installation .....	9E-4
Meter Panel Cushion Construction .....	9D-16	<b>Specifications .....</b>	<b>9E-5</b>
Battery Holder Cushion Construction .....	9D-17	Tightening Torque Specifications .....	9E-5
Windscreen Cushion Construction .....	9D-18	<b>Special Tools and Equipment .....</b>	<b>9E-5</b>
Clip Removal and Installation .....	9D-18	Recommended Service Material .....	9E-5
Seat Removal and Installation .....	9D-19	Special Tool .....	9E-5

# Precautions

## Precautions

### Precautions for Electrical System

BENH28K29000001

Refer to "General Precautions" in Section 00 (Page 00-1), "Precautions for Electrical Circuit Service" in Section 00 (Page 00-2) and "Precautions for Circuit Tester" in Section 00 (Page 00-7).

## Component Location

### Electrical Components Location

BENH28K29003001

Refer to "Electrical Components Location" in Section 0A (Page 0A-8).

# Wiring Systems

## General Description

### Abbreviations

BENH28K29101001

Refer to the "Abbreviations" in Section 0A (Page 0A-1) for the general abbreviations.

### Wire / Connector Color Symbols

BENH28K29101002

Refer to "Wire Color Symbols" in Section 0A (Page 0A-4).


### How to Read Terminal Nos.

BENH28K29101003

The connector shape and terminal layout shown in this manual are those when viewed from "Z" in the illustration.

#### NOTE

- Molded terminal numbers that are different from the above can be found on some connectors in rare cases.
- These molded numbers are not applied in this manual.

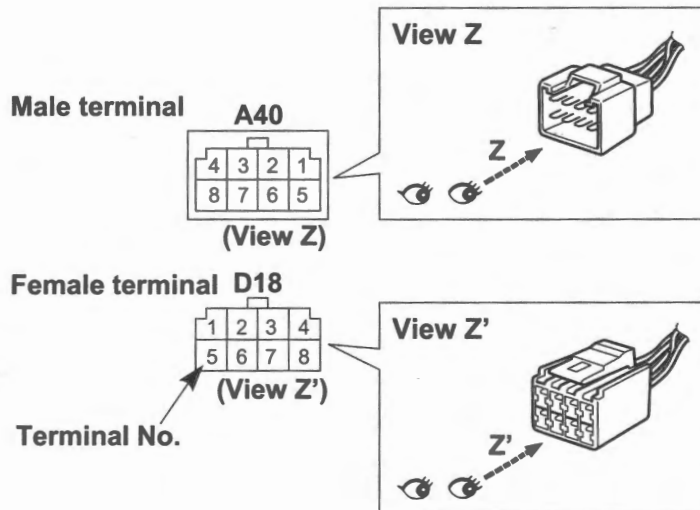

IE31J1910901-02



## Glossary

BENH28K29101004

English	
ABS CONTROL UNIT	
ABS MOTOR	
ABS VALVE	
AP SENSOR	
AMBIENT AIR TEMP SENSOR	
BATTERY	
BRAKE LIGHT SWITCH	
CARBURETOR SWITCH	
CDI UNIT	
CKP SENSOR	
CLUTCH LEVER POSITION SWITCH	
CLUTCH SWITCH	
COMBINATION METER	
COOLING FAN MOTOR	
DIMMER SWITCH	
DIMMER/PASSING LIGHT SWITCH	
ECM	
ECT SENSOR	
ENGINE STOP SWITCH	
ET SENSOR	
EVAP SYSTEM PURGE CONTROL SOLENOID VALVE	
EXCV ACTUATOR	
FAN	
FAN RELAY	
FI INDICATOR LIGHT	
FRONT BRAKE LIGHT SWITCH	
FRONT TURN SIGNAL LIGHT	
FRONT WHEEL SPEED SENSOR	
FUEL	
FUEL INJECTOR	
FUEL LEVEL GAUGE	
FUEL METER	
FUEL PUMP	
FUEL PUMP RELAY	
FUSE BOX	
GENERATOR	
GP SWITCH	
HANDLE SWITCH	
HAZARD SWITCH	
HEADLIGHT	
HI BEAM INDICATOR LIGHT	
HIGH BEAM INDICATOR LIGHT	
HO2 SENSOR	
HORN	
HORN SWITCH	
IAP SENSOR	
IAP/TP SENSOR	
IAP/TP/IAT SENSOR	
IAT SENSOR	
IF EQUIPPED	
IGNITER	
IGNITION	
IGNITION COIL	
IGNITION SWITCH	
ILLUMINATION LIGHT	
IMMOBILIZER ANTENNA	
INSTRUMENT PANEL LIGHT	

**9A-3 Wiring Systems:**


English	
ISC VALVE	
LICENSE PLATE LIGHT	
LIGHTING SWITCH	
LIGHT/HORN RELAY	
LOW BEAM RELAY	
MAIN FUSE	
MALFUNCTION INDICATOR LAMP	
MODE SELECT COUPLER	
MODE SWITCH	
NEUTRAL INDICATOR LIGHT	
NEUTRAL SWITCH	
O2 SENSOR	
OIL PRESSURE SWITCH	
OPTION	
PASSING LIGHT SWITCH	
PASSING RELAY	
PAIR CONTROL SOLENOID VALVE	
POSITION LIGHT	
POWER SOURCE	
REAR BRAKE LIGHT SWITCH	
REAR COMBINATION LIGHT	
REAR TURN SIGNAL LIGHT	
REAR WHEEL SPEED SENSOR	
REGULATOR/RECTIFIER	
SELECT SWITCH	
SIDE-STAND DIODE	
SIDE-STAND RELAY	
SIDE-STAND SWITCH	
SIGNAL	
SPEED SENSOR	
SPEEDOMETER	
SPEEDOMETER LIGHT	
STARTER SWITCH	
STARTER MOTOR	
STARTER RELAY	
STV ACTUATOR	
SUB FUSE	
TO SENSOR	
TP SENSOR	
TRACTION CONTROL SYSTEM SWITCH	
TURN SIGNAL INDICATOR LIGHT	
TURN SIGNAL RELAY	
TURN SIGNAL SWITCH	


---

# Schematic and Routing Diagram


Wiring Diagram

BENH28K29102001

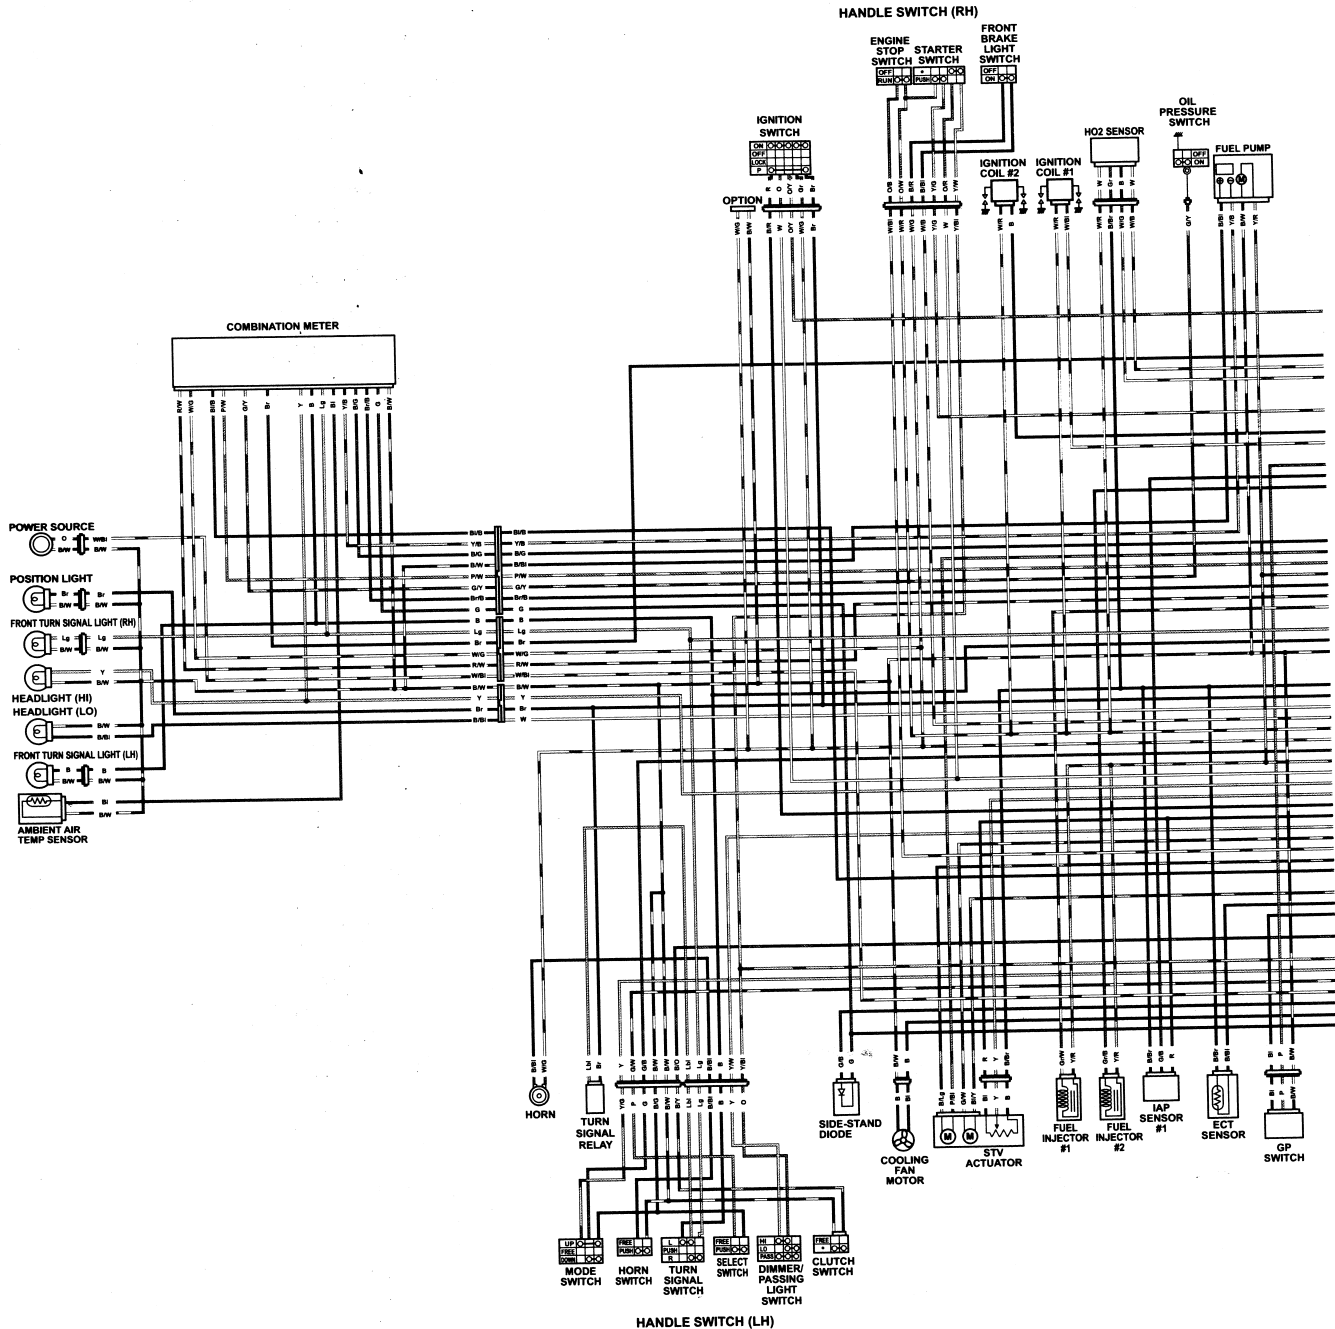


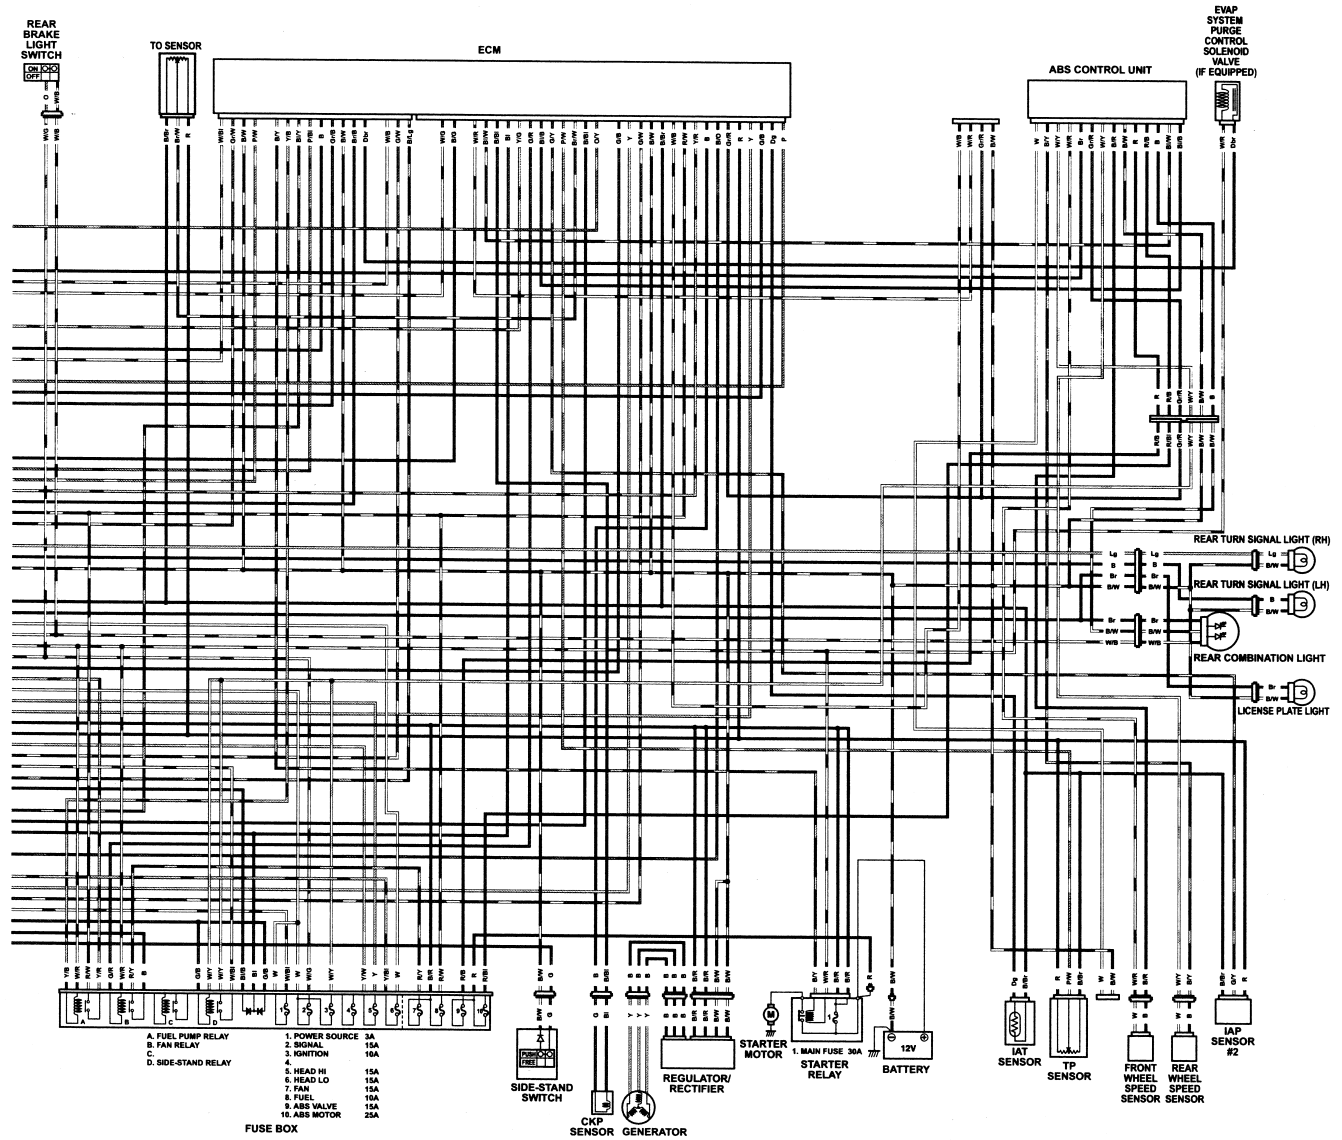

Wiring Harness Routing Diagram








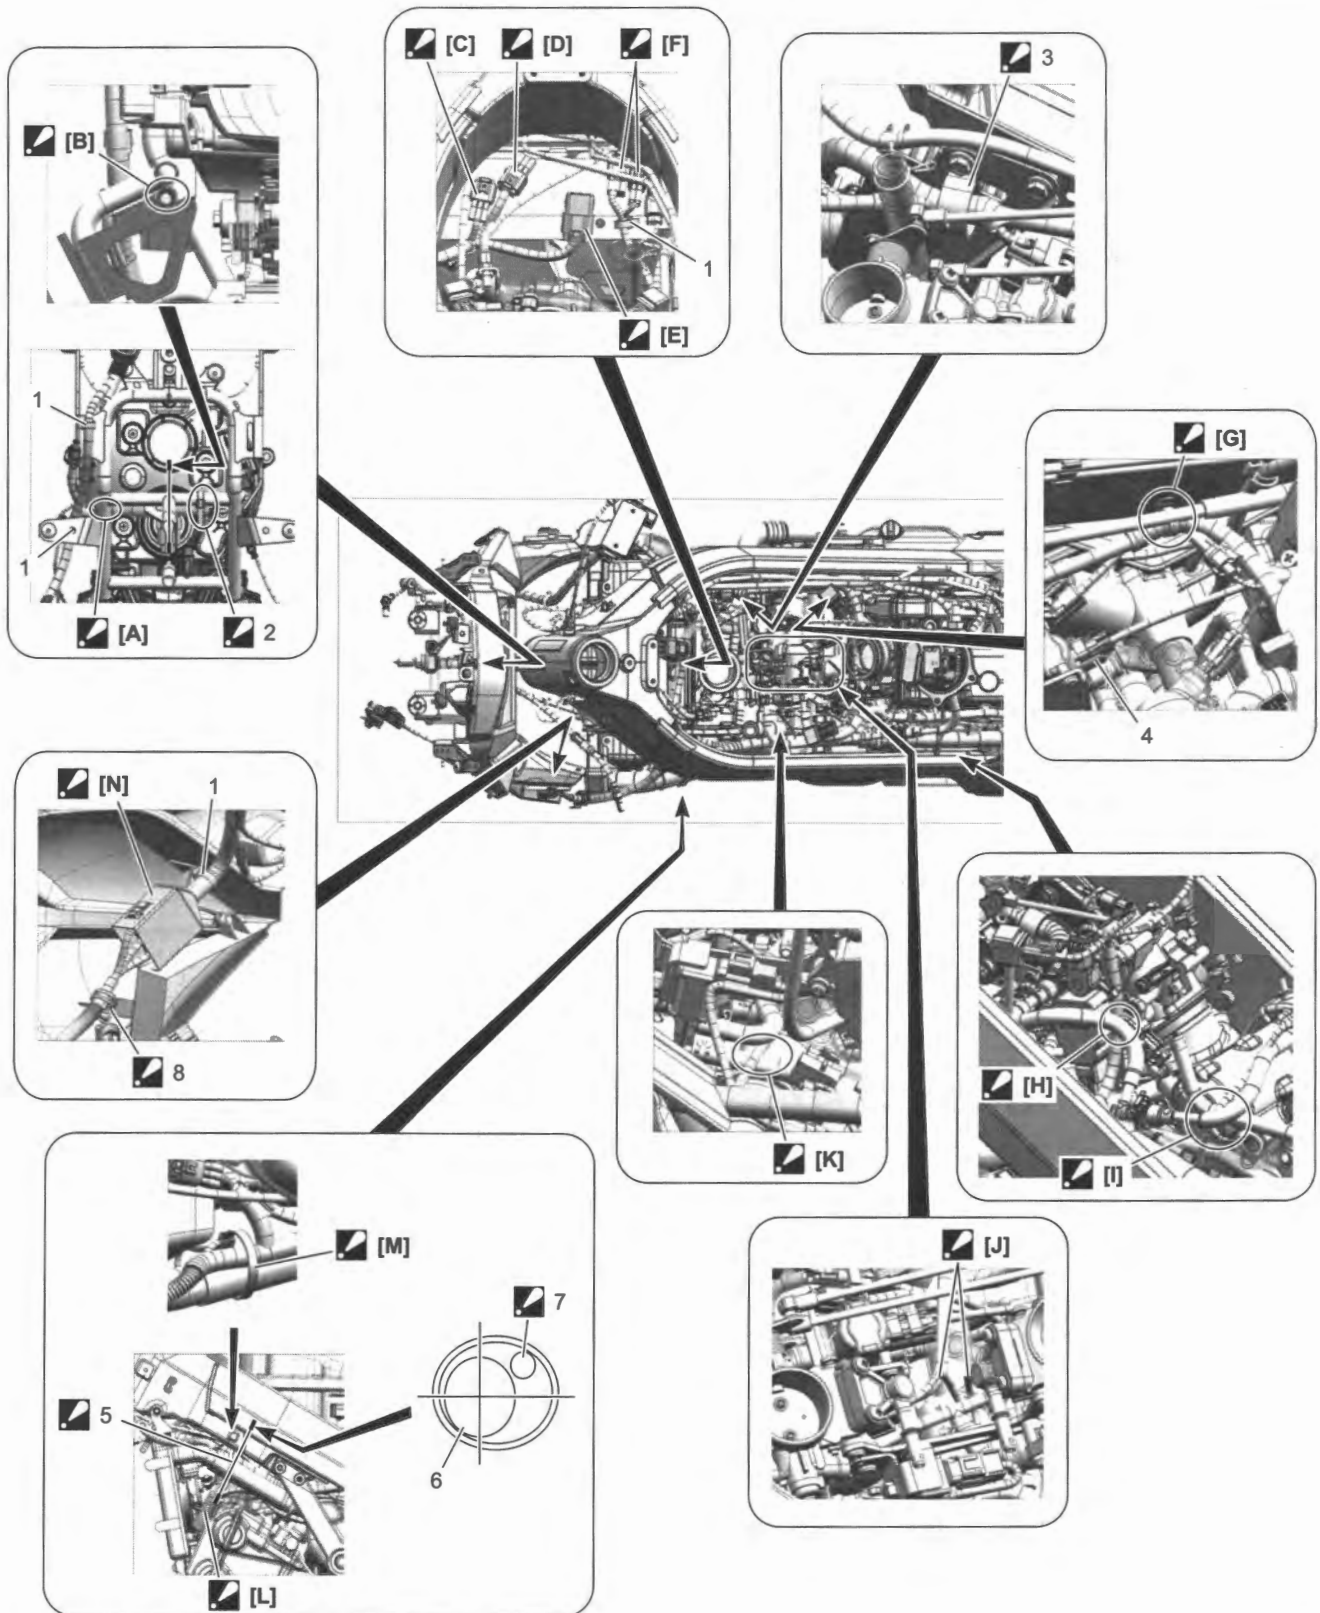


<p>☑ [A]: Pass the wiring harness between the headlight and cowling brace.</p>	<p>☑ [I]: Pass the fuel pump lead wire under the fuel hose and above the canister hose (if equipped).</p>	<p>☑ 3. Wiring harness clamp : Clamp the wiring harness (at white tape) and regulator/rectifier lead wire.</p>
<p>☑ [B]: Fit the wiring harness (corrugate tube) between the reinforcement and tube of the cowling brace.</p>	<p>☑ [J]: Pass the injector lead wire under the injector bracket and right side of the canister hose (if equipped). : Connect the coupler with tag "F" to cylinder #1 and the other one with tag "R" to cylinder #2.</p>	<p>4. PAIR control solenoid valve coupler (if equipped)</p>
<p>☑ [C]: Fix the left handle switch male coupler of the wiring harness to a left side hole.</p>	<p>☑ [K]: Pass the injector lead wire above the canister hose (if equipped).</p>	<p>☑ 5. Wiring harness clamp : Clamp the wiring harness and water hose under the frame welding.</p>
<p>☑ [D]: Fix the coupler after connecting it to left handle switch lead wire coupler.</p>	<p>☑ [L]: Pass the horn lead wire through inside of the water hose.</p>	<p>6. Water hose</p>
<p>☑ [E]: Fix the right handle switch coupler to a center hole.</p>	<p>☑ [M]: Clamp the wiring harness to the water hose beside the branch to the handle switch lead wire.</p>	<p>☑ 7. Wiring harness : Position the wiring harness within the range of 90°.</p>
<p>☑ [F]: Position the ignition switch lead wire coupler and front wheel speed sensor lead wire coupler under the brake pipes.</p>	<p>☑ [N]: After connecting the coupler, cover it with boot in lengthwise position.</p>	<p>☑ 8. Wiring harness clamp : Clamp the wiring harness at the tape of the corrugate tube end. : Bend the clamp from inside in upright position to outside counterclockwise.</p>
<p>☑ [G]: Fix the plug-in clamp to a lower hole at the front side in 3 holes. : Pass the reservoir tank overflow hose above the wiring harness.</p>	<p>1. Plug-in clamp</p>	
<p>☑ [H]: Pass the IAP sensor lead wire under the fuel hose.</p>	<p>☑ 2. Wiring harness clamp : Position the harness under the cowling brace and clamp it at end of the corrugate tube.</p>	



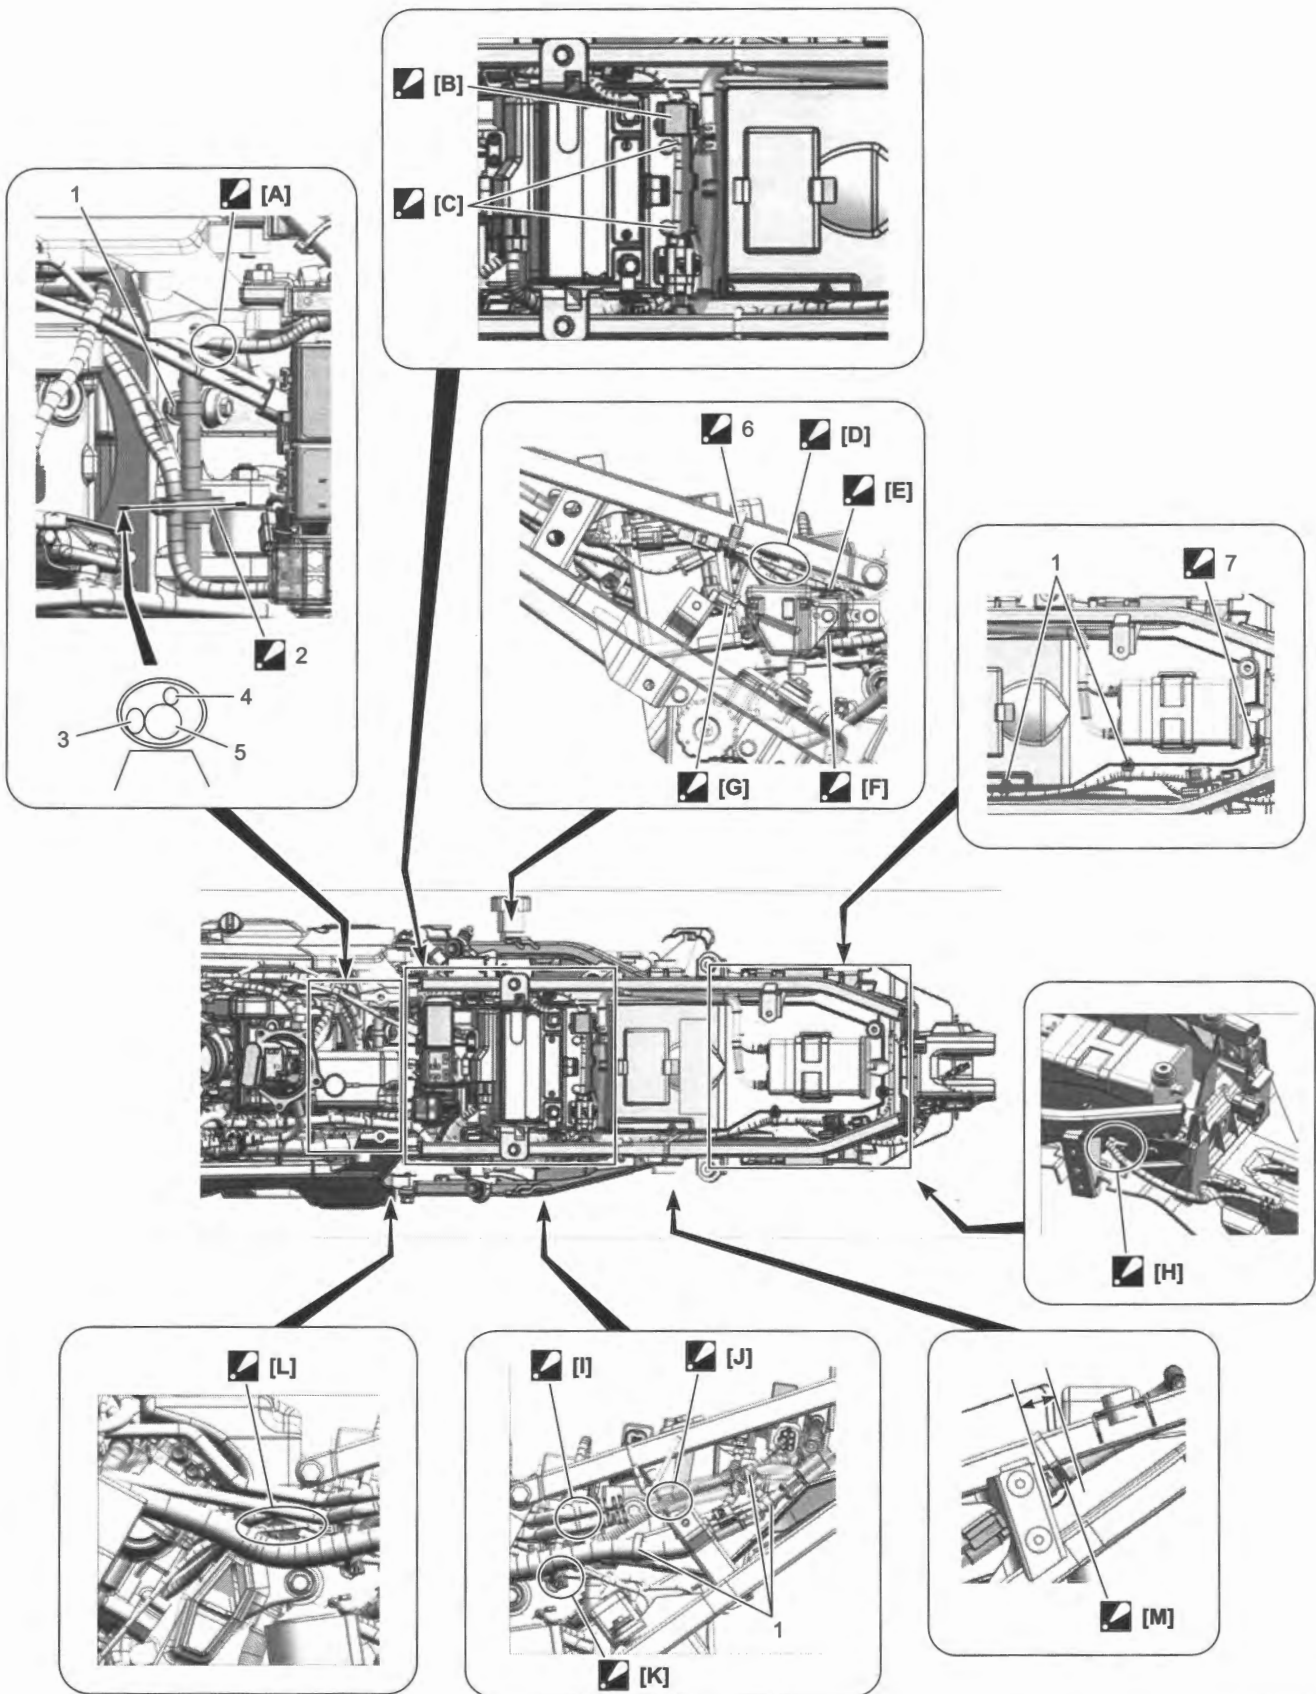




<p>☑ [A]: Pass the wiring harness behind the brake hose.</p>	<p>☑ [H]: Pass the rear turn signal lead wire between the rear fender and frame.</p>	<p>☑ 2. Wiring harness clamp : Clamp the wiring harness, rear wheel speed sensor lead wire, starter motor lead wire and reservoir tank overflow hose at the white tape.</p>
<p>☑ [B]: Install the turn signal relay to the rib on the vehicle right side.</p>	<p>☑ [I]: Pass the starter relay lead wire and ECM lead wire behind the canister hoses (if equipped).</p>	<p>3. Starter motor lead wire</p>
<p>☑ [C]: Pass the wiring harness under the TO sensor and turn signal relay.</p>	<p>☑ [J]: Pass the battery (+) lead wire between the ECM lead wire and canister hose (if equipped).</p>	<p>4. Rear wheel speed sensor lead wire</p>
<p>☑ [D]: Pass the battery (-) lead wire and wiring harness under the frame and battery holder fitting. Put the battery (-) lead wire on the wiring harness.</p>	<p>☑ [K]: Pass the battery (+) lead wire under the fuse box lead wire.</p>	<p>5. Wiring harness</p>
<p>☑ [E]: Fix the battery (-) lead wire with the plug-in clamp.</p>	<p>☑ [L]: Pass the side-stand switch lead wire between the frame and wiring harness.</p>	<p>☑ 6. Clamp : Clamp the wiring harness, HO2 sensor lead wire, rear brake light switch lead wire and battery (-) lead wire to the frame in front of the battery holder fitting.</p>
<p>☑ [F]: Fix the wiring harness with the plug-in clamp.</p>	<p>☑ [M]: Clamp the wiring harness between the seat rail bridge and side case bracket.</p>	<p>☑ 7. Plug-in clamp : Clamp the harness so that the rear combination light coupler is positioned to the right.</p>
<p>☑ [G]: Connect the HO2 sensor lead wire coupler behind the master cylinder reservoir.</p>	<p>1. Plug-in clamp</p>	

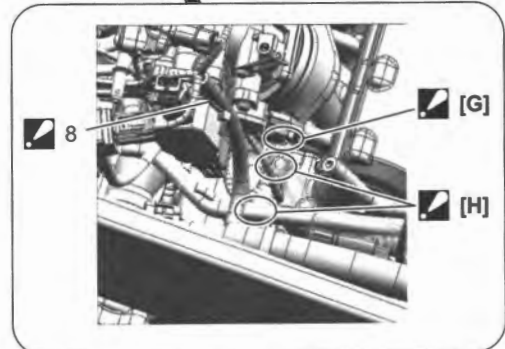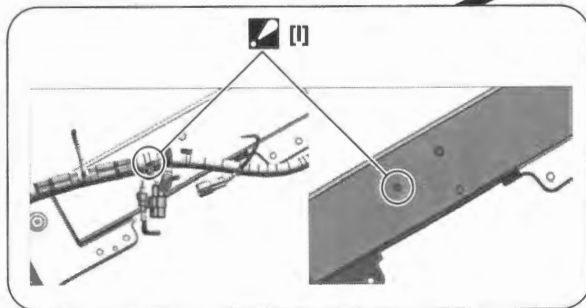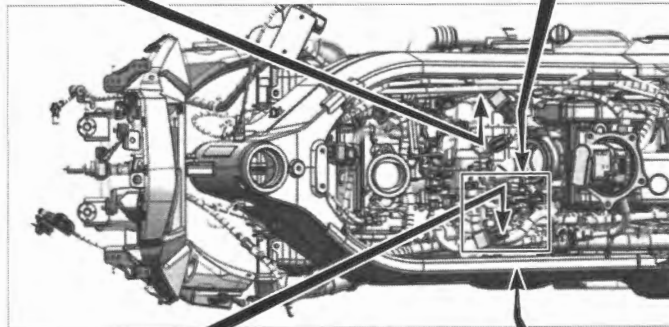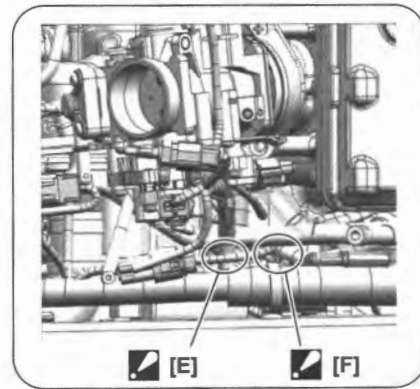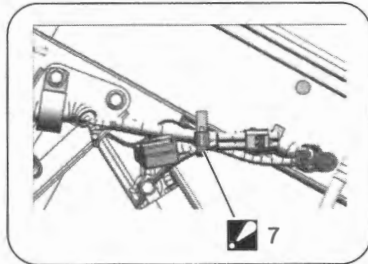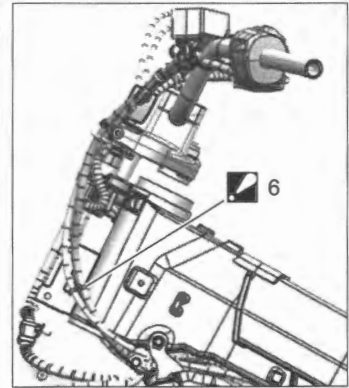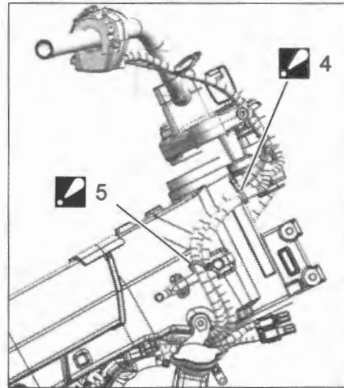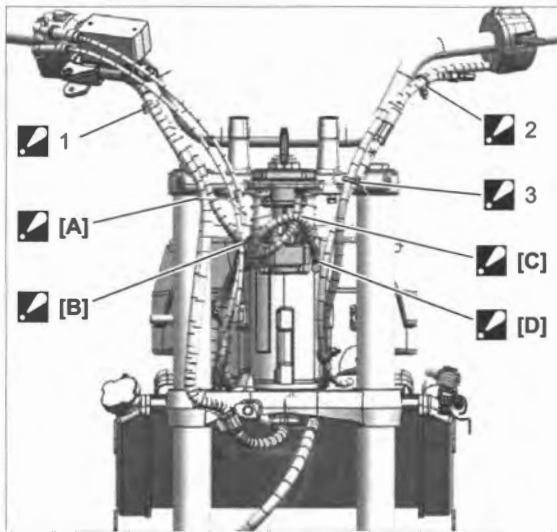


<p>☑ [A]: Pass the right handle switch lead wire through the guide.</p>	<p>☑ [G]: Pass the wiring harness branch wire under the intake pipe.</p>	<p>☑ 4. Clamp : Clamp the right handle switch lead wire, ignition switch lead wire and immobilizer antenna lead wire at the gray tape (if equipped).</p>
<p>☑ [B]: Pass the right handle switch lead wire through the front and inside of the throttle cables.</p>	<p>☑ [H]: Pass the wiring harness branch wire under the canister hose and PAIR hose (if equipped).</p>	<p>☑ 5. Clamp : Clamp the right handle switch lead wire, ignition switch lead wire and immobilizer antenna lead wire not to give them looseness when turning the handlebars to the left (if equipped).</p>
<p>☑ [C]: Pass the ignition switch lead wire in front of the immobilizer antenna lead wire (if equipped).</p>	<p>☑ [I]: Install the wiring harness clamp into a hole at rear of the frame.</p>	<p>☑ 6. Clamp : Clamp the left handle switch lead wire and clutch cable facing lock of the clamp leftward.</p>
<p>☑ [D]: Do not twist the root portion of the ignition switch lead wire.</p>	<p>☑ 1. Clamp : Clamp the right handle switch lead wire at the brake hose fitting part.</p>	<p>☑ 7. Wiring harness clamp : Clamp the wiring harness and ignition coil lead wire facing the clamp end upward.</p>
<p>☑ [E]: Pass the gear position switch lead wire above the branch wire of the wiring harness.</p>	<p>☑ 2. Clamp : Clamp the left handle switch lead wire and clutch cable facing lock of the clamp downward.</p>	<p>☑ 8. Wiring harness clamp : Clamp the wiring harness to the sensor fitting part at the green tape before the branch.</p>
<p>☑ [F]: Pass the generator lead wire through outside of the canister hose, PAIR hose and fuel hose, and inside of the wiring harness (if equipped).</p>	<p>☑ 3. Clamp : Clamp the left handle switch lead wire and clutch cable at the guide and clutch cable protector.</p>	

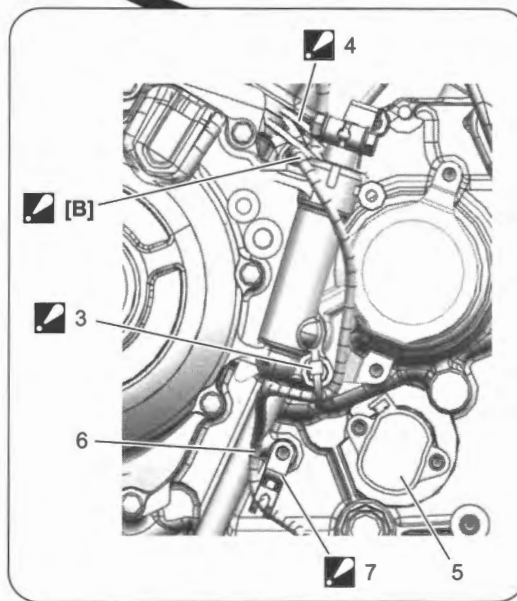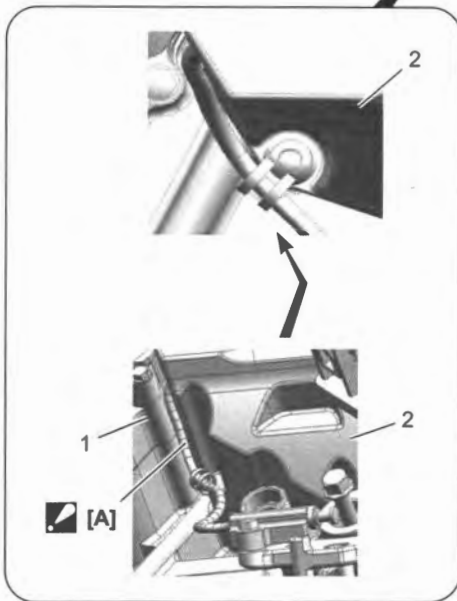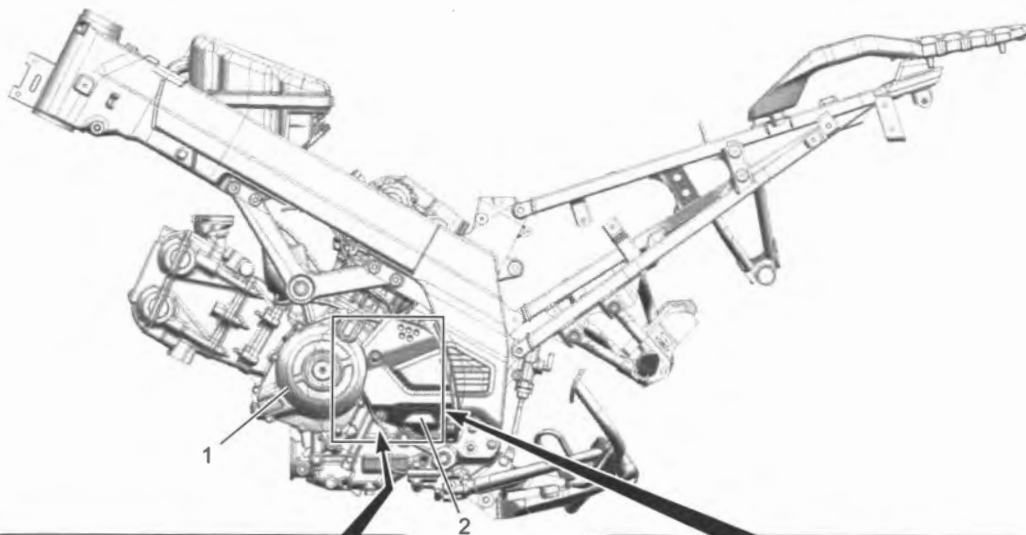


IH28K1910910-02

<p>☑ [A]: Pass the side-stand switch lead wire between the generator cover and engine sprocket cover.</p>	<p>2. Engine sprocket cover</p>	<p>5. Gear position switch</p>
<p>☑ [B]: Pass the side-stand switch lead wire in front of the clutch release.</p>	<p>☑ 3. Clamp : Clamp the side-stand switch lead wire and cut off excess tip of the clamp.</p>	<p>6. Side-stand switch lead wire</p>
<p>1. Generator cover</p>	<p>☑ 4. Clamp : Clamp the gear position switch lead wire, generator lead wire and side-stand switch lead wire.</p>	<p>☑ 7. Clamp : Set the clamp on the engine sprocket cover.</p>

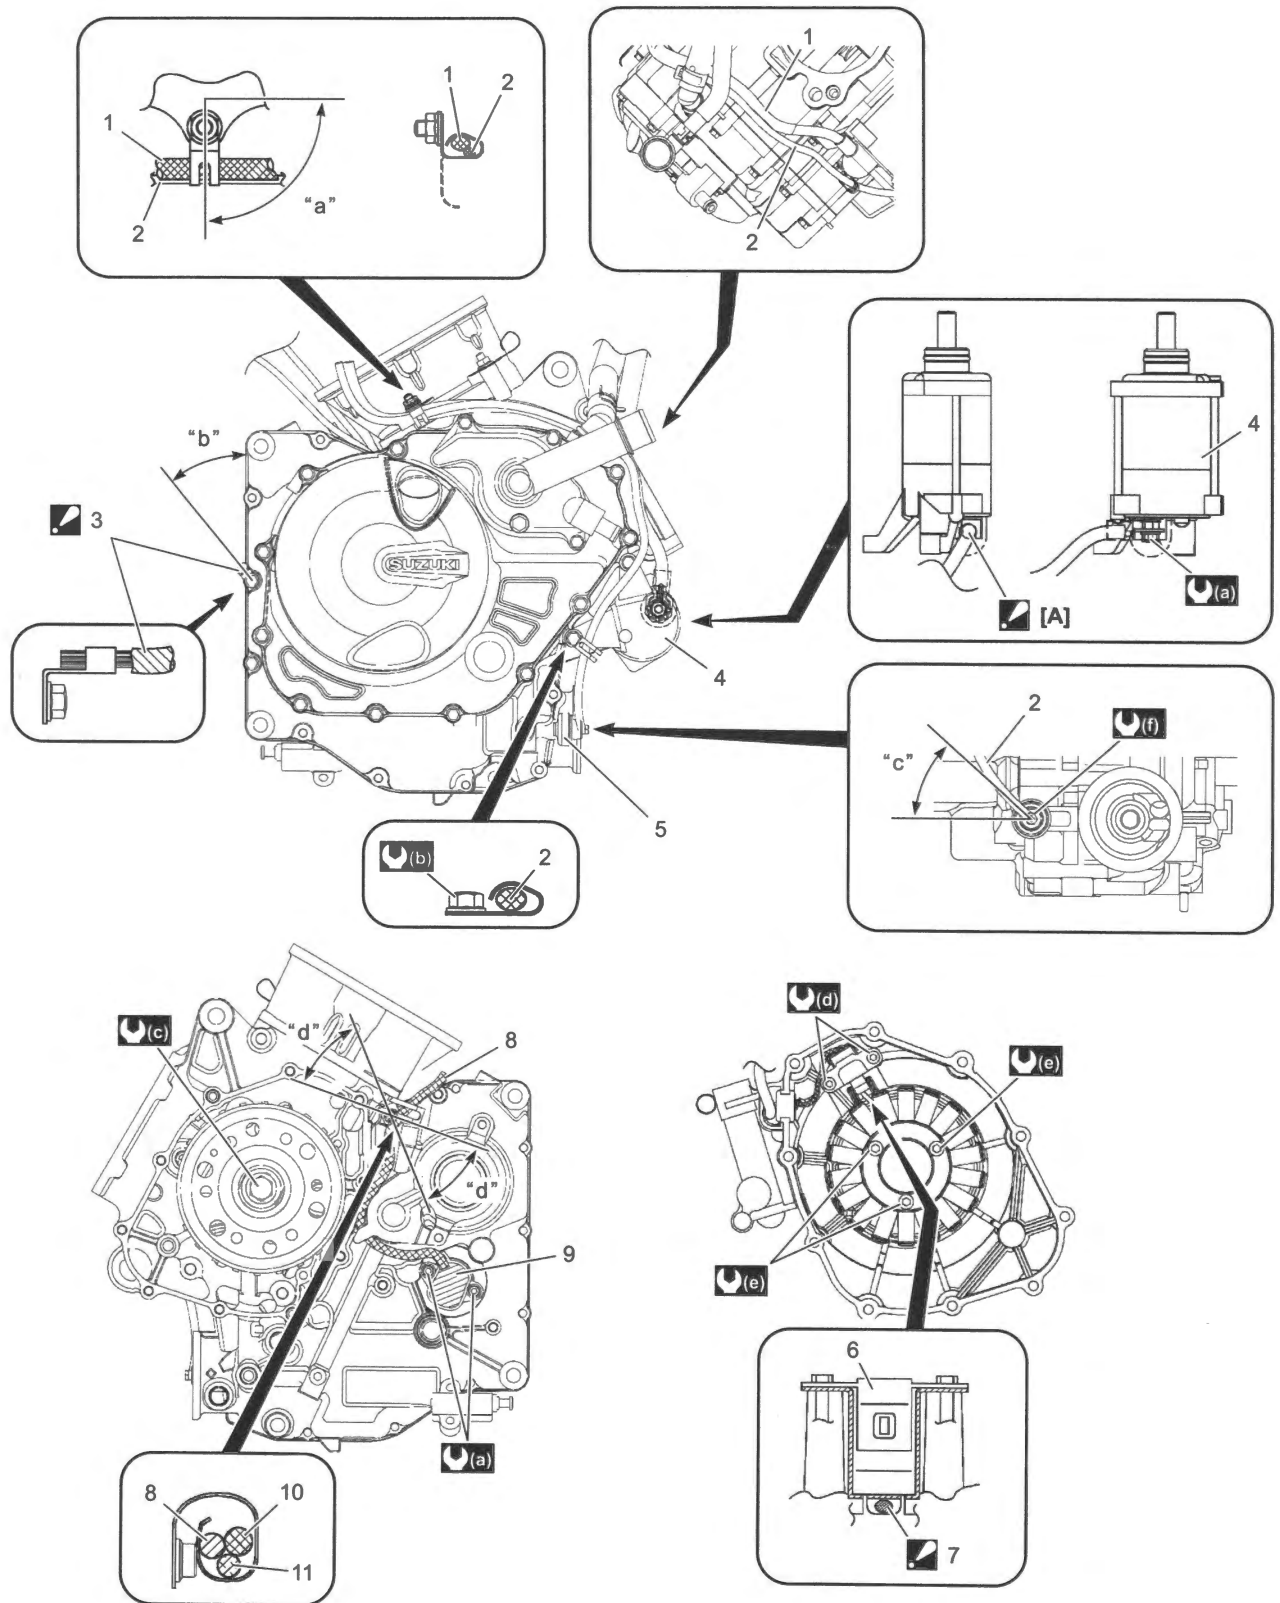

## 9A-15 Wiring Systems:

<p>☑ [A]: Install the starter motor lead wire to the terminal facing the crimped side outward and put the cap.</p> <p>1. Starter motor lead wire</p> <p>2. Oil pressure switch lead wire</p>	<p>8. Gear position switch lead wire</p> <p>9. Gear position switch</p> <p>10. Generator lead wire</p> <p>11. Side-stand switch lead wire</p>	<p>⤵(a) : 6.0 N-m (0.61 kgf-m, 4.45 lbf-ft)</p> <p>⤵(b) : 10 N-m (1.0 kgf-m, 7.5 lbf-ft)</p> <p>⤵(c) : 140 N-m (14.3 kgf-m, 103.5 lbf-ft)</p> <p>⤵(d) : 6.3 N-m (0.64 kgf-m, 4.65 lbf-ft)</p>
<p>☑ 3. Battery (-) lead wire : The crimped portion of the battery (-) lead wire must face upward, and the lead wire must not sit on the crankcase.</p> <p>4. Starter motor</p> <p>5. Oil pressure switch</p> <p>6. CKP sensor</p>	<p>"a": 70 – 110°</p> <p>"b": Max. 60°</p> <p>"c": 35 – 55°</p> <p>"d": 30 – 50°</p>	<p>⤵(e) : 11 N-m (1.1 kgf-m, 8.5 lbf-ft)</p> <p>⤵(f) : 13 N-m (1.3 kgf-m, 9.5 lbf-ft)</p>
<p>☑ 7. CKP sensor lead wire : Do not pinch the CKP sensor lead wire between the bosses and CKP sensor.</p>		

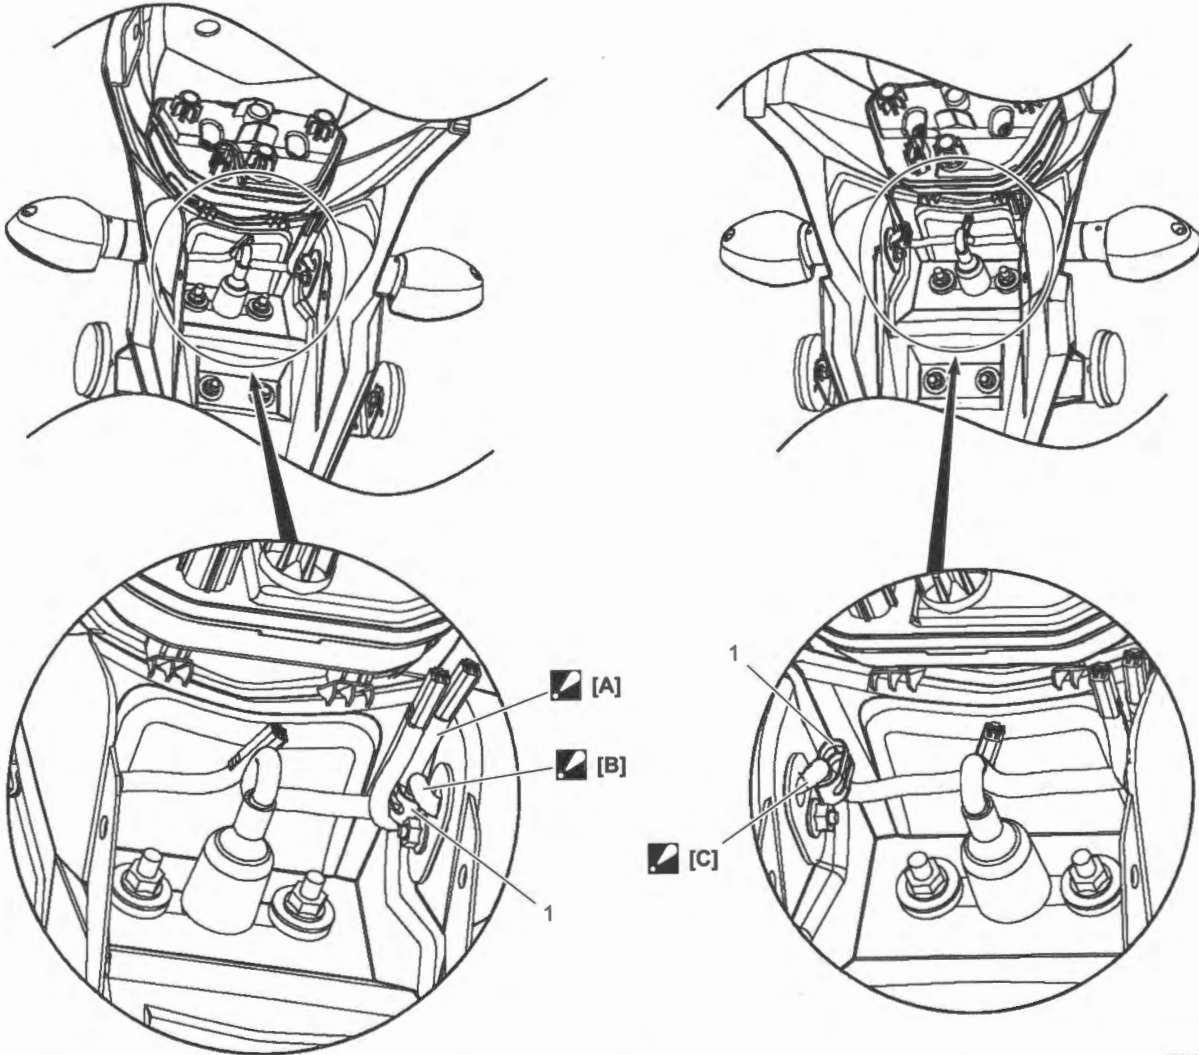

IH28K1910912-01

<p>☑ [A]: Pass the license plate light lead wire from the clamp rear side to the front.</p> <p>☑ [B]: Pass the left rear turn signal light lead wire from the clamp front side to the rear and return it to the front.</p>	<p>☑ [C]: Pass the right rear turn signal light lead wire from the clamp front side to the rear.</p> <p>1. Clamp</p>
--	--

## Component Location

### Electrical Components Location

Refer to "Electrical Components Location" in Section 0A (Page 0A-8).

BENH28K29103001

## Specifications

### Tightening Torque Specifications

#### Reference:

For the tightening torques of fasteners not specified in this page, refer to:

"Wiring Harness Routing Diagram" (Page 9A-7)

"Fasteners Information" in Section 0C (Page 0C-11)

BENH28K2910S001

# Lighting Systems

## Precautions

### Precautions for Lighting Systems

BENH28K2920001

#### NOTICE

- When you touch the bulb with your bare hands, clean the bulb with a cloth moistened with alcohol or soap water to prevent premature bulb failure.
- Do not use the bulb of a wattage other than specification.

## Diagnostic Information and Procedures

### Headlight Symptom Diagnosis

BENH28K29204001

Condition	Possible cause	Correction / Reference Item
<b>Low beam does not light up</b>	Circuit fuse blown.	Replace fuse and check short circuit.
	Bulb blown.	Replace bulb. ⌚(Page 9B-4)
	Faulty wiring or ground.	Repair wiring. ⌚(Page 9A-5)
	Faulty dimmer / passing light switch.	Check dimmer / passing light switch. ⌚(Page 9B-17)
<b>High beam does not light up</b>	Circuit fuse blown.	Replace fuse and check short circuit.
	Bulb blown.	Replace bulb. ⌚(Page 9B-4)
	Faulty wiring or ground.	Repair wiring. ⌚(Page 9A-5)
	Faulty dimmer / passing light switch.	Check dimmer / passing light switch. ⌚(Page 9B-17)

### Turn Signal Light and Hazard Light (If Equipped) Symptom Diagnosis

BENH28K29204002

Condition	Possible cause	Correction / Reference Item
<b>Flash rate high or one side only flashes</b>	Bulb blown.	Replace bulb. ⌚(Page 9B-15)
	Incorrect bulb.	Replace bulb. ⌚(Page 9B-15)
	Faulty turn signal relay.	Check turn signal relay. ⌚(Page 9B-16)
	Open circuit or high resistance existing either; between turn signal switch and non lighting bulb, or between hazard switch and non lighting bulb (if equipped).	Repair wiring. ⌚(Page 9A-5)
	Faulty hazard switch (if equipped).	Check hazard switch. ⌚(Page 9B-16)
<b>Flash rate low</b>	Supply voltage low or high resistance.	Check charging system. ⌚(Page 1J-4) Repair wiring. ⌚(Page 9A-5)
	Faulty turn signal relay.	Check turn signal relay. ⌚(Page 9B-16)



Rear Combination Light Symptom Diagnosis


BENH28K29204003

Condition	Possible cause	Correction / Reference Item
<b>All lights do not light up</b>	Faulty wiring or grounding.	Repair wiring. (Page 9A-5)
<b>Some lights do not light up</b>	Bulbs (LED) blown.	Replace rear combination light assembly and check short circuit. (Page 9B-8)
	Faulty wiring or grounding.	Repair wiring. (Page 9A-5)
<b>Brake light do not light up</b>	Faulty front brake light switch.	Check front brake light switch. (Page 4A-6)
	Faulty rear brake light switch.	Check rear brake light switch. (Page 4A-7)
	Faulty wiring or grounding.	Repair wiring. (Page 9A-5)
	Faulty rear combination light bulbs (LED).	Replace rear combination light assembly. (Page 9B-8)
<b>Brake light stay on</b>	Faulty front brake light switch.	Check front brake light switch. (Page 4A-6)
	Faulty rear brake light switch.	Check rear brake light switch. (Page 4A-7)
	Faulty rear combination light bulbs (LED).	Replace rear combination light assembly. (Page 9B-8)

Repair Instructions

Headlight Construction

BENH28K29206001

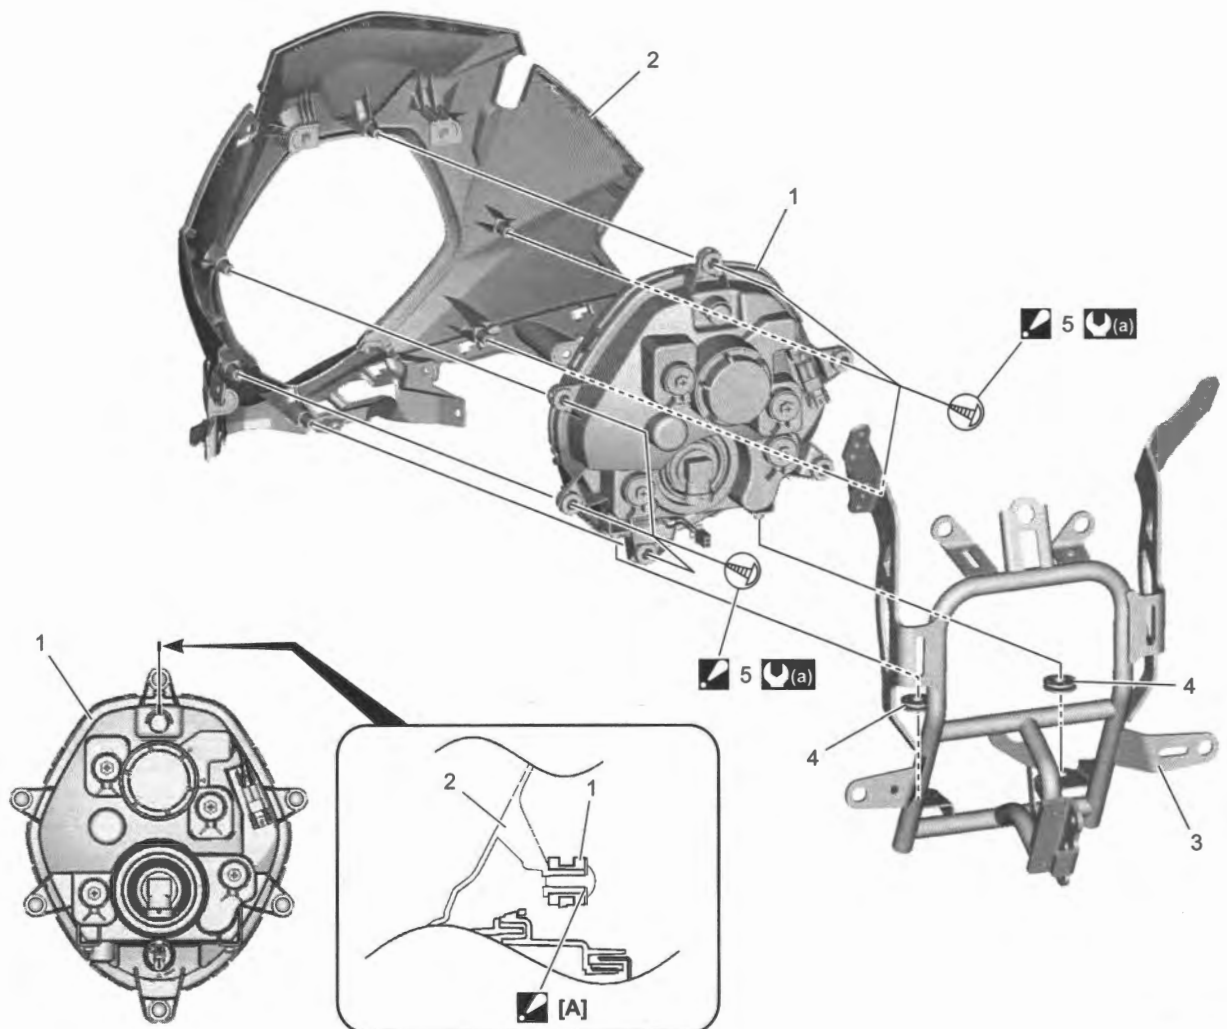


## 9B-3 Lighting Systems:

<p>☑ [A]: Fit the headlight into the cowling body fully without making clearance at the mounting points</p> <p>1. Headlight assembly</p>	<p>4. Cushion</p> <p>☑ 5. Headlight screw : Fit the headlight into the cowling body fully and tighten the screws to the specified torque.</p>
<p>2. Body cowling</p>	<p>🔩(a) : 2.0 N-m (0.20 kgf-m, 1.50 lbf-ft)</p>
<p>3. Cowling brace</p>	

### Headlight / Position Light Components

BENH28K29206002

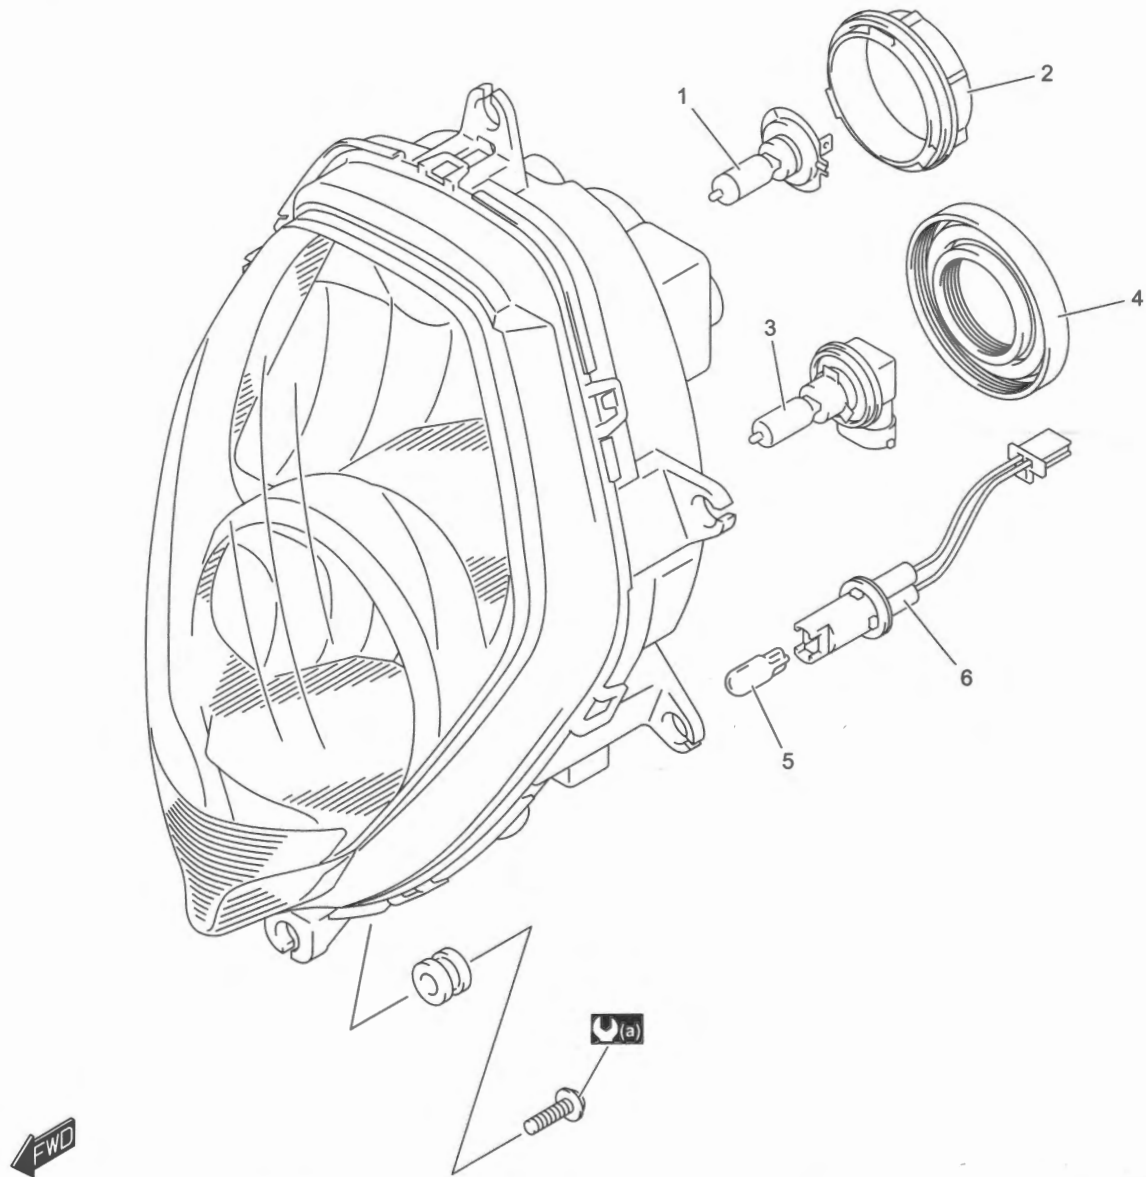

IH28K1920002-01


1. Headlight low beam bulb (12 V 55 W, H7)	4. Bulb socket rubber cap	🔩(a) : 2.0 N-m (0.20 kgf-m, 1.50 lbf-ft)
2. Cap	5. Position light bulb (12 V 5 W)	
3. Headlight high beam bulb (12 V 65 W, H9)	6. Position light socket	

**Headlight Removal and Installation**

BENH28K29206003

**Removal**

- 1) Remove the body cowling from cowling brace.  
☞ (Page 9D-27)
- 2) Remove the headlight (1).

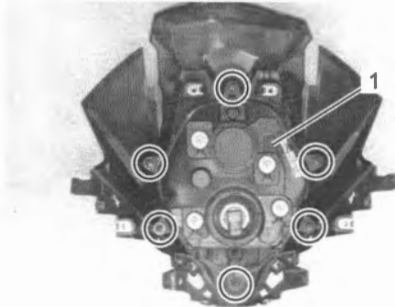

IH28K1920003-01


**Installation**

Install the headlight in the reverse order of removal. Pay attention to the following points:

- Install the headlight. Refer to "Headlight Construction" (Page 9B-2).
- Tighten the headlight screws (1) to the specified torque.

**Tightening torque**

**Headlight screw (a): 2.0 N·m (0.20 kgf-m, 1.50 lbf-ft)**

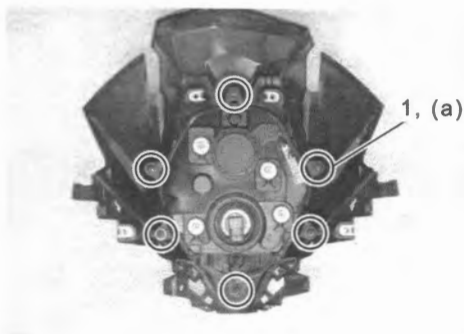

IH28K1920004-01


- After installing, be sure to inspect the headlight beam.  
☞ (Page 9B-6)

**Position Light Removal and Installation**

BENH28K29206004

**Removal**

- 1) Disconnect the position light coupler (1).
- 2) Turn the socket (2) counterclockwise and remove it.

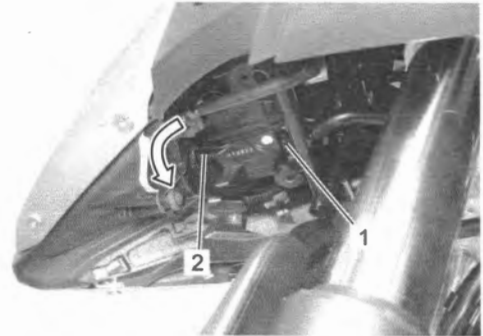

IH28K1920005-01

**Installation**

Install the position light in the reverse order of removal.

**Headlight Bulb / Position Light Bulb Replacement**


BENH28K29206005

**▲ CAUTION**

**As the headlight bulb operates at a high temperature, handle the bulb after sufficiently cooled.**

**Low Beam Bulb**


- 1) Remove the combination meter. ☞ (Page 9C-4)
- 2) Remove the cap (1).

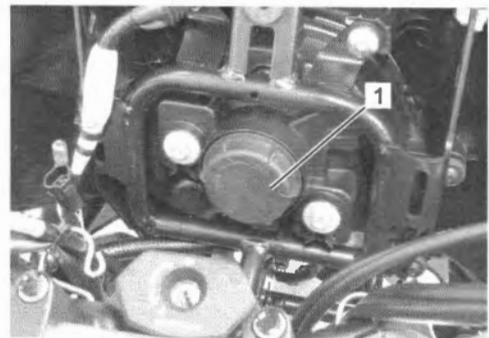

IH28K1920006-01


## 9B-5 Lighting Systems:

- 3) Disconnect the low beam headlight coupler (1).

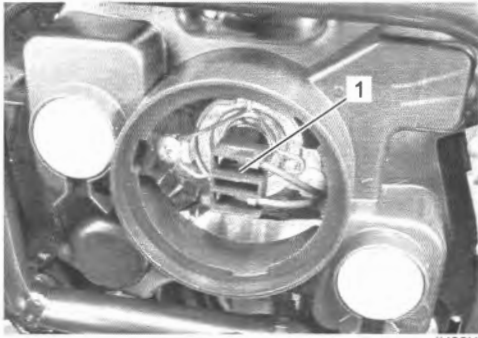

IH28K1920007-01

- 4) Unhook the bulb holder spring (1) and replace the low beam headlight bulb (2) with a new one.

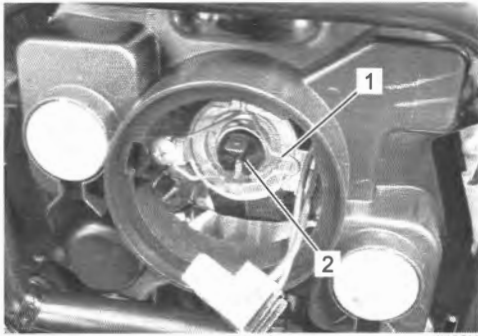


IH28K1920008-01

- 5) After replacing the low beam headlight bulb, install the removed parts.
- 6) After installing the removed parts, inspect the headlight beam. ☞ (Page 9B-6)


### High Beam Bulb

- 1) Disconnect the high beam headlight coupler (1).

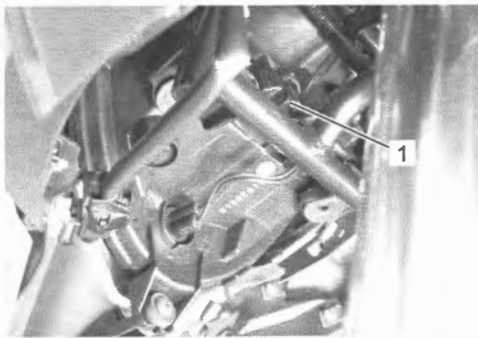

IH28K1920009-01

- 2) Turn the high beam headlight bulb (1) counterclockwise and replace it with a new one.

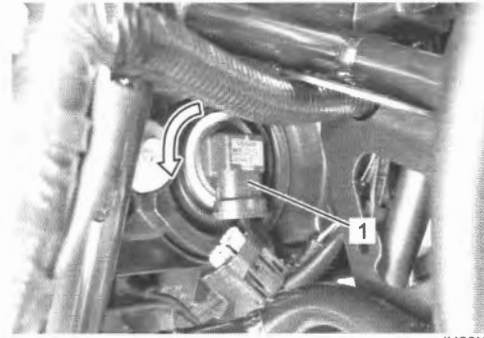


IH28K1920010-01

- 3) Connect the high beam headlight coupler.
- 4) After installing the removed parts, inspect the headlight beam. ☞ (Page 9B-6)

### Position Light Bulb

- 1) Turn the socket (1) counterclockwise and remove it.

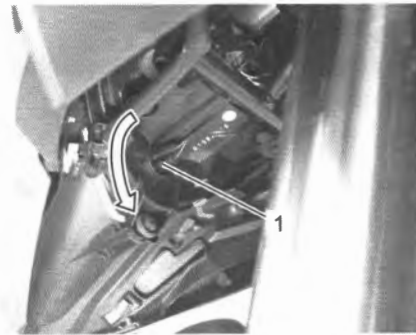

IH28K1920011-01

- 2) Replace the position light bulb (1).



IH28K1920012-01


- 3) Install the socket.

## Headlight Beam Adjustment

BENH28K29206006


- 1) Adjust the headlight beam horizontally turning the bolt (1) by a screwdriver from the bottom side.
- 2) Adjust the headlight beam vertically turning the bolt (2) by a screwdriver from the bottom side.

### High beam

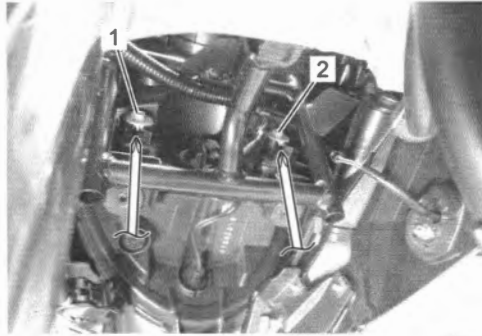

IH28K1920013-01


### Low beam

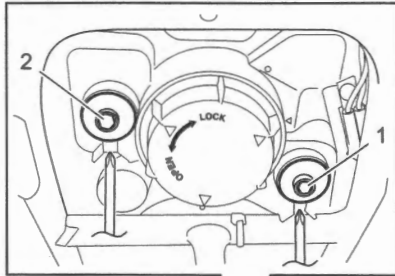

IH28K1920014-01

Rear Lighting System Construction

BENH28K29206007

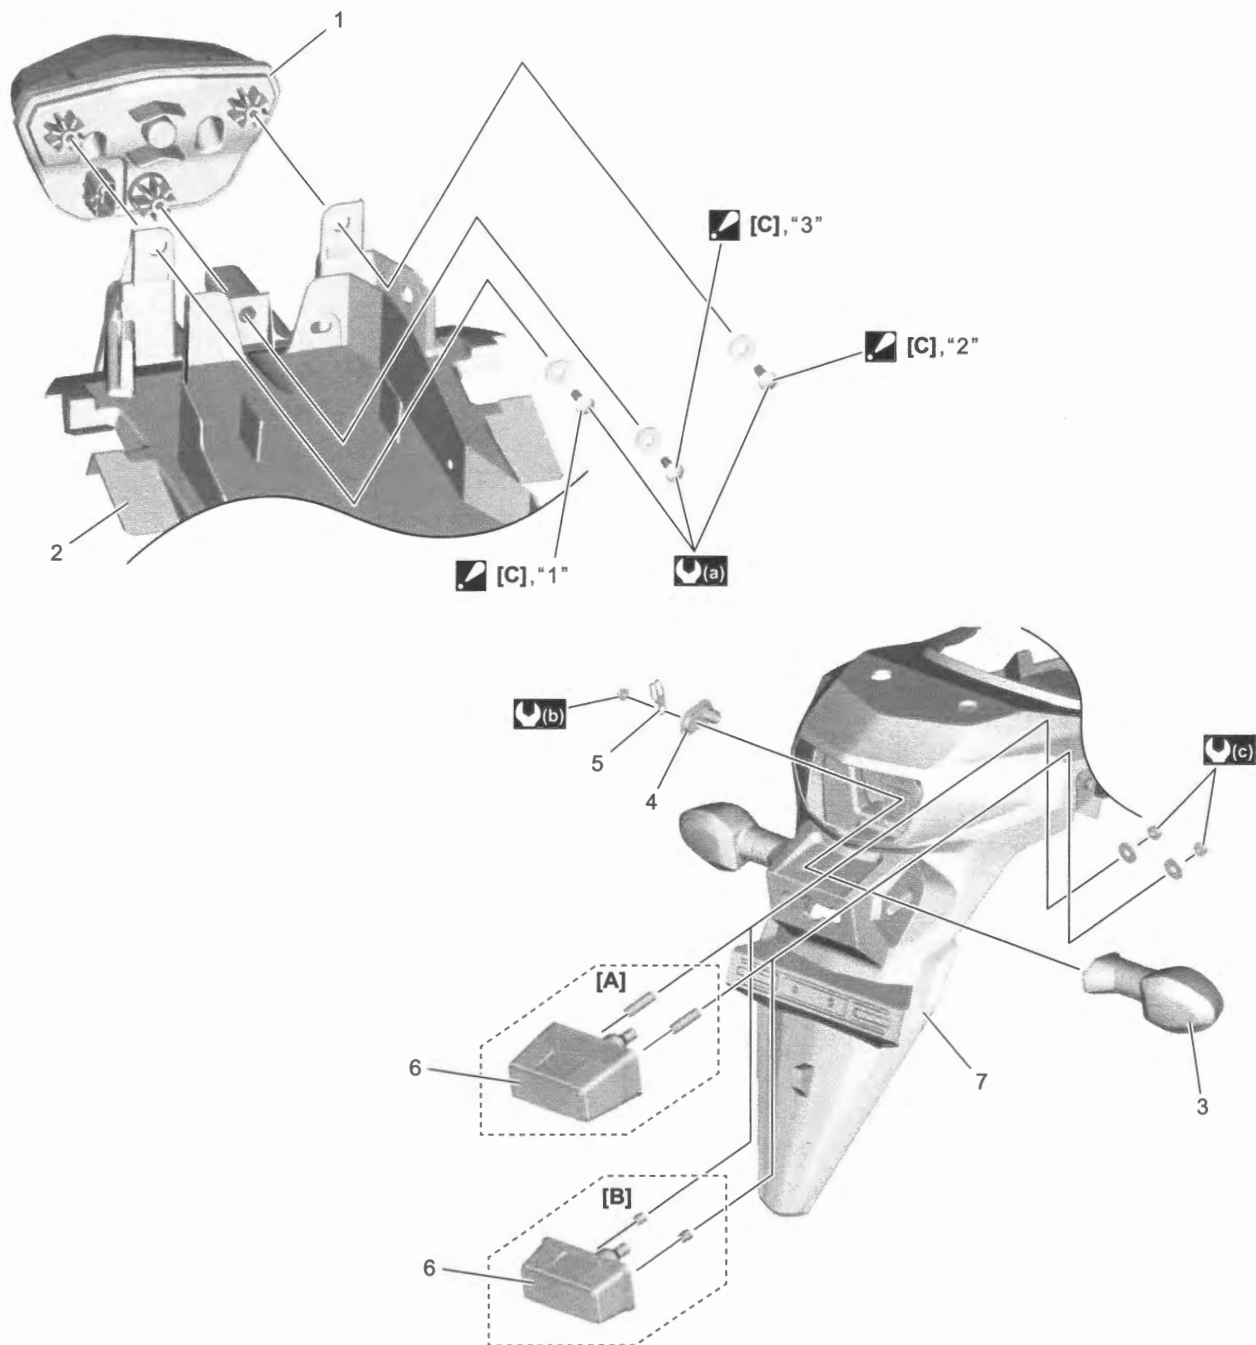

IH28K1920015-02


[A]: For U.S.A., Canada and California state	5. Clamp
[B]: Except for U.S.A., Canada and California state	6. License plate light
[C]: Tighten the screws in order of "1" → "2" → "3". 1. Rear combination light	7. Rear fender (rear)
2. Rear fender (front)	(a): 2.5 N-m (0.25 kgf-m, 1.85 lbf-ft)
3. Rear turn signal light	(b): 1.8 N-m (0.18 kgf-m, 1.35 lbf-ft)
4. Rear turn signal plate	(c): 4.8 N-m (0.49 kgf-m, 3.55 lbf-ft)

## Rear Combination Light Removal and Installation

BENH28K29206008


### Removal

- 1) Remove the rear fender (rear). [☞](#) (Page 9D-23)
- 2) Remove the EVAP canister (if equipped). [☞](#) (Page 1B-12)
- 3) Remove the screws (1) with washers and move the rear combination light (2) backward.

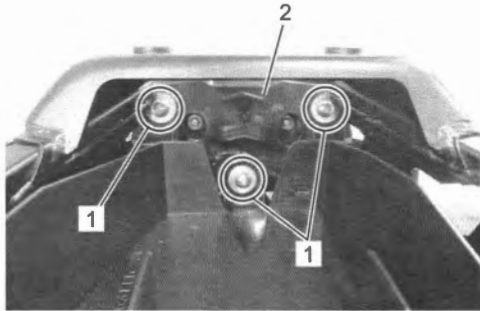

IH28K1920016-01

- 4) Disconnect the rear combination light coupler (1).

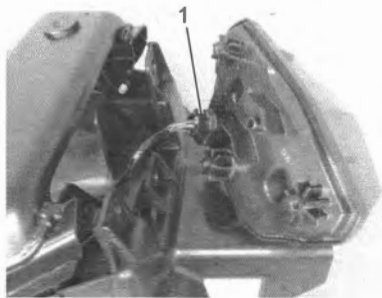

IH28K1920017-01


### Installation

Install the rear combination light in the reverse order of removal. Pay attention to the following point:

- Tighten the rear combination light screws to the specified torque in order of "1" → "2" → "3".

### Tightening torque

**Rear combination light screw (a): 2.5 N·m (0.25 kgf-m, 1.85 lbf-ft)**

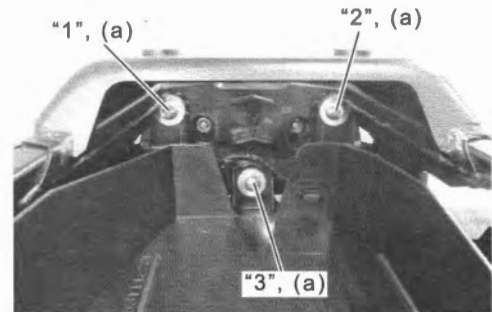

IH28K1920018-01

### Rear Combination Light LED Replacement


BENH28K29206009

#### NOTE

If LED operation is abnormal, replace the rear combination light with a new one. [☞](#) (Page 9B-8)

License Plate Light Components

BENH28K29206010

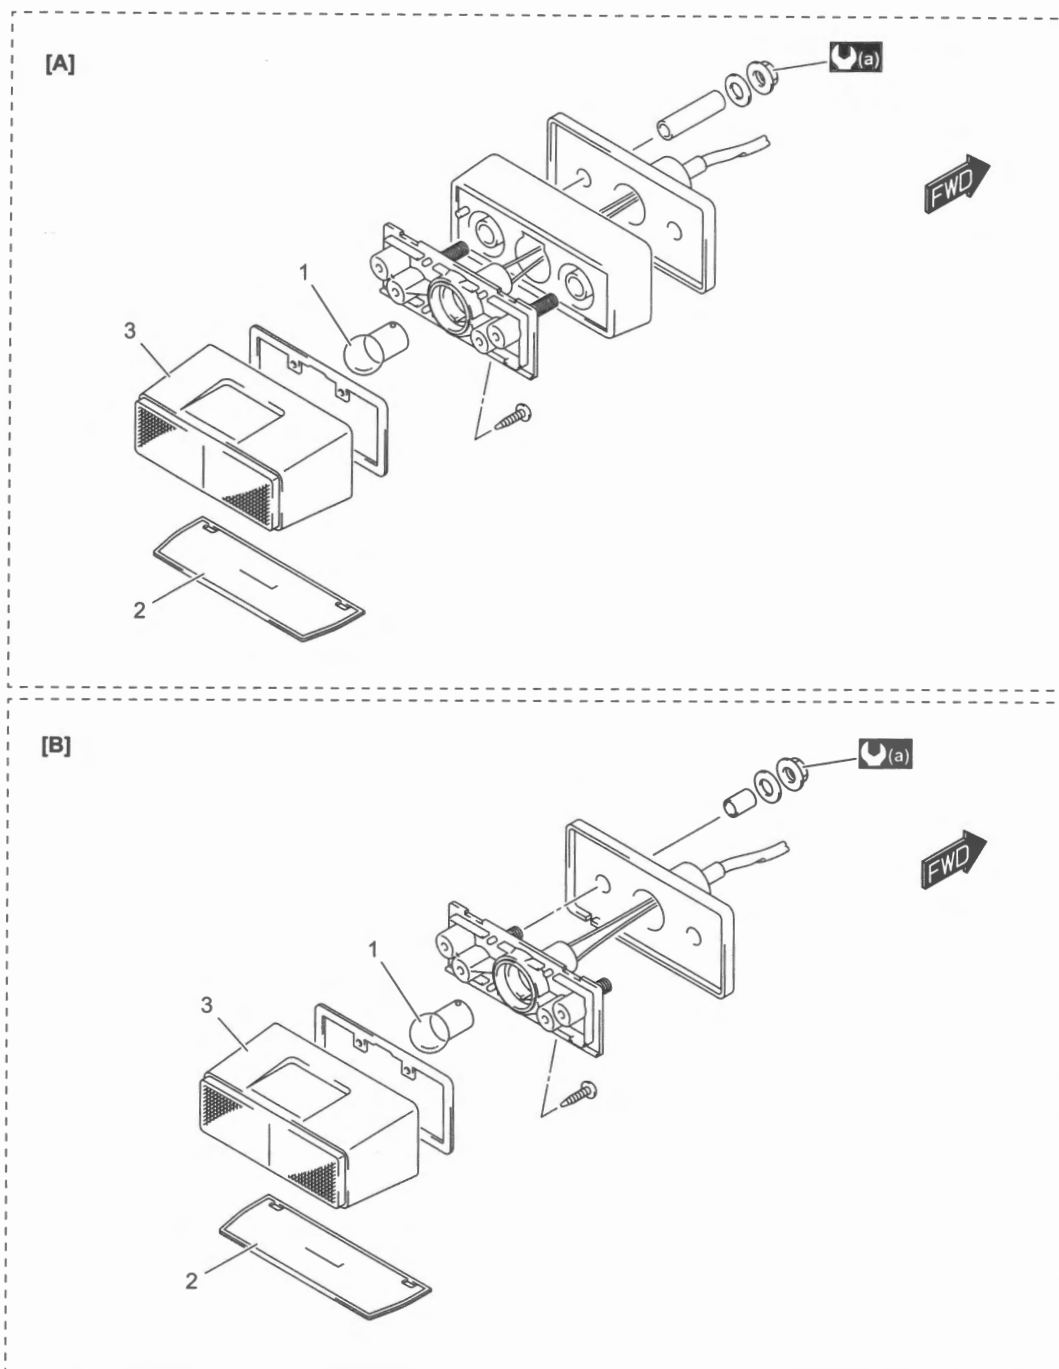

IH28K1920019-01

[A]: For U.S.A., Canada and California state	2. Lens
[B]: Except for U.S.A., Canada and California state	3. License plate light cover
1. License plate light bulb (12 V 5 W)	(a) : 4.8 N·m (0.49 kgf·m, 3.55 lbf·ft)




**License Plate Light Removal and Installation**

BENH28K29206011


**Removal**

- 1) Remove the rear fender (rear). (Page 9D-23)
- 2) Disconnect the license plate light lead wire coupler (1) and release the lead wire from the clamp (2).

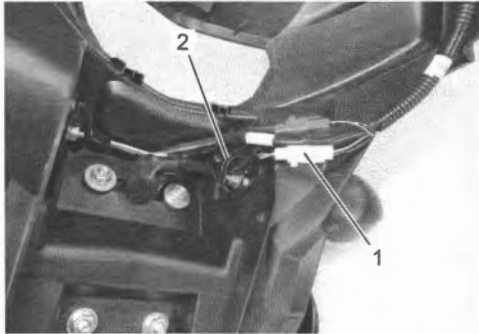

IH28K1920020-01

- 3) Remove the license plate light assembly (1) and spacers (2).

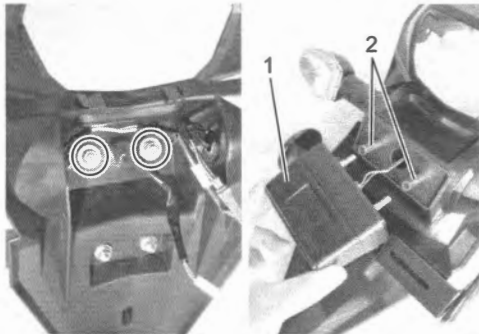


IH28K1920021-01

**Installation**

Install the license plate light in the reverse order of removal. Pay attention to the following points:

- Put the license plate light cushion placing the cutout (1) to the lower left.

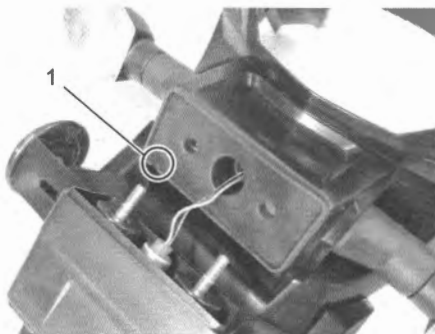


IH28K1920022-01

- Tighten the license plate light nuts (1) to the specified torque.

**Tightening torque**

License plate light nut (a): 4.8 N·m (0.49 kgf·m, 3.55 lbf·ft)

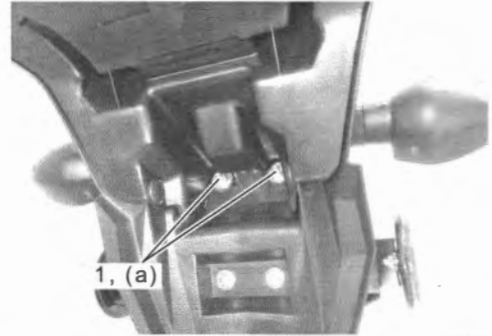


IH28K1920023-01

- Route the license plate light lead wire properly. Refer to "Wiring Harness Routing Diagram" in Section 9A (Page 9A-7).

**License Plate Light Bulb Replacement**


BENH28K29206012

- 1) Remove the license plate light assembly (1).

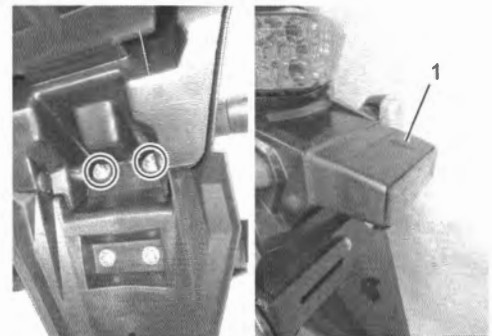

IH28K1920024-01


- 2) Remove the cover (1).

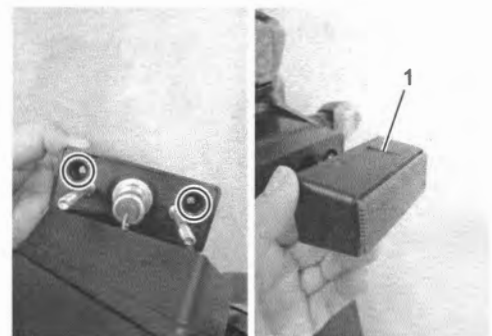

IH28K1920025-01


## 9B-11 Lighting Systems:

- 3) Push in the license plate light bulb (1) and turn it counterclockwise while pushing.
- 4) Replace the bulb.

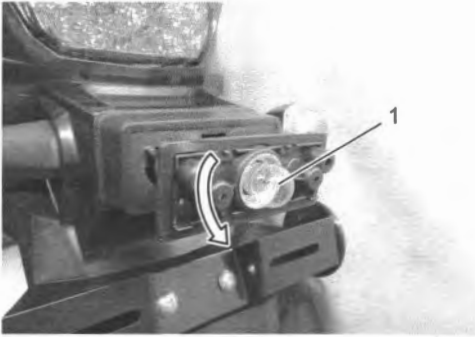

IH28K1920026-01

- 5) Install the cover (1).

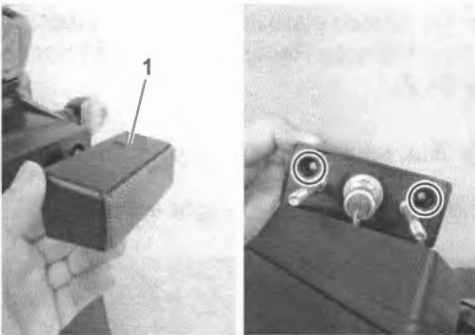


IH28K1920027-01

- 6) Install the license plate light assembly. ↻ (Page 9B-10)

### Front Side Reflex Reflector Construction (If Equipped)

BENH28K29206013

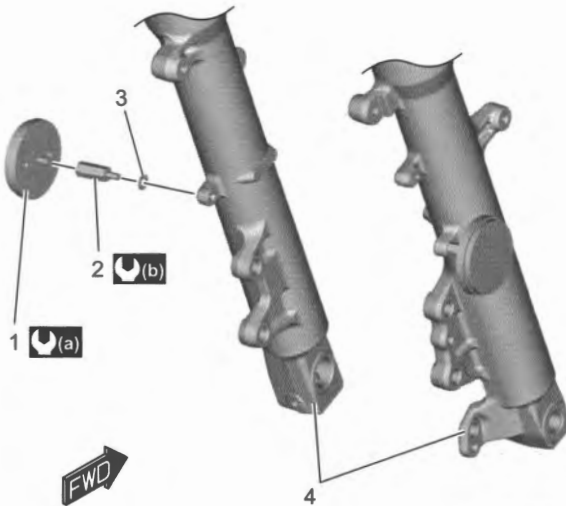

IH28K1920028-02


1.	Front side reflex reflector
2.	Front side reflex reflector bolt
3.	Washer
4.	Front fork
(a)	1.8 N·m (0.18 kgf-m, 1.35 lbf-ft)
(b)	10 N·m (1.0 kgf-m, 7.5 lbf-ft)

### Front Side Reflex Reflector Removal and Installation (If Equipped)

BENH28K29206014

#### Removal

Remove the front side reflex reflector (1), bolt (2) and washer (3).

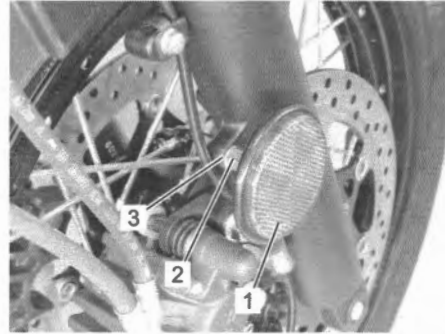

IH28K1920030-01

#### Installation


Install the front side reflex reflector in the reverse order of removal. Pay attention to the following point:

- Tighten the bolt (1) and front side reflex reflector (2) to the specified torque.

#### Tightening torque

Front side reflex reflector bolt (a): 10 N·m (1.0 kgf-m, 7.5 lbf-ft)


Front side reflex reflector (b): 1.8 N·m (0.18 kgf-m, 1.35 lbf-ft)

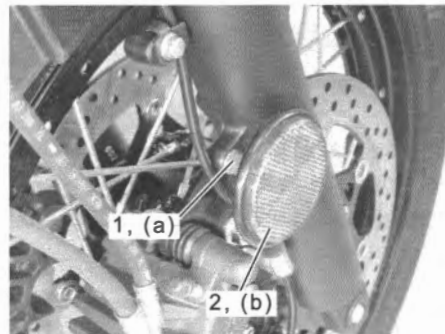

IH28K1920029-01

Rear Reflex Reflector Construction

BENH28K29206015

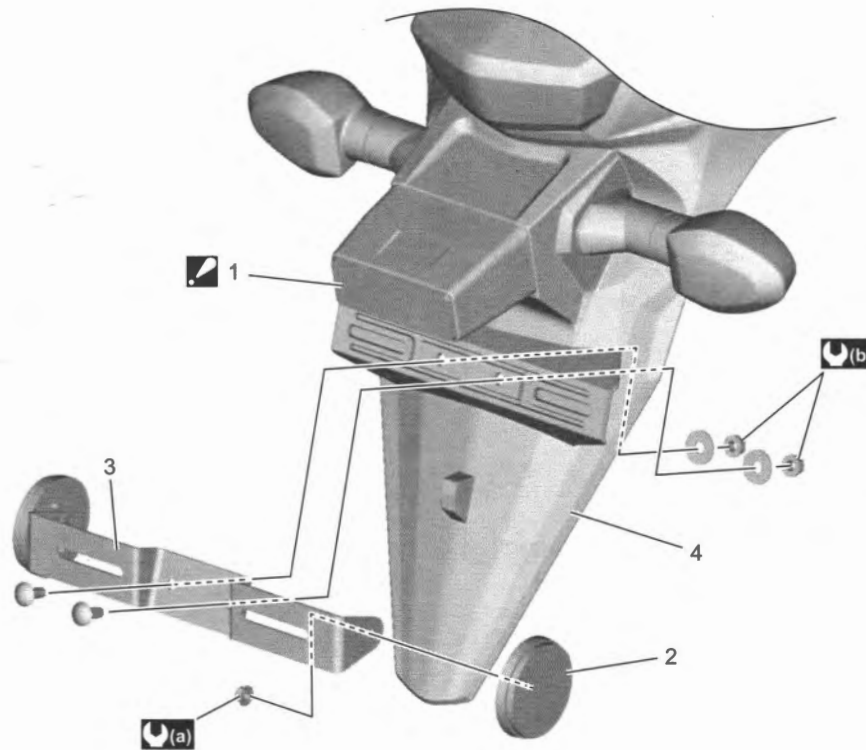

IH28K1920031-01

<p>1. Rear reflex reflector : Incorporated in the license plate light cover. Refer to "License Plate Light Components" (Page 9B-9).</p>	<p>4. Rear fender (rear)</p>
<p>2. Rear side reflex reflector (if equipped)</p>	<p>(a) : 1.8 N·m (0.18 kgf·m, 1.35 lbf·ft)</p>
<p>3. License plate bracket (if equipped)</p>	<p>(b) : 5.0 N·m (0.51 kgf·m, 3.70 lbf·ft)</p>

Rear Reflex Reflector Removal and Installation

BENH28K29206016


Refer to "License Plate Light Bulb Replacement" (Page 9B-10).

Rear Side Reflex Reflector Removal and Installation (If Equipped)

BENH28K29206017


Removal

1) Remove the license plate bracket (1).

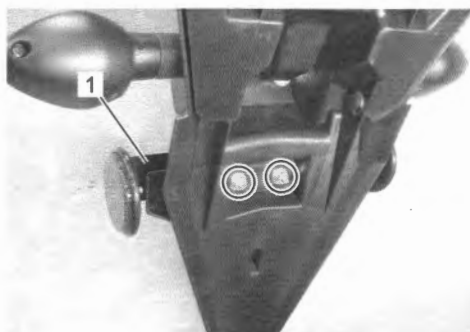

IH28K1920032-01

2) Remove the rear side reflex reflector (1).

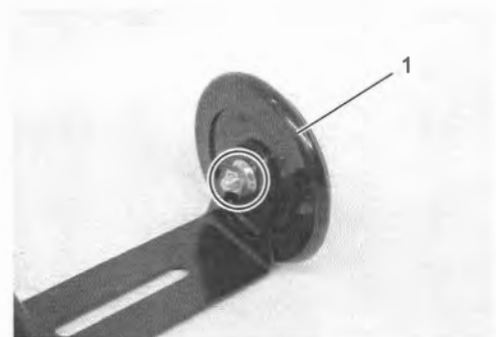

IH28K1920033-01

## 9B-13 Lighting Systems:


### Installation

Install the rear side reflex reflector in the reverse order of removal. Pay attention to the following points:

- Tighten the rear side reflex reflector nut (1) to the specified torque.

### Tightening torque

Rear side reflex reflector nut (a): 1.8 N·m (0.18 kgf-m, 1.35 lbf-ft)

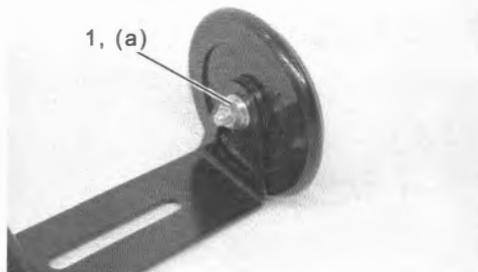


IH28K1920035-01

- Tighten the license plate bracket nut (1) to the specified torque.

### Tightening torque


License plate bracket nut (a): 5.0 N·m (0.51 kgf-m, 3.70 lbf-ft)

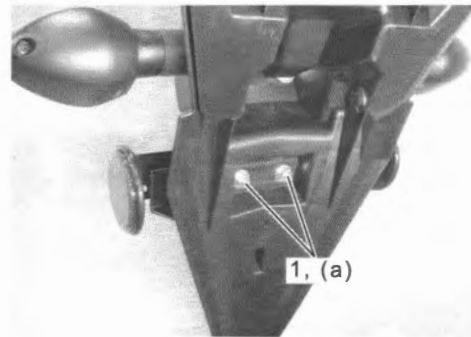

IH28K1920034-01

## Front Turn Signal Light Construction

BENH28K29206018

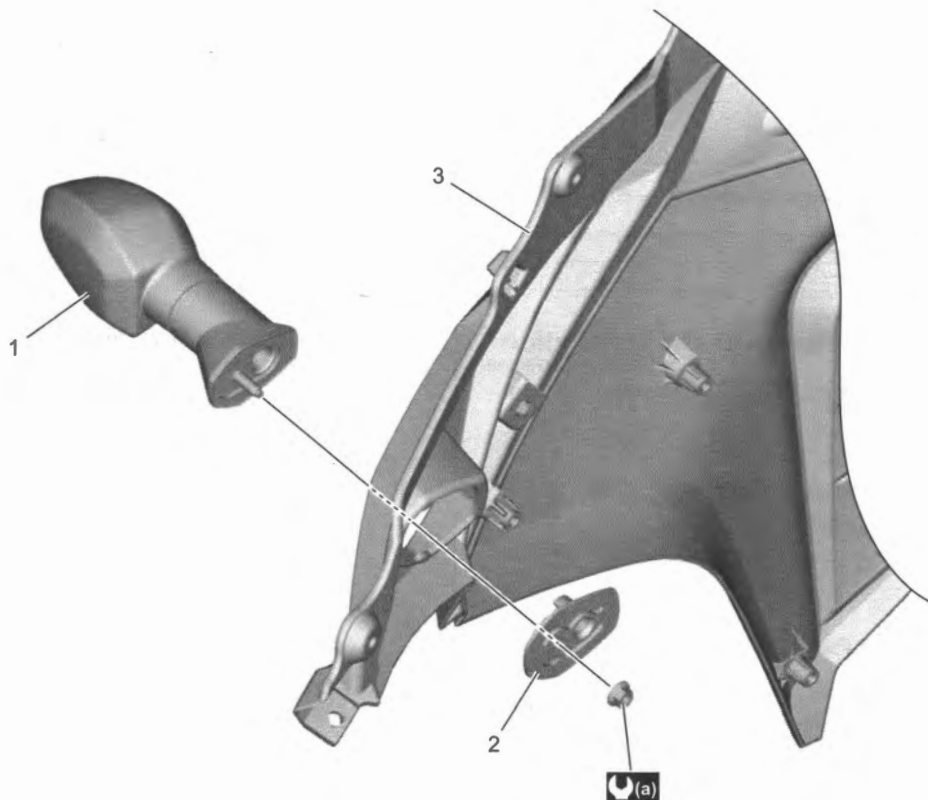


IH28K1920036-01

1. Front turn signal light	3. Side cowling
2. Front turn signal plate	(a) : 1.3 N·m (0.13 kgf-m, 0.95 lbf-ft)

## Turn Signal Light Components

BENH28K29206019

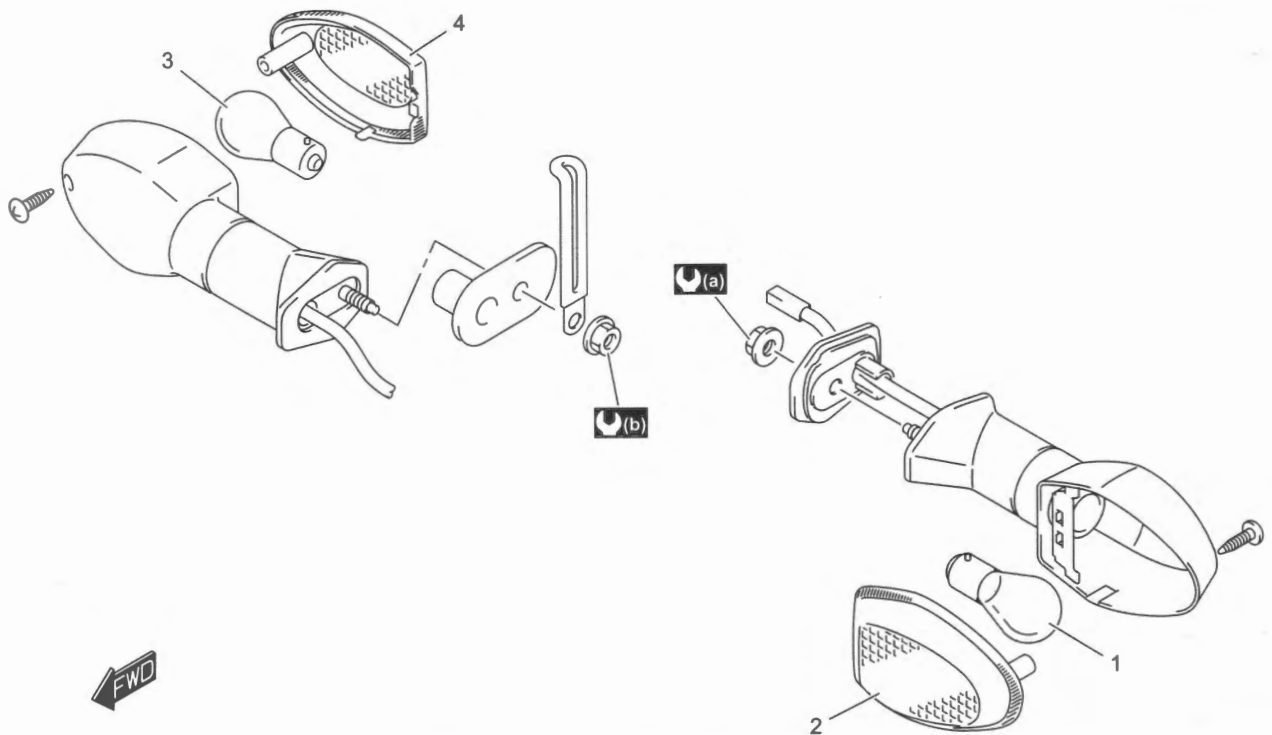

IH28K1920037-01

1. Front turn signal light bulb (12 V 21 W x 2)	4. Rear turn signal light lens
2. Front turn signal light lens	(a) : 1.3 N·m (0.13 kgf-m, 0.95 lbf-ft)
3. Rear turn signal light bulb (12 V 21 W x 2)	(b) : 1.8 N·m (0.18 kgf-m, 1.35 lbf-ft)

## Front Turn Signal Light Removal and Installation


BENH28K29206020

**NOTE**

The same procedures are applicable to both the right and left lights.

**Removal**

- 1) Disconnect the front turn signal light coupler (1).
- 2) Remove the front turn signal light (2).

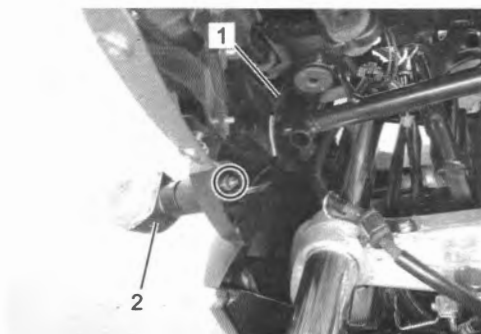

IH28K1920038-01

**Installation**

Install the front turn signal light in the reverse order of removal. Pay attention to the following point:

- Tighten the front turn signal light nut (1) to the specified torque.

**Tightening torque**

Front turn signal light nut (a): 1.3 N·m (0.13 kgf-m, 0.95 lbf-ft)



IH28K1920039-01

## Rear Turn Signal Light Removal and Installation

BENH28K29206021

### NOTE

The same procedures are applicable to both the right and left lights.


### Removal

- 1) Remove the rear fender (rear). (Page 9D-23)
- 2) Disconnect the right rear turn signal light coupler (Black) (1) and/or left rear turn signal light coupler (Gray) (2).



IH28K1920040-01

- 3) Remove the nut (1), clamp (2) and rear turn signal light (3).

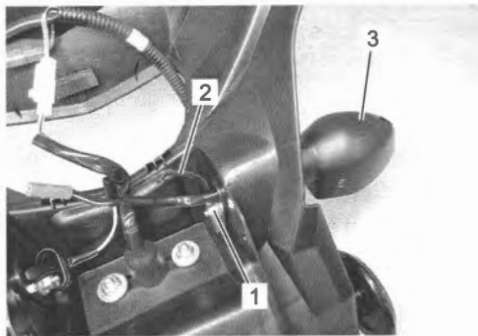

IH28K1920041-01


### Installation

Install the rear turn signal light in the reverse order of removal. Pay attention to the following points:

- Tighten the rear turn signal light nut (1) to the specified torque.

### Tightening torque

Rear turn signal light nut (a): 1.8 N·m (0.18 kgf·m, 1.35 lbf·ft)

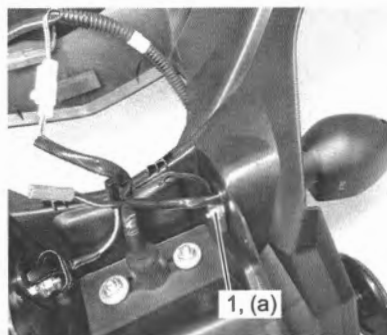


IH28K1920042-02

- Route the rear turn signal light lead wire properly. Refer to "Wiring Harness Routing Diagram" in Section 9A (Page 9A-7).

### Turn Signal Light Bulb Replacement


BENH28K29206022

- 1) Remove the screw (1) and lens (2).

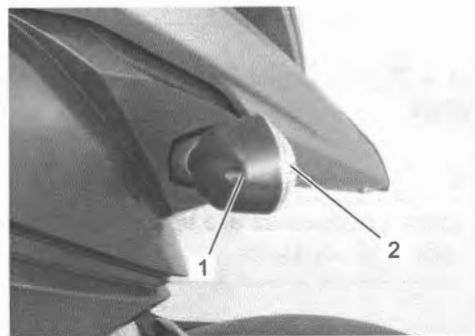

IH28K1920043-01

- 2) Push in the turn signal light bulb (1) and turn it counterclockwise while pushing.
- 3) Replace the bulb.

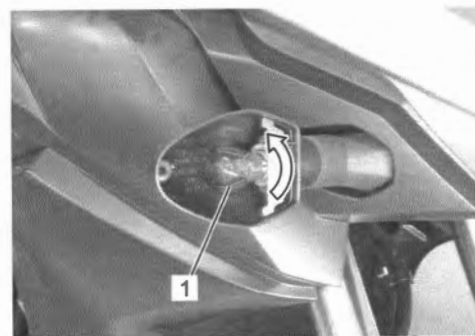

IH28K1920044-01

- 4) Install the lens.

### Turn Signal Relay Inspection

BENH28K29206023

Refer to "Electrical Components Location" in Section 0A (Page 0A-8).

**NOTE**

**Make sure that the battery is fully charged.**

Before removing the turn signal relay, check the operation of the turn signal light.

If the turn signal light does not illuminate, inspect the bulb, turn signal switch and circuit connection.


If the bulb, turn signal switch and circuit connection are OK, the turn signal relay may be faulty; therefore, replace the turn signal relay with a new one. (Page 9B-16)

### Turn Signal Relay Removal and Installation

BENH28K29206024

**Removal**

- 1) Turn the ignition switch OFF.
- 2) Remove the seat. (Page 9D-19)
- 3) Remove the turn signal relay (1) from the battery holder and disconnect the coupler (2).

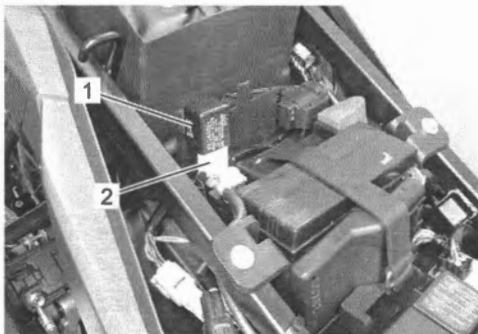

IH28K1920045-02

**Installation**

Install the turn signal relay in the reverse order of removal.

### Turn Signal Switch Inspection

BENH28K29206025

- 1) Turn the ignition switch OFF.
- 2) Remove the air cleaner box. (Page 1D-6)
- 3) Disconnect the left handle switch coupler (1).



IH28K1920046-01

- 4) Inspect the turn signal switch for continuity with a multi circuit tester.

If any abnormality is found, replace the left handle switch with a new one. Refer to "Handlebar Removal and Installation" in Section 6B (Page 6B-3).

Color Position	Lg	Lbl	B
L		○ ——— ○	
PUSH			
R	○ ——— ○		

IH28K1920047-01

- 5) Connect the left handle switch coupler. Refer to "Wiring Harness Routing Diagram" in Section 9A (Page 9A-7).

- 6) Install the air cleaner box. (Page 1D-6)

### Hazard Switch Inspection (If Equipped)

BENH28K29206026

- 1) Turn the ignition switch OFF.
- 2) Remove the air cleaner box. (Page 1D-6)
- 3) Disconnect the right handle switch coupler (1).



IH28K1920048-01

- 4) Inspect the hazard switch for continuity with a multi-circuit tester.

If any abnormality is found, replace the right handle switch with a new one. Refer to "Handlebar Removal and Installation" in Section 6B (Page 6B-3).

Color Position	B	Lbl	Lg
OFF			
ON	○ ——— ○	○ ——— ○	○ ——— ○

IH28K1920049-01


- 5) Connect the right handle switch coupler. Refer to "Wiring Harness Routing Diagram" in Section 9A (Page 9A-7).

- 6) Install the air cleaner box. (Page 1D-6)

**Dimmer / Passing Light Switch Inspection**

BENH28K29206027

- 1) Turn the ignition switch OFF.
- 2) Remove the air cleaner box. (Page 1D-6)
- 3) Disconnect the left handle switch coupler (1).

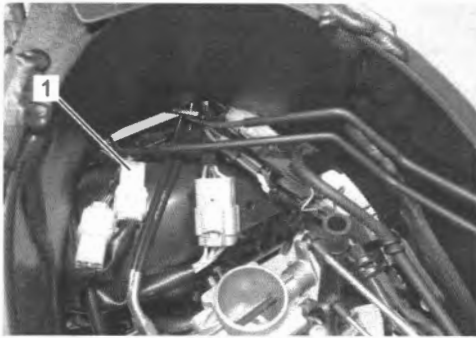

IH28K1920046-01

- 4) Inspect the dimmer / passing light switch for continuity with a multi circuit tester.  
If any abnormality is found, replace the left handle switch with a new one. Refer to "Handlebar Removal and Installation" in Section 6B (Page 6B-3).

Color Position	O	Y
HI		
LO		
PASS		

IH28K1920050-02

- 5) Connect the left handle switch coupler. Refer to "Wiring Harness Routing Diagram" in Section 9A (Page 9A-7).
- 6) Install the air cleaner box. (Page 1D-6)

**Specifications**

**Tightening Torque Specifications**

BENH28K29207001

Fastening part	Tightening torque			Note
	N·m	kgf·m	lbf·ft	
Headlight screw	2.0	0.20	1.50	(Page 9B-4)
Rear combination light screw	2.5	0.25	1.85	(Page 9B-8)
License plate light nut	4.8	0.49	3.55	(Page 9B-10)
Front side reflex reflector bolt	10	1.0	7.5	(Page 9B-11)
Front side reflex reflector	1.8	0.18	1.35	(Page 9B-11)
Rear side reflex reflector nut	1.8	0.18	1.35	(Page 9B-13)
License plate bracket nut	5.0	0.51	3.70	(Page 9B-13)
Front turn signal light nut	1.3	0.13	0.95	(Page 9B-14)
Rear turn signal light nut	1.8	0.18	1.35	(Page 9B-15)

**Reference:**

For the tightening torques of fasteners not specified in this page, refer to:

- "Headlight Construction" (Page 9B-2)
- "Headlight / Position Light Components" (Page 9B-3)
- "Rear Lighting System Construction" (Page 9B-7)
- "License Plate Light Components" (Page 9B-9)
- "Front Side Reflex Reflector Construction (If Equipped)" (Page 9B-11)
- "Rear Reflex Reflector Construction" (Page 9B-12)
- "Front Turn Signal Light Construction" (Page 9B-13)
- "Turn Signal Light Components" (Page 9B-14)
- "Fasteners Information" in Section 0C (Page 0C-11)





## Diagnostic Information and Procedures

### Combination Meter Symptom Diagnosis

BENH28K29304001

- 1) Check combination meter power and ground circuit.
- 2) Check DTC. (Page 1A-15)
  - If some DTC appears during inspection in Step 2), go to applicable DTC diagnosis flow.
  - If any of troubles described in table below has occurred independently even though DTC display is normal during inspection is Step 2), inspect subject place according to instructions in table below.

Condition	Possible cause	Correction / Reference Item
<b>Speedometer does not operate</b>	Defective front wheel speed sensor	Check front wheel speed sensor. (Page 4E-34)
	Defective speedometer	Check speedometer. (Page 9C-9)
	Faulty speedometer circuit	Repair circuit. (Page 9A-5)
	Faulty front wheel speed sensor circuit	Repair circuit. (Page 9A-5)
<b>Fuel level indicator does not operate</b>	Faulty fuel level gauge	Check fuel level gauge. (Page 9C-9)
	Faulty fuel level indicator	Check fuel level indicator. (Page 9C-8)
	Faulty wiring or grounding	Repair wiring. (Page 9A-5)
<b>Oil pressure indicator light does not operate</b>	Faulty oil pressure switch	Check oil pressure switch. (Page 9C-9)
	Faulty oil pressure indicator	Check oil pressure indicator. (Page 9C-9)
	Faulty oil pressure switch circuit	Repair circuit. (Page 9A-5)
<b>Engine coolant temperature indicator light does not operate</b>	Defective ECT sensor	Check ECT sensor. (Page 1C-6)
	Faulty engine coolant temperature indicator	Check engine coolant temperature indicator/engine coolant temperature indicator light. (Page 9C-6)
	Faulty ECT sensor circuit	Repair circuit. (Page 9A-5)

### Horn Symptom Diagnosis


BENH28K29304002

Condition	Possible cause	Correction / Reference Item
<b>Horn does not operate</b>	Faulty horn switch	Check horn switch. (Page 9C-11)
	Faulty wiring or grounding	Repair wiring. (Page 9A-5)
	Faulty horn	Check horn. (Page 9C-11)

# Repair Instructions

## Combination Meter Construction

BENH28K29306001

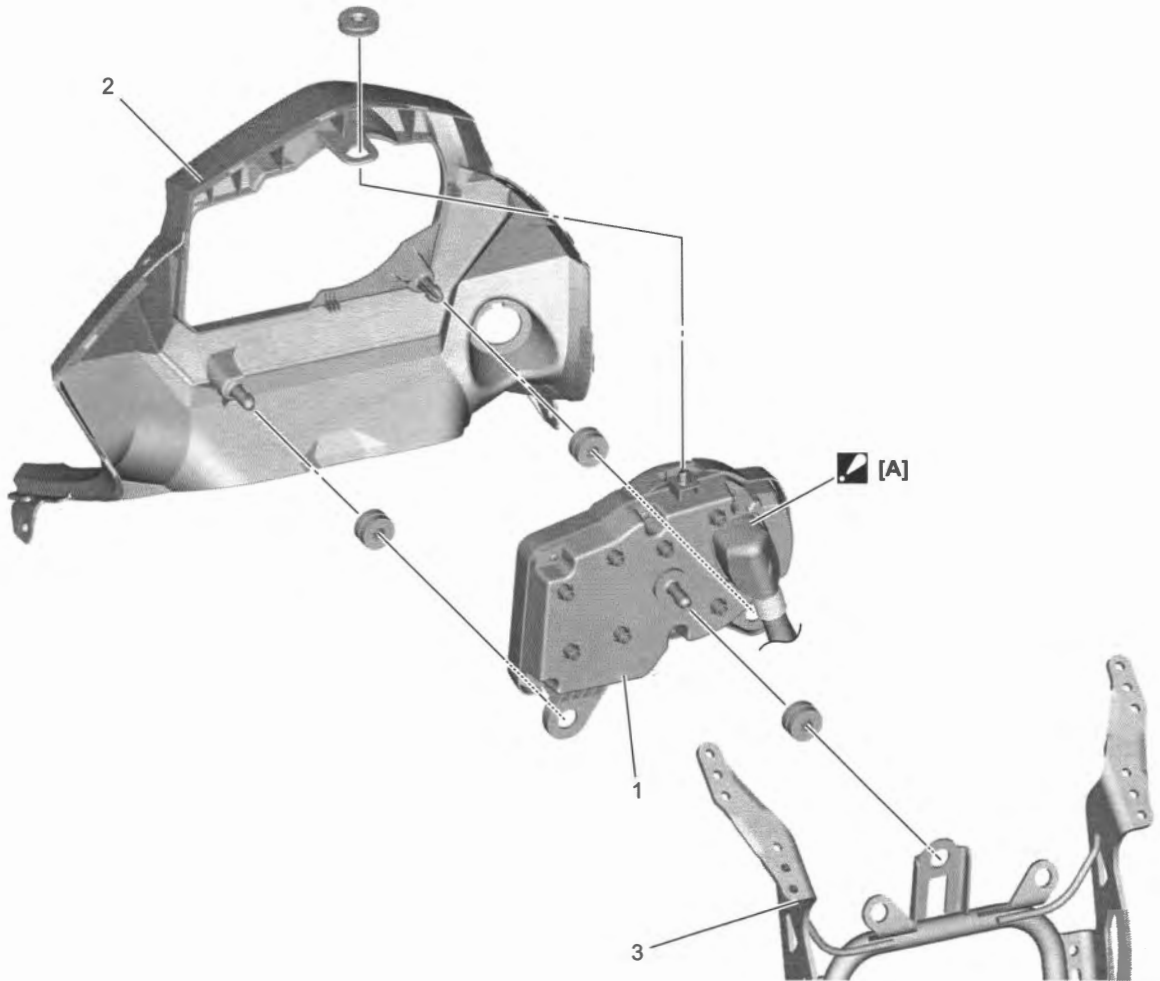


IH28K1930002-01

<input checked="" type="checkbox"/> [A]: Install the coupler boot to the combination meter securely.	2. Meter panel
1. Combination meter	3. Headlight brace

Combination Meter Components

BENH28K29306002

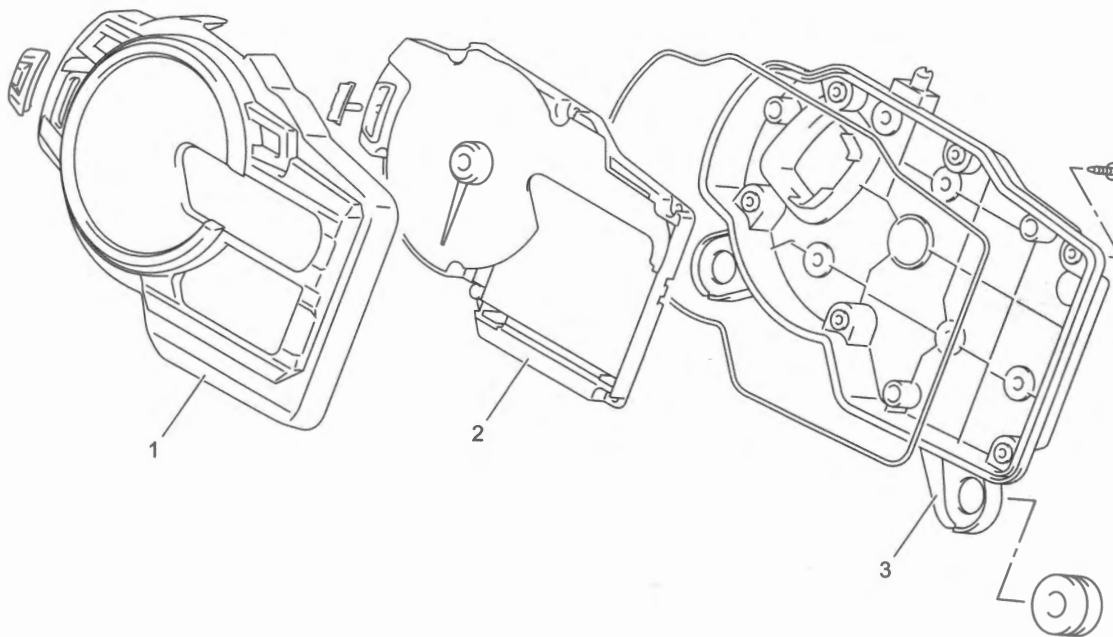

IH28K1930003-01

1. Upper case	3. Lower case
2. Combination meter unit	

Combination Meter On-Vehicle Inspection


BENH28K29306003

LED Inspection

Check that the LEDs (malfunction indicator light (1), ABS indicator light (2), engine coolant temperature indicator light / oil pressure indicator light (3), freeze indicator light (4) and TC indicator light (5)) immediately light up when the ignition switch is turned to ON.

Check that other LED's (neutral indicator light (6), hi beam indicator light (7) and turn signal indicator lights (8)) light up/go off by operating the gearshift lever, dimmer and turn signal switches.

If abnormal condition is found, replace the combination meter unit with a new one after checking its wire harness/coupler. (Page 9C-6)

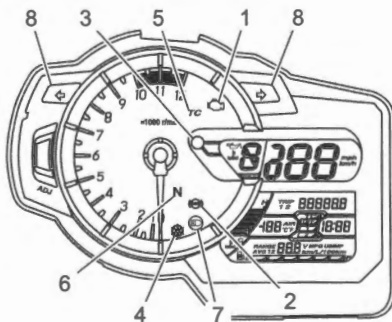


IH28K1930004-03

Combination Meter Removal and Installation

BENH28K29306004



Removal

- 1) Remove the front side covers. (Page 9D-24)
- 2) Remove the fuel tank front cover. (Page 9D-25)
- 3) Remove the clips (1) and screws (2). (Page 9D-18)

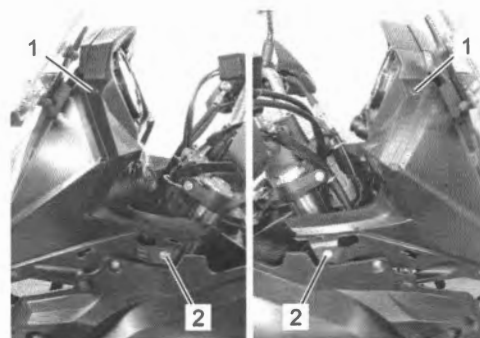


IH28K1930005-02

4) Unhook the bushing (1) and hooks (2), and move the meter panel assembly (3) backward.

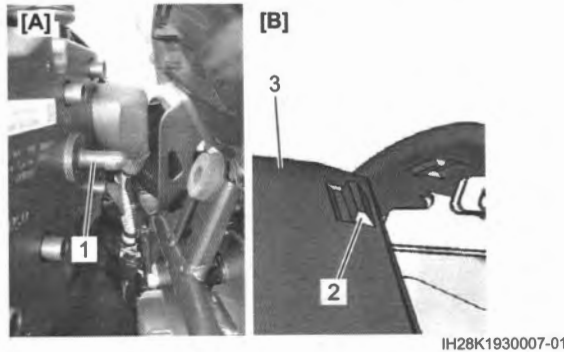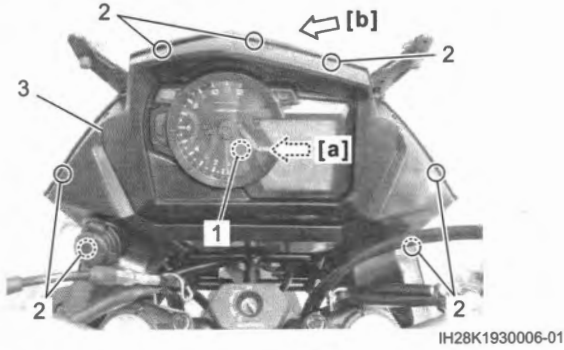


[A]: View [a]      [B]: View [b]

5) Disconnect the power source socket coupler (1) and combination meter coupler (2).

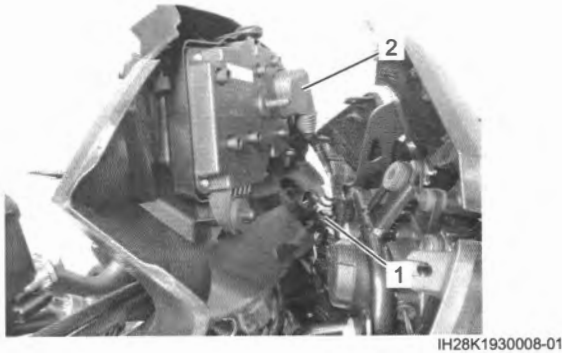

6) Remove the combination meter (1).

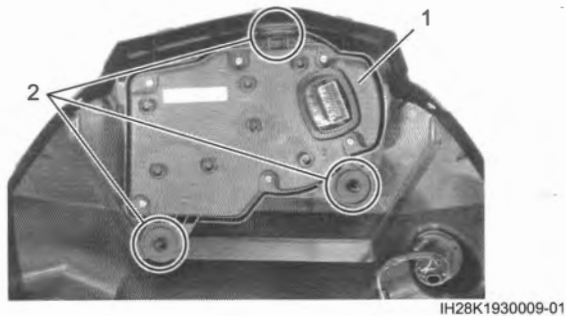

2. Bushing


7) Remove the ring nut (1) and power source socket (2), if necessary.



**Installation**

Install the combination meter in the reverse order of removal. Pay attention to the following points:


- Fit the power source socket aligning the protrusion (1) with the cutout (2) of the meter panel.

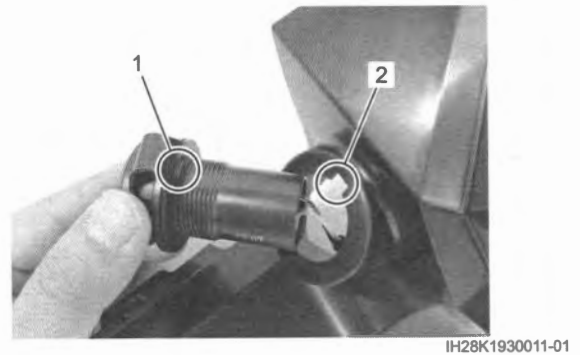

- Install the coupler boot (1).

**NOTE**

**Fix the boot of the combination meter coupler firmly.**

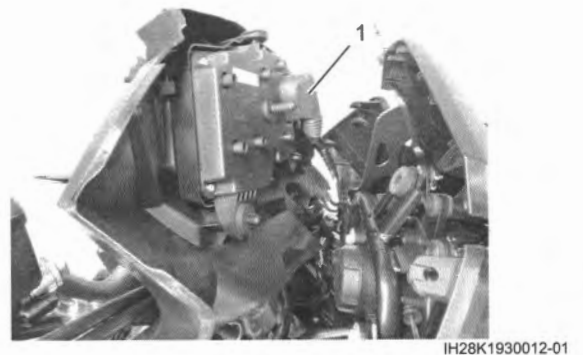

### Combination Meter Disassembly and Reassembly

BENH28K29306005

Refer to "Combination Meter Removal and Installation" (Page 9C-4).

Disassemble/reassemble the combination meter. Refer to "Combination Meter Components" (Page 9C-4).

### TC Indicator Light / TC Mode Indicator Inspection

BENH28K29306006


Check that the TC indicator light immediately lights up when the ignition switch is turned to ON.

Check that the TC indicator light goes out when riding the motorcycle at more than 5 km/h (3 mile/h).

Check that the TC mode indicator changes the indication when the select switch (1) and mode switch (2) are operated respectively.


If any abnormality is found, check the select switch, mode switch and wire harness, and replace the ECM with a known good one, and then check again that the TC mode indicator changes the indication when the select switch and mode switch are operated.

If any abnormality is still found, replace the combination meter.

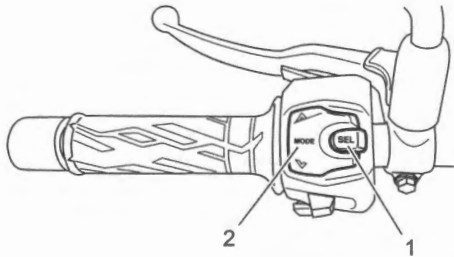


IH28K1930035-02

[A]

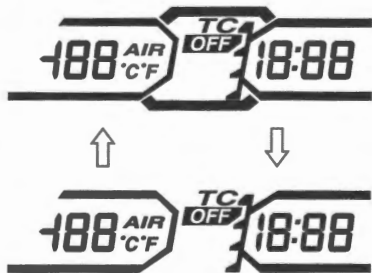

IH28K1930036-02

[B]

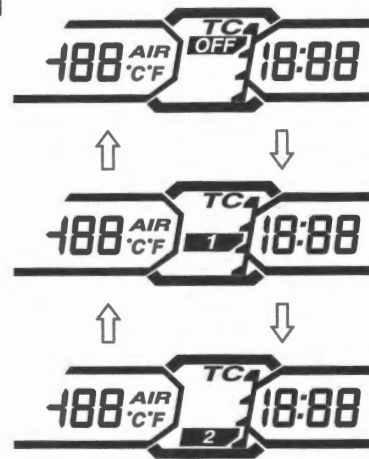


IH28K1930037-02

[A]: When select switch is pushed [B]: When mode switch is pushed

### Engine Coolant Temperature Indicator / Engine Coolant Temperature Indicator Light Inspection


BENH28K29306007

- 1) Disconnect the ECT sensor coupler (1).

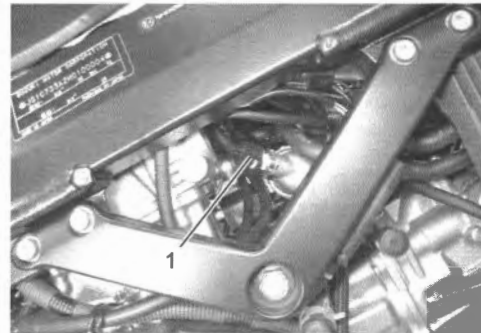

IH28K1930013-01

- 2) Connect a variable resistor (1) between the terminals.

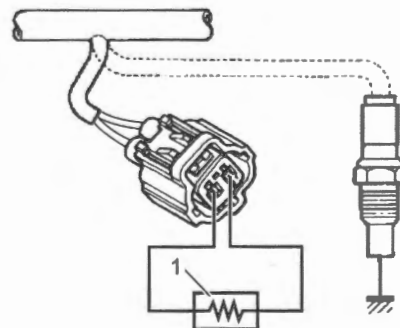

ID26J1930009-01

- 3) Turn the ignition switch ON.
- 4) Check the engine coolant temperature indicator (LCD) and engine coolant temperature indicator light (LED) operations when the resistance is adjusted to the specified values.  
If either one or both indications are abnormal, replace the combination meter with a new one after checking its wire harness/coupler. (Page 9C-4)

LED	LCD	Temperature and resistance
ON		120 °C (248 °F) Approx. 110 Ω
OFF		116 °C (241 °F) Approx. 122 Ω
OFF		118 °C (244 °F) Approx. 116 Ω
OFF		113 °C (235 °F) Approx. 131 Ω
OFF		114 °C (237 °F) Approx. 128 Ω
OFF		110 °C (230 °F) Approx. 142 Ω
OFF		111 °C (231 °F) Approx. 138 Ω
OFF		70 °C (158 °F) Approx. 427 Ω
OFF		108 °C (226 °F) Approx. 149 Ω
OFF		50 °C (122 °F) Approx. 811 Ω
OFF		40 °C (104 °F) Approx. 1150 Ω
OFF		68 °C (154 °F) Approx. 454 Ω
OFF		48 °C (118 °F) Approx. 868 Ω
OFF		38 °C (101 °F) Approx. 1235 Ω

[A]: When decreasing the temperature      [B]: When increasing the temperature

IH28K1930014-04

- 5) Install the removed parts.

**ECT Sensor Removal and Installation**


BENH28K29306008

Refer to "ECT Sensor Removal and Installation" in Section 1C (Page 1C-7).

**Fuel Level Indicator Inspection**


BENH28K29306009

- 1) Lift and support the fuel tank. (Page 1G-10)
- 2) Disconnect the fuel pump coupler (1).

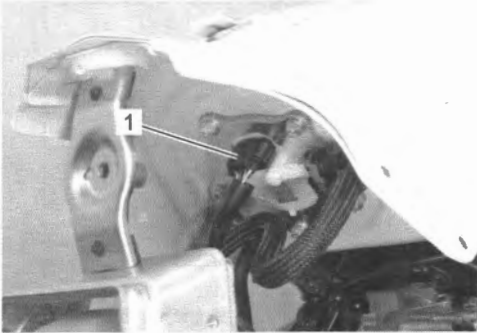

IH28K1930015-01

- 3) Connect a variable resistor (1) between the B/BI and Y/B lead wires of the wire harness side coupler.

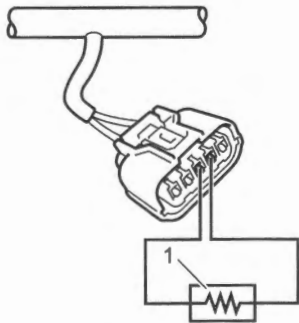

IH28K1930016-01

- 4) Turn the ignition switch ON.
- 5) Check the display of fuel level indicator (LCD). If any abnormality is found, replace the combination meter with a new one after checking its wire harness/ coupler. (Page 9C-4)

**NOTE**

Keep the motorcycle upright position folding the side-stand up with the ignition ON and wait for approx. 40 seconds to read the fuel level.

Resistance	Fuel level indicator
188.8 - 211.6 Ω	<p>Flicker Flicker</p> <p>Flicker</p>
154.4 - 174.3 Ω	<p>Flicker</p> <p>ON</p>
125.3 - 142.0 Ω	<p>ON</p> <p>ON</p>
96.8 - 109.7 Ω	<p>ON</p> <p>ON</p>
71.8 - 81.6 Ω	<p>ON</p> <p>ON</p>
42.5 - 49.6 Ω	<p>ON</p> <p>ON</p>

IH28K1930017-03

- 6) Install the removed parts.



### Fuel Level Gauge Inspection

BENH28K29306010

Refer to "Fuel Level Gauge Inspection" in Section 1G (Page 1G-19).

### Speedometer On-Vehicle Inspection

BENH28K29306011

If the speedometer, odometer or tripmeter does not function properly, check that DTC P0500 (C16) is not detected. Refer to "DTC Check" in Section 1A (Page 1A-15).

If there is no DTC in ECM, replace the combination meter with a new one after checking its wire harness/coupler. (Page 9C-4)

### Speed Sensor Removal and Installation

BENH28K29306012

Refer to "Front Wheel Speed Sensor Removal and Installation" in Section 4E (Page 4E-32) and "Rear Wheel Speed Sensor Removal and Installation" in Section 4E (Page 4E-33).

### Speed Sensor Rotor Removal and Installation

BENH28K29306013

Refer to "Front Wheel Speed Sensor Rotor Removal and Installation" in Section 4E (Page 4E-33) and "Rear Wheel Speed Sensor Rotor Removal and Installation" in Section 4E (Page 4E-34).

### Speed Sensor and Sensor Rotor Inspection

BENH28K29306014

Refer to "Wheel Speed Sensor and Sensor Rotor Inspection" in Section 4E (Page 4E-34).


### Oil Pressure Indicator / Oil Pressure Indicator Light Inspection

BENH28K29306015

#### NOTE

Before inspecting the oil pressure switch, check if the engine oil level is correct. Refer to "Engine Oil Inspection" in Section 1E (Page 1E-4).

- 1) Disconnect the oil pressure switch lead wire (1).

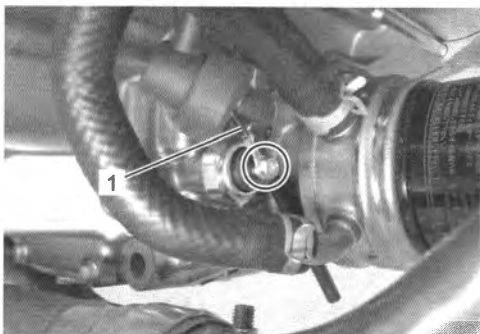


IH28K1930018-01

- 2) Turn the ignition switch ON.

- 3) Check if the oil pressure indicator light (LED) (2) and indicator (LCD) (3) will light up when grounding the lead wire (1).

If the oil pressure indicator does not light up, replace the combination meter with a new one after checking its wire harness/couplers. (Page 9C-4)

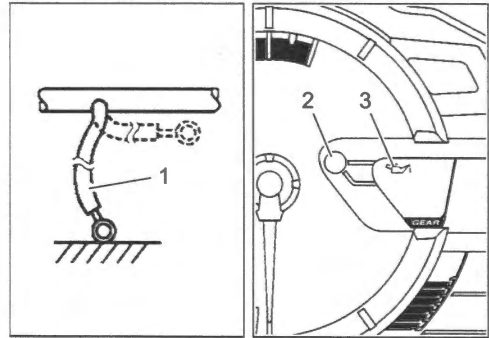


IH28K1930019-01

- 4) Connect the oil pressure switch lead wire. Refer to "Oil Pressure Switch Removal and Installation" in Section 1E (Page 1E-8).

### Freeze Indicator Light / Ambient Air Temperature Indicator Inspection


BENH28K29306016

- 1) Disconnect the ambient air temperature sensor coupler (1).

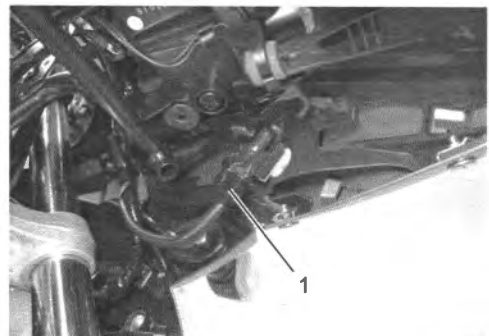

IH28K1930020-01

- 2) Connect a variable resistor (1) between the terminals.

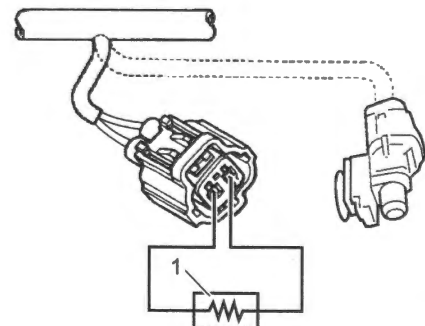



IH28K1930021-01

- 3) Turn the ignition switch ON.
- 4) Check the ambient air temperature indicator (LCD) (1) and freeze indicator light (LED) (2) for operations adjusting the resistance to the specified values. If any abnormality is found, replace the combination meter with a new one after checking its wire harness/ coupler. (Page 9C-4)

**NOTE**


When atmospheric temperature falls below 3 °C (38 °F), the ambient air temperature indicator (LCD) and freeze indicator light (LED) will flicker for 30 seconds and then they stay on.

Resistance	Ambient air temperature indicator (LCD)
Approx. 1.7 kΩ	25 °C (77 °F)
Approx. 4.3 kΩ	5 °C (41 °F)
Approx. 9.7 kΩ	-10 °C (14 °F)

Freeze indicator light (LED)	Ambient air temperature indicator (LCD)	Temperature
Flicker 	Flicker 3°C 38°F	[A] [B] 5 °C (41 °F) 3 °C (38 °F)
OFF 	5°C 41°F	

IH28K1930022-01

- [A]: When increasing the temperature
- [B]: When decreasing the temperature

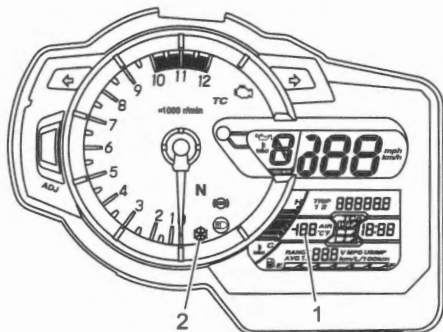

IH28K1930023-02


- 5) Connect the ambient air temperature sensor coupler.

**Ambient Air Temperature Sensor Removal and Installation**

BENH28K29306017

**Removal**

- 1) Disconnect the ambient air temperature sensor coupler (1).
- 2) Remove the ambient air temperature sensor (2).

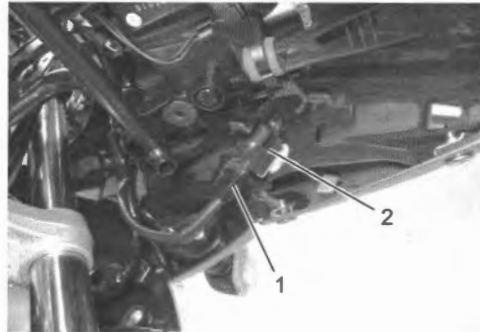

IH28K1930024-01

**Installation**

Install the ambient air temperature sensor in the reverse order of removal.

**Ambient Air Temperature Sensor Inspection**

BENH28K29306018

Refer to "Ambient Air Temperature Sensor Removal and Installation" (Page 9C-10).

Measure the resistance between terminals of the ambient air temperature sensor.


If any abnormality is found, replace the ambient air temperature sensor with a new one.

**NOTE**

Ambient air temperature sensor resistance measurement method is the same way as that of the ECT sensor. (Page 1C-6)

**Ambient air temperature sensor resistance**

- 20 °C (-4 °F) [Standard]: 13779 – 19083 Ω
- 10 °C (14 °F) [Standard]: 8100 – 10609 Ω
- 0 °C (32 °F) [Standard]: 4928 – 6125 Ω
- 10 °C (50 °F) [Standard]: 3089 – 3656 Ω
- 20 °C (68 °F) [Standard]: 1992 – 2251 Ω
- 25 °C (77 °F) [Standard]: 1615 – 1785 Ω
- 30 °C (86 °F) [Standard]: 1290 – 1456 Ω
- 40 °C (104 °F) [Standard]: 838 – 986 Ω

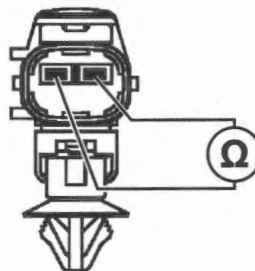


IH28K1930025-01

## Horn Inspection

BENH28K29306019

### Horn Switch Inspection

- 1) Turn the ignition switch OFF.
- 2) Remove the air cleaner box. (Page 1D-6)
- 3) Disconnect the left handle switch couplers (1).

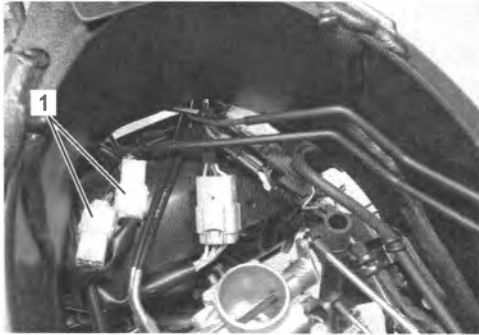

IH28K1930026-01

- 4) Inspect the horn switch for continuity with a multi circuit tester.  
If any abnormality is found, replace the left handle switch with a new one. Refer to "Handlebar Removal and Installation" in Section 6B (Page 6B-3).


Color Position	B/BI	B/W
•		
PUSH	○ ————— ○	○ ————— ○

IH18K1930017-02

- 5) Connect the left handle switch couplers. Refer to "Wiring Harness Routing Diagram" in Section 9A (Page 9A-7).
- 6) Install the air cleaner box. (Page 1D-6)

### Horn Inspection

Disconnect the horn coupler and connect a 12 V battery to the terminals of horn. If the sound is not heard from the horn, replace the horn with a new one. (Page 9C-11)

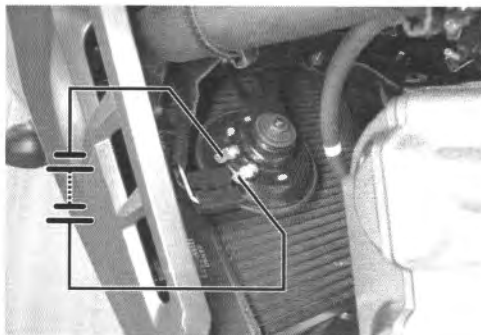


IH28K1930027-01

## Horn Removal and Installation

BENH28K29306020


### Removal

- 1) Remove the air cleaner box. (Page 1D-6)
- 2) Detach the left handle switch couplers (1), right handle switch coupler (2) and wiring harness clamp (3) from the radiator heat shield.

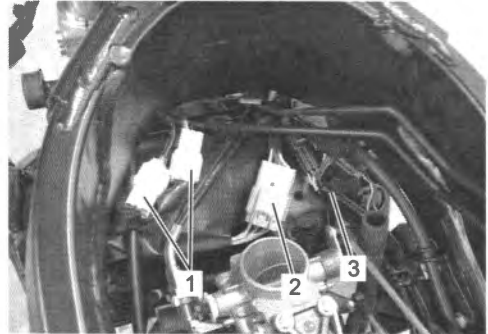


IH28K1930028-01

- 3) Remove the clips (1) and radiator heat shield.

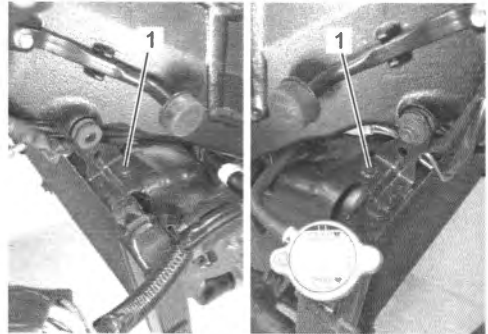

IH28K1930029-01

- 4) Disconnect the horn coupler (1) and remove the horn (2).

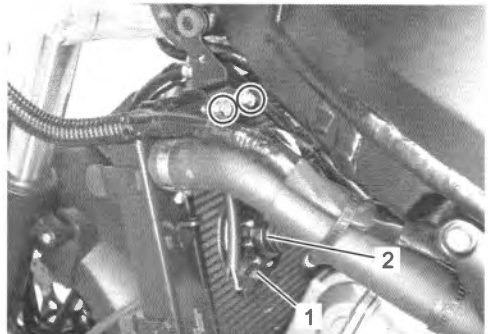


IH28K1930030-01

**Installation**

Install the horn in the reverse order of removal. Pay attention to the following points:

- Fit the projection (1) to the radiator and slit (2) to the cooling fan bracket.

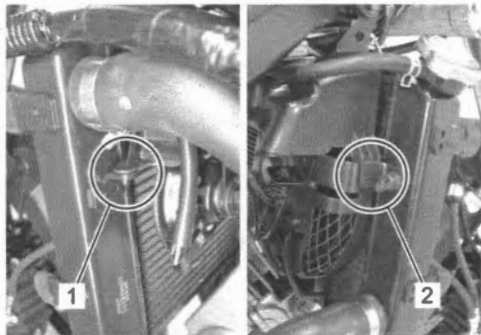

IH28K1930031-01


- Install the left handle switch couplers, right handle switch coupler and wiring harness clamp to the radiator heat shield. Refer to "Wiring Harness Routing Diagram" in Section 9A (Page 9A-7).

# Exterior Parts

## Schematic and Routing Diagram

### Seat Lock Cable Routing Diagram

BENH28K29402001

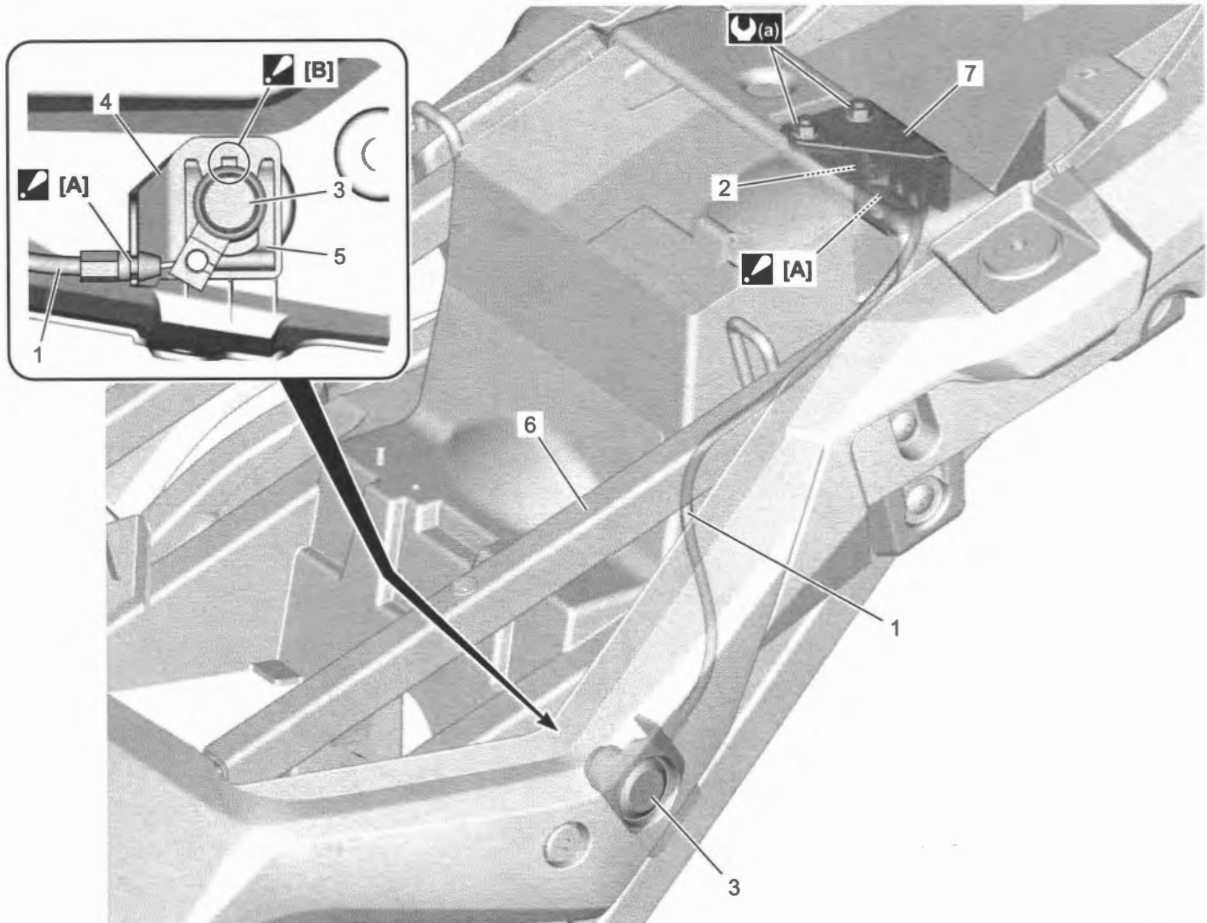


IH28K1940001-02

<ul style="list-style-type: none"> <li>☑ [A]: Set the seat lock cable firmly.</li> <li>☑ [B]: Align the rib of seat lock assembly and groove of cable guide.</li> </ul>	<ul style="list-style-type: none"> <li>3. Seat lock assembly</li> <li>4. Seat lock cable guide</li> <li>5. Seat lock plate</li> <li>6. Seat rail</li> </ul>	<ul style="list-style-type: none"> <li>7. Seat lock guard</li> <li>ⓐ : 8.8 N-m (0.90 kgf-m, 6.50 lbf-ft)</li> </ul>
<ul style="list-style-type: none"> <li>1. Seat lock cable</li> <li>2. Striker support bracket</li> </ul>		

# Repair Instructions


## Body Cowling Construction

BENH28K29406001

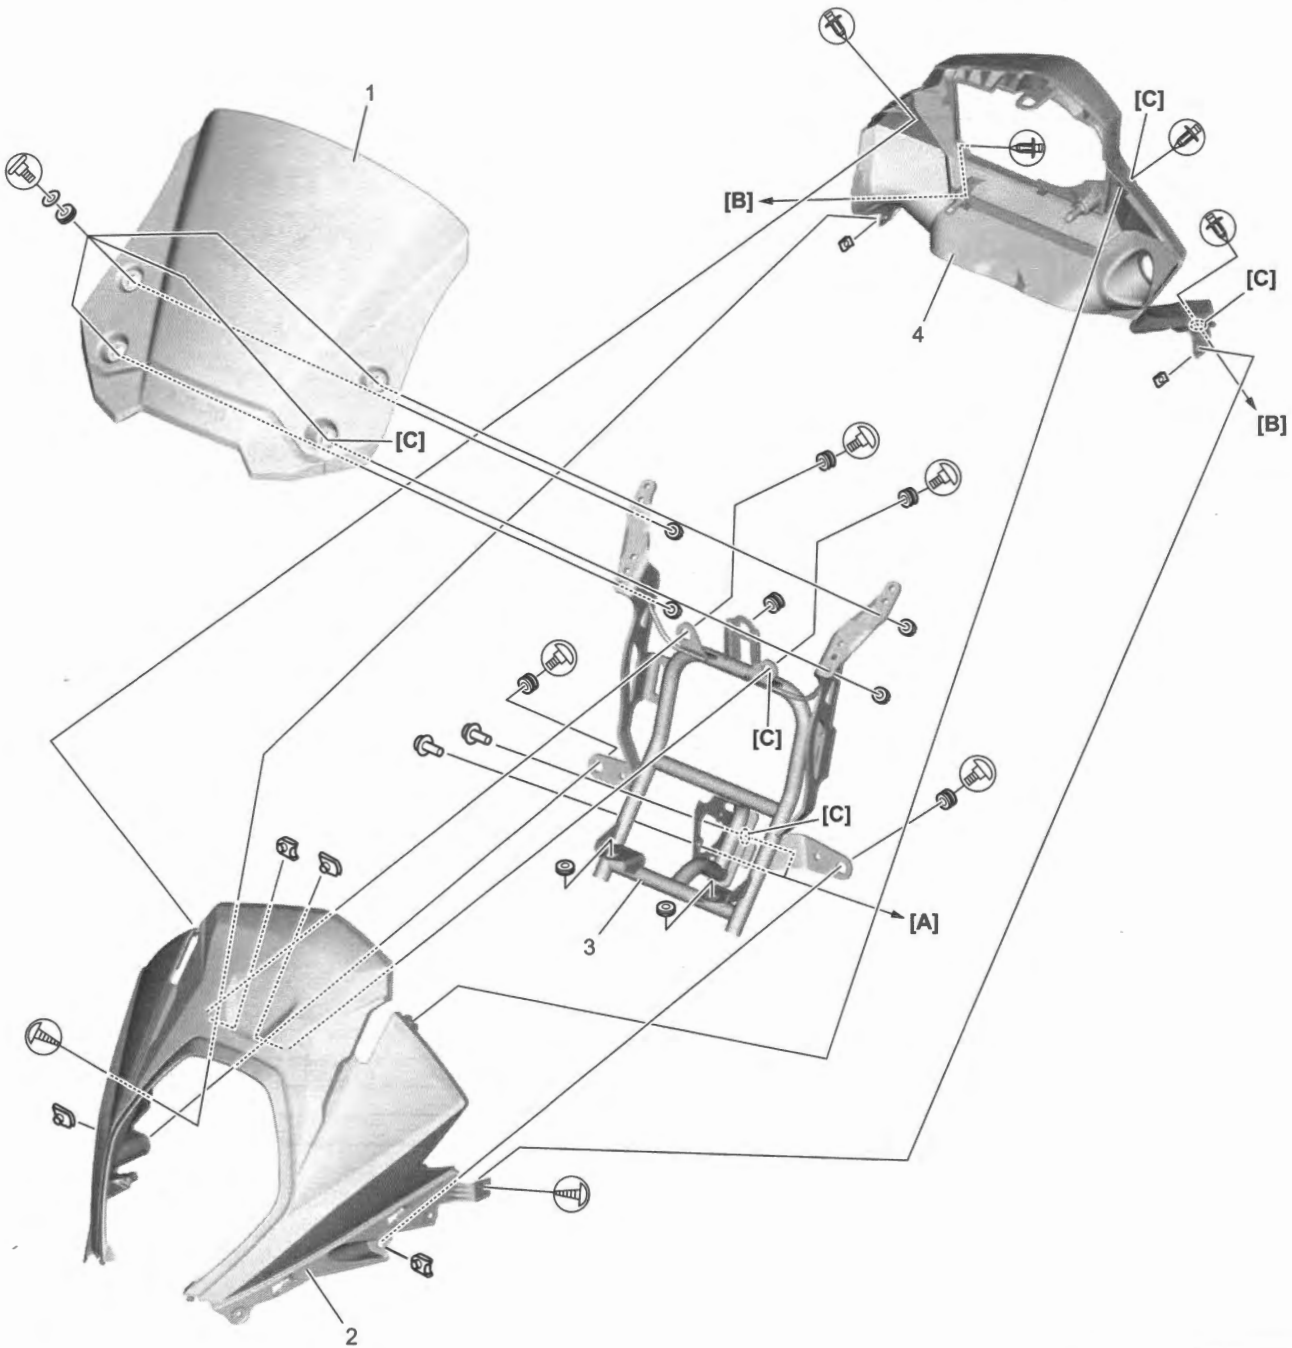

IH28K1940002-03

[A]: To frame	1. Windscreen	4. Meter panel
[B]: To fuel tank front cover	2. Body cowling	
[C]: Reference point for tightening	3. Cowling brace	

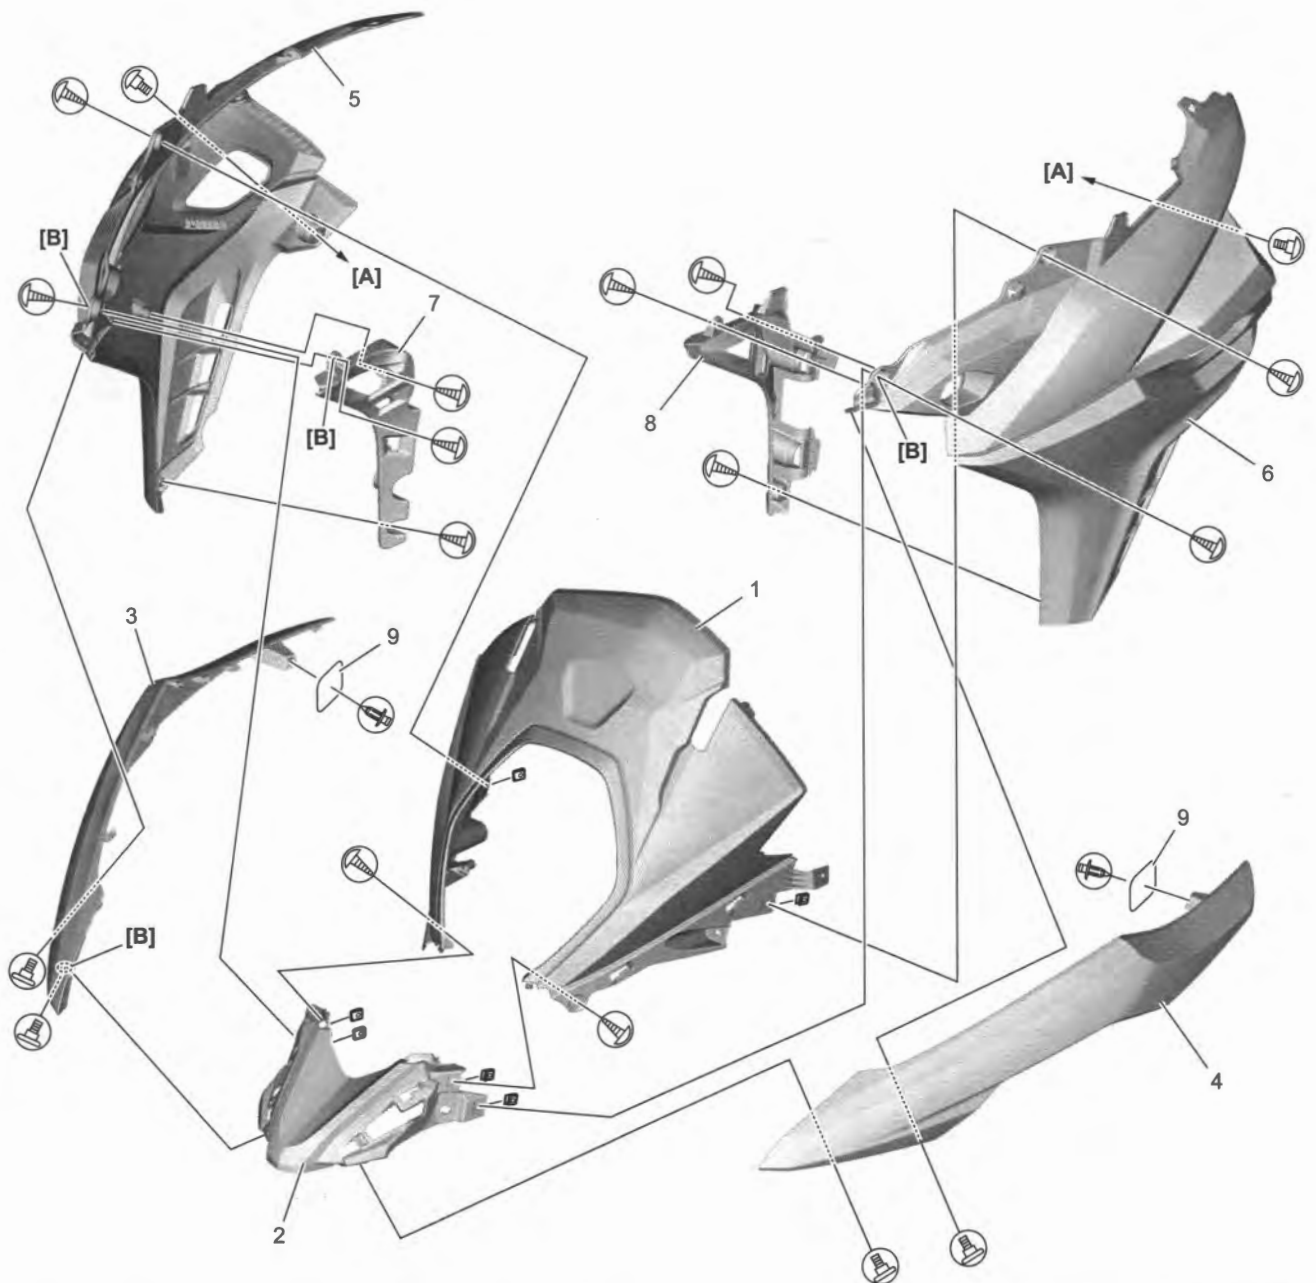


IH28K1940070-01

[A]: To fuel tank	3. Right front side cover	7. Right side cowling inner cover
[B]: Reference point for tightening	4. Left front side cover	8. Left side cowling inner cover
1. Body cowling	5. Right side cowling	9. Fuel tank front cover
2. Lower body cowling	6. Left side cowling	

Frame Cover / Rear Fender (Rear) Construction

BENH28K29406002

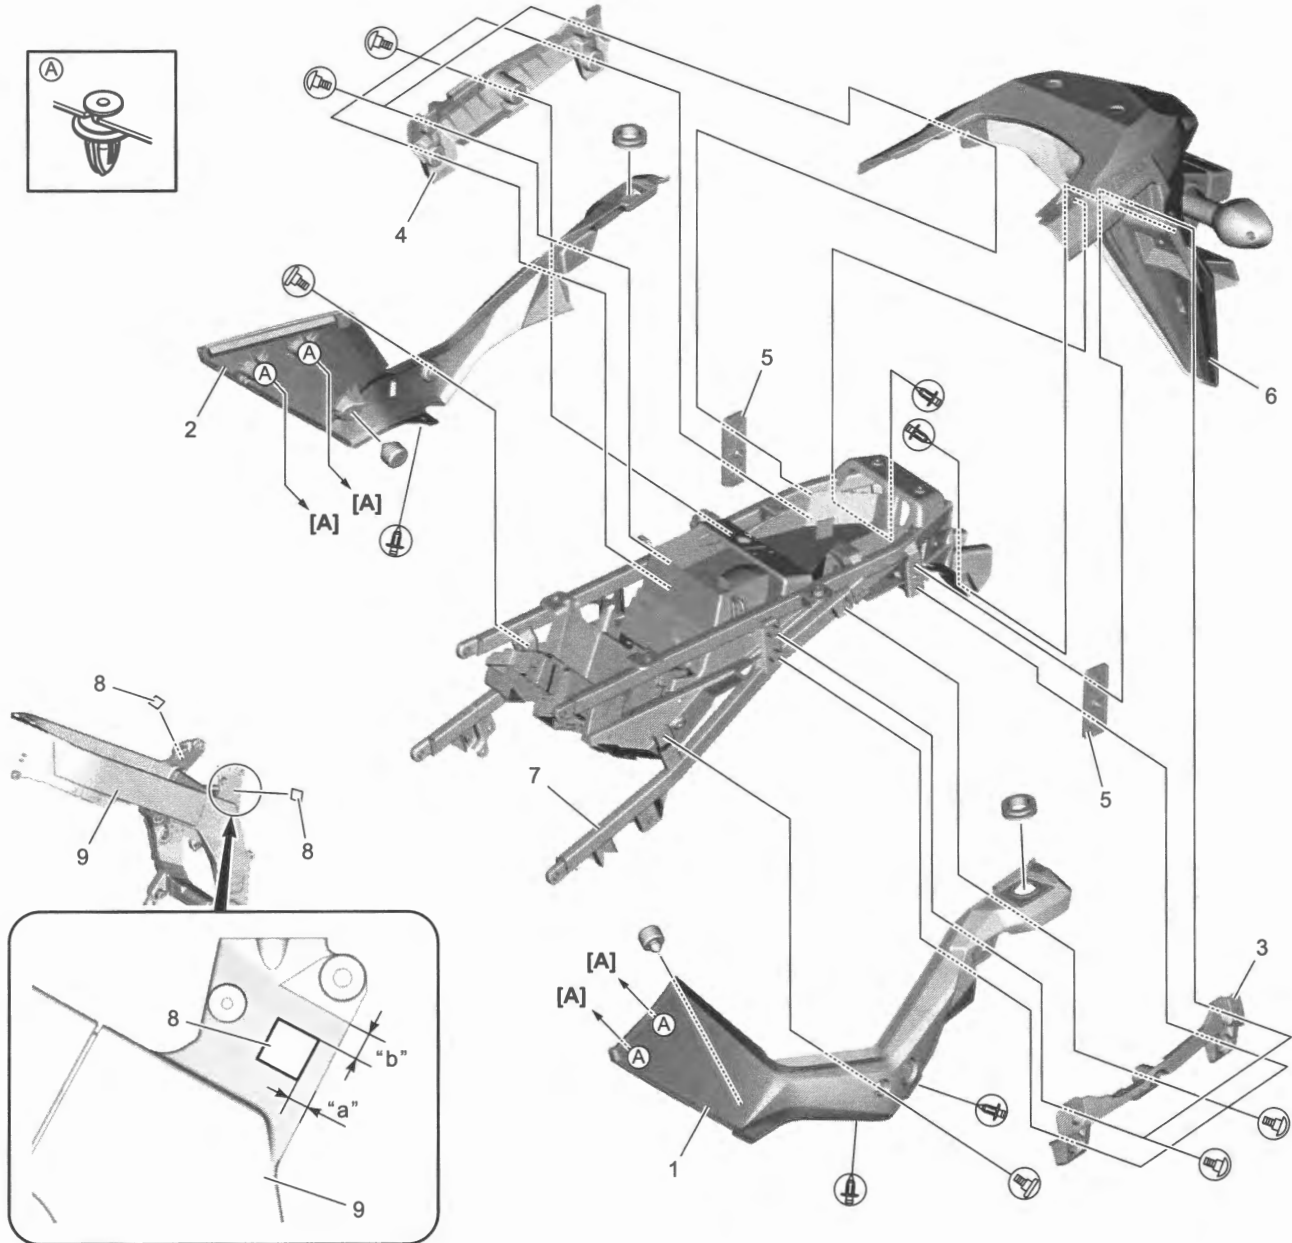


IH28K1940003-03

[A]: To fuel tank	4. Right rear frame cover	8. Frame cover cushion
1. Left frame cover	5. Frame cover spacer	9. Frame
2. Right frame cover	6. Rear fender (rear)	"a": 8 – 12 mm (0.32 – 0.47 in)
3. Left rear frame cover	7. Seat rail	"b": 13 – 17 mm (0.52 – 0.66 in)



Rear Fender (Front) / Battery Holder Construction

BENH28K29406003

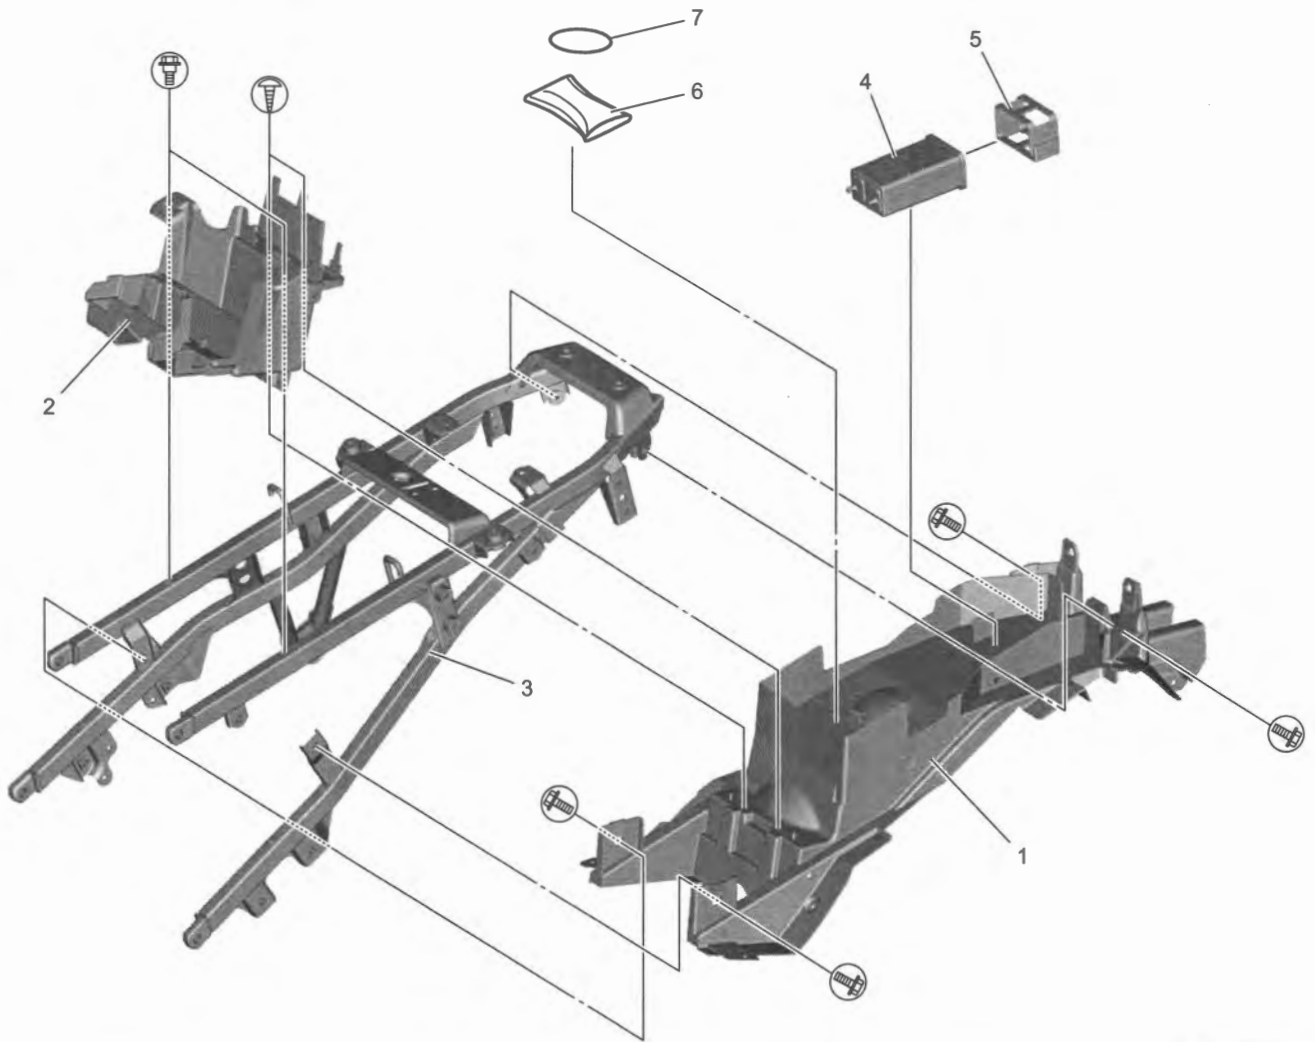


IH28K1940004-01

1. Rear fender (front)	4. EVAP canister (if equipped)	7. Tool band
2. Battery holder	5. Canister holder (if equipped)	
3. Seat rail	6. Tool assembly	

Front Fender Construction

BENH28K29406004



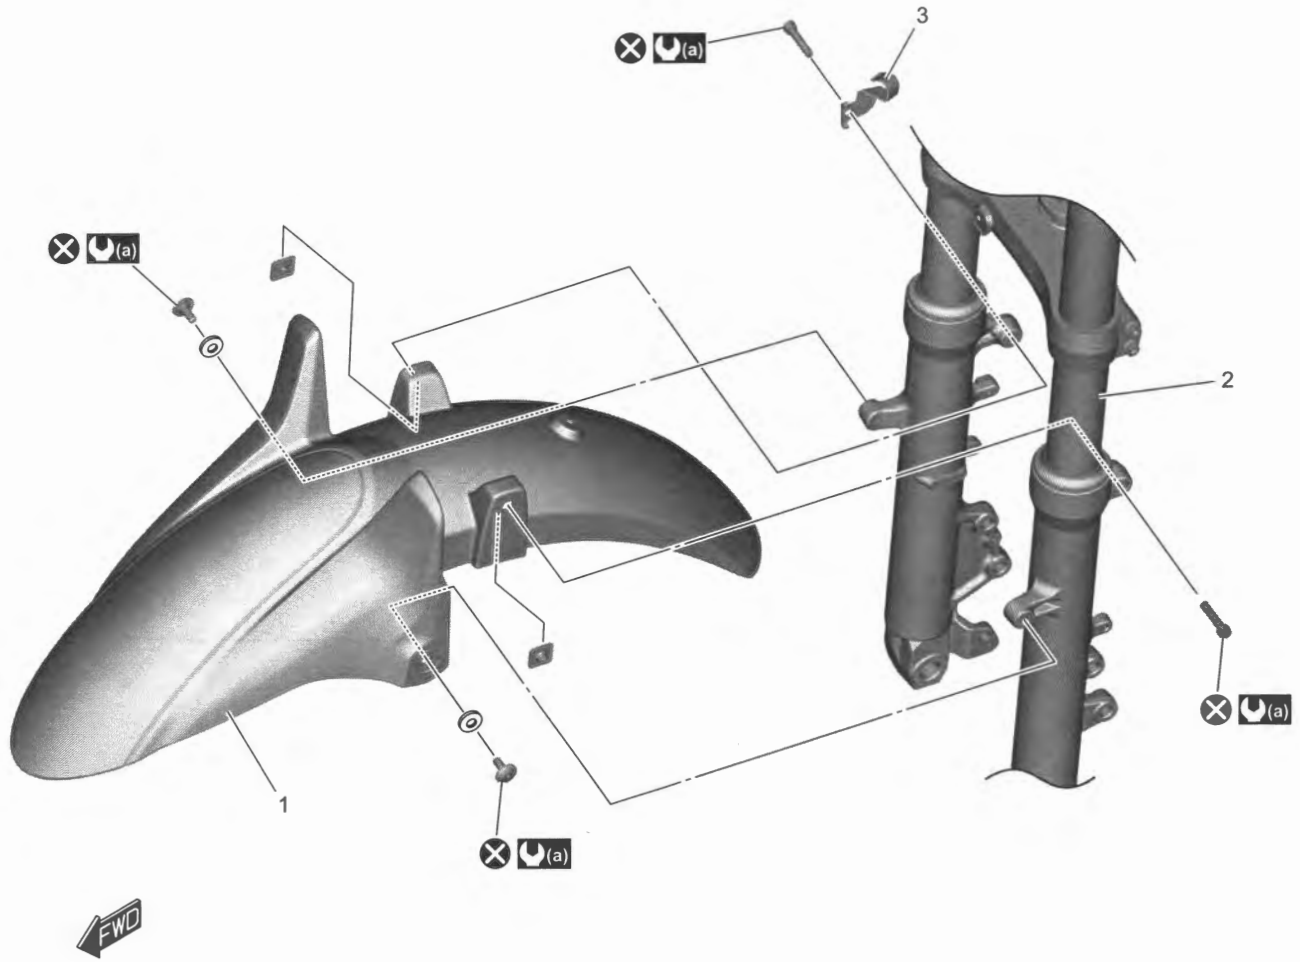


IH28K1940071-02

1. Front fender	3. Front brake hose clamp	⊗ : Do not reuse.
2. Front fork assembly	⌘(a) : 10 N-m (1.0 kgf-m, 7.5 lbf-ft)	

Knuckle Cover Construction (If Equipped)

BENH28K29406005

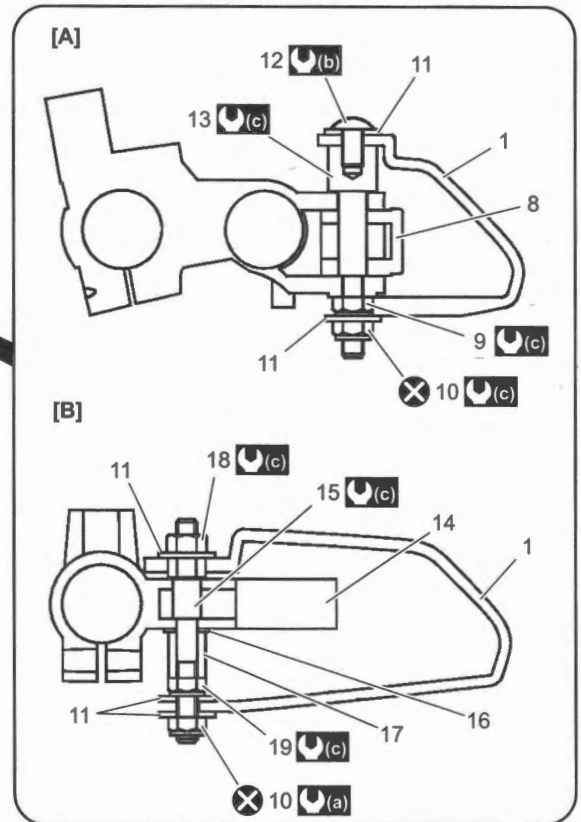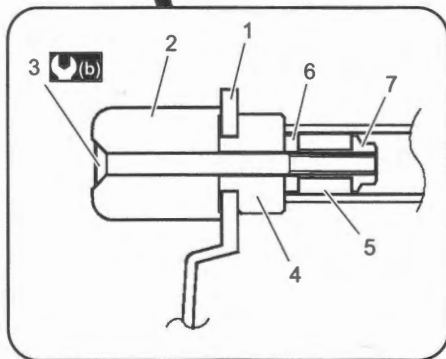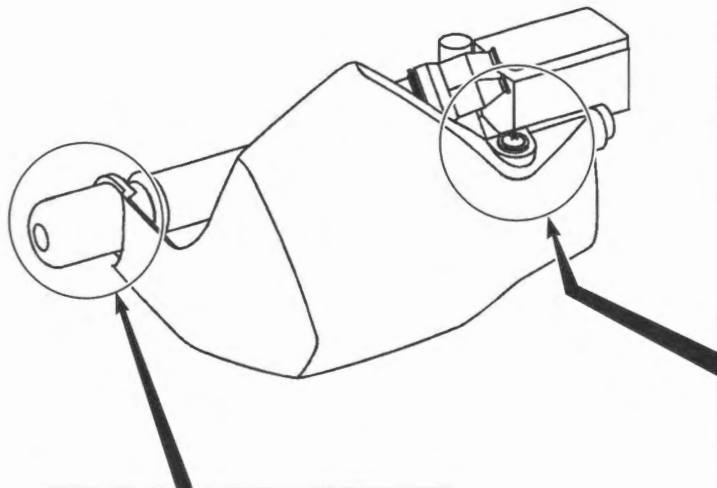


IH28K1940085-02

[A]: Brake lever side	8. Brake lever	17. Clutch lever pivot spacer
[B]: Clutch lever side	9. Brake lever nut	18. Knuckle cover upper nut
1. Knuckle cover	10. Knuckle cover lower nut	19. Clutch lever nut
2. Handlebar balancer	11. Knuckle cover washer	U(a): 1.7 N-m (0.17 kgf-m, 1.25 lbf-ft)
3. Handlebar balancer screw	12. Knuckle cover upper screw	U(b): 5.5 N-m (0.56 kgf-m, 4.05 lbf-ft)
4. Knuckle cover spacer	13. Brake lever pivot bolt	U(c): 5.9 N-m (0.60 kgf-m, 4.35 lbf-ft)
5. Handlebar balancer expander	14. Clutch lever	X 10: Do not reuse.
6. Expander washer	15. Clutch lever pivot bolt	
7. Handlebar balancer nut	16. Clutch lever pivot lower washer	

Under Cowling Construction (If Equipped)

BENH28K29406006

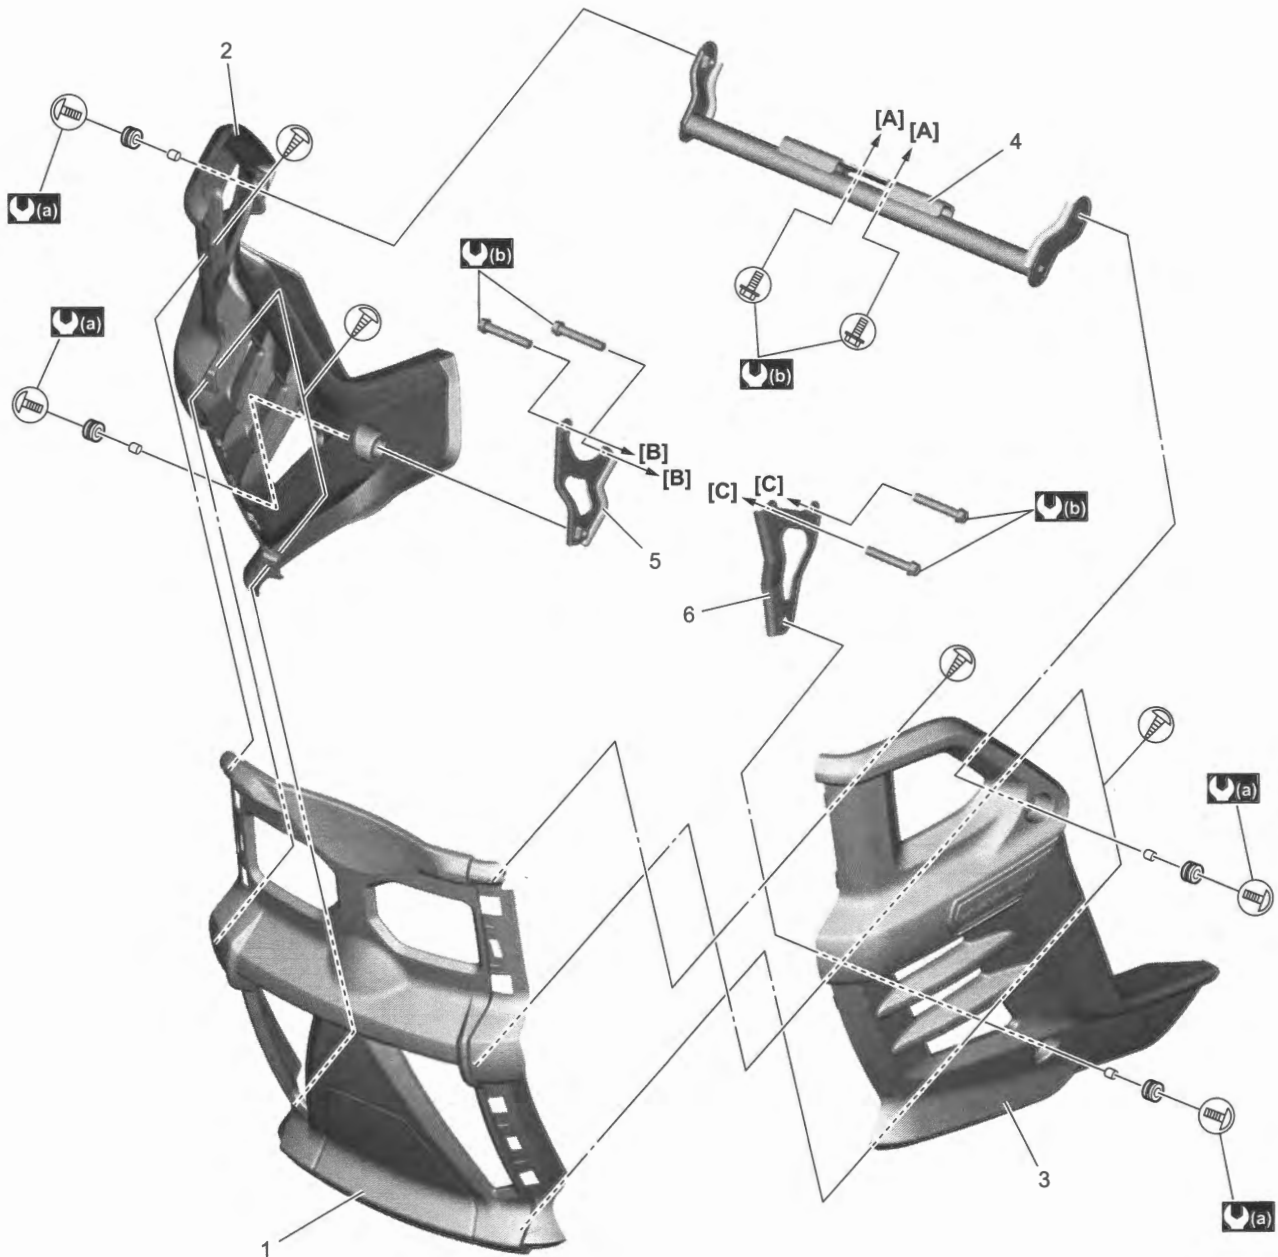


IH28K1940073-01

[A]: To No. 1 cylinder	2. Right side under cowling	6. Left under cowling side bracket
[B]: To clutch cover	3. Left side under cowling	(a) : 7.0 N·m (0.71 kgf·m, 5.20 lbf·ft)
[C]: To generator cover	4. Under cowling front bracket	(b) : 10 N·m (1.0 kgf·m, 7.5 lbf·ft)
1. Center under cowling	5. Right under cowling side bracket	

Fuel Tank Cushion Construction

BENH28K29406007

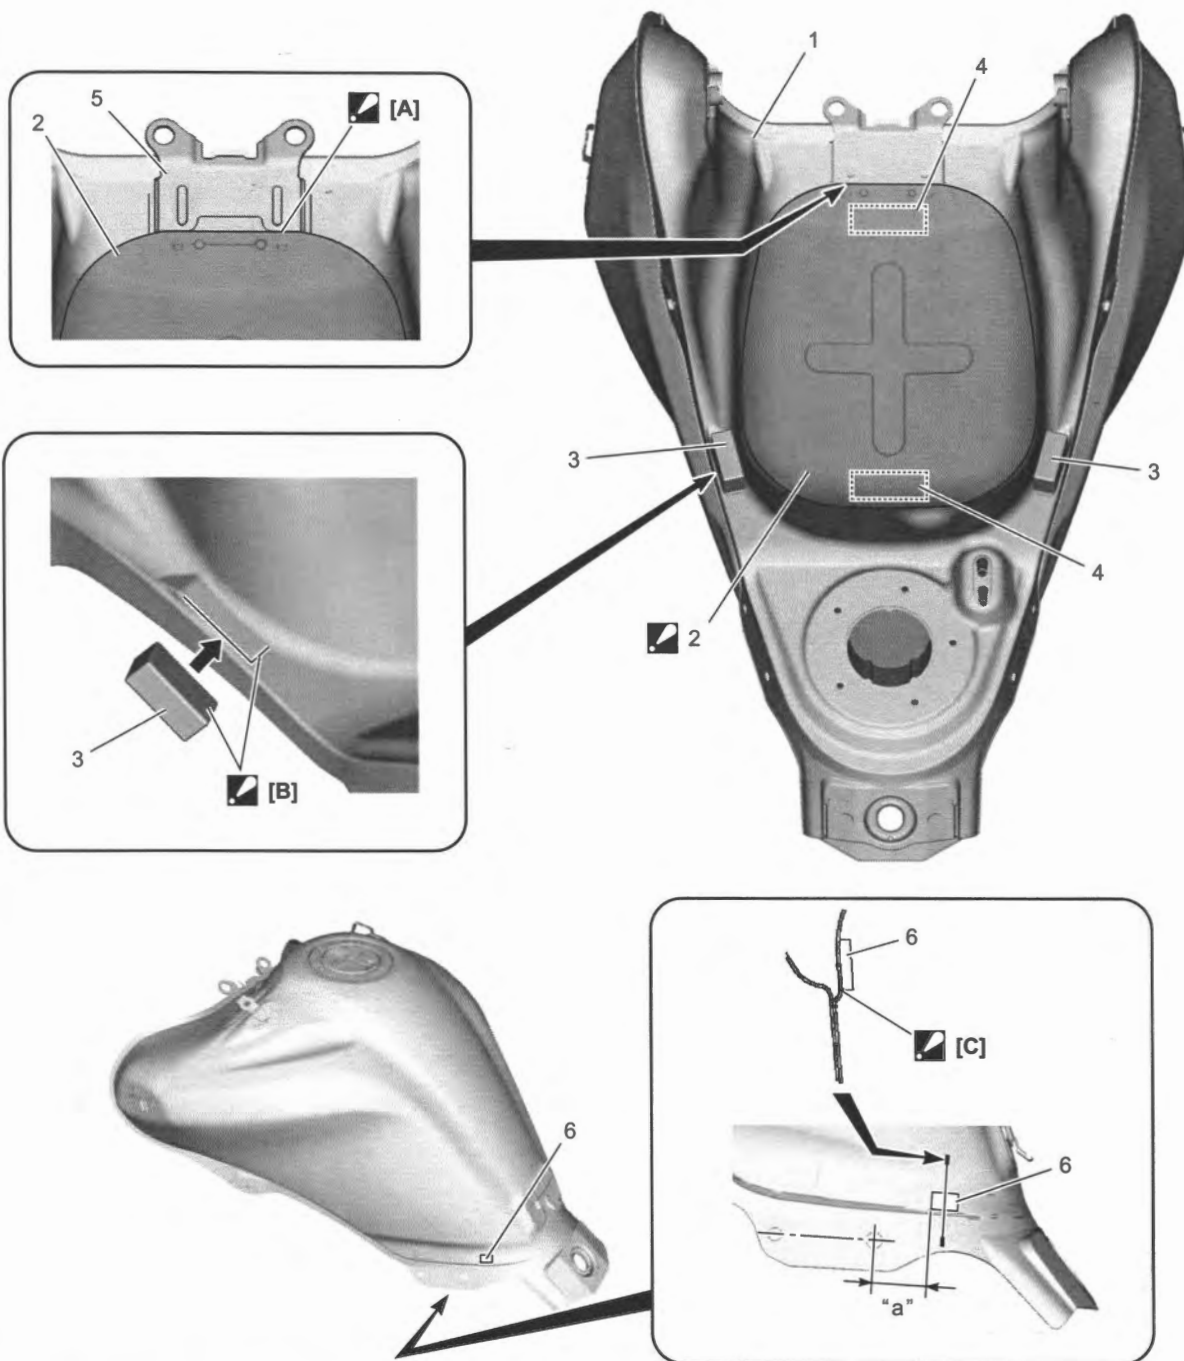


IH28K1940074-02

<p>☑ [A]: Stick the fuel tank center shield aligning with the end of the bracket.</p>	<p>☑ 2. Fuel tank center shield : Facing the aluminum film outside, stick the center shield using a double-stick tape.</p>	<p>6. Frame cover rear cushion</p>
<p>☑ [B]: Stick the fuel tank side cushion aligning with the end of the flat part on the lower inside of the fuel tank.</p>	<p>3. Fuel tank side cushion</p>	<p>"a": 36 – 40 mm (1.42 – 1.57 in)</p>
<p>☑ [C]: Stick the cushion along the end of the curved surface on the fuel tank.</p>	<p>4. Double-stick tape</p>	
<p>1. Fuel tank</p>	<p>5. Bracket</p>	

Fuel Tank Front Cover Cushion Construction

BENH28K29406008

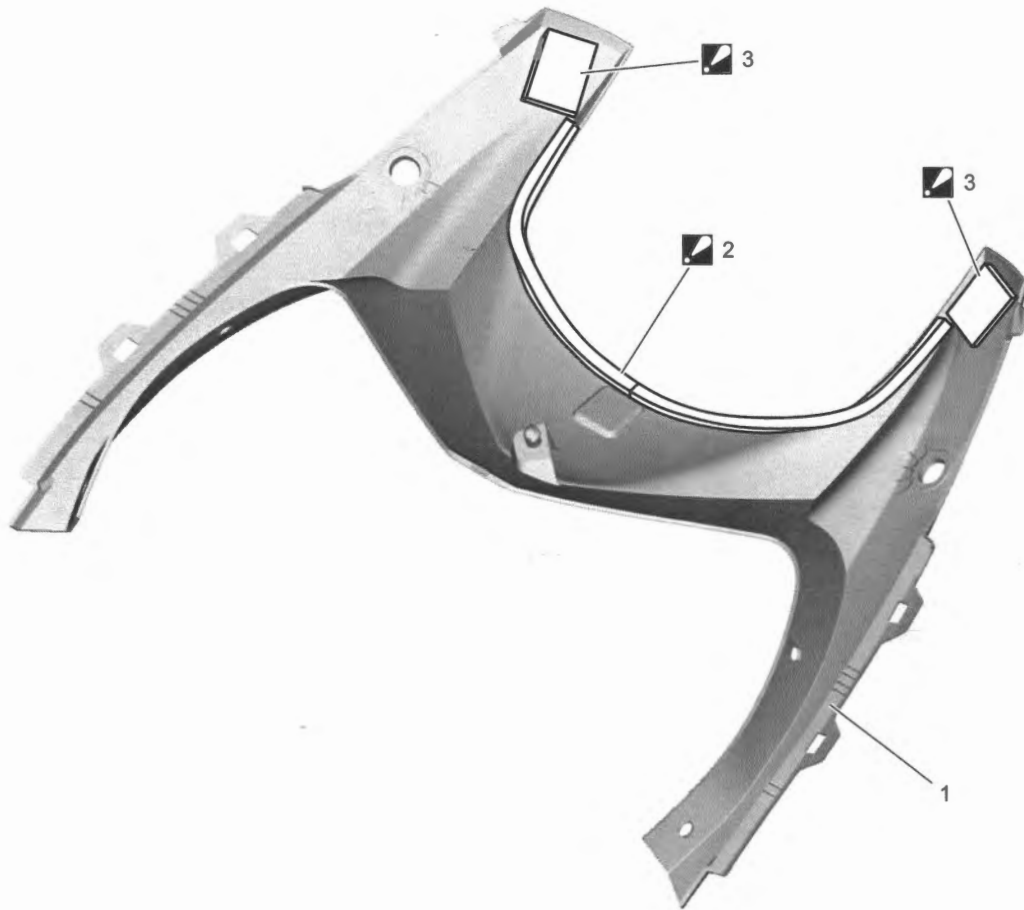


IH28K1940075-01


<p>1. Fuel tank front cover</p>	<p>2. Fuel tank front cover rubber : Stick the rubber aligning with the emboss line.</p>	<p>3. Fuel tank fastener : Stick the fastener aligning with the emboss line.</p>
---------------------------------	--	--

Lower Body Cowling Cushion Construction

BENH28K29406009

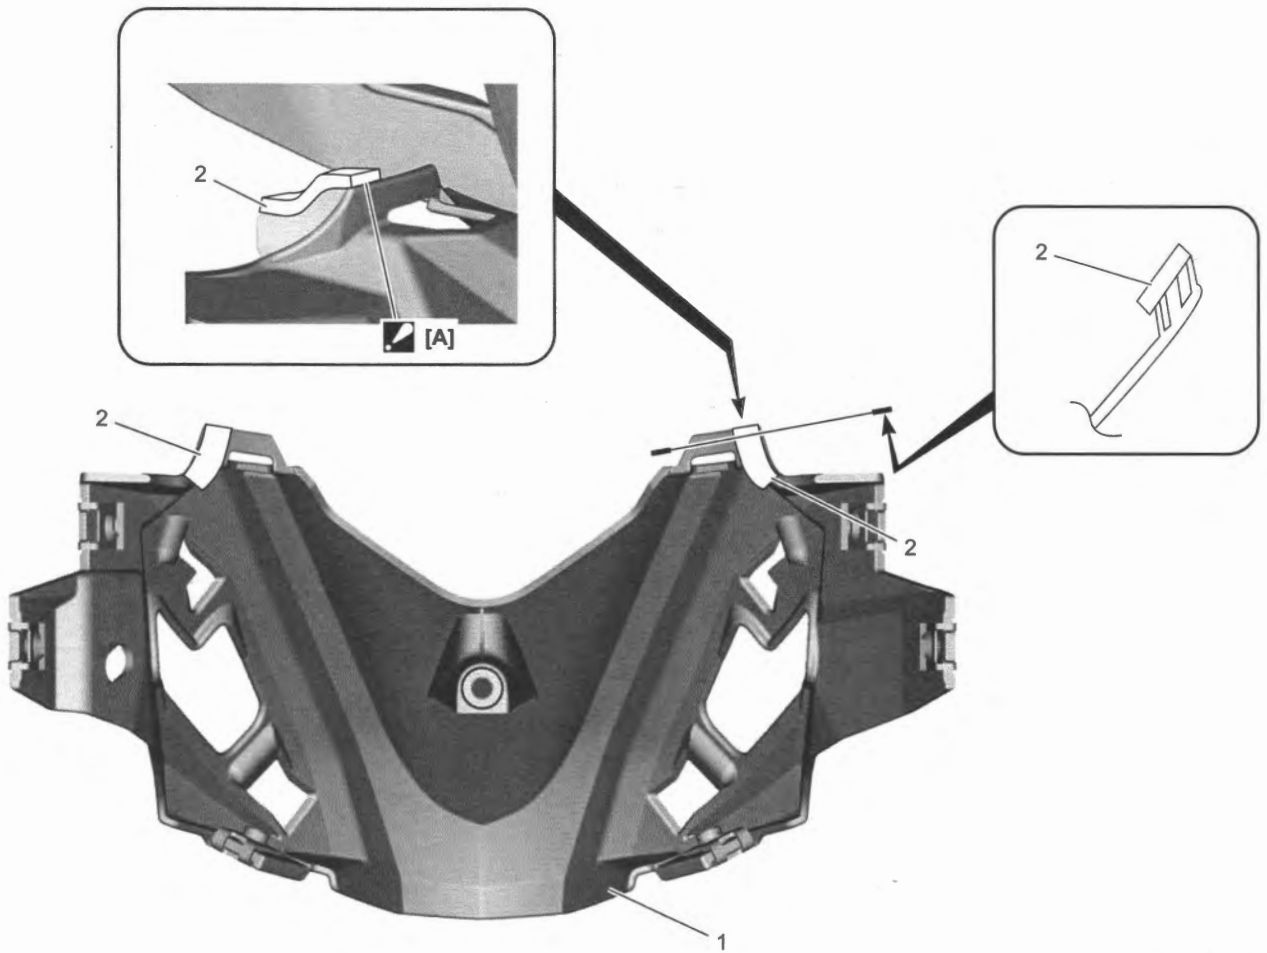


IH28K1940076-01


<p> [A]: Stick the cushion aligning with the end of curved surface.</p>	<p>1. Lower body cowling</p>	<p>2. Lower body cowling cushion</p>
--	------------------------------	--------------------------------------

Side Cowling Cushion Construction

BENH28K29406010

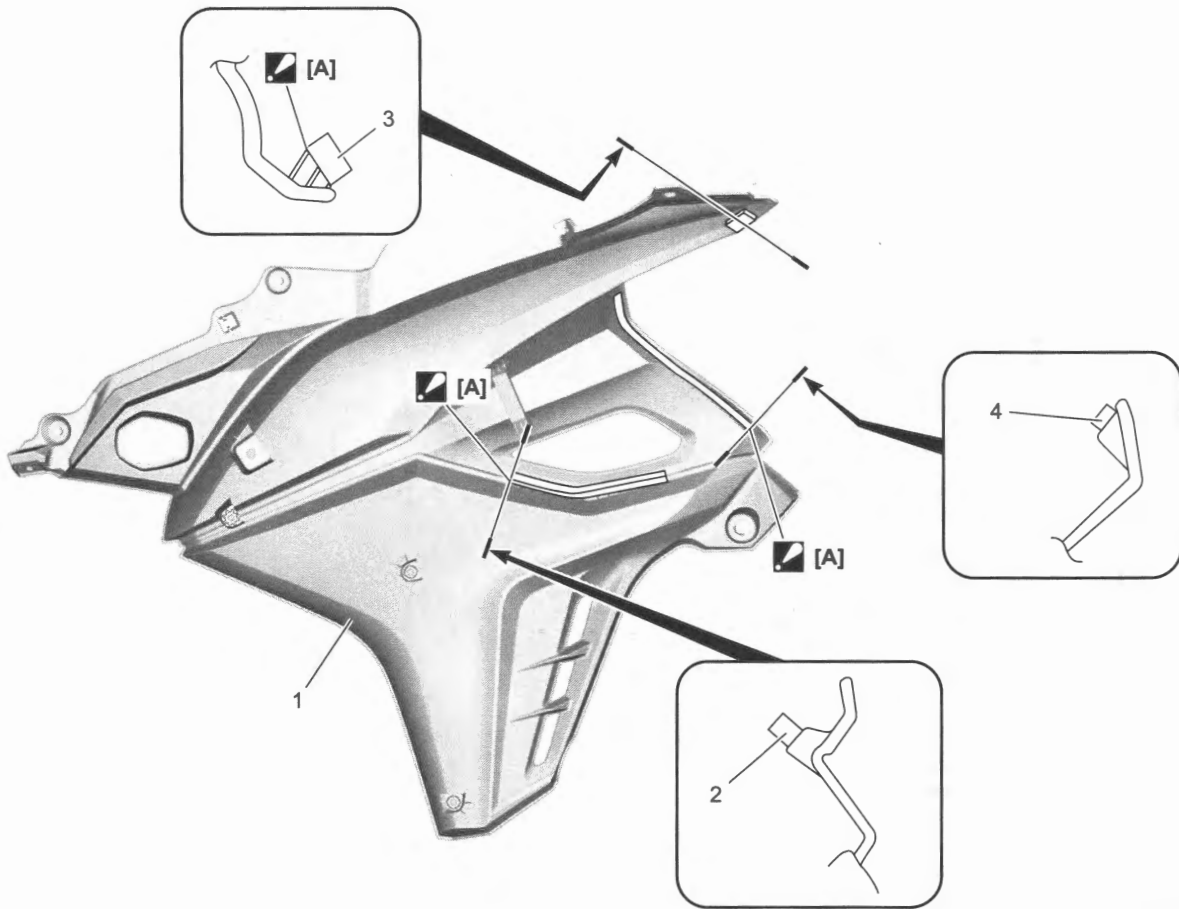



IH28K1940077-02

 [A]: Reference position for sticking	2. Side cowling lower cushion	4. Side cowling center cushion
1. Side cowling	3. Side cowling upper cushion	



Frame Cover Cushion Construction

BENH28K29406011

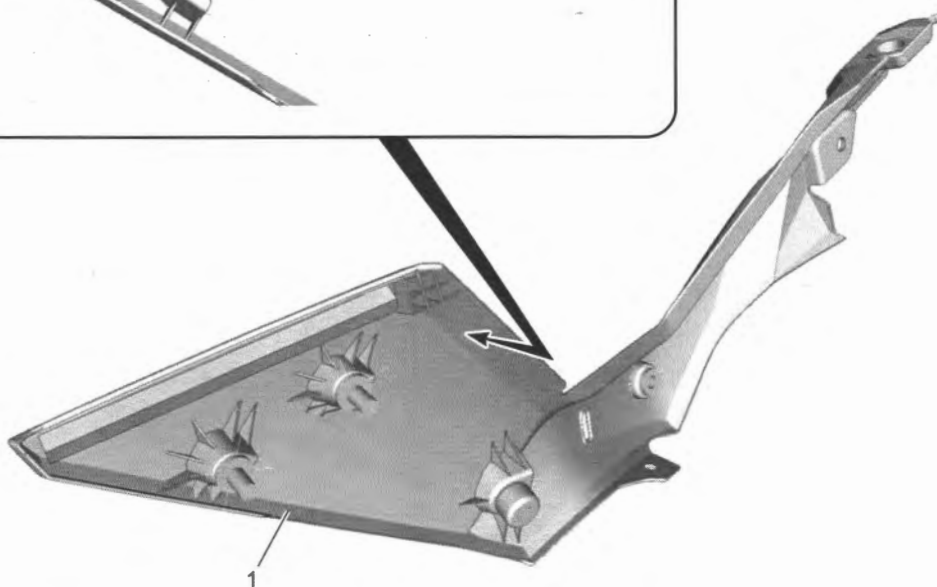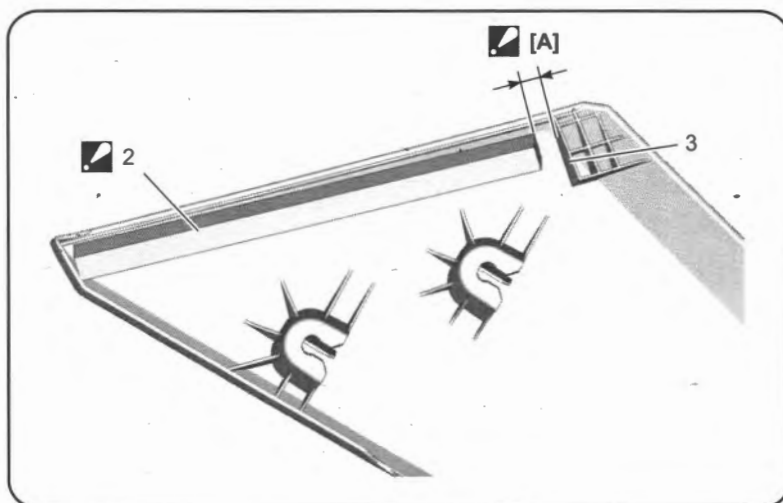


<p>☑ [A]: Leave space of more than 7.0 mm (0.28 in) between the frame cover front cushion and rib.</p> <p>1. Frame cover</p>	<p>☑ 2. Frame cover front cushion : Stick the cushion aligning with the emboss line.</p> <p>3. Rib</p>
--	--

IH28K1940078-02

Rear Fender (Front) Cushion Construction

BENH28K29406012

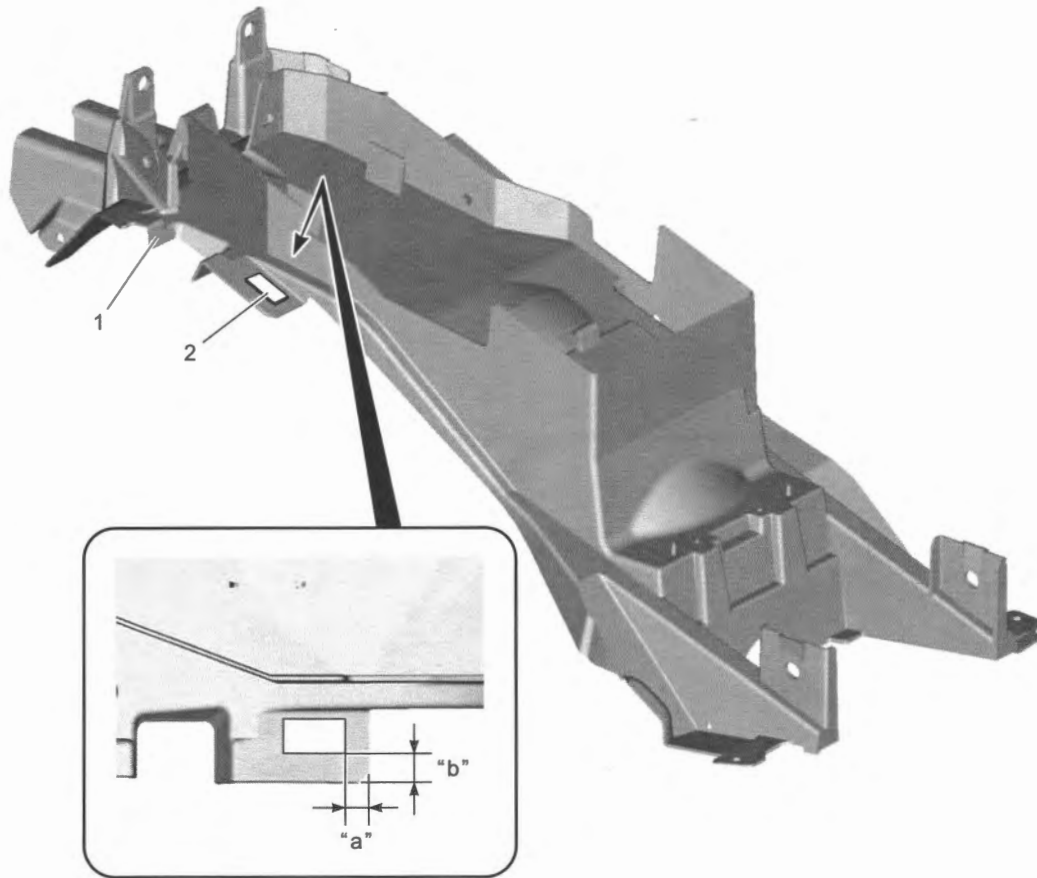


IH28K1940086-01

1. Rear fender (front)	"a": 10 mm (0.39 in)
2. Rear fender (front) cushion	"b": 13 mm (0.51 in)

Rear Fender (Rear) Cushion Construction

BENH28K29406013

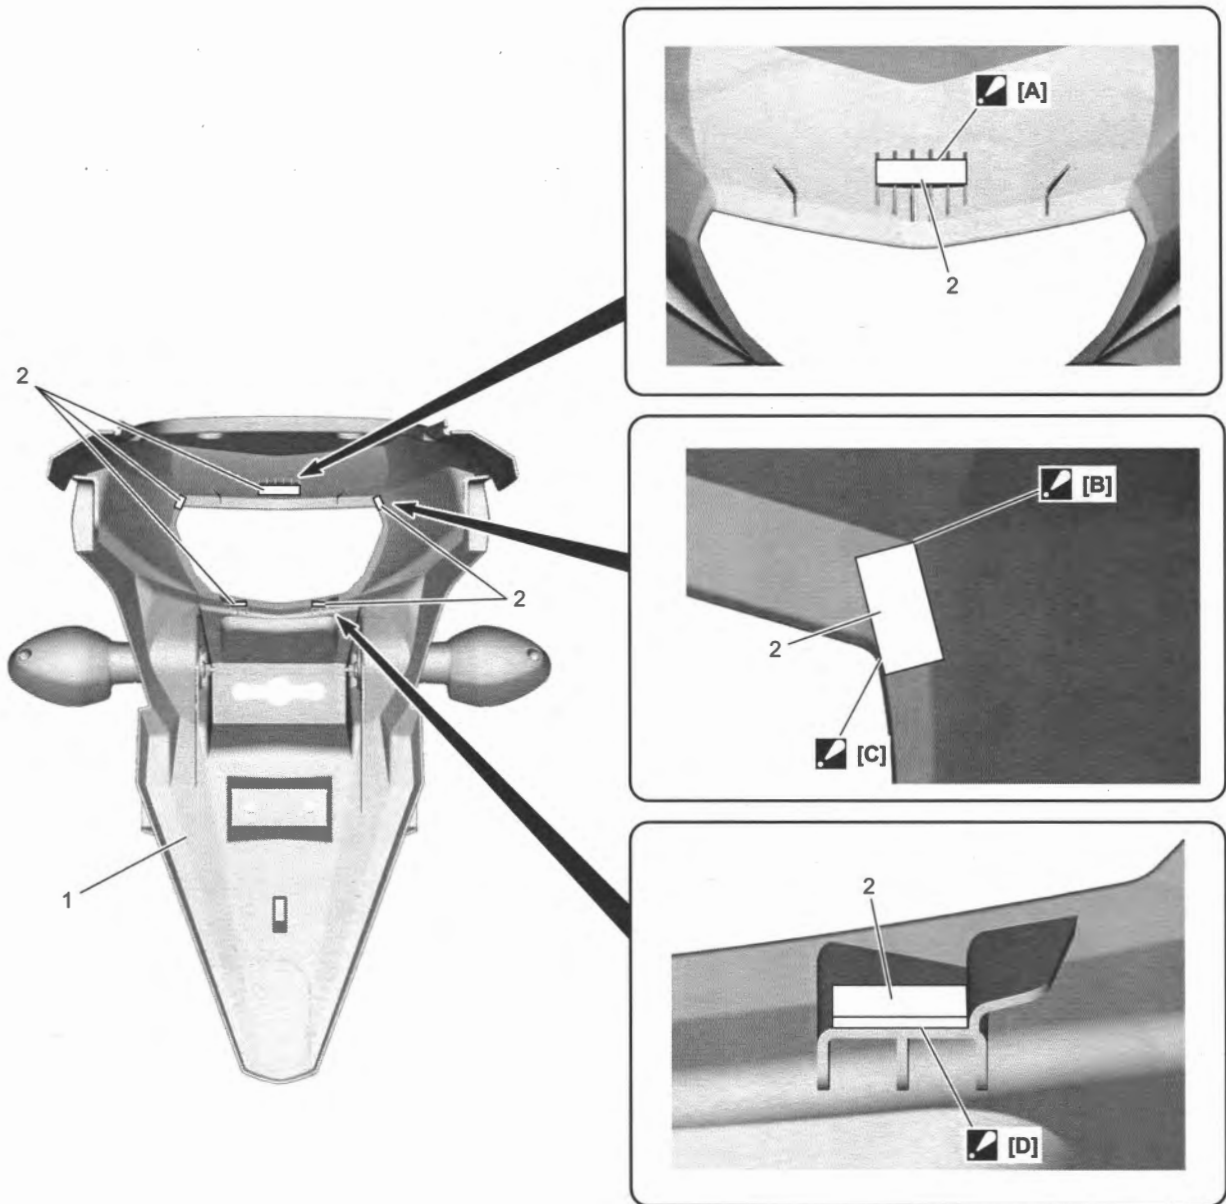


IH28K1940079-02

[A]: Stick the cushion aligning with the rib end.	[C]: Stick the cushion aligning with the end of curved surface.	1. Rear fender (rear)
[B]: Align the cushion end with the corner.	[D]: Stick the cushion aligning with the edge.	2. Rear fender (rear) cushion

Center Under Cowling Cushion Construction (If Equipped)

BENH28K29406014

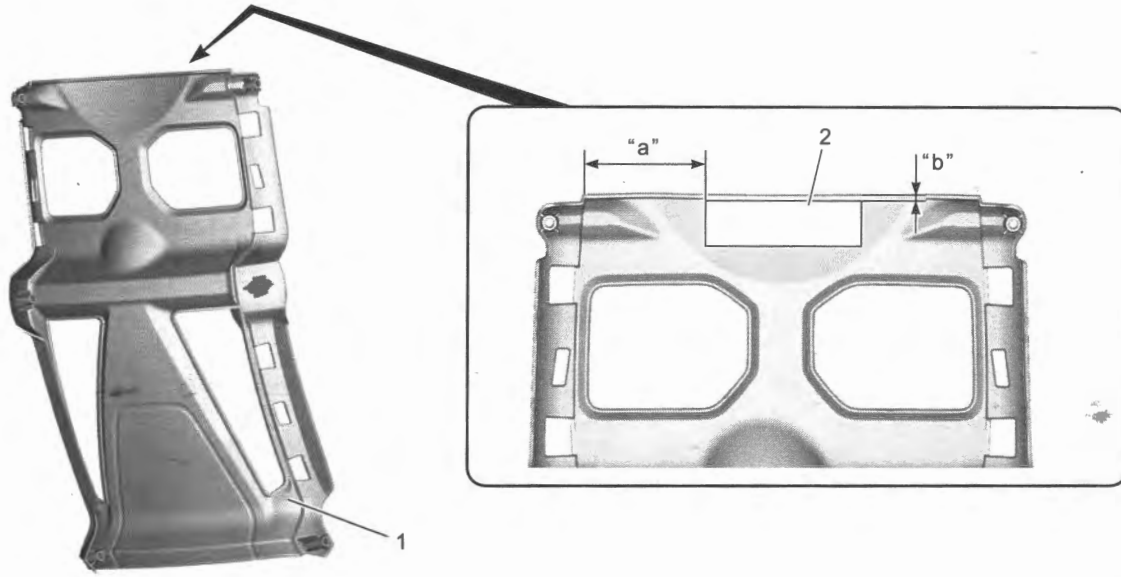


1. Center under cowling	"a": 56 – 60 mm (2.2 – 2.3 in)
2. Center under cowling cushion	"b": 0 – 2 mm (0 – 0.07 in)

IH28K1940080-01

Meter Panel Cushion Construction

BENH28K29406015

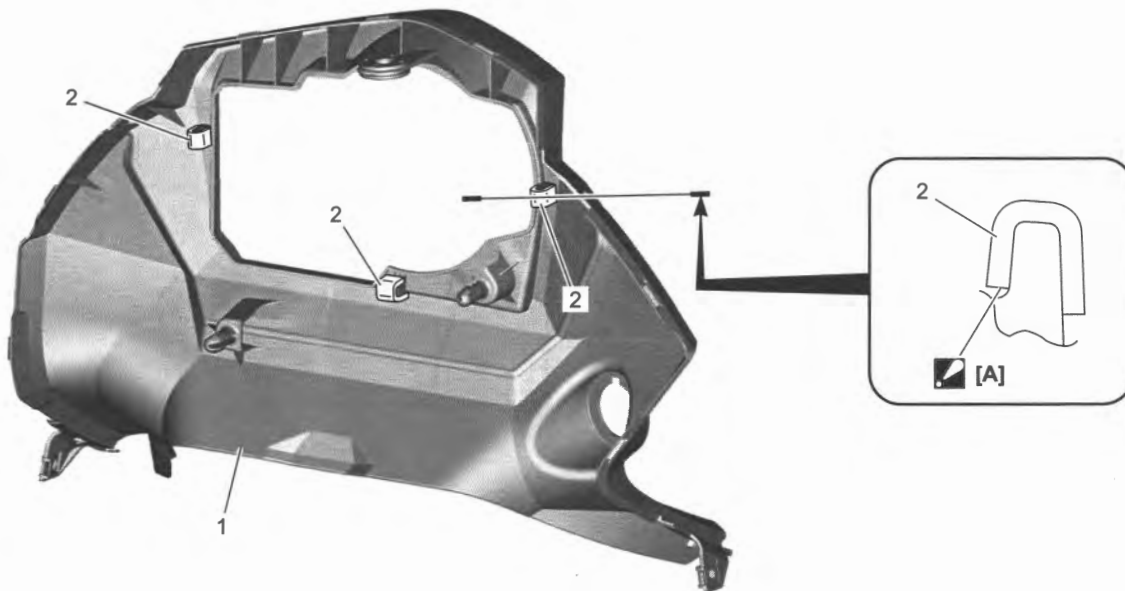


[A]: Stick the cushion aligning with the end of curved surface.	1. Meter panel	2. Meter panel cushion
---	----------------	------------------------

IH28K1940081-01

Battery Holder Cushion Construction

BENH28K29406016


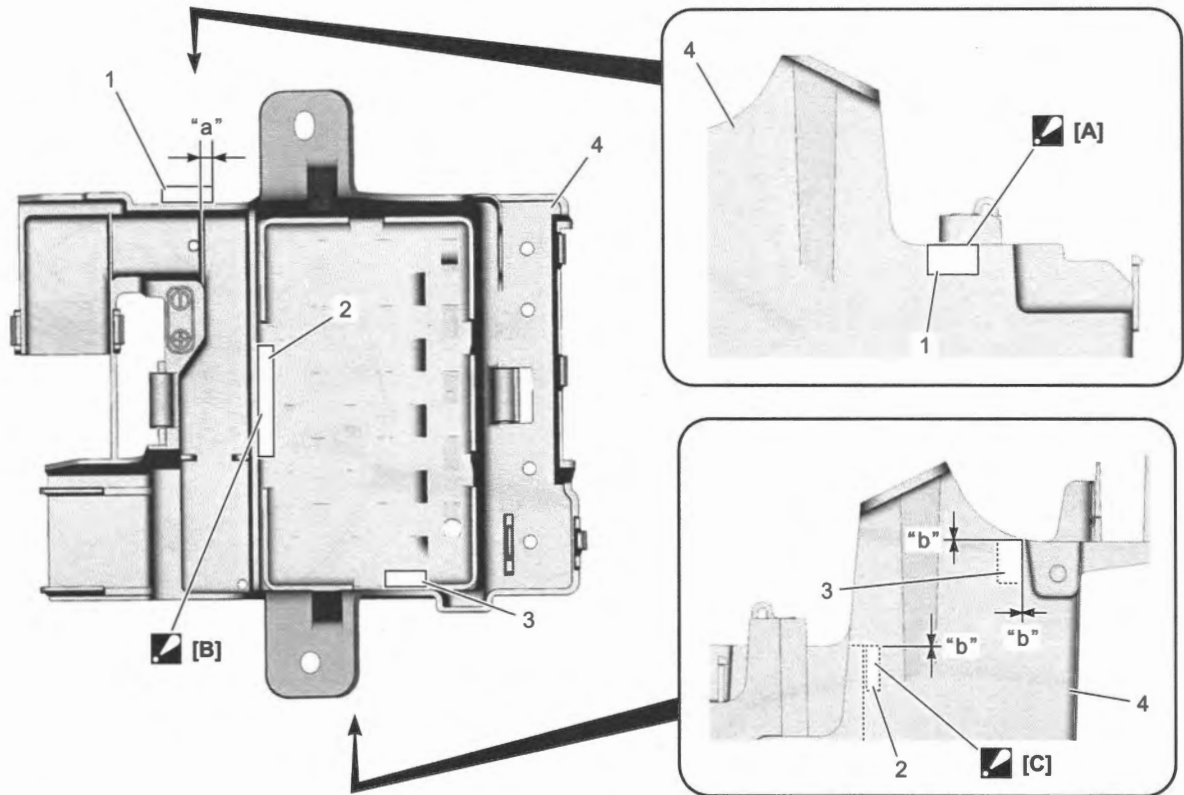


IH28K1940082-01

[A]: Stick the cushion along the edge of the battery holder.	1. Battery holder cushion	4. Battery holder
[B]: Stick the cushion in the center of the battery holder.	2. Battery protector	"a": 4 – 6 mm (0.16 – 0.23 in)
[C]: Stick the cushion starting from the upper end.	3. Battery protector	"b": 0 – 5 mm (0 – 0.19 in)

**Windscreen Cushion Construction**

BENH28K29406017

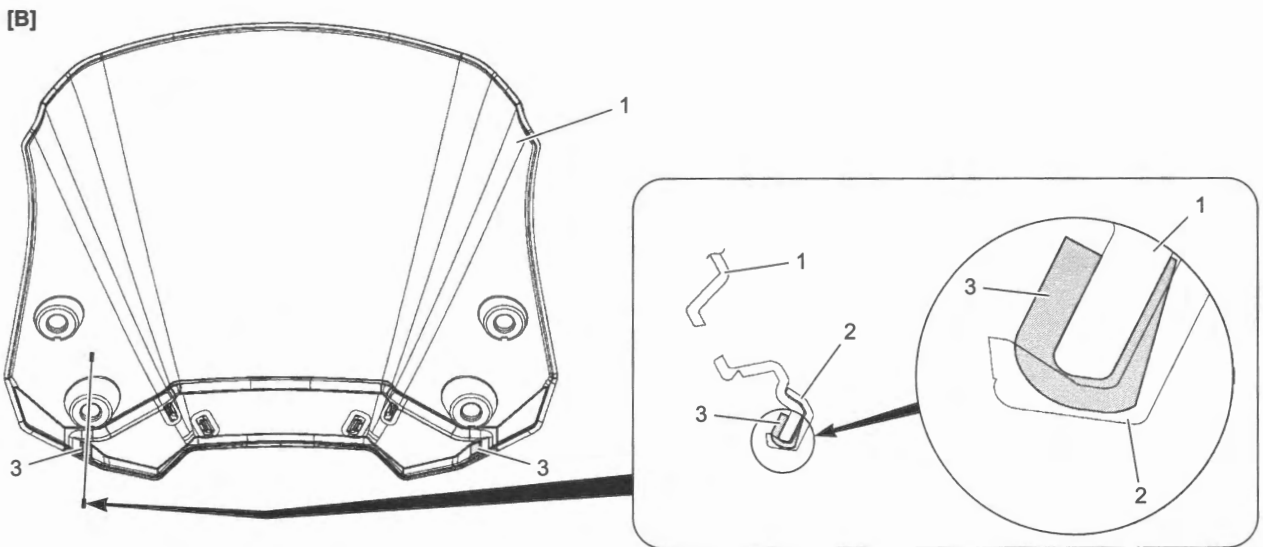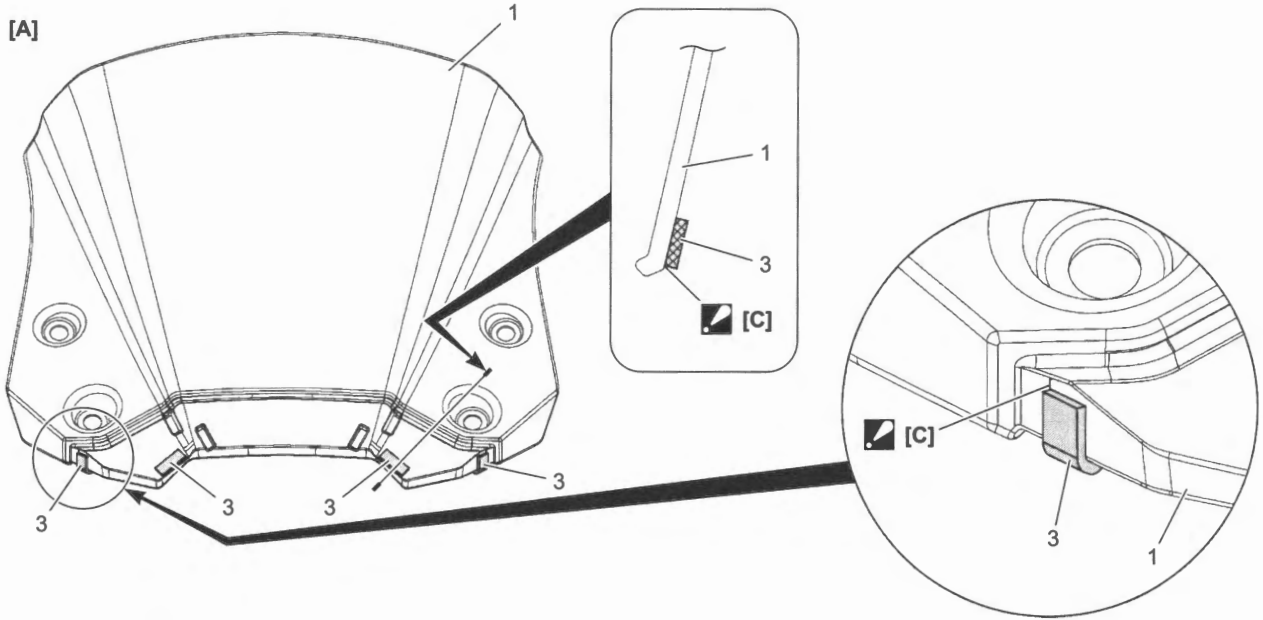

IH28K1940083-03


[A]: Front face	[C]: Stick the cushion aligning with the emboss line.	2. Windscreen cover
[B]: Back face	1. Windscreen	3. Windscreen cushion

**Clip Removal and Installation**

BENH28K29406018

**Type 1  
Removal**

- 1) Depress the head of clip center piece (1).
- 2) Pull out the clip (2).

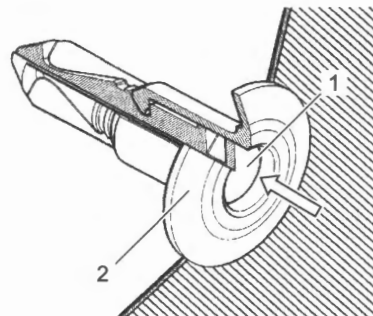


ID26J1940192-01

**Installation**

- 1) Let the center piece stick out toward the head so that the claws (1) closes.
- 2) Insert the clip into the installation hole.


**NOTE**

To prevent the claws (1) from damage, insert the clip all the way into the installation hole.

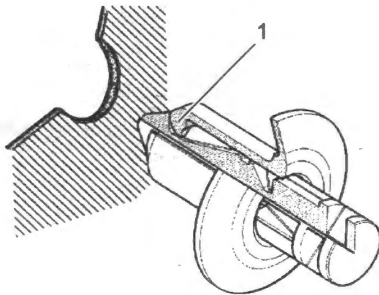

ID26J1940160-01


- 3) Push in the head of center piece until it becomes flush with the clip outside face.

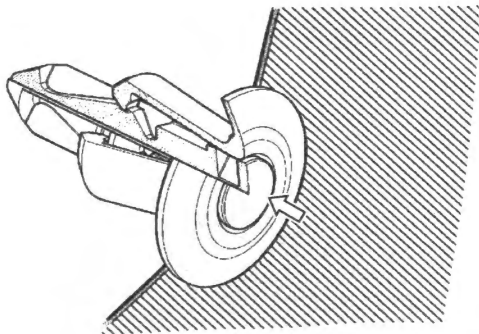

I649G1940007-02

**Type 2  
Removal**


- 1) Pull up the center piece.
- 2) Remove the clip.

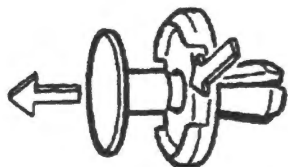

ID26J1940171-02

**Installation**

- 1) Keep the pin pulled out to close the claws.
- 2) Set the clip into the fitting hole.
- 3) Push in the center piece.

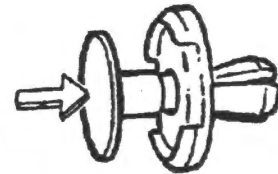

ID26J1940172-02

**Seat Removal and Installation**

BENH28K29406019

**Removal**


- 1) Unlock the seat with the ignition key (1).
- 2) Remove the seat.



IH28K1940005-01

**Installation**

Slide the seat hooks into the seat hook retainers and push down firmly until the seat snaps into the locked position.

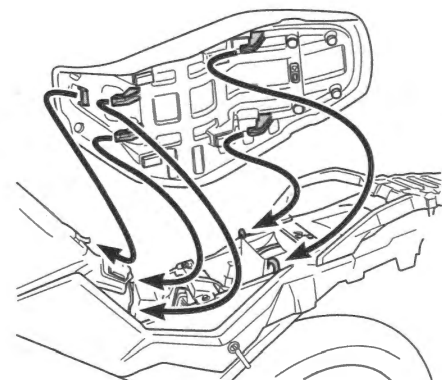


IH28K1940006-01

## Seat Lock Cable / Seat Lock Assembly Removal and Installation

BENH28K29406020


### Removal

- 1) Remove the left frame cover. (Page 9D-21)
- 2) Remove the seat lock guard (1) and striker support bracket (2).

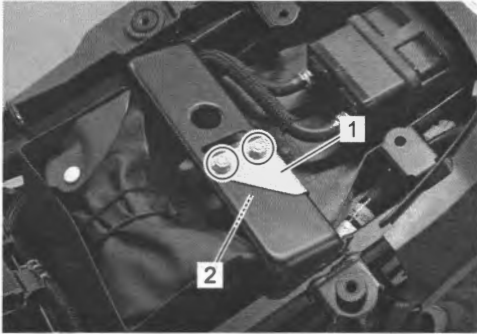


IH28K1940007-02

- 3) Disconnect the seat lock cable (1) from the striker support bracket.

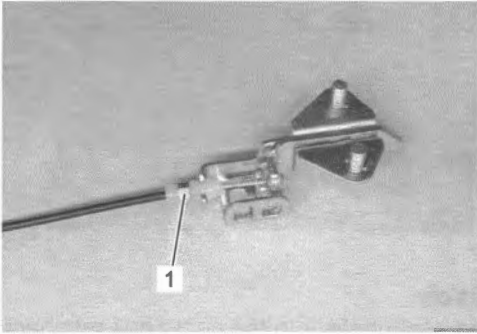

IH28K1940008-01

- 4) Remove the seat lock plate (1), seat lock cable guide (2) and seat lock assembly (3).

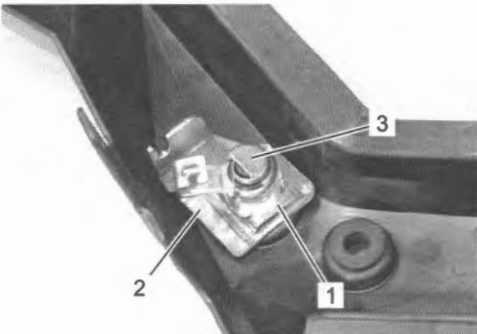

IH28K1940009-01


### Installation

- 1) Install the seat lock assembly and seat lock cable. Refer to "Seat Lock Cable Routing Diagram" (Page 9D-1).

- 2) Tighten the striker support bracket nut (1) to the specified torque.

### Tightening torque

Striker support bracket nut (a): 8.8 N·m (0.90 kgf-m, 6.50 lbf-ft)

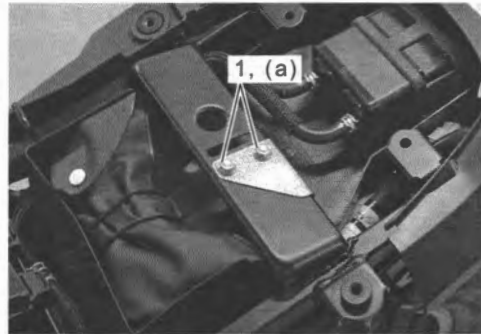

IH28K1940010-02


- 3) Install the left frame cover. (Page 9D-21)

## Sport Carrier Removal and Installation

BENH28K29406021

### Removal

- 1) Remove the seat. (Page 9D-19)
- 2) Remove the sport carrier (1).

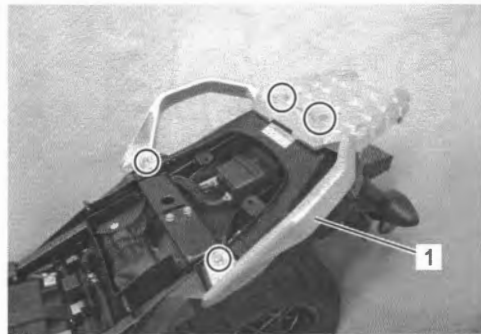


IH28K1940011-01

### Installation

Install the sport carrier in the reverse order of removal. Pay attention to the following point:

- Apply thread lock to the sport carrier bolts (1) and tighten it.

"A": Thread lock cement 99000-32150 (THREAD LOCK CEMENT 1322D)

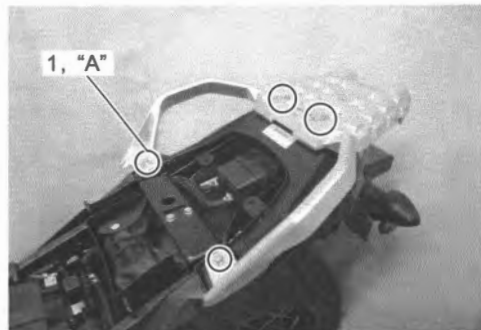

IH28K1940012-01



## Rear Frame Cover / Frame Cover Removal and Installation


BENH28K29406022

### Removal

- 1) Remove the seat. (Page 9D-19)
- 2) Remove the rear frame cover (1).


### NOTE

For removal and installation of the rear frame cover, the same procedures is applicable to both right and left parts.

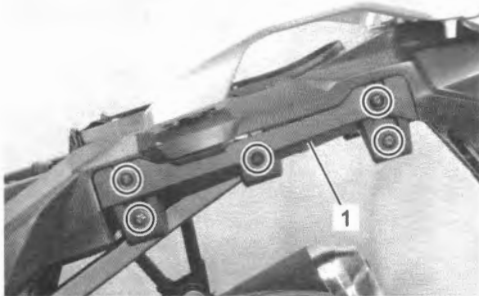

IH28K1940013-01

- 3) Remove the sport carrier. (Page 9D-20)
- 4) Remove the screws (1) and clips (2). (Page 9D-18)

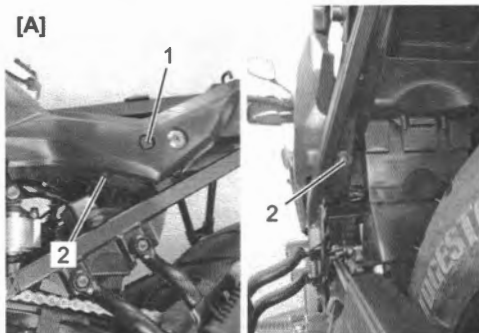

IH28K1940014-01



IH28K1940015-01


[A]: Left side

[B]: Right side

- 5) Remove the frame cover (1).


### NOTE

The right and left frame cover hooks (2) are located symmetrically.

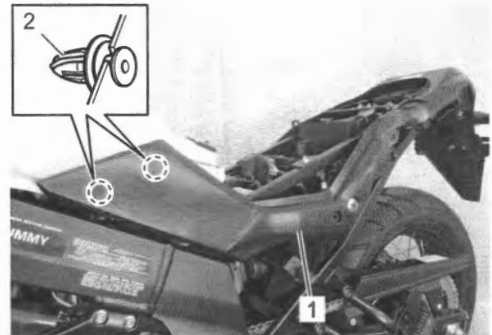

IH28K1940016-01

- 6) For left frame cover, disconnect the seat lock cable (1) from seat lock assembly (2).

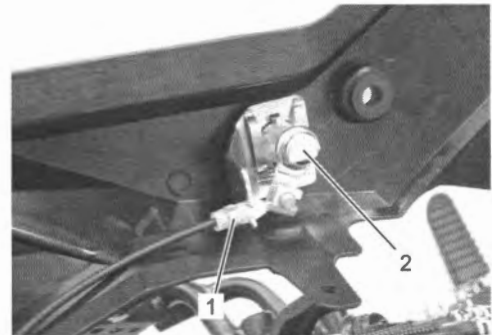


IH28K1940017-01

- 7) Remove the seat lock assembly from left frame cover, if necessary. (Page 9D-20)


**Installation**

Install the frame cover and rear frame cover in the reverse order of removal. Pay attention to the following points:

- Fit the frame cover (1) to the rear fender (rear) (2) securely.

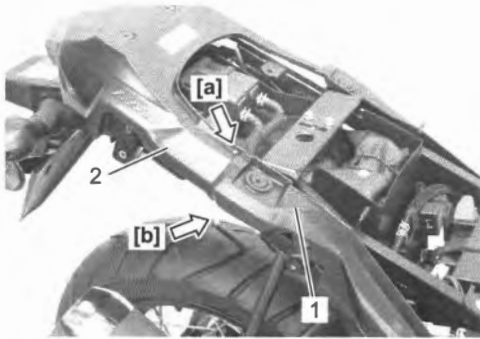


IH28K1940018-01

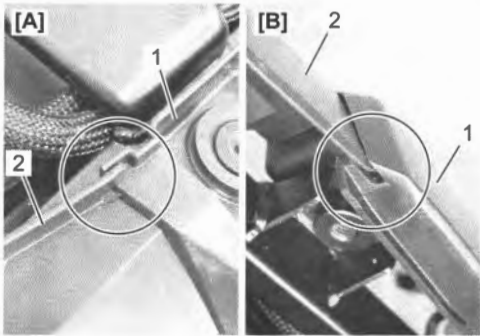

IH28K1940019-01

[A]: View [a]	[B]: View [b]
---------------	---------------

- Install the rear frame cover (1) and tighten the screws (16 mm (0.63 in)) (2) and screws (12 mm (0.47 in)) (3) securely.

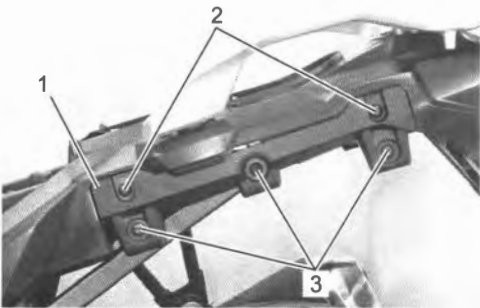

IH28K1940020-01


**Battery Holder Removal and Installation**

BENH28K29406023

**Removal**


- 1) Remove the battery. (Page 1J-11)
- 2) Remove the frame covers. (Page 9D-21)

- 3) Remove the starter relay (1). (Page 1I-6)
- 4) Remove the ECM (2). (Page 1C-4)
- 5) Remove the fuse box/relay box (3).

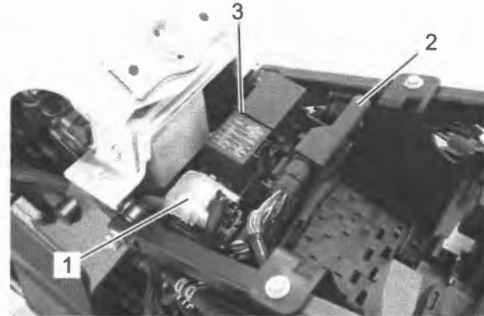


IH28K1940021-01

- 6) Remove the turn signal relay (1) and TO sensor (2).

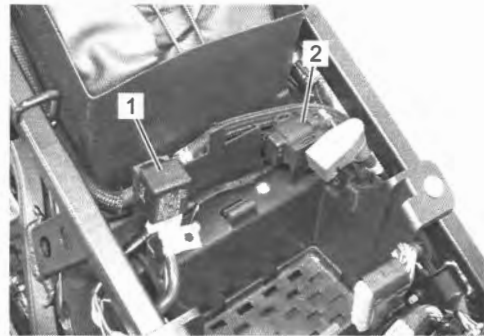


IH28K1940022-02

- 7) Remove the clips (1). (Page 9D-18)

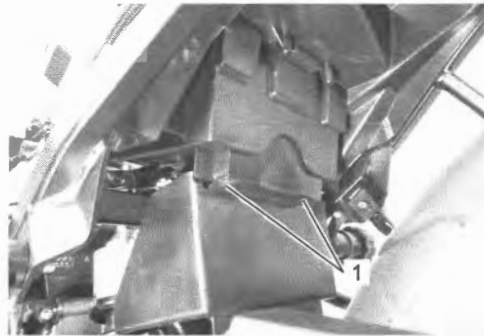

IH28K1940023-01

- 8) Disconnect the wiring harness clamp (1) and remove the battery holder (2).

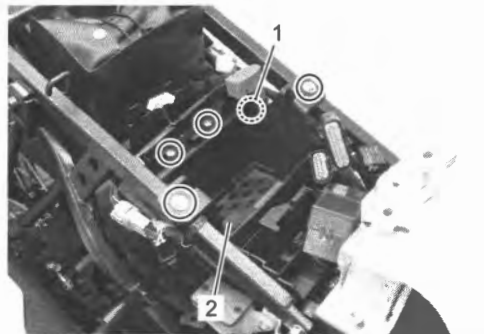

IH28K1940024-01

**Installation**

Install the battery holder in the reverse order of removal. Pay attention to the following point:

- Route the wiring harness properly. Refer to "Wiring Harness Routing Diagram" in Section 9A (Page 9A-7).

**Rear Fender (Rear) Removal and Installation**

BENH28K29406024


**Removal**

- 1) Remove the seat. (Page 9D-19)
- 2) Remove the sport carrier. (Page 9D-20)
- 3) Remove the rear frame cover. (Page 9D-21)
- 4) Disconnect the turn signal/license plate light lead wire coupler (1).



IH28K1940025-01

- 5) Remove the clips (1). (Page 9D-18)

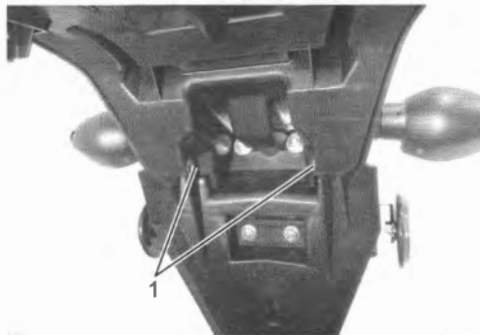


IH28K1940026-01

- 6) Remove the rear fender (rear) (1).



IH28K1940027-01

- 7) Remove the right and left frame cover spacers (1), if necessary.

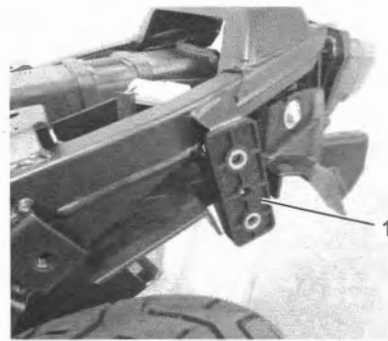

IH28K1940028-01

**Installation**


Install the rear fender (rear) in the reverse order of removal.

**Rear Fender (Front) Removal and Installation**

BENH28K29406025

**Removal**

- 1) Remove the seat. (Page 9D-19)
- 2) Remove the sport carrier. (Page 9D-20)
- 3) Remove the frame covers. (Page 9D-21)
- 4) Remove the rear fender (rear). (Page 9D-23)
- 5) Remove the EVAP canister (if equipped). (Page 1B-12)
- 6) Remove the rear combination light. (Page 9B-8)
- 7) Remove the battery holder. (Page 9D-22)
- 8) Disconnect the wiring harness clamps (1).

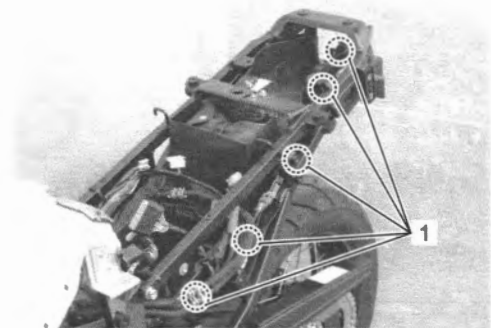

IH28K1940029-01

## 9D-24 Exterior Parts:

9) Remove the reservoir tank bolt (1).

### NOTE


Do not turn the reservoir tank upside down.



IH28K1940030-01


10) Remove the rear fender (front).

[A]

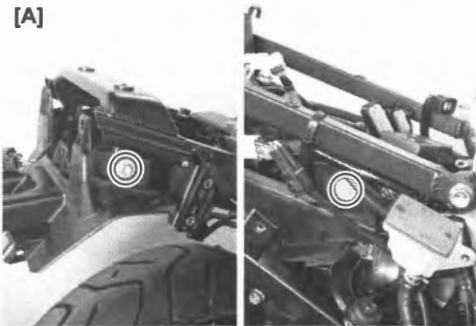

IH28K1940031-01

[B]

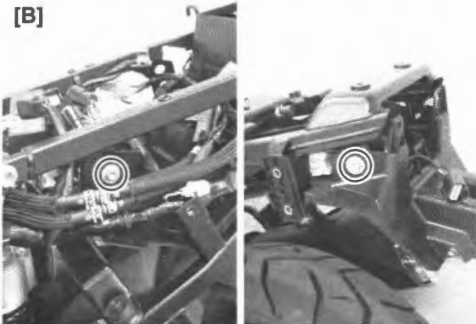

IH28K1940032-01

[A]: Right side

[B]: Left side

### Installation

Install the rear fender (front) in the reverse order of removal. Pay attention to the following points:

- Route the wiring harness properly. Refer to "Wiring Harness Routing Diagram" in Section 9A (Page 9A-7).
- Connect purge hose and surge hose properly (if equipped). Refer to "EVAP Canister Hose Routing Diagram (If Equipped)" in Section 1B (Page 1B-8).

## Front Side Cover Removal and Installation

BENH28K29406026

### NOTE

For removal and installation of the front side cover, the same procedures are applicable to both right and left parts.

### Removal

1) Remove the screws (1).



IH28K1940033-01


2) Remove the clip (1). (Page 9D-18)



IH28K1940034-01


3) Remove the front side cover as follows.

a) Move the front side cover outward and unhook the hooks (1).

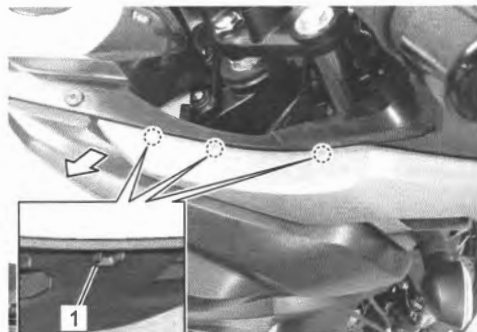

IH28K1940035-01

- b) Move the front side cover forward and unhook the hooks (1).

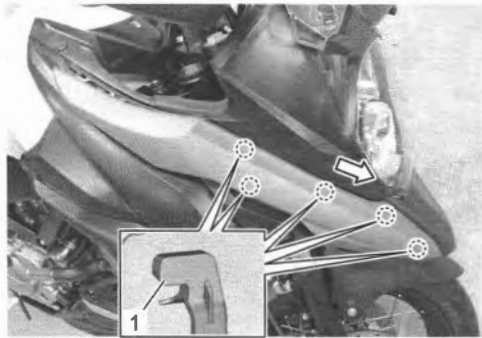

IH28K1940036-01

**Installation**


Install the front side cover in the reverse order of removal.

**Fuel Tank Front Cover Removal and Installation**

BENH28K29406027


**Removal**

- 1) Remove the front side covers. (Page 9D-24)
- 2) Remove the clips (1) and screws (2). (Page 9D-18)

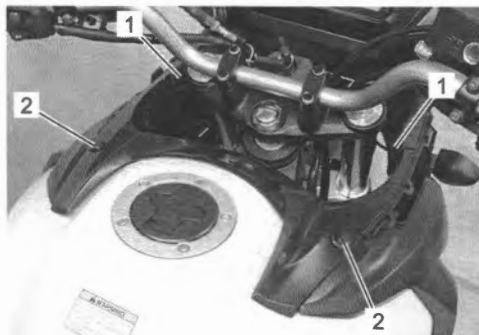


IH28K1940037-01

- 3) Remove the fuel tank front cover as follows.
  - a) Move the fuel tank front cover upward and disconnect the bushing (1).

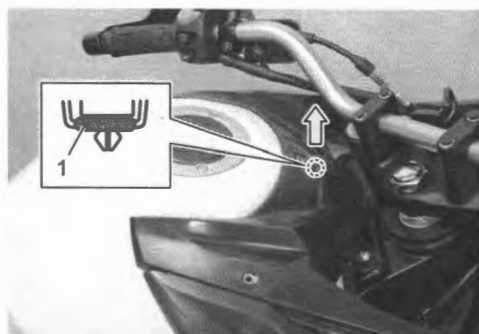

IH28K1940038-01

- b) Turn the end of the fuel tank front cover (1) inward a little and disconnect it from the meter panel (2).

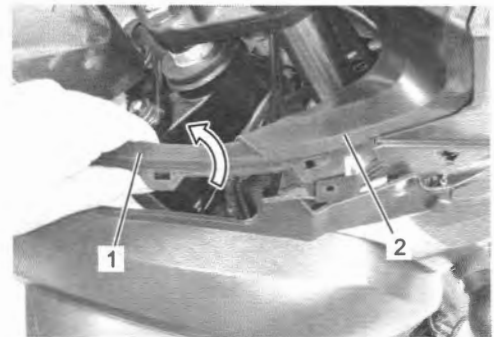

IH28K1940039-01

**Installation**

(Page 9D-10)


Install the fuel tank front cover in the reverse order of removal.

**Side Cowling / Side Cowling Inner Cover Removal and Installation**


BENH28K29406028

**Removal**

- 1) Remove the front side covers. (Page 9D-24)
- 2) Remove the fuel tank front cover. (Page 9D-25)
- 3) Disconnect the front turn signal light coupler (1).
- 4) For left side cowling, release the wiring harness clamp (2) from the side cowling.

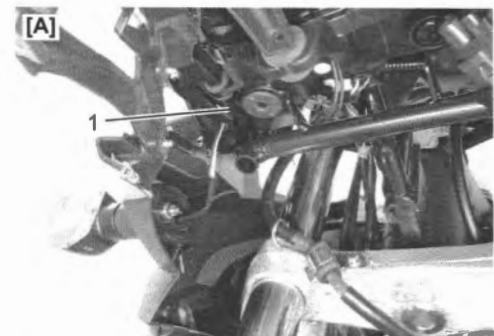


IH28K1940040-01

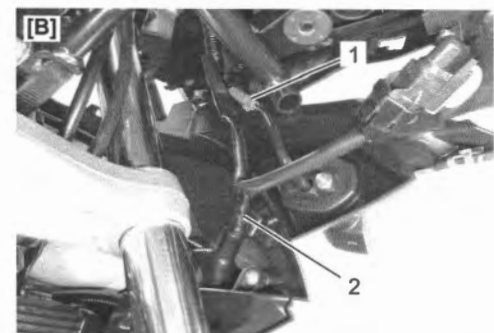

IH28K1940041-02

[A]: Right side	[B]: Left side
-----------------	----------------

- 5) For left side cowling, release the wiring harness from the clamp (1).

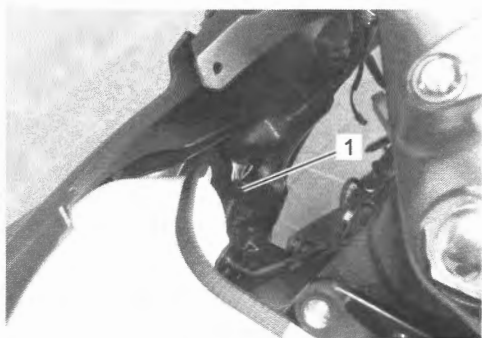


IH28K1940042-01

- 6) Move the side cowling (1) forward and remove it.


**NOTE**

The right and left side cowling screws (2) and hooks (3) are located symmetrically.

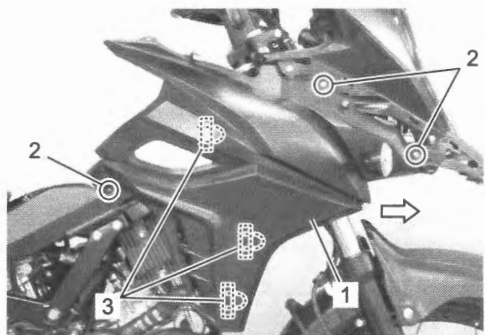

IH28K1940043-01

- 7) Remove the side cowling inner cover (1).

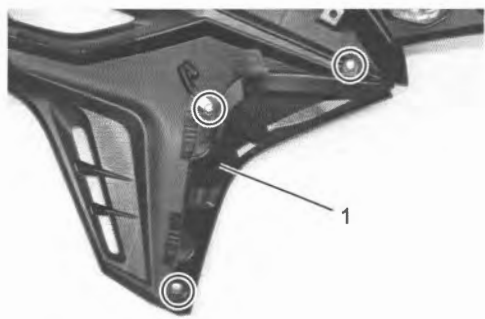

IH28K1940044-01

- 8) Remove the front turn signal light, if necessary.  
 ☞ (Page 9B-14)

**Installation**

Install the side cowling inner cover and side cowling in reverse order of removal. Pay attention to the following points:

- When installing the left side inner cover, tighten the left side inner cover clamp (1) at the same time.



IH28K1940045-01


- Route the wiring harness properly. Refer to "Wiring Harness Routing Diagram" in Section 9A (Page 9A-7).

**Windscreen Removal and Installation**

BENH28K29406029


**Removal**

- 1) Remove the caps (1).

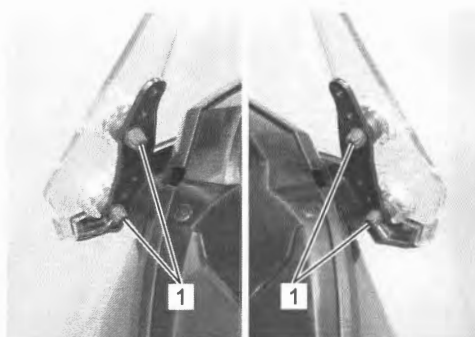

IH28K1940046-01

- 2) Remove the windscreen (1).

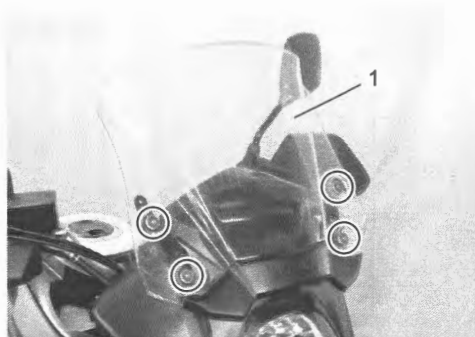

IH28K1940047-01

**Installation**

Install the windscreen in the reverse order of removal.

## Body Cowling Assembly Removal and Installation

BENH28K29406030


### Removal

- 1) Remove the front side covers. (Page 9D-24)
- 2) Remove the fuel tank front cover. (Page 9D-25)
- 3) Remove the side cowlings. (Page 9D-25)
- 4) Disconnect the lead wire couplers (1).



IH28K1940048-01

- 5) Remove the body cowling assembly (1).

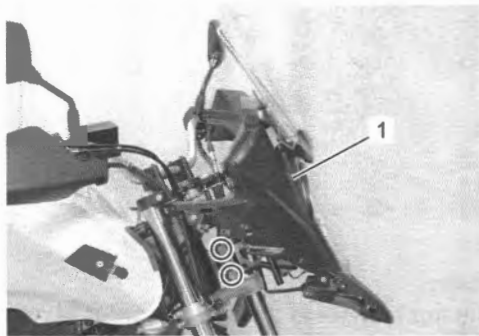

IH28K1940049-01

### Installation

Install the body cowling assembly in the reverse order of removal. Pay attention to the following point:


- After installation of the body cowling assembly, check the headlight aiming. (Page 9B-6)

### Body Cowling Disassembly and Reassembly

BENH28K29406031

#### Disassembly


- 1) Remove the body cowling assembly. (Page 9D-27)
- 2) Remove the windscreen. (Page 9D-26)
- 3) Remove the combination meter. (Page 9C-4)
- 4) Remove the ambient air temperature sensor (1).

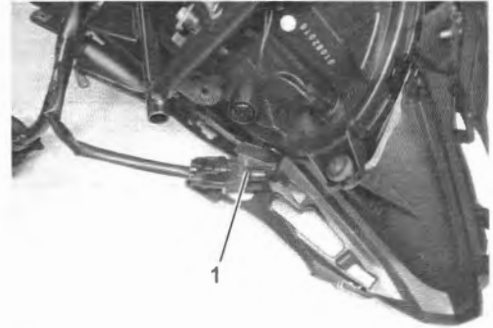

IH28K1940050-01


- 5) Disconnect the following couplers.

- Low beam headlight coupler (1)
- High beam headlight coupler (2)
- Position light coupler (3)

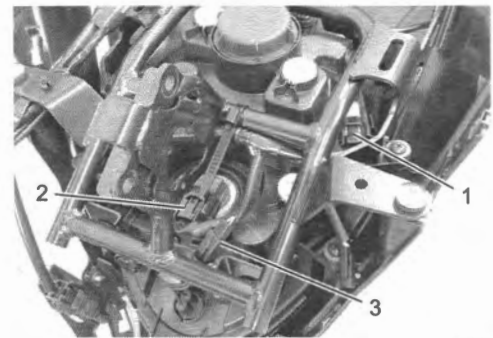

IH28K1940051-02


- 6) Remove the cowling brace (1).

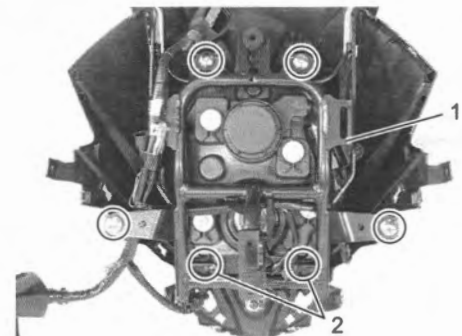

IH28K1940052-02

2. Hooked point

- 7) Remove the clamps (1) and wiring harness (2) from cowling brace.

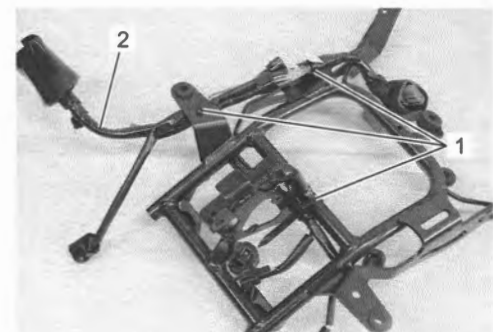


IH28K1940053-03


- 8) Remove the headlight. (Page 9B-4)
- 9) Remove the lower body cowling (1).

**NOTE**

Right and left hooks (2) are located symmetrically.

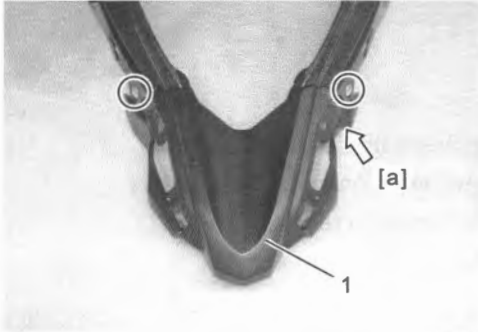

IH28K1940054-01

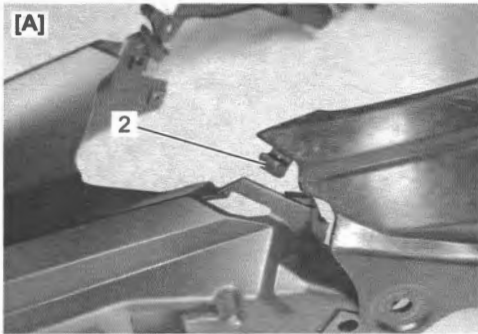

IH28K1940055-01

[A]: View [a]

**Reassembly**

Assemble the body cowling in the reverse order of disassembly. Pay attention to the following points:


- Route the wiring harness properly. Refer to "Wiring Harness Routing Diagram" in Section 9A (Page 9A-7).
- After installation of the body cowling assembly, check the headlight aiming. (Page 9B-6)

**Front Fender Removal and Installation**

BENH28K29406032


**Removal**

- 1) Disconnect the brake hose clamp (1).

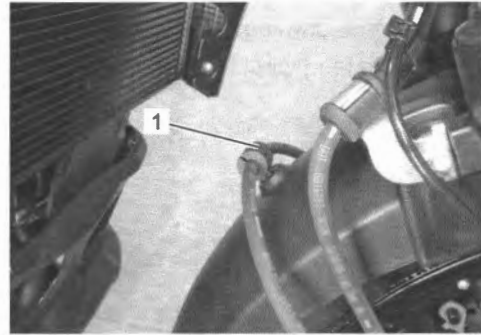

IH28K1940056-01

- 2) Remove the front fender frontward.

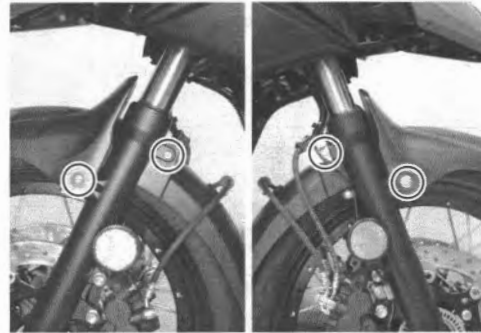

IH28K1940057-01


**Installation**

Install the front fender in the reverse order of removal. Pay attention to the following point:

- Tighten the new front fender bolts (1) to the specified torque.

**Tightening torque**

Front fender bolt (a): 10 N·m (1.0 kgf-m, 7.5 lbf-ft)

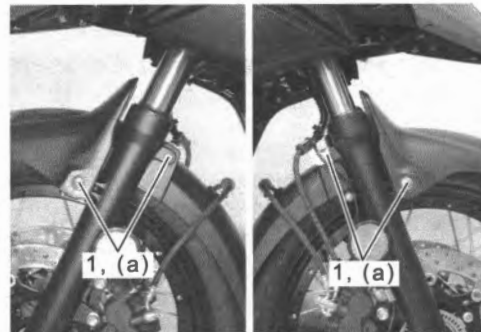

IH28K1940058-01




## Knuckle Cover Removal and Installation

BENH28K29406033

### Removal


- 1) Loosen both or any of the handlebar balancer screws (1).

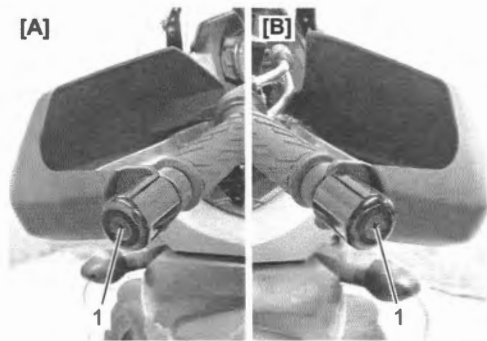

IH28K1940059-01


[A]: Left side	[B]: Right side
----------------	-----------------

- 2) For right knuckle cover, remove the screw (1), nut and washer (2), and then remove the right knuckle cover.

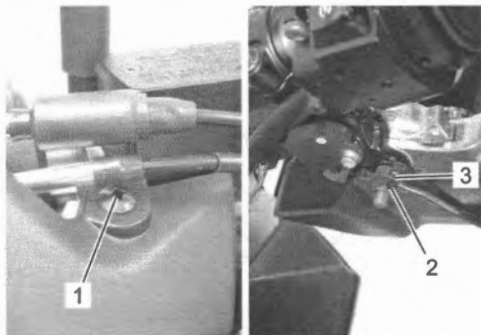

IH28K1940060-01

- 3) For left knuckle cover, remove the nuts (1) and washers (2), and then remove the left knuckle cover.

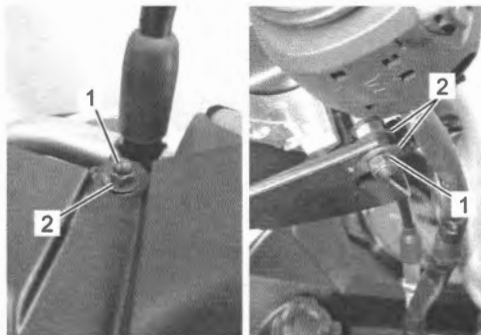

IH28K1940061-01

### Installation


Install the knuckle cover in the reverse order of removal. Pay attention to the following points:

- For left knuckle cover, install the knuckle cover upper nut (1) and new lower nut (2), and then tighten them to the specified torque

#### Tightening torque

Knuckle cover upper nut (a): 5.9 N·m (0.60 kgf-m, 4.35 lbf-ft)

Knuckle cover lower nut (b): 1.7 N·m (0.17 kgf-m, 1.25 lbf-ft)

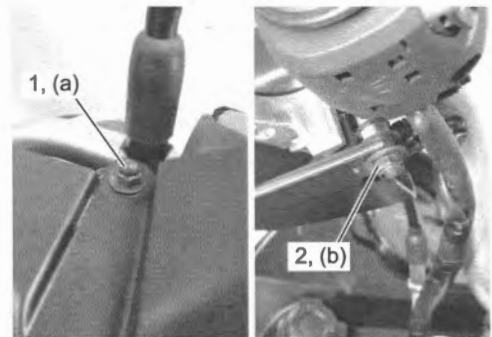


IH28K1940087-01

- For right knuckle cover, install the knuckle cover upper screw (1) and new lower nut (2), and then tighten them to the specified torque

#### Tightening torque

Knuckle cover upper screw (a): 5.5 N·m (0.56 kgf-m, 4.05 lbf-ft)

Knuckle cover lower nut (b): 5.9 N·m (0.60 kgf-m, 4.35 lbf-ft)

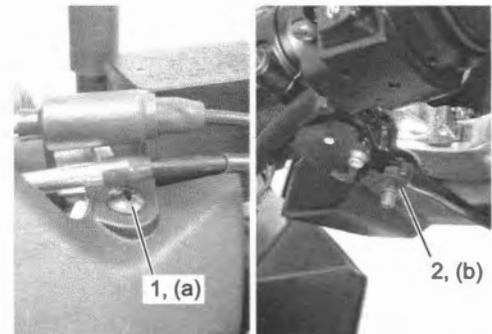

IH28K1940088-01


- Tighten the handlebar balancer screw to the specified torque. Refer to "Handlebar Components" in Section 6B (Page 6B-1).

**Center Under Cowling / Side Under Cowling  
Removal and Installation (If Equipped)**

BENH28K29406034


**Removal**

- 1) Remove the side under cowlings (1) together with the center under cowling.

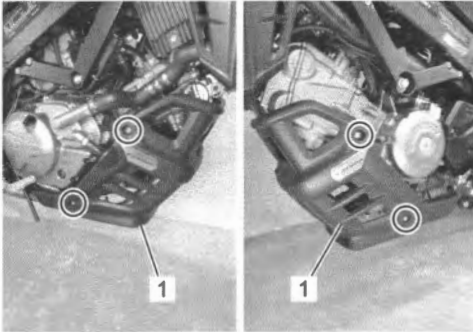


IH28K1940063-01

- 2) Remove the side under cowlings (1) from the center under cowling (2).

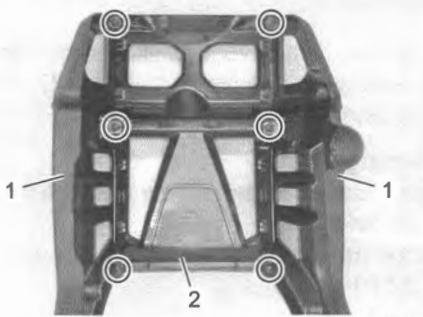


IH28K1940064-01

- 3) Remove the under cowling front bracket (1) and under cowling side bracket (2), if necessary.

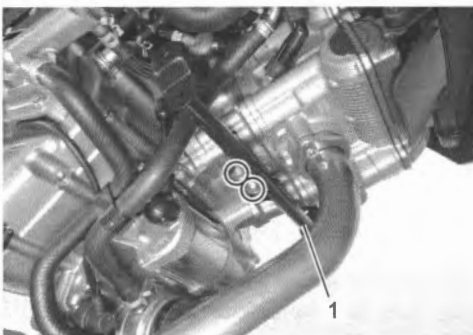

IH28K1940065-01

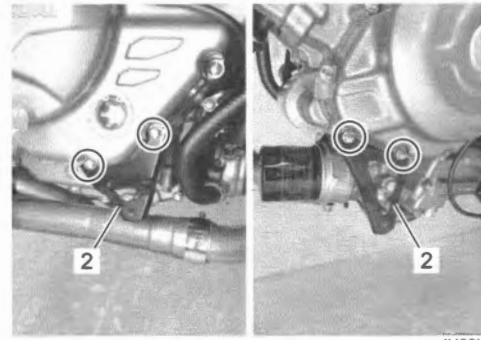

IH28K1940066-01


**Installation**

Install the center under cowling and side under cowlings in the reverse order of removal. Pay attention to the following points:

- Tighten the under cowling front bracket bolts to the specified torque, if removed.

**Tightening torque**


**Under cowling front bracket bolt (a): 10 N·m (1.0 kgf-m, 7.5 lbf-ft)**

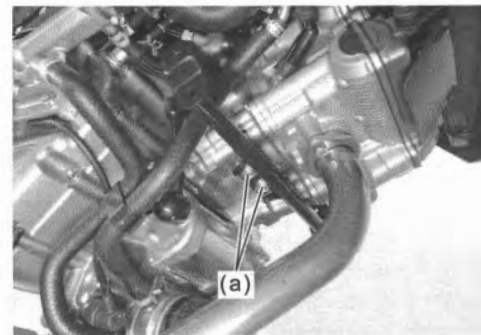

IH28K1940067-01

- Tighten the under cowling side bracket bolts to the specified torque, if removed.
  - Left under cowling side bracket bolts: ⚙ (Page 1J-4)
  - Right under cowling side bracket bolts: ⚙ (Page 5C-12)

- Tighten the screws (10 mm (0.39 in)) (1) and screws (16 mm (0.63 in)) (2) securely.

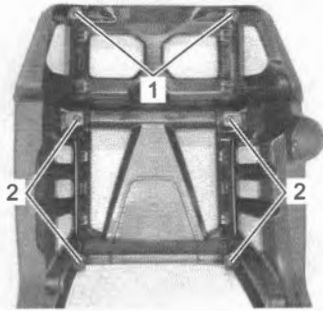


IH28K1940068-01

- Tighten the side under cowling bolts to the specified torque.

**Tightening torque**

**Side under cowling bolt (a): 7.0 N·m (0.71 kgf-m, 5.20 lbf-ft)**

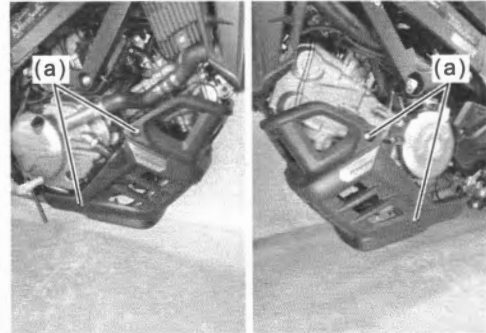

IH28K1940069-01

## Specifications

### Tightening Torque Specifications

BENH28K29407001

Fastening part	Tightening torque			Note
	N·m	kgf-m	lbf-ft	
Striker support bracket nut	8.8	0.90	6.50	☞ (Page 9D-20)
Front fender bolt	10	1.0	7.5	☞ (Page 9D-28)
Knuckle cover upper nut	5.9	0.60	4.35	☞ (Page 9D-29)
Knuckle cover lower nut	1.7	0.17	1.25	☞ (Page 9D-29)
Knuckle cover upper screw	5.5	0.56	4.05	☞ (Page 9D-29)
Knuckle cover lower nut	5.9	0.60	4.35	☞ (Page 9D-29)
Under cowling front bracket bolt	10	1.0	7.5	☞ (Page 9D-30)
Side under cowling bolt	7.0	0.71	5.20	☞ (Page 9D-31)

**Reference:**

For the tightening torques of fasteners not specified in this page, refer to:

“Seat Lock Cable Routing Diagram” (Page 9D-1)

“Front Fender Construction” (Page 9D-6)

“Knuckle Cover Construction (If Equipped)” (Page 9D-7)

“Under Cowling Construction (If Equipped)” (Page 9D-8)

“Fasteners Information” in Section 0C (Page 0C-11)

## Special Tools and Equipment

### Recommended Service Material

BENH28K29408001


Material	SUZUKI recommended product or Specification		Note
Thread lock cement	THREAD LOCK CEMENT 1322D	P/No.: 99000-32150	☞ (Page 9D-20)

# Body Structure

## Repair Instructions

### Body Frame Construction

BENH28K29506001

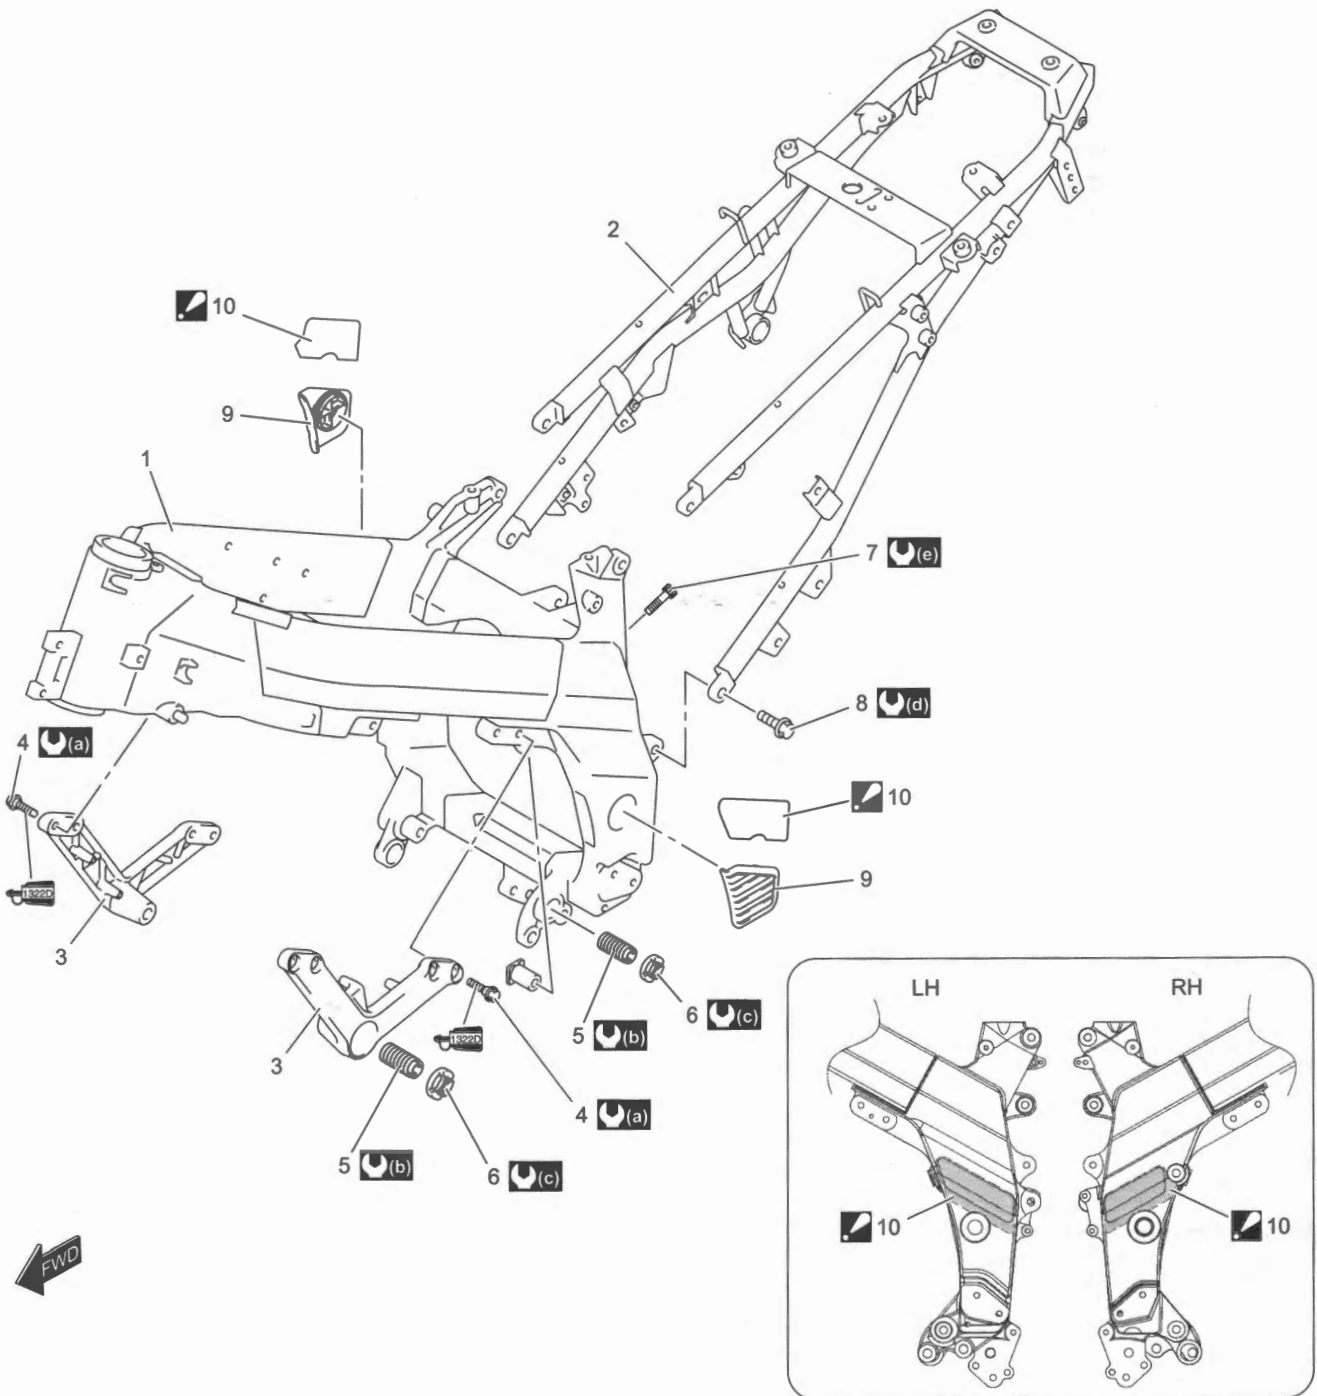


IH28K1950001-01

1. Frame	7. Engine mounting pinch bolt	: 45 N-m (4.6 kgf-m, 33.5 lbf-ft)
2. Seat rail	8. Seat rail bolt	: 50 N-m (5.1 kgf-m, 37.0 lbf-ft)
3. Engine mounting bracket	9. Pivot cover	: 25 N-m (2.5 kgf-m, 18.5 lbf-ft)
4. Engine mounting bracket bolt	10. Frame pivot tape : Align the clear film pattern with the frame shape and stick the frame pivot tape. Peel the film off after sticking the frame pivot tape.	: Apply thread lock to thread part.
5. Engine mounting thrust adjuster	: 35 N-m (3.6 kgf-m, 26.0 lbf-ft)	
6. Engine mounting thrust adjuster lock-nut	: 12 N-m (1.2 kgf-m, 9.0 lbf-ft)	

Front Footrest Construction

BENH28K29506002

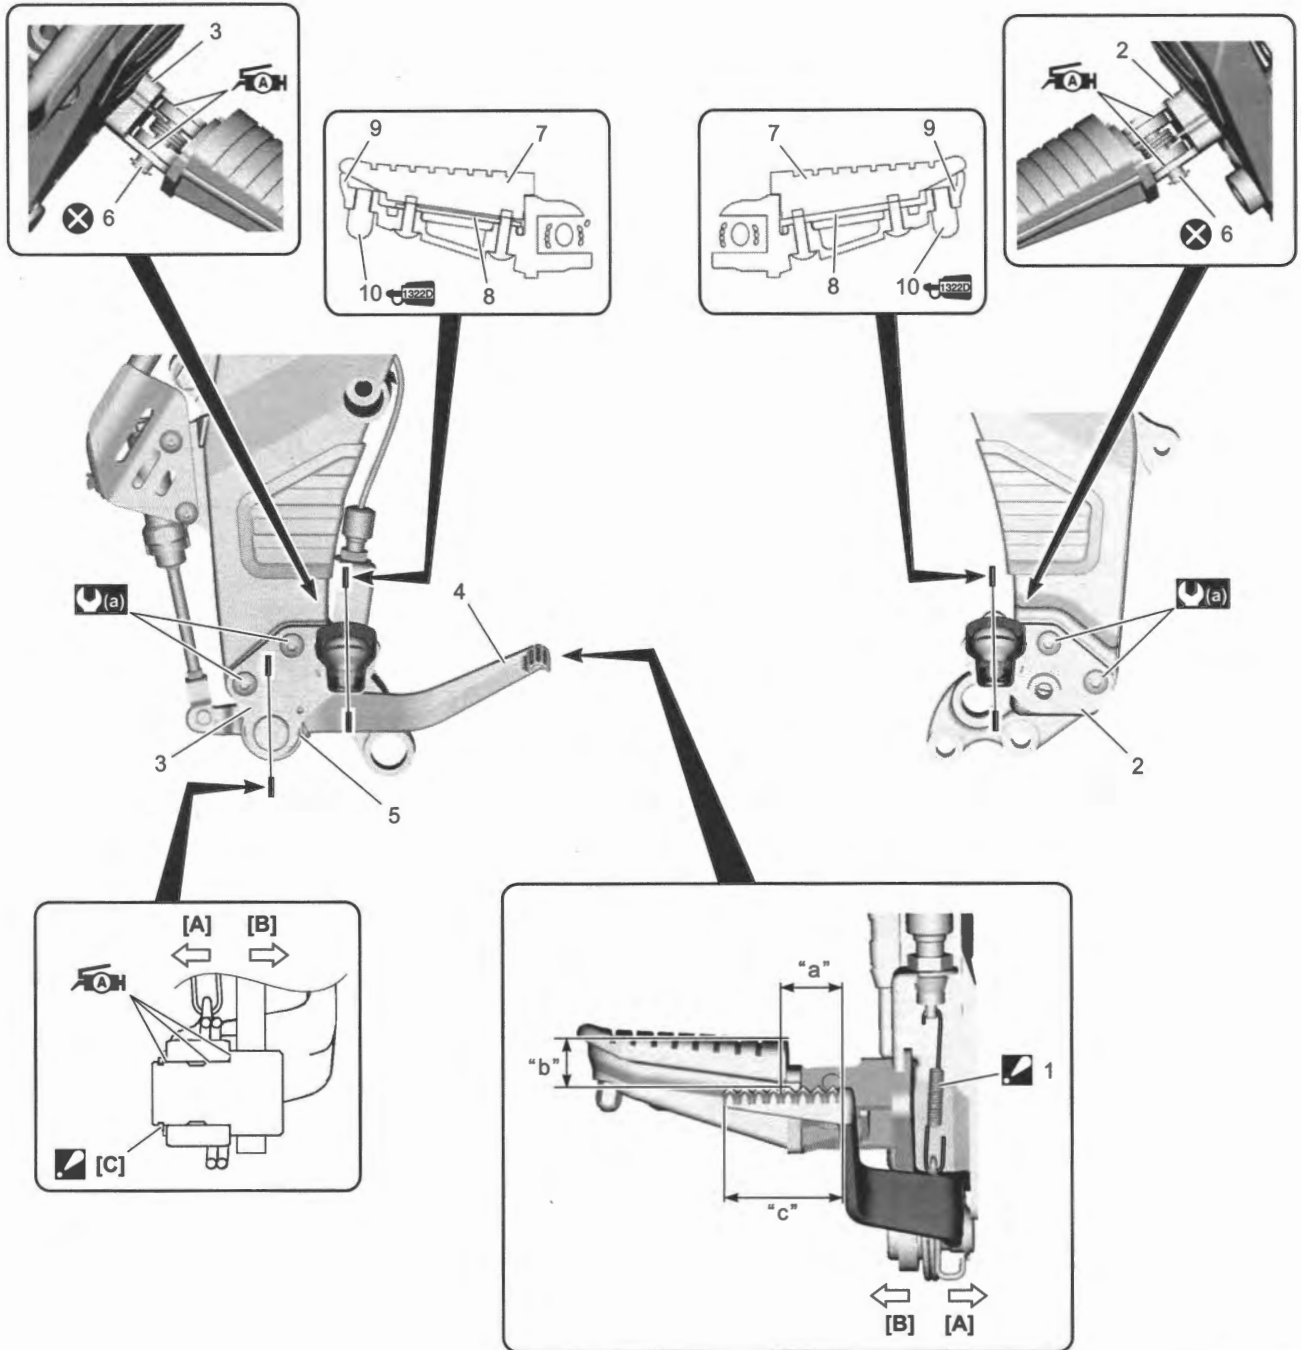

## 9E-3 Body Structure:

[A]: Vehicle inside	5. Rear brake pedal spring	"b": 19.5 – 20.5 mm (0.768 – 0.807 in)
[B]: Vehicle outside	6. E-ring	"c": 47.1 mm (1.85 in)
☑ [C]: Set the circlip facing the sharp edge inside.	7. Footrest rubber	ⓐ : 26 N·m (2.7 kgf·m, 19.5 lbf·ft)
☑ 1. Rear brake light switch spring : Hook the spring ends as shown in the figure.	8. Footrest rubber plate	ⓐ : Apply grease to the sliding surface.
2. Front footrest bracket (left)	9. Front footrest bar	ⓐ : Apply thread lock to the thread part.
3. Front footrest bracket (right)	10. Bank sensor bolt	ⓧ : Do not reuse.
4. Rear brake pedal	"a": 22 mm (0.87 in)	

### Front Footrest Removal and Installation


BENH28K29506003

Refer to "Front Footrest Construction" (Page 9E-2).

**Special tool**  
09900-06107

### Pillion Footrest Construction

BENH28K29506004

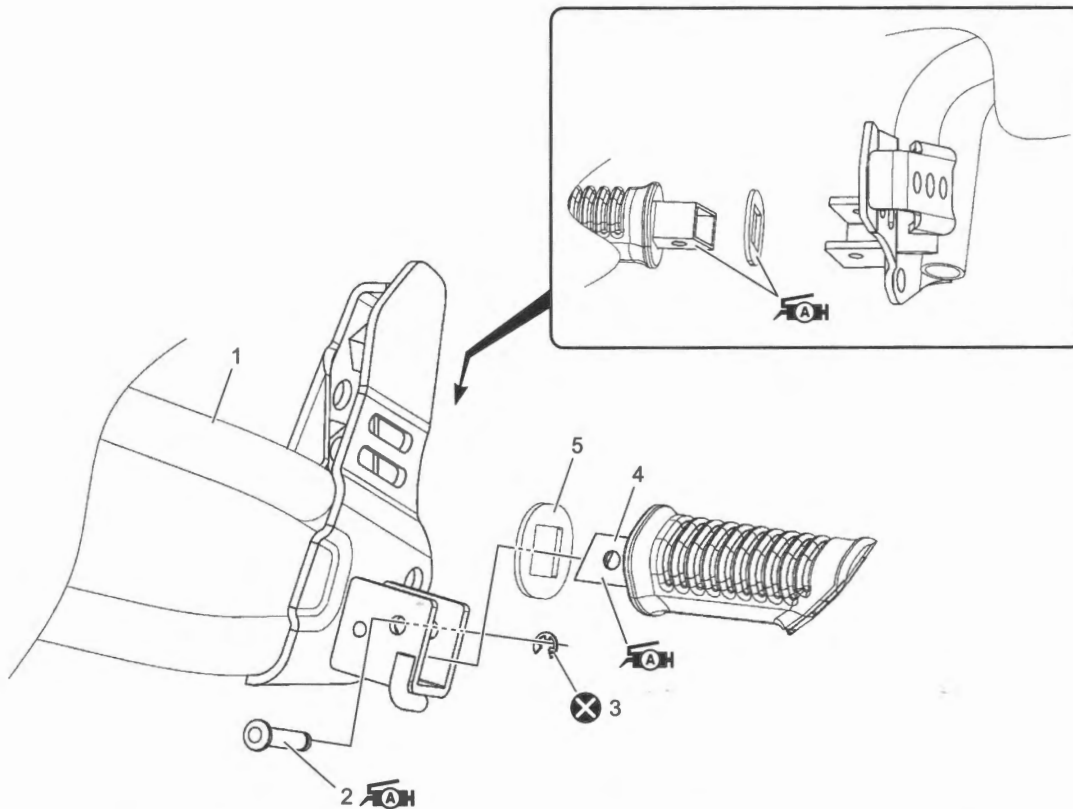

IH28K1950003-01

1. Pillion footrest bracket	5. Footrest rubber washer
2. Pillion footrest pin	ⓐ : Apply grease to sliding surface.
3. E-ring	ⓧ : Do not reuse.
4. Pillion footrest bar	


**Pillion Footrest Removal and Installation**

BENH28K29506005

Refer to "Pillion Footrest Construction" (Page 9E-3).

**Side-stand Construction**

BENH28K29506006

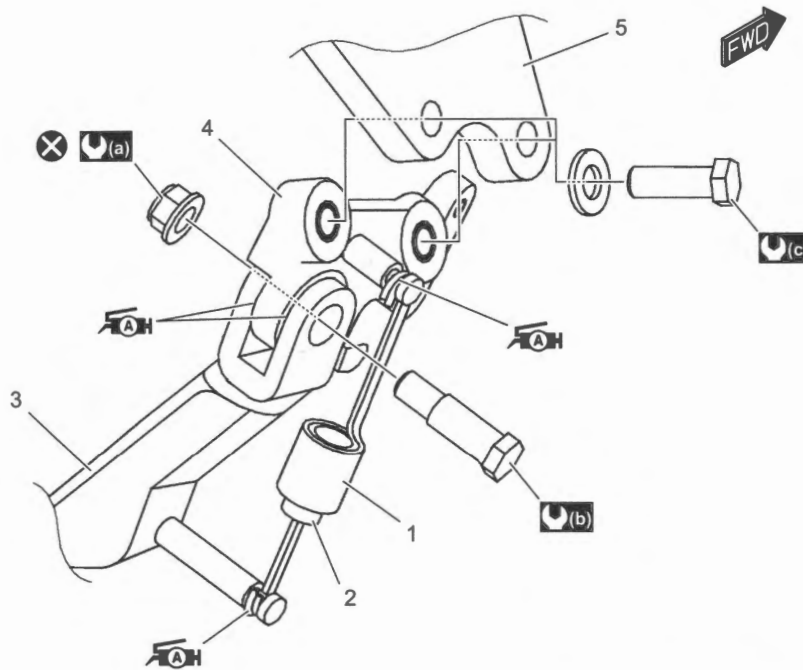

IH28K1950004-03

1. Outer spring	5. Frame	: Apply grease to the sliding surface.
2. Inner spring	: 40 N·m (4.1 kgf·m, 29.5 lbf·ft)	: Do not reuse.
3. Side-stand	: 50 N·m (5.1 kgf·m, 37.0 lbf·ft)	
4. Side-stand bracket	: 100 N·m (10.2 kgf·m, 74.0 lbf·ft)	

**Side-stand Removal and Installation**

BENH28K29506007

Refer to "Side-stand Construction" (Page 9E-4).

**Removal**

- 1) Support the motorcycle with a jack.

**NOTE**

- Do not support the motorcycle with the center exhaust pipes.
- Make sure that the motorcycle is supported securely.

- 2) Remove the side-stand.

**Installation**

Install the side-stand.

## Specifications

### Tightening Torque Specifications

BENH28K29507001

**Reference:**

For the tightening torques of fasteners not specified in this page, refer to:

- “Body Frame Construction” (Page 9E-1)
- “Front Footrest Construction” (Page 9E-2)
- “Side-stand Construction” (Page 9E-4)
- “Fasteners Information” in Section 0C (Page 0C-11)

## Special Tools and Equipment

### Recommended Service Material

BENH28K29508001


**NOTE**

Required service material(s) is also described in:

- “Body Frame Construction” (Page 9E-1)
- “Front Footrest Construction” (Page 9E-2)
- “Pillion Footrest Construction” (Page 9E-3)
- “Side-stand Construction” (Page 9E-4)

### Special Tool

BENH28K29508002
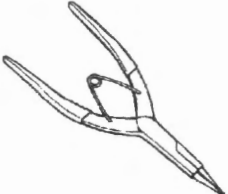
<p>09900-06107 Snap ring pliers (External) ☞ (Page 9E-3)</p> 	
---	--



Section 10


**DL650X/XAL7-L8 ('17 - '18 MODELS)**





CONTENTS

<b>Fuel Pump Components . . . . .</b>	<b>10-2</b>
<b>Fuel Pump Assembly Components . . . . .</b>	<b>10-3</b>
<b>Fuel Pump Assembly / Fuel Level Gauge Removal and Installation .</b>	<b>10-4</b>
<b>Fuel Pump Components . . . . .</b>	<b>10-5</b>
<b>Fuel Pump Assembly Removal and Installation . . . . .</b>	<b>10-6</b>

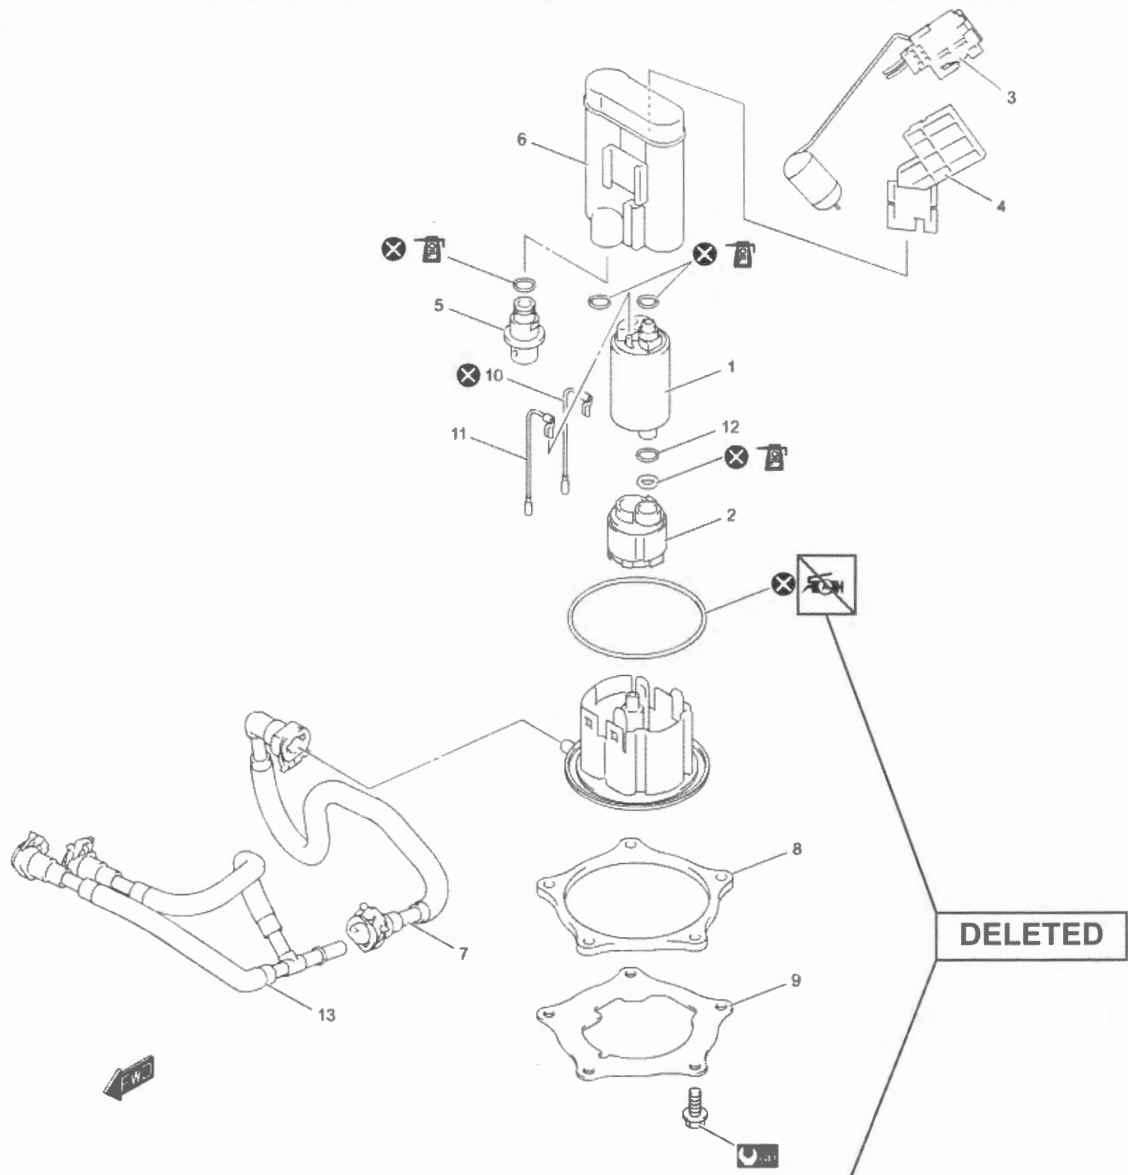Section 1G


**Fuel Pump Components** 







1. Fuel pump	7. Fuel feed hose No. 1	13. Fuel feed hose No. 2
2. Fuel filter	8. Fuel pump inner plate	 (a): 10 N·m (1.0 kgf-m, 7.5 lbf-ft)
3. Fuel level sender gauge	9. Fuel pump outer plate	 (A): Apply grease.
4. Fuel level sender gauge attachment	10. Fuel level sender gauge (+) lead wire	 (T): Apply engine oil.
5. Fuel pressure regulator	11. Fuel level sender gauge (-) lead wire	 (X): Do not reuse.
6. Reservoir cup	12. Spacer	

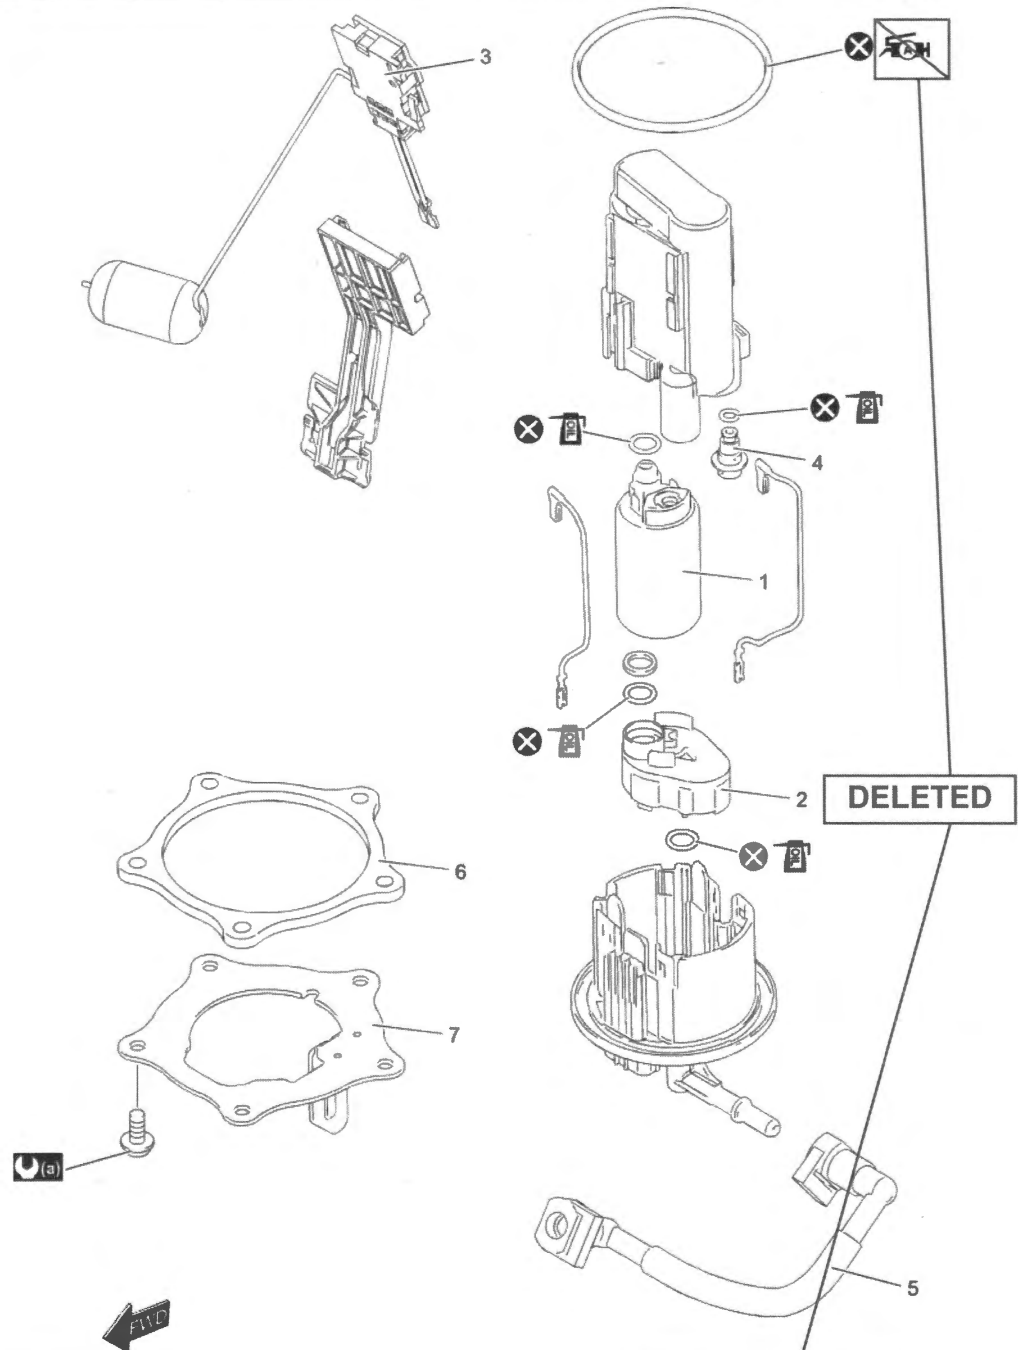Section 1G

Fuel Pump Assembly Components 1G 



1. Fuel pump	5. Fuel feed hose	 : Apply grease.
2. Fuel filter	6. Fuel pump inner plate	 : Apply engine oil.
3. Fuel level gauge	7. Fuel pump outer plate	 : Do not reuse.
4. Fuel pressure regulator	 : 10 N·m (1.0 kgf·m, 7.5 lbf·ft)	

Section 1G

Fuel Pump Assembly / Fuel Level Gauge Removal and Installation 

Refer to *Fuel Tank Removal and Installation*.

**NOTICE:**

When removing or installing the fuel pump assembly, be careful not to damage the fuel pump lead wires.

**Removal**

- 1) Remove the fuel pump mounting bolts (1) diagonally.
- 2) Remove the clamp (2) and fuel pump outer plate (3).




3. Hooked point

**Installation**

**Reference:** *Fuel Level Gauge Inspection*

- 1) Install the fuel level gauge attachment to the fuel level gauge. Then install the fuel pump assembly to the fuel level gauge attachment. Refer to *Fuel Level Gauge Construction*.
- 2) Install the new O-ring (1).

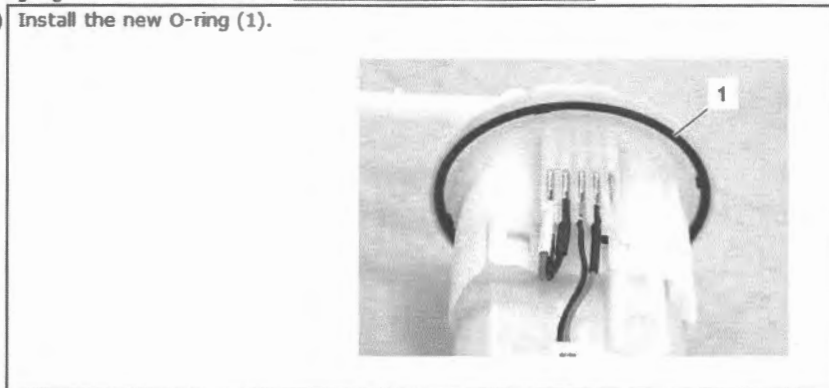


CHANGED


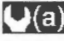


- 3) Install the fuel pump assembly.
- 4) Align the boss (1) of fuel pump assembly with the punch mark (2) on fuel pump inner plate and install them.



Section 1G

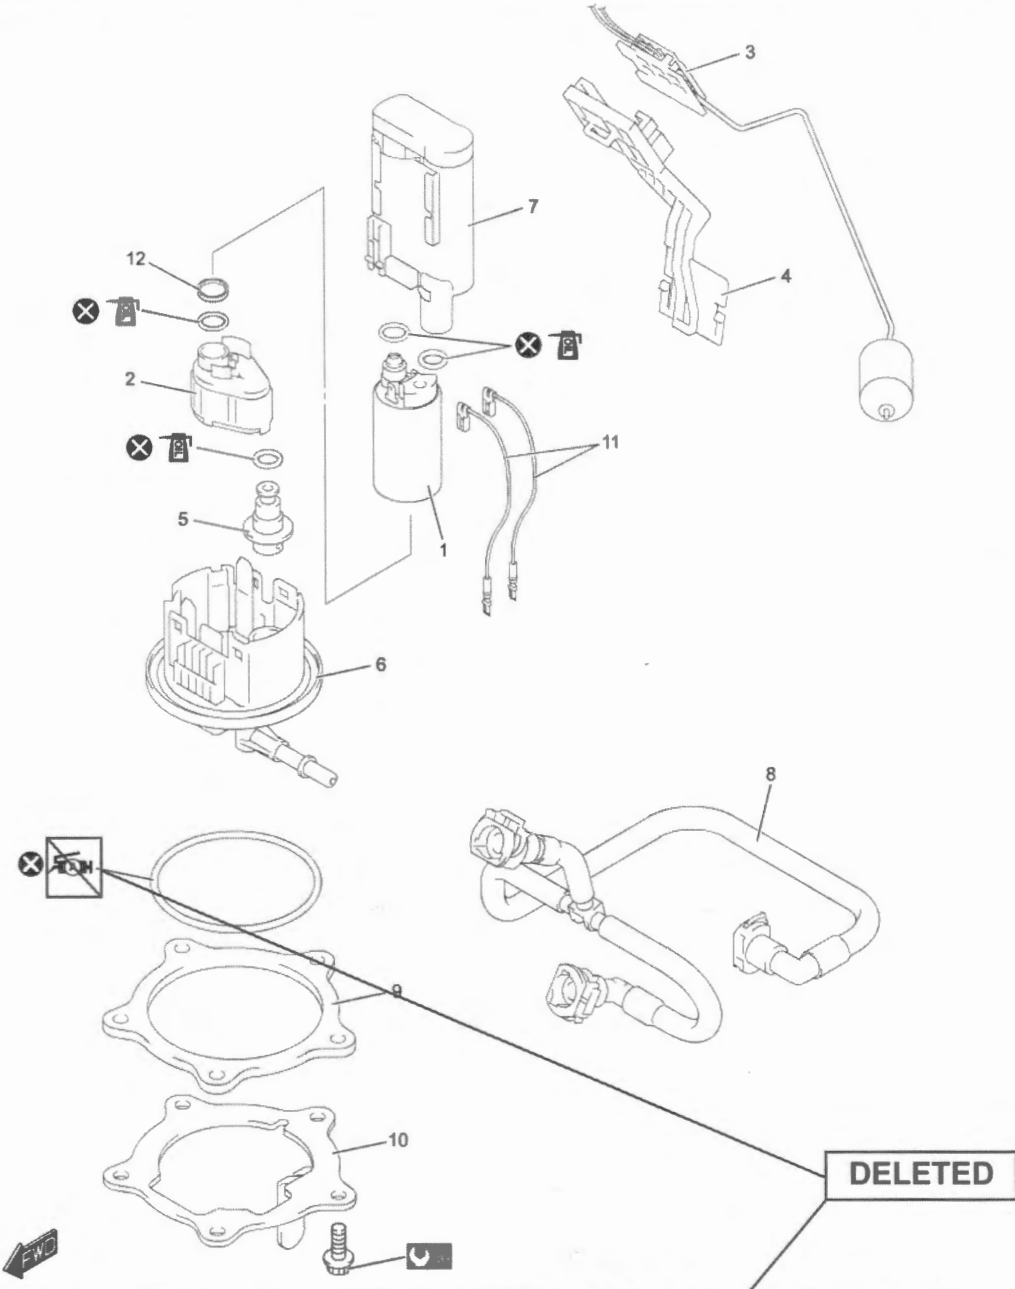Fuel Pump Components 



1. Fuel pump	7. Fuel pump case	 : Apply grease.
2. Fuel filter	8. Fuel feed hose	 : 10 N·m (1.0 kgf-m, 7.5 lbf-ft)
3. Fuel level gauge	9. Fuel pump inner plate	 : Apply engine oil.
4. Fuel level gauge attachment	10. Fuel pump outer plate	 : Do not reuse.
5. Fuel pressure regulator	11. Fuel pump lead wire	
6. Flange	12. Spacer	

Section 1G


Fuel Pump Assembly Removal and Installation



Refer to *Fuel Tank Removal and Installation*.  
Reference: *Fuel Pump Components*

Removal

- 1) Remove the fuel pump mounting bolts (1) diagonally.
- 2) Remove the fuel pump outer plate (2).

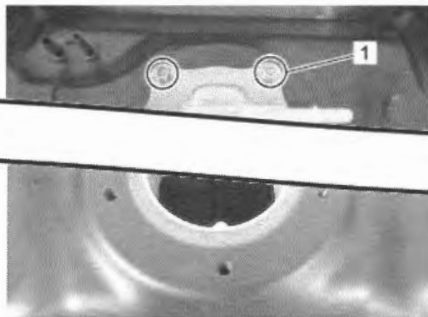


Installation

- 1) Check that the fuel pump fitting surface (1) on the fuel tank is free from any deformation and damage.



- 4) Install the new O-ring (1) and set the fuel pump assembly (2) into the fuel tank.

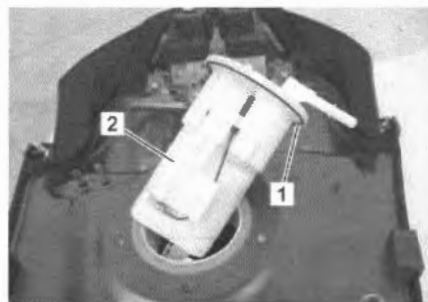

CHANGED

- 5) Align the protrusion (1) of the fuel pump assembly with the punch mark (2) of the fuel pump inner plate.



## Section 11

**DL650A/XA ('18-MODELS)****NOTE:**

*This supplement chapter contains additional service and/or specification information for the DL650A/XAL8 models.*

## CONTENTS

<b>Service Data Specifications, Chassis . . . . .</b>	<b>.11-2</b>
<b>Service Data, Wheels and Tires . . . . .</b>	<b>.11-3</b>
<b>Tire Inspection and Cleaning, Tire Pressure . . . . .</b>	<b>.11-4</b>

## Section 0C

### Service Data Specifications

#### Chassis

Item	Specification	Remark
Front suspension	Telescopic, coil spring, oil damped	—
Rear suspension	Link type, coil spring, oil damped	—
Front fork stroke	150 mm (5.91 in)	—
Rear wheel travel	159 mm (6.26 in)	—
Steering angle	40° (right and left)	—
Caster	25° 40'	—
Trail	107 mm (4.21 in)	—
Turning radius	2.7 m (8.9 ft)	—
Front brake	Disc brake, twin	—
Rear brake	Disc brake	—
Front tire size	110/80R19M/C 59H, tubeless	DL650AL7
	110/80R19M/C 59V, tubeless	DL650AL8 DL650XA
Rear tire size	150/70R17M/C 69H, tubeless	DL650AL7
	150/70R17M/C 69V, tubeless	DL650AL8 DL650XA

CHANGED



## Section 0C

### Service Data Wheels and Tires

Item	Specification		Standard	Limit
Wheel rim runout (DL650A)	Front	Axial & Radial	—	2.0 mm (0.078 in)
	Rear	Axial & Radial	—	2.0 mm (0.078 in)
Wheel rim runout (DL650XA)	Front	Axial & Radial	—	0.5 mm (0.019 in)
	Rear	Axial	—	0.5 mm (0.019 in)
		Radial	—	1.0 mm (0.039 in)
Front wheel hub left end surface to rim distance (DL650XA)			21.95 – 22.95 mm (0.8642 – 0.9035 in)	—
Rear wheel hub right end surface to rim distance (DL650XA)			23.9 – 24.9 mm (0.941 – 0.980 in)	—
Wheel axle runout	Front & Rear		—	0.25 mm (0.010 in)
Tire size	DL650AL7	Front	110/80R19M/C 59H	—
		Rear	150/70R17M/C 69H	
	DL650AL8 DL650XA	Front	110/80R19M/C 59V	—
		Rear	150/70R17M/C 69V	
Tire type	DL650AL7	Front	BRIDGESTONE/TW101 RADIAL J	—
		Rear	BRIDGESTONE/TW152 RADIAL F	
	DL650AL8 DL650XA	Front	BRIDGESTONE/BATTLAX ADVENTURE A40F F	—
		Rear	BRIDGESTONE/BATTLAX ADVENTURE A40R F	
Tire tread depth	Recommend depth	Front	—	1.6 mm (0.063 in)
		Rear	—	2.0 mm (0.079 in)
Cold inflation tire pressure (DL650AL7)	Solo riding	Front	225 kPa (2.25 kgf/cm <sup>2</sup> , 33 psi)	—
		Rear	250 kPa (2.50 kgf/cm <sup>2</sup> , 36 psi)	
	Dual riding	Front	225 kPa (2.25 kgf/cm <sup>2</sup> , 33 psi)	—
		Rear	280 kPa (2.80 kgf/cm <sup>2</sup> , 41 psi)	
Cold inflation tire pressure (DL650AL8/DL650XA)	Solo riding	Front	225 kPa (2.25 kgf/cm <sup>2</sup> , 33 psi)	—
		Rear	250 kPa (2.50 kgf/cm <sup>2</sup> , 36 psi)	
	Dual riding	Front	225 kPa (2.25 kgf/cm <sup>2</sup> , 33 psi)	—
		Rear	290 kPa (2.90 kgf/cm <sup>2</sup> , 42 psi)	
Wheel rim size	Front	19 M/C × MT 2.50		—
	Rear	17 M/C × MT 4.00		

CHANGED

## Section 2D

### Tire Inspection and Cleaning

BENJ28K12408014

#### Tire

Wipe the tire clean and check for the following points:

- Nick and rupture on side wall
- Tread separation
- Abnormal, uneven wear on tread
- Surface damage on bead
- Localized tread wear due to skidding (flat spot)
- Abnormal condition of inner liner

#### Tire size

DL650AL7

CHANGED

Front [Standard]: 110/80R19M/C 59H

Rear [Standard]: 150/70R17M/C 69H

DL650AL8/DL650XA

CHANGED

Front [Standard]: 110/80R19M/C 59V

Rear [Standard]: 150/70R17M/C 69V

#### Tire type

DL650AL7

CHANGED

Front [Standard]: BRIDGESTONE/TW101 RADIAL J

Rear [Standard]: BRIDGESTONE/TW152 RADIAL F

DL650AL8/DL650XA

CHANGED

Front [Standard]: BRIDGESTONE/BATTLAX

ADVENTURE A40F F

Rear [Standard]: BRIDGESTONE/BATTLAX

ADVENTURE A40R F



I649G1240042-02

### Tire tread condition

Operating the motorcycle with excessively worn tires will decrease riding stability and consequently invite a dangerous situation. It is highly recommended to replace a tire when the remaining depth of tire tread reaches the following specification.

#### Tire tread depth


##### Recommend depth

Front [Limit]: 1.6 mm (0.063 in)

Rear [Limit]: 2.0 mm (0.079 in)

#### Special tool

09900-20805

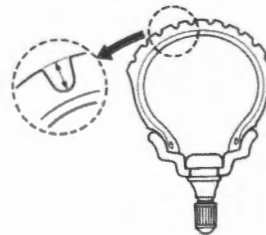

I310G1020068-02

### Tire pressure

If the tire pressure is too high or too low, steering will be adversely affected and tire wear increased. Therefore, maintain the correct tire pressure for good roadability or shorter tire life will result. Cold inflation tire pressure is as follows.

#### Cold inflation tire pressure (DL650AL7)

CHANGED

##### Solo riding

Front [Standard]: 225 kPa (2.25 kgf/cm<sup>2</sup>, 33 psi)Rear [Standard]: 250 kPa (2.50 kgf/cm<sup>2</sup>, 36 psi)

##### Dual riding

Front [Standard]: 225 kPa (2.25 kgf/cm<sup>2</sup>, 33 psi)Rear [Standard]: 280 kPa (2.80 kgf/cm<sup>2</sup>, 41 psi)

#### Cold inflation tire pressure (DL650AL8/DL650XA)


##### Solo riding

Front [Standard]: 225 kPa (2.25 kgf/cm<sup>2</sup>, 33 psi)Rear [Standard]: 250 kPa (2.50 kgf/cm<sup>2</sup>, 36 psi)

##### Dual riding

Front [Standard]: 225 kPa (2.25 kgf/cm<sup>2</sup>, 33 psi)Rear [Standard]: 290 kPa (2.90 kgf/cm<sup>2</sup>, 42 psi)

CHANGED

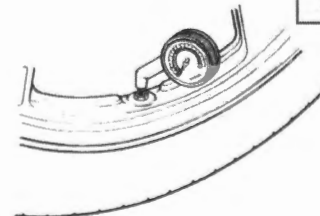

I310G1020069-02

Section 12

**DL650A/XAL7-L9 ('17 - '19 MODELS)**

**NOTE:**

*This supplement chapter contains additional service and/or specification information for the DL650A/XAL7-L9 models.*


CONTENTS

<b>Warning, Caution and Information Labels Location Section 0A. . . .</b>	<b>12-2</b>
<b>Fuel Pump Assembly Removal and Installation Section 1G. . . . .</b>	<b>12-3</b>
<b>Ignition Coil Construction Section 1H. . . . .</b>	<b>12-4</b>
<b>Handlebar Construction Section 6B. . . . .</b>	<b>12-5</b>
<b>Body Frame Construction Section 9E. . . . .</b>	<b>12-6</b>


**Section 0A**

**Warning, Caution and Information Labels Location**


[A]

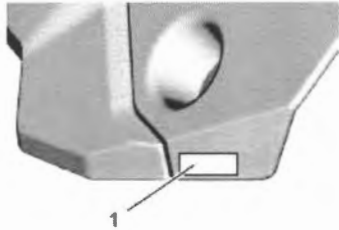


[B]

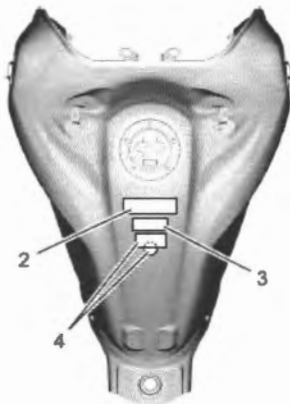


[C]

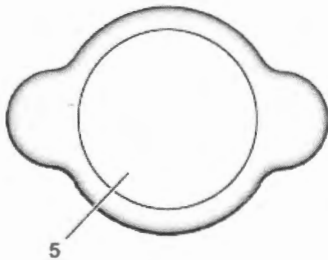

[D]

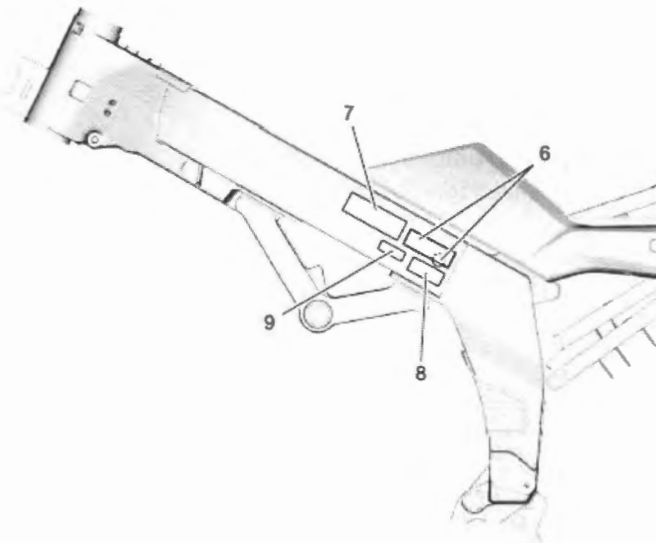

[E]

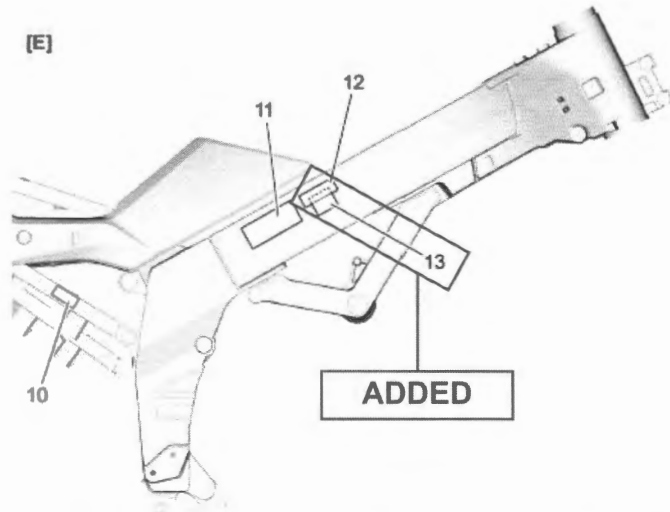

IK28K1010001-01

[A]: Windscreen	2. General warning label	8. EPA noise label, Noise label or Un noise label (if equipped)
[B]: Fuel tank	3. Helmet label (if equipped)	9. Un noise label or Noise approval mark label (if equipped)
[C]: Radiator cap	4. Fuel limitation label or Gasoline label (if equipped)	10. Brake fluid information label (if equipped)
[D]: Frame (LH)	5. Radiator cap label	11. ID plate, Manufacturer label or Safety plate (if equipped)
[E]: Frame (RH)	6. Information label or ICES label (if equipped)	12. Brake approval mark label (if equipped)
1. Cowling label (if equipped)	7. Vacuum hose routing label (if equipped)	13. License label (if equipped)


**ADDED**

## Section 1G

### Fuel Pump Assembly Removal and Installation

#### Installation


- 4) Install the fuel pump outer plate (1) align protrusion (2) of fuel pump with the groove of outer plate.

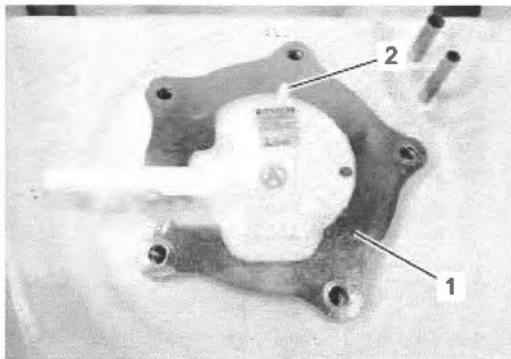

- 5) Tighten the fuel pump mounting bolt (1) lightly without contact between bolt and fuel pump outer plate (2).
- 6) Tighten all the fuel pump mounting bolts (3) lightly in the order "2" – "6", and then tighten the bolt (1) and (3) to the specified torque in the order "1" – "6" in the figure.

#### Tightening torque


Fuel pump mounting bolt (a): 10 N·m (1.0 kgf·m, 7.5 lbf·ft)

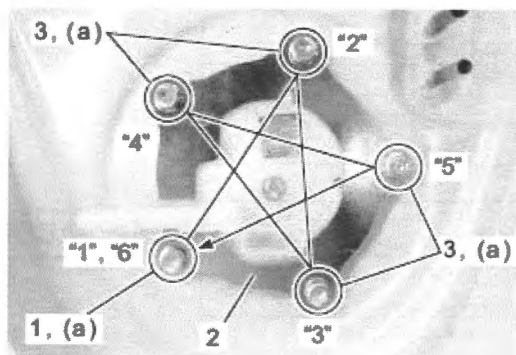

CHANGED

Section 1H

Ignition Coil Construction

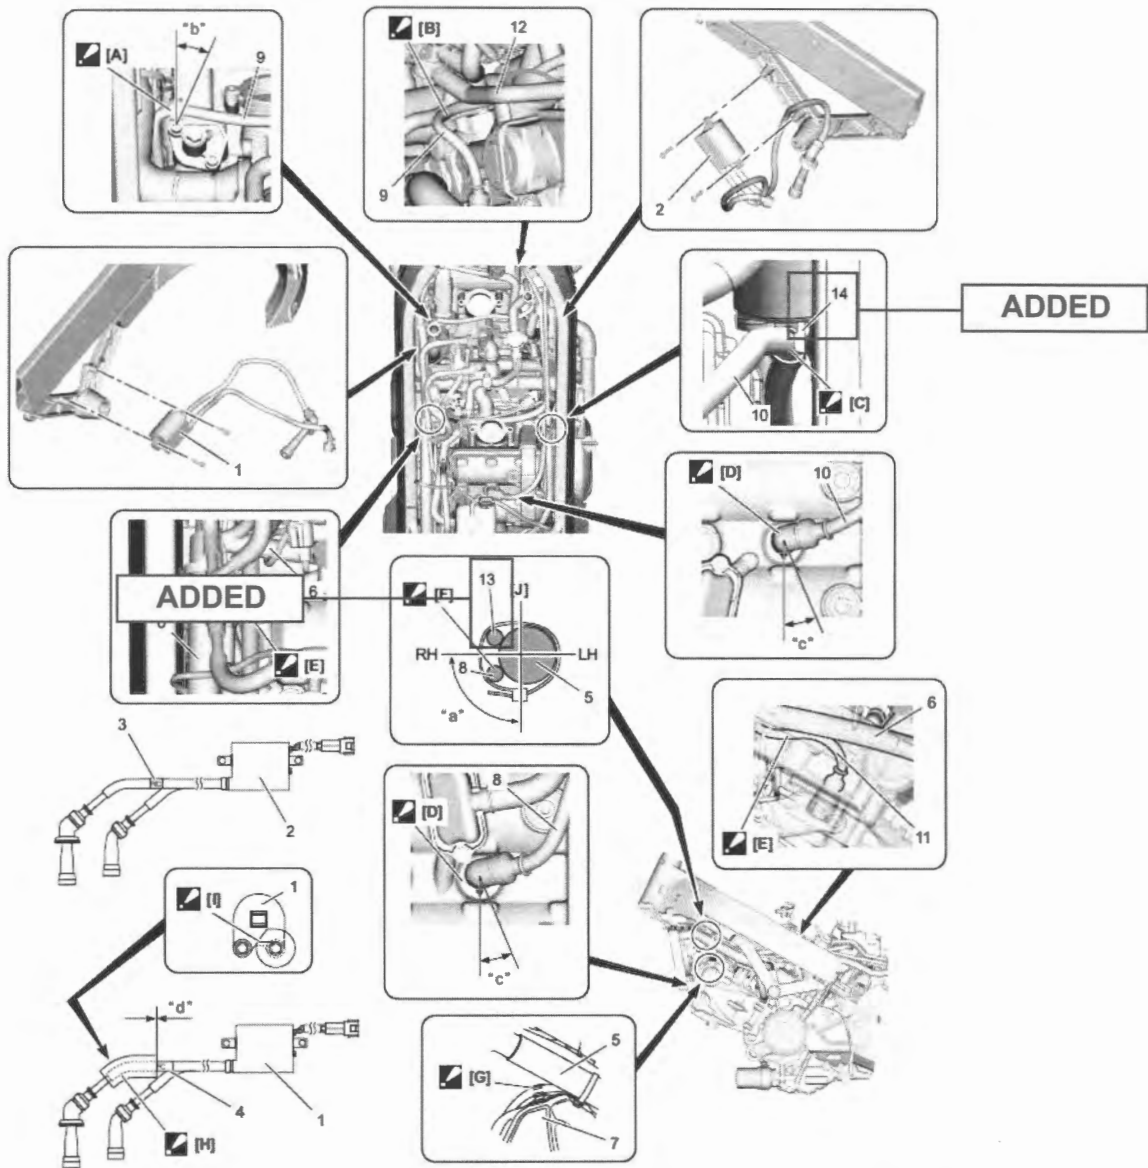


[A]: Clamp the high-tension cord (side) of ignition coil #1 positioning the clamp within angle "b".	5. Radiator inlet hose
[B]: With PAIR System, pass the high-tension cord (side) under the PAIR hose (if equipped).	6. Main harness
[C]: Clamp the high-tension cord (center) of the ignition coil #2 at the RC mark position.	7. Left under-cowling (if equipped)
[D]: Install the spark plug cap fully facing mark "△" on the plug cap exhaust side within angle "c" and push in the plug cap seal securely.	8. High-tension cord (center) of ignition coil #1
[E]: Pass the high-tension cord (side) under the main harness.	9. High-tension cord (side) of ignition coil #1
[F]: Position the high-tension cord (center) of ignition coil #1 along the radiator hose within area "a" and fix it with the clamp firmly. : Face the clamp end inside.	10. High-tension cord (center) of ignition coil #2
[G]: Clamp the high-tension cord (center) of ignition coil #1 with the clamp on the left under cowling (if equipped). : Face the clamp end outside.	11. High-tension cord (side) of ignition coil #2
[H]: Wrap the high-tension cord (center) of ignition coil #1 with the high-tension cord cushion (if equipped).	12. PAIR hose
[I]: Slide the high-tension cord cushion ends firmly.	13. Clutch cable
[J]: Upper side.	14. Clamp : Cut off the excess of the clamp within 3 mm (0.1 in).
1. Ignition coil #1	"b": 0° - 15°
2. Ignition coil #2	"c": 0° - 10°
3. RC mark	"d": 0 ± 5 mm (0 ± 0.19 in)
4. FC mark	

CAHNGED

ADDED

## Section 6B


## Handlebar Construction

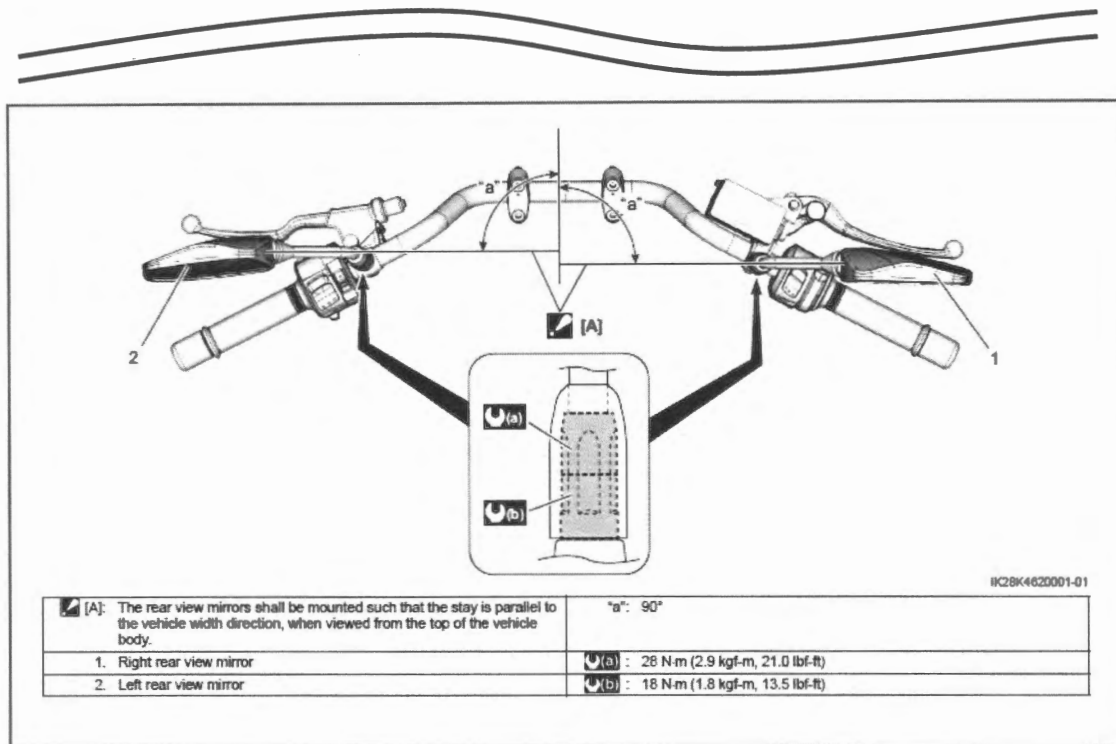







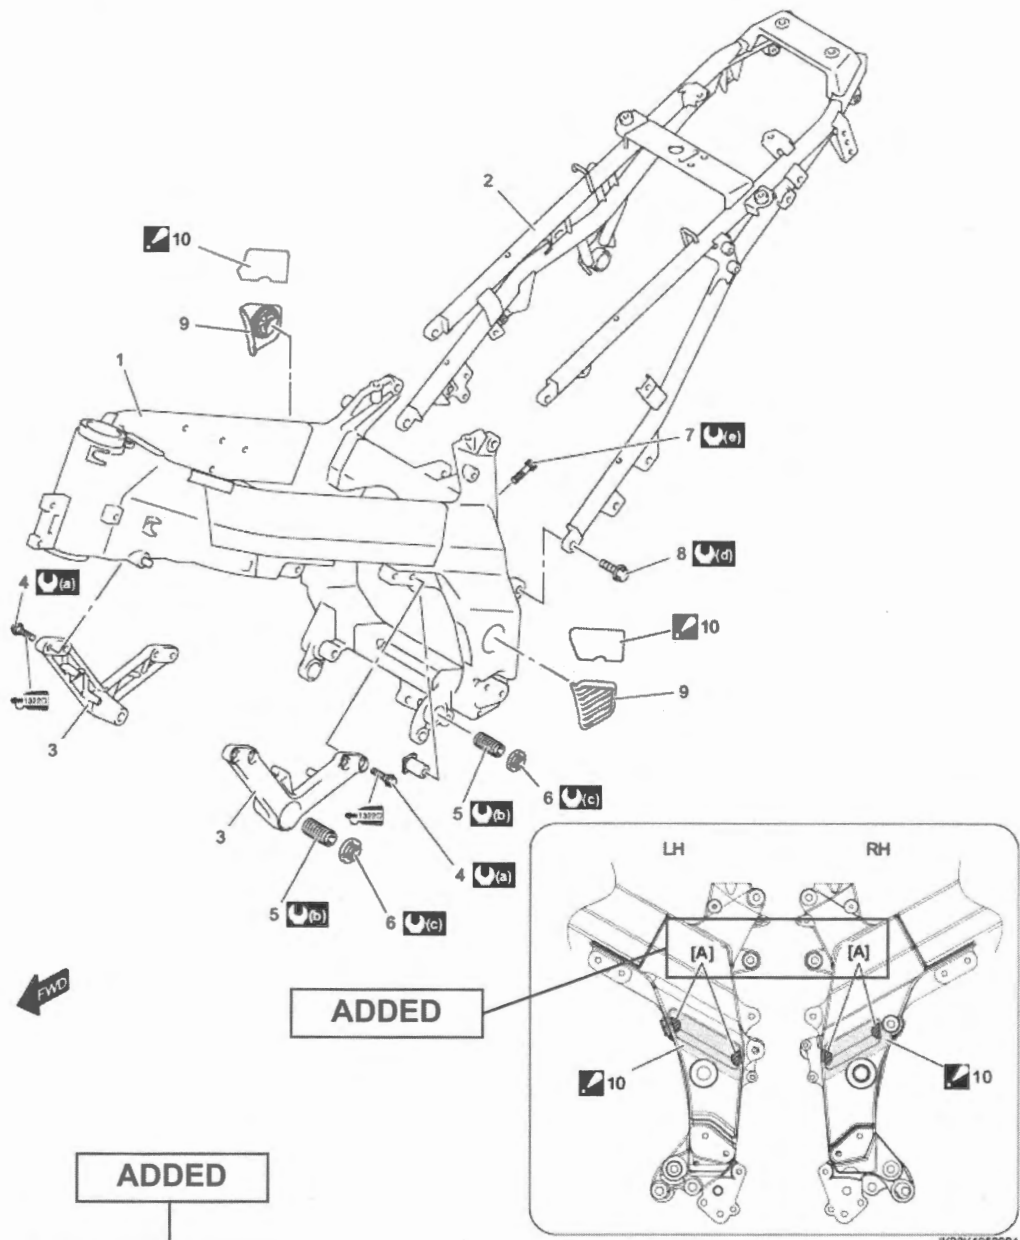

ADDED

**Section 9E**

**Body Frame Construction**



<p> [A]. The lifting of the ends of the tape shall not exceed 5 mm (0.20 in) deep and 0.4 mm (0.016 in) high.</p>	<p>6. Engine mounting thrust adjuster lock-nut</p>	<p> (b) : 12 N·m (1.2 kgf·m, 9.0 lbf·ft)</p>
<p>1. Frame</p>	<p>7. Engine mounting pinch bolt</p>	<p> (c) : 45 N·m (4.6 kgf·m, 33.5 lbf·ft)</p>
<p>2. Seat rail</p>	<p>8. Seat rail bolt</p>	<p> (d) : 50 N·m (5.1 kgf·m, 37.0 lbf·ft)</p>
<p>3. Engine mounting bracket</p>	<p>9. Pivot cover</p>	<p> (e) : 25 N·m (2.5 kgf·m, 18.5 lbf·ft)</p>
<p>4. Engine mounting bracket bolt</p>	<p> 10. Frame pivot tape : Align the clear film pattern with the frame shape and stick the frame pivot tape. Peel the film off after sticking the frame pivot tape.</p>	<p> (32216) : Apply thread lock to thread part.</p>
<p>5. Engine mounting thrust adjuster</p>	<p> (a) : 35 N·m (3.6 kgf·m, 26.0 lbf·ft)</p>	



## Section 13

# DL650A/XAM0 ('20-MODELS)

**NOTE:**

*The service procedures and specifications for the DL650A/XAM0 ('20-MODELS) are unchanged from L9 ('19-MODELS).*



## Section 14

**DL650A/XAL7-M1 ('17 - '21 MODELS)****NOTE:**

*This supplement chapter contains additional service and/or specification information for the DL650A/XAL7-M1 Models.*

**CONTENTS**

<b>DTC Table . . . . .</b>	<b>.14-2</b>
<b>DTC P0030 / P0032 (C64) . . . . .</b>	<b>.14-3</b>
<b>DTC P0130 / P0131 / P0132 (C64) . . . . .</b>	<b>.14-3</b>
<b>Applicable Model / VIN . . . . .</b>	<b>.14-4</b>
<b>Camshaft Inspection . . . . .</b>	<b>.14-5</b>
<b>Exhaust System Components . . . . .</b>	<b>.14-6</b>
<b>Visual Inspection . . . . .</b>	<b>.14-7</b>
<b>Wiring Harness Routing Diagram . . . . .</b>	<b>.14-8</b>
<b>Front Side Reflex Reflector Construction (if equipped) . . . . .</b>	<b>14-15</b>
<b>Front Side Reflex Reflector Removal and Installation (if equipped) . . . . .</b>	<b>14-15</b>
<b>Seat Lock Cable Routing Diagram. . . . .</b>	<b>14-16</b>
<b>Body Cowling Construction . . . . .</b>	<b>14-17</b>
<b>Fuel Tank Cushion Construction . . . . .</b>	<b>14-18</b>
<b>Rear Fender (Rear) Cushion Construction . . . . .</b>	<b>14-19</b>
<b>Battery Holder Cushion Construction. . . . .</b>	<b>14-20</b>

DTC Table

BENM28K11114004

DTC	DTC name	DTC detecting condition
—	C00 None	—
P0030	HO2 Sensor Heater Control Circuit Bank 1 Sensor 1 ↻(Page 1A-21)	HO2 sensor heater drive circuit is shorted to ground or open.
P0032	HO2 Sensor Heater Control Circuit High Bank 1 Sensor 1 ↻(Page 1A-21)	HO2 sensor heater drive circuit is shorted to power supply.
P0105	IAP Sensor Circuit ↻(Page 1A-23)	The sensor output voltage is higher than 4.80 V.
P0106	IAP Sensor Circuit Range / Performance ↻(Page 1A-23)	The IAP sensor #1 vacuum hose has come off.
P0107	IAP Sensor Circuit Low ↻(Page 1A-23)	The sensor output voltage is lower than 0.10 V.
P0110	IAT Sensor 1 Circuit ↻(Page 1A-25)	The sensor output voltage is higher than 4.60 V.
P0112	IAT Sensor 1 Circuit Low ↻(Page 1A-25)	The sensor output voltage is lower than 0.10 V.
P0115	ECT Sensor Circuit ↻(Page 1A-26)	The sensor output voltage is higher than 4.85 V.
P0117	ECT Sensor Circuit Low ↻(Page 1A-26)	The sensor output voltage is lower than 0.10 V.
P0120	TP Sensor / Switch "A" Circuit ↻(Page 1A-28)	The sensor output voltage is lower than 0.10 V.
P0123	TP Sensor / Switch "A" Circuit High ↻(Page 1A-28)	The sensor output voltage is higher than 4.80 V.
P0130	O2 Sensor Circuit Bank 1 Sensor 1 ↻(Page 1A-28)	HO2 sensor output voltage is within 2.1 V – 2.9 V.
P0131	O2 Sensor Circuit Low Voltage Bank 1 Sensor 1 ↻(Page 1A-30)	The sensor output voltage is lower than 0.10 V.
P0132	O2 Sensor Circuit High Voltage Bank 1 Sensor 1 ↻(Page 1A-30)	The sensor output voltage is higher than 3.13 V.
P0170	Fuel Trim Bank 1 ↻(Page 1A-32)	The fuel trim correction is out of its threshold value.
P0201	Injector Circuit / Open – Cylinder 1 ↻(Page 1A-34)	Fuel injector #1 signal is interrupted by 8 times or more continuity although CKP signal is detected.
P0202	Injector Circuit / Open – Cylinder 2 ↻(Page 1A-36)	Fuel injector #2 signal is interrupted by 8 times or more continuity although CKP signal is detected.
P0220	TP Sensor / Switch "B" Circuit ↻(Page 1A-38)	The sensor output voltage is higher than 4.83 V.
P0222	TP Sensor / Switch "B" Circuit Low ↻(Page 1A-38)	The sensor output voltage is lower than 0.10 V.
P0230	FP Primary Circuit ↻(Page 1A-40)	No voltage is detected, although the FP relay is ON.
P0231	FP Secondary Circuit Low ↻(Page 1A-40)	Voltage is applied to fuel pump even though the FP relay is OFF.
P0335	CKP Sensor "A" Circuit ↻(Page 1A-42)	The signal does not reach ECM for 2 sec. or more, after receiving the starter signal.

CORRECTED

**DTC P0030 / P0032 (C64)**

BENM28K11114007

**DTC Detecting Condition and Trouble Area**

DTC detecting condition	Trouble area
P0030 (C64): HO2 Sensor Heater Control Circuit Bank 1 Sensor 1 HO2 sensor heater drive circuit is shorted to ground or open.	<ul style="list-style-type: none"> <li>• HO2 sensor heater</li> <li>• HO2 sensor heater circuit</li> <li>• ECM</li> </ul>
P0032 (C64): HO2 Sensor Heater Control Circuit High Bank 1 Sensor 1 HO2 sensor heater drive circuit is shorted to power supply.	

**Wiring Diagram**

Refer to "FI System Wiring Diagram": Non-Euro5 Model (Page 1A-6).

CORRECTED

**DTC P0130 / P0131 / P0132 (C64)**

BENM28K11114012

**DTC Detecting Condition and Trouble Area**

DTC detecting condition	Trouble area
P0130 (C64): O2 Sensor Circuit Bank 1 Sensor 1 HO2 sensor output voltage is within 2.1 V – 2.9 V.	<ul style="list-style-type: none"> <li>• HO2 sensor</li> <li>• HO2 sensor circuit</li> <li>• ECM</li> </ul>
P0131 (C64): O2 Sensor Circuit Low Voltage Bank 1 Sensor 1 The sensor output voltage is lower than 0.10 V.	
P0132 (C64): O2 Sensor Circuit High Voltage Bank 1 Sensor 1 The sensor output voltage is higher than 3.13 V.	

**Wiring Diagram**

Refer to "FI System Wiring Diagram": Non-Euro5 Model (Page 1A-6).

CORRECTED

Applicable Model / VIN

DL650XAM1	JS1C733AZM7100001 -	Argentina
	JS1C733B#M7100001 -	Canada and U.S.A. except for California State
	JS1C733MZM7100001	E.U.
	JS1C733AZ07100293 -	Australia
	JS1C733G#M7100001 -	California State
	JS1C733EZM7100001 -	Taiwan
	JS1C733AZ07100290 -	Thailand
	JS1C733H#M7100001 -	China
DL650AM1	JS1C733AZM7100001 -	Argentina
	JS1C733B#M7100001 -	Canada and U.S.A. except for California State
	JS1C733MZM7100001	E.U.
	JS1C733AZ07100296 -	Australia
	JS1C733G#M7100001 -	California State
	JS1C733H#M7100001 -	China
DL650XAUEM1	JS1C743NZM7100001 -	E.U.
	JS1C743FZ07100096 -	Australia
DL650AUEM1	JS1C743NZM7100001 -	E.U.
	JS1C743FZ07100099 -	Australia

AMENDED

## Camshaft Inspection

### Camshaft Identification

The camshafts can be identified by the engraved letter [A] and I.D. mark [B] stamped on the camshaft.

#### Non-Euro5 Model


	Letter [A]	and I.D. mark [B]
Intake camshaft #1	INF	T
Exhaust camshaft #1	EXF	P
Intake camshaft #2	INR	V
Exhaust camshaft #2	EXR	S

ADDED


#### Euro5 Model

	Letter [A]	and I.D. mark [B]
Intake camshaft #1	INF	T
Exhaust camshaft #1	EXF	2
Intake camshaft #2	INR	V
Exhaust camshaft #2	EXR	3

ADDED

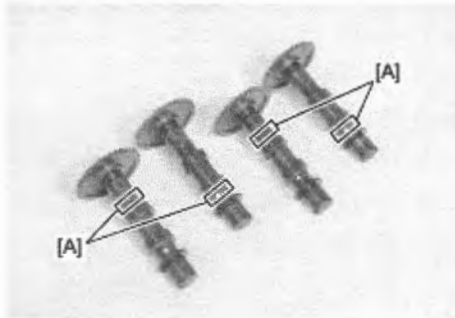





IH18K1140104-02

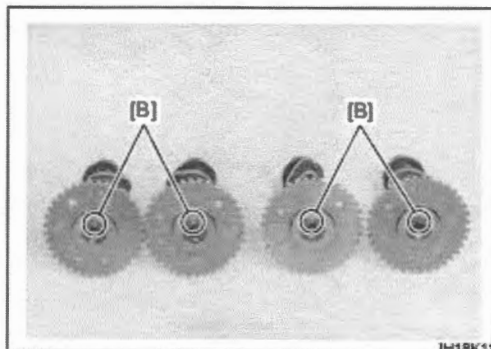

IH18K1140105-01

ADDED

Exhaust System Components

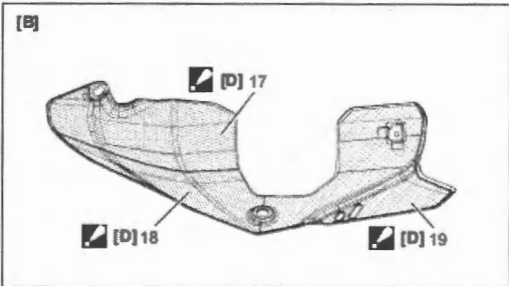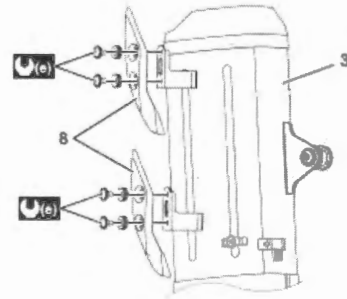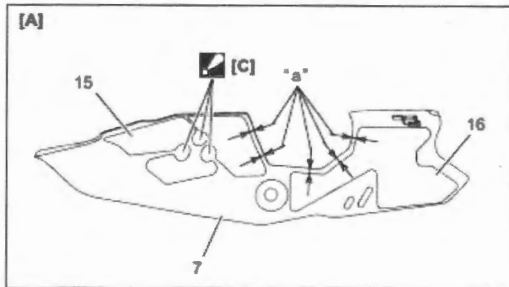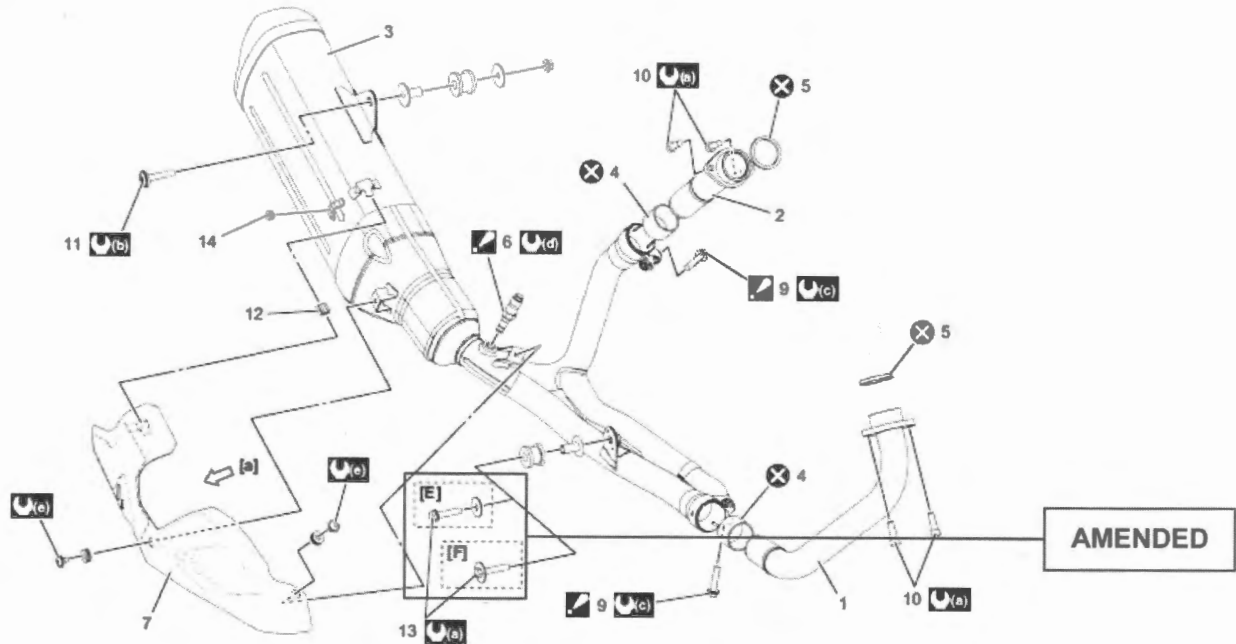

IM28K11B0002-01

[A]: Non-Euro5 Model	6. HO2 sensor : Apply nickel based anti seize to the thread part.	17. Muffer cover shield No.1
[B]: Euro5 Model	7. Muffer cover	18. Muffer cover shield No.2
[C]: Align the bending position of the muffer cover with the slit of the muffer cover front shield. (if equipped)	8. Rear muffer cover (if equipped)	19. Muffer cover shield No.3
[D]: Do not protrude the shield from the edge or hole of the cover.	9. Muffer connector bolt : Apply nickel based anti seize to the thread part.	(a) : 23 N-m (2.3 kgf-m, 17.0 lbf-ft)
[E]: Bolt and washer type	10. Exhaust pipe bolt	(b) : 30 N-m (3.1 kgf-m, 22.5 lbf-ft)
[F]: Bolt with washer type	11. Muffer support bolt	(c) : 18 N-m (1.9 kgf-m, 14.0 lbf-ft)
1. Exhaust pipe #1	12. Muffer cover grommet	(d) : 25 N-m (2.5 kgf-m, 18.5 lbf-ft)
2. Exhaust pipe #2	13. Exhaust support bolt	(e) : 5.5 N-m (0.56 kgf-m, 4.05 lbf-ft)
3. Muffer	14. Muffer support cushion	*a*: 5 mm (0.2 in)
4. Exhaust pipe connector	15. Muffer cover front shield (if equipped)	(x) : Do not reuse.
5. Exhaust pipe gasket	16. Muffer cover rear shield	

ADDED



**Visual Inspection**




**NOTICE**

- The standard tire fitted on this motorcycle is 110/80R19M/C (59H) for front and 150/70R17M/C (69H) for rear (DL650AL7), or 110/80R19M/C (59V) for front and 150/70R17M/C (69V) for rear (DL650AL8- / DL650XA). The use of tires other than those specified may cause instability. It is highly recommended to use a SUZUKI Genuine Tire.
- Replace the tire as a set, otherwise the DTC C1625 (25) may be stored.

AMENDED

### Wiring Harness Routing Diagram

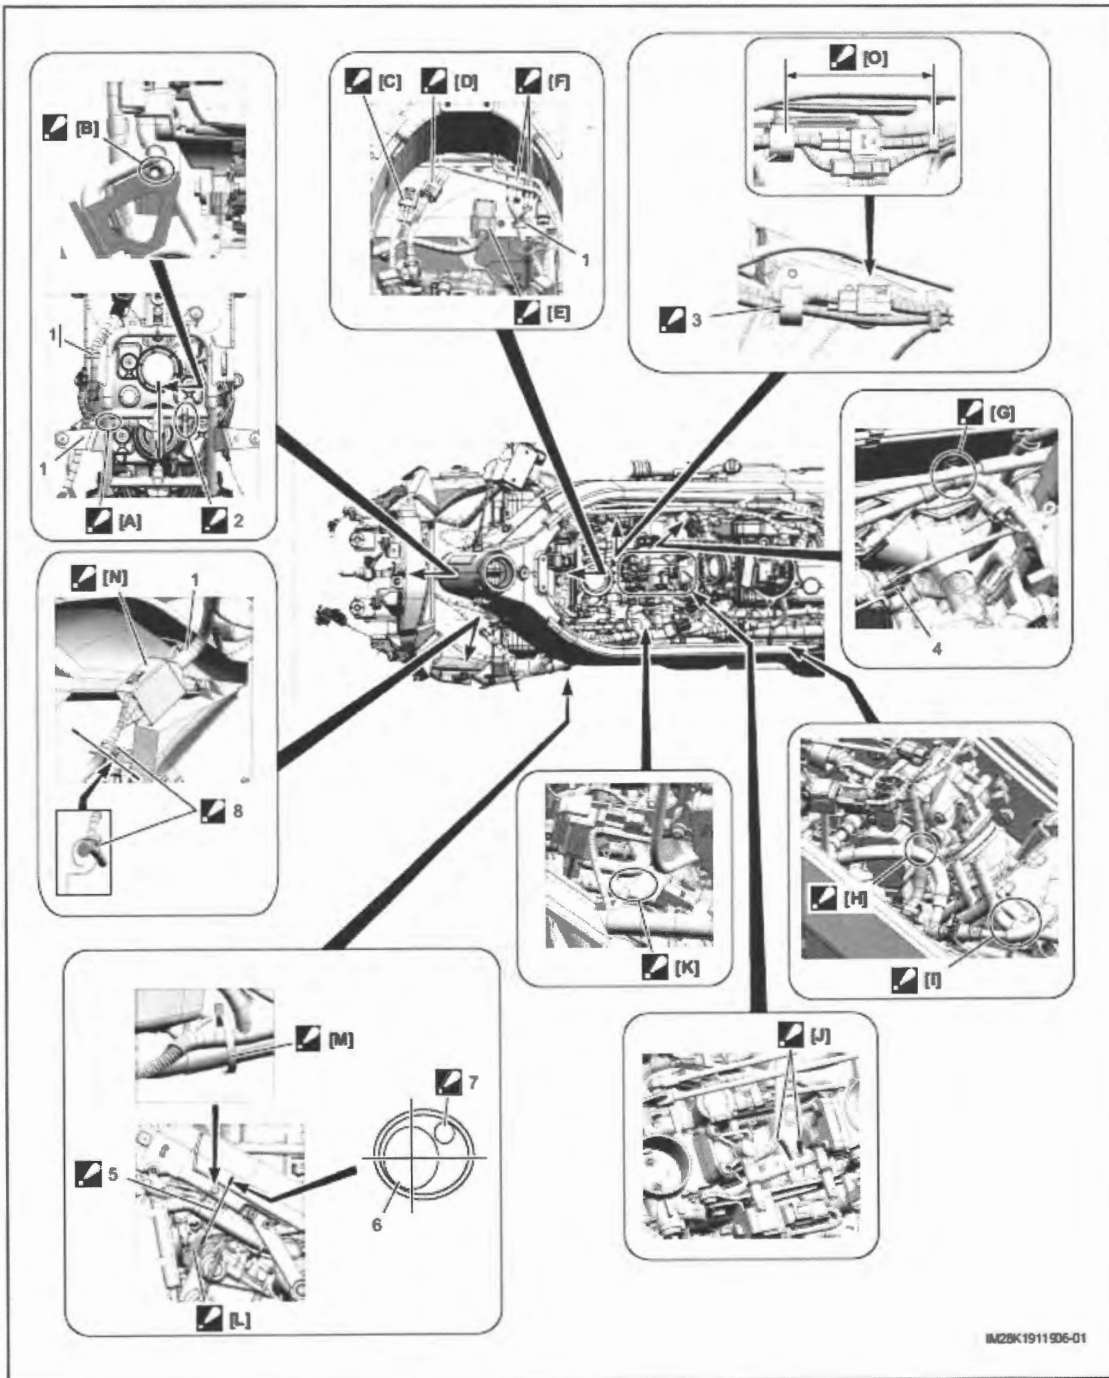


IM2BK19119D6-01

AMENDED

<p>☑ [A]: Pass the wiring harness between the headlight and cowling brace.</p>	<p>☑ [I]: Pass the fuel pump lead wire under the fuel hose and above the canister hose (if equipped).</p>	<p>☑ 2. Wiring harness clamp : Position the harness under the cowling brace and clamp it at end of the corrugate tube.</p>
<p>☑ [B]: Fit the wiring harness (colgate tube) between the reinforcement and tube of the cowling brace.</p>	<p>☑ [J]: Pass the injector lead wire under the injector bracket and right side of the canister hose (if equipped). : Connect the coupler with tag "F" to cylinder #1 and the other one with tag "R" to cylinder #2.</p>	<p>☑ 3. Wiring harness clamp : Clamp the wiring harness (at white tape) and regulator/rectifier lead wire.</p>
<p>☑ [C]: Fix the left handle switch male coupler of the wiring harness to a left side hole.</p>	<p>☑ [K]: Pass the injector lead wire above the canister hose (if equipped).</p>	<p>4. PAIR control solenoid valve coupler (if equipped)</p>
<p>☑ [D]: Fix the coupler after connecting it to left handle switch lead wire coupler.</p>	<p>☑ [L]: Pass the horn lead wire through inside of the water hose.</p>	<p>☑ 5. Wiring harness clamp : Clamp the wiring harness and water hose under the frame welding.</p>
<p>☑ [E]: Fix the right handle switch coupler to a center hole.</p>	<p>☑ [M]: Clamp the wiring harness to the water hose beside the branch to the handle switch lead wire. Face the tip of clamp to inside and locked part of clamp downward.</p>	<p>6. Water hose</p>
<p>☑ [F]: Position the ignition switch lead wire coupler and front wheel speed sensor lead wire coupler under the brake pipes. After having assembled radiator, confirm that connectors are not caught.</p>	<p>☑ [N]: After connecting the coupler, cover it with boot in lengthwise position.</p>	<p>☑ 7. Wiring harness : Position the wiring harness within the range of 90°.</p>
<p>☑ [G]: Fix the plug-in clamp to a lower hole at the front side in 3 holes. : Pass the reservoir tank overflow hose above the wiring harness.</p>	<p>☑ [O]: Pass the regulator/rectifier lead wire and wiring harness in parallel in this section.</p>	<p>☑ 8. Wiring harness clamp : Clamp the wiring harness at the tape of the corrugate tube end. : Bend the clamp from inside in upright position to outside counterclockwise.</p>
<p>☑ [H]: Pass the IAP sensor lead wire under the fuel hose.</p>	<p>1. Plug-in clamp</p>	

AMENDED



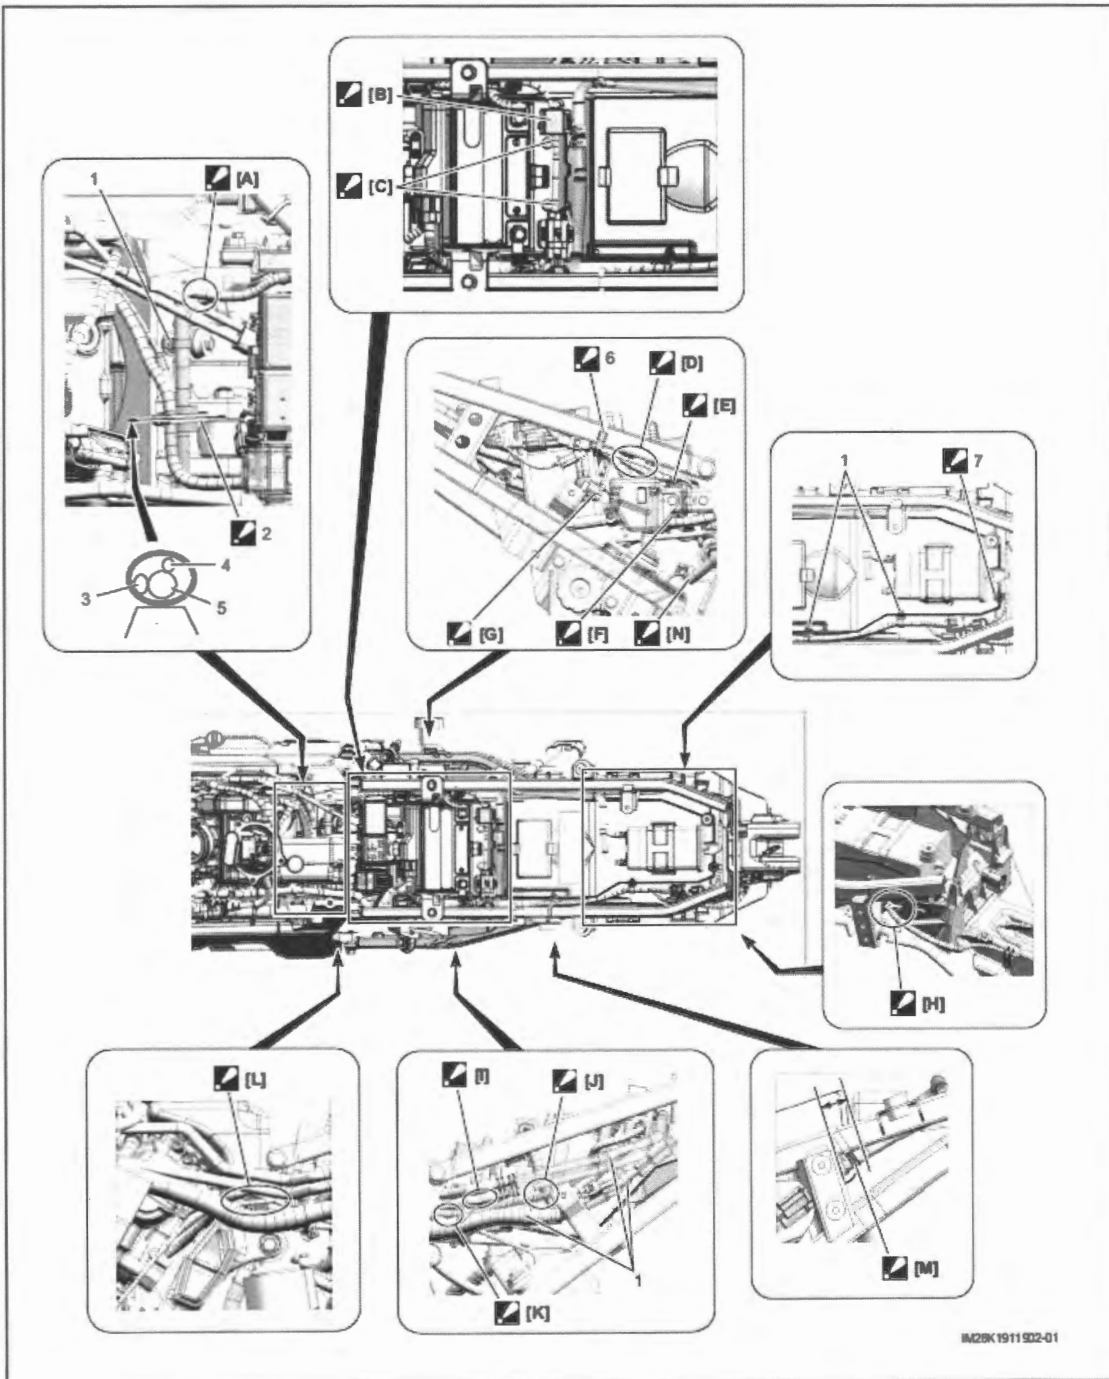


M28K191192-01

AMENDED

<p>☑ [A]: Pass the wiring harness behind the brake hose.</p>	<p>☑ [H]: Pass the rear turn signal lead wire between the rear fender and frame.</p>	1. Plug-in clamp
<p>☑ [B]: Install the turn signal relay to the rib on the vehicle right side.</p>	<p>☑ [I]: Pass the starter relay lead wire and ECM lead wire inside of the canister hoses (if equipped).</p>	<p>☑ 2. Wiring harness clamp : Clamp the wiring harness, rear wheel speed sensor lead wire and starter motor lead wire at the white tape.</p>
<p>☑ [C]: Pass the wiring harness under the TO sensor and turn signal relay.</p>	<p>☑ [J]: Pass the battery (+) lead wire between the ECM lead wire and canister hose (if equipped).</p>	3. Starter motor lead wire
<p>☑ [D]: Pass the battery (-) lead wire and wiring harness under the frame and battery holder fitting. Put the battery (-) lead wire on the wiring harness.</p>	<p>☑ [K]: Pass the battery (+) lead wire above the fuse box lead wire.</p>	4. Rear wheel speed sensor lead wire
<p>☑ [E]: Fix the battery (-) lead wire with the plug-in clamp.</p>	<p>☑ [L]: Pass the side-stand switch lead wire between the frame and wiring harness.</p>	5. Wiring harness
<p>☑ [F]: Fix the wiring harness with the plug-in clamp.</p>	<p>☑ [M]: Clamp the wiring harness, seat lock cable and seat rail between the seat rail bridge and side case bracket. Face the tip of clamp downward.</p>	<p>☑ 6. Clamp : Clamp the wiring harness, HO2 sensor lead wire, rear brake light switch lead wire and battery (-) lead wire to the frame in front of the battery holder fitting.</p>
<p>☑ [G]: Connect the HO2 sensor lead wire coupler behind the master cylinder reservoir.</p>	<p>☑ [N]: Pass the wiring harness under the rear shock absorber hose.</p>	<p>☑ 7. Plug-in clamp : Clamp the harness so that the rear combination light coupler is positioned to the right.</p>

AMENDED



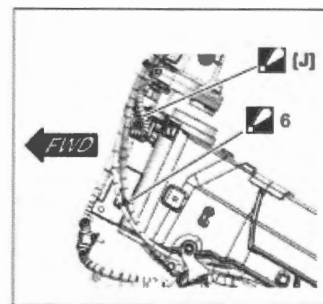
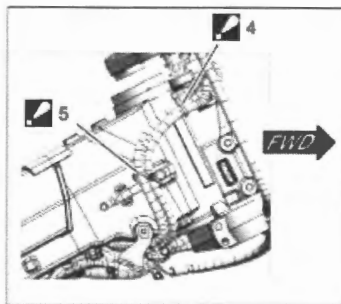
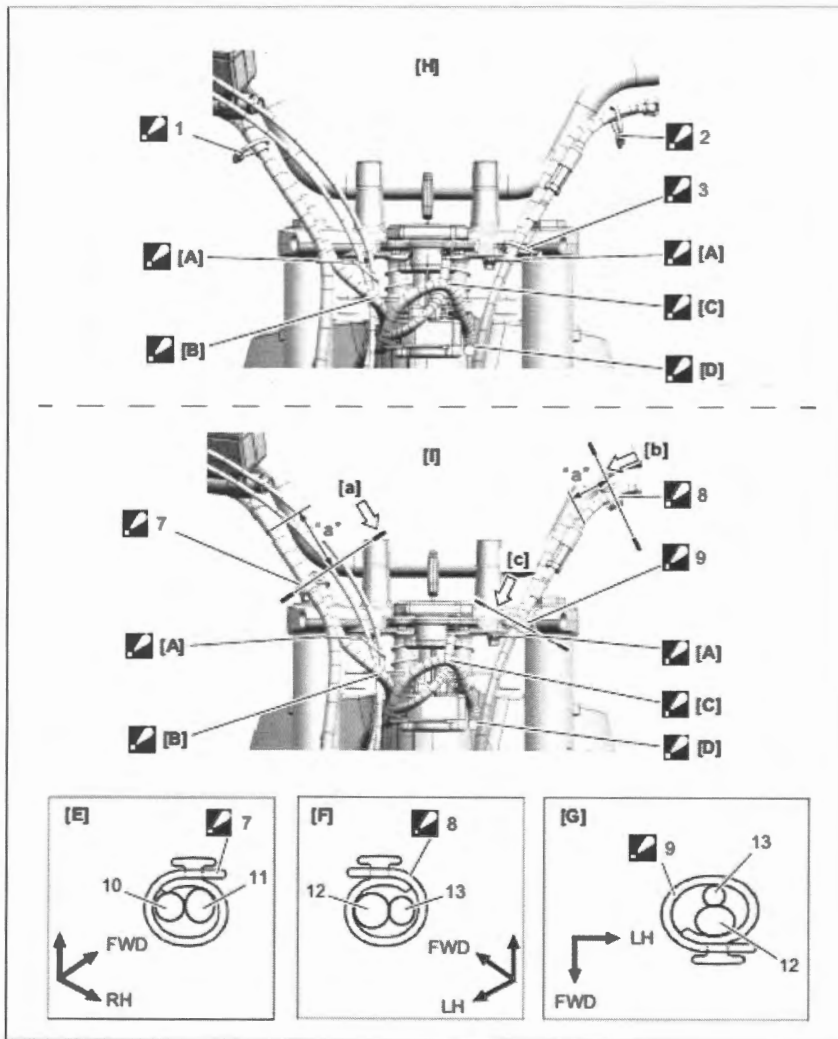


IM28K1911903-01

AMENDED

<input checked="" type="checkbox"/> [A]: Pass the right handle switch lead wire through the guide.	<input type="checkbox"/> [I]: M1 model	<input checked="" type="checkbox"/> 6. Clamp : Clamp the left handle switch lead wire and clutch cable facing lock of the clamp leftward.
<input checked="" type="checkbox"/> [B]: Pass the right handle switch lead wire through the front and inside of the throttle cables.	<input checked="" type="checkbox"/> [J]: Pass the left handle switch lead wire behind the clutch cable.	<input checked="" type="checkbox"/> 7. Clamp : Clamp the right handle switch lead wire and brake hose. : Face the locked part of clamp upward.
<input checked="" type="checkbox"/> [C]: Pass the ignition switch lead wire in front of the immobilizer antenna lead wire (if equipped).	*a*: 20 - 30 mm (0.79 - 1.18 in)	<input checked="" type="checkbox"/> 8. Clamp : Clamp the left handle switch lead wire and clutch cable. : Face the locked part of clamp upward.
<input checked="" type="checkbox"/> [D]: Do not twist the root portion of the ignition switch lead wire.	<input checked="" type="checkbox"/> 1. Clamp : Clamp the right handle switch lead wire at the brake hose fitting part. : Face the locked part of clamp to right side.	<input checked="" type="checkbox"/> 9. Clamp : Clamp the left handle switch lead wire and clutch hose within 20 mm (0.79 in) from bottom of upper bracket. : Face the locked part of clamp forward.
<input type="checkbox"/> [E]: View: [a]	<input checked="" type="checkbox"/> 2. Clamp : Clamp the left handle switch lead wire and clutch cable facing lock of the clamp downward.	<input type="checkbox"/> 10. Right handle switch lead wire
<input type="checkbox"/> [F]: View: [b]	<input checked="" type="checkbox"/> 3. Clamp : Clamp the left handle switch lead wire and clutch cable at the guide and clutch cable protector. : Face the locked part of clamp to left side.	<input type="checkbox"/> 11. Brake hose
<input type="checkbox"/> [G]: View: [c]	<input checked="" type="checkbox"/> 4. Clamp : Clamp the right handle switch lead wire, ignition switch lead wire and immobilizer antenna lead wire at the gray tape (if equipped). : Face the locked part of clamp upward.	<input type="checkbox"/> 12. Clutch hose
<input type="checkbox"/> [H]: -M0 model	<input checked="" type="checkbox"/> 5. Clamp : Clamp the right handle switch lead wire, ignition switch lead wire and immobilizer antenna lead wire not to give them looseness when turning the handlebars to the left (if equipped). : Face the locked part of clamp to right side.	<input type="checkbox"/> 13. Left handle switch lead wire

AMENDED

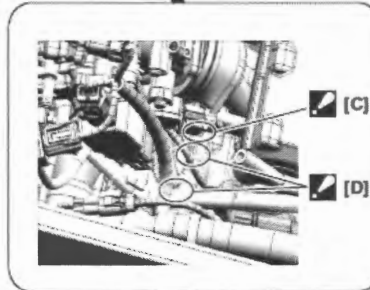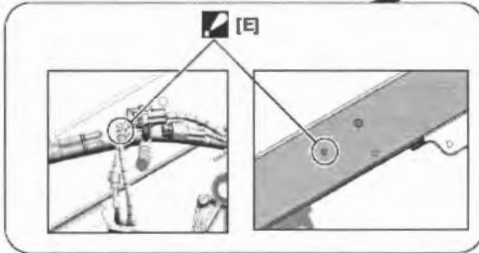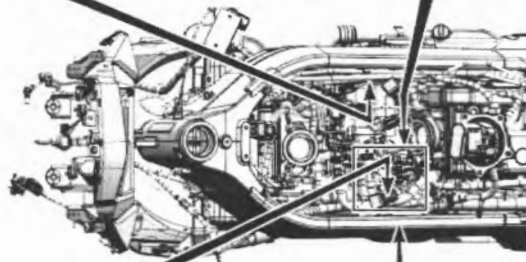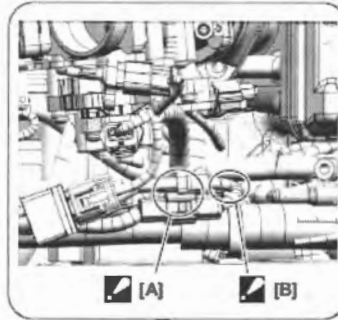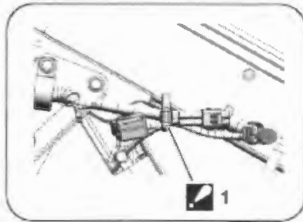


IM28K1011904-02

<p>☑ [A]: Pass the gear position switch lead wire above the branch wire of the wiring harness.</p>	<p>☑ [C]: Pass the wiring harness branch wire under the intake pipe.</p>	<p>☑ [E]: Install the wiring harness clamp into a hole at rear of the frame.</p>
<p>☑ [B]: Pass the generator lead wire through outside of the canister hose, PAIR hose and fuel hose, and inside of the wiring harness (if equipped).</p>	<p>☑ [D]: Pass the wiring harness branch wire under the canister hose and PAIR hose (if equipped).</p>	<p>☑ 1. Wiring harness clamp : Clamp the wiring harness and ignition coil lead wire facing the clamp end upward.</p>

AMENDED



### Front Side Reflex Reflector Construction (If Equipped)

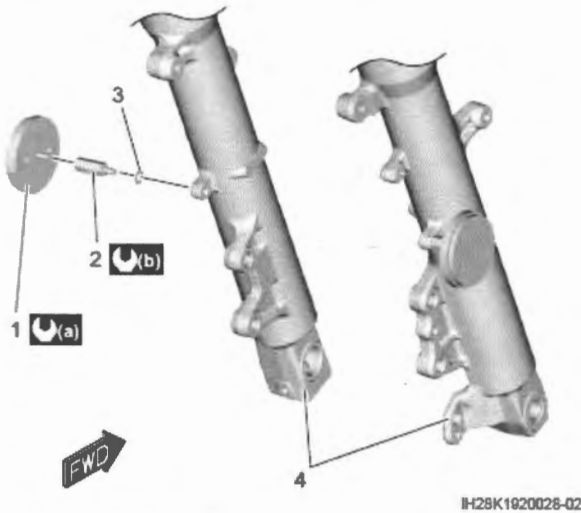

IH28K1920028-02


1.	Front side reflex reflector
2.	Front side reflex reflector bolt
3.	Washer
4.	Front fork
(a)	1.8 N·m (0.18 kgf-m, 1.35 lbf-ft)
(b)	4.5 N·m (0.46 kgf-m, 3.35 lbf-ft)

AMENDED

### Front Side Reflex Reflector Removal and Installation (If Equipped)

#### Removal

Remove the front side reflex reflector (1), bolt (2) and washer (3).

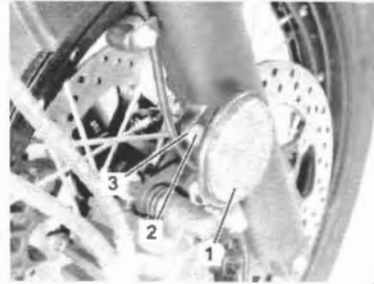

IH28K1920030-01

#### Installation


Install the front side reflex reflector in the reverse order of removal. Pay attention to the following point:

- Tighten the bolt (1) and front side reflex reflector (2) to the specified torque.

#### Tightening torque

Front side reflex reflector bolt (a): 4.5 N·m (0.46 kgf-m, 3.35 lbf-ft)


Front side reflex reflector (b): 1.8 N·m (0.18 kgf-m, 1.35 lbf-ft)

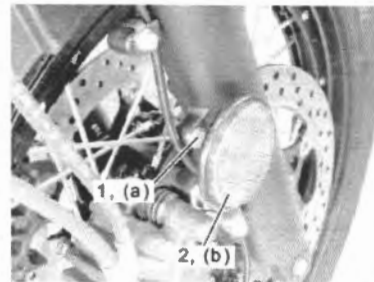

IH28K1920028-01

AMENDED

Seat Lock Cable Routing Diagram

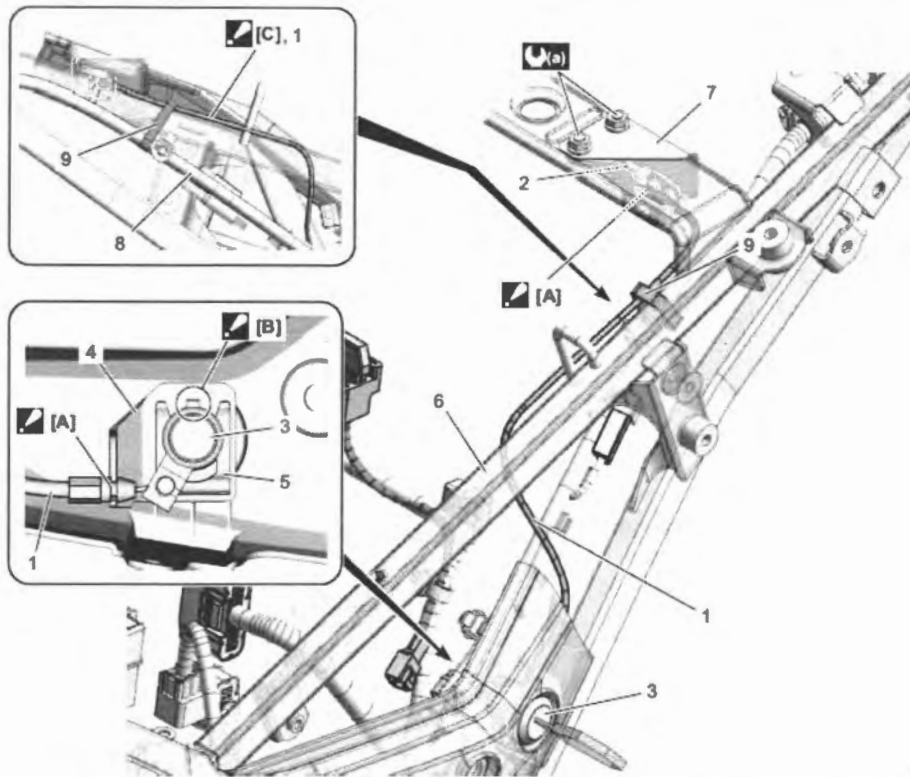


IM28K1940001-01

<ul style="list-style-type: none"> <li>▲ [A]: Set the seat lock cable firmly.</li> </ul>	3. Seat lock assembly	8. Wiring harness
<ul style="list-style-type: none"> <li>▲ [B]: Align the rib of seat lock assembly and groove of cable guide.</li> </ul>	4. Seat lock cable guide	9. Clamp
<ul style="list-style-type: none"> <li>▲ [C]: Pass the seat lock cable above the wiring harness.</li> </ul>	5. Seat lock plate	(a) : 8.8 N·m (0.90 kgf-m, 6.50 lbf-ft)
1. Seat lock cable	6. Seat rail	
2. Striker support bracket	7. Seat lock guard	

AMENDED


## Body Cowling Construction

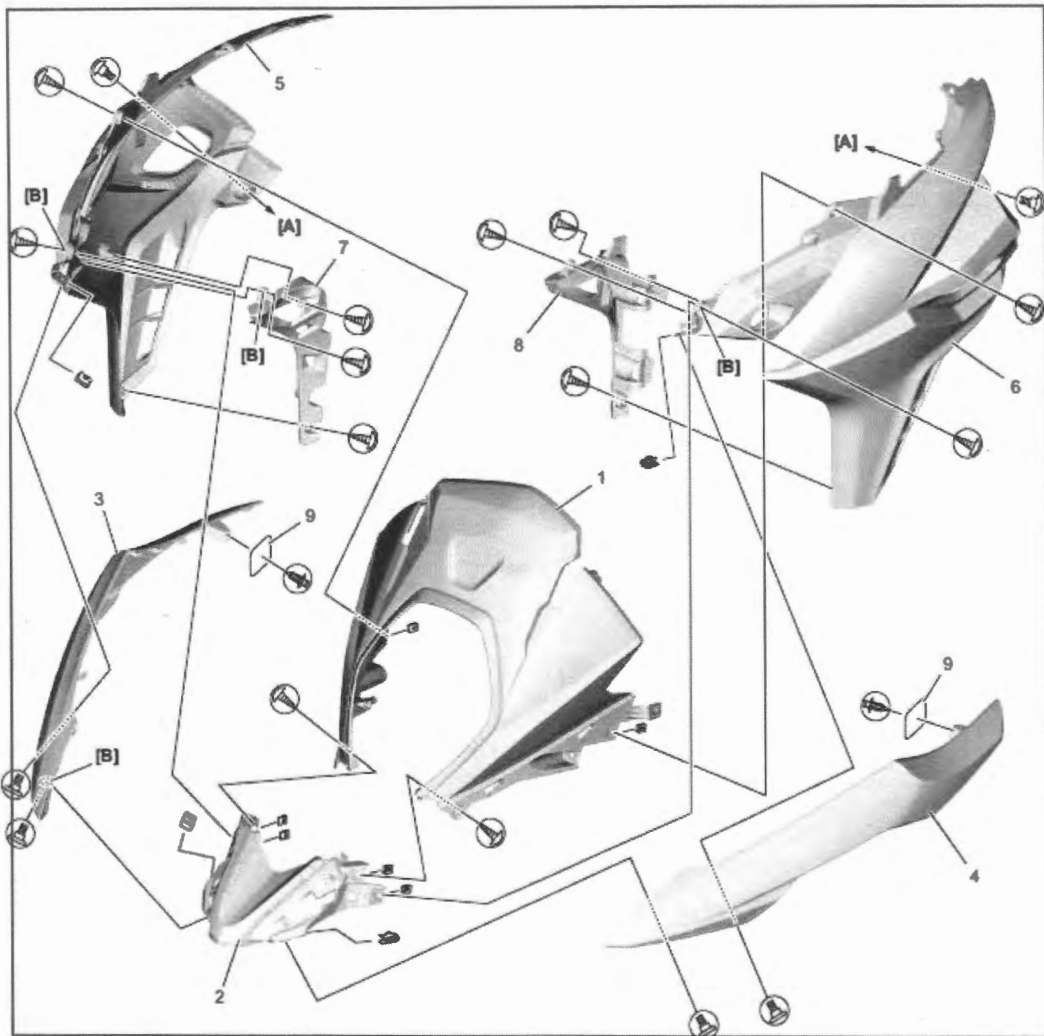

[A]: To fuel tank	3. Right front side cover	7. Right side cowling inner cover	IM2BK1940002-01
[B]: Reference point for tightening	4. Left front side cover	8. Left side cowling inner cover	
1. Body cowling	5. Right side cowling	9. Fuel tank front cover	
2. Lower body cowling	6. Left side cowling		

AMENDED

Fuel Tank Cushion Construction

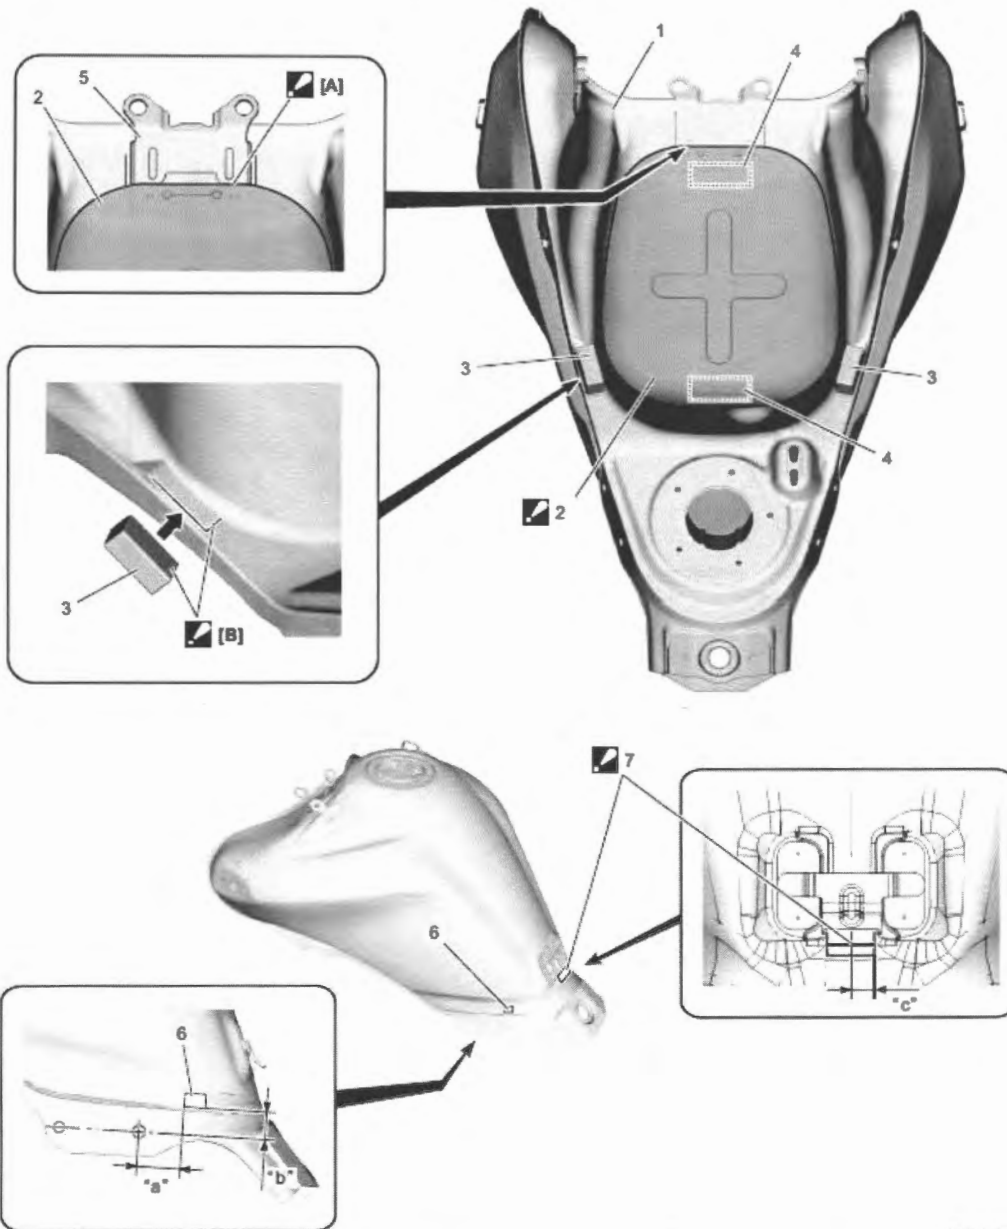

IM29K1940004-01

<p>☑ [A]: Stick the fuel tank center shield aligning with the end of the bracket. (if equipped)</p>	<p>"c": 11 – 17 mm (0.43 – 0.67 in)</p>	<p>5. Bracket</p>
<p>☑ [B]: Stick the fuel tank side cushion aligning with the end of the flat part on the lower inside of the fuel tank.</p>	<p>1. Fuel tank</p>	<p>6. Frame cover rear cushion</p>
<p>☑ [C]: Stick the cushion along the end of the curved surface on the fuel tank.</p>	<p>☑ 2. Fuel tank center shield (if equipped) : Facing the aluminum film outside, stick the center shield using a double-stick tape.</p>	<p>☑ 7. Seat tail cover cushion : Stick the cushion so that the center of the cushion comes above the edge of the fuel tank.</p>
<p>"a": 36 – 40 mm (1.42 – 1.57 in)</p>	<p>3. Fuel tank side cushion</p>	
<p>"b": 21 – 23 mm (0.83 – 0.91 in)</p>	<p>4. Double-stick tape (if equipped)</p>	

AMENDED


Rear Fender (Rear) Cushion Construction

<input checked="" type="checkbox"/> [A]: Stick the cushion aligning with the edge of lens.	<input checked="" type="checkbox"/> [D]: Stick the cushion aligning with the edge.	3. Rear combination light
<input checked="" type="checkbox"/> [B]: Align the cushion end with the corner.	1. Rear fender (rear)	
<input checked="" type="checkbox"/> [C]: Stick the cushion aligning with the end of curved surface.	2. Rear fender (rear) cushion	

IM28K1P40006-01

AMENDED

Battery Holder Cushion Construction

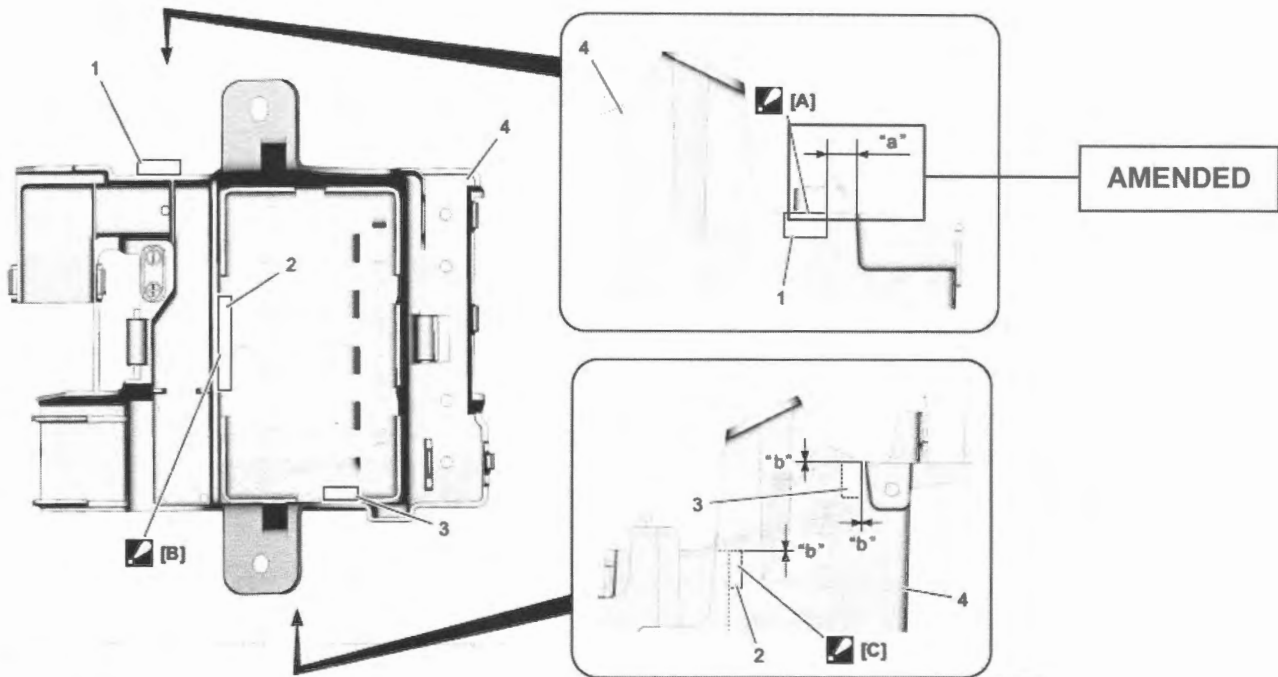

AMENDED

IM28K1940007

<input checked="" type="checkbox"/> [A]: Stick the cushion along the edge of the battery holder.	1. Battery holder cushion	4. Battery holder
<input checked="" type="checkbox"/> [B]: Stick the cushion in the center of the battery holder.	2. Battery protector	"a": 11 – 13 mm (0.44 – 0.51 in)
<input checked="" type="checkbox"/> [C]: Stick the cushion starting from the upper end.	3. Battery protector	"b": 0 – 5 mm (0 – 0.19 in)

AMENDED

## Section 15

**DL650A/XAM1 ('21-MODELS)****NOTE:**

*This supplement chapter contains additional service and/or specification information for the DL650A/XAM1 Models.*


15

## CONTENTS

<b>Water Hose Routing Diagram</b>	<b>15-2</b>
<b>Transmission Components</b>	<b>15-3</b>
<b>Transmission Construction</b>	<b>15-4</b>
<b>Countershaft Assembly / Driveshaft Assembly</b>	
<b>Disassembly and Reassembly</b>	<b>15-5</b>
<b>Gearshift Lever Height Inspection and Adjustment</b>	<b>15-7</b>
<b>Gearshift Lever Construction</b>	<b>15-8</b>
<b>Gearshift Shaft / Gearshift Cam Plate Components</b>	<b>15-9</b>

# Water Hose Routing Diagram


- M0 Model

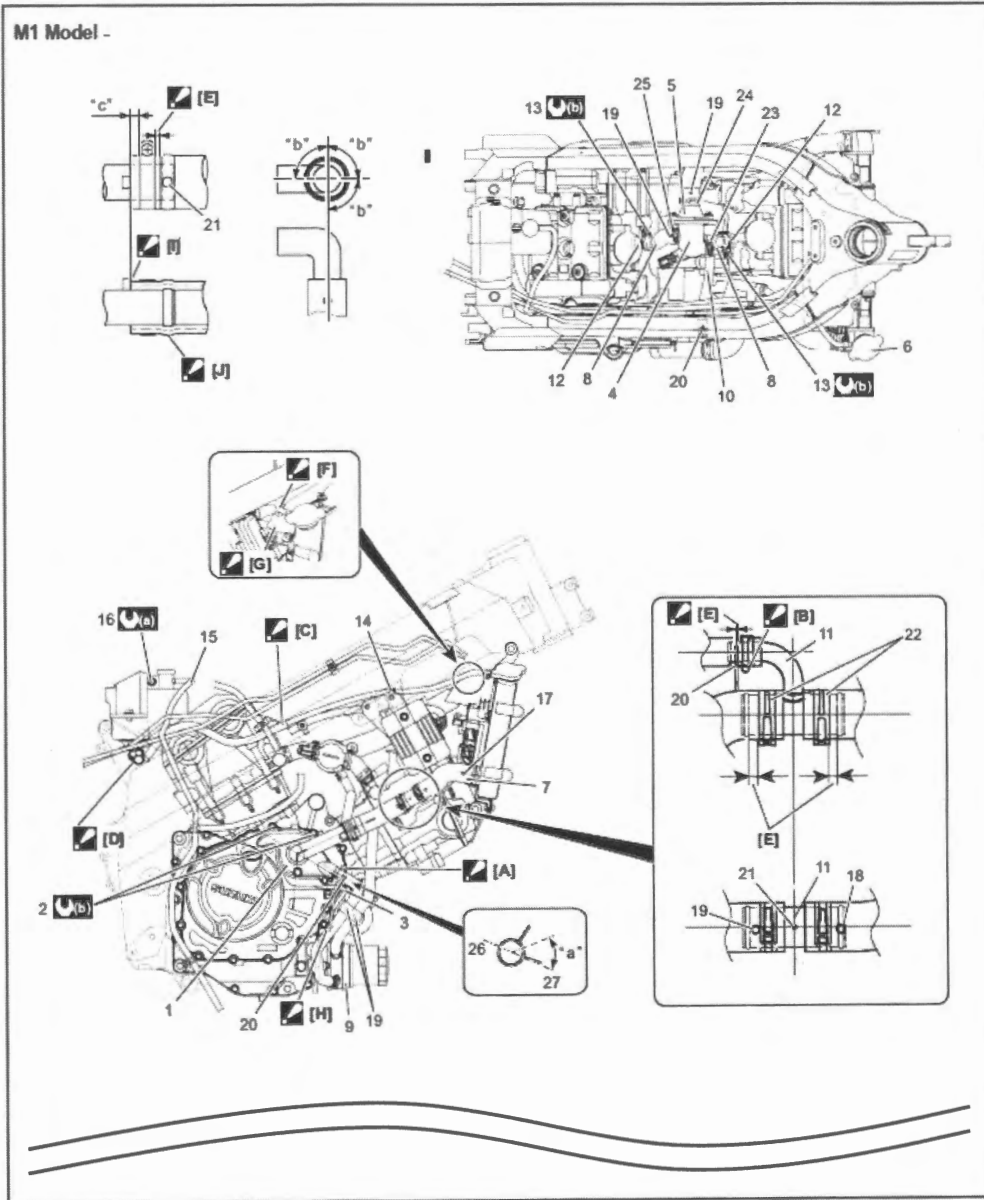



## Transmission Components

- M0 Model

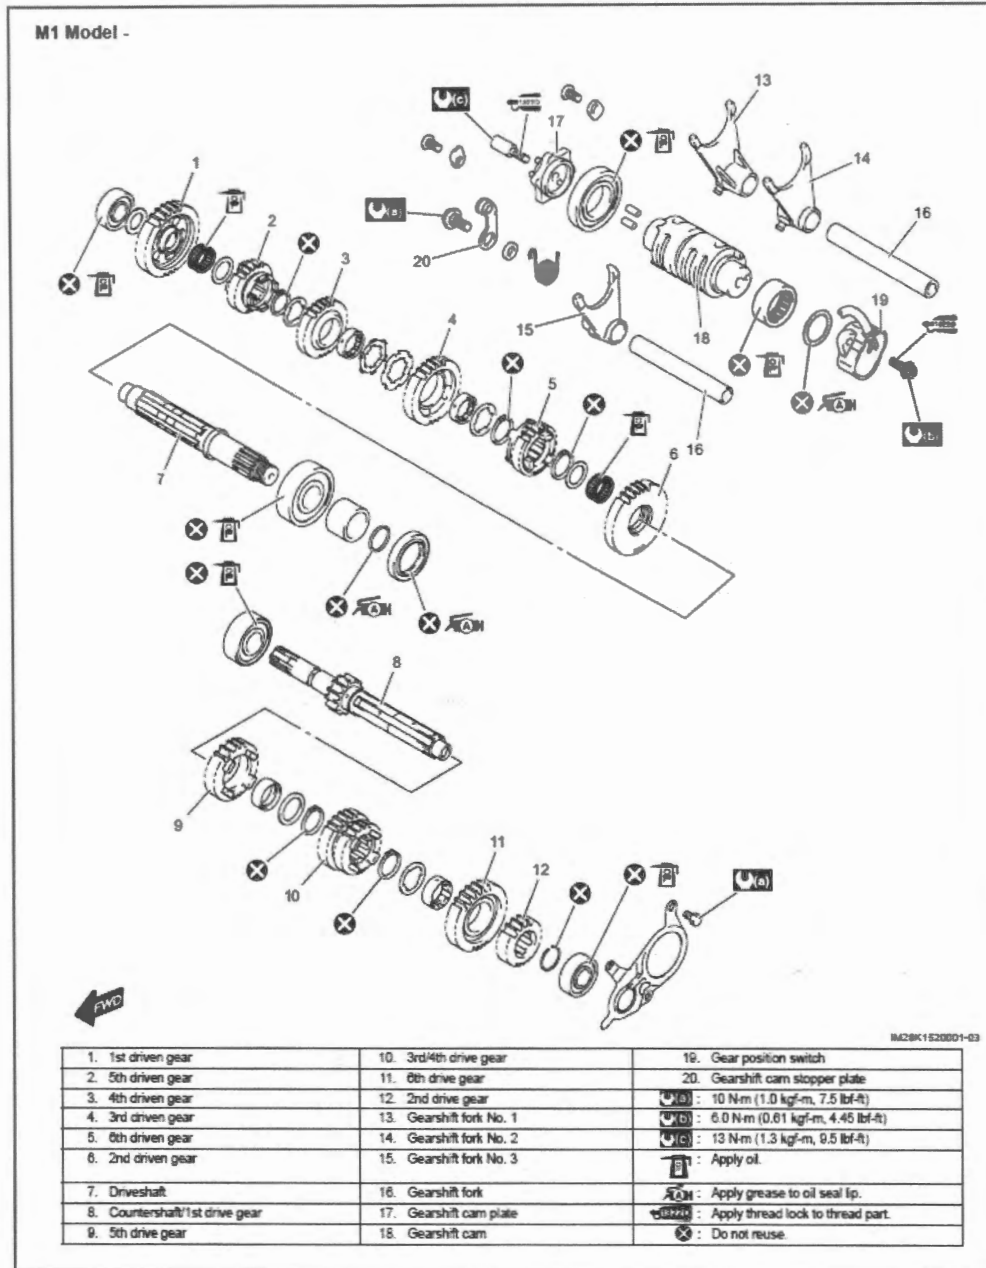


ADDED

# Transmission Construction

- M0 Model

M1 Model -

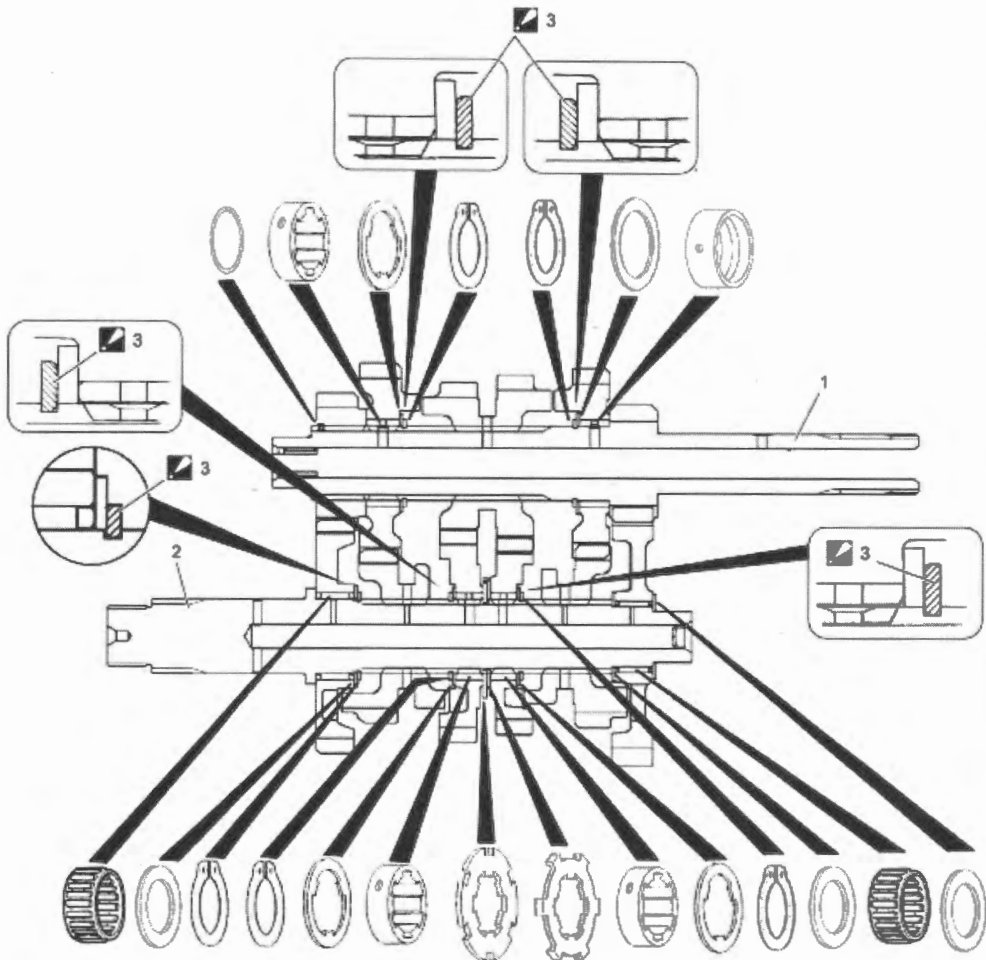

ADDED

- |                 |               |  |
|-----------------|---------------|--|
| 1. Countershaft | 2. Driveshaft | 3. Snap ring<br>: Face the sharp edge outside. |
|-----------------|---------------|--|

IM28K152002-0

## Countershaft Assembly / Driveshaft Assembly Disassembly and Reassembly

Refer to "Transmission Removal and Installation" (Page 5B-5).

### Disassembly

#### NOTE

Identify the position of each removed part. Organize the parts in their respective groups (i.e., drive or driven) so that they can be reinstalled in their original positions.

### Countershaft

- 1) Remove the 6th drive gear snap ring (1) from its groove and slide it towards the 3rd/4th drive gears (2).

### Driveshaft

- 1) Remove the washer (1) and 1st driven gear (2).
- 2) Remove the 1st driven gear bearing (3), washer (4) and 5th driven gear (5).




- 6) Remove the snap ring (1) and 6th driven gear (2).

- 7) For - M0 model, remove the snap ring (3) and 2nd driven gear bushing (4).

**Special tool**  
09900-06107

- 8) For - M0 model, remove the 2nd driven gear (5).  
- M0 model

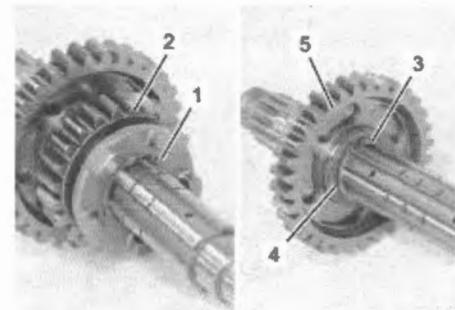

IF18K1520015-01

- 9) For M1 model -, remove the snap ring (1) and washer (2).

**Special tool**  
09900-06107

- 10) For M1 model -, remove the 2nd driven gear (3) and 2nd driven gear bearing (4).

M1 model -



IM26K1520003-01

CHANGED


**Reassembly**

Reassemble the countershaft and driveshaft in the reverse order of disassembly. Pay attention to the following points:

**Driveshaft**

- For - M0 model, apply molybdenum oil solution to the 2nd driven gear bushing.

**"A": Assembly lubrication (Molybdenum oil solution)**

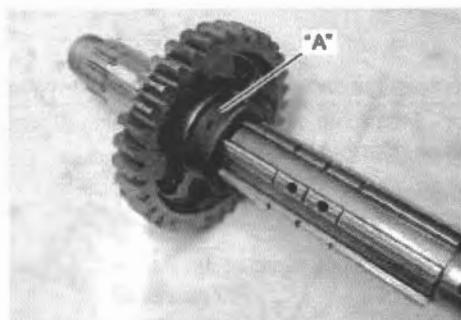

IH18K1520016-01

CHANGED

- For M1 model -, apply engine oil to the 2nd driven gear bearing (1).



IM26K1520004-01

## Gearshift Lever Height Inspection and Adjustment


### Inspection

Inspect the gearshift lever height "a" between the pedal top face and footrest.

Adjust the gearshift lever height if necessary.

### Gearshift lever height


[Standard]: 20 – 30 mm (0.79 – 1.18 in)

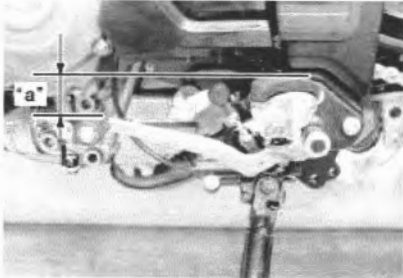

IH25K1520005-01

### Adjustment

- 1) Loosen the lock-nuts (1).
- 2) Turn the gearshift link rod (2) in or out until the gearshift lever height is within the specification.  
↔(Page 5B-17)
- 3) For - M0 model, tighten the lock-nuts (1) securely.

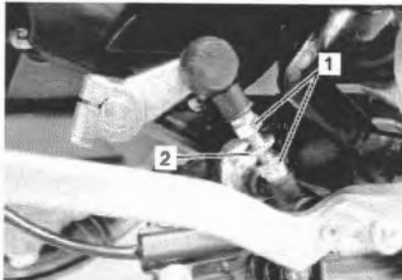


IH25K1520007-02

- 4) For M1 model -, Tighten the lock nuts (1) to specified torque.

### Tightening torque

Gearshift link rod lock-nut (a): 10 N·m (1.0 kgf·m, 7.5 lbf·ft)

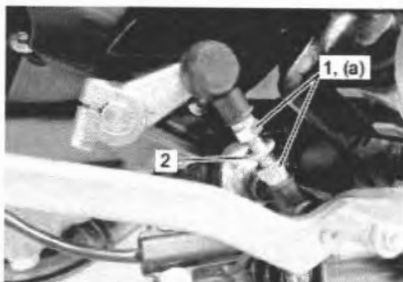

IH25K1520005-01


CHANGED

## Gearshift Lever Construction

- M0 Model



### M1 Model -

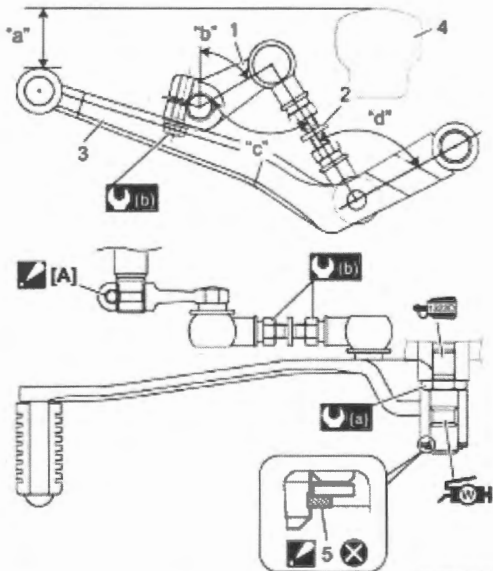

ADDED

1M28K1520006-01

<p>[A]: Align the hole in the gearshift link arm with the groove in the gearshift rod.</p>	<p>"c": 91.67°</p>
<p>1. Gearshift link arm</p>	<p>"d": 93.78°</p>
<p>2. Gearshift link rod</p>	<p>[B]: 40 N-m (4.1 kgf-m, 29.5 lbf-ft)</p>
<p>3. Gearshift lever</p>	<p>[B]: 10 N-m (1.0 kgf-m, 7.5 lbf-ft)</p>
<p>4. Footrest</p>	<p>[LOCK]: Apply thread lock to the thread part.</p>
<p>5. Snap ring : Face the sharp edge outside.</p>	<p>[GREASE]: Apply grease.</p>
<p>"a": 20 - 30 mm (0.79 - 1.18 in)</p>	<p>[X]: Do not reuse.</p>
<p>"b": 59.6°</p>	

## Gearshift Shaft / Gearshift Cam Plate Components

### Removal



### Installation

- 1) Apply a small quantity of thread lock to the gearshift arm stopper (1) and tighten it to the specified torque.

"A": Thread lock cement 99000-32030 (THREAD LOCK CEMENT 1303B)

#### Tightening torque

Gearshift arm stopper (a): 19 N·m (1.9 kgf·m, 14.0 lbf·ft)



CHANGED


- 9) Install the following parts.

- New snap ring (1)
- Gearshift cam drive plate (2)
- Gearshift plate return spring (3)
- Washer (4)

#### NOTE


For M1 model → fit the new snap ring (2) facing the sharp edge outside.

- M0 model

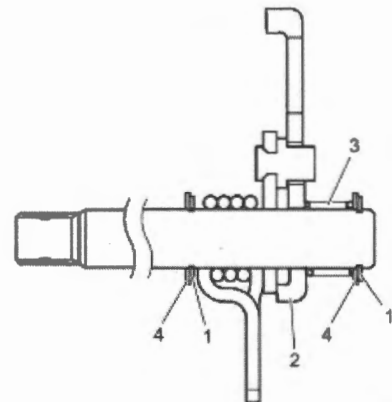

IH16K1520067-01

M1 model -

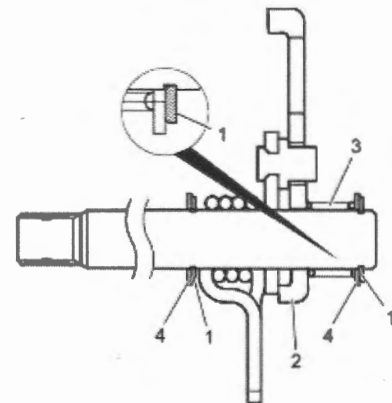

IM26K1520007-01




11) Install the washer (1) and new snap ring (2).

**NOTE**

For M1 model -, fit the new snap ring (2) facing the sharp edge outside.

Special tool  
09900-06107


- M0 model

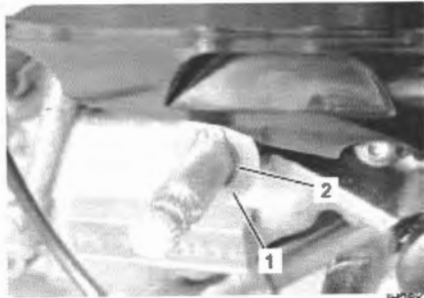

IM26K1520016-01

CHANGED

M1 model -

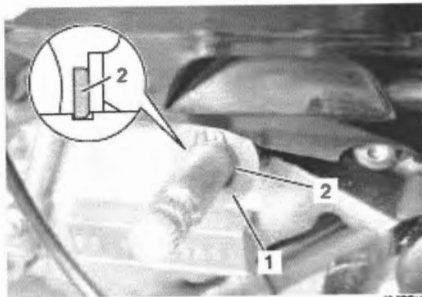

IM26K1520006-01



**Section 16**

**DL650XA/XAA MODELS  
For L7 - M1 Models**

**NOTE:**


*This supplement chapter contains additional service and/or specification information for DL650XA/XAA MODELS*

**CONTENTS**

<b>Updated Spoke Inspection Procedure. . . . .</b>	<b>.16-2</b>
<b>Updated Spoke Inspection Interval . . . . .</b>	<b>.16-2</b>

The tubeless, spoke-style wheels fitted to the DL650XA (V-Strom 650XT) and DL650XAA (V-Strom 650XT Touring or Adventure) must be periodically checked for tightness. When servicing these models, please use the updated inspection process (1) and service intervals (2) listed in this Service Manual Supplement. The required tools are a 5 mm hex socket, calibrated torque wrench, and a socket extension to provide clearance from a brake rotor or driven sprocket.

- 1) Check that all spoke nipples (1) are tightened to at least 5.5 N.m (0.56 kgf-m, 4.05 lb-ft).  
If the torque reading is below that, tighten to (0.56 kgf-m, 4.05 lb-ft).

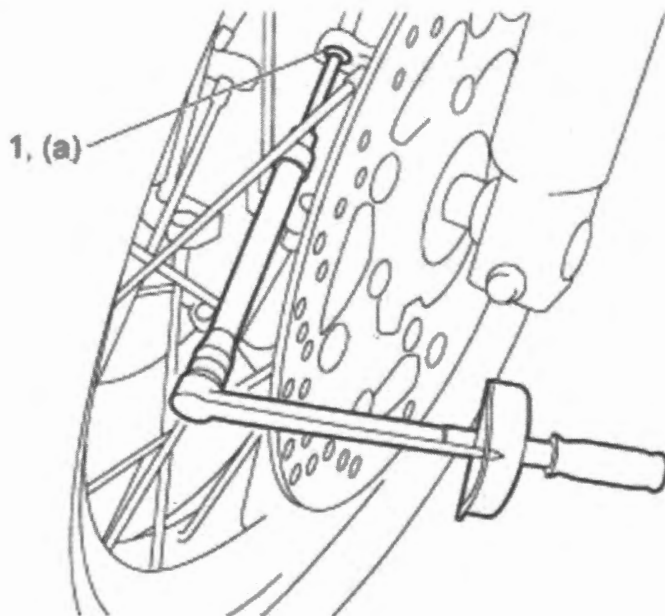

**NOTICE**

If the spoke nipples have been tightened to at least 5.5 N.m (0.56 kgf-m, 4.05 lb-ft), do not loosen them.

**Inspection & tightening torque:**

Spoke nipple (front & rear wheel) (a): 5.5 N.m (0.56 kgf-m, 4.05 lb-ft)

2. The item for the spoke wheel in the Periodic Maintenance Schedule Chart in this Service Manual and the Maintenance Chart in the Owner's Manual are changed as follows.

"I = Inspect" is changed to "Tighten spokes at the initial 1000 km (600 miles) and every 6000 km (3750 miles) after".

Item	Interval					
	months	2	12	24	36	48
	km	***	***	***	***	***
miles	***	***	***	***	***	
Spoke wheel		I	I	I	I	I

↓

Spoke wheel	Tighten spokes at the initial 1000 km (600 miles) and every 6000 km (3750 miles) after.
-------------	---

Prepared by  
**SUZUKI MOTOR CORPORATION**

April, 2021  
Part No. 99500-36250-03E  
Printed in U.S.A.